

Datapoint 2200 cassette tape images

adsMstr_6-76.tap

This is a data tape and does not contain any bootstrap.

comval1.2_10-74.tap

```
DATAPOINT 2200 SCREEN
                202 MODEM VALIDATION
                AUTO ANSWER VERSION 1.2
                Transmit Ready
                Receive Ready
                Break Received
                Clear To Send
                Reverse Carrier
                To Abort
                Hold
                Ringing
                Display
                Main Carrier
                Key
                Coupler Connect

COMBOX ADDRESS OTHER THAN    ?
                           322
```

copyx_3-75.tap

This is a data tape and does not contain any bootstrap.

db2intv4.1_8-74.tap

```
DATAPOINT 2200 SCREEN

DB 2 I N T  4.1
Program name:
```

db2pgsv4.1_8-74.tap

DATAPOINT 2200 SCREEN

C T O S 3.2

READY
CAT
DB2CC DB2CMP
READY

DATAPOINT 2200 SCREEN

C T O S 3.2

READY
CAT
DB2CC DB2CMP
READY
RUN DB2CC

Object machine size (12,16)?

db6sys2.1_73.tap

DATAPOINT 2200 SCREEN

D A T A B U S S I X 2 . 1

Ready

demoPayrollMast_ctos.tap

```

DATAPOINT 2200 SCREEN
                                ADS DP2200 PAYROLL SYSTEM

                                ENTER DESIRED FUNCTION :

ADD      -   TO ADD TO OR CREATE THE PAYROLL MASTER FILE
CHANGE   -   TO DO FIELD MAINTENANCE TO THE PAYROLL MASTER FILE
PAYRUN   -   TO PROCESS THE PAYROLL
PRINT    -   TO LIST SELECTIVELY OR IN TOTAL THE PAYROLL MASTER FILE

```

dosAbootVer2.tap

Halts very early in the bootstrap. DO not know why. Perhaps a bad boot block?

| | |
|--|---|
| <pre> DATAPOINT 2200 SCREEN </pre> | <pre> REGISTER WINDOW REGISTERS ALPHA BETA STACK TRACE BREAKPOINTS A:00 A:00 0039 01D7 NDC B:00 B:00 01BB 01DB JTZ 01D6 C:01 C:00 01DF 01DB RETURN D:00 D:00 0000 01BB OR 01 E:01 E:00 0000 01BD SRC H:01 H:00 0000 01BE RETURN L:FF L:00 0000 0039 JFC 003D 0000 003C HALT P:0 S:0 P:0 S:0 0000 C:1 Z:0 C:0 Z:0 0000 0000 0000 P:003D JMP 0034 0000 0000 0000 0000 0000 0000 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 0010 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 0020 00 00 00 00 00 C6 14 01 F0 FB 48 25 00 36 B3 2E H6.6.. 0030 21 06 1F F8 0E 00 46 00 00 40 3D 00 FF 44 36 00 ...F0.0...D4.. 0040 06 F8 51 46 D2 01 6D 44 51 00 06 F8 51 46 D2 01 ...QF..mDQ...QF.. 0050 4F 46 D3 01 C1 B0 70 B8 01 36 3F 2E 00 A8 F8 44 oF...p..6?...D 0060 0A 01 46 F0 01 40 62 00 46 E8 01 16 06 46 D5 01 ...F..0b.F...F.. 0070 24 02 48 B8 01 46 F0 01 D8 46 F0 01 2C FF BB 48 \$.H..F...F...H 0080 A4 00 3C C3 68 62 00 3C E7 68 62 00 3C 81 48 A4 ...<.hb.<.hb.<.H.. 0090 00 46 F0 01 D8 46 F0 01 2C FF BB 48 A4 00 46 F0 ...F...F...H..F.. 00A0 01 60 B2 00 46 D2 01 77 46 DC 01 70 B8 01 79 44 ...F..wF...p..yD 00B0 60 00 C3 B9 70 68 00 68 1F 01 46 D2 01 7B 46 E8 k...ph.h..F...F.. 00C0 01 16 06 46 D5 01 24 02 48 B8 01 F5 EC E3 D8 46 ...F...\$.H...F.. 00D0 F0 01 40 CB 00 C4 2C FF BB 48 11 01 3C C3 68 BE ...@...H...<.h.. 00E0 00 3C E7 68 BE 00 3C 81 48 11 01 C6 2C FF 95 48 ...<.h...<.H...H.. 00F0 11 01 E0 16 08 C5 0A E8 C4 88 E0 C2 14 01 D0 48 H.. DISPLAY LIGHT KEYBOARD LIGHT DISPLAY BUTTON KEYBOARD BUTTON </pre> |
| <pre> COMMAND WINDOW >at f=dosAbootVer2.tap Attaching file dosAbootVer2.tap to drive 0 >load >run > </pre> | |

dump1.1_6-73.tap

Data tape without bootstrap.

endure1.6_7-73.tap

Boots up and then halts. Very short program. Perhaps a test program?

DATAPOINT 2200 SCREEN

PRESS RUN

foxe1.4_3-75.tap

DATAPOINT 2200 SCREEN
PRINTER ADDRESS?

hrmtst_3-75.tap

Startup and then end with a 0064 JMP 0064 endless loop.

DATAPOINT 2200 SCREEN

HOURLY MEMORY TEST FOR DATAPOINT 2200 VERSION II 16K

mpatst1.1_8-73.tap

DATAPOINT 2200 SCREEN

MULTIPOINT ADAPTOR ADDRESS?

newMstr6-23-76.tap

Data tape. Not bootable.

payrollMastCtos_6-75.tap

DATAPOINT 2200 SCREEN

ADS DP2200 PAYROLL SYSTEM

ENTER DESIRED FUNCTION :

ADD - TO ADD TO OR CREATE THE PAYROLL MASTER FILE
CHANGE - TO DO FIELD MAINTENANCE TO THE PAYROLL MASTER FILE
PAYRUN - TO PROCESS THE PAYROLL
PRINT - TO LIST SELECTIVELY OR IN TOTAL THE PAYROLL MASTER FILE

pitest1.1.tap

DATAPOINT 2200 SCREEN

PI ADDRESS=?

rpgII3.2a_75.tap

Data tape. No bootstrap on this tape.

selectricDrvr1.1_11-74.tap

Data tape. No bootstrap on this tape.

sortall1.0_1-74.tap

```
DATAPOINT 2200 SCREEN
A FOR GENERAL LEDGER
B FOR ACCOUNTS RECEIVABLE
C FOR ACCOUNTS PAYABLE INPUT
D FOR ACCOUNTS PAYABLE PAY DATE CHANGE
E FOR ACCOUNTS PAYABLE CASH REQUIREMENTS
F UNASSIGNED
G UNASSIGNED
H UNASSIGNED
X OPERATOR SPECIFIED
```

tapex1.1_mar75.tap

```
DATAPOINT 2200 SCREEN

ENTER COMMAND WHEN REQUESTED TO DO SO
1ST CHAR:R/W/C/Z/A/D/O: READ FROM/WRITE TO/COPY FROM/REWIND/ALT/DISP/OCT
2ND CHAR:      F/B      : FRONT/BACK DECK
3RD CHAR:      +/-      : FORWARD(READ OR COPY ONLY) / BACKWARD(READ ONLY)
4TH CHAR: 1/,,,/9/F/T : NUMBER OF RECORDS. F IS FILE, T IS WHOLE TAPE
5TH CHAR:  D/O/BLANK  : DISPLAY CHARACTERS/OCTAL/NOTHING.
TO CHANGE DISPLAYED RECORD BEFORE REWRITING, USE ALTER: Addddd (d IS OCTAL POSN
WITHIN RECORD). AFTER CHAR IS DISPLAYED, SPECIFY # CHARS (OCTAL) TO BE DELETED.
THEN STRING OF CHARS (OCTAL) TO BE INSERTED.
***** WAIT FOR BEEP, INSERT TAPES, THEN PRESS ENTER TO BEGIN *****
```

tstdis1.1_3-75-clean.tap

Halts very early. Probably some kind of problem with the tape.

