

Bay Networks

The Merged Company of SynOptics and Wellfleet

Modifying Software Images for Wellfleet Routers

Part No. 110066 A

Modifying Software Images for Wellfleet Routers

Router Software Version 8.10
Site Manager Software Version 2.10

Part No. 110066 Rev. A
February 1995



Bay Networks

The Merged Company of SynOptics and Wellfleet

Copyright © 1995 Bay Networks, Inc.

All rights reserved. Printed in USA. February 1995.

The information in this document is subject to change without notice. This information is proprietary to Bay Networks, Inc.

The software described in this document is furnished under a license agreement or nondisclosure agreement and may only be used in accordance with the terms of that license. The terms of the Software License are provided with the documentation.

Restricted Rights Legend

Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

Notice for All Other Executive Agencies

Notwithstanding any other license agreement that may pertain to, or accompany the delivery of, this computer software, the rights of the Government regarding its use, reproduction, and disclosure are as set forth in the Commercial Computer Software-Restricted Rights clause at FAR 52.227-19.

Trademarks of Bay Networks, Inc.

ACE, BLN, BN, and Wellfleet are registered trademarks and AFN, AN, ASN, BCN, BCNX, BLNX, BNX, CN, FN, FRE, LN, PPX, Bay Networks, and the Bay Networks logo are trademarks of Bay Networks, Inc.

Third-Party Trademarks

3Com is a registered trademark of 3Com Corporation.

AIX, NetView, and IBM are registered trademarks of International Business Machines Corporation.

AppleTalk and EtherTalk are registered trademarks of Apple Computer, Inc.

AT&T and ST are registered trademarks of American Telephone and Telegraph Company.

DEC, DECnet, VAX, and VT100 are trademarks of Digital Equipment Corporation.

Distinct is a registered trademark and Distinct TCP/IP is a trademark of Distinct Corporation.

Fastmac and MADGE are trademarks of Madge Networks, Ltd.

Hayes is a registered trademark of Hayes Microcomputer Products, Inc.

HP is a registered trademark of Hewlett-Packard Company.

Intel is a registered trademark of Intel Corporation.

IPX, NetWare, and Novell are registered trademarks of Novell, Inc.

MCI is a registered trademark of MCI Communications Corporation.

Microsoft, MS, and MS-DOS are registered trademarks and Windows is a trademark of Microsoft Corporation.

Motif and OSF/Motif are registered trademarks of Open Software Foundation, Inc.

Motorola is a registered trademark of Motorola, Inc.

NetBIOS is a trademark of Micro Computer Systems, Inc.

Open Look and UNIX are registered trademarks of UNIX System Laboratories, Inc.

Sun and Solaris are registered trademarks and SPARCstation is a trademark of Sun Microsystems, Inc.

VINES is a registered trademark of Banyan Systems Incorporated.

X Window System is a trademark of the Massachusetts Institute of Technology.

Xerox is a registered trademark and XNS is a trademark of Xerox Corporation.

All other trademarks and registered trademarks are the property of their respective owners.

Bay Networks Software License

This Software License shall govern the licensing of all software provided to licensee by Bay Networks (“Software”). Bay Networks will provide licensee with Software in machine-readable form and related documentation (“Documentation”). The Software provided under this license is proprietary to Bay Networks and to third parties from whom Bay Networks has acquired license rights. Bay Networks will not grant any Software license whatsoever, either explicitly or implicitly, except by acceptance of an order for either Software or for a Bay Networks product (“Equipment”) that is packaged with Software. Each such license is subject to the following restrictions:

1. Upon delivery of the Software, Bay Networks grants to licensee a personal, nontransferable, nonexclusive license to use the Software with the Equipment with which or for which it was originally acquired, including use at any of licensee’s facilities to which the Equipment may be transferred, for the useful life of the Equipment unless earlier terminated by default or cancellation. Use of the Software shall be limited to such Equipment and to such facility. Software which is licensed for use on hardware not offered by Bay Networks is not subject to restricted use on any Equipment, however, unless otherwise specified on the Documentation, each licensed copy of such Software may only be installed on one hardware item at any time.
2. Licensee may use the Software with backup Equipment only if the Equipment with which or for which it was acquired is inoperative.
3. Licensee may make a single copy of the Software (but not firmware) for safekeeping (archives) or backup purposes.
4. Licensee may modify Software (but not firmware), or combine it with other software, subject to the provision that those portions of the resulting software which incorporate Software are subject to the restrictions of this license. Licensee shall not make the resulting software available for use by any third party.
5. Neither title nor ownership to Software passes to licensee.
6. Licensee shall not provide, or otherwise make available, any Software, in whole or in part, in any form, to any third party. Third parties do not include consultants, subcontractors, or agents of licensee who have licensee’s permission to use the Software at licensee’s facility, and who have agreed in writing to use the Software only in accordance with the restrictions of this license.

-
7. Third-party owners from whom Bay Networks has acquired license rights to software that is incorporated into Bay Networks products shall have the right to enforce the provisions of this license against licensee.
 8. Licensee shall not remove or obscure any copyright, patent, trademark, trade secret, or similar intellectual property or restricted rights notice within or affixed to any Software and shall reproduce and affix such notice on any backup copy of Software or copies of software resulting from modification or combination performed by licensee as permitted by this license.
 9. Licensee shall not reverse assemble, reverse compile, or in any way reverse engineer the Software. [Note: For licensees in the European Community, the Software Directive dated 14 May 1991 (as may be amended from time to time) shall apply for interoperability purposes. Licensee must notify Bay Networks in writing of any such intended examination of the Software and Bay Networks may provide review and assistance.]
 10. Notwithstanding any foregoing terms to the contrary, if licensee licenses the Bay Networks product "Site Manager," licensee may duplicate and install the Site Manager product as specified in the Documentation. This right is granted solely as necessary for use of Site Manager on hardware installed with licensee's network.
 11. This license will automatically terminate upon improper handling of Software, such as by disclosure, or Bay Networks may terminate this license by written notice to licensee if licensee fails to comply with any of the material provisions of this license and fails to cure such failure within thirty (30) days after the receipt of written notice from Bay Networks. Upon termination of this license, licensee shall discontinue all use of the Software and return the Software and Documentation, including all copies, to Bay Networks.
 12. Licensee's obligations under this license shall survive expiration or termination of this license.

Contents

Chapter 1

Image Builder Overview

Overview of Router Software Images	1-2
Using the Image Builder to Modify Router Software Images	1-3

Chapter 2

Loading Router Software

Loading Router Software onto a PC or UNIX Workstation	2-2
Loading the Software from MS-DOS Diskettes	2-2
Loading the Software from CD-ROM	2-3
PC	2-3
UNIX Workstation	2-4
Loading Router Software into the Image Builder	2-6

Chapter 3

How to Use the Image Builder

Modifying a Router Software Image	3-2
Removing Software Components	3-3
Adding Software Components	3-5

Analyzing Components	3-6
Component Information Box	3-7
Partial Component Asterisk	3-7
Details Buttons	3-8
Saving a Modified Image	3-10
Creating a New Image	3-12
Converting an Image for Other Types of Routers	3-14
Proceeding if an Image Format Is Not Available	3-15
Converting an Image for Other Software Versions	3-15
Proceeding if a Software Version Is Not Available	3-16
Generating a List of Contents for an Image	3-17

Chapter 4

Loading the Modified Image on a Router

Connecting to a Wellfleet Router	4-2
Loading a Modified Image on the Router's File System	4-6
If Space Is Available	4-6
If Space Is Not Available	4-8
Removing the Old Image from the Router	4-8
Saving the Modified Image to the Router	4-10
Booting the Router with a Modified Image	4-10
Verifying that the Router Booted Successfully	4-11

Appendix A

Executable Files

Index

Figures

Figure 2-1. Open Window	2-6
Figure 2-2. Image Builder Window with Current Components	2-7
Figure 3-1. Image Builder Window with Current Components	3-2
Figure 3-2. Remove Button	3-4
Figure 3-3. Add Button	3-5
Figure 3-4. Component Information Box in the Image Builder Window	3-7
Figure 3-5. Partial Components	3-8
Figure 3-6. Details Buttons	3-9
Figure 3-7. Save As Window	3-11
Figure 3-8. Image Information Box in the Image Builder Window	3-11
Figure 3-9. Confirmation Window	3-12
Figure 3-10. New Image Window	3-13
Figure 3-11. CONTENTS.TXT File	3-18
Figure 4-1. Router Connection Options Window	4-2
Figure 4-2. Wellfleet Site Manager Window	4-3
Figure 4-3. Multiple Router Connection Window	4-4
Figure 4-4. Adding Routers to the Current Routers List	4-5
Figure 4-5. TFTP Put File Selection Window	4-7
Figure 4-6. TFTP Get File Window	4-9
Figure 4-7. Boot Router Window	4-10
Figure 4-8. Boot Confirmation Window	4-11

Tables

Table 1-1. Router Software Image Types	1-2
Table A-1. Executable File Descriptions	A-1

About This Guide

This guide describes how to customize a Wellfleet[®] router software image using a tool called the Image Builder. You access the Image Builder via the Wellfleet Site Manager.

You need to use this guide when you receive router software from Bay Networks and you want to do the following:

- ❑ Remove nonessential executable files from the router software image (or add executable files that you inadvertently removed).
- ❑ Reduce the size of a router software image so that it fits on a single diskette (if you received the image on more than one diskette).

Before You Begin

Before you use this guide, you must load the Wellfleet Site Manager application using the instructions provided in *Quick-Starting Wellfleet Routers*.

How to Get Help

For additional information or advice, contact the Bay Networks Help Desk in your area:

United States	1-800-2LAN-WAN
Valbonne, France	(33) 92-966-968
Sydney, Australia	(61) 2-903-5800
Tokyo, Japan	(81) 3-328-0052

Conventions

angle brackets (< >)	Indicate that you choose the text to enter based on the description inside the brackets. Do not type the brackets when entering the command. Example: if command syntax is ping <ip_address>, you enter ping 192.32.10.12
arrow character (→)	Separates menu and option names in instructions. Example: Protocols→AppleTalk identifies the AppleTalk option in the Protocols menu.
user entry text	Denotes text that you need to enter. Example: Start up the Windows environment by entering the following after the prompt: win
command text	Denotes command names in text. Example: Use the xmodem command.
<i>italic text</i>	Indicates variable values in command syntax descriptions, new terms, file and directory names, and book titles.
quotation marks (“ ”)	Indicate the title of a chapter or section within a book.

Acronyms

ASCII	American Standard Code for Information Interchange
DOS	Disk Operating System
PCMCIA	Personal Computer Memory Card International Association



Chapter 1

Image Builder Overview

Refer to this chapter for information on the following topics:

- Overview of Router Software Images
- Using the Image Builder to Modify Router Software Images

Overview of Router Software Images

A router software image is a group of executable files that operate the protocols on your network with a Wellfleet router. The type of software image a router uses depends on the particular Wellfleet router. Table 1-1 shows the router software images for the current router software. If you are using an earlier version of Wellfleet router software, refer to the appropriate version of this manual for details of router software images.

Table 1-1. Router Software Image Types

Router	Router Software Image	Device that Image Runs On
AFN (Flash)	afn.exe	Flash card
IN	in.exe	Flash card
ASN	asn.exe	Flash card
BLN	bn.exe	Flash card
BCN	bn.exe	Flash card
AN	an.exe	Flash Single Inline Memory Modules (SIMMs)
CN, FN, LN (VME)	ace.out	Flash card

Appendix A lists all of the executable files that are available from Bay Networks.

You can modify a router software image as follows:

- ❑ Remove a protocol that you do not use. For example, you might want to remove protocols to make more space available on the medium that contains the router software image.
- ❑ Add a protocol that you removed inadvertently.
- ❑ Consolidate the software image. Sometimes Bay Networks supplies the software image on two diskettes. You might want to consolidate the two parts into one image.
- ❑ Replace an existing image with an entirely new one.

To perform these tasks, you use the Image Builder, as the following section describes.

Using the Image Builder to Modify Router Software Images

The Image Builder tool lets you customize the router software images that you receive from Bay Networks. You access the Image Builder from the Tools menu in the main Site Manager window.

To customize a router software image, you must do the following:

1. Order the new router software from Bay Networks. This software comes on CD-ROM or on 3 1/2-inch MS-DOS diskettes.
2. Load the router software onto the local hard drive of your UNIX[®] workstation or PC (refer to Chapter 2).
3. Load the router software into the Image Builder (refer to Chapter 2).
4. Remove or add executable files as necessary.
5. Save the customized software image.
6. Load the customized router software image onto the router's file system. You can use the Router Files Manager tool to remotely transfer the image to the router (refer to Chapter 4).

Note: Be sure that you use only executable files from the same router software version. For example, you cannot mix files from Version 8.00 with files from Version 8.10.

7. Boot the router using the customized software image.

In addition to modifying a router software image by removing or adding executable files, you can use the Image Builder to do the following:

- View information about the components that appear in the Image Builder window. The Image Builder displays a router software image as a list of individual components. You can view information about the components such as
 - component name and model number
 - router software version
 - compressed size of file(s)
 - uncompressed size of file(s)
- Display all the files that make up a list of components.
- Convert an image you created to an equivalent image for a different type of router (refer to “Converting an Image for Other Types of Routers” in Chapter 3).
- Convert an image you created to an equivalent image for a different software version (refer to “Converting an Image for Other Software Versions” in Chapter 3).
- Create an entirely new router software image. For example, you might want to make an entirely new image from several custom images that you created.

Chapter 2

Loading Router Software

Refer to this chapter for information on the following topics:

- ❑ Loading Router Software onto a PC or UNIX Workstation
- ❑ Loading Router Software into the Image Builder

Loading Router Software onto a PC or UNIX Workstation

Router software is available on the following media:

- MS-DOS diskettes
- CD-ROM

The following sections present information on how to load the Wellfleet router software.

Loading the Software from MS-DOS Diskettes

Follow these steps to load the router software from MS-DOS diskettes onto the PC that serves as the Site Manager workstation:

1. Enter the following command to create the directory in which to store the new router software on the Site Manager workstation:

```
mkdir \wf\xxx
```

where *xxx* is the version of the router software.

Example

For version 8.10, you would type

```
mkdir \wf\810
```

2. Insert the first diskette into the diskette drive of the PC, and enter the following command:

```
restore <diskette_drive> <drive>:\wf\xxx\*.*
```

where *diskette_drive* is the drive containing the router software diskette, and *drive* is the hard drive where you created the directory in which to store the router software.

The operating system extracts the files to the subdirectory you created in Step 1, and prompts you for the next diskette.

3. Insert the next router software diskette (when prompted), and press any key to continue.
4. Repeat Step 3 for the remaining diskettes.

5. Start up Site Manager. For instructions, refer to *Using Site Manager Software*.
6. You can now load the router software into the Image Builder, as described in “Loading Router Software into the Image Builder.”

Loading the Software from CD-ROM

The steps that you follow to load the router software from CD depend on whether you use a PC or a UNIX workstation. The next section describes how to load the software on a PC. If you use a UNIX workstation, proceed to the section “UNIX Workstation.”

PC

To load the router software from CD to your PC, follow these steps:

1. Insert the CD into your CD-ROM drive.
2. Bring up Windows.
3. Double-click on the File Manager icon.
4. Click on the CD-ROM drive icon in the File Manager window.
5. Click on the *rtr_xxx* directory, where *xxx* is the router software version. For example, for version 8.10, you would click on the *rtr_810* directory.

You see the following directories in the *rtr_xxx* directory.

```
afnflash  
an  
asn  
bn  
in  
vme
```

6. Click on the directory for the router platform you want.
7. Select File→Copy.

8. Specify the destination directory as follows:

`\wf\xxx`

where *xxx* is the version of the router software.

Example

For Version 8.10, you would type

`\wf\810`

9. Click on OK.

The system then loads the router software for the platform you selected. When the process is complete, you can load the router software for any of the other platforms by repeating Steps 6 through 9.

UNIX Workstation

To load the router software from CD to your UNIX workstation, follow these steps:

1. Insert the CD into your CD-ROM drive.
2. If you have not already created a CD-ROM mountpoint, log in as **root** and create a root-level directory.

Example

To create a directory named *cdrom*, enter

mkdir /cdrom

3. Mount the CD-ROM drive.
 - a. If you use SunOS on a SPARCstation™, enter
mount -r -t hsfs /dev/<device> /cdrom
 - b. If you use Solaris® on a SPARCstation, enter
mount -F hsfs -o ro /dev/<device> /cdrom

Note: If you use Solaris and you are running the *vold* daemon, the CD-ROM will automatically be mounted as **/cdrom/release_xxx_yyy** (where *xxx* is the router software version and *yyy* is the Site Manager version), rather than **/cdrom**. For example, for router software Version 8.10 and Site Manager Version 2.10, the CD-ROM will automatically be mounted as **/cdrom/release_810_210**.

c. If you use an IBM RS/6000, enter

```
mount -o ro -v cdrfs /dev/<device> /cdrom
```

d. If you use an HP® 9000, enter

```
mount -r /dev/<device> /cdrom
```

4. Change directories by entering

```
cd /cdrom
```

5. Run the script to load the router software using one of the following procedures:

a. On a SPARCstation, enter

```
./COPY.SH
```

b. On an HP 9000, enter

```
./COPY.SH\;1
```

c. On an IBM RS/6000, enter

```
./copy.sh
```

During the load procedure, you must specify the following:

- The directory where you want to load the router software
- The router platform (AFNFLASH, AN, ASN, BN, IN, or VME)

The system then loads the software for the platform(s) you select. When the process is complete, you can choose to load the router software for another platform, or you can quit.

Loading Router Software into the Image Builder

To load the router software into the Image Builder, follow these steps:

1. Select File→Open from the Image Builder window.

The Open window appears (Figure 2-1).

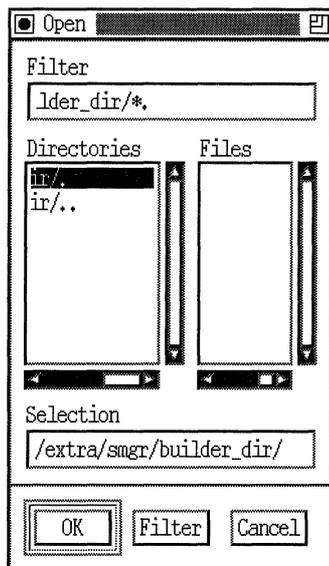


Figure 2-1. Open Window

2. Select the directory and filename of the router software image that you want to open. Then click on OK.

The directory and filename that you specify depends on the following:

- The computer platform (UNIX workstation or PC)
- The router platform

If you loaded the router software from CD onto a UNIX workstation, the system stored the image in the directory for the appropriate router platform. For example, you would find the image *ace.out* for the VME platform in the *vme* directory.

If you loaded the router software on a PC, the system stored the router software image in the directory you created for the router software (*\wf\xxx*).

Once you enter the pathname of the image, the Image Builder window lists the current components of the image (Figure 2-2).

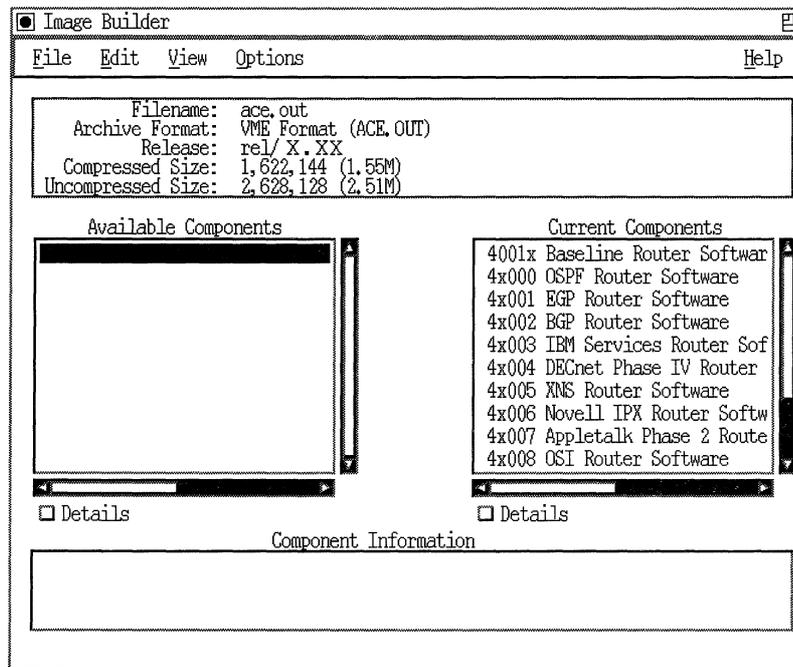


Figure 2-2. Image Builder Window with Current Components

You can now modify the router software image. For instructions, refer to “Modifying a Router Software Image” in Chapter 3.

Chapter 3

How to Use the Image Builder

Refer to this chapter for information on the following tasks:

- ❑ Modifying a Router Software Image
- ❑ Saving a Modified Image
- ❑ Creating a New Image
- ❑ Converting an Image for Other Types of Routers
- ❑ Converting an Image for Other Software Versions
- ❑ Generating a List of Contents for an Image

For specific information about using the windows, buttons, and other features of Site Manager, refer to *Using Site Manager Software*; for information about the Image Builder, refer to Chapter 1.

Modifying a Router Software Image

When you load your router software image into the Image Builder (refer to Chapter 2), you see the router software you loaded in the Current Components list of the Image Builder window (Figure 3-1).

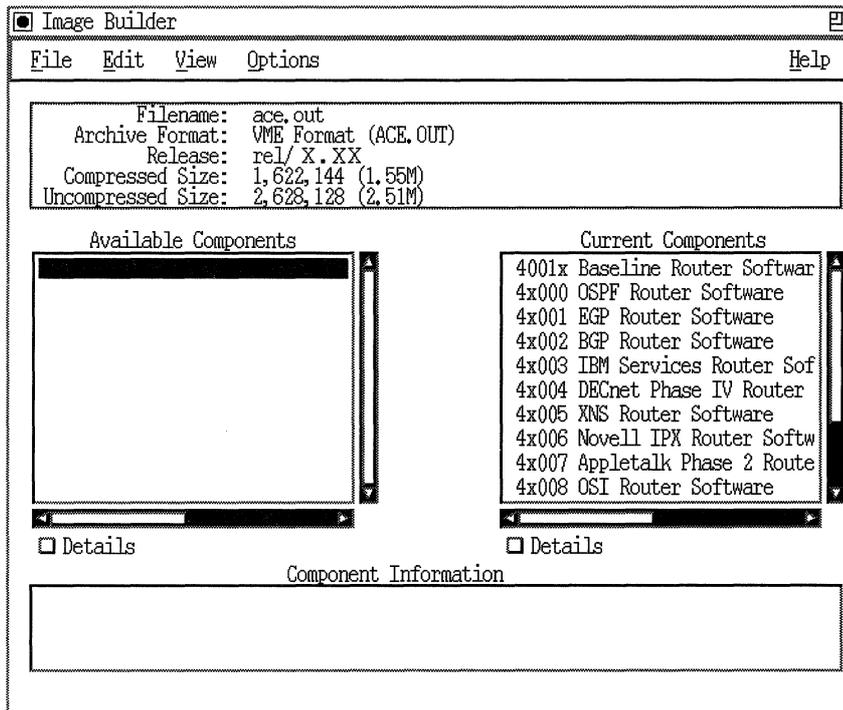


Figure 3-1. Image Builder Window with Current Components

You can modify the router software image as follows:

- ❑ Remove nonessential files from the Current Components list. For example, you might want to make more space available on the router software medium.
- ❑ Add components to the Current Components list. For example, you might have removed files that you decide you want in the router software image.

The following sections describe the Image Builder features that let you remove and add software components. Refer to the section “Analyzing Components” to determine which executable files you need in a software image and how you can track changes.

Removing Software Components

To remove components from the Current Components list, follow these steps:

1. Double-click on the item in the Current Components list that you want to remove.

The Remove button appears in the Image Builder window (Figure 3-2).

Note: The Remove button does not appear when you select essential files. This protects the most important files that make up your router software image. For example, you cannot remove the Operating System Kernel file from the Baseline Router Software component. Also, because the Baseline Router Software component contains essential files, you cannot remove it from the list of current components.

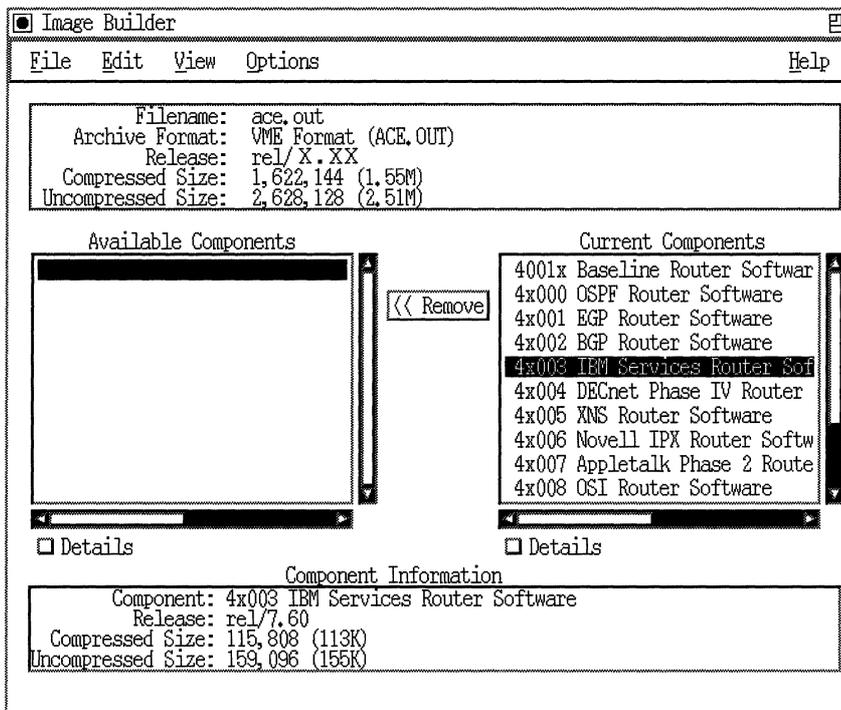


Figure 3-2. Remove Button

2. Click on the Remove button.

The Image Builder removes the component from the Current Components list and adds it to the Available Components list.

You can also select **Edit**→**Remove Component** in the Image Builder window. You can remove all components from the Current Components list by selecting **Edit**→**Remove All Components**. You do not need to select all the components before you choose this option.

The **Edit** menu in the Image Builder window also offers **Undo** and **Redo** commands that let you cancel your last action or redo your last cancelled action.

Adding Software Components

As mentioned in the previous section, when you remove a component from the Current Components list, the Image Builder adds it to the Available Components list. If you decide you want to keep that component in the router software image, you must add it to the Current Components list. To do so, follow these steps:

1. Double-click on the item in the Available Components list that you want to add to the current components.

The Add button appears in the Image Builder window (Figure 3-3).

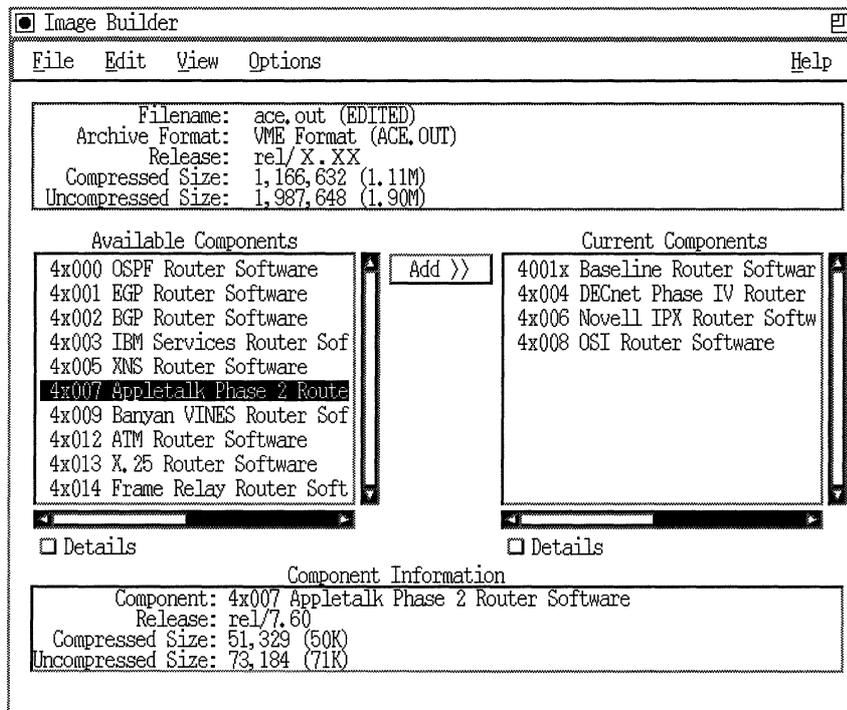


Figure 3-3. Add Button

2. Click on the Add button.

The component moves from the Available Components list to the Current Components list.

You can also add components by selecting Edit→Add from the Image Builder window. To add all components that appear in the Available Components list, select Edit→Add All Components. You do not need to select all the components before you choose this option.

Note: In the sample Image Builder window (Figure 3-3), the word **EDITED** appears in parentheses beside the *ace.out* filename. **EDITED** appears whenever you load a previously modified file into the Image Builder.

Analyzing Components

The Image Builder window provides several features that you can use to determine the files you need in a software image and to track changes. These features include the following:

- A Component Information box that gives details about a selected component
- A special symbol (an asterisk) that identifies components from which you removed a file
- A Details button that you can use to display all the files that make up a list of components

The following sections provide information on these features.

Component Information Box

The bottom of the Image Builder window contains a Component Information box (Figure 3-4). When you select a component from the Available Components or Current Components list, the following information appears in the Component Information box:

- Model number and name of component
- Router software version
- Compressed size of file(s)
- Uncompressed size of file(s)

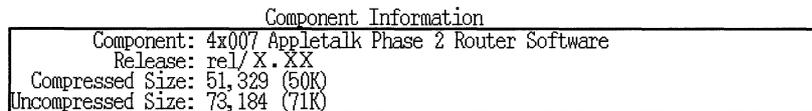


Figure 3-4. Component Information Box in the Image Builder Window

Partial Component Asterisk

The Image Builder uses an asterisk (*) to denote a partial component (Figure 3-5). The asterisk indicates that you removed a file from a component, and, as a result, both the file and the component are now partial in nature.

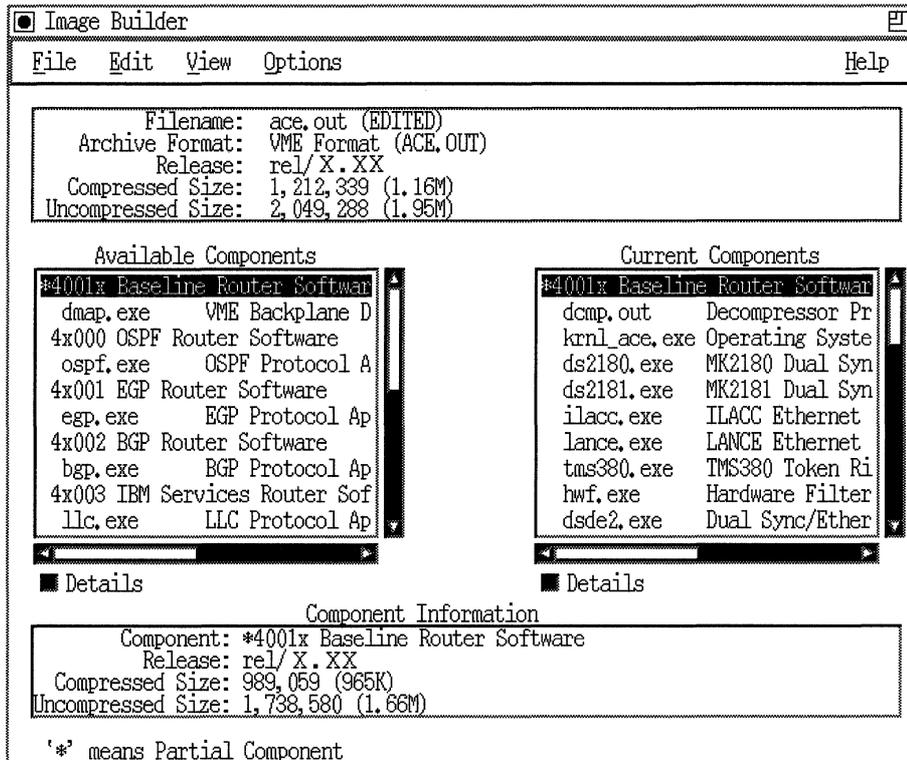


Figure 3-5. Partial Components

Details Buttons

A Details button appears below each list of components. You can click on the Details button to display all the executable files that make up a list of components. To return to the list of components, click on the Details button again.

For example, suppose you click on the Details button for current components. All the components in that list open to reveal the executable files that make up those components (Figure 3-6). Most protocol components contain only one software file. The Baseline

Router Software component, however, contains many files, including the Operating System Kernel.

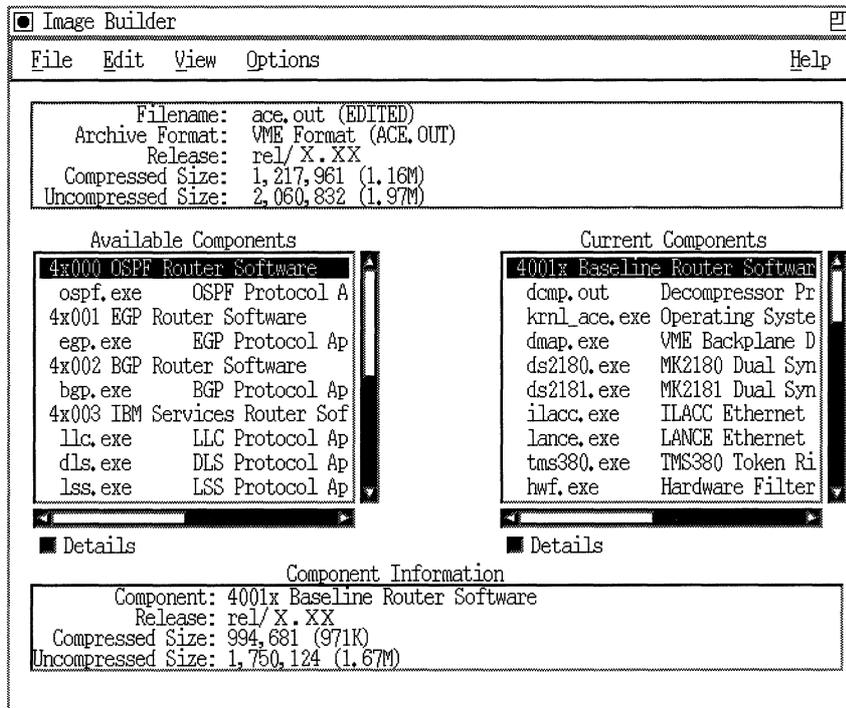


Figure 3-6. Details Buttons

You can also use the options on the View menu to display details about a list of components.

Saving a Modified Image

The Image Builder automatically archives router software images in a directory created during the Site Manager installation process. The directory is *\$HOME/.builder_dir*. (Refer to *Quick-Starting Wellfleet Routers* for information on creating the *\$HOME/.builder_dir* directory.) The Image Builder archives only individual components in this directory. We recommend that you archive new router software images in a different directory. You should also use different image names for different routers on your network, and keep a record of which images are running on which routers.

If you loaded the router software onto your Site Manager workstation using the procedure in the section “Loading Router Software into the Image Builder” in Chapter 2, you may want to use the directory you created during that procedure for archiving the image.

1. After you modify a list of current components, select File→Save.

This saves the image to your current directory and archives all components displayed in the Image Builder window in the Image Builder directory.

Note: A confirmation window does not appear after you select File→Save, so make sure you compiled your list correctly before you select this option.

2. To archive an image, select File→Save As from the Image Builder window.

The Save As window appears (Figure 3-7).

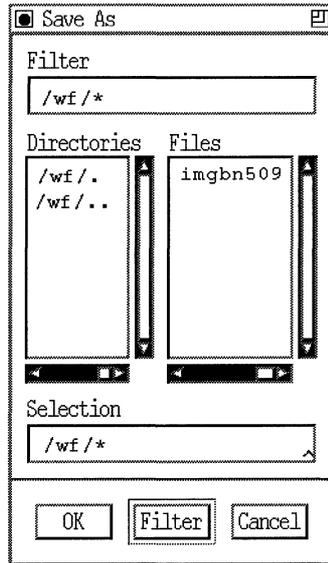


Figure 3-7. Save As Window

3. Select a directory for archiving images and type a filename in the Selection field. Then click on OK.

Information about the new image replaces the information about the image you loaded into the Image Builder. The updated information appears in a box at the top of the Image Builder window (Figure 3-8). If you are putting the new image on a diskette, use the image information to check the size of the image to make sure that it will fit on the diskette.

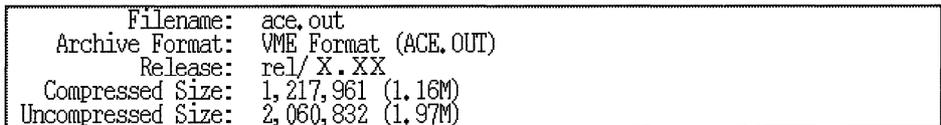


Figure 3-8. Image Information Box in the Image Builder Window

Note: The confirmation window (Figure 3-9) appears if you select File→Exit without saving your changes.

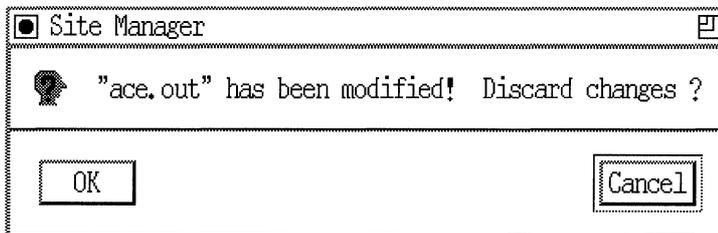


Figure 3-9. Confirmation Window

After you save the new image, refer to Chapter 4 for information on loading the new image on your router.

Creating a New Image

Creating an entirely new image is usually not necessary. However, the Image Builder provides the option in case you need it. For example, you might want to completely reconfigure the router software image or perform a major upgrade (such as from 7.60 to 8.10). To create a new image, follow these steps:

1. Select File→New from the Image Builder window.

Note: You will be unable to select the New command unless the router software files are archived in the Image Builder's directory (*\$HOME/.builder_dir*).

The New Image window appears (Figure 3-10).

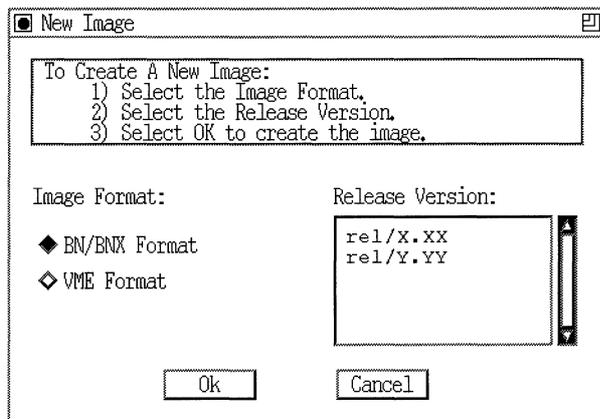


Figure 3-10. New Image Window

Note: The image formats that appear in the New Image window are for router images that you loaded into the Image Builder. For example, in Figure 3-10, only the BN/BNX and VME formats appear in the New Image Window. In this case, only the router software images for the BN and VME platforms were loaded into the Image Builder. Refer to “Proceeding if an Image Format Is Not Available.”

2. Select the appropriate image format; then click on OK.

An empty Image Builder window appears.

You are now ready to build a new image using the router software on your workstation. Refer to Chapter 2 for information on loading router software into the Image Builder.

Converting an Image for Other Types of Routers

Note: You can only use this feature to convert to image formats that you previously loaded into the Image Builder.

If you want to run the same image on different types of Wellfleet routers in a network, you can create an image for one type of router and convert the image to run on other types of routers. For example, you might want to run the same protocols on AN™ and BN™ routers in a network. You can customize an image for the BN routers and then convert that image to run on the AN routers.

To convert an image to run on a different type of router:

1. Select **File**→**Change Format** in the Image Builder window.

A list of image formats appears. The possible image formats are

- AFN
- AN
- ASN
- BN
- IN
- VME
- One board (AFN Flash for software versions earlier than 8.10)

If the image format you want is gray, you have not loaded that image into the Image Builder. Refer to “Proceeding if an Image Format Is Not Available.”

2. Select a format from the list.
The image changes to the format you selected.
3. Save the modified image (refer to “Saving a Modified Image”).

Proceeding if an Image Format Is Not Available

If you cannot choose the image format you want when you try to create a new image or convert an image for another type of router, you need to load the image for that format into the Image Builder.

To load the image:

1. Check that the software image for the format (refer to Table 1-1) appears in the directory where you loaded the router software.
 - a. If the image does appear in that directory, load the files into the Image Builder (refer to “Loading Router Software into the Image Builder” in Chapter 2).
 - b. If the image does not appear in the directory where you loaded the router software, you must load the image onto your workstation (refer to “Loading Router Software onto a PC or UNIX Workstation” in Chapter 2) and then load the image in the Image Builder.
2. Repeat the procedure for creating a new image or converting an image for another type of router.

Converting an Image for Other Software Versions

Note: You can only use this feature to convert to software versions that you previously loaded into the Image Builder.

In a network, you may have Wellfleet routers that use different versions of Wellfleet software. If you want to run the same image on those routers, you can create an image for a router running one software version and convert the image for routers running other software versions. For example, you might want to run the same image on routers running Version 7.60 software and routers running Version 8.10 software. You can create an image with Version 8.10 files, and convert the image to use Version 7.60 files.

To convert an image to a different software version:

1. Select **File**→**Change Release**.

A list of software versions appears. If you cannot select the version you want, you need to load that version into the Image Builder. Refer to “Proceeding if a Software Version Is Not Available.”

2. Select a version from the list.

The image changes to the software version you selected.

3. Save the modified image (refer to “Saving a Modified Image”).

Proceeding if a Software Version Is Not Available

If you cannot choose the software version you want when you try to convert an image for another software version, you need to load the image with the appropriate format and software release into the Image Builder.

To load the image:

1. Check that the software image for the relevant format (refer to “Overview of Router Software Images” in Chapter 1) appears in the directory where you loaded the appropriate version of the router software. For example, if you want to convert an image for an AN router to software Version 8.10, check that the AN router software image appears in the directory where you loaded the Version 8.10 software.
 - a. If the image does appear in that directory, load the files into the Image Builder (refer to “Loading Router Software into the Image Builder” in Chapter 2).

- b. If the image does not appear in the directory where you loaded the router software, you must load the image onto your workstation (refer to “Loading Router Software onto a PC or UNIX Workstation” in Chapter 2) and then load the image in the Image Builder.
2. Repeat the procedure for converting an image for another software version.

Generating a List of Contents for an Image

You can save to an ASCII file the contents of the Current Components list in the Image Builder window. To do so, select Options→Generate CONTENTS.TXT. (By default, the option is already selected.)

When you save an image by selecting File→Save or File→Save As, an ASCII file named *CONTENTS.TXT* is created and saved to the same directory you specified for the image.

The *CONTENTS.TXT* file lists all the model numbers, components, filenames, and descriptions shown in the Current Components window. Figure 3-11 shows a portion of a sample *CONTENTS.TXT* file.

Note: If you do not specify a directory, by default your image and *CONTENTS.TXT* file are saved to the Image Builder's directory.

Image File: /extra/smgr/has/image
Created on: Wed Jan 4 16:40:04 1995
Archive Format: VME Format
Release: int/8.10/40
File Size: 2,273,875 (2.17M)

C O N T E N T S

*4001x Baseline Router Software

- dcmp.out Decompressor Program
- krnl_ace.exe Operating System Kernel
- dmap.exe VME Backplane DMA Processor Driver
- arp.exe ARP Protocol Application
- debug.exe DEBUG Protocol Application
- ds2180.exe MK2180 Dual Sync Interface Driver
- ds2181.exe MK2181 Dual Sync Interface Driver
- dsde2.exe Dual Sync/Ethernet2 Link Module Driver
- dst.exe Dual Sync Token Link Module Driver
- dtok.exe Dual Token Ring Link Module Driver
- dvmp.exe DVMRP Multicast Protocol Application
- e1.exe E1 Link Module Driver
- enet2.exe Ethernet2 Link Module Driver
- fdi.exe FDDI Link Module Driver
- fsi.exe FDDI SMT Driver
- ftp.exe FTP Protocol Application
- hdlc.exe HDLC Protocol Application
- hfsi.exe HSSI SMT Driver
- hssi.exe HSSI Link Module Driver
- hwf.exe Hardware Filter Driver
- igmp.exe IGMP Multicast Protocol Application
- ilacc.exe ILACC Ethernet Interface Driver
- ip.exe IP Protocol Application
- lance.exe LANCE Ethernet Interface Driver
- lm.exe Line Manager Protocol Application
- mct1e1.exe Multi-Channel T1E1 Link Module Driver
- munich.exe Munich Multi-Channel T1E1 Driver
- nbip.exe NetBIOS/IP Protocol Application
- pcap.exe Packet Capture Protocol Application
- ping.exe Ping Protocol Application
- ppp.exe PPP Protocol Application

Figure 3-11. CONTENTS.TXT File

Chapter 4

Loading the Modified Image on a Router

Read this chapter for information on the following topics:


- ❑ Connecting to a Wellfleet Router
- ❑ Loading a Modified Image on the Router's File System
- ❑ Booting the Router with a Modified Image
- ❑ Verifying that the Router Booted Successfully

Connecting to a Wellfleet Router

You must specify the router(s) onto which you will load the modified router software image. You can load an image onto more than one router at a time.

1. From the Wellfleet Site Manager window, select Options→Router Connection.

The Router Connection Options window appears (Figure 4-1).

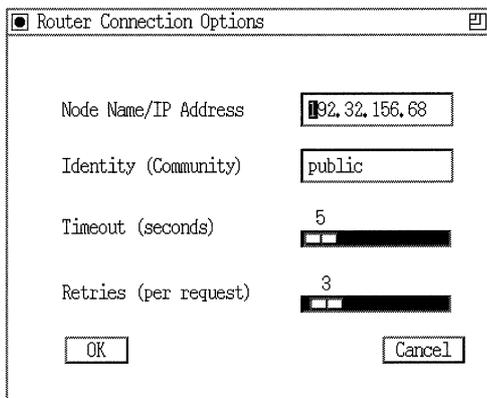

Router Connection Options

Node Name/IP Address: 192.32.156.68

Identity (Community): public

Timeout (seconds): 5

Retries (per request): 3

OK Cancel

Figure 4-1. Router Connection Options Window

2. In the Node Name/IP Address field, type the IP address of the Wellfleet router you want. Then click on OK.

Note: You do not need to change the default values that appear in the Identity, Timeout, and Retries fields.

Information on the router you specified appears in the Wellfleet Site Manager window (Figure 4-2).

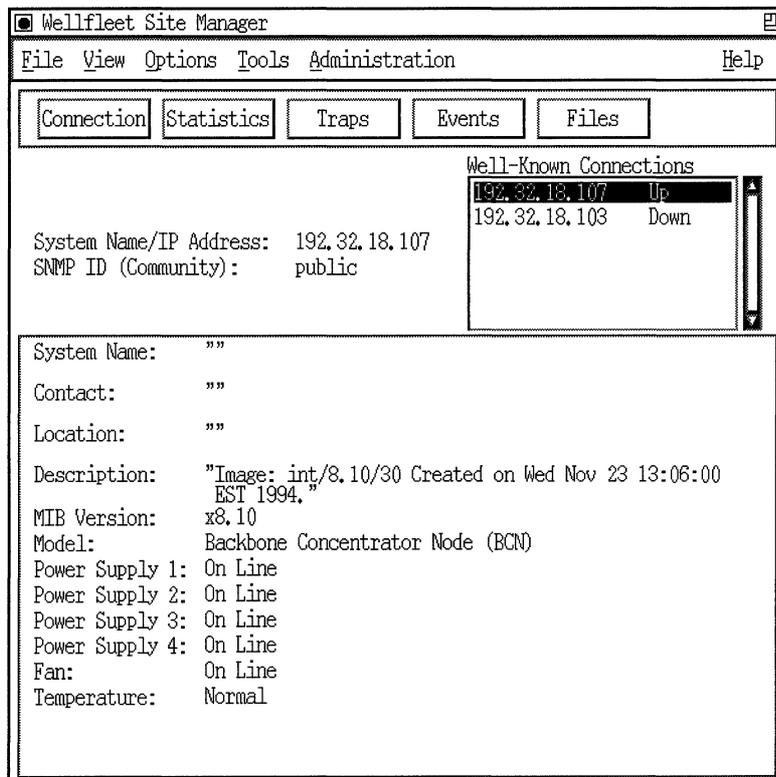


Figure 4-2. Wellfleet Site Manager Window

3. If you want to load the image onto only one router, refer to the next section.

If you want to load the image onto more than one router, repeat Steps 1 and 2 for each router.

4. Select **Options** → **Multiple Router Setup**. The Multiple Router Connection window appears (Figure 4-3).

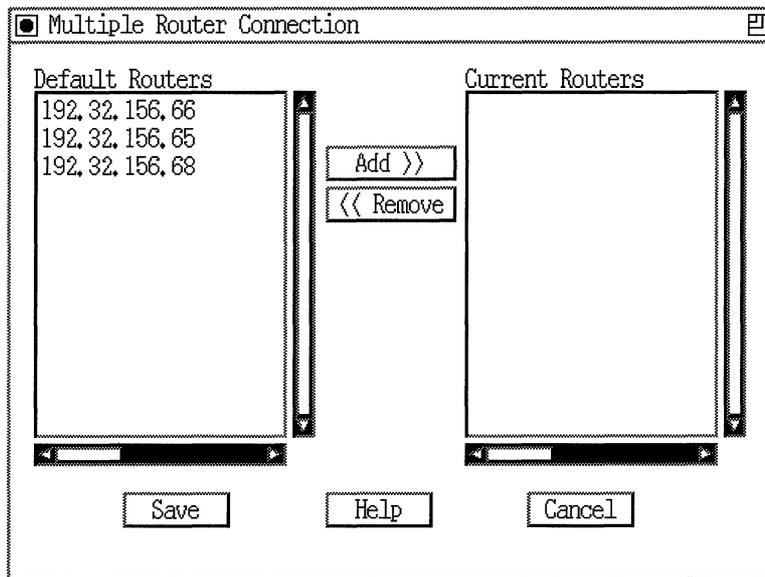


Figure 4-3. Multiple Router Connection Window

The Default Routers window lists the routers to which you are currently connected. The Current Routers window lists the routers whose files you want to manage simultaneously.

5. In the Default Routers list, select each router to which you want to transfer the same image at the same time. Then click on Add. The selected routers appear in the Current Routers list (Figure 4-4).

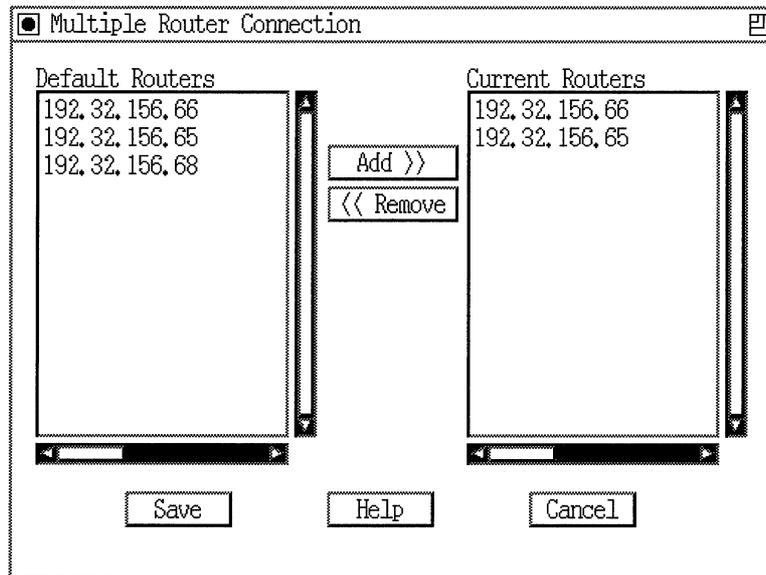


Figure 4-4. Adding Routers to the Current Routers List

If you inadvertently add a router to the Current Routers list, you can remove it from that list. To do so, select the router (in the Current Routers list) and click on Remove.

6. Click on Save.

Loading a Modified Image on the Router's File System

Use the Router Files Manager tool to load an image onto the router's file system. To access this tool, select Tools→Router Files Manager in the Wellfleet Site Manager window.

The Router Files Manager window appears.

- If space is available, you should keep the old router software image on the router's file system until you succeed in booting the router using the new image. In this case, refer to the next section, "If Space Is Available."
- If space is not available, refer to "If Space Is Not Available."

If Space Is Available

If space is available, use the Router Files Manager to save the new image to the router's file system:

1. In the Router Files Manager window, select the router volume where you want the image saved.
2. Select File→TFTP→Put File(s).

The TFTP Put File Selection window appears (Figure 4-5).

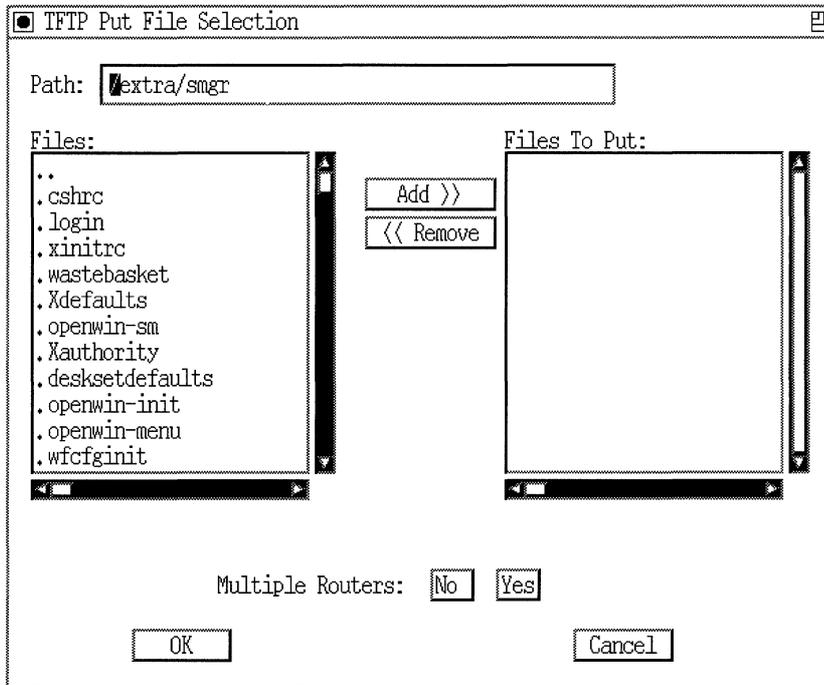


Figure 4-5. TFTP Put File Selection Window

3. In the Path box, enter the pathname of the directory on the Site Manager workstation that contains the image.
The files in that directory appear in the Files window.
4. In the Files window, click on the image filename; then click on Add. The selected file appears in the Files to Put window.
If you inadvertently add files that you do not want to transfer to the router, select those files in the Files to Put window. Then click on Remove.
5. If you selected multiple routers (refer to “Connecting to a Wellfleet Router”) and you want to transfer the image to all of the routers you selected, click on Yes in the Multiple Routers field.

If you selected only one router, or if you do not want to transfer the image to all of the routers you set up in the Multiple Router Setup window, click on No in the Multiple Routers field. In this case, if you previously set up multiple routers, the Router Files Manager transfers the image only to the router to which you are currently connected.

6. Click on OK.

When the transfer (to each of the routers) is complete, the TFTP Put File Selection window closes and you return to the Router Files Manager window.

7. Refer to the section “Booting the Router with a Modified Image.”

If Space Is Not Available

If space is not available on the router's file system, use the Router Files Manager to remove the old image from the router's file system before you save the new image there. The following sections provide information on how to remove the old image and save the new image.

Removing the Old Image from the Router

To remove the old router software image, proceed as follows:

1. From the Router Files Manager window, select the router volume and filename of the old software image.
2. Select File→TFTP→Get File(s).

The TFTP Get Files window appears (Figure 4-6).

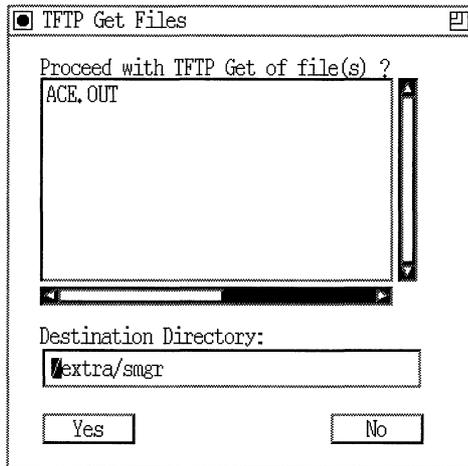


Figure 4-6. TFTP Get File Window

3. In the Destination Directory field, enter the directory on your Site Manager workstation where you want to store the file.
4. Click on Yes to proceed.

The Router Files Manager transfers the image to the Site Manager workstation.

If a file with the same name already exists in the destination directory on the Site Manager workstation, the file you are “getting” replaces it.

5. Remove the copy of the old image still residing on the router’s file system. To do so, select the file in the Router Files Manager window. Then select **Commands**→**Delete**.

A window prompts you to confirm your delete request.

6. Click on Yes to delete the file.

Note: If the old router software image resided on a memory card in the router, select **Commands**→**Compact** after you remove the old image to reformat the memory card. Compacting typically takes several minutes.

Saving the Modified Image to the Router

To save the modified image to the router,

1. Follow the directions in “If Space Is Available.”
2. Proceed to the section “Booting the Router with a Modified Image.”

Booting the Router with a Modified Image

1. From the Wellfleet Site Manager window, select **Administration**→**Boot Router**.

The Boot Router window appears (Figure 4-7).

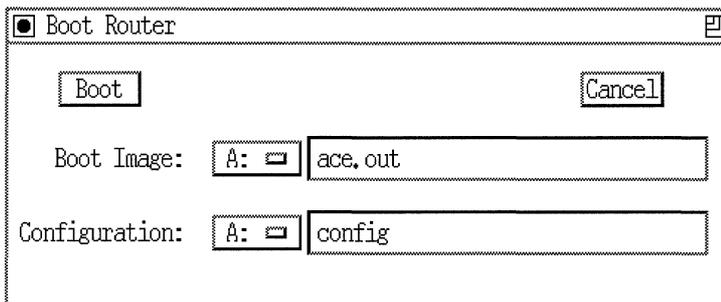


Figure 4-7. Boot Router Window

2. Specify the correct router volume and type the name of the new router software image. Then specify the configuration file you want to boot from, and click on **Boot**.

A confirmation window appears (Figure 4-8).

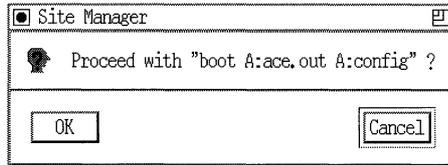


Figure 4-8. Boot Confirmation Window

3. Click on OK.
4. Proceed to the next section to verify that the router booted successfully.

Verifying that the Router Booted Successfully

You should verify that the router booted correctly with the modified software image. From the Wellfleet Site Manager window, select View→Refresh Display.

If Site Manager displays system information (such as the system name, contact, location, description, and MIB version), then the router booted successfully.

If you did not remove the old router software image from the router's file system, use the directions provided in the section "If Space Is Not Available" to remove the image.

If Site Manager does not display system information in its main window, the router did not boot successfully. If possible, load the image back into the Image Builder and call your local Bay Networks help desk for further assistance.

If you can no longer access the router with Site Manager, refer to *Using Technician Interface Software* for instructions on using the **xmodem** command to access the router. Call your local Bay Networks help desk for further assistance.

Appendix A

Executable Files

This appendix provides a description of the executable files available from Bay Networks.

Table A-1. Executable File Descriptions

Executable Files	Descriptions
appn_cp.exe	APPN Control Point
appn_ls.exe	APPN Link Service
arp.exe	ARP Protocol
asn_mod.exe	ASN Link Module Driver
at.exe	AppleTalk® Protocol
atm.exe	ATM Level 2
atm_dxi.exe	ATM DXI Protocol
atmalc.exe	ATM Link Module Line Driver
atmalcop.exe	Co-processor code for ATM Link Module
bgp.exe	BGP
chipcom.exe	Chipcom® INs Module Driver
dcmp.exe	Decompression Code

continued on the next page

Table A-1. Executable File Descriptions *(continued)*

Executable Files	Descriptions
debug.exe	Debug Protocol
dls.exe	DLSw Protocol
dmap.exe	Direct Memory Access Processor
drs.exe	DECnet™ IV Protocol
ds2180.exe	T1 Frammer Driver
ds2181.exe	E1 Frammer Driver
dsde2.exe	Dual Sync Dual Ethernet Link Module
dst.exe	Dual Sync Token Ring Link Module
dtok.exe	Dual Token Ring Link Module
e1.exe	E1 Link Module
efddi.exe	Fibermux INs Module Driver
egp.exe	EGP Protocol
enet2.exe	Ethernet2 Link Module Driver
fddi.exe	FDDI Driver
fmpb.exe	FastMac Plus (Quad Token Ring)
fr.exe	Frame Relay Protocol
fsi.exe	FDDI Link Module
ftp.exe	FTP Protocol
hdlc.exe	SYNC Driver
hfsi.exe	HSSI Link Module
hilance.exe	Hilance Ethernet Interface Driver
hls_in.exe	Hughes INs Module Driver

continued on the next page

Table A-1. Executable File Descriptions *(continued)*

Executable Files	Descriptions
hssi.exe	HSSI Driver
hwf.exe	Hardware Filters
igmp.exe	IGMP Multicast Protocol
ilacc.exe	ILACC Driver
ip.exe	Internet Protocol
ipx.exe	Internet Packet Exchange Protocol
isac.exe	ISAC Protocol
isdn.exe	ISDN Protocol
krnl_ace.exe	Advanced Communications Engine Kernel
krnl_an.exe	Access Node Kernel
krnl_asn.exe	Access Stack Node Kernel
krnl_bn.exe	Fast Routing Engine Kernel
krnl_in.exe	Integrated Node Kernel
lance.exe	LANCE Driver
lapb.exe	LAPB Protocol
llc.exe	LLC Protocol
lm.exe	Line Manager Protocol
lnm.exe	LNМ Protocol
mct1e1.exe	Multi-Channel T1E1 Link Module Driver
munch.exe	Munich Multi-Channel T1E1 Interface Driver
nbase.exe	APPN/SDLC Support Environment

continued on the next page

Table A-1. Executable File Descriptions *(continued)*

Executable Files	Descriptions
nbip.exe	NetBIOS/IP Protocol
netboot.exe	NETBOOT Decompression
osi.exe	OSI Protocol
ospf.exe	OSPF Protocol
pcap.exe	Packet Capture
ping.exe	Ping Protocol
ppp.exe	Point-to-Point Protocol
qenet.exe	QUAD Ethernet Link Module
qsync.exe	QUAD Sync Link Module
quicsync.exe	Quick Sync Link Module Driver
rarp.exe	Reverse Address Resolution Protocol
sdlc.exe	SDLC Protocol
snmp.exe	SNMP Protocol
t1.exe	T1 Link Module
tcp.exe	Transmission Control Protocol
tftp.exe	TFTP Protocol
tms380.exe	Token Ring Driver
tn.exe	Telnet Protocol
tnc.exe	Telnet Client Protocol
vines.exe	VINES® Protocol
vmeboot.exe	Upgrade bootstrap for Flash System Controller

continued on the next page

Table A-1. Executable File Descriptions (*continued*)

Executable Files	Descriptions
wan.exe	SMDS Protocol
wcp.exe	Wellfleet Compression Protocol
x25.exe	X.25 Protocol
xns.exe	XNS Protocol

A

- ace.out, 1-2
- Add button, 3-5
- adding software components, 3-5
- afn.exe, 1-2
- an.exe, 1-2
- analyzing components
 - component information box, 3-7
 - Details buttons, 3-8
 - partial component asterisk, 3-7
- asn.exe, 1-2
- asterisk, partial component, 3-7
- available components, 3-4

B

- bn.exe, 1-2
- booting with modified image
 - booting router, 4-10 to 4-11
 - loading modified image onto file system,
 - 4-6 to 4-10
 - overview, 4-1
 - verifying successful boot, 4-11
- buttons
 - Add, 3-5
 - Details, 3-8
 - Remove, 3-3

C

- commands
 - xmodem, 4-11
- component information box, 3-7
- connecting to a router, 4-2
- current components, 3-2

D

- Details buttons, 3-8

E

- Edit menu options, 3-4
- executable files, A-1 to A-5

H

- hardware formats, 3-13

I

- Image Builder
 - directory, 3-10
 - loading router software into, 2-6
 - overview, 1-1 to 1-4
 - saving images, 3-10 to 3-12
- in.exe, 1-2

L

loading

- modified image onto file system, 4-6 to 4-10
 - with available space, 4-6 to 4-8
 - without available space, 4-8 to 4-10
- router software into Image Builder, 2-6

M

modifying router software images

- adding software components, 3-5
- analyzing components, 3-6 to 3-9
- removing software components, 3-3
- saving modified images, 3-10 to 3-12

O

overview of Image Builder, 1-1 to 1-4

P

partial component asterisk, 3-7

PC

- loading router software images on
 - from CD, 2-3
 - from diskette, 2-2

protocols, A-1 to A-5

R

Redo command, 3-4

Remove button, 3-3

removing software components, 3-3

router files

- executable files, A-1 to A-5

Router Files Manager, 1-3

router software images

- adding software components, 3-5
- analyzing components, 3-6 to 3-9
- copying to a PC, 2-2, 2-3
- definition of, 1-2
- loading
 - from CD, 2-3
 - from MS-DOS diskettes, 2-2
 - into Image Builder, 2-6
 - onto router, 4-6 to 4-10
- removing software components, 3-3
- saving, 3-10 to 3-12
- types of, 1-2

S

saving modified images, 3-10 to 3-12

Site Manager

- booting router, 4-10 to 4-11

T

Technician Interface, 4-11

U

Undo command, 3-4

UNIX workstation

- loading router software images on
 - from CD, 2-3

V

verifying successful boot, 4-11

