
GENERAL INSTRUMENT

SP0250 APPLICATIONS MANUAL

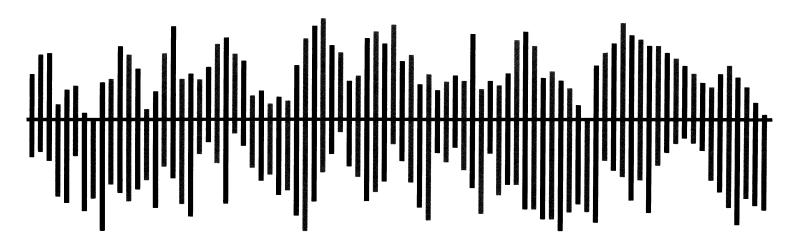

Microelectronics DivisionGeneral Instrument Corporation



SP0250 APPLICATIONS MANUAL



Microelectronics DivisionGeneral Instrument Corporation

TABLE OF CONTENTS—PAGE 2

JUNE 1982

© Copyright June 1982 GENERAL INSTRUMENT CORPORATION All information in this book is subject to change without notice. The information in this publication, including schematics, is suggestive only, General Instrument Corporation makes no warranty express or implied, nor will it be responsible or liable for, (a) the accuracy of such information, (b) its use or (c) any infringement of patents or other rights of third parties.

SP0250 Applications Manual

Table of Contents

1.	Description
2.	Features
3.	Theory 4
4.	Pin Configuration 5
5.	Pin Functions 5
6.	Test Pins
7.	Timing Diagram 6
8.	Architecture
9.	FIFO 8
10.	Digital Filter 9
11.	Filter Coefficients 1
12.	DAC Output
13.	Electrical Characteristics
14.	Speech Code Generation
	• Application
	• Description
	• Operation
15.	PIC Microcomputer Functions
16.	Example
17.	Speech Data
18.	Listing

LIST OF ILLUSTRATIONS

Fig. 1	Speech System Block Diagram	3
Fig. 2	Speech Synthesis Model	4
Fig. 3	Block Diagram of SP0250	7
Fig. 4	Data Block Format of Speech	4
Fig. 5	Single Cascade Stage	10
Fig. 6	Six Cascade Stages	10
Fig. 7	VSM2032 Speech Module	14
Fig. 8	Speech Frame Format	16
Fig. 9	ROM Format	17
Fig. 10	Flowchart	19

DESCRIPTION

The SP0250 speech synthesizer is an N-channel MOS LSI device capable of generating high quality speech with the natural inflection and emphasis of the original speaker. Operation requires one or more ROMs to store speech data and a microcomputer/processor such as General Instrument's PIC1650A (Figure 1).


The microcomputer retrieves a data block from the ROM, formats it into a 15 x 8 bit speech data frame and transfers it to the SP0250

8-bit port using two handshaking signals. This speech data frame, which includes such information as pitch period, amplitude, voiced/unvoiced, number of repetitions and filter coefficients "programs" the synthesizer to produce one frame of speech output.

The achievable output has a frequency response of .1-5KHz, a dynamic range of 42dB and a signal to noise ratio of approximately 35 dB.

FEATURES:

- High quality speech synthesizer
- Single +5 volt supply
- Simple interface to a microcomputer or microprocessor based system
- TTL compatible 8 bit bus interface
- Handshaking
- Double Buffered Input

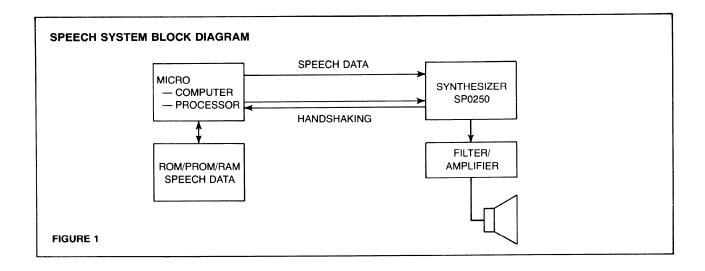

THEORY


Human speech is characterized as either voiced or unvoiced. When the vocal cords vibrate and the passage of air is not constricted, a "vowel like" sound is produced (voiced). Voiced sounds like *I*, *m* or ee have a pitch which is determined by the rate at which the vocal cords vibrate. Unvoiced sounds like *s*, *f* and *sh* have no definite pitch and are produced when air passes through constrictions formed by the teeth, tongue or lips.


The SP0250 is a digital model of this process and is illustrated in Figure 2.

The voiced/unvoiced parameter selects either the impulse generator

or the random noise generator as the excitation source. The source signal is multiplied by the gain to achieve the correct amplitude and input to the digital filter. The output of the digital filter — which is "programmed" by 12 coefficients to model the human vocal tract — is fed to a pulse width modulator which produces the audio signal.

The coefficients are generated by a speech analysis program incorporating a technique known as Linear Predictive Coding (LPC). LPC is a mathematical technique for generating points of a waveform from a weighted linear combination of previous samples. This form of mathematical comparison, relating the current output to a series of previous outputs, models the characteristic properties of the human speech mechanism.

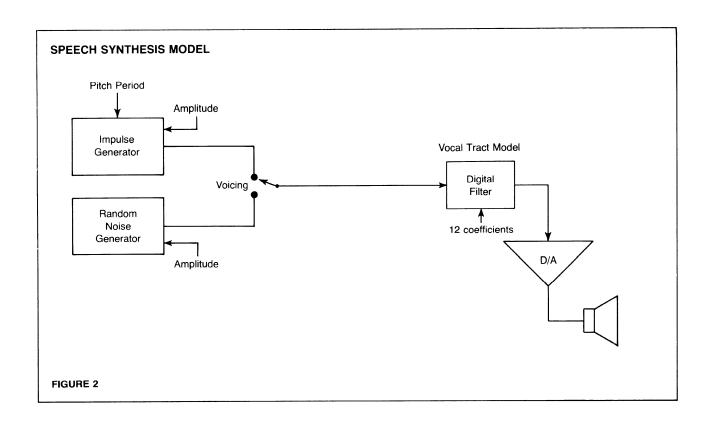

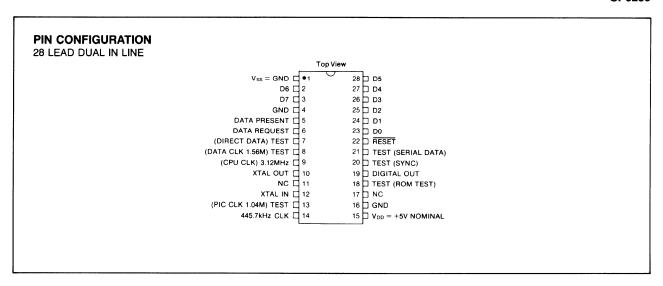


PIN FUNCTIONS

PIN NUMBER	NAME	FUNCTION				
15 1	V _{DD} V _{SS}	Positive power supply Ground				
Clock 12 10 Inputs	XTAL IN XTAL OUT	3.12 MHz crystal and associated circuitry.				
22	Reset	Two high to low transitions; required to reset the chip.				
23-28, 2, 3	D₀-D₁ Data Bus	8 bit data bus; used by the microcomputer to transfer speech data to the SP0250.				
5	Data Present	The negative edge of the Data Present pulse clocks 8 bits of speech data into the SP0250. Must be low while SP0250 is reset.				
4, 16, 7, 18		Must be grounded for proper chip operation.				
Outputs 6	Data Request	The SP0250 drives the Data Request pin high when it is ready to input speech data.				
19	Digital Out	Chip output. This output is open collector and requires a pull-up.				
9	3.120MHz CPU Clock	Buffered push-pull output.				
14	4.5KHz Clock	Buffered push-pull output with a 3:4 high to low ratio.				

TEST PINS


PIN NUMBER	NAME	FUNCTION					
Test Inputs 7	Direct Data Mode	A logic 1 on this input causes the data bus to be loaded directly into the source register in the chip on negative edge of Data Present pulse.					
18	ROM Test	A logic 1 on this input causes the contents of the coefficient ROM to appear on the SERIAL DATA pin, Clock rate 1.56 MHz.					
Test Outputs 20	SYNC	Buffered push-pull test output; 640ns positive pulse with a duty cycle of 312 clocks.					
21	Serial Data	Buffered push-pull test output; monitors a point in the internal data bus.					
8	1.56MHz Data Clock	Buffered push-pull square wave output.					
13	1.04MHz PIC Clock	Buffered push-pull output with 1:2 high to low ratio.					

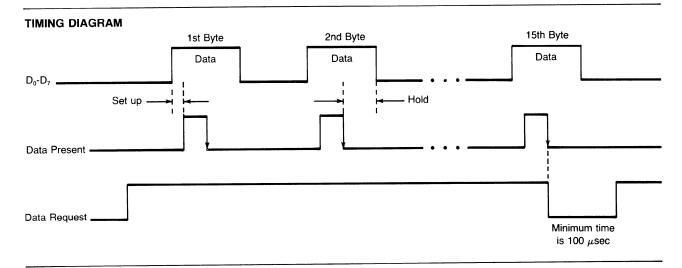

Data Request and Data Present are the handshaking signals used by the SP0250 and the microcomputer to transfer speech data. The SP0250 drives the Data Request line high when it is ready to accept a 15 \times 8 bit speech frame (Data Request stays high until the entire frame has been input). When the microcomputer sees a logic 1 on

Data Request, it will begin to send speech data. The microcomputer outputs 8 bits to the SP0250 followed by a Data Present pulse. This procedure is repeated until the entire 15 byte frame has been transferred.

ARCHITECTURE

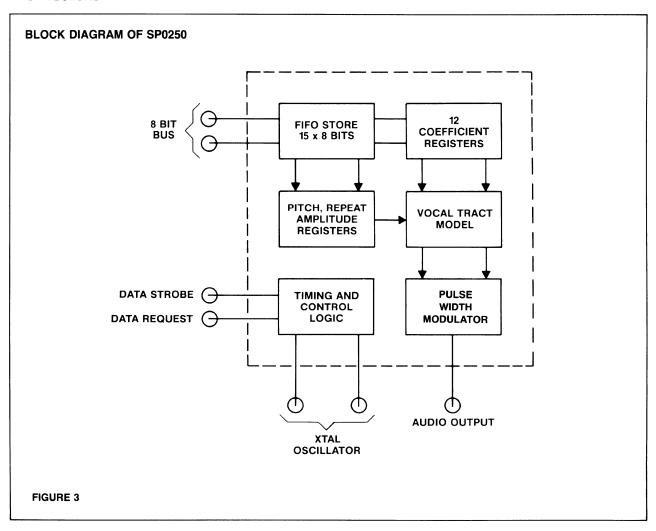

The SP0250 is controlled by 15 programmable eight bit parameter registers which hold the following information: voiced/unvoiced, pitch period, repeat count, amplitude and 12 digital filter coefficients (Figure 3).


Bit six of the repeat register is used to select either voiced or unvoiced source operation. If voiced mode is selected, the pitch

period register determines the spacing between the scaled unit impulses applied to the digital filter. The repeat register indicates the number of full pitch periods which will be synthesized before the 15 parameter registers are updated. The amplitude register in both voiced and unvoiced mode controls the gain of the source.

FIFO

The parameter registers are loaded through an 8 bit port into a 15 x 8 bit (one frame speech data, Figure 4) FIFO store. The FIFO gives the

microcomputer the ability to load the next set of parameters while the present set is controlling the synthesizer.

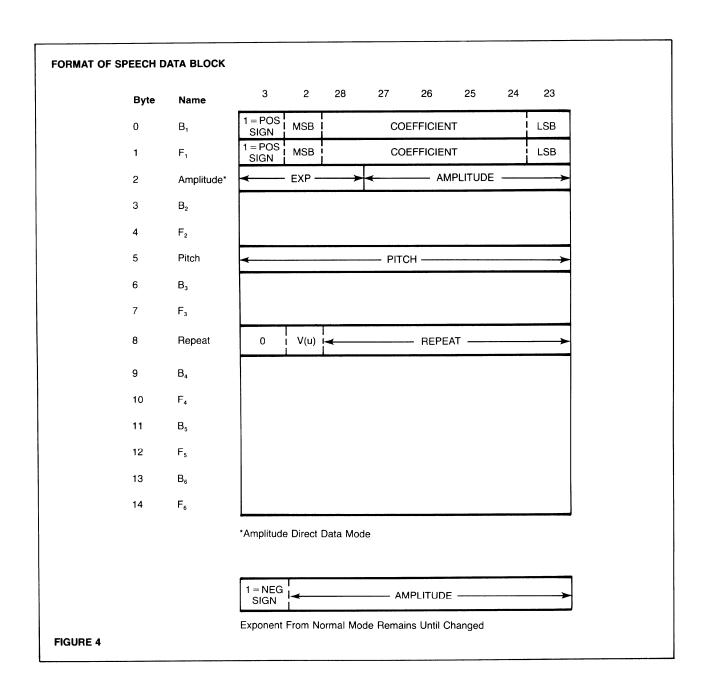

DIGITAL FILTER

The filter section is implemented using totally digital techniques. This approach allows one 2nd order section to serve as six sections through the use of multiplexing. The section that is implemented is the 2nd order infinite impulse response (IIR) digital filter shown in Figure 5. This filter stage has the transfer function:

$$H(Z) = \frac{1}{1 - 2F_tZ^{-1} - B_tZ^{-2}}$$

Therefore, it can be shown that the poles of the transfer function occur at:

$$\frac{-2F_{t} \pm \sqrt{4F_{t}^{2} + 4B_{t}}}{-2}$$

and when,

$$-1 < B_t \le 0$$

and,

$$|F_t| \leq \sqrt{-B}$$

the poles will be placed in a complex pair, forming a resonator with the bandwidth given by:

(1)
$$B.W. = \frac{-Fs LN (B^2)}{\pi}$$

where Fs is the sampling frequency in HZ and the center frequency (Fk) given by:

(2)
$$Fk = \frac{Fs COS^{-1} \frac{2F_t}{\sqrt{-B_t}}}{2\pi}$$

As can be seen from equations (1) and (2), modification of the B coefficient changes both the frequency and bandwidth of the resonator.

Modification of the F coefficient changes only the center frequency, and has no effect on the corresponding bandwidth.

Since speech signals (in particular vowel sounds) convey information through the shifting of resonant peaks in the spectrum, it is desirable to be able to change center frequencies of the 2nd order stages independent of their respective bandwidth settings. In addition it is important that the parameters of the individual stages (corresponding to particular resonances) can be independently modified. The use of cascade 2nd order stages supports these features, giving this configuration a distinct advantage over other filter sections currently in use for speech synthesis, such as the Lattice section, and direct form implementation.

If it is desired to place resonances at a frequency of zero, these real axis poles can be accommodated directly. Each 2nd order stage may be used to place two real axis poles of variable bandwidth. If X_1 is the real axis location of the first pole, and X_2 the second:

$$F_t = \frac{X_1 \,+\, X_2}{2}$$


and: $B_t = (F - X_1)^2 - F^2$


with the band widths of each given by:

$$BW_1 = -2Fs LN X_1$$

$$BW_2 = -2Fs LN X_2$$

where Ft and Bt represent the coefficients in Figure 6.

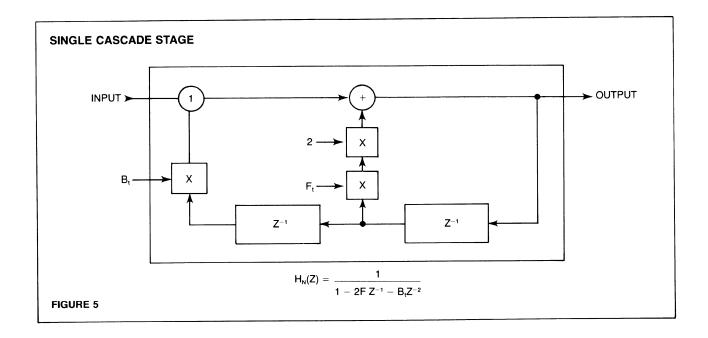

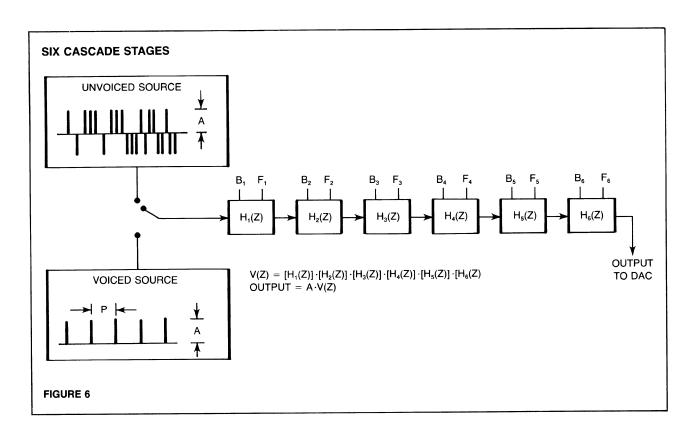

actual

value

.751953

FILTER COEFFICIENTS

The coefficients F_t and B_t are non-linearly quantized by a table lookup ROM (internal to SP0250). The low order 7 bits of each filter coefficient addresses a 128 x 9 bit ROM which produces an unsigned 9 bit coefficient with a value between zero and one. The MSB

coefficient addresses signed 9 bit coefficier of the original coeffic	s a 128 x 9 bit ROM which nt with a value between zero cient is the sign bit where 1 contents are listed below:	produces an un- and one. The MSB	59 60 61 62 63	385 389 393 397 401	.751953 .759766 .767578 .775391 .783203
7 bit	ROM	actual	64 65 66	405 409 413	.791016 .798828 .806641
coefficient	contents	value	67 68	417 421	.814453 .822266
^	0	0.000000	69	425	.830078
0 1	0 9	.017578	70	427	.833984
	17	.033203	71	429	.837891
2 3 4	25	.048828	72	431	.841797
4	33	.064453	73 74	433	.845703 .849609
5	41	.080078	74 75	435 437	.853516
6 7	49 57	.095703 .111328	76	439	.857422
8	65	.126953	, o 77	441	.861328
9	73	.142578	78	443	.865234
10	81	.158203	79	445	.869141
11	89	.173828	80	447	.873047
12	97	.189453	81 82	449 451	.876953 .880859
13	105 113	.205078 .220703	83	453	.884766
14 15	121	.236328	84	455	.888672
16	129	.251953	85	457	.892578
17	137	.267578	86	459	.896484
18	145	.283203	87	461	.900391
19	153	.298828	88	463 465	.904297 .908203
20	161	.314453	89 90	467	.912109
21 22	169 177	.330078 .345703	91	469	.916016
23	185	.361328	92	471	.919922
24	193	.376953	93	473	.923828
25	201	.392578	94	475	.927734
26	209	.408203	95	477	.931641 .935547
27	217	.423828	96 97	479 481	.939453
28	225 233	.439453 .455078	98	482	.941406
29 30	233 241	.470703	99	483	.943359
31	249	.486328	100	484	.945313
32	257	.501953	101	485	.947266
33	265	.517578	102	486	.949219
34	273	.533203	103 104	487 488	.951172 .953125
35 36	281 289	.548828 .564453	105	489	.955078
36 37	269 297	.580078	106	490	.957031
38	301	.587891	107	491	.958984
39	305	.595703	108	492	.960938
40	309	.603516	109	493	.962891 .964844
41	313	.611328	110 111	494 495	.966797
42 43	317 321	.619141 .626953	112	496	.968750
43 44	325	.634766	113	497	.970703
45	329	.642578	114	498	.972656
46	333	.650391	115	499	.974609
47	337	.658203	116	500	.976563
48	341	.666016	117	501 502	.978516 .980469
49	345	.673828 .681641	118 119	502	.982422
50 51	349 353	.689453	120	504	.984375
51 52	357	.697266	121	505	.986328
53	361	.705078	122	506	.988281
54	365	.712891	123	507	.990234
55	369	.720703	124	508 500	.992188
<u> 56</u>	373	.728516	125 126	509 510	.994141 .996094
57 59	377 381	.736328 .744141	127	511	.998047
58	301	./44141	1	.	

7 bit coefficient

59

ROM

contents

385

DAC OUTPUT

The output of the digital filter drives an internal 7 bit pulse width modulation (PWM) digital to analog converter. The design of the PWM DAC is such that all noise components are at or above 10KHz. The output is low pass filtered to 5KHz, and externally amplified.

ELECTRICAL CHARACTERISTICS

Vcc =	-0.3V to +12V
Storage Temperature –	25° to +125°C

Standard Conditions (unless otherwise stated)

Vcc = +4.6V to +6.5V

Operating Temperature = 0°C to +55°C

*Exceeding these ratings could cause permanent damage to the device. This is a stress rating only and functional operation of this device at these conditions is not implied — operating ranges are specified in Standard Conditions. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

Data labeled "typical" is presented for design guidance only and is not guaranteed.

DC CHARACTERISTICS

Characteristic	Min	Тур	Max	Units	Conditions
10 Inputs:					
Reset D0-D7, Data Present					
Logic 0	0.0	l –	0.6	V	
Logic 1	2.4	_	Vcc	V	
Leakage	_	_	10	μΑ	5.5V
1 Clock Input:					
Logic 0	0.0	_	0.6	V	
Logic 1	4.0	_	Vcc	V	
Leakage	_		10	μΑ	5.5V
2 Test Inputs					
Direct Data Mode, ROM Test					
Logic 0	0.0	_	0.6	V	
Logic 1	2.4	_	Vcc	l v	
Capacitance	-	_	10	ρF	
Leakage	–	_	10	μΑ	5.5V
3 P/P Outputs					
Data Request, CPU Clock, 445.7kHz Clock					
Logic 0	0.0	_	0.6	l v	.72mA
Logic 1	3.50	-	Vcc	V	−50 <i>μ</i> A
1 O/C Output					
Digital Out					
Logic 0	0.0	_	0.6	V	2.2K
Logic 1	_	_	10	μA	5.0V Source
Power on V _{DD} = I _{CC}	_	50	75	mA@	
	İ			25° C	V _{DD} =5.5
					V _{SS} =0.0
					No Loads

AC CHARACTERISTICS

Characteristic	Min	Тур	Max	Units	Conditions
Clock Frequency Clock Period	_	3.12 320	_	MHz ns	Square Wave
Data Present Logic 1 Logic 0	1.5 10.0	_	_	μs μs	
Reset D0-D7 Set Up Hold	1000 1.5 1.5	_ _ _	_ _ _	μs μs μs	
P/P Test Output Serial Data Logic 0 Logic 1	0.0 3.50	_	0.6 V _{CC}	v v	No Load
	10MG				

SPEECH CODE GENERATION

The analog speech signal from a tape recording is applied to a .1-5KHz bandpass filter and sampled at a 10KHz rate. Each sample is converted to a 12 bit digital value. A pitch period estimation and voicing decision is made to obtain the pitch, amplitude, and repeat coefficients. An LPC analysis is then performed on the digital data which produces the digital filter coefficients to best match the spectral characteristics of the samples in a particular speech frame. During this analysis, the number of filter stages and the coefficients perecision (low, high, full) information is entered. The coefficients generated by the analysis are then translated into a form which is compatible with the SP0250. If desired, the data may be further compressed by delta coding the coefficients.

APPLICATION:


The SP0250 is easily interfaced to most microcomputers or microprocessor systems. The microcomputer must decide what word or phrase to speak, retrieve speech data, expand data if it was compressed, and transfer the data to the speech chip.

DESCRIPTION:

The VSM2032 speech module includes the SP0250 speech synthesizer, a PIC1650A microcomputer and standard 32K ROM. The module interface consists of seven input lines (S0-S6), a STROBE line, a RESET line and a BUSY line.

OPERATION:

The word or phrase to be spoken is selected by placing its address on lines S0 through S6. The address is clocked into the module by a pulse on the STROBE line. At this time, the module will drive the BUSY line low and start speaking the selected word. When the module has finished speaking it will drive the BUSY line high and wait for new input on S0-S6.

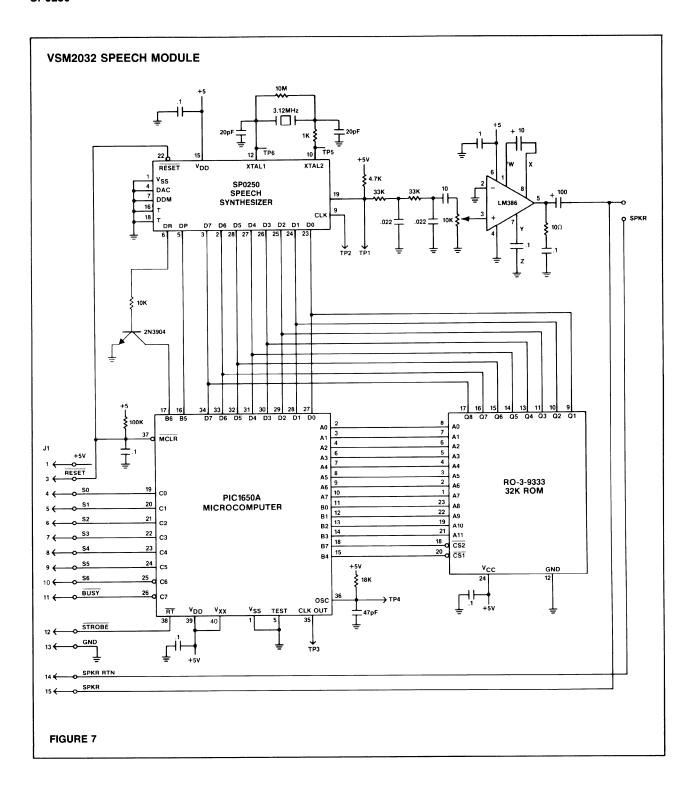

PIC MICROCOMPUTER FUNCTIONS

The functions of the PIC microcomputer in the VSM2032 module include the following:

- Input word address
- Retrieve compressed speech data from ROM
- Expand speech data to 15 x 8 bit frame
- Output speech frame to SP0250

Of these four tasks, expanding the speech data is the only one which needs further explanation. The speech data frames are usually stored in a compressed format to yield more speech per ROM. There are three techniques used to compress the data:

REDUCE STAGES:

Often it is unnecessary to implement all six filter stages for adequate speech modeling. In general, voiced speech requires four to six stages while unvoiced speech can be modeled with two to four stages. The unused stages have coefficients of zero.

REDUCE PRECISION:

Storing full 8 bits of precision for all 15 coefficients is unnecessary. It is possible to assign a different bit precision to each of the coefficients.

DELTA CODING:

This technique exploits the relatively smooth and continuous characteristic of the coefficients. The smaller differential between parameters in adjacent frames is stored rather than the absolute magnitude.


NOTE: Reducing the number of filter stages and reducing the coefficient precision may affect the speech quality. Delta coding does not.

The speech data may be encoded using any, all or none of these techniques. However, there is a tradeoff between data compression and software complexity of the controlling microcomputer (e.g. PIC1650A) — highly compressed speech data will yield more speech per ROM, but will necessitate complex decoding routines in the controlling microcomputer.


The standard PIC1650A in the VSM2032 module was programmed to handle highly compressed speech data and, therefore, may be overly complex for inclusion in an already burdened microcomputer. The following pages illustrate the use of a simple algorithm to drive the SP0250.

EXAMPLE

The driver routine shown in Figure 10 will retrieve data of the format shown in Figure 8.

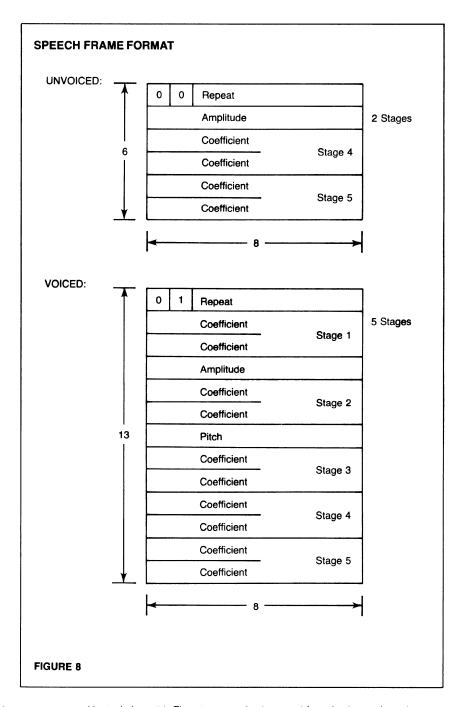

The speech data was compressed by technique #1. Five stages are implemented for voiced speech, and two stages for unvoiced speech. The driver routine is easy to implement, yet the ROM stores 30% more speech data than the non-compressed 15 x 8 bit format.

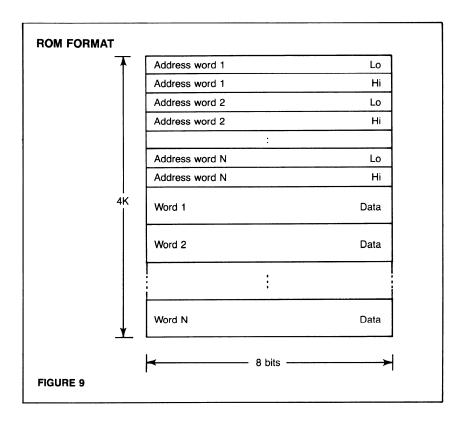


The ROM is divided into two sections — the jump table and the speech data. Each jump table entry points to the starting address of a particular segment of speech data. If there are ten words stored in ROM, then there will be ten two byte entries in the jump table. The speech data for each word will consist of compressed speech frames.

The 32K ROM with data compressed by technique #1 can store approximately 7-10 seconds of speech. If additional compression techniques were performed on the data, the ROM could store up to 30 seconds of speech.

SPEECH DATA

Listed below are the speech data for the word "EAT". The first line is the jump table entry which indicates that the speech data starts at octal address 24. The last line marks the end of the speech data block. The remaining lines are the speech data frames — 13 bytes for voiced frames, 6 bytes for unvoiced frames.

```
T=00004 IS ON CR A1
                              USING 00024 BLKS R=0000
TEMP
0001
      $000000,024,000,L,
      5000024,
0002
0003
      003,065,066,042,034,013,
      103,106,040,331,104,064,112,114,020,136,222,141,350,
0004
0005
      101,130,040,360,116,054,116,126,020,152,220,127,340,
0006
      102,114,040,336,072,044,121,116,020,164,220,144,351,
0007
      102,076,034,327,072,060,123,046,010,126,220,153,355,
0008
      102,020,024,334,106,044,125,066,014,156,216,134,343,
0009
      102,102,034,361,064,044,126,066,014,150,216,131,341,
0010
      101,130,040,332,032,040,130,100,020,152,216,137,346,
0011
      102,112,040,323,036,040,133,066,020,152,216,147,354,
0012
      102,116,040,324,044,050,135,050,014,140,214,140,350,
0013
      101,132,040,270,072,074,140,056,014,140,214,161,362,
      102,144,044,260,060,070,142,100,010,132,216,142,354,
0014
0015
      101,140,044,226,106,100,144,104,010,154,216,163,363,
      003,064,062,204,210,201,
0016
      003,027,014,020,027,210,
0017
0018
      003,011,042,020,230,214,
0019
      003,007,026,016,214,003
0020
      003,000,032,014,220,202,
0021
      003,000,020,012,205,010,
0022
      003,000,036,010,221,014,
0023
      003,000,026,040,033,213,
      003,072,056,050,050,220,
0024
      003,075,120,102,025,005,
0025
0026
      003,123,076,102,031,016,
0027
      003,163,060,064,033,013,
0028
      003,164,076,076,032,202,
0029
      003,161,126,102,103,204,
0030
      003,135,104,074,041,212,
0031
      003,074,100,070,070,224,
0032
      003,061,076,056,112,231,
0033
      003,026,052,054,115,234,
0034
      003,016,040,046,063,232,
0035
      003,000,000,000,000,000,
0036
      000,L
```

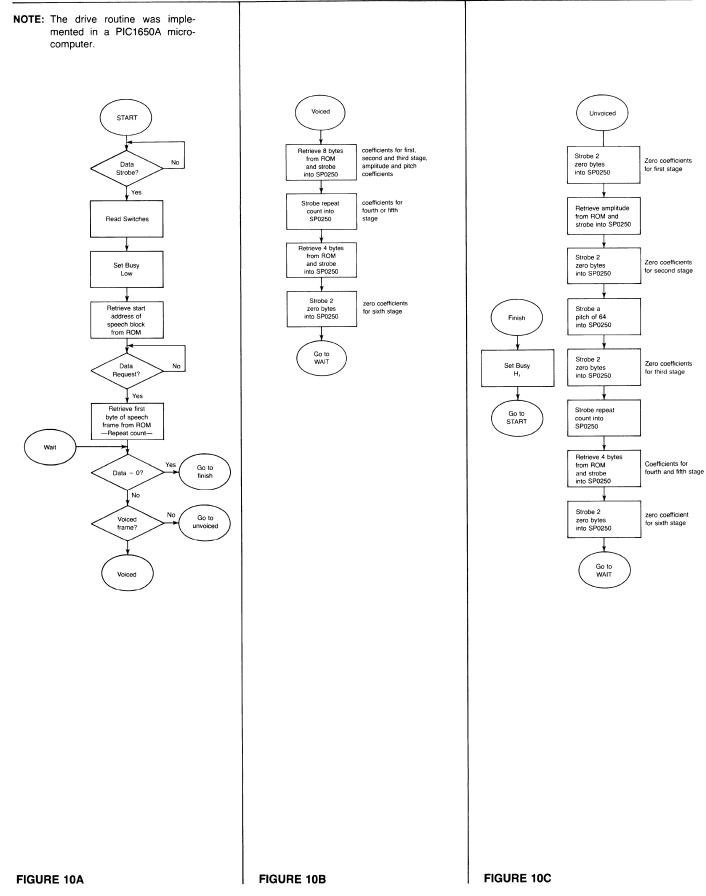

```
PAGE
                                                                                         1
LINE
        ADDR
               B 1
                     B 2
   1
   2
                            ; *
                                                 SP 0250 CONTROLLER
   3
                            ; *
                                           ..........
                                    LIST P=1650
                                    ORG
                                           0
   7
   8
   9
                            : REGISTER EQUATES
  10
  11
  12
      000001
                            RTCC
                                                           :RTCC REGISTER
                                    EQU
                                           1
  13
                                                           :PROGRAM COUNTER
  14
      000002
                            PС
                                    EQU
                                           2
                                                          STATUS WORD REGISTER
      000003
                            SWR
                                    Eau
                                           3
  15
                                                          FILE SELECT REGISTER
      000004
                            FSR
                                    EQU
                                            4
  16
      000005
                                    EQU
                                           5
                                                          :ADDRESS LINES TO ROM
                            IOA
  17
                                                          ; ADDRESS/CHIP FNABLE/HANDSHAKING
      000006
                            10B
                                    Eau
                                            6
  18
                                                          ;SWITCH INPUT/BUSY LINE
      000007
                            SWITCH
                                    EQU
                                           7
  19
                                                          :ROM/SP 0250 INTERFACE
                            DATA
                                    EQU
                                           10
      000010
  20
                                                          :ROM ADDRESS-LO
                            LOADD
                                    ΕQU
                                           1 1
      000011
  21
                                                          :ROM ADDRESS-HI
                                           12
      000012
                            HIADD
                                    EQU
  22
                                                           :REPEAT BYTE -VOICE/UNVOICED
                                            13
                            REPEAT
                                    EQU
  23
      000013
                                                           : COEFFICIENT COUNT
                                            14
      000014
                            CCOUNT
                                    EQU
  24
                                           15
                                                           TEMP STORE
      000015
                            TEMP
                                    EQU
  25
  26
  27
  28
                            : BIT FQUATES
  29
  30
      000000
                                                           : CARRY BIT-SWR
                                    EQU
                                            0
  31
                            C
                                                           :ZERO BIT -SWR
      000002
                            Z
                                    EQU
                                            2
  32
                                                           ; DATA PRESENT - IOB
      000005
                            DATAP
                                    EQU
                                            5
  33
                                                           :DATA REQUEST - IOB
      000006
                            DATAQ
                                    EQU
                                            ٨
  34
                                                           : VOICED/UNVOICED -REPEAT
  35
      000006
                            VOICE
                                    EQU
  36
  37
                            : SUBROUTINES
  38
  39
  40
      000000 00150
                            ZEROCO CLRF
                                            DATA
                                                           :ZERO COEFFICIENT
  41
                                           10B,DATAP
      000001 02646
                            STROBE
                                    BSF
  42
      000002 02246
                                    BCF
                                           10B DATAP
                                                           :STROBE SP0250 -NEG. EDGE
  43
      000003 04000
  44
                                    RETLW 0
  45
                            :INCADD -INCREMENT ROM ADDRESS
  46
  47
                                                           : NEXT SEQUENTIAL LOCATION
      000004 01251
                            INCADD INCF
                                           LOADD
  48
                                    BTFSC SWR,Z
      000005 03103
  49
      000006 01252
                                    INCF
                                           HIADD
                                                          :LOW ORDER ROLL-OVER
  50
  51
      000007 04000
                                    RETLW 0
  52
                            :DISABL -DISABLE ROM
  53
  54
```

```
ADDR
LINE
               B 1
                      82
                                                                                   PAGE
                                                                                            2
      000010 06320
                                    MOVLW
                                            320
  55
                             DISABL
      000011 00046
                                     MOVWF
                                            108
                                                            ;DISABLE ROM
      000012 04000
  57
                                     RETLW 0
  58
  59
                                     -RESTORE DATA BUS
  60
                             RESTOR
  61
      000013 06377
                                            377
  62
                             RESTUR
                                    MOVLW
                                            DATA
      000014 00050
                                                            : RESTORE FOR SP 0250/ROM COMM.
  63
                                     MOVWF
  64
      000015 04000
                                     RETLW 0
  65
                             ; READ
                                    -READ ROM/ADRESSED BY LO/HIADD
  66
  67
      000016 01011
                             READ
                                     MOVFW
                                            LOADD
      000017 00045
  68
                                     MOVWE
                                            IOA
                                                            :PUT OUT LO
      000020 01012
                                            HIADD
  69
                                     MOVEW
      000021 07017
                                     ANDLW
                                            17
                                                            CONLY 4 BITS VALID
                                            3 2 U
      000022 06720
                                     IORLW
                                                            :KEEP ROM DISABLED
  71
  72
      000023 00046
                                     MOVWE
                                            108
                                                            :PUT OUT HI
                                            157
      000024 07157
  73
                                     ANDLW
      000025 00046
                                            10B
  74
                                     MOVWF
                                                            : ENABLE ROM
                                                            :DATA PRESENT ON IOD
  75
      000024 04000
                                     RETLW
                                            0
  76
  77
                             : MAIN PROGRAM
  78
  79
      000027 00141
                            START
                                     CLRF
                                            RTCC
                                                            : INITALIZE FOR STROBE INPUT
                                            RTCC
      000030 01001
                                     MOVFW
  80
                             WAIT
      000031 03103
                                            SWR,Z
                                     BTFSC
  81
                                            WAIT
      000032 05030
                                     GOTO
                                                            ; NO STROBETT
      000033 01007
                                     MOVFW
                                            SWITCH
                                                            ;DATA STRBOBETT
  83
                                            177
      000034 07177
  84
                                     ANDLW
                                                            :LOW 7 BITS VALID
      000035 00051
                                            LOADD
                                     MOVWF
  85
                                                            STORE SWITCH INPUT
                                                            :SWITCH INPUT 7 BITS
      000036 00152
                                            HIADD
  86
                                     CLRF
      000037 02003
                                            SWR,C
  87
                                     BCF
                                            LOADD
  88
      000040 01551
                                     RLF
                                                            :JUMP TABLE -2 BYTE ADDRESS
      000041 06177
  89
                                     MOVLW
                                            177
      000042 00047
                                     MOVWE
                                            SWITCH
                                                            BUSY LOW -CHIP "TALKING"
  90
      000043 04416
                                            READ
  91
                                     CALL
                                                            :READ ROM -JUMP TABLE
      000044 01010
                                            DATA
                                    MOVEW
                                                            GET DATA
  92
  93
      000045 00055
                                     MOVWF
                                            TEMP
                                                            :STORE LO ADDRESS
                                            INCADD
      000046 04404
  94
                                     CALL
                                                            ; NEXT ROM LOCATION
  95
      000047 04410
                                            DISABL
                                                            :DISABLE ROM
                                     CALL
      000050 04416
                                            READ
                                                            : READ ROM -JUMP TABLE
  96
                                     CALL
      000051 01010
                                            DATA
  97
                                     MOVFW
                                            HIADD
  98
      000052 00052
                                     MOVWF
                                                            :HI ADDRESS FROM JUMP TABLE
  99
      000053 01015
                                     MOVFW
                                            TEMP
                                            LOADD
 100
      000054 00051
                                     MOVWF
                                                            ; LO ADDRESS FROM JUMP TABLE
 101
 102
                             IGET FRAMES OF DATA FROM ROM
                             AND SEND TO SP 0250
 103
 104
                                                            :LINE INVERTEDED
 105
     000055 03306
                             READY
                                     BTFSC IOB DATAQ
      000056 05055
                                            READY
                                                            :SP 0250 NOT READY
 106
                                     GOTO
 107
      000057 04410
                            FRAME
                                     CALL
                                            DISABL
                                                            :DISABL ROM
 1 n a
      000060 04416
                                     CALL
                                            READ
                                                            :GET VOICE SELECT/REPEAT
```

```
LINE
        ADDR
               B 1
                     B 2
                                                                                 PAGE
                                                                                          3
 109 000061 01010
                                  MOVEW DATA
 110 000062 03103
                                  BTFSC SWR,Z
     000063 05143
111
                                  GOŤO
                                          FINISH
                                                         ; ZERO BYTE -END "WORD"
112
     000064 00053
                                         REPEAT
                                  MOVWF
                                                         STORE VOICE SELECT/REPEAT
113
     000065 03713
                                  BTFSS
                                         REPEAT, VOICE
114
     000066 05117
                                          UNVOIC
                                  GOTO
                                                         :UNVOICED FRAME
115
     000067 06010
                                  MOVLW
                                         10
116
     000070 00054
                                         CCOUNT
                          SHALF
                                  MOVWE
                                                         :LOAD COEFFICIENT COUNT
     000071 04404
117
                                         INCADD
                                                         :NEXT-LOCATION IN ROM
                          GETDAT CALL
     000072 04410
118
                                  CALL
                                         DISABL
                                                         :DISABLE ROM
 119
      000073 04416
                                         READ
                                                         :GET COEFFICIENT
                                  CALL
     000074 04401
 120
                                         STROBE
                                  CALL
                                                         STROBE DATA INTO SP 0250
     000075 01354
 121
                                  DECFSZ CCOUNT
 122
     000076 05071
                                         GETDAT
                                  GOTO
                                                         : MORE COEFFICIENTS
     000077 03353
123
                                         REPEAT.7
                                  BTFSC
     000100 05111
 124
                                          7ER06
                                  GOŦO
                                                         :SECOND TIME THROUGH
125
     000101 04410
                                          DISABL
                                  CALL
     000102 01013
126
                                  MOVEW
                                         REPEAT
127
     000103 00050
                                         DATA
                                  MOVWE
                                                         COUTPUT VOICE SELECT/REPEAT
 128
     000104 04401
                                         STROBE
                                                         STROBE SP 0256
                                  CALL
129
     000105 04413
                                          RESTOR
                                                         :RESTORE SP 0250/ROM BUS
                                  CALL
     000106 02753
 130
                                         REPEAT,7
                          REST
                                  BSF
                                                         :SET FLAG
      000107 06004
 131
                                  MOVLW
                                                         :GET STAGES 4 & 5
     000110 05070
 132
                                         SHALF
                                  GOTO
 133
     000111 04410
                                         DISABL
                          ZER06
                                  CALL
                                                         :DISABLE ROM
     000112 04400
134
                                         ZEROCO
                                                         :ZERO COEFFICIENT FOR
                                  CALL
135
     000113 04400
                                          zEROCO
                                  CALL
                                                         SIXTH STAGE
      000114 04413
 136
                                         RESTOR
                                  CALL
                                                         SET IOD FOR INPUT
     000115 04404
137
                                  CALL
                                          INCADD
138
     000116 05055
                                         READY
                                                         :GET NEXT SPEECH FRAME
                                  GOTO
139
 140
                          :UNVOICED
 141
     000117 04410
 142
                                         DISABL
                          UNVOIC CALL
                                                         :DISABLE ROM
     000120 04400
 143
                                         ZEROCO
                                  CALL
                                                         :ZERO COEFFICIENT FOR
 144
     000121 04400
                                         ZEROCO
                                                         :FIRST STAGE
                                  CALL
 145
     000122 04413
                                         RESTOR
                                                         :RESTORE SP 0250/ROM BUS
                                  CALL
     000123 04404
 146
                                  CALL
                                          INCADD
                                                         : NEXT ROM LOCATION
 147
      000124 04416
                                  CALL
                                          READ
                                                         GET AMPLITUDE
 148
      000125 04401
                                         STROBE
                                                         STROBE DATA INTO SP 0250
                                  CALL
 149
     000126 04410
                                  CALL
                                          DISABL
                                                         :DISABLE ROM
     000127 04400
 150
                                          ZEROCO
                                  CALL
                                                         :ZERO COEFFICIENT FOR
      000130 04400
 151
                                  CALL
                                          ZEROCO
                                                         :SECOND STAGE
      000131 06100
 152
                                         .64
                                  MOVLW
                                         DATA
 153
      000132 00050
                                                         :PITCH PERIOD -> 64
                                  MOVWF
      000133 04401
                                                         STROBE INTO SP 0250
 154
                                          STROBE
                                  CALL
 155
     000134 04400
                                  CALL
                                          ZEROCO
                                                         ; ZERO COEFFICIENT FOR
     000135 04400
 156
                                          ZEROCO
                                                         THIRD STAGE
                                  CALL
     000136 01013
 157
                                         REPEAT
                                  MOVFW
     000137 00050
 158
                                  MOVWF
                                          DATA
                                                         : VOICE SELECT/REPEAT
 159
      000140 04401
                                          STROBE
                                  CALL
                                                         :STROBE INTO SP 0250
     000141 04413
 160
                                  CALL
                                          RESTOR
                                                         :RESTORE SP 0250/ROM BUS
      000142 05106
 161
                                                         GET COEFFIENTS FOR 4 & 5 STAGE
                                  GOTO
                                          REST
 162
```

```
LINE
        ADDR
               81
                     B 2
                                                                               PAGE
 163
                             FINISH -ONE NORD OR PHRASE HAS
                                       BEEN SPOKEN
 164
 165
                             ;
 166
      000143 06377
                             FINISH MOVLW 377
      000144 00047
                                            SWITCH
                                                            :BUSY HI -CHIP "NOT TALKING"
 167
                                     MOVWF
     000145 04413
                                            RESTOR
 168
                                     CALL
                                                            RESTOR IOD FOR INPUT
 169
      000146 05027
                                            START
                                     GOTO
 170
                                     ORG
                                            777
      000777 05027
                                            START
 171
                                     GOTO
 172 001000
                                     END
 ASSEMBLER ERRORS .
```

NOTE: On reset all I/O pins are set high and program execution begins at address 7778.





NORTH AMERICA UNITED STATES:

MICROELECTRONICS DIVISION

NORTHEAST—600 West John Street Hicksville, New York 11802 Tel: 516-733-3107, TWX: 510-221-1866

20th Century Plaza Daniel Webster Highway Merrimack, New Hampshire 03054 Tel: 603-424-3303, TWX: 710-366-0676

858 Welsh Road Maple Glen, Pennsylvania 19002 Tel: 215-643-5326

SOUTHEAST-7901 4th Street, N., Suite 208 St. Petersburg, Florida 33702 Tel: 813-577-4024, TWX: 810-863-0398

1616 Forest Drive Annapolis, Maryland 21403 Tel: 301-269-6250, TWX: 710-867-8566 4921C Professional Court Raleigh, North Carolina 27609 Tel: 919-876-7380

SOUTH CENTRAL-5520 LBJ Frwy., Suite 330 Dallas, Texas 75240 Tel: 214-934-1654, TWX: 910-860-9259

CENTRAL-4524 S. Michigan Street South Bend, Indiana 46614 Tel: 219-291-0585, TWX: 810-299-2518 5820 West 85th Street, Suite 102 Indianapolis, Indiana 46278 Tel: 317-872-7740, TWX: 810-341-3145 2355 S. Arlington Hts. Road, Suite 408 Arlington Heights, Illinois 60005 Tel: 312-981-0040, TWX: 910-687-0254

32969 Hamilton Court, Suite 210 Farmington Hills, Michigan 48018 Tel: 313-391-4070

SOUTHWEST-201 Standard Street El Segundo, California 90245 Tel: 213-322-7745, TWX: 910-348-6296

NORTHWEST—3080 Olcott Street, Suite 230C Santa Clara, California 95051 Tel: 408-496-0844, TWX: 910-379-0010

EUROPE

EUROPEAN SALES HEADQUARTERS:

GENERAL INSTRUMENT MICROELECTRONICS LTD. Regency House, 1-4 Warwick Street, London W1R 5WB Tel: 01-439-1895, Telex: 23272

NORTHERN EUROPEAN SALES OFFICE:

Regency House, 1-4 Warwick Street, London W1R 5WB Tel: 01-439-1891, Telex: 23272

Sandhamnsgatan 67

S-115 28, Stockholm Tel: 08-67 99 25, Telex: 17779

CENTRAL EUROPEAN SALES OFFICE: GENERAL INSTRUMENT DEUTSCHLAND GmbH

(MOS Produktgruppe) Nordendstrasse 3, 8000 Munchen 40 Tel: (089)27 24 049, Telex: 528054 6070 Langen Bei Frankfurt A Main Wilhelm-Leuschner Platz 8, Postf. 1167

Tel: (6103) 23 051, Telex: 415000 **SOUTHERN EUROPEAN SALES OFFICE:**

5-7 Rue De L'Amiral Courbet 94160 Sainte Mande, Paris Tel: 365 72 50, Telex: 213073 Piazza Novelli, 8

20129 Milano Tel: 720914, Telex: 843-320348

ASIA

HONG KONG:

GENERAL INSTRUMENT HONG KONG LTD. 139 Connaught Road Central, 3/F, San-Toi Building Tel: (5) 434360, Telex: 84606

JAPAN:

GENERAL INSTRUMENT INTERNATIONAL CORP. Fukide Bldg. 8th Floor, 1-13 Toranomon 4-Chome Minato-ku, Tokyo 105 Tel: (03) 437-0281, Telex: 2423413

TAIWAN:

GENERAL INSTRUMENT MICROELECTRONICS TAIWAN
77 Pao Chiao Road, Hsin Tien

Taipei, Taiwan

Tel: (02) 914-6234, Telex: 785-3111

MANUFACTURING FACILITIES

U.S.A.—Hicksville, New York • Chandler, Arizona • EUROPE—Glenrothes, Scotland • ASIA—Kaohsiung, Taiwan

APPLICATIONS CENTERS

U.S.A.—Hicksville, New York • Chandler, Arizona • Los Angeles, California EUROPE—Glenrothes, Scotland • London, England • Paris, France • Munich, Germany ASIA—Kaohsiung, Taiwan • Tokyo, Japan • Hong Kong