

**SUPER BIOS**  
**CP/M 2.2 BIOS**



5432 PRODUCTION DR.  
HUNTINGTON BEACH, CA 92649  
TELEX: 4722065 ITTSCSMA or 678401 TABIRIN  
TEL. (714) 891-4004

**SUPER BIOS tm**  
**THE CP/M 2.2 BIOS.**  
**SUPER SIX/SUPER QUAD**

**15 AUGUST 1983**  
**ADVANCED DIGITAL CORPORATION**

## Table of Contents

|                                                   |    |
|---------------------------------------------------|----|
| Introduction . . . . .                            | i  |
| Contents of distribution . . . . .                | 1  |
| Just getting started . . . . .                    | 2  |
| Operation of the SUPERBIOS . . . . .              | 4  |
| CP/M Installation . . . . .                       | 5  |
| How to change your CP/M system size . . . . .     | 5  |
| How to change your system configuration . . . . . | 6  |
| How to install your own copy of CP/M . . . . .    | 9  |
| Floppy Disk Formats . . . . .                     | 11 |
| Hard Disk Formats . . . . .                       | 12 |

## Introduction

Advanced Digital is proud to introduce the SuperBios. SuperBios is our special configuration of CP/M 2.2 with the following features.

- 1) 1024 byte sectors double density floppies, read/write.
- 2) Interrupt driven type-ahead buffer.
- 3) Supports 8" and or 5-1/4" floppy drives.
- 4) Supports a variety of hard disk drives.
- 5) Supports Parrallel and or Serial printers.

### SUPERBIOS distribution diskette contents

CPM.SYS is a memory image of CP/M with the SUPERBIOS. Customers who have not purchased CP/M from Advanced Digital will receive a CPM.SYS with the CCP and BDOS zeroed out.

SUPRBIOS.MAC is the source file for the SUPERBIOS. It can be edited and reassembled if modification of the SUPERBIOS is desired.

FMT8.COM is the SUPERBIOS 8" floppy disk format program.

FMT48.COM is the SUPERBIOS 5-1/4" 48 TPI format program.

FMT96.COM is the SUPERBIOS 5-1/4" 96 TPI format program.

NOTE: the three format programs are all produced from the source file "FORMAT.MAC".

FORMAT.MAC is the source file for the above format programs.

LDRGEN.COM is the equivalent of SYSGEN.COM in a normal CP/M system. LDRGEN.COM transfers the SUPERBIOS cold start loader from source (usually a disk) to destination.

SBCBOOT.MAC is the source file for the cold loader on track zero sector one, which is brought in by the monitor PROM.

SBCHBOOT.MAC is the source file for the cold boot loader for the hard disk.

LDRBDOS.MAC is the source file for the logical (non-hardware dependent) portion of the loader.

LDRBBIOS.MAC is the source file for the floppy and hard disk drivers used in the loader.

RAMDISK.MAC is the SAMPLE (only) source file for a ram disk board.

MODEM.COM is the modified version of the public domain program "MODEM7".

MODEM.DOC contains the information for running "MODEM.COM".

FMTHD.COM is the hard disk format program.

FMTHD.MAC is the source file for "FMTHD.COM".

## Just getting started

### Generating a new system disk:

If you have purchased CP/M TM. from Advanced Digital Corp, you can put your bootable CP/M disk into floppy drive "A" and depress the reset key and you will be off running CP/M. If you do not have CP/M from Advanced Digital then please refer to STEP 1C of the section entitled "CP/M INSTALLATION" Page 5 for installing your CP/M with our BIOS.

It is important to make a back-up copy of the distribution diskettes, it is very possible when first learning how to use the system, you can rewrite, or change the data on the diskette without meaning to do so (which will or could cause the diskette not to boot any more). So to prevent having to send the diskettes back to Advanced Digital for regenning of the system disks; make one or two back up copies to work with and store the original diskettes for any later reference. The following steps will help generate a back-up copy.

Use FORMAT.COM to format blank disk(s) to the desired format so to make a back up copy of your distribution diskette(s).

Now its time to put a track zero loader on the disk you have just finished formatting. Place your formatted disk into floppy drive "B" and your bootable CP/M disk into drive "A". Run the program entitled "LDRGEN", you will be prompted by this message:

Read loader from Hard or Floppy drive (H,F) or <ret> if in memory:

You will need to respond by typing "F" for floppy, next you will be prompted by this message:

Enter physical drive no. (0-3) of loader source or <ret> to reboot:

You will need to respond by typing "0" for the first physical drive (which is drive "A"). Next you will be prompted by this message:

Enter physical drive no. (0-3) of loader destination or <ret> to reboot:

You will need to respond by typing "1" for the second physical drive (which is drive "B"). To exit the program type a <ret> or a "^C". You now have a track zero loader on both diskettes.

Use PIP to transfer the file CPM.SYS from A to B. For optimum performance, CPM.SYS should be the first file you write to any system disk. This is because the system must access this file on each warm boot (control-C), and the access is much faster if the file is on the outermost tracks of the disk (files are written to a new disk from the outer tracks in).

Use the "STAT" command to set the CPM.SYS file to read only.

```
A)STAT B:CPM.SYS $R/D
```

Next copy the rest of the file over to the back-up diskette by using,

```
A)PIP B:=A:*. *[V]
```

### Operation of the SUPERBIOS

The SUPERBIOS behaves in general as any normal CP/M system bios. However, you must not change density of disks without doing a control-C. This is because the SUPERBIOS checks only once after each warm boot to see what density each disk is.

You may not change the system disk at any time, unless:

1) You hard reset the system by depressing the reset button.

or

2) The system disks are the same density and the CPM.SYS file is located on the disk in EXACTLY the same place in the directory as the old disk. To ensure that the CPM.SYS file will always be in the same place on the disk, ALWAYS make CPM.SYS the first file copied to any diskette.

If you wish to change the density of the system disk you must hard reset the system by depressing the reset button.

#### Printer Selection:

The "SUPER BIOS" comes defaulted to a parallel type printer, if you desire to run a serial printer you have one of two options.

1) Refer to the section entitled "CP/M INSTALLATION" for the steps necessary to incorporate a change of printer.

2) If you wish to select between the two types of printers you can use the "STAT" command to change the printer output.

A) STAT LST:=CRT: this will select output to the serial printer.

A) STAT LST:=TTY: this will reselect output to the parallel printer.

#### NOTICE:

As shipped, the SUPERBIOS for the Super Six is configured to support two eight inch drives ( drives A & B), one 5-1/4" 48 TPI as drive C, and one 5-1/4" 96 TPI as drive D. On the Super Quad there are two eight inch drives A & B.

If you need to change your system configuration please refer to the section entitled "CP/M INSTALLATION".

## CP/M Installation

This section will explain the procedures necessary to change the operating system size or system configuration.

In order to properly assemble the SUPERBIOS, after making any changes you must use Microsoft's M80.COM and L80.COM versions "3.44".

STEP 1A how to change your CP/M system size.

STEP 1B how to change the system configuration.

STEP 1C how to install your own copy of CP/M.

### STEP 1A:

To change the system size, you will need to change the '.PHASE' pseudo-op in the SUPRBIOS.MAC file to the address of where the bios will reside.

| CP/M size | '.PHASE' address |           |
|-----------|------------------|-----------|
| 63k       | F600 HEX         | 62976 DEC |
| 62K       | F200 HEX         | 61952 DEC |
| 61K       | EE00 HEX         | 60928 DEC |
| 60K       | EA00 HEX         | 59904 DEC |
| 59K       | E600 HEX         | 58880 DEC |
| 58K       | E200 HEX         | 57856 DEC |
| 57K       | DE00 HEX         | 56832 DEC |
| 56K       | DA00 HEX         | 55808 DEC |
| 33K       | 7E00 HEX         | 32256 DEC |
| 32K       | 7A00 HEX         | 31232 DEC |
| 31K       | 7600 HEX         | 30208 DEC |

The '.PHASE' pseudo-op is located immediately before the bios jump vector in the source file.

### STEP 2A:

To assemble the SUPERBIOS use M80 with the command syntax:

A) M80 =SUPRBIOS/L.

The /L switch will produce a .PRN file with the macros expanded. Now link the SUPERBIOS using L80 with the following command syntax:

### STEP 3A:

A) L80 /P:100, SUPRBIOS, SUPRBIOS/N/E

#### STEP 4A:

Now generate the CPM??.COM file (?? denotes the system by size). Type "MOVCPM ?? \*". Save the file generated from the MOVCPM operation by typing "SAVE 34 CPM??.COM". Remember that the system size MUST correspond to the system size made in the SUPERBIOS.

To patch the SUPERBIOS and the CP/M file together do the following:

```
A>DDT CPM??.COM (?? = system size)
DDT VERS 2.2
NEXT PC
2300 0100
-M980,1F7F,100
-ISUPRBIOS.COM
-R1600
NEXT PC
???? 0100
-G0
A>SAVE ?? XCPM.SYS
```

The number of pages to save in the XCPM.SYS file will vary depending on your system configuration, and can be calculated as follows: ie. if ???? = 2A80, then use the high byte (2A) of the address and round it off to the next highest value if the lower byte is not zero, (ie 2A80 to look like 2B). Convert the value to the number of pages to be saved using the following formula  $(2*16) + (11*1) - 1 = ??$ . In the example for 2A80 you would save 42 pages.

System configuration changes:

#### STEP 1B:

To change the system configuration, You will need to refer to one of the following steps:

```
Printer changes = STEP 2B:
Drive changes = STEP 3B:
Type ahead buffer = STEP 4B:
```

#### STEP 2B:

To change the printer from parallel to serial or serial to parallel change the equate labeled "PARPRNT" to true for parallel printer enabled, or to false for serial printer enabled. The first serial port is always reserved for the console and the second serial port is available for the serial printer.

Refer to STEP 2A to complete instalation of the SUPERBIOS.

**STEP 3B:**

To make drive configuration changes, the macro named "DSKDEF" (located near the end of the source file) shows the drive type and the logical mapping of the physical drive. The "DSKDEF" macro is used as follows:

```
DSKDEF (F8,F8,ST419)
```

Note: In the Super Six bios you can mix 5-1/4" floppies with 8" floppies, but this can NOT be done with the Super Quad bios.

This say's drives A,B are 8 inch floppies and drives C,D are an ST419 20meg. hard disk.

The "DSKDEF" macro will partition the drive into 8 meg. byte partitions.

Other possible drive configurations are as follows:

F8 = 8 inch floppy drive

F548 = 5-1/4 inch 48tpi floppy drive

F596 = 5-1/4 inch 96tpi floppy drive

| Drive type | num. logical drvs. | manufacture                               |
|------------|--------------------|-------------------------------------------|
| NODRIVE    | 1                  | No drive selected<br>skip a logical drive |
| DMA        | 2                  | dma systems cartridge                     |
| ST412      | 1                  | segate technology                         |
| ST419      | 1                  | segate technology                         |
| TM601S     | 1                  | tandom magnetics                          |
| TM602S     | 1                  | tandom magnetics                          |
| TM603S     | 1                  | tandom magnetics                          |
| TM603SE    | 2                  | tandom magnetics                          |
| TM501      | 1                  | tandom magnetics                          |
| TM502      | 2                  | tandom magnetics                          |
| TM503      | 2                  | tandom magnetics                          |
| SA602      | 1                  | shugart assoc.                            |
| SA604      | 1                  | shugart assoc.                            |
| SA606      | 1                  | shugart assoc.                            |
| SA1002     | 1                  | shugart assoc.                            |
| SA1004     | 1                  | shugart assoc.                            |
| Q2010      | 1                  | quantum                                   |
| Q2020      | 2                  | quantum                                   |
| Q2030      | 3                  | quantum                                   |
| Q2040      | 4                  | quantum                                   |
| M4010      | 1                  | miniscribe                                |
| M4020      | 2                  | miniscribe                                |

The floppy step rate for 5 and 8 inch drive can be change at the equate labeled "FSTPR" to the desired step rate specified in the following table:

00 = 3ms  
01 = 6ms  
02 = 10ms  
03 = 15ms

The hard disk step rate is preset in the SUPERBIOS library for each individual drive type and should not be changed.

Refer to STEP 2A to complete instalation of the SUPERBIOS.

#### STEP 4B:

To install the type ahead buffer change the equate labeled "INTRIN" to true for enabled and false for disabled. This allows interupt driven console input.

Refer to STEP 2A: to complete instalation of the SUPERBIOS.

Install your own copy of CP/M.

#### STEP 1C:

The following implementation will work as long as your supplier has not made any modifications to the MOVCPM.COM file as sent by Digital Research.

If you have bought CP/M from Advanced Digital then you will not need to make the following patch to your "MOVCPM.COM" file. If you already own CP/M you must make the following patch in order to correctly operate CP/M on any Advanved Digital product.

```
A>ddt movcpm.com
DDT vers 2.0
NEXT PC
2800 0100
-a1cd2                                the instructions were
1CD2 nop                               DCR C
1CD3 nop                               DCR C
1CD4 lxi h,0                           JNZ 12DF
1CD5 .
-g0
A>save 39 movcpm.com
```

This is necessary because the SUPERBIOS uses a sector blocking/deblocking algorithm that uses the directory write code in C to flush disk buffers after file closing.

STEP 2C:

Make a copy of your SUPERBIOS distribution disk to work on.  
Do PIP B:=A:\*. \*[V0] then use LDRGEN to transfer the loader.

STEP 3C:

Put the copy of of the SUPERBIOS distribution disk in your second floppy drive (B:), and your current CP/M system disk (with the patched MOVCPM.COM) in the first floppy drive (A:).

STEP 4C:

Run MOVCPM and DDT to create a system file.

A)MOVCPM 61 \* ( 61K is the normal system size )

CONSTRUCTING 61K CP/M V2.2  
READY FOR "SYSGEN" OR "SAVE 34 CPM61.COM"

A)SAVE 34 B:CPM61.COM

A)B:

B)A:DDT CPM61.COM ( Use your DDT to bring in CP/M )

NEXT PC  
2300 0100

-M980,1F7F,100 ( Move the CCP and BDOS to 100H )

-ICPM.SYS  
-R1600 ( The CPM.SYS file has the BIOS image )

-M2D00,3700,1700 ( Move the new BIOS to 1700H )

-11700,170E ( Make sure move went OK )

1700 JMP FA00

-G0 ( Exit and save )

B)ERA CPM.SYS

B)SAVE ?? CPM.SYS ?? = number of pages to be saved.  
(refer to the formula in STEP 4A on calculating the number of pages to be saved.)

STEP 5C:

You now have a bootable system disk equivalent to those sent to customers who have purchased CP/M from Advanced Micro Digital.

## Floppy disk formats

The SUPERBIOS single density eight inch format is completely IBM standard 3740 compatible. The disks should be readable by any CP/M standard single density 8" system. Note that the Advanced Digital format program fills all sectors with E5's in accordance with standard practice.

Some eight inch single density disks from other systems may not be readable at first with the SUPERBIOS. This is because they have an odd byte located on track 0 sector 1 byte 7F (this is the standard location). This is where the density code is supposed to be. The SUPERBIOS interprets either a 00 or E5 to be single density, anything else other than the SUPERBIOS single density code byte will cause an error. If you are unable to read a supposedly standard single density disk, try running the SUPERBIOS format program with the FORMAT SYSTEM TRACKS ONLY option. This will fill the outer two tracks with E5 and not hurt any of the data. It will destroy the present system already on the disk.

The SUPERBIOS double density format for eight inch disks has the first track of each disk formatted to be single density, in accordance with IBM practice. All tracks of minifloppies are double density. Byte 7F of track zero, sector 1 is a code byte (this is the standard location). Our codes are E5 for single density, E6 for single sided double density, and E7 for double sided double density. There is no double sided single density format, as there are no standards available for such disks.

Double density disks have only one reserved track. The sectors are 1024 bytes in length. Eight inch disks have eight sectors per track, five inch disks have four. The physical skew on the disk is three for eight inch, two for five inch. These numbers were chosen to optimize sequential sector operations such as program loads, since these operations are the most sensitive to the skew factor. There is no logical skew used with double density disks.

## Hard Disk formats

The hard disk driver will support most any SA1000 or ST506 interfaces. The hard disk controller can handle up to four physical drives in any combination as long as you don't try to mix SA1000 interface with ST506. As supplied the Superbios contains configurations for the following disk drives:

### SEAGATE TECHNOLOGY

ST412      ST419

### TANDON MAGNETICS

TM601S      TM602S      TM603S      TM603SE      TM501  
TM502      TM503

### SHUGART ASSOCIATES

SA602      SA604      SA606      SA1002      SA1004

### QUANTUM

Q2010      Q2020      Q2030      Q2040

### MINISCRIBE

4010      4020

### ATASI

3020      3033      3046

### DMA SYSTEMS

MICRO MAGNUM 5/5

other drives can be added without a lot of difficulty.