## I/O slot cards.

0004	Card Applemet 2-Port ( Profile 4-Port ( Priam Ca	ard Card ard .	<u>I.D.</u> 9001 9002	Card I/O Port DMA Test	Test Card Card
Card I.D.	15 14 13 12 11	Meaning Bootable Status program on ICON on the card. Testcard. I.D. I.D.	the card.		
Words 1 2 3 4 5	Status Boot r	.D. Dunt in ROM, for che routine entry point Dutine entry point. Dinter.	ecksum calcu	ulation.	