P.S. 2228 3550

Burroughs Corporation



COMPUTER SYSTEMS GROUP SANTA BARBARA PLANT

B1800/B1700 CONVERT/BACKUP

PRODUCT SPECIFICATION

	7		PRODUCT SPECIFICATION
REV LTR	REVISION		
A	8/06/80	Idele	Original Issue MARK 10.0 Release
	1	ĺ	
:			
	1		
	:		
	ĺ		
		,	
	**		
	·		
			RECEIVED
			SEP 1 9 1980
			GENERAL MANAGER SANTA BARBARA PLANT
			CHILD DAIDAIN FLANT
	1	L	

COMPANY CONFIDENTIAL B1800/B1700 CONVERT/BACKUP F.S. 2228 3550 (A)

IABLE OF CONTENTS

GENER 4	L DE	SCRIPT	IOI	٧		•	•	•	•	•		•	•	•	•	•	•	•	•	•	•	. •	•	1 - 1
OPER 41	ING	INSTRU	JCT:	ION:	3			•																2-1
ERROR	MESS	AGES	•			•	•		•	•	•	•	•	•		•	•	•	•	•	•	•		3 - 1

COMPANY CONFIDENTIAL B1800/B1700 CONVERT/BACKUP P.S. 2228 3550 (A)

GENERAL DESCRIPTION

CONVERT/BACKUP is a special purpose utility designed to convert B1000 printer backup files into a format acceptable to the B9270 Page Printer. The files created are in the form of Large Systems printer backup format.

The program will accept 81000 Tape or Disk printer backup files, created by software release 9.0 or later, as input. It will not accept backup files from earlier releases.

The backup files to be converted must be labeled. The record size can be any legitimate backup record size.

CONVERT/BACKUP will output a B1000 labeled multi-file tape that can be processed by the B9270 Page Printer. Because of labeling differences, this tape will not be recognized by Large Systems as a valid backup tape.

A B1900 printer backup file with an internal name of "B927C.NAMES" will also be created by the program. This file will contain the names of all files converted during the program run.

RELATED DOCUMENTATION

Name

Number

SY STEM/BACKUP

P.S. 2222 2681

COPPANY CONFIDENTIAL B1800/B1700 CONVERT/BACKUP P.S. 2228 3550 (A)

OPERATING INSTRUCTIONS

CONVERT/BACKUP is initiated by an execute statement. The program These specs will issue a prompt requesting the input specs. supply the input-file-identifier and optional origin override.

The input-file-identifier can be any valid B1000 file identifier or a backup print file number. If a backup print number is supplied as the input-file-identifier, the family name will default to BACKUP.PRT for Disk files and to BACKUP for Tage files.

The optional origin override is the reserved word TAPE This tells the program that the input file is on Tape rather than on Disk.

A null input will terminate the program.

A sample convert session follows:

- **?EX CONVERT/BACKUP** I
- 0 CENVERT/BACKUP =626 BOJ.
- CONVERT/BACKUP = 626 "B9270-TAPE/DIRECTORY" = "BACKUP-PRT/419" 0
- Z CONVERT/BACKUP =626 ENTER SPECS 0
- CONVERT/BACKUP =626 ACCEPT.
- I 2626AX BACKUP.PRT/127
- 2 CONVERT/BACKUP = 626 ENTER SPECS % READY FOR NEXT FILE n
- CONVERT/BACKUP =626 ACCEPT. 0
- 2 WILL LOOK FOR BACKUP-PRT/418 I 2626AX 418
- % CONVERT/BACKUP =626 ENTER SPECS .
- n CONVERT/BACKUP = 626 ACCEPT.
- - % LOOK FOR BACKUP/420 ON TAPE **?626AX 420 TAPE**
- Z CONVERT/BACKUP =626 ENTER SPECS 0
- CCNVERT/BACKUP =626 ACCEPT
- 26264X I
- CONVERT/BACKUP =626 "BACKUP.PRT/419" RELEASED
- CONVERT/BACKUP =626 EDJ.

COMPANY CONFIDENTIAL 81800/81700 CONVERT/BACKUP P.S. 2228 3550 (A)

ERROR MESSAGES

1. FILE NOT PRESENT. RE-ENTER SPECS.

The input file could not be found. Rementer the correct file name or enter NULL to terminate the program.

2. FILE NOT BACKUP. RE-ENTER SPECS.

The input file is not a B1000 backup file, so it cannot be converted. Enter the name of a B1000 backup file or enter NULL terminate the program.

3. THERE ARE NO RECORDS TO PROCESS.

An EOF branch was encountered while looking for the Control record in the backup file. Program control returns to ENTER SPECS.

4. BACKUP FILE MUST BE CREATED ON RELEASE 9.0 GR LATER.

The release level in the Control record indicates that the backup file was created on an earlier release than 9.0. Program control returns to ENTER SPECS.

5. BACKUP FILE MUST BE LABELED.

The backup file must be created from a labeled printer file. Program control returns to ENTER SPECS.

COMPANY CONFIDENTIAL BL800/B1700 CONVERT/BACKUP P.S. 2228 3550 (A)

INDEX

ERROR MESSAGES 3-1

GENERAL DESCRIPTION 1-1

OPERATING INSTRUCTIONS 2-1