


of Digital Equipment Corporation or in part as the basis for the **MASTER DRAWING LIST** REV. NO. OF DWG. NO. TITLE LET. SHEETS D-UA-RKØ1-Ø-Ø A-PL-RKØ1-Ø-Ø RKØl ASSY RKØl ASSY (PL) D 1 D-DI-RKØl-Ø-l С DRAWING INDEX LIST (RKØ1) A-ML-RKØ1-X RKØ1−X A-ML-RKØ8-O rkø8-ø E-IC-RKØ1-Ø-2 В POWER WIRING AC & DC A-AL-RK01-0-3 RKO8 HARDWARE LIST A-SL-RKO1-0-4 RK08 SOFTWARE PACKAGE A-SP-RK01-0-5 CHECKOUT PROCEDURE A-SP-RK01-0-6 DISK CARTRIDGE MEMORY A-SP-RK01-0-7 ACCEPTANCE PROCEDURE **REVISIONS** DATE 1/13/7 DATE / DATE / TO TO THE NEW TO CORPORATION MAYNARD, MASSACHUSETTS CHG. NO. APP'D. CHK'D.

00001
00002
00005
RK01X-2
RK01-7
J.M.
PROJ. ENG.
PROD. REV. DATE 6/70 00002 8/70 00004 9/70 00005 RK01X-2 11/70 RK01-7 TITLE DATE 4-18-10 DISK DRIVE RKO1 DATE wreaut. FIRST USED ON NUMBER SIZE CODE REV. RKØ1 F AML RK**Ø1−Ø** SCALE NONE SHEET 1 OF DIST. DEC FORM NO.16-1033 DRA 103

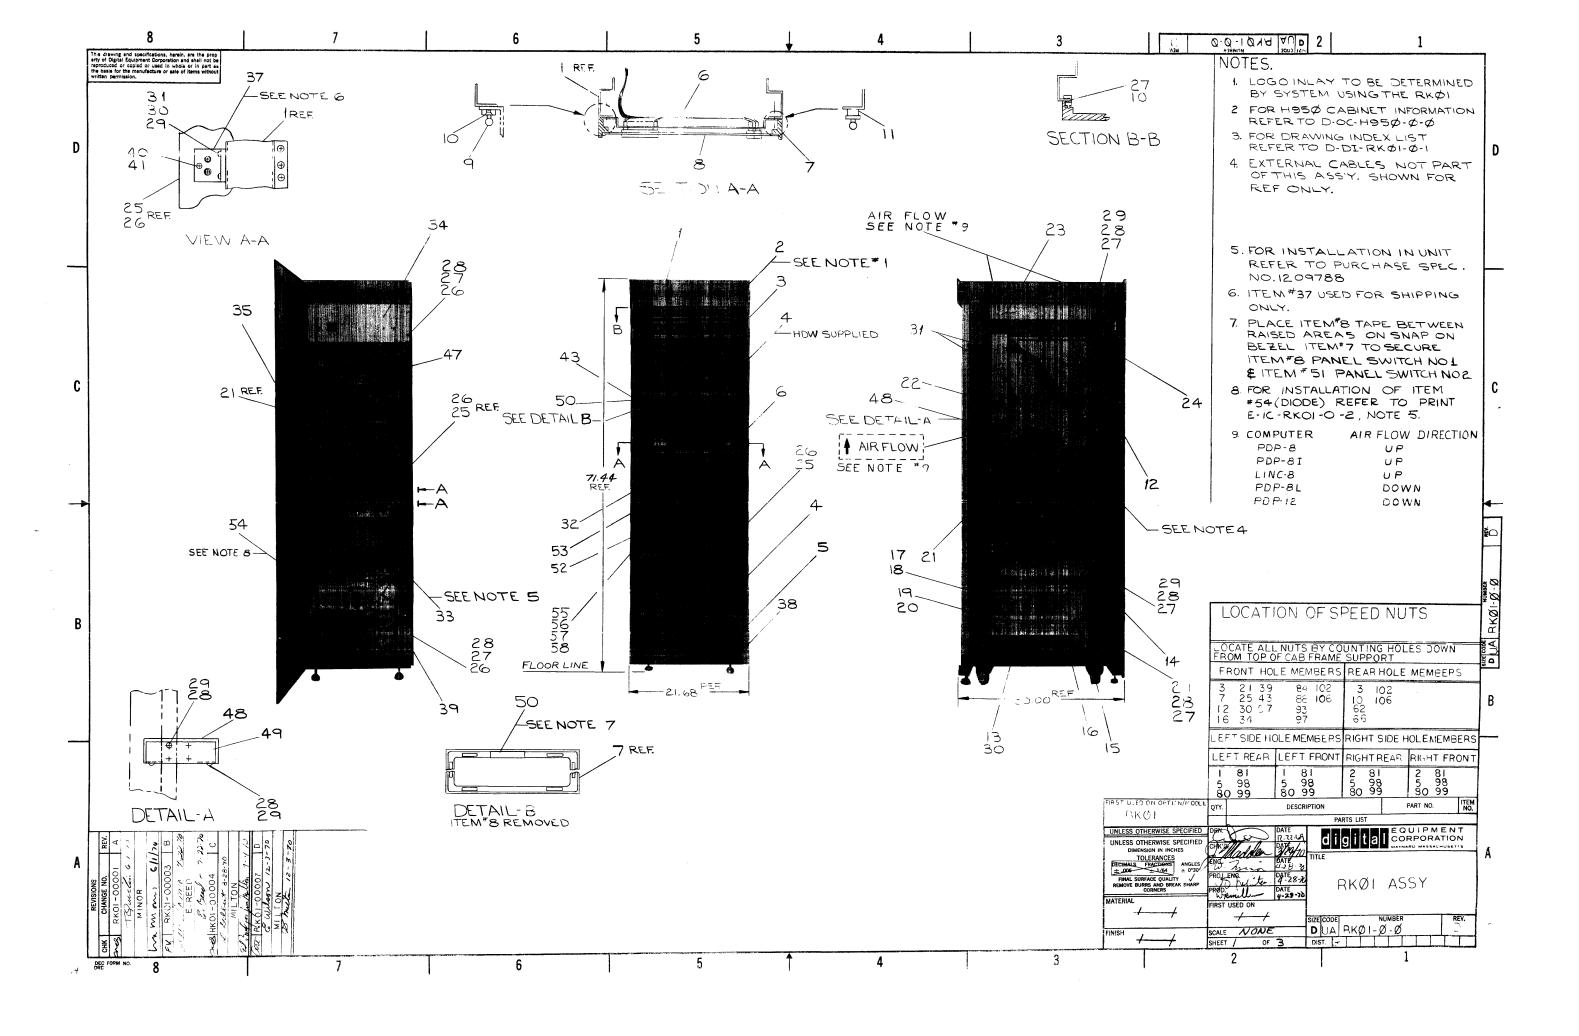

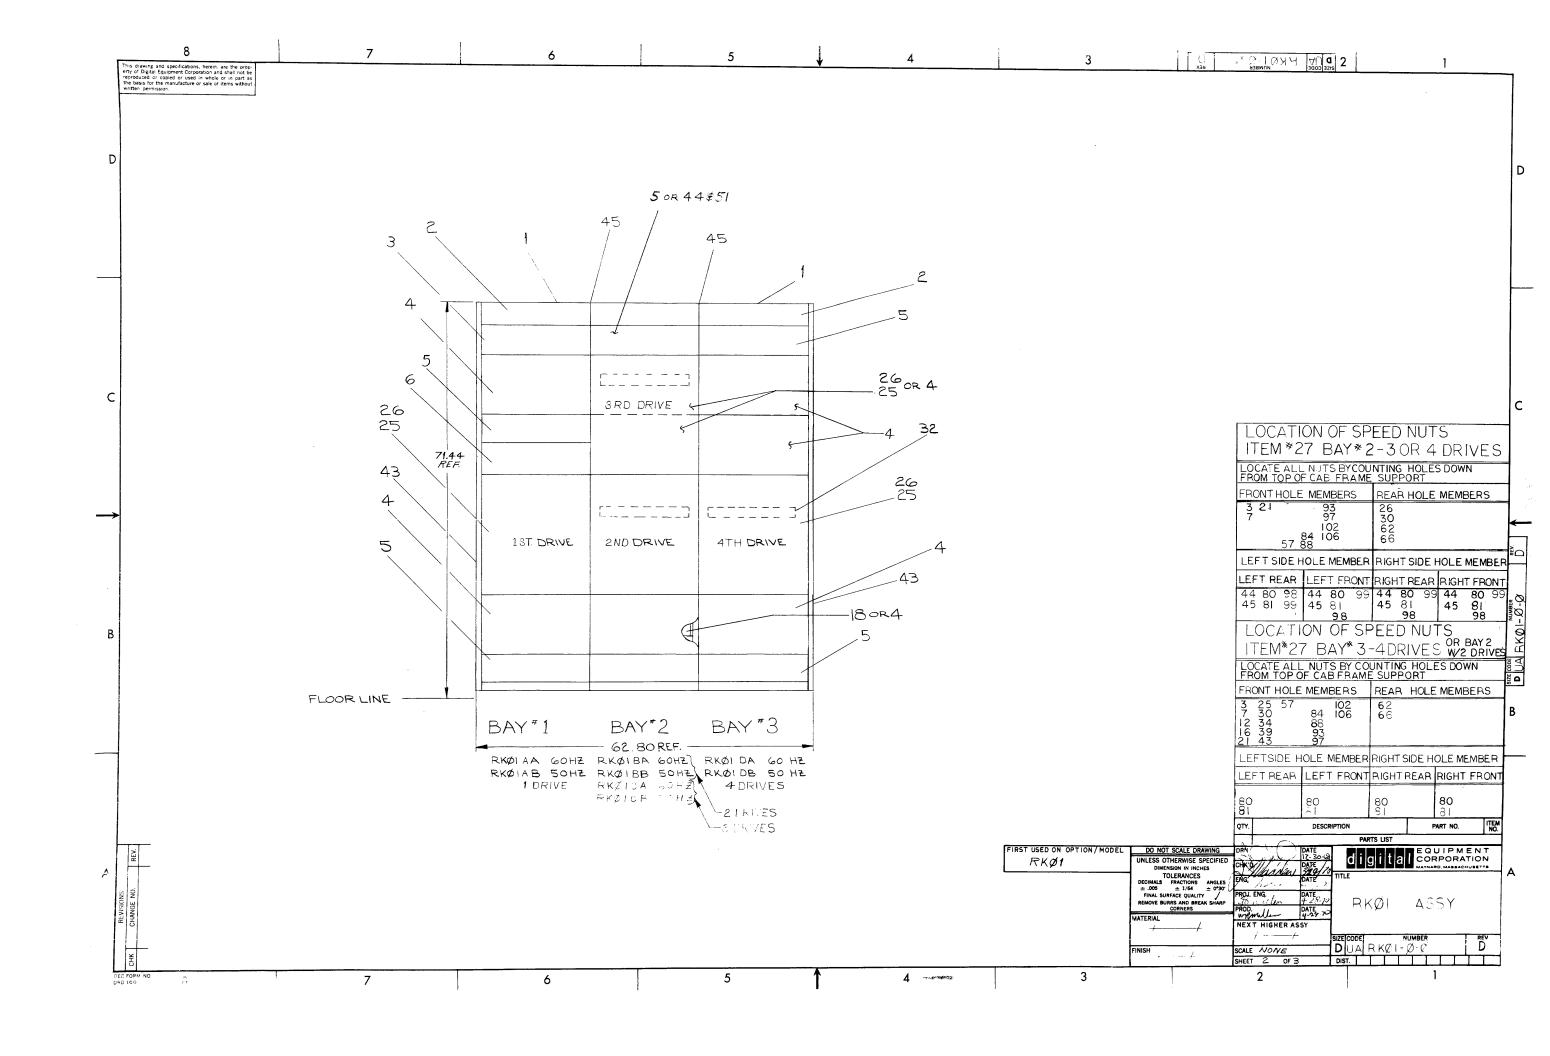


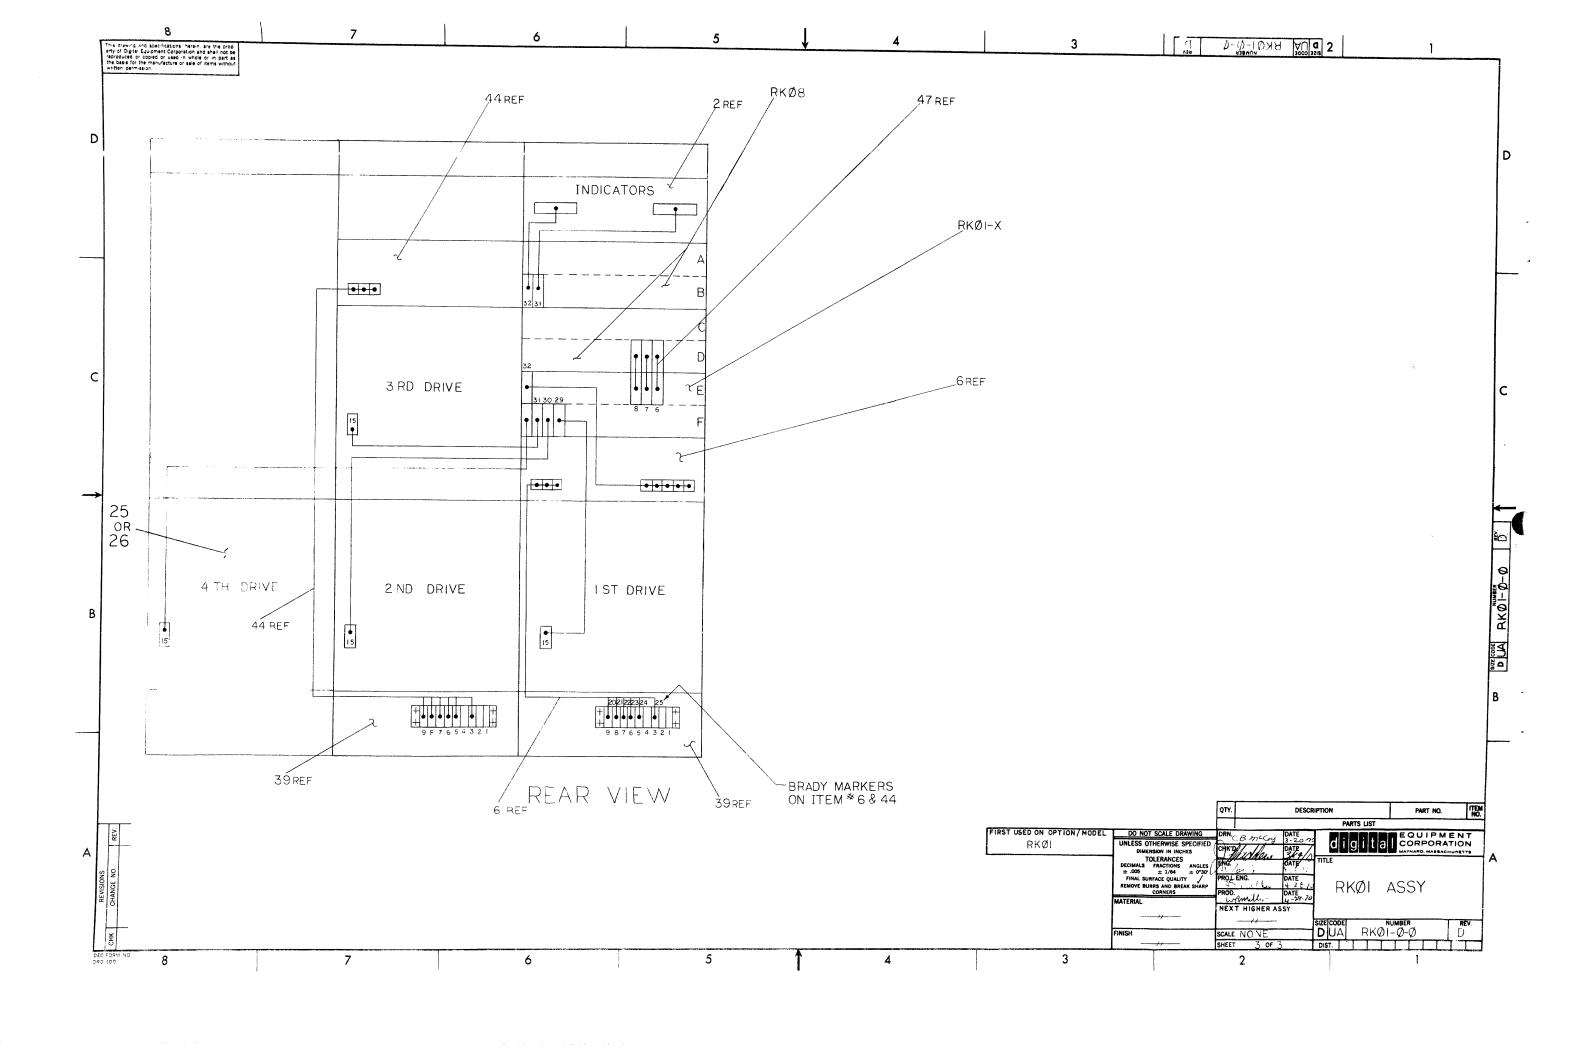

	DIGITAL EQ	UIPMENTC	ORPORAT	ION				Q	1AU	NTI T	ΓΥ/	VA	RIA	TIO	N	
	MAYN	PARTS LIS	T			(Z H	HZ)	HZ)	HZ)	12)	HZ)	HZ)	H Z)			
	E BY J. CAHILL	CHECKED J. 1	MADD EN	SECTION		(5Ø HZ)	(5Ø	(6Ø	(5Ø H ≥)	(6Ø HZ)	(50)	(60)	(50)			
DATE	21-5-70 21-2	PROD WRIE		1 ISSUED SEC	ст.	A (
DATE	4.28-20	DATE 4-29-	70	1		1-A	1-A	l-BA	1-BB	1-1]-C	1-D	1-DB		ļ	
ITEM NO.	DWG NO. / PART NO.	[DESCRIPTIO	N		RKØ1-AA	RKØ1-AB	RKØ1	RKØ1.	RKØ1-CA	RKØ1-CB	RKØ1-DA	RKØ			
1	C-PL-7006501-13-Ø	CABINET FRAM	ME ASSY			1	1	1	1	0	0	1	1			
2	C-UA-H95Ø-LB-Ø	H95Ø-LB FRAM	ME PNL			1	1	1	1	0	0	1	1			
3	C-PL-7006331-3-Ø	INDICATOR PA	ANEL ASSY			1	1	0	0	0	0	0	0			
4	D-UA-H95Ø -Q- Ø	н95 0- Q 19 II	N COVER PNL (10,5)		2	2	3	3	0	0	2	2			
5	D-UA-H95Ø-P-Ø	H95Ø-P 19 II	N COVER PNL (5 .2 5)		1	1	1	1	0	0	2	2			
6	E-AD-7006672-0-0	BRKT SWITCH	ASSY NO 1			1	1	0	0	0	0	0	0			
7	D-SC-1209226-0-0	54 SNAP ON	BEZEL			1	1	0	0	1	1	o	0			
8	D-IA-7407875-0-0	PANEL SWITCH	H NO 1			1	1	0	0	0	0	0	0			
9	C-SC-1209224-0-0	LATCH MOLDIN	1 <u>G</u>			16	16	16	16	0	0	16	16			
10	9006073-2	SCR PHL H FI	LAT 10-32 X .	50		12	1 <u>2</u>	0	0	4	4	0	0			
11	B-MD-7407789-0-0	SPACER				8	8	0	0	4	4	0	0			
12	J-IA-7006731-0-0	HARNESS MAIN	N WIRING			1	1	0	0	0	0	0	0			
13	9006024-2	SCR PHL H FI	LAT 6.32 X .5	SST		8	8	0	0	8	8	0	0			\bot
14	D-AD-7006484-0-0	BRKT HOLD DO	OWN ASSY			2	2	2	2	2	2	2	2			
15	C-MD-7407396-0-0	BRKT HOLD DO	NWN			2	2	0	0	2	2	0	0			
16	D-MD-7407839-0-0	RUNNER				2	2	0	0	2	2	0	0			
17	3009 7 95	POWER SUPPLY	CMD 60 HZ			1	0	0	0	1	0	0	0			\bot
18	3009795-01	POWER SUPPLY	CMD 50 HZ			0	1	0	0	0	0	1	ا و_			_
19	9006243	HEX H CAP .2	25 -2 0 X . 7 5			4	4	0	0	4	4	0	0	\perp	\bot	
20	9007991	NUT KEPS HE	EX .25-20			4	4	0	0	4	4	0	0	\perp		\perp
21	D-IA-7006604-0-0	IO HARNESS				1	1	1	1	1	_1	1	1		_	\perp
22	C-UA-RKØl-X-Ø	RKØ1-X				1	1	θ	0	0	0	0	0			
TITL	E RKØl ASSY		ASSY NO. D-UA-RKØ1-		SIZE	PL	1	RKØ]		UME -Ø	BER			RF) R	CO NO KOI-
	,	-	SHEET 1	OF 3	DIST				j					1	Ľ	Ĭ
DEC	FORM NO.16-1031												-	-	>	<

	DIGITALEQ	UIPMENT CORPORAT	ION								/ V A	RIA	TIOI	٧	
	IVIATIN	PARTS LIST			HZ)	HZ)	(学	HZ)	HZ)	빞	中	HZ)			
MAD	E BY J. CAHILL	CHECKED J. MADDEN	SECTION		(6 <i>p</i>	(50					1				
DATE		DATE 4-24-70	1				1	1	i		1				
ENG	00 11,500	PROD while	ISSUED SEC	T.	AA	-AB	-BA	-BB	Ψ C	-CB	-DA	-DB			
DATE	42870	DATE 4-29-70	1 1		31-		11-	=	-17	-	1-1				
NO.	DWG NO./PART NO.	DESCRIPTIO	N		RKØ1-AA	RKØ1	RKØ1-	RKØ1	RKØ1-	RKØ1	RKØ1.	RKØ1			
23	D-UA-716-0-0	716 POWER SUPPLY			1	1	0	0	0	0	0	0			
24	D-AD-7005909-0-0	DISTRIBUTION PANEL ASSY			1	1	0	0	0	0	0	0			
25	3009793	DISK DRIVE 60 HZ			1	0	1	0	1	0	1	0			
26	3009793-1	DISK DRIVE 50 HZ			0	1	0	1	0	1	0	1			
27	9007786	NUT SPEED #C31758-032-2	7 TINNERMAN		93	93	81	81	81	81	65	65			
28	9006074-3	SCR PHL TURS H 10-32 X.	52 SST		93	93	81	81	81	81	65	65			
29	9007651	WASH EXT TOOTH #10			93					81					
30	9006560	NUT KEPS #6-32			8	8	0	0	8	8	0	0			
31	c-ua-rkø8 - ø-ø	RKØ8 POS LOGIC			1	1	0	0	0	0	0	0			
32	C-UA-RKØl-K-Ø	DISK CARTRIDGE RKØ1-K			1	1	1	1	1	1	1	1			
33	1209788	AC-DC CABLE			1	1	1	1	1	1	1	1			
34	D-UA-854-Ø-Ø	POWER CONTROL 854			1	1	0	0	0	0	0	0			
35	E-AD-7006540-1-0	DOOR REAR ASSY			1	1	1	1	0	0	1	1			
36	E-AD-7006540-2-0	DOOR REAR ASSY			0	0	0	0	1	1	0	0			
37	C-MD-7407692-0-0	BRKT SHIPPING			2	2	2	2	2	2	2	2			
38	C=UA-H95#-M-#	H95#-M COVER PNL 1.75			‡	Ŧ	ŧ	†#	#	0	ŧ	±			
39	1209603	H721 POWER SUPPLY			1	1	0	0	0	0	0	0		$oxed{oxed}$	П
40	9007862	HEX HD SCR 5/16-18 X 5/8	S SST		2	2	2	2	2	2	2	2			
41	9007788	WASH SPLIT LOCK 5/16			2	2	2	2	2	2	2	2			
42	9006074-2	SCR PHL FLAT H 10-32 X	.62		8	8	8	8	8	8	8	8		$oldsymbol{\perp}$	
43	D-UA-H952-A-Ø	H952-A END PANEL			2	2	0	0	0	0	0	0			
44	E-AD-7006764-0-0	BRKT SWITCH ASSY NO. 2]					1	1	0	0			
TITL	E RKØ1 ASSY	ASSY NO. D-UA-RKØ1-	1	A I		1	RK/	۸ ۱ <i>-</i> ø	iumi (-ø	BER			RE V	EC	0 NO.
		SHEET 2	OF 3	DIST.			T			Ι	Τ	T	1	Ľ	
DEC DRA	FORM NO.16-1031 110													X	

	DIGITAL EQ	UIPMENTC	ORPORAT	ION			,						RIA	TIO	N	
	MATN	PARTS LIS	T			(60 HZ)	HZ)	(ZH	HZ)	HZ)	(5Ø HZ)	(ZH ((ZH)			
MAD	E BY J. CAHILL	CHECKED J.	MADDEN	SECTION		68	50	Ø 9)	RKر∵BB (5Ø	99)	50	Ø9)	(50			
DATE		DATE 4-2	4-,70	1) B) B		1 1			
ENG	W. Jones	PROD WRINE		ISSUED SE	CT.	RKØ1-AA	-AB	RKØ1-BA	g	RKØ1-CA	RKØ1-CB	RKØ1-DA	-DB			
DATI	E 4-28-70	DATE 4-29	-70	11		01	RKØ1.	01	ØŦ	01	Ø1	Ø1				
NO.	DWG NO. / PART NO.	!	DESCRIPTIO	N		RK	RK	RK	RK	RK	RK	RK	RKØ1			
45	C-UA-H 95 2- GA-Ø	H952-GA FILL	ER STRIP ASS	Y				1	1	0	0	1	1			
46	C UN 11952 GB Ø	H952-GB FILL	ER STRIP ASS	¥		-		1	1	0	0	1	1			
47	C-IA-7006111 - 1-0	CABLE M9Ø1 T	о м9Ø1			3	3	0	0	0	0	0	0			
48	D-AD-7006674-0-0	FAN ASSY				1	1_	0	0	0	0	0	0		\perp	
49	C-MD-7407825-0-0	SUPPORT FAN				2	2	0	0	0	0	0	0		_ L	
50	9007834	4032 TAPE 1/	32 X 1/2			A/R	A/R	A/R	A/R	A/1	A/F	A/F	A/R			
51	D-IA-7407876-0-0	PANEL SWITCH	NO. 2	·						1	1	0	0			
52	D-AD-7006893-0-0	DOOR ASSY FR	ONT			1	1_	1_	1_	1	1	1	1		_	
53	SUPPLIED W/DOOR	SCR PHL FLAT	H 8-32 x•62	BLACK		2	2	2	2	2	2	2	2			
54	1100113	DIODE D662 (1	BLACK)			1	1	1	1	2	2	2	2			
55 _. .	A-SS-5308754-2	DRIVE Ø DECA	L			AR	AR	AR	AR	AR	AR	AR	AR			
56	A-SS-5308754-4	DRIVE 1 DECA	L			AR	AR	AR	AR	AR	AR	AR	AR			
57	A-SS-5308754-6	DRIVE 2 DECA	L			AR	AR	AR	AR	AR	AR	AR	AR			
58	A-SS-5308754-8	DRIVE 3 DECA	L			ĀR	AR	AR	AR	A.R	AR	AR	AR	\dashv	_	
	3.11.															
															\dashv	
															\Box	
			· · · · · · · · · · · · · · · · · · ·				-							\dashv	\dashv	
TITL	E RKØ1 ASSY		ASSY NO. D-UA-RKØ1	-Ø - Ø	SIZE	PL		RK,	Ø1-£	NUM Ø-Ø	BER		<u> </u>	RE	. 1	CO NO
			SHEET 3	OF 3	DIST	. G	-							T		

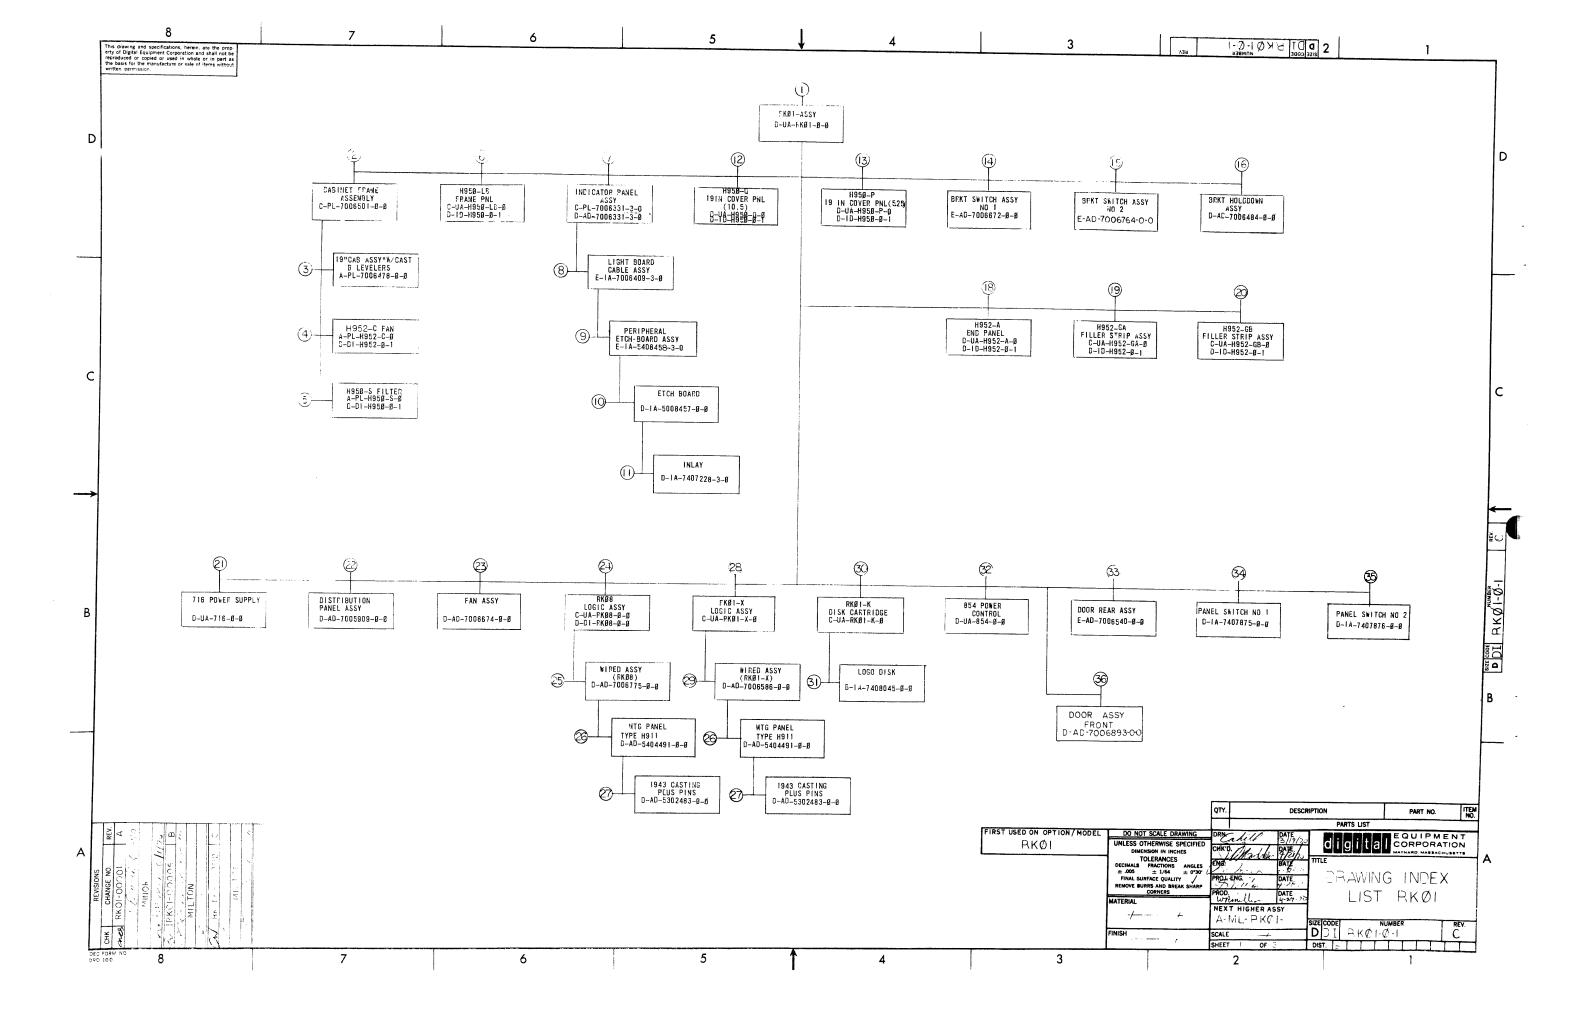


s drawing and specifications, herein, are the prop- y of Digital Couperent Corporation and shall not be reduced or copied or used in whole or in part as basis for the manufacture or sale of items without tren permission.	7	6	5	4	3	DIDKQ-Q-C	2 1
PKBI ASSY PART SHIPING BARNT HOLD DWN FUNNER TO HARNESS BRAT SHIPPING CABLE MBDI TO MBBI SUPPORT FAN CABINET FRAME ASSEMBLY 19 IN CAB ASSY W. CAST AND LEVELEPS H952-C FAN DPAWING INDEX H952 H958-S FILTER DPAWING INDEX H958 INDICATOR PANEL ASSY INDICAT	G-UA-CKB1-8-8 A-PL-RKB1-0-0 G-SC-1269226-0-0	MECHANI I INLAY SILK SCPEEN (MHT) SILK SCPEEN (BLK) 12	PART 40. PART 40. DEPT USACE PART 40. D-1A-7407228-3-0 C-SS-7407228-0-4 C-SS-7407228-0-2 D-UA-H95B-U-B D-D1-H95B-B-D1 E-AD-7006672-B-B D-MC-7407831-B-B E-AD-7006764-0-0 A-PL-7006484-0-0 C-MD-7407839-0-0 C-MD-7407839-0-0 C-MD-7407839-0-0 C-MD-14952-B-D C-UA-H952-B-D C-UA-H9	FILID DESCRIPTION 23. FAN ASSY (PL) FAN ASSY (PL) FAN SCREEN FAN HOUSING AFROW DECAL 24. RKBB LOGIC ASSY PKBB LOGIC ASSY (PL) PAWEL LEFT END ASSY RIGHT END PAWEL 25. WIFED ASSY (FKBB) WIRED ASSY (FKBB) WIRED ASSY (FKBB) (PL) LOGIC FFAME DECALS 26. MTG PANEL TYPE H911 288 PIN CONN BLOCK TYPE 27. 1943 CASTING PLUS PINS 1943 CASTING PLUS PINS 1943 FRAME CASTING 28. RKB1-X LOGIC ASSY RKB1-X LOGIC FRAME DECALS 38. RKB1-K DISK CARTRIDGE 31. LOGO DISK SILK SCPEEN 32. 854 LOWEP CONTROL (PL)	C-ID-740481-0-0 C-MC-7407835-0-0 A-DC-7407835-0-0 A-DC-7408026-0-0 C-UA-RK88-B-B A-PL-RK88-B-B C-1A-540490-B-B C-MD-5302486-B-B D-AD-7006775-B-B A-PL-706775-B-B A-DC-7406371-B-B	DESCRIPTION 33. DOOR FEAT ASSY ODOT FEAT ASSY (PL) DOOR FEAT FRAME & SKIN MTC PIN DOOF PIN DOOR PIN SHITCH NO 2 SILK SCREEN WHT 35. PANEL SWITCH NO 2 SILK SCREEN NO 2 36 DOOR ASSY FRONT DOOR ASSY FRONT (PL) HINGE SPACER HINGE RET DOOR FRAME DOOR PLEXIGLASS	
					DIMENSION TOLEI DECIMALS FRE ±.005 ± FINAL SURFAC	RWISE SPECIFIED I IN INCHES ANGES CHONG ANGLES 1/14 1/26 1/27 1/27 1/27 1/27 1/27 1/27 1/27 1/27	PART NO. PARTS LIST


_		8	7			6		5	Į .	4		3		вел.	1-0-10 A 1 1 0 d	2	1	
	erty of Digita reproduced of the basis for written perm	g and specifications, herein, are the prop- al Equipment Corporation and shall not be or copied or used in whole or in part as the manufacture or sale of items without insistion.		DEP JSAGE		PLEODALCA		DEST NEASE		FLOTRIA								
Ì		DESCRIPTION		PROD CUST F/C	FIZO ZO	DESCRIPTION	PART NO	PROD CUST F/C	FIND NO	ELECTRICAL DESCRIPTION	PART NO		T USAGI	11	DESCRIPTION	PART NO	PROD CUST F	
D	*	PKB1 MASTER LIST POWER WIRING AC & DC I MALL INCEX LIGHT BOARD CART MOV	A-ML-PKØ1-8 E-IC-RKØ1-Ø-2 F-IG-7006409-3 0			NITED ASSY (FKØ8) KIPED ASSY (FKØ8) (PL)	3-AD-7006775-8-8 A-PL-7006775-8-8					A decide of the control of the contr						D
		PERIPHERAL ETCH BOARD ASSY PERIPHERAL ETCH BOARD (CS)	E-1A-5408458-3-8 D-CS-5408458-0-1		28	RKØ1-X MASTER LIST MODULE UTILIZATION (PKØ1-X) MODULE UTILIZATION (PKØ1-X) (PL) WIRE LIST (PKØ1-X)	A-ML-RKØ1-X K-MU-RKØ1-X-11 K-PL-RKØ1-X-11 K-NL-PKØ1-X-10											
	14. 9	SPRT SWITCH ASSY NO 1 (PL)	E-AD-7006672-0-8 A-PL-7006672-0-0			COCMAT DELAYS TRACK SEEK DISK AND TRACK ADBRESS	D-85-PKØ1-X-Ø1 D-65-RKØ1-X-Ø2 D-55-PKØ1-X-Ø3											
	15. 8	BRKT SMITCH ASSY NO 2 BPKT SMITCH ASSY NO 2 (PL)	E-AD-7006764-Ø-Ø A-PL-7006764-Ø-Ø			COMPARE TPACK ADDRESS DISK SELECTION DISK CABLES +3V LOADS * +3V CLAMPS	D-BS-PK01-X-04 D-BS-RK01-X-05 D-BS-PK01-X-06 D-BS-PK01-X-07 D-BS-RK01-X-08											
	21.	716 POWEP SUPPLY 716 POWEP SUPPLY (PL) 716 POWER SUPPLY (CS)	D-UA-716-Ø-Ø A-PL-716-Ø-B C-CS-716-Ø-1			CASLE TO PAB8 BASK FORMAT BLOCK DIAGPAM FLOW TIMING DIAGPAM	D-1C-PKØ1-X-Ø9 D-TD-FKØ1-X-12 D-ED-PKØ1-X-13 D-FD-RKØ1-X-14 D-TD-RKØ1-X-15											
Military Control	22,	CISTRIBUTION PANEL ASSY DISTRIBUTION PANEL ASSY (PL)	D-AB-7005909-Ø-Ø A-PL-7005909-Ø-Ø		29. V	NIPED ASSY (PKB1-4) Wired Assy (PKB1-4) (PL)	D-AD-7006586-Ø-Ø A-PL-7006586-Ø-Ø											
С	23.	FAN ASSY FAN ASSY (PL)	J-AD-7C06674-Ø-Ø A-PL-7C06674-Ø-Ø		32. 8	854 POWER CONTROL 854 POWER CONTROL(PL) 854 POWER CONTROL (CS)	D-UA-854-0-0 A-PL-854-0-6 9-CS-854-0-1											С
	24.	FKB8 WASTEM LIST Module utilization (FKB8-Ø) Module utilization (FKB9-Ø) (PL)	A-ML-PKØ8-Ø K-MU-PKØ8-Ø-29 K-PL-FKØ8-Ø-29															
→	ìn	NIPE LIST (RKB8) LOT DECCOING SKIP AND BPEAK MAINTENANCE REGISTER MAJOP SEGUENCER PLE COMMAND FIND SEL END TRANS	K-WL-PKØ8-Ø-27 D-BS-PKØ8-Ø-Ø5 D-BS-PKØ8-Ø-Ø6 D-BS-PKØ8-Ø-Ø7 D-BS-PKØ8-Ø-Ø9 D-BS-PKØ8-Ø-Ø9 D-BS-PKØ8-Ø-1Ø		28	BASIC FORMAT	D-TD-RKØI X-12											-
		PEAD WPITE DATA BUFFEP DATA SHIFT PEGISTEP LOGITUDINAL PARITY STATUS PEGISTER SECTOP ADDRESSING	D-BS-FKØB-Ø-11 D-BS-FKØB-Ø-12 D-BS-FKØB-Ø-13 D-BS-FKØB-Ø-14 D-BS-FKØB-Ø-15 D-BS-FKØB-Ø-16 D-BS-FKØB-Ø-17		CONT	BLOCK DIAGRAM FLOW TIMING DIAGRAM RKØI/RKØ8	D-BD-RKØI-X-13 D-FD-RKØI-X-14 D-TD-RKØI-X-15											REV.
В		EIT AND BLOCK COUNTER WC PEGISTER CURP ADDR AND EMA REG AC INPUT GATING BB-DS AC INPUT GATING BB-11 AC MB INVERTERS +3V CLAMPS	C-BS-BK#8-#-18 D-BS-RK#8-B-19 D-BS-RK#8-#-2# D-BS-RK#8-#-21 D-BS-FK#8-#-22 D-BS-PK#8-#-22															NUMBER (Ø - Ø -
D		CABLE TO RKB1-X 1,0 AND DATA BPEAK CABLES INCICATOP CABLES	D-85-RKØ8-Ø-24 D-85-FKØ8-Ø-25 D-85-RKØ8-Ø-26				THE PARTY OF THE P		AL DEL COLLEGE									D DI RK
c	R	KØB SOFTWARE PACKAGE HECKOUT PROCEDURE	A-AL-RKØI-Ø-3 A-SL-RKØI-Ø-4 A-SP-RKØI-Ø-5															B
	DA	DISK CARTRIDGE MEMORY CCEPTANCE PROCEDURE	A-SP- RKØI-Ø-6 A-SP- RKØI-Ø-7															
															QTY. DESCRIPT	ON	PART NO. ITE	EM IO.
-	REV.						L		<u></u>		FIRST USED ON C		UNLES	S OTHERWISE SP	501150 JANUS 3/19/70		QUIPMENT	
A	OZ											•	DECIM. ± .00	DIMENSION IN INCHE TOLERANCES ALS FRACTIONS IS ± 1/64 IL SURFACE QUALITY	ANGLES ENG. DATE TI	DRAWING	INDEX	A
PEVISIO	CHANGE												MATERI	CORNERS	PROD. Wyemillar 4.27.70 NEXT HIGHER ASSY	LIST RI		
	CHK										·		FINISH	<i>//</i>	SCALE / D	ECODE NUMB DIRKOI-O I	ER REV.]
DE DR	FORM NO	8	7			6		5		4		3			2	EMB-see	1	

MASTER DRAWING LIST REV. NO. OF TITLE DWG. NO. LET. BHEETS C-UA-RKØ1-X-Ø RKØ1-X LOGIC LSSY A-PL-RKØ1-X-Ø RKØ1-X LOGIC ASSY (PL) C DRAWING INDEX LIST (RKØ1) D-DI-RKØ1-Ø-1WIRED ASSY (REGI-X) D-AD-7006586-0-0 WIRED ASSY (RKØ1-X) (PL) A-PL-7006586-0-0 MODULE UTILIZATION (RKØ1-X)(MU&PL) K-MU/PL-RKO1-X-11 В 15 WIRE LIST (RKØ1-X) K-WL-RKØ1-X-1Ø D-BS-RKØ1-X-Ø1 FORMAT DELAYS Α TRACK SEEK D-BS-RKØ1-X-Ø2 A D-BE-RKØ1-X-Ø3 **BISK AND TRACK ADDRESS** COMPARE TRACK ADDRESS D-BG-RKØ1-X-Ø4 PE D-BS-BEG1-X-05 DISK SELECTION DISK CABLES D-BS-EKØ1-X-Ø6 A +3V LOADS D-BS-RX01-X-07 +3V CLAMPS CABLE TO RKØ8 D-BS-BK61-X-68 D-16-PKG1-X-69 D-TD-RKG1-X-12 BASIC FORMAT D-BD-RK01-X-13 BLOCK DIAGRAM 1 D-FD-RK#1-X-14 D-TD-RK91-X-15 A-AP-RK01-X-16 TIMING DIAGRAM SIGNAL INDEX digital EQUIPMENT CORPORATION DRN. J.CAHILL REVISIONS CHG. NO. APP'D. DATE REV. 4-10-70 23 DATE 4-10-70 INTERFACE RKO1-X Windler 4-0-3 FIRST USED ON NUMBER REV. SIZE CODE A-ML-RKØ1-Ø D RKØ1-X AML SCALE + SHEET 1 OF DIST. DEC FORM NO.16-1033 DRA 103

	DW	3. NO.		REV. LET.	NO. OF	TITLE
C=1	A-RKØ8	a a		B	1	Dudo : oor o
	L-RKØ8			В	┼ ─┆┤	RKØ8 LOGIC ASSY RKØ8 LOGIC ASSY (PL)
	2 14400	р р			 	RAPO LOGIC ASSY (PL)
D-I	I-RKØ1	-Ø-1		А	3	DRAWING INDEX LIST (RKØ1)
						DIEM DIET (RAPI)
D-7	D- 7006	775-0-0		C	1	WIRED ASSY (RKØ8)
A-F	L-7006	775-0-0		С	1	WIRED ASSY (RK#8) (PL)
72 147	A	00 0 00			 	
K-MU	/PL-RK	08-0-29		₿	7	MODULE UTILIZATION (RKØ8-Ø)
					1	
K_W	L-RKØ8	-d-27		В	+ + +	WIDE Trum (profe)
	<u> </u>	-D-28			 • 	WIRE LIST (RKØ8)
D-B	S-RKØ8	-Ø-Ø 5			2	IOT DECODING
D-B	S-RKØ8	-Ø-Ø6		A	1	SKIP AND BREAK
	5-RKØ 8-				1	MAINTENANCE REGISTER
	S-RKØS			خ	1	MAJOR SEQUENCER
	S-RKØ8- S-RKØ8-				1	R/W COMMAND FIND SEL END TRANS
	S-RKØ8			В	+++	READ WRITE
	S-RK98	•			+ + +	DATA BUFFER
	S-RKØ8				 	DATA SHIFT REGISTER
_	S-RKØ8		- +	A	2	LOGITHDINAL PARITY
	S-RKØ8-		- 1	A	i	STATUS REGISTER
D-B	S-RKØ8-	- Ø- 16			2	SECTOR ADDRESSING
	s-rkø8-			Α	1	BIT AND BLOCK COUNTER
	S-RKØ8-				1	WC REGISTER
	S-RKØ8-				1	CURR ADDR AND EMA REG
	s-rk ge - s-rkge-				┤ ┼	AC INPUT GATING ØØ-Ø5
	S-RKØ8-				+++	AC INPUT GATING Ø6-11
	S-RKØA-				 	AC MB INVERTERS +3V CLAMPS
D-B	S-RKØ8-	Ø-24			i	CABLE TO REØ1-X
D-B	S-RKØ8-	Ø- 25			1	I/O AND DATA BREAK CABLES
D-B	S-RKØ8-	Ø-26			1	INDICATOR CABLES
				TORN		DATE
	RE	VISIONS		— І.т.	CAHII	
REV.	DATE	CHG. NO.	APP'D	- 01	9B, //	CIGILA CORPORATION
Α	5/70	00001	W.M	/ 5044	10280	
B C D	6/7B	000054	J.M.	PENG	9 hans	1 4-10 10 TITLE
Ď	16/70	00000	J.M.		I. ENQ.	DATE
				120	MILL	DISK CONTROL RK08
				14	rull	14-10-20
				FIRE	T USED O	N .
				1.	A-ML-F	
			•		LE /	A ML RKØ8-Ø
					ET 1	OF 1 DIST.
	. 3	1033		1	-· 1	

<u> Y</u>

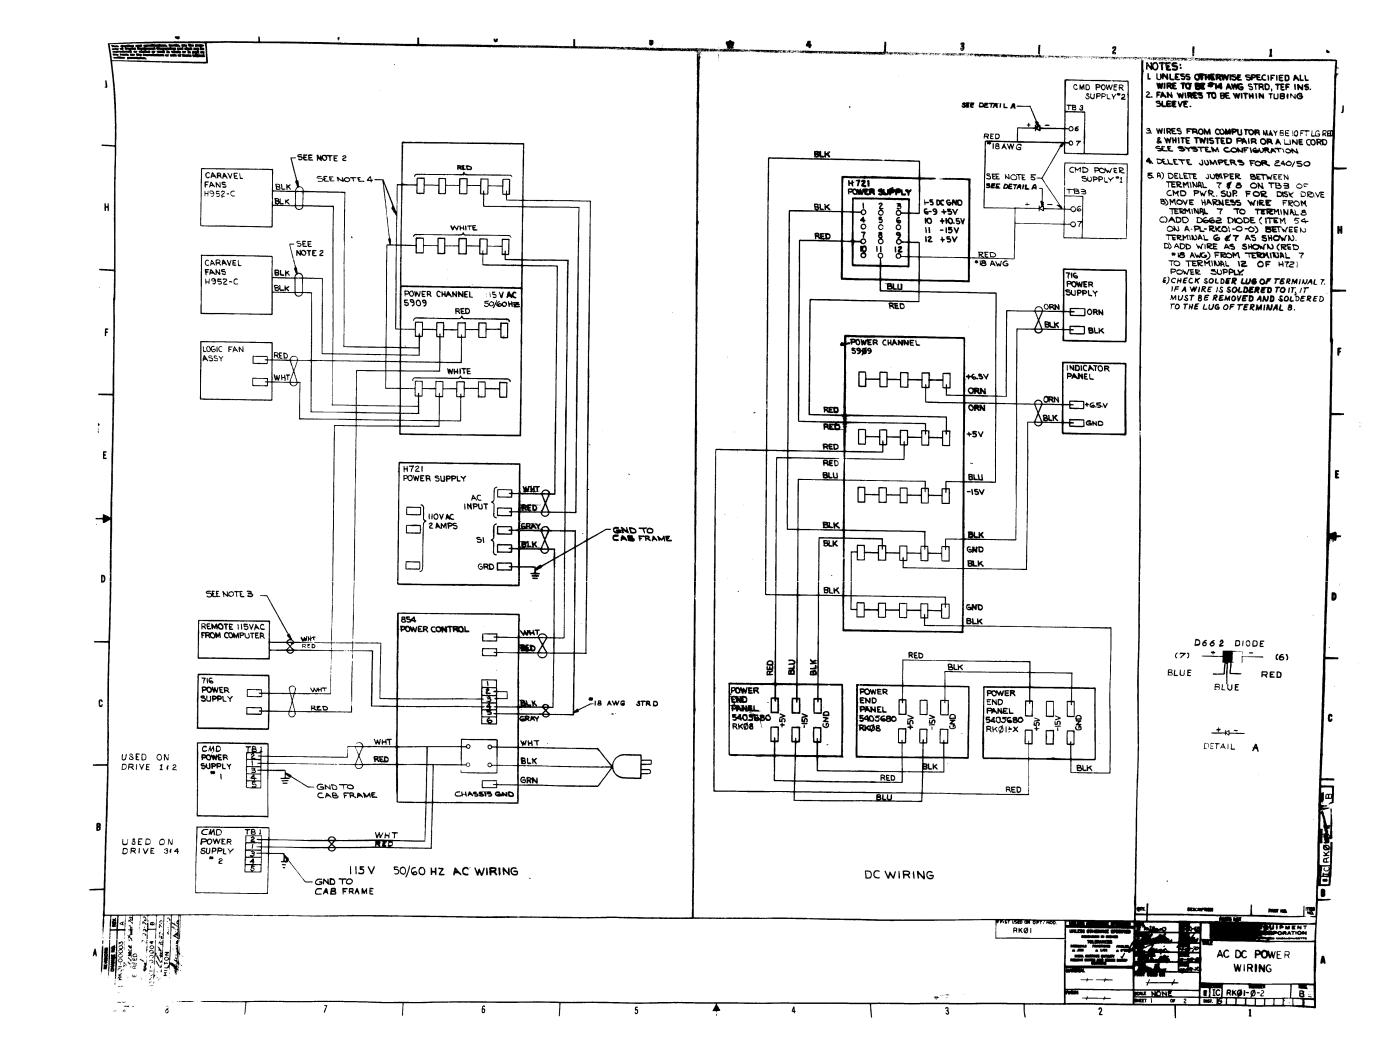

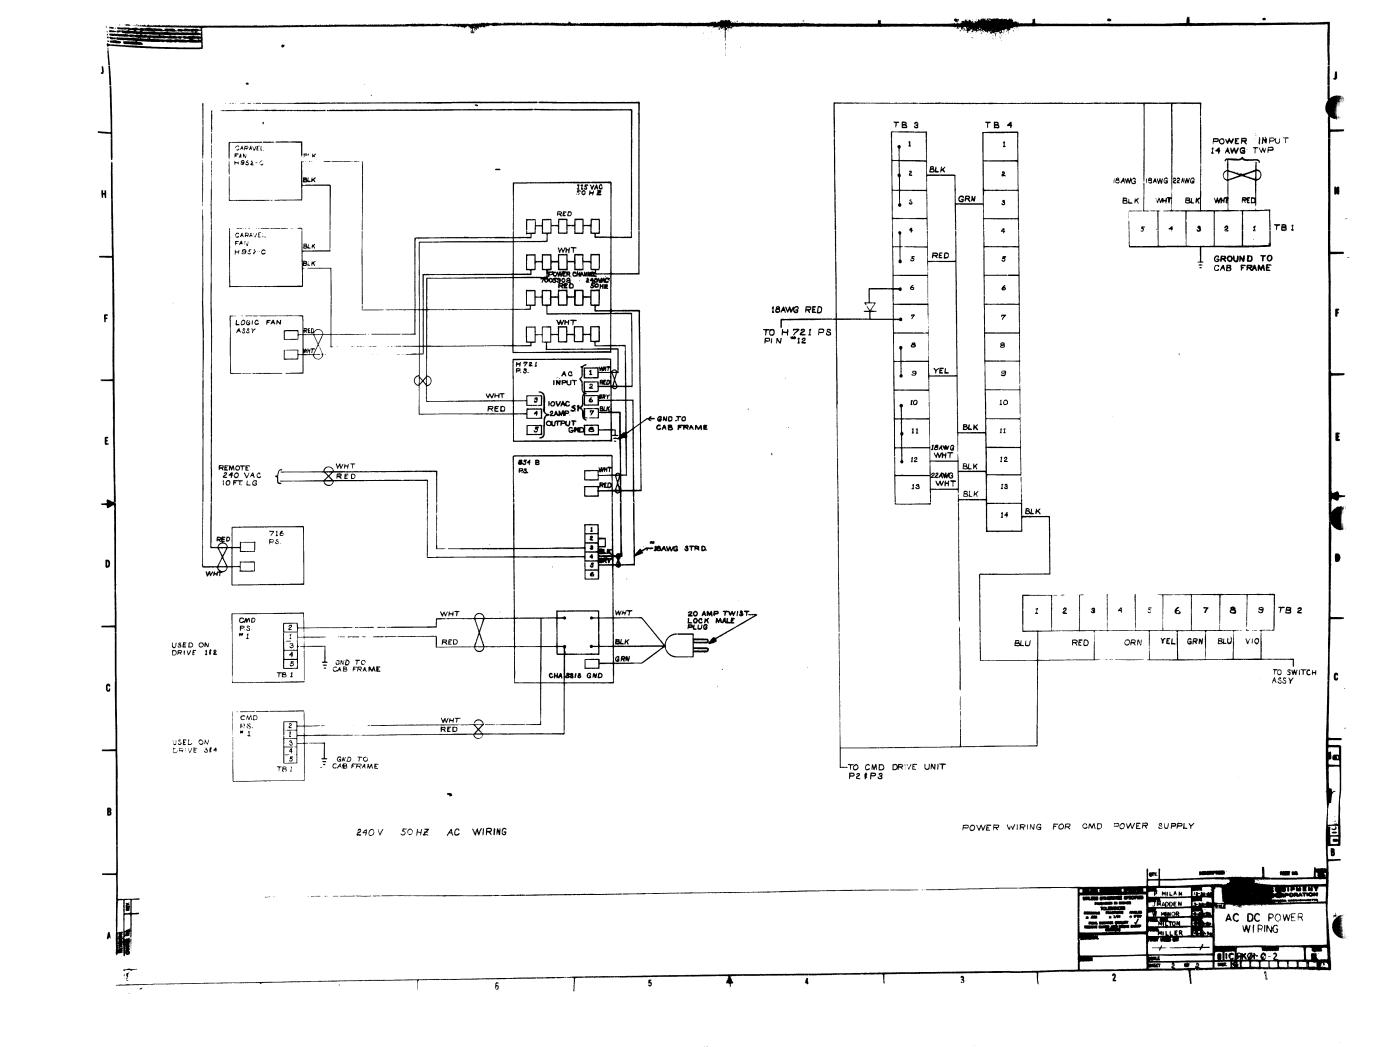

	DIGITAL EQUIPA	MENT CORPORATION MASSACHUSETTS	LEGEND		Q	UA	NTI	TY/	VARI	ATI	NC
	ACCES DE BY E. Reed C DE 6-23-70 D	MASSACHUSETTS SORY LIST HECKED E. Reed SECTION ATE 6-23-70 ROD B. Miller ISSUED SECT.	D DOCUMENT DN DOCUMENT CHANGE NOTICE PA PAPER TAPE ASCII PB PAPER TAPE BINARY PM PAPER TAPE	stems	۱	1 1) VOX	DATE	INSTALLATION CHECK BY DATE
DAI		ATE 6-23-70	READ-IN-MODE	.1 Sy	∞.				CHECK		ירר,
TEM NO.	DWG NO. / PART NO.	DESCRIPT	ION	۸11	PUP				ZIT TIX	ВУ	INSTA BY
1	RKØ1-K	Disk Cartridge (one per	drive)	A/	R						
2	(no part no.)	Dectape Head cleaning kit, 9	l% Isopropyl Alcohol	1							
3	(no part no.)	15-foot ground strap with sle	eeving	1							
4	BC Ø8 B/D-8	10-foot I/O cables (or length	th specified by customer)	5							
5	70-05820-4	9-foot I/O cable (Extended	d Memory systems)	<u> </u>	1			$\bot \bot$	_ _		
_	U052 A	g:1		<u> </u>	_	\vdash	+	++	_		
6	H952-A	Side panels		11	R 2	\vdash		++	-∦		
7	74-06748 74-06749	Front filler bar Rear filler bar		A/	+	-	+	++	╢		
9	90-06374			A/	1	\vdash		++	-∦		
10	90-00374	1/4-20 X 1" socket head cap s 1/4-20 Kep nut	screw	A/ A/	+	\vdash		++			
10	30-07000	174-20 Rep nat		^/		\vdash		╁┼	╫		
11	53-08754-2	Drive Ø Decal		A/		H		† †	\dashv		
12	53-08754-4	Drive 1 Decal		A/	+			11			
13	53-08754-6	Drive 2 Decal		A/	*						
14	53-08754-8	Drive 3 Decal		A/	k						
				<u> </u>	$oxed{igspace}$			44			
				⊩	igspace	\sqcup		$\perp \perp$	-		
				-	-	$\vdash \vdash$	_	++	#		
TITL		ASSY. NO.	SIZE CODE	<u> </u>		UME	ER	<u>1_1</u>		EV.	ECO NO
	RK8 Hardware	SHEET , OF	7,1,1,	KØ1	- <i>)</i> -3	3					
	FORM NO.	SHEET 1 OF	1 DIST.		\Box						

	DIGITAL EQUIPM	MENT CORPO	RATION	Li	EGEND		QI	JAN	TIT	Y/V	ARIAT	ION
	SOFT DE BY E. Reed CI E 6-12-70 D. E. Reed PI	WARE LIST		DN DOCU NOTI PA PAPE PB PAPE PM PAPE	R TAPE ASC	Svstems	1				СНЕСК	ALLATION CHECK
ITEM NO.	DWG NO. / PART NO.		DESCRIPTI	ON							⊢	BYINSTAL
		''Te	chnical Document	s''		-			-			
1	A-ML-RKØ1-X	RKØ1-X print	set			$-\parallel_1$	+	\top	+	† †	1	1
2	A-ML-RKØ8-Ø	RKØ8 print se				$ \frac{1}{1}$	TT	 	T		┪	1
3	DEC-P8-HRDA-D	RK8 Maintenan	ce Manual			1		\top	+		1	
4	(no number)	CMD Disk Driv	e Manual			1	1					
						-∦-	\vdash	+	+			
			"Diagnostics"								1	
5	Maindec-08-D5HA-PB	RKØ8 Disk Dat	a Reliability -	Binary ta	ipe	1						
6	Mainded-08-D5HA-D	RKØ8 Disk Dat	a Reliability -	Write-up		1						
7	Maindec-08-D5JA-PB	RKØ8 Instruct	ion Test -	Binary ta	ipe	1		Ĺ		<u>i L</u>		
8	Maindec-08-D5JA-D	RKØ8 Instruct	ion Test -	Write-up		1		\perp				
9	Maindec-08-D5KA-PB	RKØ8 Disk For	matter -	Binary ta	ipe	1	$\perp \perp$					
10	Maindec-08-D5KA-D	RKØ8 Disk For	matter -	Write-up		- ¹	$\vdash \vdash$	+	+		-	4
						╢	+	+	+	++	╂	#
							П					
7171	F		ASSY. NO.	<u> </u>	SIZE CODE		N U	MBE	R	<u>L_L</u>	REV	. ECC NO
TITL	RK8 Software Packa	ge		,	ASL	RK Ø1 -			-			
L	ODM NO	The state of the s	SHEET 1 OF	3	DIST.			L_				

DEC FORM NO. DRA 120

	DIGITAL EQUIPM MAYNARD, M	ENT CORPO	RATION		LEGEND		Q	UA	NTI	TY/	V A	RIAT	ION	
	SOFT' DE BY TE DA	MASSACHUSETTS WARE LIST MECKED MITE MOD MITE MITE MITE MITE MITE MITE MITE MITE	SECTION	DN PA PB	DOCUMENT DOCUMENT CHANGE NOTICE PAPER TAPE ASCII PAPER TAPE BINARY PAPER TAPE READ-IN-MODE	PDP-8,81,8L	-8, PD					CHECK	INSTALLATION CHECK	DATE
ITEM NO.	DWG NO. / PART NO.		DESCRIPTION	ON		D.G.	Line					KIT KIT	INST	BY_
		11	Systems Programs'	· ·				-					-	
11	DEC-08-LBAA-RIM	Binary Loader	···		- RIM tape	1	1	\dashv	+	+			╢	
12	DEC-08-LBAA-D	Binary Loader			- Write-up	1	1	1	\top				1	
13	DEC-P8-MSDA-PB	PS/8 RK8 Syst	em ·		- Binary tape	1	0			\top			┪	
14	DEC-P8-SWXA-PB	PS/8 Command	Decoder		- 11	1	0	\dashv	\top	\top			1	
15	DEC-P8-PWXA-PB	PS/8 PIP			11	1	0	\top					1	
16	DEC-P8-ESAA-PB	PS/8 Editor			_ 11	1	0	十					╁	
17	DEC-P8-ASXA-PB	PAL-8 Assembl	er		_ 11	1	0	T		11			1	
18	DEC-P8-KFXA-PB	PS/8 Fortran	Compiler		- "	1	0	T	_				╫┈	
19	DEC-P8-ARXA-PB	PS/8 SABR Ass	embler		- "	1	0	十						
20	DEC-P8-LLXA-PB	PS/8 Linking	Loader		. 11	1	0	T		1 1			1	_
21	DEC-P8-SFXA-PB	PS/8 Fortran	Library		_ 11	1	0	7		11				\dashv
22	DEC-P8-SYXA-PB	PS/8 Fortran	Library Setup Pro	gram	_ "	1	0	\dashv	\top				1	T
23	DEC-P8-SUTA-PB	PS/8 Dectape	Convert		- Binary tape	1	οT	\top	\top	11			1	\neg
24	DEC-12-SE2D-UO	LAP-6 DIAL Ma	ss Storage		- Linc Tape	υ	1	1	\top	\top			1	\neg
25	DEC-12-SE2D-D	LAP-6 DIAL Ma	nual		- Write-up	υ	1						1	
							igdash	\perp	+	+				
								\perp	\perp				lacksquare	_
								\prod						
TITI	L E RK8 Software Packag	e .	ASSY. NO.		SIZE CODE RK	Ø1-	N U	MB	ER			REV.	ECO	10
	· ·		SHEET 2 OF 3		DIST.	Т	T	П				1	·	\neg

DEC FORM NO. DRA 120

	DIGITAL EQUIP	MENT CORPO	RATION	ι	EGEND		C) U A	NT	TY	/ V A	RIA	TIC	O N	
	SOFT DE BY	, MASSACHUSETTS TWARE LIST CHECKED DATE PROD DATE DATE		DN DOC NOT PA PAP PB PAP PM PAP	UMENT UMENT CHANGE ICE ER TAPE ASCII ER TAPE BINARY ER TAPE D-IN-MODE	<u></u>	Linc-8, PDP-12					СНЕСК	BY DATE	LLATION CHECK	DATE
ITEM NO.	DWG NO. / PART NO		DESCRIPTI	ON			Lil					KIT (<u>}</u>	INSTA	BY
									1	#					
20	DEC DO MAIZA D (D)	DC / 0 . 1 . 1 .	"Manuals"			╟	<u> </u>	$\vdash \downarrow$	+	-	\sqcup				
26	DEC-P8-MWZA-D-(D) DEC-08-COCO-D	PS/8 Library ODT Write-up	write-up			1-		$\vdash \downarrow$	+	4		<u> </u>		<u> </u>	
28	DEC-08-ESAB-D	<u> </u>				イ├ ──	0	┝┼	+	+	\vdash			ļ	
29	(no number)	Symbolic Edit	or Languages" - ha	ndhook	***************************************	1	0	-+	+		\dashv				
	(110 1101101)	riogramming	anguages - na	nabook		╟╌	1	\vdash	-	+	\vdash		\dashv		
	·					╟─	-	\vdash	+	+	┼┤				\dashv
						╫╌		\vdash	+	+	\vdash				
						╟			+	+-	\vdash	-			\dashv
									\top	†	f		\dashv		\neg
									\top	—					
									T	† -					
									\top		\sqcap		$\exists \parallel$		一
													ᅦ		\neg
									$oxed{T}$						
	 														
								$oxed{I}$							
igsquare									\bot				[
TITL	E RK8 Software Packa	age	ASSY. NO.		A SL R	KØ1-		JMBI	R			RE	V. E	CO	NO
<u> </u>	ODM NO		SHEET 3 OF	3	DIST.		\perp						\perp		

and the second of the second o

DEC FORM NO. DRA 120


•

DEC FORM N

				MASSACH				ON	
	ENC	GINEERING S	PECIFICATION	NC				DATE 6/10/	70
	TITLE	Check Out Proc	edure						
				REVISIONS					
	REV	DESCR	PTION	CHG NO	OR	IG	DATE	APPD BY	DATE
	2								
ii perimosion.						·			
willout writen permission.									
							٥		
PATRICIA CONT. TO VISITE CONT. TO SERVICE CONT.									
	ENG	zajowski	APPD (m.		SIZE A	CODE	RKØ1-	NUMBER	REV

ENGINEERING SPECIFICATION dıgılal **CONTINUATION SHEET** TITLE Check Out Procedure 1-0 Test Configurations RK01 81 5 BC08D-X Cables RK08N Nea Bus PDP8I RK01 KA8I 5 BC08D-X RK08P С PDP 8L RK01 .5 BC08B-X RK08P D PDP12 RK01 F BC08B-X RK08P PDP8 E 1 70-05820-X-RK01 5 BC08D-X rk08n 1 70-05820-X RK01 LINC 8 5 BC08D-X RK08N 1-1 The above Configurations will be 8 K systems for checkout and Acceptance Test. 1-2 The DM01 or DM04 may be used as long as you stay within the same bus configuration. example: 8I neg. bus to DMO1 to RKO8N 8I with KA81 to DM04 to RK08P 1-3 Check all paper work for incoming inspection and Quality Control stamp of approval. SIZE CODE SP NUMBER REV RKØ1-Ø-5 DEC FORM NO 16-1022 DRA 108 SHEET $\frac{2}{}$ OF $\frac{7}{}$

SHEET ____ OF ______

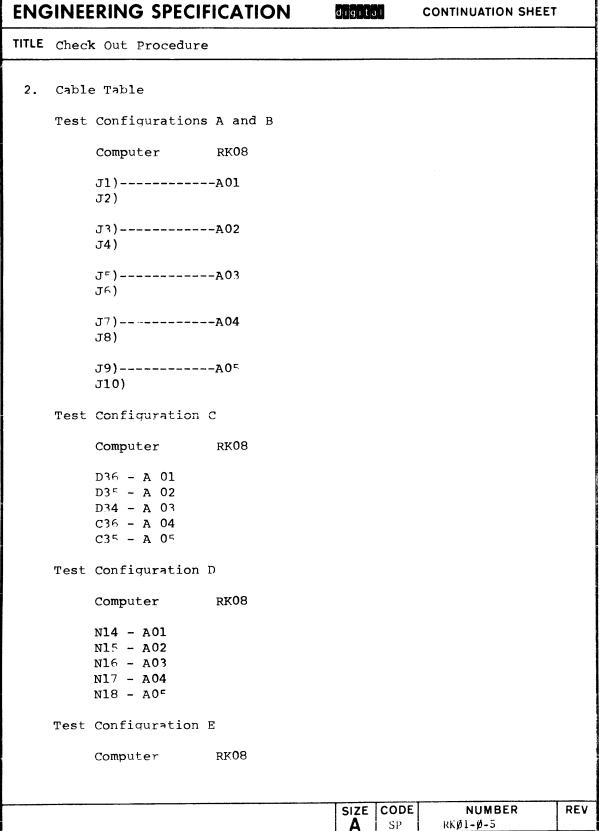

ENGINE	ERING	SPECIFI	CATION	d i g i t a	0	CONTINUATION S	HEET
TITLE Chec	rk Out P	rocedure					
	MF (4)						
	PE2) PF2)		A03				
	PE3)		A04				
	PE4 \		A05				
	ME30		C05				
Test	Config	uration F	•				
	_	er		Compu	ter	RK08	
	ME34) MF34)		A01	ME3 0 -		C05	
	ME35) MF35)		A02				
	PE2) PF2)		A03				
	РН4) РJ4)		A04				
	PJ8)		~0 A O □				
٦. Mod	ıles						
3.1		onfigurat	ion A				
	1 set		ee prints)				
3.2	Test C	onfigurat	ion B or C o	or D			
	1 set	RK01X					
				SIZE A	CODE SP	NUMBER RKØ1-Ø-5	REV

DEC FORM NO 16-1022 DRA 108 SHEET ____3 OF _____7

DEC FORM NO 16-1022

SHEET 4 OF 7

ENGINEERING SPECIFICATION

dıgıtal

CONTINUATION SHEET

TITLE Check Out Procedure

1 set RK08P (see prints)
1 G717 to be placed in slot A or D 1

3.3 Test Configuration E or F

1 set RK01X

1 set RK08N

1 M938 to be placed in slot A4 or D4) not needed when used

1 M938 to be placed in slot A⁵ or D⁵) with DM01

4.0 Check all part list for all items

example: interconnection RK01X to RK08
Cable 3 6" Flexprint W901 - W901 Dec #70-06111-1
Disk Drive Logic cable Purchase part 12-09789
Dec #70-06604 connects to the Drive Loc (CMD
Disk Drive Electronic Module ASM) A1s to the
assigned Disk Drive number in RK01 F29 Disk 0,
F30 Disk 1, F31 Disk 2, and F32 Disk 3.

F. Test Equipment

- 1 Oscilloscope Tektronix Type 453 or equivalent
- 2 Probes X10 Tektronix Type P6010 or equivalent
- 1 Computer
- 1 RK01 system
- 1 RK01 K

Other Equipment that may be helpful but is not needed for this procedure will be found on incoming inspection checkout list. These tools will not be used without approval of the Supervisor of the Test Area, Quality Control and Engineer Support Engineers.

6. Software

RK08 Instruction Test
Maindec -08-05JA-D

RK08 Disk Formatter
Maindec -08-D5KA-D

RK08 Disk Data Reliability
Maindec -08-D5HA-D

Binary Loader
Dec -08-LBAA

SIZE CODE NUMBER REV
SP RKØ1-Ø-5

DEC FORM NO 27 20 DRA 108

SHEET $\frac{5}{}$ OF $\frac{7}{}$

ENGINEERING SPECIFICATION

dıgıtal

CONTINUATION SHEET

TITLE Check Out Procedure

7. Environmental Requirement

Heat Test 1 unit per month per Engineer Spec running Disc Data Acct'd mode for 1 hour at high end. (Note: watch room temp. per Engineering Specification).

- 8. Vibration Test is per QC specification #1022. Only the module is subject to this Test.
- 9.0 Testing
 - 9.1 Set up configuration (Note: The RKO1 must have a customer and a configuration assigned to it.)
 - 9.2 Check cab fans for proper airflow according to the type of system assigned.
 - 9.3 Check all modules for proper location, solder shorts, etc.
 - 9.4 Check power (110V AC or 240V AC 50/60 hz + 5V + 6.5V -15V Grd and power control, etc.)
 - 9.5 Read operating Procedures of Disk Memory Drive
 - 9.6 Run RK08 Instruction Test. Follow the Program writeup.
 - 9.7 Run RK08 Disk Formatter. Follow the Program writeup.
 - 9.8 Run RK08 Disk Data Reliability Test for at least \(\frac{1}{4} \)
 hour. Follow the Program writeup. (Note: this
 test may be started in the Accept mode but if trouble
 develops use other mode as explained in the writeup).
 - 9.9 Step 9.7 and 9.8 nust be repeated for other format stepups.
 - 9.10 Repeated 9.8 in the Accept mode for at least 1/2 hour complete passes on this mode.
 - 9.11 Run the RKO8 Disk Data Reliability Test as set forth by the Program writeup for the Acceptance Test with Customers Disk Pac.

SIZE CODE		NUMBER	REV
Α	SP	RKØ1-Ø-5	
		SHEET 6	OF

TITLE Check Out Procedure

- 9.12 Certified par 9.11 and place all paper work together.
- 9.13 Sent to Field Service Assceptance a complete unit as per Configuration call for.
- 10. No system may leave checkout without going through all of the steps untested or partially tested for any reason.
- 11. The system will be delivery as a self supporting unit ready to be plugged into a computer with all software and accessorvs listed on print No. A-AL-RKO1-0-3
 A-SL-RKO1-0-4

DEC FORM NO DRA 103A

ENGIN	ERING SPECIFICA	ATION			DATE 6-23-	70
TITLE	DISK CARTRID	GE MEMORY - RI	KU8/EKU1			
DEV.		REVISIONS				
REV	DESCRIPTION	CHG NO	ORIG	DATE	APPD BY	DAT

digital G

CONTINUATION SHEET

TITLE

Disk Cartridge Memory - RK08/RK01

Introduction

The RK8 system is a removable disk cartridge storage system for the PDP-8 family of computers (excepting the PDP-8/s. Up to four drives can be added to the system in 831,488 word increments for a total capacity of 3,325,952 words.

The main control, called the RKO8, receives commands and data from the computer and accesses the RKO1 disk drive through a smaller controller called the RKO1-X.

The RKO1-X controller contains the logic peculiar to the RKO1 disk drive. A system made from these three basic components is called the RK8.

The disk cartridge is mounted on the drive and rotated at 1500 RPM. Information is read or written on the top or bottom surface of the rotating disk by two read/write heads. These heads are mounted on a carriage moved by a stepping motor and "fly" over the disk surface on a very thin film of air. The stepping motor can position the heads to any one of 203 tracks on the disk. Circumferential position is referenced to slots cut in a

SIZE CODE SP

NUMBER RK01-0-6

REV

DEC FORM NO DRA 109A

SHEET ___ OF _27

SHEET _2 OF ___7__

	digital CONTINUATION SHEET
TITLE	Disk Cartridge Memory - RK08/RK01

flange on the lower side of the cartridge. These nine slots are sensed by a photo diode and indicate the start of one of eight sectors. A ninth slot gives the information necessary to determine sector 0.

The cartridge is a single aluminum platter coated on both sides with magnetic oxide. It is permanently mounted inside a protective case that automatically opens when inserted in the disk drive. A magnetic material in the drive spindle assembly engages the bottom of the cartridge to couple the platter to the drive motor.

			djignitali	CONTINUATION SHEET			
TITLE	Disk	Cartridge Memo	ory - RK08/RK0	1			
	Specifications						
	Storage Capacity			Ca rtridge st or es			
			831,488 12				
	Expansion		Four RK01 dr	ives may be con-			
			trolled by o	ne RKO8 control			
			_	2 words total.			
	Transfer Path		Single cycle	Data Break			
	Transfer Rate		16.7 us per				
	Minimum Access Tim	e	2. 0 ms step	plus 37 ms			
			settle time.				
	(adjacent tracks)						
	Average Access		133 ms inclu	ding settle time.			
	Maximum Access		400 ms inclu	ding settle time.			
	Latency Maximum		(l revolutio	n) 40 ms			
	Latency Average		(½ revolutio	n) 20 ms			
	Program Interrupt		Transfer Don	e Fl a g			
			Error Flag				
	Write Lock		Individ ua l s	ectors or an enti	re		
			drive can be	write protected.			
	Data Tracks	200	Plus 3 spare				
	Words per Track	4096	(2048 on eac	h of two surfaces)		
	Sectors	16					
			CIZE CODE	NUMBER	REV		
			SIZE CODE SP	RK01-0-6			
DEC FOR	RM NO			SHEET 4 OF	27		

digital

CONTINUATION SHEET

SIZE CODE NUMBER REV

DEC FORM NO

DEC FORM NO DRA 109A

Density 70% Speed 150 Environmental Requirements: (a) (er 200 (b) (er for pac (c) men con moi		rea				
Minimum Block Size 256 Maximum Block Size 4096 Recording Method Don Density 704 Speed 156 Environmental Requirements: (a) (er 206 (b) (em for pace of the pac		rem				
Maximum Block Size 4096 Recording Method Don Density 704 103 Speed 150 Environmental Requirements: (a) (er 200 (b) (en for pac (c) men con moi		rem:				
Recording Method Density 70. Speed Environmental Requirements: (er 20. (b) (er for pac (c) men con moi the		rec:				
Density 704 Speed 150 Environmental Requirements: (a) (er 200 (b) (er) for pace (c) men con moi the		rem				
Speed 150 Environmental Requirements: (a) (er 200 (b) (er for pace (c) men con moi	bits/	- eqt	uenc	y-Tim	ne Plus	: Data
Speed 150 Environmental Requirements: (a) (er 200 (b) (er for pac (c) men con moi		/inc	ch (outer	track	:)
Environmental Requirements: (a) (er 20 ^C (b) (er for pace (c) men con moi	5 bits	s/in	nch	(inne	er trac	:k)
(er 20 ^C (b) (er for pace) (c) men con moi) rpm					
20 ^C (b) (en for pac (c) men con moi	Opera	atin	ng te	emper	ature	
(b) (er for pac (c) men con moi	/ironm	ment	:) + <i>(</i>	65 ⁰ F	to +90'	o _F .
(enformation for pace (c) menon moi	' per	hou	ır cy	ycle	rate.	
for pace (c) men con moi	Stora	age	temŗ	perat	ure	
pace (c) men con moi	ironm	nent	:) +2	20°F	to +165	5 ⁰ F
(c) men con moi	a per	riod	lof	6 moi	nths wh	hen
men con moi the	ed fo	or s	tora	age ar	nd ship	pment
con moi the	Opera	atino	g hu	umidit	ty (env	viron
moi) 20%	í to	80%	, exc	cluding	g all
the	ition	ıs wi	hich	ı woul	ld caus	se
	ture	to d	cond	lense	in or	on
(d)	equip	ment	t.			
	Stora	ge a	and :	shipp	ping hu	umidi
rang	∋; mir	nimu	um 59	%, ma	eximum	95% เ
to :	00°F.	no	cond	densa	ition r	·e-
sult		n mo	oistu	ure o	n or i	n the
equi	ng in			e tol	erable MBER	R

	digital CONTINUATION SHEET
TITLE	
Heat Dissipation	RK08 - 150 watts total
	RK01 - 700 watts, 1000 watt
	surge per drive.
AC Power Requirements	115 \pm 10 VAC,60 Hertz $\pm \frac{1}{2}$ Hertz.
	(a) MTBF equal to or greater
	than 1000 hours of power on time
	(a failure is any function re-
	quiring unscheduled maintenance.)
	(b) Scheduled preventative main-
	tenance - about 0.5 hrs. per
	200 hours on time.
	(c) Recoverable Error Rate - one
	error per 10^{10} bits transferred
	(a recoverable error is defined
	as an error which disappears
	within 5 attempts to complete
	the operation.)
	(d) Unrecoverable Error Rate -
	less than one unrecoverable per
	10^{12} bits transferred (an unre-
	coverable error is defined as an
	error which persists after 5 at-
	tempts to complete the operation.
	SIZE CODE NUMBER REV SP RK01-0-6

DEC FORM NO DRA 109A

SHEET 6 OF 27

CONTINUATION SHEET digital TITLE Subsequent restoration of performance may require prescribed cleaning of heads and/or disk.) (e) Service Life - The device has been designed for a life of 5 years or 24,000 hours, whichever occurs first before factory overhaul or replacement is required. One cabinet will accomodate the Cabinets RK08 and one RK01. A second cabinet will house two RK01 units. A third cabinet will house a fourth RK01. NUMBER RK01-0-6 SIZE CODE SP REV SHEET _7 OF __27 DEC FORM NO DRA 109A

CONTINUATION SHEET digital TITLE

Programming Sequence

Transfers are through single cycle Data Break. A normal programming sequence is as follows:

- 1. The word count and current address are placed in the word count and current address registers.
- 2. The command register is then loaded from the Accumulator. Normally, only the unit number, extended memory address, or seek mode would be changed. Status change in interrupt or rewriting of protect and status words would normally not take place.
- 3. The track, surface, and sector units are loaded from the accumulator and the instruction (read, write, check parity) is executed.
- 4. As desired, interrupts will occur when the instruction is complete or when there is an error. Errors will halt transfers.

SIZE CODE NUMBER REV SP RK01-0-6

SHEET _8 OF _27__

DEC FORM NO DRA 109A

digital

CONTINUATION SHEET

TITLE

Format Description

General

Each new cartridge is considered to be barren of useful data. Track and sector information must be written on the cartridge before it can be used by normal programs. The following describes the format of this information.

A cartridge surface is divided into 203 tracks. Each track is further divided into 16 parts called sectors; sectors 0 to 7 are on size zero of the cartridge and sectors 10 to 17 are on side 1 of the cartridge. Each individual sector, which contains enough area to store track and sector information plus 256 data words, can be addressed by the control. If a normal transfer is made starting from sector 0, 4096 data words can be transfered, 2048 words from side zero, and 2048 words from side one.

Transfer of data blocks that total more than the number of sectors from the starting sector to sector 17 is an error as indicated by the track capacity error flag.

Within a sector, the area is subdivided into a 2 word header region and a 256 word data region. The 2 word header contains track and sector information plus other data explained

> SIZE CODE NUMBER REV RK01-0-6

DEC FORM NO

SHEET _ 9 OF _27__

digital

CONTINUATION SHEET

TITLE

later. The 256 word data region contains the data words, a 12 bit longitudinal parity and a 12 bit guard word which is nothing more than a convenient area to turn off write amplifiers. Other information written for synchronization etc. is described in the detailed description of the format.

Sector Detail

Each sector is written with an area of data zeroes (a preamble region), a data one for a synch bit, two 12 bit plus parity header words, another area of data zeroes (preamble before data) another data one for a synch bit, 256 12 bit data words, one 12 bit longitudinal parity, and a 12 bit postamble word. During a read, the preamble region allows circuits to synchronize on the time pulses without being disturbed by data ones. The dirst data one read after the preamble region signifies that the region immediately following contains information. Similarily, the preamble region following the header words and prior to the first data bit is used for synchronization on timing pulses. The first data one bit after this region of data zeroes signifies that data immediately follows.

> SIZE CODE SP

NUMBER RK01-0-6

REV

CONTINUATION SHEET

TITLE

Since the sector is split into the two areas of header and data, normal read or write data instructions can be carried out after reading and checking the two header words. The region between the header words and data is used to switch circuits from read to write when performing a normal write. Therefore during a normal write the two header words are read, checked by the control, the preamble region following is used to switch to write, and the 256 words of data (plus longitudinal parity and postamble word) are written. Note that the two header words are not read into the computer during a normal read or write.

digital

Normal read or normal write instructions can be executed when bit 5 of the command register is zero. When this bit is a one and the sector protect switch is off, both the header words and the data region are avilable to the program as a 258 word data block. This enables a program to "format" the disk by writing the header words and reading them to ensure they were written correctly.

First Header Word - Usage During Normal Read or Write

The first header word is the track surface sector address, identical to the format of the address held in the computer

SIZE CODE NUMBER REV

digital CONTINUATION SHEET

TITLE

accumulator when executing a read or write instruction.

After being read, this first header word is compared to the track address registers of the control to ensure that the correct track is being accessed. The sector portion of this header word is compared with the sector address requested by program. If they are not equal, the control resets itself until the next sector. If they are equal, the transfer of 256 data words is completed. If another 256 data words are to be transferred (word count not equal to zero), one is added to the sector address requested by program and this new sector is found in the same manner as before.

Note that sectors are identified by data written by a program. Therefore, sector numbers do not have to be sequential but can be interleaved for maximum throughput.

Second Header Word - Usage During Normal Read or Write

The second header word when read during a normal read or write is checked as follows: a) If bit zero is equal to one AND the sector protect switch is on AND a normal write is requested, terminate transfer and raise write lock error flag. If these conditions are not true, continue transfer.

SIZE CODE

NUMBER

REV

DEC FORM NO

digital CONTINUATION SHEET

TITLE

- b) If any of bits one to five are a one, during a normal read or write, terminate transfer and set the sector no good flag. These bits are set to a one to indicate that the sector has a permanent flaw and cannot be reliably written or read.
- c) Bits 6 to 11 are unused.

Special Note: The previously described functions of checking for correct track address, finding of sector numbers, checking of parity, write lock, sector no good bits, etc. are all performed automatically and require no intervention by the program when they are carried out.

SIZE CODE NUMBER REV

digital CONTINUATION SHEET
TITLE

Sector Sequence

The sequence of sectors accessed during read or write is determined by the formatting program. The simplest format should be used where large blocks of data are being transferred. 4096 words are transferred in 80 ms.

Surface 0	<u>Surface</u>
Sector #	Sector #
0	8
1	9
2	10
3	11
4	12
5	13
6	14
7	15

To allow milliseconds of calculations on data between transfers, without requiring one revolution before the next sector appears, the following format should be used:

Surface 0	Surface
Sector #	Sector #
0	8
3	11
6	14
1	9
4	12
7	15
2	10
5	13

This allows 10 ms between sectors. 4096 words are transferred in 240 ms. Other formats are possible.

SIZE CODE NUMBER REV

DEC FORM NO

SHEET 14 OF 27

digital **CONTINUATION SHEET**

TITLE

Control Descprition

The control contains an up/down counter called the track address counter which keeps count of the track number. This counter holds the current location of the heads and is the active track register. Another register, the track address register, is loaded under program control from the accumulator. The control will step the up/down counter and the head positioner until the counter and track address register are equal.

After the control finds the correct track, the header of the first sector that appears under the read/write head is read. The track address portion of the header word is compared with the track address register. If they are not equal, the address error flag is raised and operation will be terminated.

Sector selection is performed by loading a register from the accumulator with sector number plus surface. The sector address portion of the header word is compared with the sector address register. If they are equal, a read or write operation continues. If they are not equal, consecutive sectors are read until the correct one is found. If after 56 revolutions the correct sector is not found, the time out error flag is set.

> SIZE CODE NUMBER REV SP RK01-0-6

DEC FORM NO DRA 109A

SHEET 15 OF

digital

CONTINUATION SHEET

TITLE

Multidisk Operations


One extra feature has been added to aid the programmer in multidisk operations.

When a drive is first selected during a normal read or write (bit 5 of the command register must be zero) the control will read the track over which the drive heads are positioned. The information which is utilized is the first header word of any sector. This header word contains the track number over which the drive heads are positioned. This track number updates the track address counter and then the instructions, if any issued from the computer, are executed. This operation is necessary, only in multidisk operation and is performed so the program is not forced to calculate a drive's current track location and update the track address counter when switching from drive to drive.

> SIZE CODE NUMBER RK01-0-6

> > SHEET 16 OF


REV

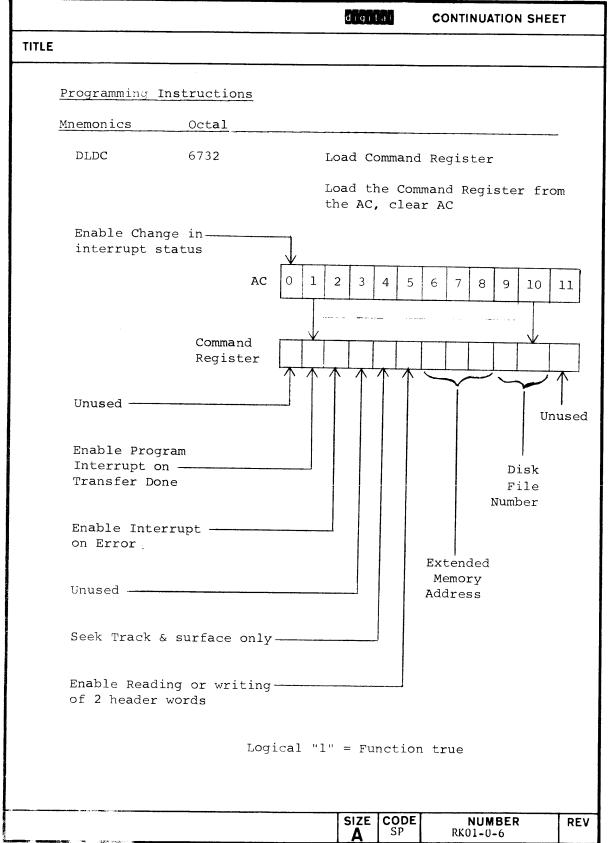

digital **CONTINUATION SHEET** TITLE Mnemonics Octal *DLDR 6733 Load Disk address and Read Loads track, surface, and sector address from AC, then clears AC, Starts to Read data from disk if Command Register bit 4=0 *DLDW 6735 Load Disk address and Write Loads track, surface, and sector address from AC, then clear AC, Starts to write on disk if Command Register bit 4=0. *DCHP 6737 Load disk address and Check Parity Loads track, surface, and sector address from AC, then clears AC. Reads data and checks Parity if Command Register bit 4=0. AC10 Track Address Surface/Sector Address Register ✓ Register Sector Track Address Address Surface Bit DRDA 6734 Read Disk Address Clears AC and then reads Track Address Counter, and surface/sector counter into AC. DRDC 6736 Read Disk Command register Clears AC then reads Command Register into the AC. *If command register bit 4=1, instruction will be executed only to seek track and surface. These 3 instructions start all disk operations. NUMBER SIZE CODE REV RK01-0-6 DEC FORM NO

DEC FORM N DRA 1094

SHEET ____18__ OF __27__

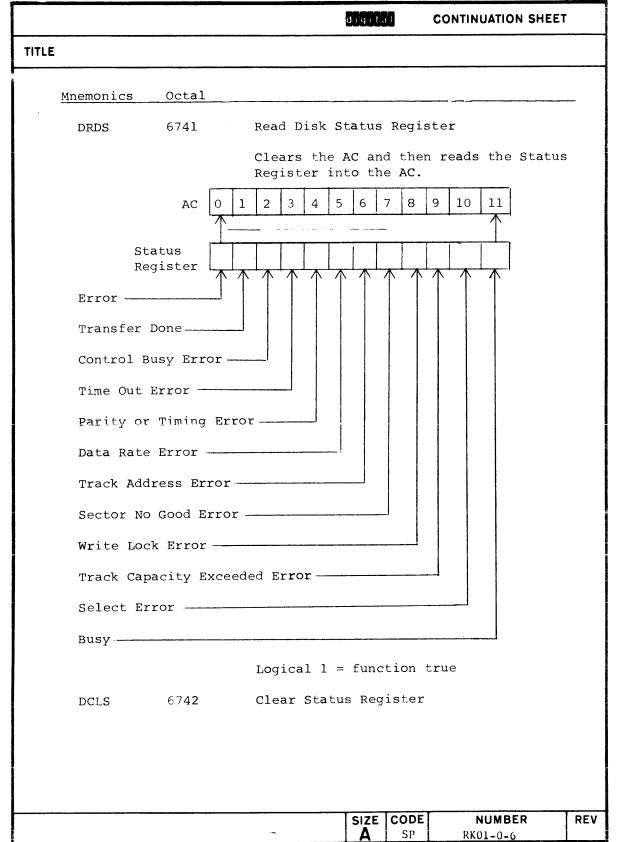

digital CONTINUATION SHEET TITLE Octal Mnemonic DMNT 6743 Load Maintenance Register Loads Maintenance register from AC, and carries out the operation specified. Bits will remain set until DMNT is issued with AC bits = 0. Maintenance Register Logical 1 = function true AC Bit Transfer contents of Track address Register to Track counter Register Transfer Data Register to Serial Register Transfer Serial Register to Data Clear AC and Read Data Register into Shift a "1" into the Serial Register Shift a "0" into the Serial Register 5 Unformatted Disk Sector Pulse Index Pulse 9-11 Not used 6731 Load Disk Address DLDA (maintenance only) SIZE CODE SP NUMBER REV RK01-0-6 SHEET 20 OF 27

DEC FORM NO DRA 109A

		digital CONTINUATION SHEET
TITLE		
Mnemonics	Octal	
DSKD	6745	Skip on transfer Done flag = 1
DSKE	6747	Skip on Error Flag = 1
DCLA	6751	Clear All
		Clears selected Disk to Track 000. Then clears all control registers and flags except Disk selection. Transfer done set when Disk positioned Track 000.
DRWC	6752	Read Word Count Register
		Clears AC; then reads the contents of the WC register into the AC.
DLWC	6753	Load Word Count Register
		Loads WC register from AC, then clears the AC
DLCA	6755	Load Current Address Register
		Loads CA register from AC; then clears the AC
DRCA	6757	Read Current Address Register
riketina kanana		Clears the AC; then reads the contents of the CA register into the AC.
NO ACCUMENTATION OF THE PROPERTY OF THE PROPER		
March Colonia		
		Tours Toops I william I bely
		SIZE CODE NUMBER REV SP RK01-0-6

Programming Instructions - Detailed Description DLDC - 6732 The command register is loaded from the AC. The AC is cleared. AC bit usage is as follows: AC Bits 0 This bit allows changes to the interrupt status if it is a "l". If it is "0", the interrupt status cannot be changed except by DCLA. 1 If a "1" and bit 0 is a "1", set the enable gate to allow a program interrupt when the Transfer Done flag = "1". If a "0" and bit 0 is a "1", reset the enable gate. If a "1" and bit 0 is a "1", 2 set the enable gate to allow a program interrupt when the error flag = 1. If a "0" and bit 0 is a "1", reset the enable gate. If a "l", seek the track specified in track address register, but do not start transfer. If a "0", seek the track, surface, sector and start the transfer. SIZE CODE SP NUMBER RK01-0-6 REV

digital

CONTINUATION SHEET

TITLE

		drgit		CONTINUATION SHE	ET
TITLE					
	5	If a "] to the		e header is acce	ssibl
	Re a d	are rea of word count n	nd. Th ds re ad registe	er words plus da de maximum numbe d is 258. The w der determines the er of words.	r ork
	Write	are wrimust be words a sector Maximum is the the professional to the formatter are writtens.	e off. are chamust and minimust and same and steeding is a section.	-	itch r at n. rds ce ten, d
		protect be capa disk ar sector(areas able of ad chec (s) of regula	e program used of the disk mu formatting the king that the the disk does nrities that will rors.	st ot
	6	Extende	ed memo	ry address 0.	
	7	Extende	ed memo	ry address 1.	
	8	Extende	ed memo	ry address 2.	
	9 & 10	00 = Di 01 = Di 10 = Di 11 = Di	sk l sk 2		
	11		= 1ow	future twice de er tracks, l =	_
A		10.== 1	00051	NUMBER	1
		SIZE	SP	NUMBER RK01-0-6	REV

SHEET _25 OF _1 DRA 109A

		digital CONTINUATION SHEET
TITLE		
DLDR or DLDW or DCHP		Load track address, surface and sector address from accumulator. The control will execute the command register instructions. If track seek only has been selected, the Transfer Done flag will be set when the correct track is reached. The Transfer Done flag will also be set when transfer is complete.
DLDR - 6733	<u>Read</u>	After the correct track, surface and sector number is found, (see write below) the control will read the second header word. Bit zero of this word is ignored. If any of bits 9-11 are set, the Sector No Good flag is set, and the read operation is terminated.
DLDW - 6735	Write	The first word of the header is the track, surface and sector address. It is read by the control and compared with the selected address. If the track addresses differ, the Address Error flag is set and the write operation is terminated. If the two addresses are the same, the sector addresses are checked. If they are the same, the second header word is checked. If the sector addresses are not the same the next sector header is read. This continues until the correct sector is found.
		If bit zero of the second header word is a "l", and the sector protect switch is on, the sector is protected and the write lock error flag will be set and the transfer terminated immediately. If the bit is a "0" the rest of the header word is checked.
DEC FORM NO		SIZE CODE NUMBER REV RK01-0-6 SHEET 24 OF 27

DEC FORM NO DRA 109A

SHEET 24 OF 27

		CONTINUATION SHEET
TITLE		
		If one of bits 1-5 of the second header word is a "1", the sector has a permanent error and the Sector No Good flag will be set. The writing operation will be terminated. Bits 6-11 are unused.
	6737	The specified sector of the disk is read for correct parity. The parity error flag will be set if there is an error, transfer will be terminated, the transfer done flag will be set.
DRDA	6734	Clear accumulator and read track, surface and sector counter into the accumulator. This is a dynamic register and is changing if a new track or surface has been selected. The sector counter changes every 5 milliseconds. The program must read these counters twice and verify that the information is correct.
DCRCD	6736	Clear accumulator and read command register into accumulator.
DRDS	6741	Clear accumulator and read status register into accumulator.
	AC Bits	
	0	Error
		This flag is set when any error flags are set. Control operation ceases whenever the error flag is set, the transfer done flag is set to "l" and the busy flag to "0".
	1	Transfer Done - set whenever a control operation is terminated.
		SIZE CODE NUMBER REV
C FORM NO		A SP RK01±0-6

	Not ready error. SIZE CODE NUMBER REV A SP RK01-0-6			
10	Select Error - Non existant drive error position error or drive. Not ready error.			
9	Track Capacity Exceeded Error - The program attempted to read or write beyond sector 15.			
8	Write Lock Error - The program attempted to write a section that was write protected.			
.7	Sector No Good - The program attempted to read or write data on a sector whose header words indicated a bad sector.			
6	Track Address Error - Track, surface or sector address read from the disk did not agree with the address count registers.			
5	Data Rate Error - The processor was busy and did not respond to a data break request within the 13 microseconds required.			
4	Parity Error or Timing Bit Error. A bit in data, parity or timing has been picked up or dropped on read. The word count, current address information can be used to identify the error.			
3	Time Out Error - The control did not complete and operation after 2 seconds.			
2	Control Busy Error - Disk IOT issued when control busy which would effect operation.			

digital

CONTINUATION SHEET

DEC FORM NO DRA 109A

SHEET 25_ OF 27

TITLE

		digita		CONTINUATION SHEET	
TITLE					
	11	one stat	e wher Then it the tra	s flag is in the the control is goes to the zer ansfer done flag	
TMMD	6743	AC bit C		-8 are self-ex-	
	Bit 6	by word without immediate mark and word country words are ginning tion.	count formaticely as al continuit over the write of the these was alata re	of memory speciand current address. Writing star fter the sector inues until the erflows. Two extens at the beset block of inform words are the conegister prior to ite.	ress rts ra
			secto	ion reads all dat r mark until the erflows.	a
		any form intercha drives with bit written Any form	mat gi angeab using t 6 = is ge mat ca f one	to read or write ves some degree of ility between different format. I, the format merated by program be read and deknows the format.	am.
DLDA, D	CLS, DCLA, DSKD, DSKT,	DSKB, DI	RWE, D	LWC, DLCA, DRCA	
ar e sel	f-explanatory.				
	and the second s	0.75	CODET	NUMBER	REV
		SIZE	SP SP	RK01-0-6	27

DEC FORM NO DRA 109A SHEET _27 OF _27

herein, are the property of Digital not be reproduced or copied or used for the manufacture or sale of items

Fran Souva

DIGITAL EQUIPMENT CORPORATION MAYNARD, MASSACHUSETTS							
ENGIN	IGINEERING SPECIFICATION				DATE		
TITLE	RK08 Acceptance Pr	ocedure					
γ		REVISIONS					
REV	DESCRIPTION	CHG NO	ORIG	DATE	APPD BY	DATE	
					<u></u>		
 G	APPD	/ a S	IZE CODE		UMBER	REV	

A | SP-

SHEET $\underline{1}$ OF $\underline{4}$

digital **CONTINUATION SHEET**

TITLE RKØ8 Acceptance Procedure

- 1) The disk must have passed 12 continuous hours of the acceptance mode of the data reliability diagnostic with not more than one (1) recoverable error on each pass of the test. The machine must be accepted on either the computer it is being shipped on or the same type of computer that it will be added on to.
- 2) Insert the customer disk cartridge and allow 15 minutes warm-up time to allow the environmental temperature between the cartridge and the drive to balance each other.
- 3) Check the unformatted mode of the RKØ8 with the instruction test. Until this test is available, however, an intermediate test has been written to check this mode of operation. Run this test three times. Each time change the data being written by changing location $\emptyset \emptyset 25$ of memory to the desired data. Run all drives. Change selected drive by changing the desired drive cable to DØ1.

With the unformatted modes on the drive(s), run the following datareliability patterns: <u>TST</u>

4) Check the sector lock-out switch by changing location $\emptyset\emptyset51$ to $4\emptyset\emptyset\emptyset$ and pressing the sector lock-out switch. An error should occur and the program should halt at location $\emptyset \emptyset \emptyset 1$ with bit $\emptyset 8$ of the status set.

> NOTE: Location $\emptyset \emptyset 51$ should be changed back to zero and the unformatted mode program rerun to insure the correct data being in the second header word.

5) Load the formatter program into the computer. Write any desired sector order other than the normal incremental one. Do this to each drive on the system using a different customer cartridge in each drive. Load the data reliability test and call in the test mode of operation. Select all drives and run the following test patterns:

TST	PAT	DLS	SEQ
1	4	2	Ø
6	4	2	1
3	6	3	1

Completion should occur with no errors. Reformat all cartridges with the normal incremental sectors.

6) Load the data reliability test into the computer. Go the the test mode and select all the drives that are on the system then type in

> SIZE CODE NUMBER REV RKØ1-Ø-7

DEC FORM NO DRA 109A

SHEET 2 OF _

			digita	CONTINUATION S	HEET
ITLE	RKØ8 Acceptanc	e Procedure			
	the following t	est pattern s :			
	<u>TST</u>	PAT	DLS	SEQ	
	1	4	2	ø	
	6	4	2	1	
	3	6	3	1	
	4	3	1	ø	
	5	3	1	1	
	3	9	3	1	
	3	7	2	1	
	4	9	2	Ø	
	5	9	. 1	Ø	
	4	9	3	Ø	
	5	9	1	1	
	2	8	1	Ø	
	6	8	1	1	
	3	5	3	1	
	3	9	1	ø	
	2	3	1	Ø	
	6	3	1	ø	
	5	3	2	1	
	ø	1	1	Ø	
	7	1	1	1	
	3	7	2	1	
	ø	Ø	1	Ø	
	7	ø	1	1	
	3	ø	ø	1	
•	3	1	ø	1	
	3	3	1	1	
	3	4	1	1	
	3	5	2	1	
	3	6	2	1	
	3	7	3	1	
	3	9	3	1	
	NOTE:	typing error m	n <mark>ay cau</mark> se a nplete type	s are in correctly n erroroneous prin outs are necessar •	ng out.
7)	the "Test" mode	of data reliah	ower failur oility: Se	e destroying data. lect all the units	Call s on the
	system and run		DI C	C FO	
	$\frac{\text{TST}}{2}$	<u>PAT</u> 1	DLS 1	$\frac{SEQ}{g}$	
	3	1	1	_P	
			SIZE	CODE NUMBER	RE RE

CONTINUATION SHEET digital TITLE RK08 Acceptance Procedure When the pass complete type out occurs stop the program and restart the test. Select the test mode again and one of the drives on the system. Call in the following pattern: TST While this is running, throw the selected drive "start-stop" switch to stop. Ignore the program type out and stop the computer when the drive becomes safe restart the drive by flipping the switch to start. When the drive is up to speed (indicated by the selection switch being on) restart the program and select the same unit and SEQ pattern: TST Test the simulated power failure on each of the remaining drives on the system. 8) Check the write lock-out switches in the following manner. Call up the following test pattern from the test mode of the data reliability diagnostic: TSTWhile this is running, hit any lock-out switch that pertains to a drive on the system. An error type out shouldoccur. Inspect the type out to be sure that the drive that failed corresponds with the switch that was hit. Repeat the test on all the drives on the system. 9) There must be complete compatability between all RKØ8 disk drives. Acceptance for this is run by formatting a customer cartridge on a drive not associated with the system being accepted and running the "accept" mode of the data reliability diagnostic for twenty (20) minutes on each drive on the system. 10) The final acceptance test is to run the system software for the type computer that the disk is on; PDP-8, 8I, 8L must run PS-8 software; PDP-12 must run LAP-6 Dial Mass Storage. 11) Special hardware to go with the RKØ8 system: All items listed on $A-AL-RK\emptyset1-\emptyset-3$. 12) Software to go with the RKØ8 System and 8K of memory: All items listed on A-SL-RK \emptyset 1- \emptyset -4. SIZE CODE REV NUMBER RKØ1−Ø-7 SP

DEC FORM NO

SHEET $\frac{4}{}$ OF $\frac{4}{}$