IDENTIFICATION

Product Code: DEC-08-COCO-D

Product Name: ODT-8

Date Created: October, 10, 1968

Maintainer: Software Service Group

ABSTRACT

ODT (Octal Debugging Technique) is a debugging aid for the PDP-8, which facilitates communication with, and alteration of, the program being run. Communication between operator and program occurs via the Teletype, using defined commands and octal numbers. This version of ODT has been completely revised and replaces both versions of the former ODT-II program.

2 PRELIMINARY REQUIREMENTS

2.1 Equipment

Standard PDP-8 or PDP-5 with basic 4k memory and Teletype.

2.2 Storage

ODT requires 600 (octal) consecutive core locations and one location on page 0 which will be used as an intercom register. It is page relocatable.

3 LOADING OR CALLING PROCEDURE

NOTE: ODT cannot be called as a subroutine.

- a. ODT is normally distributed in binary with the source available on request and is loaded with the Binary Loader.
 - 1. Place the ODT tape in the reader.
 - 2. Set 7777 in the SWITCH REGISTER and press LOAD ADDRESS. (If using the high-speed photoelectric reader, put switch 0 down).
 - 3. Press START.
- b. Load the binary tape of the program to be debugged in the same manner as ODT was loaded. Be sure that the two do not overlap.

4 USING THE PROGRAM OR ROUTINE

4.1 Starting Procedure

- a. The starting address of ODT is the address of the symbol START. For standard library versions the high version starts at 7000 and the low at 1000.
- b. Set the starting address in the SWITCH REGISTER. Press LOAD ADDRESS, and START on the console. ODT will issue a corriage return and line feed to indicate that it is now running and awaiting commands from the keyboard.
- c. To restart ODT wihout clearing the checksum, set the address of START + 1 (usually 7001 high version, or 1001 low version) into the SWITCH REGISTER and press LOAD ADDRESS and START on the console.

4.2 Control Characters

a. Slash (/) - Open register preceding/

The register examination character / causes the register addressed by the octal number preceding the slash to be opened and its contents typed out in octal. The open register can then be modified by typing the desired octal number and closing the register. Any octal number from 1 to 4 digits in length is a legal input. Typing a fifth digit is an error and will cause the entire modification to be ignored and a question mark to be typed back by ODT. Typing (/) with no preceding argument causes the latest named register to be opened (again). Typing 0/ is interpreted as / with no argument.

Example: 400/6046 400/6046 2468? 400/6046 12345? /6046

b. Carriage Return ()) - Close register

If the user has typed a valid octal number, after the content of a register was printed by ODT, typing causes the binary value of that number to replace the original contents of the opened register and the register to be closed. If nothing has been typed by the user, the register is closed but the content of the register is not changed.

Example: 400/6046) Register 400 is unchanged.
400/6046 2345) Register 400 is changed to contain 2345.

/2345 6046) Replace 6046 in register 400.

Typing another command will also close an opened register.

Example: $\frac{400/6046}{400/\underline{6046}} \frac{401}{6031} \frac{2346}{2346}$ Register 400 is closed and unchanged and 401 is opened and changed to 2346.

c. Line Feed (+) - Close register, open next sequential register

The line feed has the same effect as the carriage return, but, in addition, the next sequential register is opened and its contents typed.

Example: 400/60464 Register 400 is closed unchanged and 401 0401/6031 12344 is opened. User types change, 401 is closed containing 1234 and 402 is opened.

d. Up arrow (1) - Close register, take contents as memory reference and open same
Up arrow will close an open register just as will carriage return. Further, it will interpret the contents of the register as a memory reference instruction, open the register referenced and type its contents.

Example:

404/3270†

0470/0212 0000)

3270 symbolically is "DCA, this page, relative location 70," so ODT opens register 470.

0470/0000

e. Back Arrow (-) - Close register, open indirectly.

Back arrow will also close the currently open register and then interrupt its contents as the address of the register whose contents it is to type and open for modification.

Example:

365/5760↑ 0360/0426 ←

0426/5201

f. Any Illegal Character

Any character that is neither a valid control character nor an octal digit, or is the fifth octal digit in a series, causes the current line to be ignored and a question mark typed.

Example:

4:?) 4U?) 406/4671 67K?) /4671)

ODT opens no register.

ODT ignores modification and closes register 406.

g. xxxxG - Transfer control to user at location xxxx.

Clear the AC then go to the location specified before the G. All indicators and registers will be initialized and the break-trap, if any, will be inserted. Typing G alone is an error but will nevertheless cause a jump to location 0.

h. xxxxB - Set breakpoint at user location xxxx.

Conditions ODT to establish a breakpoint at the location specified before the B. If B is typed alone, ODT removes any previously established breakpoint and restores the original contents of the break location. A breakpoint may be changed to another location, whenever ODT is in control, by simply typing xxxxB where xxxx is the new location. Only one breakpoint may be in effect at one time; therefore, requesting a new breakpoint removes any previously existing one. The previous restriction on placing a breakpoint on a JMS followed by arguments has been removed as of the June 1967 revision. This means ODT can now be more effectively used, especially in debugging programs which utilize floating point. The only restriction in this regard is that a breakpoint may not be set on any of the floating point instructions which appear as arguments of a JMS.

Example: TAD DCA Breakpoint legal here.

JMS Breakpoint illegal here.

The breakpoint (B) command does not make the actual exchange of ODT instruction for user instruction, it only sets up the mechanism for doing so. The actual exchange does not occur until a "go to" or a "proceed from breakpoint" command is executed.

When, during execution, the user's program encounters the location containing the breakpoint, control passes immediately to ODT (via location 0004). The C(AC) and C(L) at the point of interruption are saved in special registers accessible to ODT. The user instruction that the breakpoint was replacing is restored, before the address of the trap and the content of the AC are typed. The restored instruction has not been executed at this time. It will not be executed until the "proceed from breakpoint" command is given. Any user register, including those containing the stored AC and Link, can now be modified in the usual manner. The breakpoint can also be moved or removed at this time.

i. A - Open register containing AC.

When the breakpoint is encountered the C(AC) and C(L) are saved for later restoration. Typing A after having encountered a breakpoint, opens for modification the register in which the AC was saved and types its contents. This register may now be modified in the normal manner (see SLASH) and the modification will be restored to the AC when the "proceed from breakpoint" is given.

↓ after A - Open register containing Link

After opening the AC storage register, typing linefeed (+) closes the AC storage register, then opens the Link storage register for modification and types its contents. The Link register may now be modified as usual (see SLASH) and that modification will be restored to the Link when the "proceed from breakpoint" is given.

j. C - Proceed (continue) from a breakpoint.

Typing C, after having encountered a breakpoint, causes ODT to insert the latest specified breakpoint (if any), restore the contents of the AC and Link execute the instruction trapped by the previous breakpoint, and transfer control back to the user program at the appropriate location. The user program then runs until the breakpoint is again encountered.

NOTE: If a trap set by ODT is not encountered while ODT is running the object (user's) program, the instruction which causes the break to occur will not be removed from the user's program.

xxxC - Continue and iterate loop xxx times before break.

The programmer may wish to establish the breakpoint at some location within a loop of his program. Since loops often run to many iterations, some means must be available to prevent a break from occuring each time the break location is encountered. This is the function of xxxC (where xxx is an octal number). After having encountered the breakpoint for the first time, the user specifies, with this command, how many times the loop is to be iterated before another break is to occur. The break operations have been described previously is section h.

k. M - Open search mask.

Typing M causes ODT to open for modification the register containing the current value of the search mask and type its contents. Initially the mask is set to 7777. It may be changed by opening the mask register and typing the desired value after the value typed by ODT, then closing the register.

4 - Open lower search limit

The register immediately following the mask storage register contains the location at which the search is to begin. Typing line feed (‡) to close the mask register causes this, the lower search limit register to be opened for modification and its contents typed. Initially the lower search limit is set to 0001. It may be changed by typing the desired lower limit after that typed by ODT, then closing the register.

↓ - Open upper search limit

The next sequential register contains the location with which the search is to terminate. Typing line feed (1) to close the lower searchlimit register causes this; the upper search limit register to be opened for modification and its contents typed. Initially, the upper search limit is the beginning of ODT itself, 7000 (1000 for low version). It may also be changed by typing the desired upper search limit after the one typed by ODT, then closing the register with a carriage return.

1. xxxxW - Word search.

The command xxxxW (where xxxx is an octal number) will cause ODT to conduct a search of a defined section of core, using the mask and the lower and upper limits which the user has specified, as indicated in section k. Word searching using ODT is similar to word

searching using DDT. The searching operations are used to determine if a given quantity is present in any of the registers of a particular section of memory.

The search is conducted as follows: ODT masks the expression xxxx which the user types preceding the W and saves the result as the quantity for which it is searching. (All masking is done by performing a Boolean AND between the contents of the mask register, C(M), and the register containing the thing to be masked.) ODT then masks each register within the user's specified limits and compares the result to the quantity for which it is searching. If the two quantities are identical, the address and the actual unmasked contents of the matching register are typed and the search continues until the upper limit is reached.

A search never alters the contents of any registers.

Example:

Search locations 3000 to 4000 for all ISZ instructions, regardless of what register they refer to (i.e. search for all registers beginning with an octal 2).

M7777 7453/0001 7454/7000 2000W	7000↓ 3000↓ 4000↓	Change the mask to 7000, open lower search limit Change the lower limit to 3000, open upper limit Change the upper limit to 4000, close register Initiate the search for ISZ instructions
2000/2467 3057/2501 3124/2032 4000/2152		These are 4 ISZ instructions in this section of core.

m. T - Punch leader

ODT is capable of producing leader (code 200) on-line. This is done by typing T and then turning ON the punch. When enough leader has been punched, turn off the punch and hit STOP on the console. It is imperative that the punch be turned OFF before typing again on the keyboard, since anything typed will be punched also, if the punch is left on. To issue any further commands, reload the starting address and press START on the console.

n. xxxx; yyyyP - Punch binary

To punch a binary core image of a particular section of core, the above command is used where xxxx is the initial (octal) address and yyyy is the final (octal) address of the section of core to be punched. The computer will halt (with 7402 displayed) to allow the user to turn ON the punch. Pressing CONTINUE on the console initiates the actual punching of

the block. The punching terminates without having punched a checksum, to allow sub-sequent blocks to be punched and to allow an all inclusive checksum to be punched at the end by a separate command. This procedure is optional, however, and the user may punch individually checksummed blocks.

It is imperative that the punch be turned OFF before typing another command, since the keyboard and punch are linked.

o. E - Punch checksum and trailer

Given the command E, ODT will halt to allow the punch to be turned on. Pressing CONTINUE on the console will cause it to punch the accumulated checksum for the preceding block(s) of binary output followed by trailer (code 200). When a sufficient length of trailer has been output, turn OFF the punch and press STOP on the console. To continue with ODT reload the starting address and press START on the console.

The binary tape produced in this manner by ODT can now be loaded into core and run. However, the changes should be made to the symbolic source tapes as soon as possible.

4.3 Additional Techniques

a. TTY I/O-Flag

Sometimes the program being debugged may require that the TTY flag be up before it can continue output, i.e., the program output routine will be coded as follows:

Since ODT normally leaves the TTY flag in an off (lowered) state, the above coding will cause the program to loop at the JMP.-1. To avoid this, ODT may be modified to leave the TTY flag in the raised (on) state when transferring control through either a "go to" or a "continue" command. This modification is accomplished by changing location XCONT-3 (normally at 7341) to a NOP (7000). To make the actual change, load ODT as usual.

Open register XCONT-3 and modify it as follows:

$$7341/\underline{6042} 7000$$
) (1341/6042 7000) for low version)

b. Current Location

The address of the current register or last register examined is remembered by ODT and remains the same, even after the commands G, C, B, T, E, and P. This location may be opened for inspection merely by typing /.

c. Programs Written in ODT Commands

ODT will also correctly read tapes prepared off-line (e.g., a tape punched with 1021/11571 7775 will cause location 1021 to be opened and changed to 1157; then the memory reference address 157 will be opened and changed to 7775 (-3). This procedure will work with breakpoints, continues, punch commands, etc. Thus, debugging programs may be read into ODT to execute the program, list registers of interest, modify locations, etc.

d. Binary Tape from High Speed Punch

It is possible to obtain a binary tape from the high speed punch, instead of the Teletype, however, this requires switch manipulation. Proceed as follows:

- 1. Type the punch command xxxx; yyyyP as explained in section 4.2 (n). The computer will halt.
- 2. Set 7231 (1231 for low version) in the SWITCH REGISTER (SR) and press LOAD ADDRESS.
- 3. Set 6026 in the SR and press DEPOSIT.
- 4. Set 6021 in the SR and press DEPOSIT.
- 5. Set 7225 (1225 for low version) in the SR and press LOAD ADDRESS and START on the console, and leader (code 200) will be output.
- 6. When a sufficient length of leader has been produced, press STOP on the console.
- 7. Set 7203 (1203 for low version) in the SR and press LOAD ADDRESS and START on the console, and the section of core specified in the punch command will be output.
- 8. If another block of data is desired on the same tape, the original contents of the locations changed in steps 3, 4 and 5 must be replaced. (See step 11.) Steps 1, 2,
- 3, 4, and 8 must then be repeated to output the data block via the high speed punch.
- 9. Set 7222 (1222 for low version) in the SR and press LOAD ADDRESS and START on the console, and the accumulated checksum will be punched followed by trailer (code 200).
- 10. When a sufficient amount of trailer has been produced, press STOP on the console and press the TAPE FEED button, then remove the tape from the punch.

11. To continue using ODT, the locations changed in steps 3 and 4 must be restored as follows:

Set 7231 (1231 for low version) in the SR and press LOAD ADDRESS.
Set 6046 in the SR and press DEPOSIT.
Set 6041 in the SR and press DEPOSIT.

12. Set the starting address (7000 or 1000) in the SR and press LOAD ADDRESS and START on the console, and ODT is ready to go again.

e. Interrupt Program Debugging

ODT executes an IOF when a breakpoint is encountered. (It does not do this when more iterations remain in an x-continue command.) This is done so that an interrupt will not occur when ODT types out the breakpoint information. It thus protects itself against spurious interrupts and may be used safely in debugging programs that turn on the interrupt mode.

However, the user must remember that there is no way in which ODT could know whether the interrupt was on when the breakpoint was encountered, and hence it does not turn on the interrupt when transferring control back to the program after receiving a "go" or a "continue" command.

f. Octal Dump

By setting the search mask to zero and typing W, all locations between the search limits will be printed on the Teletype.

g. Indirect References

When an indirect memory reference instruction is encountered, the actual address may be opened by typing 1 and —.

4.4 Errors

The only legal inputs are control characters and octal digits. Any other character will cause the character or line to be ignored and a question mark to be typed out by ODT. Typing G alone is an error. It must be preceded by an address to which control will be transferred. This will elicit no question mark also if not preceded by an address, but will cause control be transferred to location 0.

Typing any punch command with the punch ON is an error and will cause ASCII characters to be punched on the binary tape. This means the tape cannot be loaded and run properly.

4.5 Miscellaneous

If a trap set by ODT is not encountered by the user's program, the breaktrap instruction will not be removed. ODT can now be used to debug programs using floating point, since the intercom register is now register 0004, and since breaktraps may now be set on a JMS with arguments following. This version of ODT will operate on a Teletype with an ALT mode key or an ESCAPE key. To restart ODT without clearing the checksum, set the SWITCH REGISTER to the value of start + 1 (7001 or 1001 in library versions) and press LOAD ADDRESS and START on the console. The high speed punch may be used by patching three locations after typing the punch command. (See section 4.3 d.)

5 DETAILS OF OPERATION AND STORAGE

5.1 Features

ODT features include register examination and modification; binary punchouts (to the Teletype or high speed punch) of user designated blocks of memory; octal core dumps to the Teletype using the word search mechanism, as in DDT; and instruction breakpoints to return control to ODT (breakpoints).

ODT makes no use of the program interrupt facility and will not operate outside of the core memory bank in which it is residing.

The breakpoint is one of ODT's most useful features. When debugging a program, it is often desirable to allow the program to run normally up to a predetermined point, at which the programmer may examine and possibly modify the contents of the accumulator (AC), the Link (L), or various instruction or storage registers within his program, depending on the results he finds. To accomplish this, ODT acts as a monitor to the user program. The user decides how far he wishes the program to run and ODT inserts an instruction in the user's program which, when encountered, causes control to transfer back to ODT. ODT immediately preserves in designated storage registers, the contents of the AC and L at the break. It then prints out the location at which the break occurred, as well as the contents of the AC at that point. ODT will then allow examination and modification of any register of the user's program (or those registers storing the AC and L). The user may also move the breakpoint, and request that ODT continue running his program. This will cause ODT to restore the AC and L, execute the trapped instruction and continue in the user's program until the breakpoint is again encountered or the program terminated normally.

5.2 Storage

ODT requires 600 (octal) locations and, as distributed by the Program Library, resides in memory between 7000 and 7577 (or 1000 and 1577 for the low version). It is, however, page relocatable.

The source tape can be re-origined to the start of any memory page except page 0 and assembled to reside in the three pages following that location, assuming they are all in the same memory bank. ODT also uses location 4 on page 0 as an intercom register between itself and the user's program when executing a breaktrap. If the user wishes to change the location of the intercom register, he may do so by changing the value of ZPAT in the source and reassembling. The intercom register must remain on page 0.

6 RESTRICTIONS

- a. ODT will not operate outside of the memory bank in which it is located.
- b. It must begin at the start of a memory page (other than page 0) and must be completely contained in one memory bank.
- c. It will not turn on the program interrupt, since it has no way of knowing if the user's program is using the interrupt. It does, however, turn off the interrupt when a breakpoint is encountered, to prevent spurious interrupts. (See 4.3 (e).)
- d. The user's program must not use or reference any core locations occupied or used by ODT, and vice versa.
- e. Register ZPAT is used as an intercom register by ODT when executing a breakpoint. In library distributed versions ZPAT = 0004. This register must be left free by the user since it is filled with an address within ODT which is used to transfer control between user program and ODT.
- f. Breakpoints are fully invisible to "open register" commands; however, breakpoints may not be placed in locations which the user program will modify in the course of execution or the breakpoint will be destroyed.

7 REFERENCES

Carriage Return ())

- a. See DDT Programming Manual (Digital-8-4-S) for a full explanation of the use of debugging programs.
- b. Binary Loader (Digital-8-2-U).

8 COMMAND SUMMARY nnnn/ Open register designated by the octal number nnnn. Reopen latest opened register. / Reopen latest opened register.

Close previously opened register.

Line Feed (+) Close register and open the next sequential one for modification. Up Arrow (†) Close register, take contents of that register as a memory reference and open it. Back Arrow (←) Close register open indirectly. Illegal character Current line typed by user is ignored, ODT types "? CR LF". nnnnGTransfer program control to location nnnn. nnnnB Establish a breakpoint at location nnnn. В Remove the breakpoint. Open for modification the register in which the contents of AC were Α stored when the breakpoint was encountered. C Proceed from a breakpoint. nnnnC Continue from a breakpoint and iterate past the breakpoint nnnn times before interrupting the user's program at the breakpoint location. Μ Open the search mask. (line feed) Open lower search limit. (line feed) Open upper search limit. Search the portion of core as defined by the upper and lower limits nnnnW for the octal value nnnn. T Punch leader. nnnn;mmmmP Punch a binary core image defined by the limits nnnn and mmmm. Ε Punch checksum and trailer. 9 **EXAMPLES AND/OR APPLICATIONS** Symbols for representing "invisible" Teletype actions: (CR) nere. Carriage Return (LF) Line Feed (H) Computer Halts

Key Continue on Console

Punch On

(Cont)

(PON)

(POF)	=	Punch Off
(LEAD)		Production of Leader
(BIN)	=	Punching of Binary Text
(CKSMT)	=	Punching of Checksum and Trailer

The following examples are the actual result of using ODT to run the program listed after the examples. Brackets enclose comments local to the description. Underlinings designate that produced by ODT.

M7777 7000 (LF)(CR)
7473 /0201 400 (LF)(CR)
7474 /7879 500 (CR)(LF)
3000 w (CR)(LF)
3484 /3278- (CR)(LF)
7431 /3277 (CR)(LF)
0437 /3277 (CR)(LF)
0444 /3330 (CR)(LF)
3452 /3277 (CR)(LF)
3453 73300 (CR)(LF)
2456 /3276 (CR)(LF)
3455 /3277 (CR)(LF)
(LF)

[mask modified]
[lower search limit modified]
[upper search limit modified]
[quantity for which to search specified and search begun]

```
M7000 7777 (LF)(CR)

7473 /0400 350 (LF)(CR)

7474 /0520 (CR)(LF)

72200 (CR)(LF)

0364 /7230 (CR)(LF)

(LF)
```

[search completed]

```
M7777 502 (CR)(LF)
4200 (CR)(LF)
2377 77422 (CR)(LF)
3411 77450 (CR)(LF)
3417 77450 (CR)(LF)
3417 77450 (CR)(LF)
3432 77402 (CR)(LF)
3451 77402 (CR)(LF)
3451 77402 (CR)(LF)
3466 77402 (CR)(LF)
3472 77521 (CR)(LF)
(LF)
```

[change mask]
[change lower limit]
[upper limit is all right]
[search for all CLA instructions]
[there is only one. It is at location 364]
[search is finished]

[set mask for indirect and page bits]
[using previous limits search for all references
to page zero which occur]

[there are none, however, these microinstructions look like indirect references to page zero since they have a 1 in bit 3 and a \emptyset in bit 4]

[search completed]

M@500 0 (LF)(CR) 7473 /3360 437(LF)(CR) 7474 /0500 427 (CR)(LF) ₩ (CR)(LF) 9407 /1270(CR)(LF) 0410 /1272(CR)(LF) 8411 /7450(CR)(LF) 0412 /5253(CR)(LF) 3413 /1273(CR)(LF) 2414 /745@(CR)(LF) 0415 /5234(CR)(LF) 2416 /1273(CR)(LF) 0417 /7450(CR)(LF) 3420 /5227(CR)(LF) 3421 /7%31(CR)(LF) 3422 /765%(CR)(LF) 3423 /5242(CR)(LF) 3424 /1274(CR)(LF) 7425 /4671(CR)(LF) 7426 /523(CR)(LF) %427 /1275(CŔ)(LÉ) (LE)

[set mask to zero so that everything will match]
[set search limits to encompass dump area]
[since W is typed alone, the word searched for, is Ø. The result after masking each register with Ø is, of course, Ø so all comparisons appear to the program equal and hence all unmasked contents are typed, constituting a dump]

Examples of Register Examination & Modification

400/6046 (CR)(LF)
400/6046 2468? (CR)(LF)
400/6046 12345?(CR)(LF)
/6046 2345 (CR)(LF)
/2345 6046 (CR)(LF)
/5245 401/6031 2346 (CR)(LF)
400/6046 401/2346 (CR)(LF)
/2346 5031 (CR)(LF)

[E xamine Only]
[Non-octal number typed, modification ignored]
[More than 4 digits typed, modification ignored]
[Register 400 modified to 2345]
[Modified again]
[Register closed by typing another command]

430/6046 (LF)(CR)
2401 /6031 1234 (LF)(CR)
2402 /5201 (CR)(LF)
401/1234 6031 (LF)(CR)
0402 /5201 (CR)(LF)
(LF)(CR)
0403 /6036 (CR)(LF)
(LF)(CR)
0404 /32 /0 (CR)(LF)

[close and examine next] [modify 401, examine 402] [close 402]

Examples of Register Examination & Modification (continued)

404/3270 ↑ (CR)(LF) 0470 70212 0200 (CR)(LF) 40473270 + (CR)(LF) 2470 70000 (CR)(LF) 70000 (CR)(LF) 404/3270 3271+ (CR)(LF) 2471 70360(CR)(LF) 404/3271 3270+ (CR)(LF) 3470 /0000 (CR)(LF) 365/5760 + (CR)(LF)

[ODT opens 470. User modifies 470]

[contents of 404 refers to "this page, loc. 70"]

Contents of 404 modified to refer to "this page [ODT opens 471] loc. 71"

2362 70426 -(CR)(LF) 0426 /5201 (CR)(LF)

[contents of 365 refers to "this page, loc. 160"] ODT opens 360. Contents of 360 become [ODT opens 426] address

4: ?(CR)(LF) 4U?(CR)(LF) 60 ?(CR)(LF) 40574571 Y? (CR)(LF 405/4671 57K? 406/4671 67322? (CR)(LF) /467I

illegal character. ODT opens no register

illegal character. ODT ignores modification fifth digit in series. ODT ignores modification register 406 still contains original value of 4671

Examples of setting Breakpoints and Executing User's Program

475/0000 1 (LF)(CR) 0476 70000 2 (LF)(CR) 2477 /2200 (CR)(LF) 432B (CR)(LF) 400G (CR)(LF) +0432 (C0000 (CR)(LF) 477/0003

user's program expects to find the numbers it is to use in 475 and 476 (see listing) answer will be stored in 477 [Breakpoint is set at location 432] [user's program begins at 400, go there]
[user's program accpts input of "+". Breakpoint [477 contains sum of 475 & 476] encountered ODT types break address & C(AC)

Registers can be changed and the same breakpoint remains in effect.

(LF)(CR) 475/0001 3 0476 70002 (CR)(LF) 400G (CR)(LF) 477/0005 (CR)(LF)

Examples of examining and modifying AC and L after encountering a breakpoint

A0200 1 (CR)(LF) A0001 (CR)(LF) /0001 (CR)(LF) (LF)(CR) 7356 /0001 0 (CR)(LF) /0000 (CR)(LF) [AC which contained \emptyset when breakpoint was encountered is modified]

[Link which contained 1 at break is modified to \emptyset]

446B (CR)(LF) 400G (CR)(LF) *0445 (0004 (CR)(LF) C (CR)(LF) 0446 (0010 (CR)(LF) 0446 (0014 (CR)(LF)

[Destroys old breakpoint & sets one at 446]

(Breakpoint encountered)
[continue until ...]
[Breakpoint again encountered]

476/0003 7 /0007 446B 400G **446 (00024 2C **6**446 (0020 C 0446 (0024

[Breakpoint encountered]
[Continue as before but pass Breakpoint twice before stopping again]

```
1000
                         START=1000
                         ZPAT=4
      0004
                         /THIS IS A 3-PAGE, 4K,
                         PAGEWISE-RELOCATABLE,
                         /OCTAL DEBUGGING SYSTEM CALLED
                         /***ODT-8***
                         *START
      1000
                                 DCA I CKSAI
                                                  /CLEAR THE CHECKSUM,
1000 3675
                                 10
                                                  JARBITRARY CONSTANT
1001 0010
                         P10,
1002 4357
                         READ,
                                 JMS CRLF
                                                  /END LINE; SET SHUT TO -1
1003 1673
                                 TAD I INX
                                                  /TRAD
                                 DCA WORD
                                                  /GET THE TRAP ADDRESS.
1004 3367
1005 1674
                                 TAD I INØ
                                                  /KEEP
1006 3767
                                 DCA I WORD
                                                  /RESTORE CONTENT.
                         READ5.
                                 DCA WORD
                                                  /CLEAR THE INPUT./7TH INST.
1007 3367
                                 TAD FM5
1010 1263
                                                  1-5
1011 3374
                                 DCA TOTE
                                                  ISET THE LETTER COUNT.
1012 6031
                         REA.
                                 KSF
                                     , -1
1013 5212
                                 JMP
                                                  /WAIT FOR COMMAND.
1014 6036
                                 KRB
1015 3357
                                 DCA SCHAR
                                 TAD SCHAR
                                                  /GO TYPE THE CHARACTER.
1016 1357
                                 JMS I IN9
1017 4772
1020 1373
                                 TAD RETN
                                                  /INITIALIZE THE PATCH
                                 DCA ZPAT
                                                  JEVERY TIME.
1021 5004
                                 TAD BLIST
                                                  /COMPUTE ADDRESS OF COMMAND.
1022 1243
                                 DCA SPNTR
1023 3323
                                 TAD I SPNTR
                                                  /SEARCH FOR LEGAL CHARACTER,
1024 1723
                                 ISZ SPNTR
1025 2323
                         FM270,
                                 SPA
                                                  /TEST FOR END OF LIST; MINUS 5
1026 7510
                                 JMP SEX
                                                  /NOT SATISFIED.
1027 5277
                         QUEST,
                                                  /COMPARE THE CHARACTER.
1030 7041
                                 CIA
                                 TAU SCHAR
1031 1357
                         FP240,
                                 SZA CLA
                                                  /FOUND
1032 7640
1033 5224
                                 JMP .-7
                                                  VNO. CONTINUE
                                 TAD SPNTR
1034 1323
1035 1242
                                 TAU LTABL
1036 3323
                                 UCA SPNTR
1037 1723
                                 TAD I SPNTR
                                                  VLOOK UP THE ADDRESS.
                                 UCA SPNTR
1040 3323
                                 JMP I SPNTR
                                                  760 PROCESS.
1041 5723
1042 0514
                         LTABL, TABL2-TABL1-1
1043 1044
                         BLIST, TABL1
                         700T-8 WILL ALSO CORRECTLY READ SYMBOLIC
```

ZODT-8 WILL ALSO CORRECTLY READ SYMBOLIC ZTAPES PREPARED FOR IT: F.G. 1021/1157*7775

/COMMAND LIST

```
TARL1=.
      1344
                                                  ZPUNCH
                                  520
1044 0320
                                  500
                                                  /END
1045 0305
                                  524
                                                  /TRAILER
1045
     0324
                                                  JOPEN NEXT
                                  212
                         Lt.
1047
      0212
                                                  /CLOSE THIS ONE
                                  215
                          CK,
1057
      D215
                                                  JOPEN THIS ONE
                                  251
                         SLA,
      ₽257
1001
                                                  / BREAK
                                  302
     0302
1052
                                  307
                                                  160
1053 0307
                                  273
                                                  1:
1054
      W273
                                                  /CONTINUE
                                  303
1 055
      0303
                                                  /WORD SEARCH
                                  527
1056
      0327
                                                  /UP-ARROW OPENS INDIRECT(I.E. MEM REF)
                                  336
1057
      0336
                                                  /MASK+UPPER+LOWER+
                                  515
1060 0315
                                                  /AC+LINK
                                  301
1061 0301
                                                  /BACK ARROW = OPEN INDIRECTLY
                                  331
1062 0337
                         /TABLE MUST END WITH A NEG NUMBER
                                  -5
                         FM5,
1063 7773
                                                  /LOAD ADDRESS
                                  TAD WORD
                         EXAM.
1064 1367
                                                  /IF FERO, USE LAST
                                  SZA
1065 7440
                                  JCA CAD
1066 3370
                                  1AD I CAD
                         EX2,
1067 1770
                                                  /PNUM (PRINT CONTENTS)
                                  JMS I IN8
1070 4771
                                                  ISIGNALS OPEN REG
                                  DCA SHUT
1071 3375
                                  JMP REAUS
10/2 5207
                                  TRAD
                         INX,
10/3 1357
                                  KELP
                         IND.
1074 1362
                                  CKSA
                         CKSAI.
1075 1363
                                  FROG
                         INT,
1076 1362
                         /PROCESS OCTAL DIGITS.
                                  CLA
                         SEX.
1077 7200
                                  IAU SCHAR
1100 1357
                                                  /(=8)
                                  TAU FM274
1101 1226
                         CKNUM,
                                  SMA
1102 7500
                                  OV 9ML
                                                  /ILLEGAL CHAR
1103 5317
                                                  110
                                  TAU PIU
1104 1201
                                  SPA
1105 7510
                                  JMP NO
                                                  /ILLEGAL CHAR
1106 5317
                                  UCA SAD
1107 3323
                                                  VASSEMBLE AN ADDRESS
                                  TAU WURD
1110 1367
                                  RAL CLL
1111 7194
                                  RIL
1112 7206
                                  TAU SAD
1113 1323
                                  UCA WORL
1114 3367
                                 1St TUTE
1115 2374
                                  JMP RLA
1116 5212
```

1117 1120 1121 1122	7200 1227 4772 5202	NU, CLA TAD JMS	INDICATOR (3 QUEST I IN9 REAU	/277 /TYPN
			CATION ZERO, AND TYPE LINE	EFEED,
			S OF THE LAST EMAINS THE SA	T REGISTER AME AND MAY BE OPENED BY "/"
	1123 1123	SPNTR=, SAD=,		
1123 1124 1125	6000 1374 7041	CRL. 0	TOTE	MODIFICATION AND INCREMENTAL EXAMINE
1126 1127 1130	1263 7650 5723	TAD SNA JMP	FM5 CLA I CRL WORD	/-5 /NO MOD, INFO AVAILABLE
1131 1132 1133 1134	1367 2375 3770 5723	ISZ DCA	SHUT I CAD I CRL	/TEST FOR OPEN AND THEN CLOSE IT, /MODIFY REGISTER
1135 1136 1137	4323 4357 5207	JMS	CRL CRLF READ5	/CARRIAGE RETURN TO CLOSE
1140 1141 1142	1250 4/72 4323	JMS	CR I IN9 CRL	/SINGLE FEED+CR
1143 1144 1145	4772 2370	JMS IS£	I IN9 CAD CAD	/TIME FOR CAR TO RET. /LINE FEED = EXAMINE NEXT
1146 1147	4771 1251	JMS TAD	I INS SLA I INS	/PNUM
1150	4772 5267	4ML	EX2	/TYPN
1152 1153 1154	4323 1770 3370	TAD DCA	CRL I CAD CAD	/CLOSE FIRST
1155 1156	4357 534 5		CRLF UPAR3	

	1157	SCHAR=,	
		TYPE A CAR. RET, AND LINE FEED	
1157	0200	CRLF. 0	
1102	1253	TAU CR /215	
1161	4772	JMS I IN9 /TYPN	
1162	1247	TAD LF /212	
1163	4772	JMS I IN9 /TYPN	
1164	7242	CMA /MINUS ONE	
1165	3375	DCA SHUT /SIGNALS CLOSE	D REGISTER
1166	5757	JMP 1 CRLF	
1100	3/3/		
		/PAGE ONE PARAMETERS.	
1167	0300	WORD, Ø	
1170	0000	CAD, Ø /CURRENT ADDRE	[S S
1171	1446	INS, PNUM	
11/2	1230	IN9, TYPN	
1173	1243	RETN, BURP	
1174	0000	TOTE, 0	
1175	7777	SHUT, /7/7	
11/0	,,,,		
1176	1367	PUNC, TAD WORD	
1177	3676	DCA I IN7	

```
/JOT-8, SECOND CORE PAGE
                         *START+240
     1200
                                                 /FIRST IN THIS PAGE
                         SP177, 177
1200 0177
                                                 /READ5
                                 JMP I IN13
1201 5767
                         /PUNCH DATA.
                                 CLA HLT
                         PUN1.
1202 7602
                                 TAU FROG
1203 1362
                                                 /PUNN (PUNCH ORIGIN)
                                 JMS I IN11
1204 4765
                                 100
1205 0100
                                 TAD I FROG
                         PUN2,
1206 1762
                                                 /PUNN (PUNCH CONTENTS)
                                 JMS I IN11
1207 4765
                                 Ø
1210 0000
                                 TAD FROG
1211 1362
                                 CIA
1212 7241
                                 TAU I IN10
                                                 /WORD
1213 1764
                                 SNA CLA
1214 7650
                                 JMP I IN13
                                                 /READ5
1215 5767
                                 ISZ FROG
1216 2362
                                 JMP PUN2
1217 5206
                                 JMP | IN13
1220 5767
                         /PUNCH END,
                                 CLA HLT
                         PUN3,
1221 7602
                                 TAD CKSA
1222 1363
                                                 /PUNN (PUNCH CHECKSUM)
                                 JMS I IN11
1223 4765
                                 2
1224 0000
                         PUNCH LEADER.
                         PUN4, TAU SP2WD
1225 1271
                                 JMS TYPN
1226 4230
                                 JMP ,-2
1227 5225
                         ITO USE THE HIGH SPEED PUNCH,
                         ITYPE "XX; YYP" THEN TOGGLE IN
                         /THE PATCHES INDICATED BELOW,
                         ITHEN LOAD ADDRESS AND START:
                         /PUN4 - FOR LEADER-TRAILER.
                         /PUN1+1 - FOR DATA
                         /PUN3+1 - FOR CHECKSUM AND LEADER.
                         /RESTORE PATCHES BEFORE RESTARTING.
                         PRESTART AT START TO CLEAR CHECKUM.
                         /RESTART AT START+1 TO RETAIN CHECKSUM.
                         ZIYPE A CHARACILR
                         TYPN.
                                 £:
1230 0000
                                         /(6026) - FOR H.S.
                                 TLS
1231 6746
                                         /(6021) - FOR H.S.
                                 TSF
1232 6041
                                 JMP .=1
1233 5232
                         SP7600, 1000
                                        /CLA-GROUPS
1234 7500
                                 JMP I TYPN
```

1230 0530

/FEATURES AUDED: INTERUPT TURNED OFF UPON HITTING BREAKPOINT; CAN USE /HI SPEED PUNCH; BREAKPOINT CAN BE PUT ON A JMS FULLOWED BY ARGUMENTS; //OTT+8 IS RELOCATABLE; IF BREAKPOINT PUT ON INSTR REFERENCING AUTO-INDEX /INDIRECTLY; IT WILL BE INCREMENTED ON CONTINUE; LINK & AC EXAMINE ON /COMMAND; / OPENS LATEST OPENED REGISTER; CLARITY; AUTO LEADER/TRAILER; /OPEN MEM, REF.(+); AND OPEN INDIRECT (BACK ARROW); ALSO XXX C.

		ZSET A	BREAK POINT.	
1236	1764		TAD I IN10	/(WORD)-ADDRESS OF TRAP,
	7450		SNA	
-	1366		TAD IN12	/CRLF
_	3357		DCA TRAD	/TRAP SET (REAL OR DUMMY)
1242			JMP SPEXIT	/GO TO SECOND PAGE EXIT,
	3024		- ,	
		ITHE TR	AP IS SPRUNG	
1243	3355	BURP,	DCA SAC	/SAVE C(AC)
-	7204		HAL	
1245			DCA LINK	/SAVE C(L)
2212	0030			, -, -, -, -, -, -, -, -, -, -, -, -, -,
1246	1360		TAU KEEP	
1247	3757		JCA I TRAD	/REPLACE INSTRUCTION WHICH WAS TRAPPED
1250	7101		IAC CLL	
1251	1357		TAD TRAU	
1252	3361		DCA GAME	/SAVE CONTINUATION ADDRESS (BREAK ADDR+1)
			T. (2) (1) ED	10.00 UP TO POUR INCTOUCTION
1253	1367		TAD KLEP	PICK UP TRAPPED INSTRUCTION
1254			TAD SP2000	YOVERFLOW TO LINK IF 10T OR OPERATE INSTR.
1255	0271	•	AND SP200	/AC=0 IF PAGE 0 REFERENCE /was trapped instr an iot, oper, page 0 reference?
- ·	7660		SZA SNL CLA	
1257	5265		JMP CURPAG	/NO
	4322		JMS TSTJMS	/YFS, SEE IF IT WAS A JMS
	7653		SNA CLA	/YES, TREAT AS IF NON-PAGE-ZERO REFERENCE
1262			JMP CURPAG+2	NO, PUT ACTUAL INSTR IN "THE" FOR EXECUTION
1263			TAD KEEP JMP LIP4	NAME AND MODERN THREE THE CHARLES AND EXPOSITION
1264	5300		JWL LILA	
1265	1357	CURPAG.	TAU TRAU	
1266	- -		AND SP7600	
1267	3302		JCA FROG	INSAVE INITIAL ADDR OF PAGE REFERENCED BY TRAPPED INSTR.
• • • ·				
12/0	1363		TAD KEEP	
12/1	0200	SP200,	AND SP177	/GET RELATIVE ADDR REFERENCED BY TRAPPED INSTR.
12/2	1362		TAD FROG	/ADD ON TOP OF PAGE
12/3	3362		DCA FROG	ISAVE ABSOLUTE ADDRESS OF MEMORY REFERENCE
	1362		TAD KEEP	
12/5			AND SPADO	ALC AT ALC TABLES OF SAFEDE AND S
	7653	LPAR,	SNA CLA	VIS IT AN INDIRECT REFERENCE?
	5302		JMP LIP	/ 10
1300	=		TAD I FROG	TYES, GET ACTUAL REFERENCE
1331	3362		DC4 FRAG	

1582	4322	LIP,	JMS TSTUMS	SEE IF TRAPPED INSTR IS A JMS
1303	7458		SNA	
1504	4771		JMS I IN21	/YES, IT IS A JMS (JMSER)
1305	1377		TAD IFROG	AND (JMS I FROG) JMS ADDS BACK 4000
1306	3351	LIP4,	JCA THE	STURE FOR EXECUTION
1327	2765	To A Company	ISZ I IN11	/TEST N-CONTINUE
1312	5344		JMP XCONT	/IGNORE THIS BREAK
1311	6202		101	/STOP INTERRUPTS
1312	4727		TAD TRAD	
	1357			CONTRACTOR ADDRESS
1313	4772		JMS I IN14	/PNUM (PRINT TRAP ADDRESS)
1314	1276		TAD LPAR	/LEFT PAREN (8 BITS=250=ASCII LFT PAREN)
1515	4233		JMS TYPN	
1316	1355		TAU SAC	
1317	4773		JMS I IN14	/PNUM (PRINT C(AC))
1328	4766	SPEXIT.	JMS I IN12	/CRLF
1321	5767		JMP I IN13	/READ5
1322	0000	TSTJMS.	O	
1523	1360		TAD KEEP	/GET TRAPPED INSTR.
1324	0374		AND SP7000	/ISOLATE OP CODE
1325	1375		TAD SP4000	/OVERFLOW TO LINK WITH AC=@ IF JMS (4000)
1326	5722		JMP I TSTJMS	
		/START	AT A LUCATION	
1327	1764	JUMP,	SINI I DAT	/(WORD)
1338		- ,	JCA GAME	
1331			TAD JPIGAM	/(JMP I GAME)
1332			DCA THE	The state of the s
1333	3355		UCA SAC	/CLEAR THE AC.
1333			SKP	VOLERY INE NO.
1335	_	COMITN.	TAU I IN18	/(WORD)
1336			CMA	
1337			DCA I IN11	
1540	4766		JMS I IN12	/(CRLF)
				N WITH NOP (7000)
		/IF THE	PROGRAM BEING D	ERUGGED EXPECTS
		ITHE TTY	FLAG TO BE UP.	
1341	6742	•	T.CF	/CLEAR THE FLAG
1542			TAU I TRAD	ISAVE TRAP CONTENTS.
1543	3363	,	DOA KEEP	
•			`	
1544	1376	xCONT,	TIAS CAT	
1345			CA I TRAD	/INSERT TRAP INSTRUCTION
1346			TAU LINK	
_	7112		HAR CLL	ARESTORE LINK
-	-		TAD SAC	/ANU C(AC)
1323		* .		
_	7422	THE,	HLT	FORT EXECUTION OF TRAPPED INST. AFTER PROCEED
1300		JPIGAM,	JMP 1 GAME	ALULANA ALUNA A
1353	2301		IST GAME	VIMITATE SKIP CONDITION.
1554	5352		JMP≥	

f.



/VARIABLES MAY BE SCANNED VIA "A".

1355	w 2 kr 2	SAC,	Ø	/AC
1325	ยวยว	LINK,	Ø	AFIAK BIL
1557		TRAD,	CRLF	/ADDRESS OF TRAP.
1360	2727		£.	/CONTENT OF TRAP
1361	D202	GAME.	Ø	/ADDRESS FOR CONTINUE
1362	Ø777	F'ROG,		/MEMORY REFERENCE,
1363	0202	CKSA,	Ø	THE CHECKSUM TO DATE.
		/INTER	COM REGS	· · · · · · · · · · · · · · · · · · ·
1364	1167	IN10.	WORD	
1365	1401	IN11.	PUNN	
1366	1157	IN12.	_	
1367		IN13.		
13/0	1446	IN14,		
1371	1475	IN21.	JMSER	/PRUCESS JMS.
		/CONSTA	NTS	
1372	2000	SP2000,	2000	
1373	0400	SP400.	400	
1374	7000	SP7000,		
1375	4000	SP4000.		
1376	5404	BAIT,		PAT "
1377	4762	IFROG.		ROG
T2//	7/02	11.0001	₩ , , ω <u>1</u> '	

/ODT-8, THIRD CORE PAGE.

```
*51ARI+400
      1400
                        VENUCH ROUTINE
                        IP177, 17/
                                     /FIRST IN THIS PAGE.
1400 0177
                        PUNN.
1401 0000
                                JCA PNUM
1402 3246
                                MUNG GAT
1403 1246
                                RTR
1404 7012
                                RTR
1405 7812
                                KTR
1406 7012
                                AND TP77
1407 0354
                                TAU I PUNN
1410 1601
                                JMS CKSM
1411 4236
                                TAD PNUM
1412 1246
                                AND TP77
1413 0354
                                JMS CKSM
1414 4236
                                JMP I PUNN
1415 5601
                        /MEMORY REFERENCE OPENER.
                                                /(CRL)-"CLOSER CALL".
1415 4742
                        UPAR1, JMS I IN30
                                TAD I IN27
                                                /CAD
1417 1741
                                DCA TEM
1428 3236
1421 1636
                                TAD I TEM
                        TP200, AND TP177
1422 0200
                                DCA TEM2
                                               /SAVE LOWER BITS.
1423 3201
                                TAD I TEM
1424 1636
                                AND TP200
1425 0222
                                               /TEST FOR PAGE ZERO REF
                                SNA CLA
1426 7650
                                JMP .+3
                                               /YES
1427 5232
                                TAU I IN27
1453 1741
                                AND TP7600
1431 0266
1432 1201
                                TAU TEM2
                                JCA I IN27
                                               /CAU
1433 3741
                                JMP I ,+1
1434 5535
                                JPAR2
1435 1155
                        /CHECK SUM ACCUMULATOR
                        CASM. 0
1436 8388
                                JCA CKT
1437 3275
                                GSAL I DAT
1440 1746
                                               /CKSA
                                TAD CKT
1441 1275
                                JCA I INZU
1442 3746
                                               /CKSA
                                TAU CKT
1443 1275
                                               /TYPN
1444 4745
                                JMS I IN19
                                JMP I CKSM
1445 5536
```

```
/ROUTINE TO PRINT OCTAL CONTENTS OF AC
                        PNUM.
                                0
1446
     0000
                                DCA PUNN
1447
     3201
                                TAU TM4
1450 1352
                                UCA CKSM
1451 3236
                                TAU PUNN
1452 1201
                                RAL
1453 7004
                        PN2,
                                 RAL
1454 7804
                                 RTL
1455 7006
                                DCA PUNN
1456 3201
                                TAU PUNN
1457 1201
                                                /ONLY 7-DIGITS GUARANTEED,
                                 AND TP067
1460 0351
                                                /IN CASE BIT 8 CAME THROUGH.
                                TAD TP60
1461 1355
                                                /TYPN
                                JMS I IN19
1462 4745
                                TAD PUNN
1463 1201
                                ISZ CKSM
1464 2236
                                 JMP. PN2
1465 5254
                                                /CLA-GROUP?
                        TP7600. 7600
1466 7600
                                 TAD TP240
1467 1331
                                 JMS I IN19
1470 4745
                                 JMP I PNUM
1471 5646
                        /SEARCH VARIABLES.
                                7777
                        MASK,
1472 7777
                        LIMLO, WWW1
1473 0201
                        LIMHI, START
14/4 1000
                        CKT=,
      1475
14/5 0200
                         JMSER.
                                Ø
                                                /(FROG) = ABS MEM REF, (FINAL)
                                 TAU I IN22
1476 1747
                                 DCA PNUM
1477 3246
                                 TAD I IN23
                                                 /GAME
1200 1750
                                 DCA I PNUM
                                                /SIMULATED JMS
1001 3646
                                 1S₹ 1 IN22
                                                /FROG
1002 2747
                                TAD TP1000
1003 1353
                                 JMP I JMSER
1004 5675
```

		INDRD S	EARCH ROUTINE		
1205	4743	WSER.	JMS I IN16	/CRLF	
1205	1273		TAU LIMLO		
1207	3275		DCA CKT		
1210		WSER1,	TAD I CKT		
1211	0272		AND MASK		
1512	7241		CIA		
1213	1744		TAU I IN17	/WORD	
	7640		SZA CLA		
1010	5325		JMP WSER2		
	1275		TAD CKT		
_	4246		JMS PNUM		
1228	1357		TAU TP257		/(SLASH)
1>21	4745		JMS I IN19	/TYPN	
-	1675		TAU I CKT		
1223	4246		JMS PNUM		
1>24	4743		JMS I IN16	/CRLF	
1025	1275	WSER2,	TAD CKT		
1526	2275		ISŽ CKT		
	7841		CIA		
1238	1274		TAD LIMHI		
1>31	7640	TP240:	SZA CLA		
1232	5310		JMP WSER1		
1533	4743		JMS I IN16	/CRLF	
1254	5751		JMP I IN25	/READ+5	
		ZPOUTTAN	ES TO TYPE MASK	ANII I IMI	T S
1235	1356		TAU CONSAC	Z.40 E 101	1 5
-	1360	•	TAD CONSMS		
	-	- CASINER!	-	/worn	
	3744		JMP 1 1N26	/EXAM	
1243	5766		AUL T THEO	7 € X ∧ ™	

```
TEM2=PUNN
     1401
                        TEM=CKSM
     1436
                        IN27, CAD
1241 1170
1042 1123
                        IN30, CRL
                        /INTER COM REG
                        IN16, CRLF
1543 1157
                        IN1/,
                               MORD
1244 1167
                               TYPN
                        IN19,
1545 1230
                        INS0,
                              CKSA
1246 1363
                               FROG
                        IN22,
1047 1362
                               GAME
                        IN23.
1050 1361
     1551
                        TP007=.
                                READ+5
                        IN25.
1051 1007
                        /CONSTANTS
1052 7774
                        TM4. -4
                        TP1000, 1000
1003 1000
                        TP77, 71
1054 Ø077
                        TP60.
                              60
1555 0060
                        CONSAC, SAC-MASK
1056 7663
                        TP257, 257
1057 Ø257
                        CON3MS, MASK
1260 1472
                        TABL2=.
     1561
                                PUN1
1261 1202
                                PUN3
1262 1221
                                PUN4
1263 1225
                                CRL2
1064 1140
                                CRL1
1265 1135
                        IN26.
                                EXAM
1266 1264
                                TRAP
1267 1236
                                JUMP
1070 1327
                                PUNC
1071 1176
10/2 1335
                                CONTIN
                                WSER
10/3 1505
                                UPAR1
1074 1416
                                MASKER
10/5 1536
                                ACX .
1076 1535
                                OPIN - JOPEN INDIRECTLY.
10/7 1152
```

SYMBOL TABLE

	_
ACX	1535
BAIT	1376
BLIS1	1043
BURP	1243
CAD	1170
CKNUM	1132
CKSA	1363
CKSAI	1075
CKSM	1436
CKT	1475
CUNTIN	1335
CUNSAC	1556
CUN3MS	1560
CH	1050
CHL	1123
CKLF	1157
CHL1	1135
CHL2	1140
CURPAG	1265
EXAM	1064
LX2	1067
FM2/0	1026
FM5	1063
FP240	1032
FHOG	1362
GAME	1361
IFRUG	
	1377
INX	1073
IND	1074
INTE	1364
IN11	1355
IN12	1356
IN13	1367 1370
IN14	13/6
IN16	1543
1N17	1544
I N19	1545
1450	1546
IN21	1371
IN22	1547
1 N 2 3	1556
1.1125	1551
1426	1566
11127	1541
11136	1542
1 14 7	76 م
1.48	1171
1 40	1172
JMSF3	1475
JHIGAM	1352
4MUL	1327
KEEP	1350
LF	1047

S	۲	M	В	0	L	يا فعير 🔭	Ł
---	---	---	---	---	---	-----------	---

SIMBUL	THULL
HIO HIMAN LIP 4 RBK ER LIP ARBK EN LIP ARBK EN MAD PIN CON 12 S MAD PIN CON 12 S MAD PIN CON 12 S MAD PIN CON 12 S MAD PIN CON 12 S	1474 1473 1356 1372 1376 1276 1272 1536 1117 1152 1446 1454 1176 1276 1276
PPURREADIN A T ITTO M M M M M M M M M M M M M M M M M M	122073537751030123544166161147227353775103012301231105436411111111111111111111111111111111111
THE TM4 TUTE TPMU7 TP1U0U TP1/7 TP2U0 TP2U0	1351 1552 1174 1551 1553 1430 1422

SYMBOL TABLE

12257	1557
1460	1ラララ
177000	1466
1277	1554
IHAU	1357
THAP	1236
ISTUMS	1322
TYPN	1230
UPAR1	1416
JPAR2	1155
UPAR3	1145
WURD	1167
MSER	1505
WSER1	1510
WSER2	1525
XUONT	1344
ZPAT	3034

SYMBOL	PLE
--------	-----

0111000	1	
ZSPRRRHJHLBTLCSHELTLCTSCNSSCCCUUUUUCSWCIIRTT		440112726722344701344701311000077701123445257770112345
UPAR2 CRLF SUHAR WURD CAD IN8 IN9 RETN		1155 1157 1157 1167 1170 1171

SYMBOL TABLE

LMAR 1276	
LIP4 1326 SPEXIT 1326 TSTUMS 1322 JUMP 1327	3
CONTIN 1335 XCONT 1344	,
THE 1351 UPIGAM 1352 SAC 1355 LINK 1356	•
TRAU)
r HOG 1362 CKSA 1363	
1 v1 d 1364 1 v1 1 1365 1 v1 2 1366 1 v1 3 1367)
IN14 1376 IN21 1371	
5P402 1373 5P7000 1374 5P4000 1375 BAIT 1376	
1FRUG 13//	
TEM2 1401 PUNN 1401 UPAR1 1416	
TEM 1436 CKSN 1436	
PNUM 1446 PN2 1454 TP7636 1456	
MASK 1472 LIMLO 1473 LIMHI 1474	
UMSER 1475 UNT 1475 WSEN 1975	
UNT 1475 ASEN 1975 NSEN 1976 NSEN 19	
MASKER 1536 1 v27 1541 1 v32 1542	

PAMPOL LABLE

	τ.
IN16	1543
IN1/	1544
IN19	1545
NSW	1546
1N22	1547
1 N 2 3	1550
IN25	1551
1PØ67	1551
1 M 4	1552
TP1000	1553
TP77	1554
1490	1555
CUNSAC	1556
TP257	1557
CUNSMS	1550
TABL2	1551
IN26	1556

4.