

# DHQ11 User Guide

Prepared by Educational Services  
of  
Digital Equipment Corporation

Second Edition, July 1987

Copyright © 1987 by Digital Equipment Corporation

All Rights Reserved

Printed in U.S.A.

The information in this document is subject to change without notice. Digital Equipment Corporation assumes no responsibility for any errors herein.

The following are trademarks of Digital Equipment Corporation:

**digital™**

DEC

DECmate

DECsystem-10

DECSYSTEM-20

DECUS

DECwriter

DIBOL

FALCON

MASSBUS

PDP

P/OS

Professional

Rainbow

RSTS

RSX

RT-11

UNIBUS

VAX

VAXBI

VMS

VT

Work Processor

# CONTENTS

## PREFACE

## CHAPTER 1 INTRODUCTION

1.1	SCOPE .....	1-1
1.2	OVERVIEW .....	1-1
1.2.1	General Description .....	1-1
1.2.1.1	Modem Control Facility .....	1-2
1.2.1.2	Self-Test Facility .....	1-2
1.2.1.3	Diagnostic Programs .....	1-2
1.2.1.4	Preventing Data Loss .....	1-2
1.2.2	Physical Description .....	1-2
1.2.2.1	On-Board Switchpacks .....	1-3
1.2.2.2	Communications Standard .....	1-3
1.2.3	Versions Of The DHQ11 .....	1-4
1.2.4	Configurations .....	1-5
1.2.5	Connections .....	1-7
1.3	SPECIFICATIONS .....	1-8
1.3.1	Environmental Conditions .....	1-8
1.3.2	Electrical Requirements .....	1-9
1.3.2.1	Q-bus Loads .....	1-9
1.3.3	Performance .....	1-9
1.3.3.1	Data Rates .....	1-9
1.3.3.2	Throughput .....	1-9
1.4	SERIAL INTERFACES .....	1-10
1.4.1	Interface Standards .....	1-10
1.4.2	Line Receivers .....	1-11
1.4.3	Line Transmitters .....	1-11
1.4.4	Speed And Distance Considerations .....	1-11
1.5	FUNCTIONAL DESCRIPTION .....	1-13
1.5.1	General .....	1-13
1.5.2	Main Functions .....	1-13
1.5.3	Control Chip .....	1-13
1.5.4	OCTART Chip .....	1-14

## CHAPTER 2 INSTALLATION

2.1	SCOPE .....	2-1
2.2	UNPACKING AND INSPECTION .....	2-1
2.3	PREPARING THE DHQ11 MODULE .....	2-3
2.3.1	Address And Vector Assignment .....	2-3
2.3.2	Setting The Address Switches .....	2-3
2.3.3	Setting The Vector Switches .....	2-5
2.3.4	DHV11 Or DHU11 Programming Mode Selection .....	2-6
2.4	BUS CONTINUITY .....	2-6
2.4.1	Bus Grant Continuity Jumpers .....	2-7

2.5	PRIORITY SELECTION .....	2-8
2.5.1	DMA Request Priority .....	2-8
2.5.2	Interrupt Request Priority .....	2-8
2.5.3	Recommendations .....	2-8
2.6	INSTALLING THE DHQ11 .....	2-8
2.6.1	Installing The M3107 Module .....	2-8
2.6.2	Distribution Panels .....	2-11
2.6.3	Installing The EIA-232-D Distribution Panels .....	2-11
2.6.4	Installing The DEC423 Distribution Panels .....	2-11
2.7	INSTALLATION TESTING .....	2-12
2.7.1	Installation Tests On MicroPDP-11 Systems .....	2-12
2.7.2	Testing In MicroVAX II Systems .....	2-13
2.8	H3101 LOOPBACK CONNECTOR .....	2-13
2.9	CABLES AND CONNECTORS — EIA-232-D .....	2-15
2.9.1	Distribution Panel .....	2-15
2.9.2	Null Modem Cables .....	2-18
2.9.3	Full Modem Cables .....	2-19
2.10	CABLES AND CONNECTORS — DEC423 .....	2-20

### CHAPTER 3 PROGRAMMING

3.1	SCOPE .....	3-1
3.2	REGISTERS .....	3-1
3.2.1	Register Access .....	3-1
3.2.2	Register Bit Definitions .....	3-3
3.2.2.1	Control And Status Register (CSR) .....	3-3
3.2.2.2	Receive Buffer (RBUF) .....	3-6
3.2.2.3	Transmit Character Register (TXCHAR) .....	3-8
3.2.2.4	Receive Timer Register (RXTIMER), DHU11 Mode Only .....	3-8
3.2.2.5	Line-Parameter Register (LPR) .....	3-9
3.2.2.6	Line-Status Register (STAT) .....	3-12
3.2.2.7	FIFO Size Register (FIFOSIZE), DHU11 Mode Only .....	3-14
3.2.2.8	FIFO Data Register (FIFODATA), DHU11 Mode Only .....	3-14
3.2.2.9	Line-Control Register (LNCTRL) .....	3-15
3.2.2.10	Transmit Buffer Address Register Number 1 (TBUFFAD1) .....	3-19
3.2.2.11	Transmit Buffer Address Register Number 2 (TBUFFAD2) .....	3-19
3.2.2.12	Transmit DMA Buffer Counter (TBUFFCT) .....	3-20
3.3	PROGRAMMING FEATURES .....	3-22
3.3.1	Initialization .....	3-22
3.3.2	Configuration .....	3-23
3.3.3	Transmitting .....	3-23
3.3.3.1	DMA Transfers .....	3-23
3.3.3.2	Programmed I/O (DHV11 Mode) .....	3-24
3.3.3.3	Programmed I/O (DHU11 Mode) .....	3-24
3.3.4	Receiving .....	3-24
3.3.5	Interrupt Control .....	3-25
3.3.6	Auto XON And XOFF .....	3-25
3.3.6.1	IAUTO .....	3-26
3.3.6.2	FORCE.XOFF .....	3-26
3.3.6.3	OAUTO .....	3-26
3.3.6.4	DISAB.XRPT .....	3-27
3.3.7	Error Indication .....	3-27

3.3.8	Modem Control .....	3-27
3.3.9	Maintenance Programming .....	3-28
3.3.10	Diagnostic Codes .....	3-28
3.3.10.1	Self-Test Diagnostic Codes .....	3-28
3.3.10.2	Interpretation Of Self-Test Codes .....	3-28
3.3.10.3	Skipping Self-Test .....	3-29
3.3.10.4	Background Monitor Program (BMP) .....	3-30
3.4	PROGRAMMING EXAMPLES .....	3-31
3.4.1	Resetting The DHQ11 .....	3-31
3.4.2	Configuration .....	3-32
3.4.3	Transmitting .....	3-33
3.4.3.1	Single-Character Programmed Transfer (DHU11 Mode) .....	3-33
3.4.3.2	Single-Character Programmed Transfer (DHV11 Mode) .....	3-34
3.4.3.3	DMA Transfer .....	3-35
3.4.3.4	Aborting A Transmission .....	3-36
3.4.4	Receiving .....	3-37
3.4.5	Auto XON And XOFF .....	3-39
3.4.6	Checking Diagnostic Codes .....	3-41

#### CHAPTER 4 TROUBLESHOOTING

4.1	SCOPE .....	4-1
4.2	PREVENTIVE MAINTENANCE .....	4-1
4.3	TROUBLESHOOTING PROCEDURES .....	4-1
4.4	INTERNAL DIAGNOSTICS .....	4-2
4.4.1	Self-Test .....	4-2
4.4.2	Background Monitor Program (BMP) .....	4-3
4.5	MicroPDP-11 DIAGNOSTICS .....	4-3
4.5.1	User-Mode Diagnostics .....	4-3
4.5.1.1	Running User-Mode Tests .....	4-3
4.6	MicroVAX II DIAGNOSTICS .....	4-3
4.6.1	User-Mode Tests .....	4-4
4.7	FIELD-REPLACEABLE UNITS (FRUs) .....	4-5

#### APPENDIX A MODEM CONTROL

A.1	SCOPE .....	A-1
A.2	MODEM CONTROL .....	A-1
A.2.1	Example Of Auto-Answer Modem Control For The PSTN .....	A-2

#### APPENDIX B FLOATING ADDRESSES

B.1	FLOATING DEVICE ADDRESSES .....	B-1
B.2	FLOATING VECTORS .....	B-3

#### APPENDIX C AUTOMATIC FLOW CONTROL

C.1	OVERVIEW .....	C-1
C.2	CONTROL OF TRANSMITTED DATA .....	C-1
C.3	CONTROL OF RECEIVED DATA .....	C-2
C.3.1	Flow Control By The Level Of The Receive FIFO .....	C-2
C.3.2	Flow Control By Program Initiation .....	C-4

C.3.3	Mixing The Two Types Of Received-Data Flow Control .....	C-5
-------	--	-----

**APPENDIX D GLOSSARY OF TERMS**

D.1	SCOPE .....	D-1
D.2	GLOSSARY .....	D-1

**APPENDIX E DHQ11 Q-BUS CONNECTIONS**

**FIGURES**

<b>Figure No.</b>	<b>Title</b>	<b>Page</b>
1-1	Layout of the DHQ11 Module .....	1-4
1-2	Example of a DHQ11 Configuration .....	1-6
1-3	DHQ11 Connections (EIA-232-D) .....	1-7
1-4	DHQ11 Connections (DEC423) .....	1-8
1-5	DHQ11 Functional Block Diagram .....	1-15
2-1	Location of Switchpacks .....	2-4
2-2	Setting the Device Address .....	2-5
2-3	Setting the Vector Address .....	2-6
2-4	Bus Grant Continuity .....	2-7
2-5	Installing the DHQ11 (EIA-232-D) .....	2-10
2-6	Installing the DHQ11 (DEC423) .....	2-10
2-7	I/O Insert Panels and Adapter Plate (EIA-232-D) .....	2-11
2-8	I/O Insert Panel (DEC423) .....	2-12
2-9	H3101 Loopback Connector .....	2-14
2-10	H3173-A Circuit Diagram .....	2-16
2-11	Null Modem Cable Connections .....	2-19
3-1	Register Coding .....	3-3
4-1	Troubleshooting DEC423 Installations .....	4-2
C-1	Transmitted Data Flow Control .....	C-2
C-2	Receive FIFO-Level Flow Control .....	C-3
C-3	Program-Initiated Flow Control .....	C-4

**TABLES**

<b>Table No.</b>	<b>Title</b>	<b>Page</b>
1-1	EIA/CCITT Signal Relationships .....	1-10
1-2	Maximum Distance Guidelines for DHQ11 .....	1-12
2-1	DHQ11 Options .....	2-2
2-2	H3173-A Connections .....	2-17
2-3	Serial-Line Connections for the 36-Pin Connector .....	2-20
3-1	DHQ11 Registers in DHV11 Mode .....	3-2
3-2	DHQ11 Registers in DHU11 Mode .....	3-2
3-3	Data Rates .....	3-11
3-4	DHQ11 Self-Test Error Codes .....	3-28
A-1	Modem Control Leads .....	A-1
B-1	Floating Device Address Assignments .....	B-1
B-2	Floating Vector Address Assignments .....	B-3
E-1	DHQ11 Q-Bus Connections .....	E-1

## PREFACE

The *DHQ11 User Guide* provides reference information on physical layout, system configuration, installation and testing, programming characteristics, and maintenance. There is a glossary of technical terms generally used in DIGITAL technical manuals. The manual is divided into four chapters as follows:

**CHAPTER 1 INTRODUCTION.** This chapter gives a physical description of the DHQ11, explains how it can be configured, and explains how it interfaces with the system bus and serial data lines.

**CHAPTER 2 INSTALLATION.** Chapter 2 describes how to install a DHQ11 option, with detailed information on device and vector address selection, backplane positioning, cables and connectors, and testing after installation.

**CHAPTER 3 PROGRAMMING.** This chapter describes the DHQ11 registers. Some programming examples are also included.

**CHAPTER 4 TROUBLESHOOTING.** Chapter 4 explains maintenance strategy, and how to use diagnostic programs to locate a faulty module.

**APPENDICES.** These include additional information on topics discussed in this manual:

APPENDIX A	—	MODEM CONTROL
APPENDIX B	—	FLOATING ADDRESSES
APPENDIX C	—	AUTOMATIC FLOW CONTROL
APPENDIX D	—	GLOSSARY OF TERMS
APPENDIX E	—	DHQ11 BUS CONNECTIONS

This revision of the manual contains new information. The DHQ11 can operate in two different modes, making it compatible with software drivers written for either the DHV11 or the DHU11. Revision -001 of this manual contained information on DHV11 mode of operation only.



# CHAPTER 1 INTRODUCTION

## 1.1 SCOPE

This chapter gives an overview of the DHQ11 asynchronous multiplexer, describes the features that it offers, and defines its physical parameters and electrical requirements.

## 1.2 OVERVIEW

### 1.2.1 General Description

The DHQ11 option is a serial-line interface which provides eight full-duplex serial data channels on Q-bus systems. The DHQ11 option consists of a single Q-bus module, and one of two groups of cabinet kits, depending on the communication standard supported. The cabinet kits contain the cabinet bulkhead panels and connecting cables.

The main application of the DHQ11 is for interactive terminal handling; it can also be used for data concentration and real-time processing. It has two programming modes, DHV11 and DHU11. The register sets in these modes are compatible with those of the DHV11 and DHU11 respectively. The preferred mode of operation is DHU11 mode. The main features of the DHQ11 are:

- Eight full-duplex asynchronous data channels
- For transmission: DMA transfers; or for each line, program transfers to a 1-character transmit buffer in DHV11 mode, or to a 64-character transmit FIFO in DHU11 mode
- For receive: a 256-entry FIFO buffer for received characters, dataset status changes, and diagnostic information
- It supports EIA-232-D/V.28 or DEC423, with the appropriate cabinet kit.

### NOTE

**DEC423 is a term used in this manual to indicate a data-leads-only implementation of the RS-423-A electrical standard. DEC423 uses MMJ connectors instead of the 37-way connectors specified by RS-449.**

- It is compatible with all DIGITAL DHV11 and DHU11 device drivers
- It can auto-answer on a switched line
- The transmit and receive baud rates for each line can be individually programmed
- It has a total module throughput of 60,000 characters per second, using 8-bit characters, with all channels operating at 38.4 kbaud for both character reception and transmission

- The DHQ11 supports 16-, 18-, or 22-bit addressing, including block-mode data transfer with suitable memories
- The DHQ11 can be programmed to filter XON/XOFF characters from the received data flow
- Self-test and background monitor testing
- Dual-height module, M3107
- Switchpacks for selecting the Q-bus base address, vector address and DHV11 or DHU11 programming mode.

All other functions are selected by program.

**1.2.1.1 Modem Control Facility** – All eight channels have sufficient modem control to allow auto-answer dial-up operation over the public switched telephone network using suitable modems, such as DIGITAL's DF124, or Bell models 103, 113, 212. Equivalent modems from other manufacturers can also be used. The DHQ11 is designed to minimize software requirements for modem link control. Appendix A gives further information on modem control. Modem control can be used for driving modems over both public and private lines. Please note that, in some countries, modems must be approved by the PTT for that country for connection to the public network.

**1.2.1.2 Self-Test Facility** – The DHQ11 incorporates self-test sequencers which operate independently of the host. The result of the self-test is provided to the host system through the receive FIFO buffer. A green LED indicates GO/NO-GO status for the device. More details are given in Section 4.3.

**1.2.1.3 Diagnostic Programs** – A full range of diagnostic programs is available. These run under the MicroPDP-11 diagnostic supervisor or MicroVAX II maintenance system. Loopback test connectors are not needed when running the user-mode diagnostics. Service-mode diagnostics and loopback connectors are available from DIGITAL.

**1.2.1.4 Preventing Data Loss** – The DHQ11 can be programmed for automatic XON and XOFF operation, to prevent the loss of data at high throughput. The reporting of received XON/XOFF characters to the software driver can be enabled or disabled.

## **1.2.2 Physical Description**

The DHQ11 is an M3107 dual-height Q-bus module. It is 21.6 cm (8.51 inches) long and 13.2 cm (5.19 inches) wide. Figure 1-1 shows the layout. Connectors A and B are for the Q-bus, while connectors J1 and J2 interface to the communications lines via BC05L-xx cables and distribution panels. Two distribution panels are supplied with an EIA-232-D option, and a single panel is supplied with a DEC423 option. Connector J3 provides power to the active distribution panel supplied with DEC423 options. This connector is not used with EIA-232-D options. Mixed use, that is, one EIA-232-D and one DEC423 panel connected to a single module, is not supported by DIGITAL.

**1.2.2.1 On-Board Switchpacks** – The DHQ11 has two on-board switchpacks to select the following functions.

- Switchpack E-19 (10-position)

Switch 1 selects DHV11 programming mode when **closed**, or DHU11 programming mode when **open**.

Switches 2 to 10 select the device address.

- Switchpack E-11 (8-position)


Switch 1 enables the on-board oscillator. This is a manufacturing test switch, and is closed for normal operation.

Switch 2 selects manufacturing self-test mode. This is a manufacturing test switch, and is open for normal operation.

Switches 3 to 8 select the device vector address.

Chapter 2 gives further information about these switchpacks.

**1.2.2.2 Communications Standard** – The serial drivers on the M3107 module are compatible with EIA-232-D. However, the CK-DHQ11-W cabinet kits provide level conversion for DEC423.

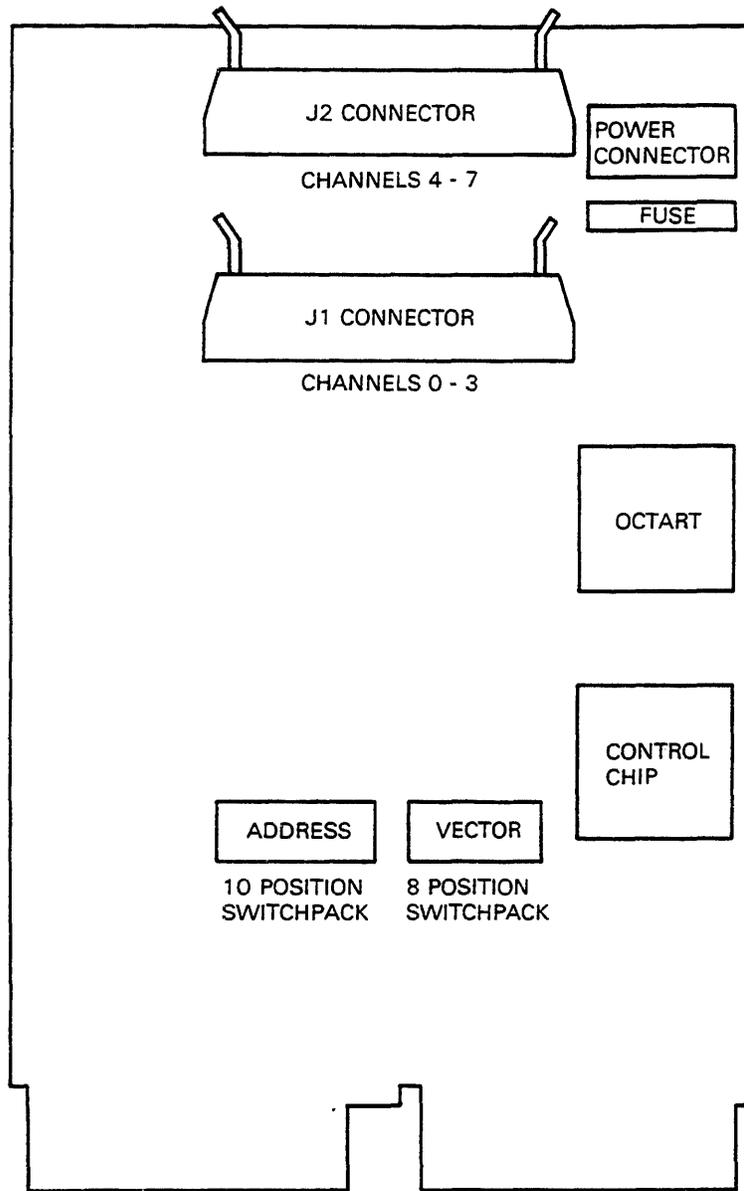

RE3200

Figure 1-1 Layout of the DHQ11 Module

### 1.2.3 Versions Of The DHQ11

The DHQ11-M option consists of the M3107 Q-bus module and the *User Guide*. It can be used with one of six cabinet kits. The choice of kit depends on the type of system cabinet, and on whether a EIA-232-D or a DEC423 communication interface is needed.

The cabinet kits available for use with the DHQ11-M are:

**EIA-232-D**


- CK-DHQ11-AA for BA123/BA11-M boxes
- CK-DHQ11-AB for BA23 boxes
- CK-DHQ11-AF for H9642 cabinets

**DEC423**

- CK-DHQ11-WA for BA123/BA11-M boxes
- CK-DHQ11-WB for BA23 boxes
- CK-DHQ11-WF for H9642 cabinets

**1.2.4 Configurations**

The DHQ11 can be used in many different system configurations. Figure 1-2 shows a typical EIA-232-D application.

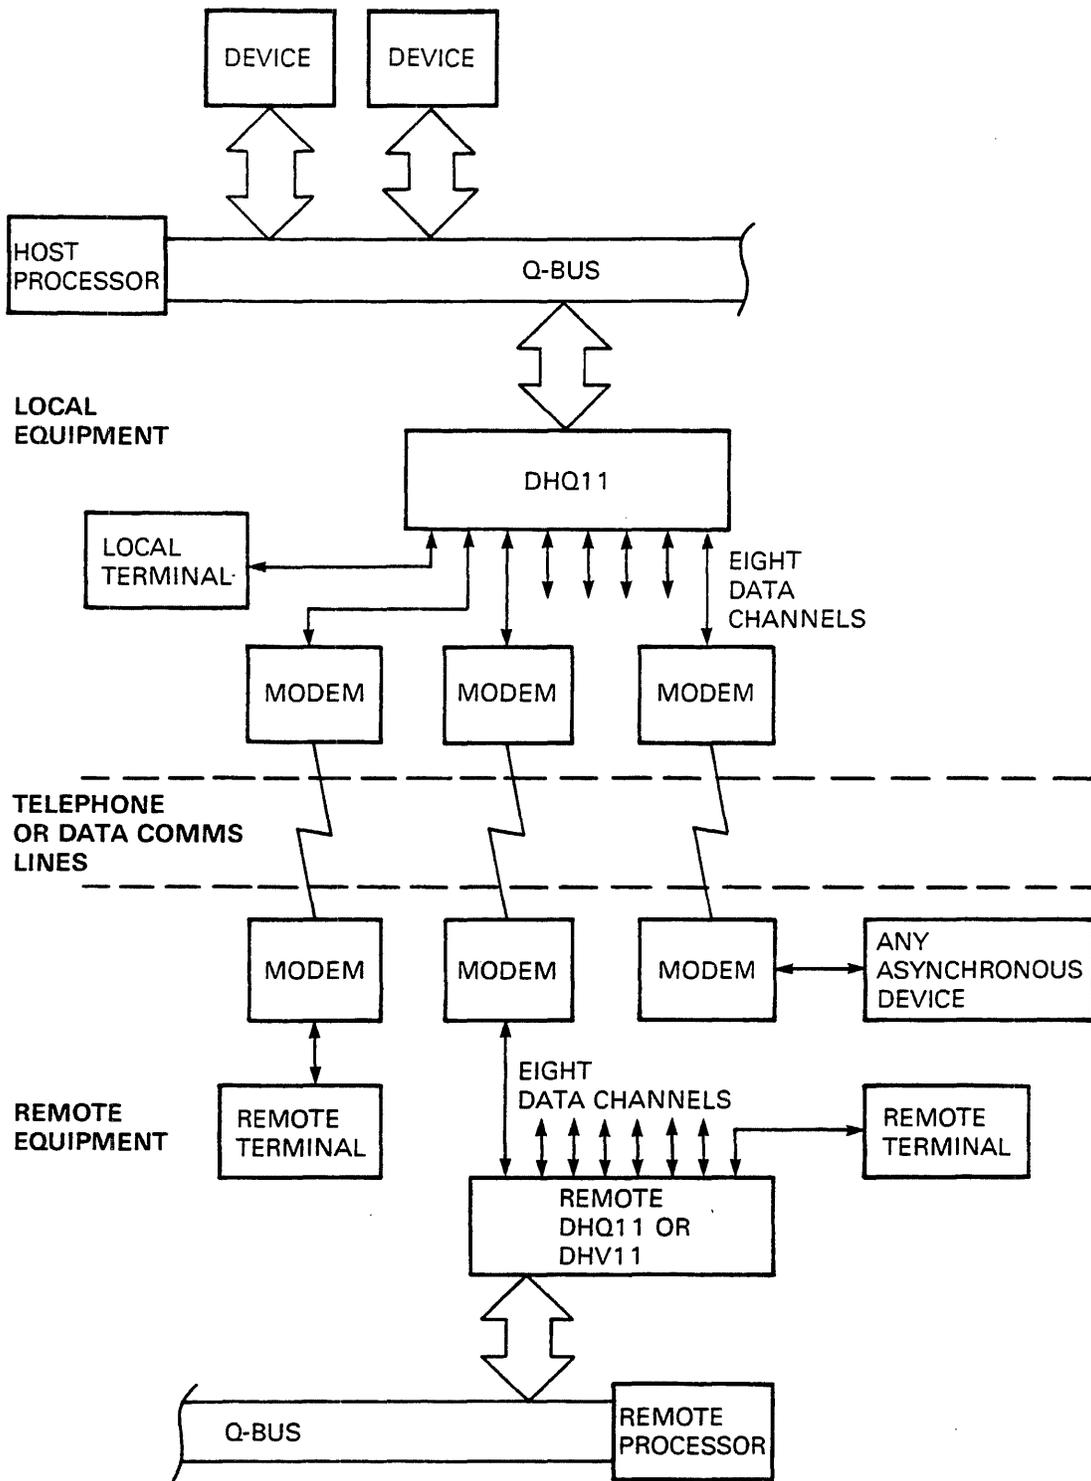


RE1703

Figure 1-2 Example of a DHQ11 Configuration

### 1.2.5 Connections


The DHQ11 module is connected directly to the Q-bus by connectors A and B. Figures 1-3 and 1-4 show the interconnections for EIA-232-D and DEC423.

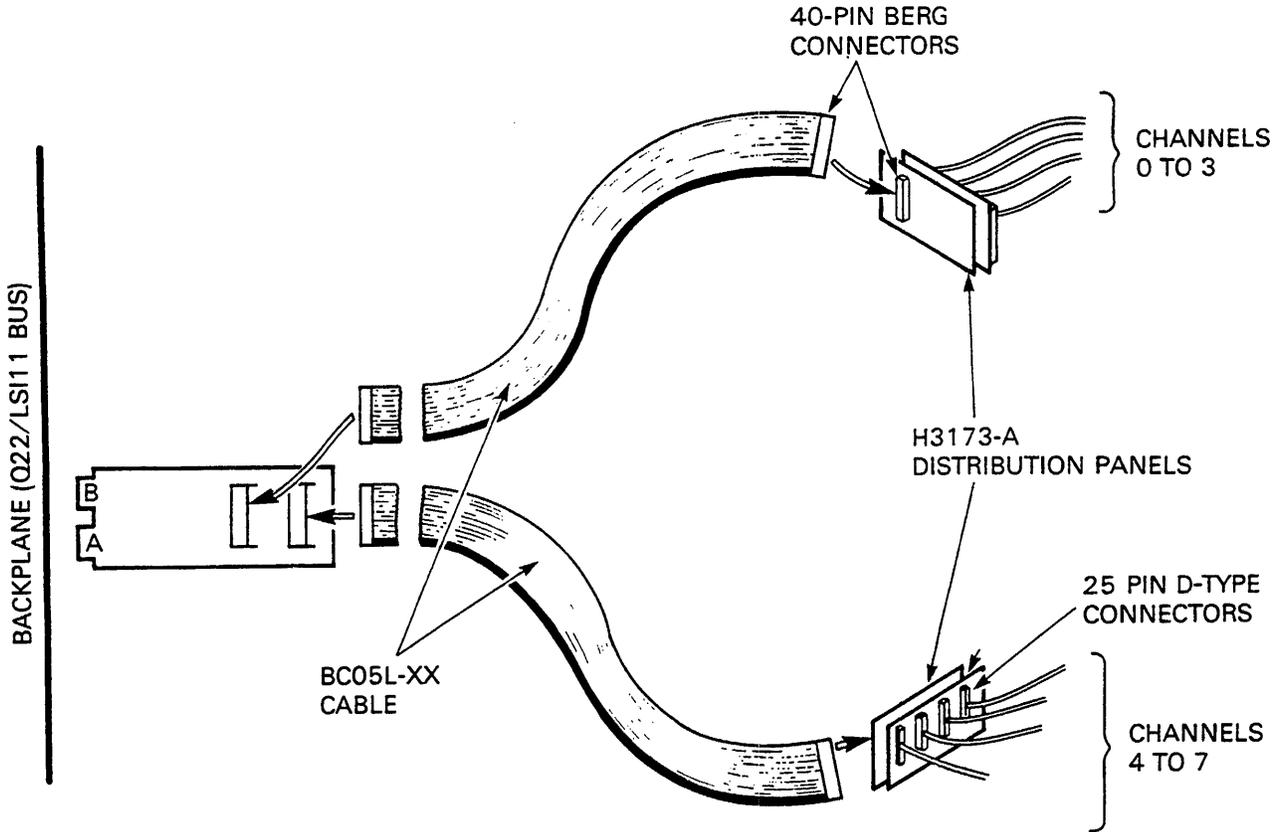

NOTE: BC05L-01 = 30 cm (12 INCHES)  
BC05L-1K = 53 cm (21 INCHES)  
BC05L-03 = 92 cm (36 INCHES)

RES

Figure 1-3 DHQ11 Connections (EIA-232-D)

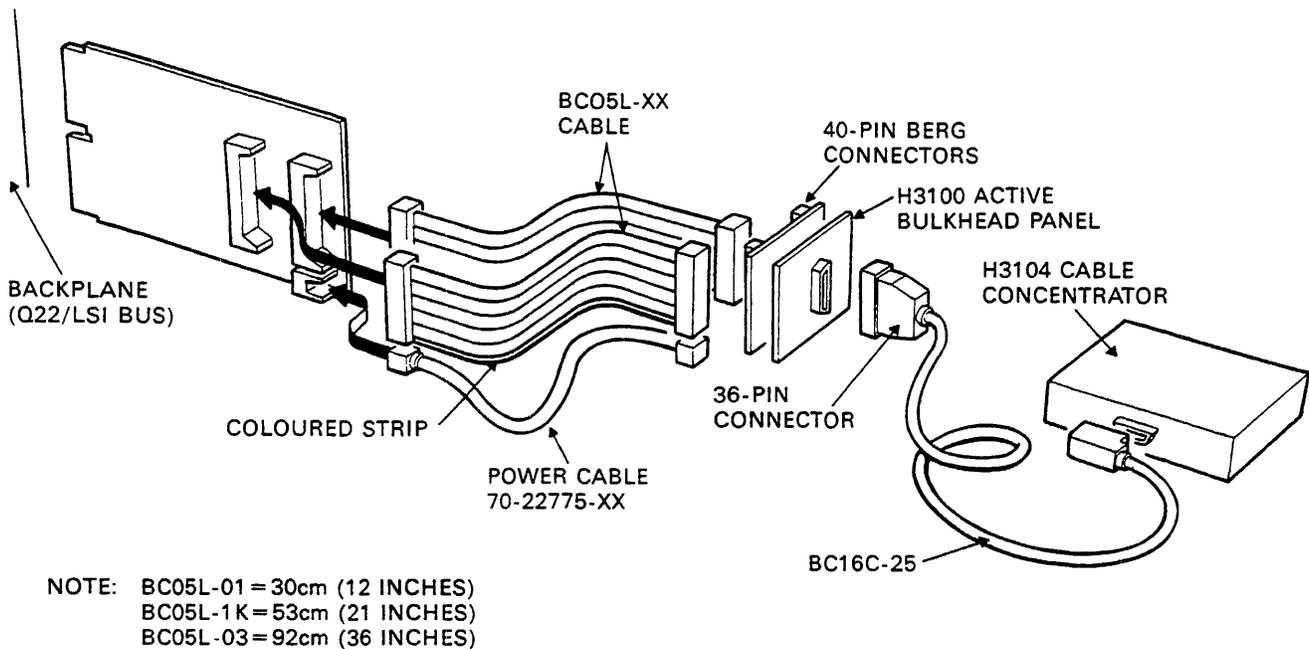

RE3201

Figure 1-4 DHQ11 Connections (DEC423)

### 1.3 SPECIFICATIONS

#### 1.3.1 Environmental Conditions

The following environmental constraints for storage and operation apply to the DHQ11.

- The storage temperature must be within the range  $-40$  degrees C to  $66$  degrees C ( $-40$  degrees F to  $151$  degrees F).
- The operating temperature must be within the range  $5$  degrees C to  $60$  degrees C ( $41$  degrees F to  $140$  degrees F).
- When operating, the relative humidity must be within the range 10 percent to 95 percent, non-condensing, at a maximum wet-bulb temperature of  $32$  degrees C and a minimum dew point of  $2$  degrees C.

DIGITAL normally defines the operating temperature range for a system as  $5$  degrees C to  $50$  degrees C ( $41$  degrees F to  $122$  degrees F); the  $10$  degrees C difference between the upper limits quoted allows for the temperature gradient within the system box.

The maximum operating temperatures must be derated by 1.8 degrees C/1000 m above sea level (1 degree F/1000 ft) for operation at high-altitude sites.

### 1.3.2 Electrical Requirements

The DHQ11 needs the following electrical supplies.

- For EIA-232-D options: 5 volts dc plus or minus 5 percent at 1.7 A maximum current, 1.4 A typical
- For DEC423 options: 5 volts dc plus or minus 5 percent at 2.2 A maximum current, 1.9 A typical
- For EIA-232-D and DEC423 options: 12 volts dc plus or minus 5 percent at 300 mA maximum, 230 mA typical

An on-board switched-mode power supply generates a -10 V supply for the serial-line drivers.

**1.3.2.1 Q-bus Loads** – The loads applied to the Q-bus are:

- 3.2 ac loads
- 0.5 dc loads

### 1.3.3 Performance

**1.3.3.1 Data Rates** – Each channel can be separately programmed to operate at one of 16 speeds (in bits/s):

50	1800
75	2000
110	2400
134.5	4800
150	7200
300	9600
600	19200
1200	38400

#### NOTE

**See also Section 1.4.4 (Speed and Distance Considerations).**

Chapter 3 contains further information on data rates for EIA-232-D.

**1.3.3.2 Throughput** – Each channel is capable of full-duplex operation at the maximum data rate. The following maximum throughput is obtainable:

- At 7 bits per character, with 1 start bit, 1 stop bit, and 1 parity bit, the throughput is 61440 characters per second.
- At 5 bits per character, with 1 start bit, 1 stop bit, and no parity, the throughput is 87771 characters per second.

This throughput may be limited by your driver software.

## 1.4 SERIAL INTERFACES

### 1.4.1 Interface Standards

The DHQ11 provides modem control signals which conform to EIA/CCITT standard EIA-232-D/V.24. The electrical characteristics of the data signal lines conform either to EIA-232-D/V.24 or to RS-423-A/V.28, depending on which cabinet kit is fitted. The interface is compatible with X.26/V.10 standards. The slew-rate requirements for RS-423-A/V.28 are different from the slew-rate requirements for X.26/V.10.

Connections to external equipment are made via 25-pin male subminiature D-type connectors, as specified for EIA-232-D, or 6-pin MMJ connectors for DEC423.

#### NOTE

**The H3173-A distribution panel does not support separate transmit and receive grounds.**

Table 1-1 shows how the signals in EIA-232-D, V.24, and RS-449 are related, and lists the pin connections for male subminiature D-type connectors.

**Table 1-1 EIA/CCITT Signal Relationships**

Signal Name		D-type Pin	EIA-232-D	Circuit CCITT V.24	Circuit RS-449
Signal Ground	(SIG GND)	7	AB	102	SG
RS-423-A Receive Common		*	RC	102B	
Transmitted Data	(TXD)	2	BA	103	SD
Received Data	(RXD)	3	BB	104	RD
Request To Send	(RTS)	4	CA	105	RS
Clear To Send	(CTS)	5	CB	106	CS
Data Set Ready	(DSR)	6	CC	107	DM
Data Terminal Ready	(DTR)	20	CD	108/2	TR
Data Carrier Detect	(DCD)	8	CF	109	RR
Ring Indicator	(RI)	22	CE	125	IC

\* Not Connected

#### **1.4.2 Line Receivers**

The DHQ11 uses octal serial-line receivers which convert line input signals to TTL levels for the OCTART. Signals are inverted by the receivers.

#### **1.4.3 Line Transmitters**

The DHQ11 uses EIA transmitters which convert TTL level signals from the OCTART and modem latches to line levels on the data and modem lines.

#### **1.4.4 Speed And Distance Considerations**

As of December 1985, the Electronics Industries Association (EIA) have replaced the "RS-" identifier for RS-232-C with "EIA". Therefore RS-232-C has been replaced by EIA-232-D. These two standards are compatible with each other. This manual uses EIA-232-D.

The RS-232-C/CCITT V.28 standard was originally designed to specify the connection between a local interface and a modem. It was not intended to be used for connecting to terminals over long distances. The maximum specified cable length is 50 feet (15 metres). Shielded cable must be used in order to meet the requirements of FCC and VDE Radio Frequency Interference (RFI) regulations.

Although cable lengths greater than 50 feet can be used with reasonable success, cable capacitance, noise and ground potential difference restrict the line speed as the distances increase. Consequently, the performance of long-distance communications to a terminal using EIA-232-D often does not meet today's requirements for terminal wiring.

DEC423 is a data-leads-only implementation of the RS-423-A/CCITT V.10 standard. RS-423-A has a different grounding and signal return path arrangement from EIA-232-D.

DEC423 uses line driver and receiver chips which have better filtering and tighter level tolerances than those specified by RS-423-A. In addition, DEC423 devices include transient suppressors for electrical overstress (EOS) and electrostatic discharge (ESD) protection. DEC423 devices may also be connected with unshielded cable.

The features provided by DEC423 devices are reliable data communication over increased distances, typically 1000 feet (300 metres) at 9600 baud. See Table 1-2 for maximum-distance guidelines.

**Table 1-2 Maximum Distance Guidelines for DHQ11**

	<b>Up to 4.8 Kb</b>	<b>9.6 Kb</b>	<b>19.2 Kb</b>	<b>38.4 Kb</b>
DEC423 to DEC423	1000 ft 300 m	1000 ft 300 m	1000 ft 300 m	500 ft 150 m
DEC423 to EIA-232-D	250 ft 75 m	200 ft 60 m	-	-

The DEC423 standard is for data-leads-only connections to terminal equipment, and is not suitable for connection to modems or other Wide Area Network equipment. The standard also specifies the use of a 6-pin Modified Modular Jack (MMJ) connector, instead of the much larger 37-pin D-type connector used with RS-423-A.

DEC423 is signal-compatible with the EIA-232-D standard when used for data-leads-only interconnection, in that interconnection between devices using the different standards is possible. However, the restrictions on the speed and distance of EIA-232-D will still apply.

DEC423 should always be used in preference to EIA-232-D for direct terminal connection over extended distances.

**NOTE**

**An H3105 active terminal adapter is necessary when using an EIA-232-D terminal with a DEC 423 interface if the longer cable lengths obtainable with DEC423 are required.**

The recommended cable for DEC423 is BC16E-XX, which is available with 6-pin MMJ plugs at each end, in lengths up to 100 feet. This cable is also available without MMJ connectors in 1000-foot reels, DIGITAL part number H8220. Unshielded four-twisted-pair cable can also be used. This is available in 1000-foot reels, DIGITAL part number H8245-A.

**NOTE**

**DEC423 to EIA-232-D is intended for local communication. In general, communication devices can become non-operational or be damaged if the total cable length exceeds 300 metres (1000 feet) for DEC423 devices. The cable should not be run outside the building, and the low-voltage data wiring must be separated from ac power wiring. The installation or sites may require additional devices to correct problems in communication.**

**NOTE**

**Under ideal conditions, DEC423 devices can drive cables considerably longer than the 1000-foot maximum stated above. However, differences in**

**ground potential, pick-up from mains ac power cabling, and risk of induced interference limit the maximum distance for reliable communications in most practical situations.**

## **1.5 FUNCTIONAL DESCRIPTION**

### **1.5.1 General**

The DHQ11 functional blocks are shown in Figure 1-5. Most of the functions are provided by two chips: the control chip and the OCTART chip.

Q-bus buffering uses six DC021 bidirectional buffers. Serial-line interface buffering uses five octal line receivers (5180) and three octal line transmitters (5170), used for data and modem signals.

A  $2k \times 8$  static RAM chip (2018D-45) provides the memory requirements. Switchpacks provide vector address and module address selection.

### **1.5.2 Main Functions**

The main functions of the DHQ11 are:

- **Transmission** — Single characters (DHV11 mode) or multiple characters (DHU11 mode) can be transmitted using programmed transfers. Characters can also be transferred by DMA.
- **Reception** — Received characters are deserialized by the OCTART and transferred to a four-character area in the RAM (one such area per line) by the control chip's OCTART sequencer, following an interrupt from the OCTART. The control chip's OCTART sequencer later removes characters from the bottom of the 4-character FIFO, and places them in the  $256 \times 16$  receive FIFO, which can be read by the host.
- **Modem Control** — The modem control latches are external to the control chip. Data is written to the latches from RAM by the OCTART interface sequencer. The sequencer also samples modem status lines every 10 milliseconds and reports on changes via the STAT register (and also via the receive FIFO, if programmed to do so).

### **1.5.3 Control Chip**

The control chip contains the following functional blocks.

- **Q-bus Interface** — Matches addresses, generates vector addresses, and handles interrupts. It also interfaces the Q-bus signals to other functional blocks
- **Data I/O Sequencer** — Controls host access to device registers
- **OCTART Sequencers** — Transfers data between the OCTART and RAM, and handles flow control
- **Self-Test/Power-Up Sequencer** — This section powers-up the module to a fixed set of initial conditions, such as 9600 baud rate on all lines; it also handles self-test
- **DMA Sequencer** — Initiates and manages all DMA data transfers to the module
- **RAM Arbitrator** — Provides RAM and OCTART bus access to the various sequencers.

#### **1.5.4 OCTART Chip**

This chip contains eight UARTs, which perform parallel-to-serial and serial-to-parallel data conversions. It interfaces with the control chip through eight registers. Four are read-only and four are write-only. An index register is used to access individual lines. The OCTART chip shares the RAM bus with the control chip, and the RAM itself. The OCTART chip also includes:

- Receive and transmit control blocks
- Interrupt logic for interfacing with the control chip
- A 16-output baud-rate generator
- All necessary line-parameter registers
- Diagnostic loopback logic
- Modem status multiplexers.

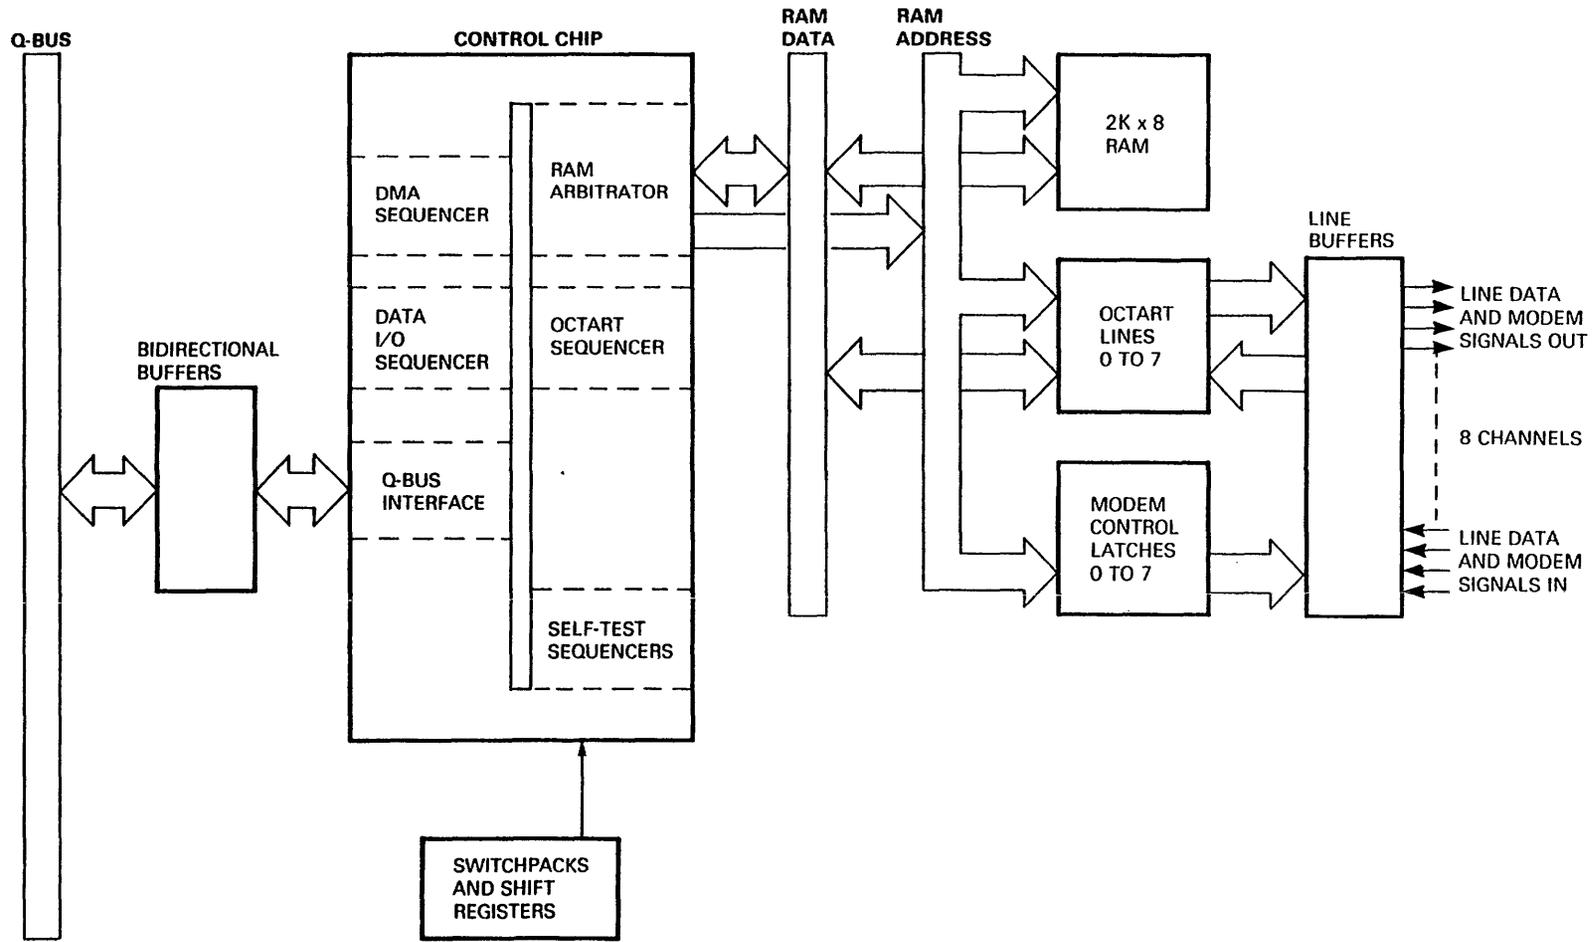


Figure 1-5 DHQ11 Functional Block Diagram



## CHAPTER 2 INSTALLATION

### 2.1 SCOPE

This chapter describes the preparation and installation of the DHQ11 option. It contains the following sections.

- Unpacking
- Preparation
- Installation
- Testing

### 2.2 UNPACKING AND INSPECTION

If ordered as part of a system, the DHQ11 will already be installed, and you should refer to the instructions for unpacking the system.

If ordered as an add-on option to an existing system, a DHQ11-M (Q-bus module) will be supplied together with a cabinet kit, distribution panels, and interconnecting cables. The choice of cabinet kit depends on the type of system and on whether EIA-232-D or DEC423 connection standards apply (Table 2-1 gives details of these options).

#### NOTE

**DEC423 is a term used in this manual to indicate a data-leads-only implementation of the RS-423-A electrical interface standard.**

If the equipment is to be installed by DIGITAL Field Service, the customer should not open the packages.

If the DHQ11 was ordered as an add-on option, find the carton marked OPEN FIRST and carefully unpack it. There is a shipping list inside the carton.

Undo each package and examine the contents for physical damage. Check that the contents of each package are complete. Report any damaged or missing items to the shipping agent and to the DIGITAL representative. Do not dispose of the packing material until the unit has been installed and is operational.

**Table 2-1 DHQ11 Options**

---

<b>DHQ11-M</b>	<b>M3107 module + DHQ11 User Guide (EK-DHQ11-UG)</b> <b>(Base Option)</b>
----------------	--

---

**EIA-232-D Cabinet Kits**

<b>CK-DHQ11-AA</b> <b>CK-DHQ11-AB</b> <b>CK-DHQ11-AF</b>	<b>BA123 boxes</b> <b>BA23 boxes</b> <b>H9624 cabinets</b>	
<b>Contents</b>		
H3173A	4-line 25-way distribution panel	2      2      2
BC05L-1K	40-way ribbon cable, 21 inch	2
BC05L-01	40-way ribbon cable, 12 inch	2
BC05L-03	40-way ribbon cable, 36 inch	2

**DEC423 Cabinet Kits**

<b>CK-DHQ11-WA</b> <b>CK-DHQ11-WB</b> <b>CK-DHQ11-WF</b>	<b>BA123 boxes</b> <b>BA23 boxes</b> <b>H9624 cabinets</b>	
<b>Contents</b>		
H3100	Active bulkhead panel	1      1      1
BC05L-1K	Ribbon cable — 2 inch	2
BC05L-01	Ribbon cable — 12 inch	2
BC05L-03	Ribbon cable — 36 inch	2
70-22775-1K	Bulkhead power cable	1
70-22775-01	Bulkhead power cable	1
70-22775-03	Bulkhead power cable	1
H3104	Cable concentrator	1      1      1
BC16C-25	Multiway cable	1      1      1
H3101	Multiway cable loopback	1      1      1

---

### **2.3 PREPARING THE DHQ11 MODULE**

Please check that your system has sufficient power and bus load capacity before installing additional modules; see your system manual. Before installing the DHQ11, you must define three parameters by selecting them on the DHQ11 on-board switchpacks. The parameters are:

- Module address
- Interrupt vector
- DHV11 or DHU11 programming mode.

#### **NOTE**

**Ensure that you are wearing an antistatic wriststrap, part number 29-11762-00.**

#### **2.3.1 Address And Vector Assignment**

The DHQ11 has a floating device address and vector. It is shipped from the factory with a device address of  $17760440_8$  and a vector of  $300_8$ . These assignments are determined by the floating address and vector rules. The factory settings are only correct if no other floating address option is installed in the system. Otherwise, the proper rules for address assignment must be applied; these are given in Appendix C.

#### **2.3.2 Setting The Address Switches**

The device address for the DHQ11 is set on the 10-position switchpack E19; the location of this switchpack is shown in Figure 2-1. Switch 1 on the switchpack is used to setup the module in DHU11 or DHV11 programming mode.


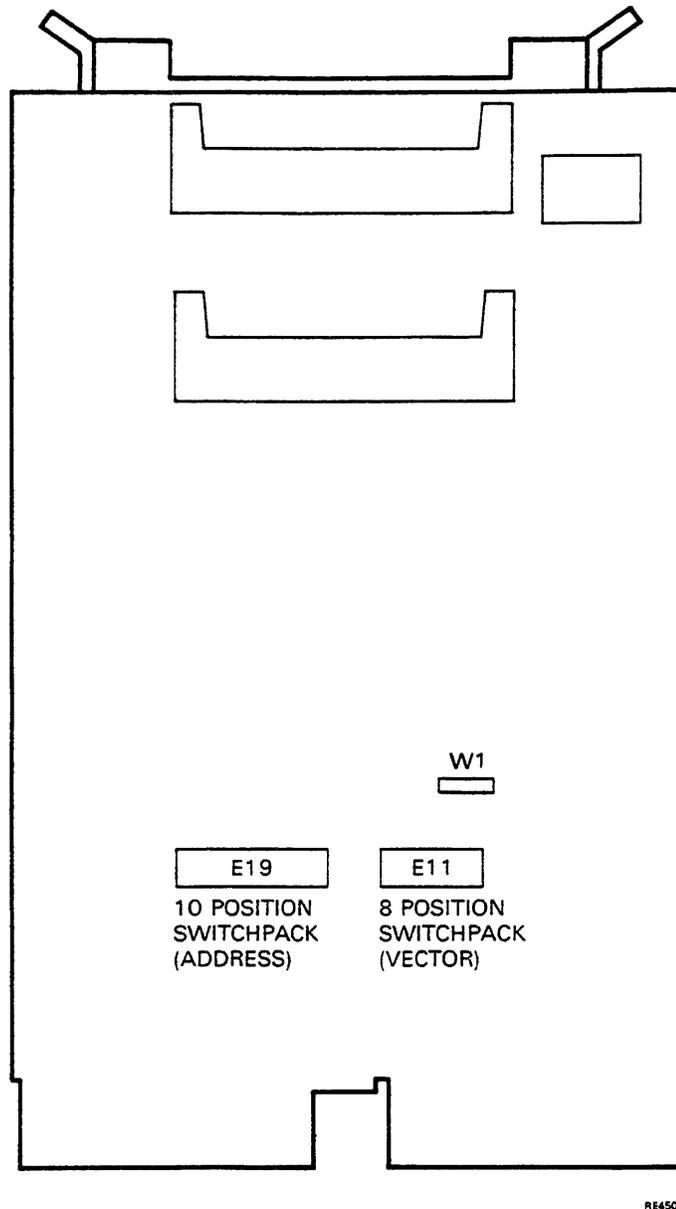


Figure 2-1 Location of Switchpacks

Figure 2-2 shows how to set the device address on the switchpack. The example shown is for the factory-set address of  $17760440_8$ .

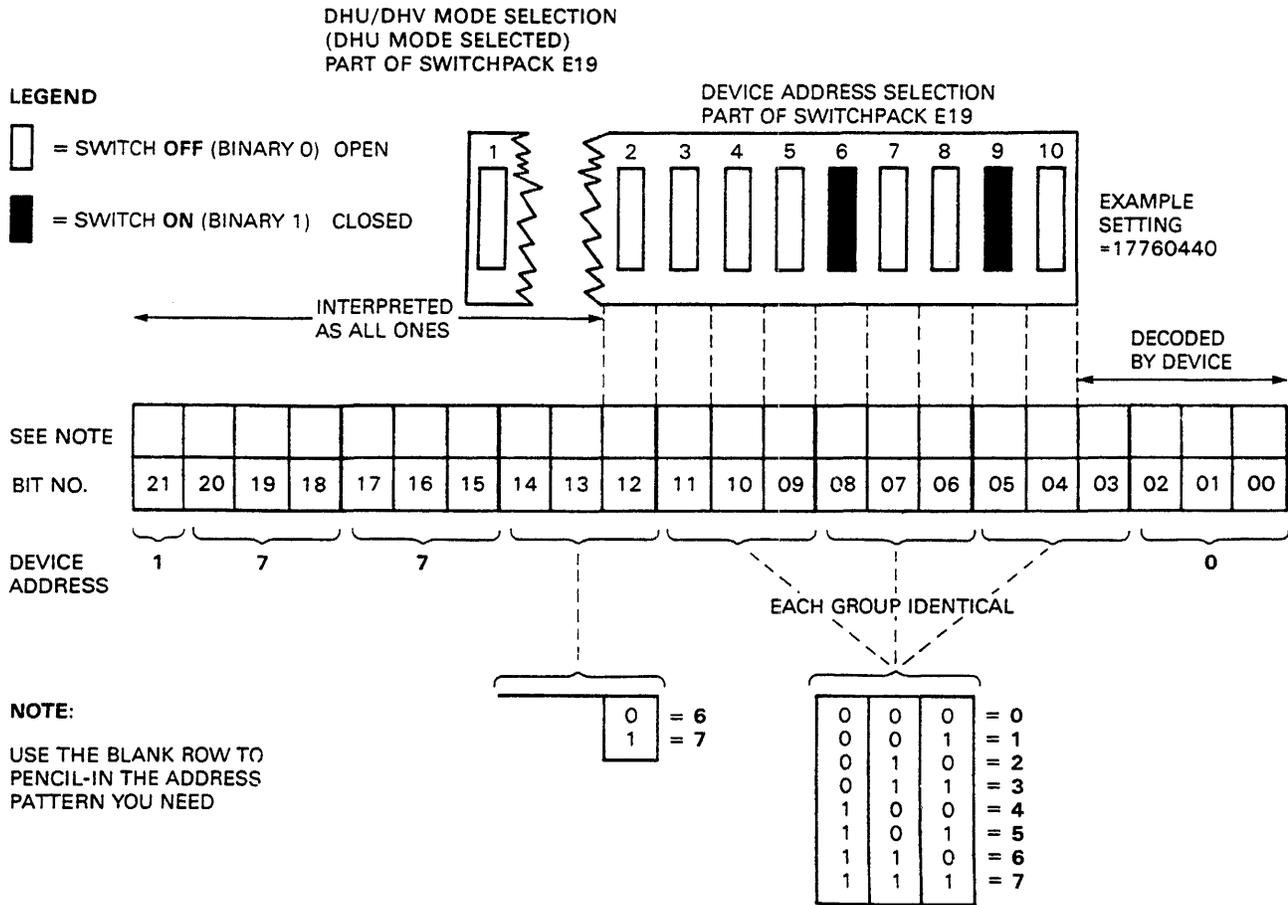


RE4504

Figure 2-2 Setting the Device Address

### 2.3.3 Setting The Vector Switches

The six high-order bits of the interrupt are set on the eight-position switchpack E11. Figure 2-1 shows the location of this switchpack. Figure 2-3 shows an example of these switches set to the factory setting of 300 (octal). Switches 1 and 2 are used during manufacture, SW-1 must be set ON (closed), and SW-2 must be set OFF (open) for correct operation of the DHQ11.

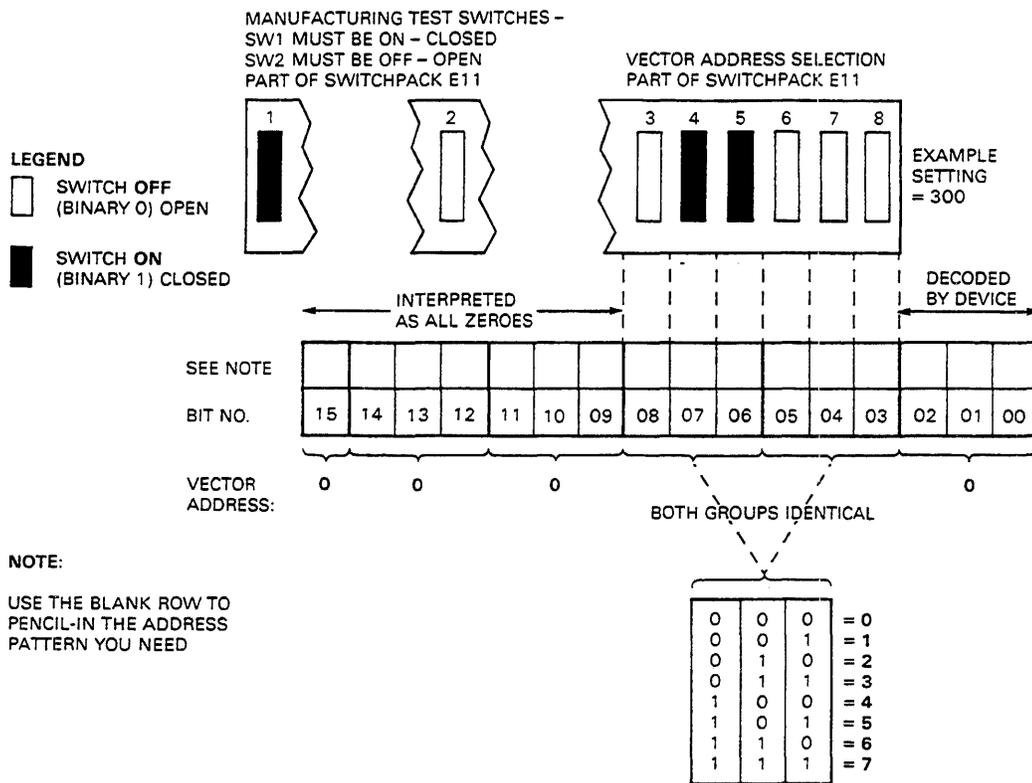

RE3224

Figure 2-3 Setting the Vector Address

### 2.3.4 DHV11 Or DHU11 Programming Mode Selection

The DHQ11 offers two separate program interfaces, DHV11 mode or DHU11 mode. Select the mode appropriate to the device driver within the system, by setting switch 1 of the on-board switchpack E19 (see Figures 2-1 and 2-2).

Modules prior to revision C1 have a jumper installed (W1), which locks the module in DHV11 mode. See figure 2-1 for the position of the jumper. Remove W1 to enable selection of DHV11 or DHU11 mode by the switch.

#### NOTE


**DHU11 programming mode generally gives better performance, because of reduced CPU overhead in transferring characters to and from the device. The Software Product Description states whether the operating system supports DHU11 programming mode.**

### 2.4 BUS CONTINUITY

Bus grant continuity jumper cards (M9047) are used in vacant backplane slots to provide bus continuity (see Figure 2-4).

**NOTE**

**To find out the type of backplane on your system,  
consult your system manual.**

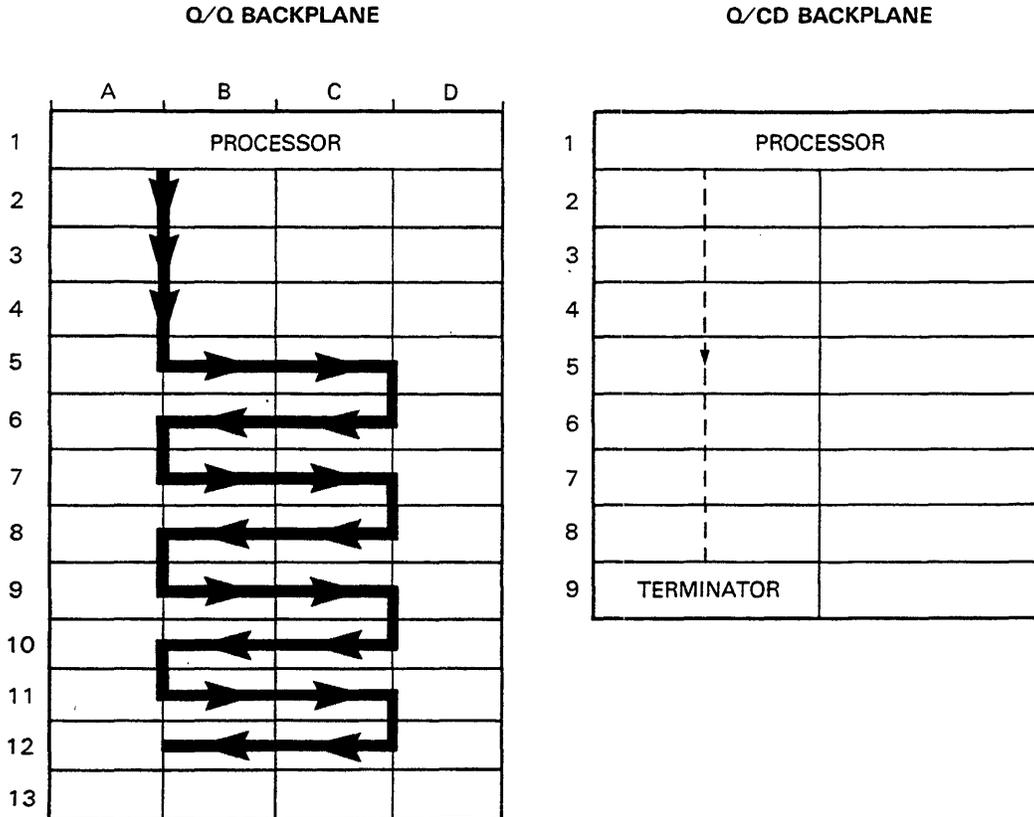

RE3202

Figure 2-4 Bus Grant Continuity

**2.4.1 Bus Grant Continuity Jumpers**

Backplanes suitable for DHQ11 fall into two groups.

**Q/CD** — Q-bus on A and B connectors, user-defined signals on C and D

**Q/Q** — Q-bus on A and B, and C and D connectors.

In Q/CD backplanes, bus grant signals pass through each installed module via the A and C connectors of each bus slot.

Q/Q backplanes are designed so that two dual-height options can be installed in a quad-height bus slot. The Q-bus lines are routed as follows.

1. AB, first slot
2. CD, first slot

3. CD, second slot
4. AB, second slot

and so on.

Each dual-height module extends the continuity of the bus grant signals BIAK and BDMG to the next module. Therefore, with a Q/Q backplane, if a quad module (DHV11) is replaced with a dual module (DHQ11), a Q-bus grant continuity card M9047 is needed for the vacant slot.

## **2.5 PRIORITY SELECTION**

The bus (backplane) position may be a compromise between DMA and interrupt priority requirements. As a general rule, consider DMA request priorities first, and then consider interrupt (bus) requests.

### **2.5.1 DMA Request Priority**

DMA request priority is usually assigned according to throughput. Faster devices (higher throughput) usually have priority over slower DMA devices; for example, disk has priority over tape, which itself has priority over communications devices. This is because fast devices usually reach overrun or underrun conditions sooner than slower ones.

### **2.5.2 Interrupt Request Priority**

The DHQ11 has a fixed interrupt priority level of 4, and cannot be changed to other priority levels. It does not monitor any of the higher-level interrupt request lines. Because of this, both the interrupt-request and DMA (non-processor request) priorities of the DHQ11 are selected by the position of the DHQ11 on the bus; it must therefore be positioned after any device that does monitor any of the request lines. Devices closest to the processor module have the highest priority.

### **2.5.3 Recommendations**

In general the DHQ11 bus position is not critical. However, it is recommended that you place the module after any mass-storage interfaces and high-speed synchronous communications options; these are more sensitive to bus position.

## **2.6 INSTALLING THE DHQ11**

Once you have defined the backplane position for the DHQ11, you can begin to install the DHQ11 module.

### **2.6.1 Installing The M3107 Module**

#### **WARNING**

**Shut off the system power and disconnect the main system power cord before performing any procedure in this chapter.**

#### **ATTENTION**


**Avant d'effectuer l'une des procédures de ce chapitre, mettez le système hors tension et débranchez le cordon d'alimentation.**

## VORSICHT!

Schalten Sie das System ab, und ziehen Sie das Netzkabel, bevor Sie die in diesem Kapitel beschriebenen Anweisungen ausführen.

## ATENCION

Apague el sistema y desconecte el cable principal de alimentación antes de realizar ningún procedimiento de este capítulo.

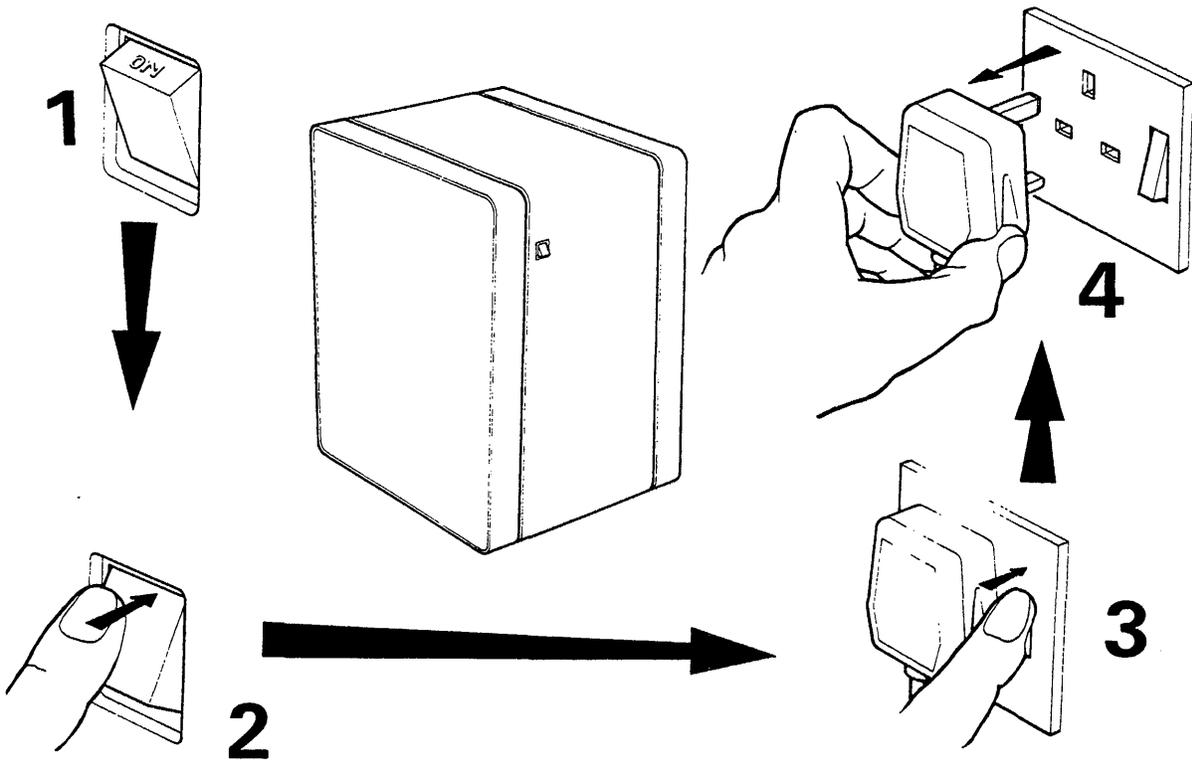


RE2848

1. Connect the BC05L cables to J1 and J2. Figure 2-5 for EIA-232-D installations and Figure 2-6 for DEC423 installations show how the parts of the option connect together.
2. Install the module in its correct backplane position as previously defined.

## NOTE

**Be careful not to snag module components on the card guides or adjacent modules.**


3. Check that bus continuity exists. If necessary, install bus grant continuity cards.
4. Do not connect the cables to the bulkhead panels.

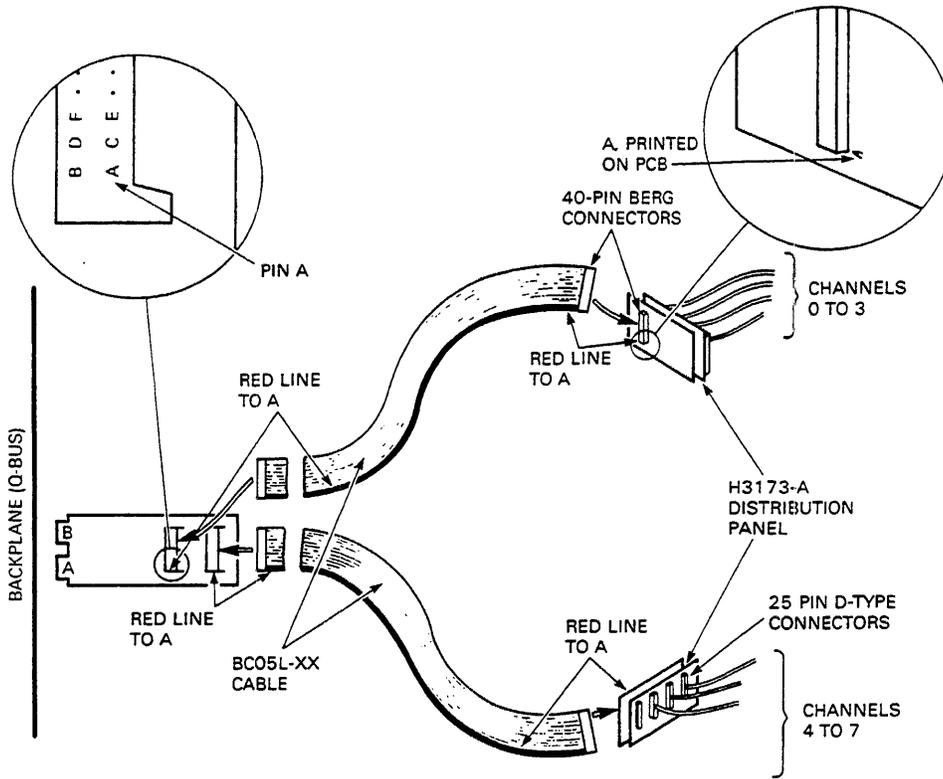

NOTE: BC05L-01 = 30.48 CM (12 INCHES)  
 BC05L-1K = 53.34 CM (21 INCHES)  
 BC05L-03 = 91.44 CM (36 INCHES)

RES

Figure 2-5 Installing the DHQ11 (EIA-232-D)

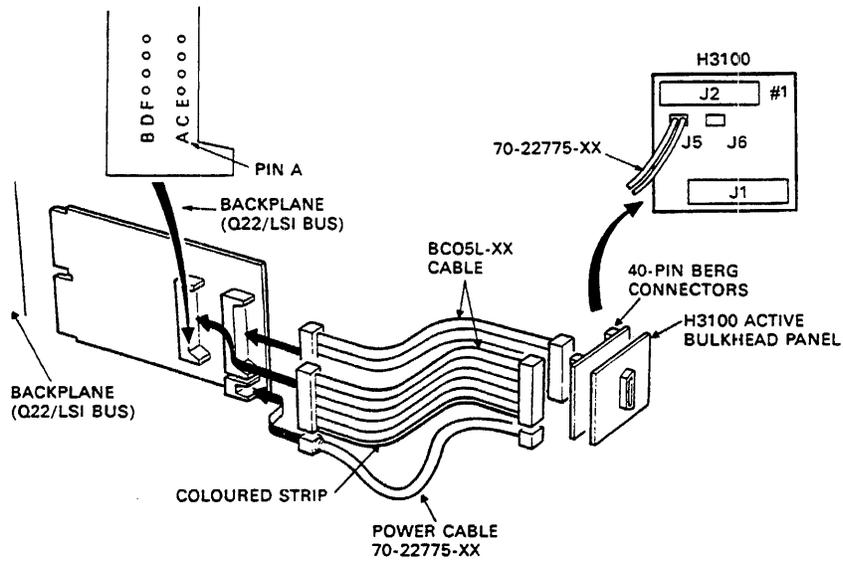

NOTE: BC05L-01 = 30cm (12 INCHES)  
 BC05L-1K = 53cm (21 INCHES)  
 BC05L-03 = 92cm (36 INCHES)

RES203

Figure 2-6 Installing the DHQ11 (DEC423)

### 2.6.2 Distribution Panels


The rear I/O distribution panel has six cutouts: two type-A cutouts and four type-B cutouts. In addition, a removable bracket between the third and fourth cutout allows you to install three more type-A insert panels by mounting an adapter plate. Figure 2-7 shows typical type-A and type-B insert panels, and the adapter plate.

### 2.6.3 Installing The EIA-232-D Distribution Panels

The DHQ11 has two type-B distribution panels. Figure 2-7 shows how these are installed in a BA23 box. Installation in BA123 and H9642 cabinets is similar.

To fit the distribution panels:

1. Remove the two type-B blanking panels.
2. Bolt the two H3173-A distribution panels into the cutouts.
3. Connect the free end of the BC05L-XX cable from connector J1 of the module to the first distribution panel.
4. Connect the free end of the BC05L-XX cable from connector J2 of the module to the second distribution panel.

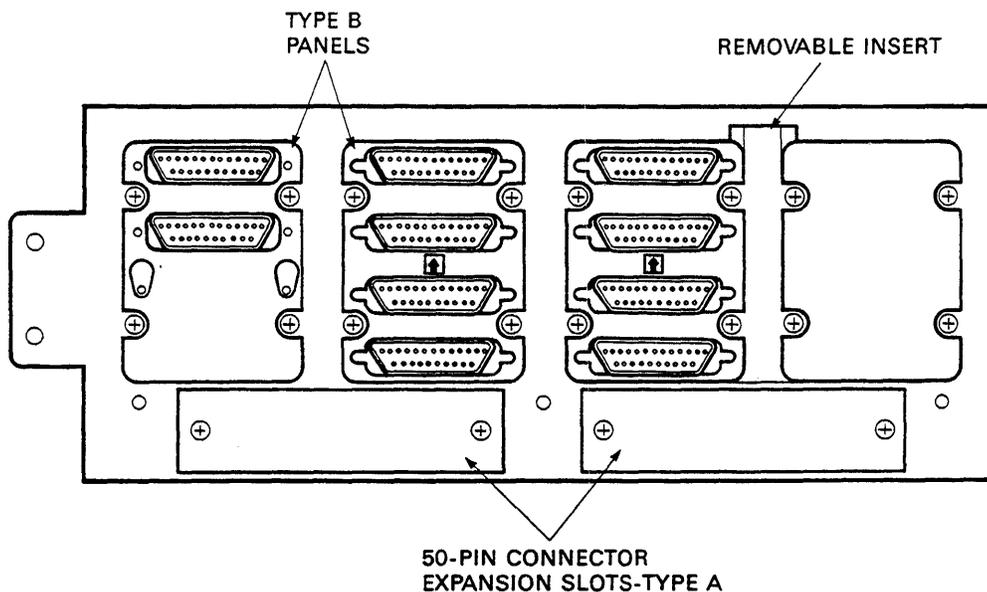

RE3204


Figure 2-7 I/O Insert Panels and Adapter Plate (EIA-232-D)

### 2.6.4 Installing The DEC423 Distribution Panels

The DHQ11 has one type-B distribution panel. Figure 2-8 shows how this is installed in a BA23 box. Installation in BA123 and H9642 cabinets is similar.

To fit the distribution panels:

1. Remove a type-B blanking panel.
2. Bolt the H3100 active distribution panel into the cutout.
3. Connect the free end of the BC05L-XX cable from connector J1 of the module to the upper (J2) connector on the distribution panel.
4. Connect the free end of the BC05L-XX cable from connector J2 of the module to the lower (J1) connector on the distribution panel.
5. Connect the free end of the power cable (70-22775-XX) to the left-hand power connector (J5) on the distribution panel.

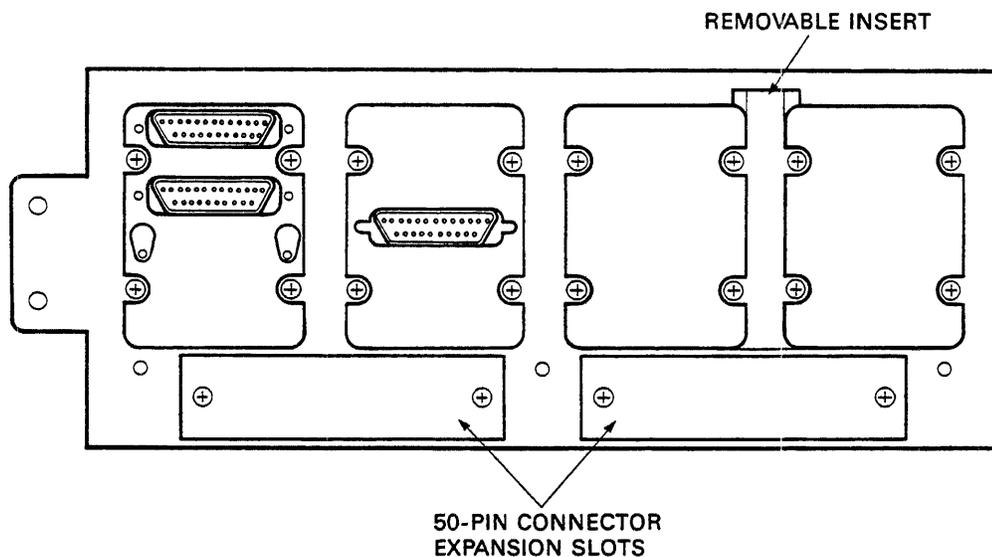

RE3205

Figure 2-8 I/O Insert Panel (DEC423)

## 2.7 INSTALLATION TESTING

This section details the diagnostics used to test the option during and after installation. The diagnostics are also used to test other Q-bus modules in the same family, for example, DHV11. The diagnostics will automatically 'size' the option to determine which one is being tested.

Both MicroPDP-11 and MicroVAX II diagnostics are described. After successful completion of the appropriate system test, the DHQ11 may be connected to external equipment. Further information on the diagnostics is given in Chapter 4.

### 2.7.1 Installation Tests On MicroPDP-11 Systems

To verify that the MicroPDP-11 system and the DHQ11 module are functioning correctly:

1. Switch on the system.
2. After 2 seconds, check that the green self-test LED on the DHQ11 module is on. If it does not come on, call DIGITAL Field Service.
3. Boot the Micro-11 Customer Diagnostic media. Refer to your *MicroPDP-11 System Manual* for further information.
4. Type 'T' at the main menu to allow the diagnostics to identify the new module, and add it to the configuration file.

#### NOTE

**Look at the list of devices displayed, and make sure that the new module is included. If it is not included, repeat the installation sequence, and make sure that the module switches have been set correctly.**

5. Type 'T' at the main menu to run the system tests. These should complete without error; if an error occurs, call DIGITAL Field Service.

A MicroPDP-11 Maintenance Kit is available, and may be ordered from your local DIGITAL office. This kit allows trained personnel to run individual diagnostic programs under the XXDP+ diagnostic monitor, and to configure and run DECX11 system test programs. The XXDP+ functional diagnostic is VHQA\*\*.BIN, and the DECX11 module is XDHV\*\*.OBJ.

#### 2.7.2 Testing In MicroVAX II Systems

To verify that the MicroVAX II system and the DHQ11 module are functioning correctly:

1. Check that the green self-test LED on the DHQ11 module is on.
2. Boot the MicroVAX Maintenance System media. Refer to your *MicroVAX II System Manual* for further information.
3. Type '2' at the main menu to show the system configuration and devices.


#### NOTE

**Look at the list of devices displayed, and make sure that the new module is included. If it is not included, repeat the installation sequence, and make sure that the module switches have been set correctly.**


4. Type '1' at the main menu to run the system tests. These should complete without error; if an error occurs, call DIGITAL Field Service.

#### 2.8 H3101 LOOPBACK CONNECTOR

The H3101 loopback connector (see Figure 2-9) is used during diagnostic tests for DEC423 installations. It is two loopback connectors in one package, and consists of a female 36-way loopback connector and a male 36-way loopback connector. It can be inserted into the cabling at the distribution panel, or at the cable concentrator. To test the cables, type characters at the keyboard and make sure that they are echoed to the screen (refer to Chapter 4).

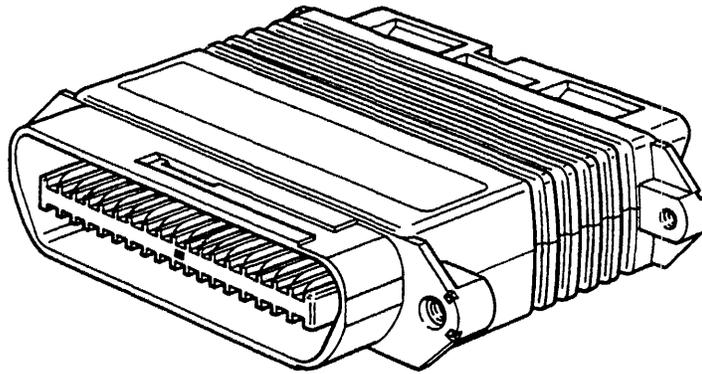

RE2439

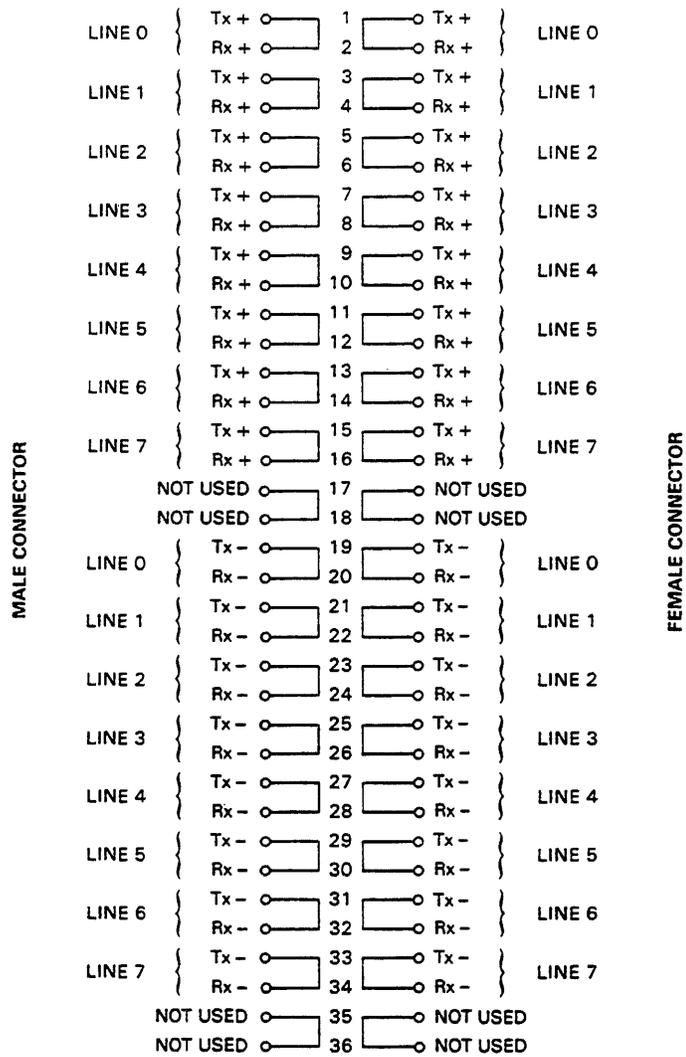

RE2436


Figure 2-9 H3101 Loopback Connector

## **2.9 CABLES AND CONNECTORS — EIA-232-D**

### **2.9.1 Distribution Panel**

Each H3173-A distribution panel adapts one of the DHQ11 Berg connectors to four subminiature D-type EIA-232-D connectors. Noise filtering is provided on each pin of the EIA-232-D connectors. This reduces electromagnetic radiation from the cables and also provides the logic with some protection against static discharge.

Figure 2-13 shows the circuit of the H3173-A. There is no CCITT equivalent of EIA circuit AA (Protective Ground). To implement this circuit, a ground strap must be installed between the H3173-A and the system cabinet. The 0-ohm link W1 (not installed at the factory) can then be installed to connect this circuit, and removed to disconnect it, as needed.

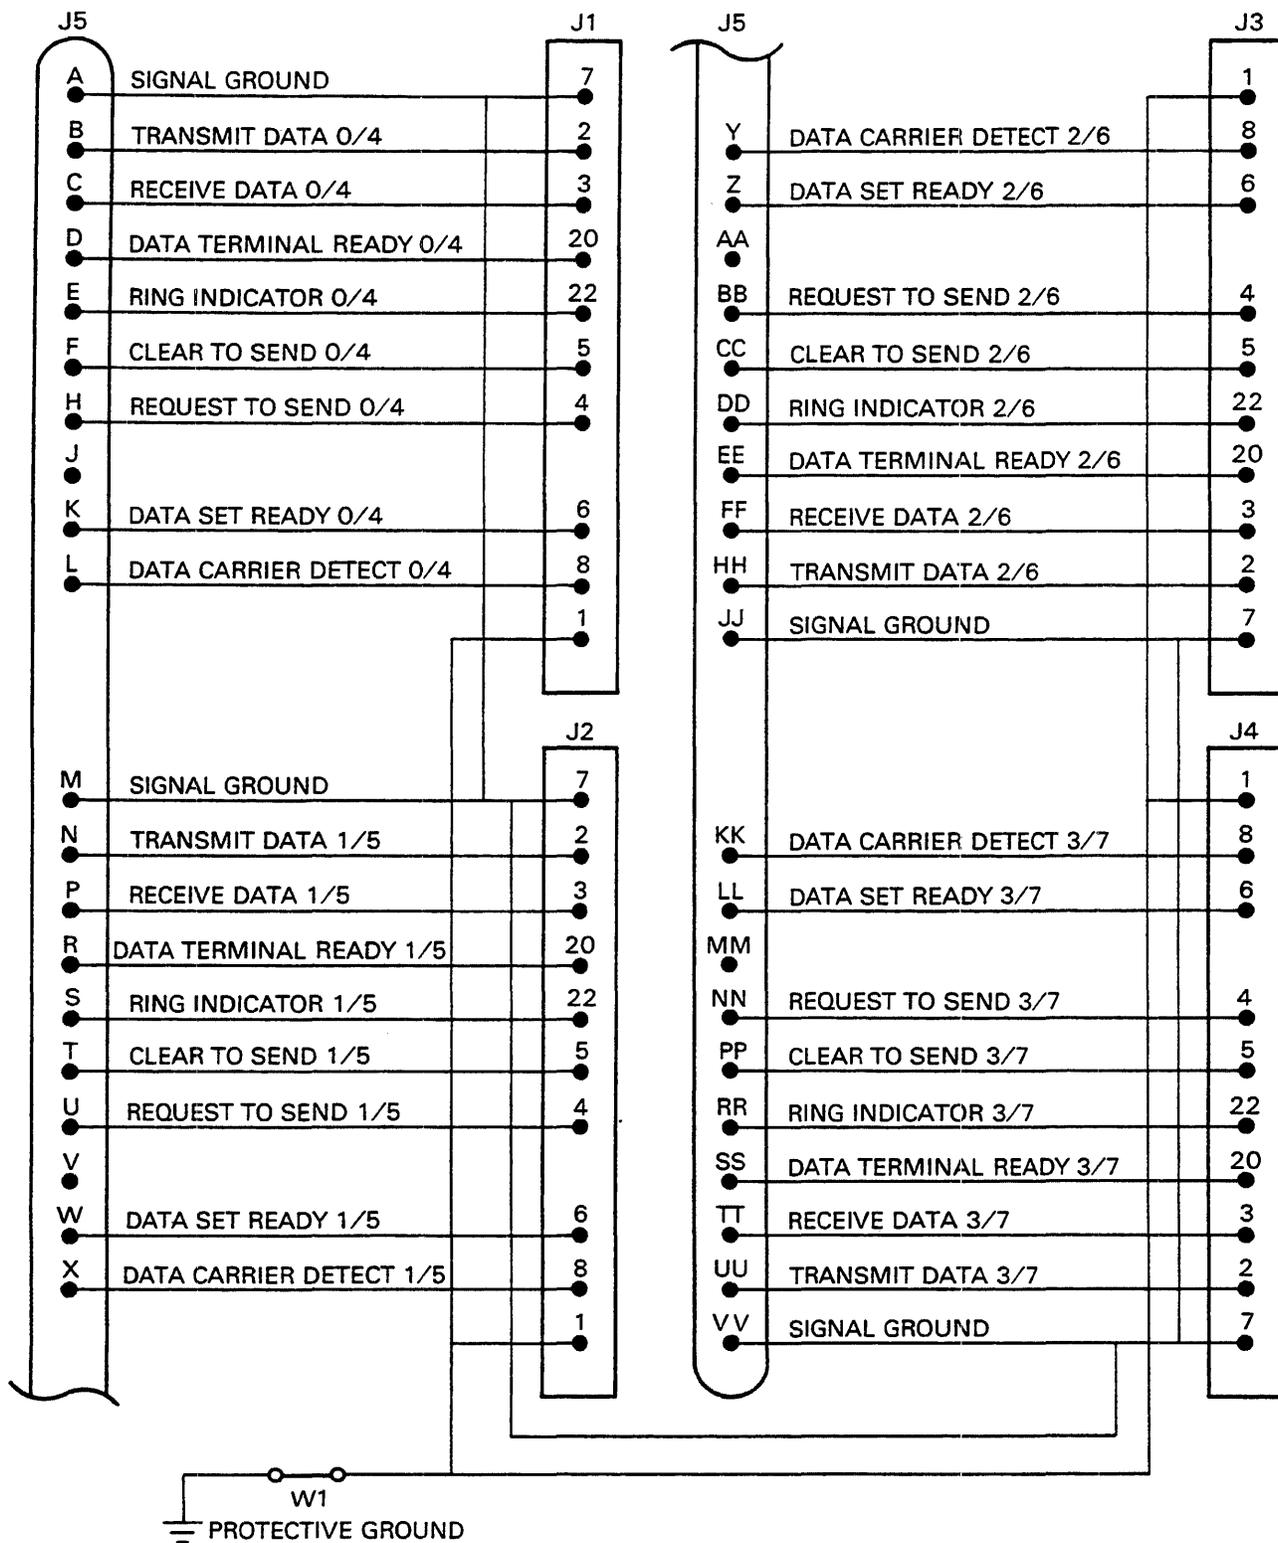

RD1147

Figure 2-10 H3173-A Circuit Diagram

Table 2-2 is for two distribution panels. The numbers within parentheses apply to channels 4 to 7.

**Table 2-2 H3173-A Connections**

Signal	Name	Circuit No.	J5 Pin No.
SIG GND 0(4)		102	1-A (2-A)
TXD0(4)	Transmitted Data	103	1-B (2-B)
RXD0(4)	Received Data	104	1-C (2-C)
DTR0(4)	Data Terminal Ready	108/2	1-D (2-D)
RI0(4)	Ring Indicator	125	1-E (2-E)
CTS0(4)	Clear to Send	106	1-F (2-F)
RTS0(4)	Request to Send	105	1-H (2-H)
DSR0(4)	Data Set Ready	107	1-K (2-K)
DCD0(4)	Data Carrier Detected	109	1-L (2-L)
SIG GND 1(5)		102	1-M (2-M)
TXD1(5)		103	1-N (2-N)
RXD1(5)		104	1-P (2-P)
DTR1(5)		108/2	1-R (2-R)
RI1(5)		125	1-S (2-S)
CTS1(5)		106	1-T (2-T)
RTS1(5)		105	1-U (2-U)
DSR1(5)		107	1-W (2-W)
DCD1(5)		109	1-X (2-X)
DCD2(6)		109	1-Y (2-Y)
DSR2(6)		107	1-Z (2-Z)
RTS2(6)		105	1-BB (2-BB)
CTS2(6)		106	1-CC (2-CC)
RI2(6)		125	1-DD (2-DD)
DTR2(6)		108/2	1-EE (2-EE)
RXD2(6)		104	1-FF (2-FF)
TXD2(6)		103	1-HH (2-HH)
SIG GND 2(6)		102	1-JJ (2-JJ)
DCD3(7)		109	1-KK (2-KK)
DSR3(7)		107	1-LL (2-LL)
RTS3(7)		105	1-NN (2-NN)
CTS3(7)		106	1-PP (2-PP)
RI3(7)		125	1-RR (2-RR)
DTR3(7)		108/2	1-SS (2-SS)
RXD3(7)		104	1-TT (2-TT)
TXD3(7)		103	1-UU (2-UU)
SIG GND 3(7)		102	1-VV (2-VV)

The following examples show how to use Table 2-2.

Signal TXD0 is the transmitted data line for channel 0; the CCITT circuit number is 103 and it is connected to J5 pin B on the first H3173-A for channels 0 to 3.

Signal TXD4 is the transmitted data line for channel 4; the CCITT circuit number is 103 and it is connected to J5 pin B on the second H3173-A for channels 4 to 7.

### 2.9.2 Null Modem Cables

Null modem cables are used for local EIA-232-D connection, when a modem is not used. Because of Federal Communications Commission (FCC) regulations, the cable specifications for the United States and Canada are different from those for non-FCC countries. Other countries may also have similar electromagnetic interference (EMI) control regulations. EMC/RFI shielded cabinets are now available for systems which conform to FCC requirements.

Recommended null modem cables are as follows.

#### 1. BC22D (for EMC/RFI shielded cabinets)

- Rounded 6-conductor fully shielded cable to FCC specification
- Subminiature 25-pin D-type female connector moulded on each end
- Lengths available:

BC22D-10	3.1 m	(10 ft)
BC22D-25	7.6 m	(25 ft)
BC22D-35	10.7 m	(35 ft)
BC22D-50	15.2 m	(50 ft)
BC22D-75	22.9 m	(75 ft)
BC22D-A0	30.5 m	(100 ft)
BC22D-B5	76.2 m	(250 ft)

#### 2. BC03M

- Round 6-conductor (three twisted pairs), each pair shielded
- Cables over 30.5 m (100 ft) have a 25-pin subminiature D-type female connector at one end. The other end is unterminated, for passing through the conduit
- Cables 30.5 m (100 ft) and less have a similar connector at each end
- Lengths available:

BC03M-25	7.6 m	(25 ft)
BC03M-A0	30.5 m	(100 ft)
BC03M-B5	76.2 m	(250 ft)
BC03M-E0	152.4 m	(500 ft)
BC03M-L0	304.8 m	(1000 ft)

#### 3. BC22A

- Round 6-conductor cable
- Subminiature 25-pin D-type female connector moulded at each end

- Lengths available:

BC22A-10	3.1 m	(10 ft)
BC22A-25	7.6 m	(25 ft)

Cables of groups 1, 2, and 3 are all connected as in Figure 2-11. The cables are not polarized. They can be connected either way round.

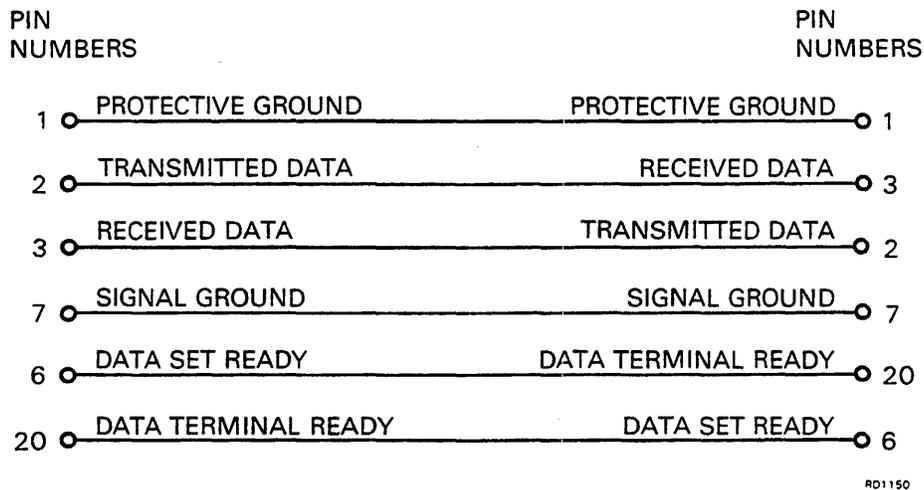


Figure 2-11 Null Modem Cable Connections

### 2.9.3 Full Modem Cables

Recommended full modem cables are as follows:

1. BC22F (for EMC/RFI-shielded cabinets)

- Rounded 25-conductor fully shielded cable
- Subminiature 25-pin D-type female connector on one end, male connector on the other
- Lengths available:

BC22F-10	3.1 m	(10 ft)
BC22F-25	7.6 m	(25 ft)
BC22F-35	10.7 m	(35 ft)
BC22F-50	15.2 m	(50 ft)
BC22F-75	22.9 m	(75 ft)

2. BC05D

- Round 25-conductor cable
- Subminiature 25-pin D-type, female connector on one end, male connector on the other

- Lengths available:

BC05D-10	3.1 m	(10 ft)
BC05D-25	7.6 m	(25 ft)
BC05D-50	15.2 m	(50 ft)
BC05D-60	18.6 m	(60 ft)
BC05D-A0	30.5 m	(100 ft)

**NOTE**

**In some countries, protective hardware may be needed when connecting to certain lines. Refer to the national regulations before making a connection.**

**2.10 CABLES AND CONNECTORS — DEC423**

The H3100 active distribution panel adapts the the two DHQ11 Berg connectors to one 36-way AMP connector. Noise filtering is provided on each pin of the connector. This reduces electromagnetic radiation from the cables and also provides the logic with some protection against static discharge.

Table 2-3 shows connections to the 36-pin AMP filtered connectors used on DHQ11 with DEC423 installations.

**Table 2-3 Serial-Line Connections for the 36-Pin Connector**

1	Blu/Wht	Line 0	Transmit +	19	Wht/Blu	Line 0	Transmit -
2	Org/Wht	Line 0	Receive +	20	Wht/Org	Line 0	Receive -
3	Grn/Wht	Line 1	Transmit +	21	Wht/Grn	Line 1	Transmit -
4	Brn/Wht	Line 1	Receive +	22	Wht/Brn	Line 1	Receive -
5	Sl't/Wht	Line 2	Transmit +	23	Wht/Sl't	Line 2	Transmit -
6	Blu/Red	Line 2	Receive +	24	Red/Blu	Line 2	Receive -
7	Org/Red	Line 3	Transmit +	25	Red/Org	Line 3	Transmit -
8	Grn/Red	Line 3	Receive +	26	Red/Grn	Line 3	Receive -
9	Brn/Red	Line 4	Transmit +	27	Red/Brn	Line 4	Transmit -
10	Sl't/Red	Line 4	Receive +	28	Red/Sl't	Line 4	Receive -
11	Blu/Blk	Line 5	Transmit +	29	Blk/Blu	Line 5	Transmit -
12	Org/Blk	Line 5	Receive +	30	Blk/Org	Line 5	Receive -
13	Grn/Blk	Line 6	Transmit +	31	Blk/Grn	Line 6	Transmit -
14	Brn/Blk	Line 6	Receive +	32	Blk/Brn	Line 6	Receive -
15	Sl't/Blk	Line 7	Transmit +	33	Blk/Sl't	Line 7	Transmit -
16	Blu/Yel	Line 7	Receive +	34	Yel/Blu	Line 7	Receive -
17	Org/Yel	Spare		35	Yel/Org	Spare	
18	Grn/Yel	Spare		36	Yel/Grn	Spare	

## CHAPTER 3 PROGRAMMING

### 3.1 SCOPE

This chapter describes the device registers, and how they are used to control and monitor the DHQ11. The chapter covers:

- The bit functions and format of each register
- Programming features available to the host.

Some programming examples are also included.

#### NOTE

**DHU11 programming mode is the preferred mode of operation for the DHQ11. The development of user drivers that use the DHQ11 in DHV11 programming mode is not recommended.**

### 3.2 REGISTERS

The host system controls and monitors the DHQ11 module through several Q-bus-addressable registers.

Command words or bytes written to the registers are interpreted and executed by the module. Status reports and data are also transferred through the registers.

#### 3.2.1 Register Access

The DHQ11 registers occupy 8 words (16 bytes) of Q-bus memory-mapped I/O space.

The base physical address of the eight DHQ11 registers is selected by using switches on the module. The address selected is in the peripheral I/O space. The term 'base' means the lowest I/O address on the module; that is to say, when the four low-order address bits = 0.

Table 3-1 and 3-2 list the DHQ11 registers and their addresses in DHV11 and DHU11 mode. The suffix (I) means that there are eight of these registers, one for each channel. When an (I) register is accessed, the contents of CSR <3:0> select which of the eight registers at that address is actually accessed.

#### NOTE

**CSR <3:0> allows up to 16 channels to be addressed. However, only the lower eight channels are used. Therefore CSR bit 3 must always be 0.**

**Table 3-1 DHQ11 Registers in DHV11 Mode**

<b>Register</b>		<b>Address (Octal)</b>	<b>Type</b>
Control and Status Register	(CSR)	Base	Read/Write
Receive Buffer	(RBUF)	Base + 2	Read Only
Transmit Character	(TXCHAR)	Base + 2(I)	Write Only
Line-Parameter Register	(LPR)	Base + 4(I)	Read/Write
Line Status	(STAT)	Base + 6(I)	Read Only
Line Control	(LNCTRL)	Base + 10(I)	Read/Write
Transmit Buffer Address 1	(TBUFFAD1)	Base + 12(I)	Read/Write
Transmit Buffer Address 2	(TBUFFAD2)	Base + 14(I)	Read/Write
Transmit Buffer Count	(TBUFFCT)	Base + 16(I)	Read/Write

**Table 3-2 DHQ11 Registers in DHU11 Mode**

<b>Register</b>		<b>Address (Octal)</b>	<b>Type</b>
Control and Status Register	(CSR)	Base	Read/Write
Receive Buffer	(RBUF)	Base + 2	Read
Receive Timer*	(RXTIMER)	Base + 2	Write (byte)
Line-Parameter Register	(LPR)	Base + 4(I)	Read/Write
FIFO Data	(FIFODATA)	Base + 6(I)	Write
FIFO Size	(FIFOSIZE)	Base + 6(I)	Read (byte)
Line Status	(STAT)	Base + 7(I)	Read (byte)
Line Control	(LNCTRL)	Base + 10(I)	Read/Write
Transmit Buffer Address 1	(TBUFFAD1)	Base + 12(I)	Read/Write
Transmit Buffer Address 2	(TBUFFAD2)	Base + 14(I)	Read/Write
Transmit Buffer Count	(TBUFFCT)	Base + 16(I)	Read/Write

\* Only accessible when CSR3:0 > = 0000

**NOTE**

**It is possible to write to the line-status register.  
However, the host should not write to this register.**

There are eight line-parameter registers, only one of which is accessed at any one time. The register which is accessed is associated with the line selected using CSR <3:0> .

For example, to read the line-parameter register of channel 3, the following I/O commands would be executed:

```
MOV B *CHAN,*BASE ;WRITE CHANNEL NUMBER (SEE BELOW) TO CSR
MOV B *BASE+4,R0 ;READ THE LINE PARAMETER REGISTER
```

In the above example, CHAN = 0er00011(binary)

Where:


*e* = the RXIE bit of the CSR  
*r* = the MASTER.RESET bit (which would be 0)  
 0011 = channel number 3

**NOTE**

1. Not all register bits are used. In a write action, all unused bits must be written as 0s. In a read action, unused bits are undefined.
2. Read-modify-write instructions may be used on all registers except CSR and RBUF.

**3.2.2 Register Bit Definitions**


Registers which are modified by reset sequences are coded as shown in Figure 3-1.

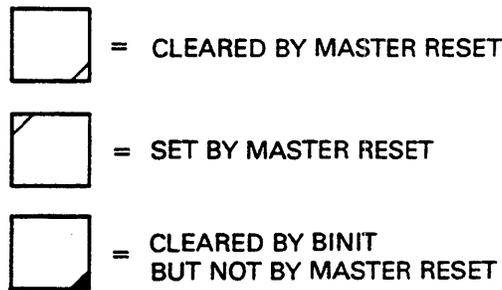

RD2249

Figure 3-1 Register Coding

**3.2.2.1 Control And Status Register (CSR) –**

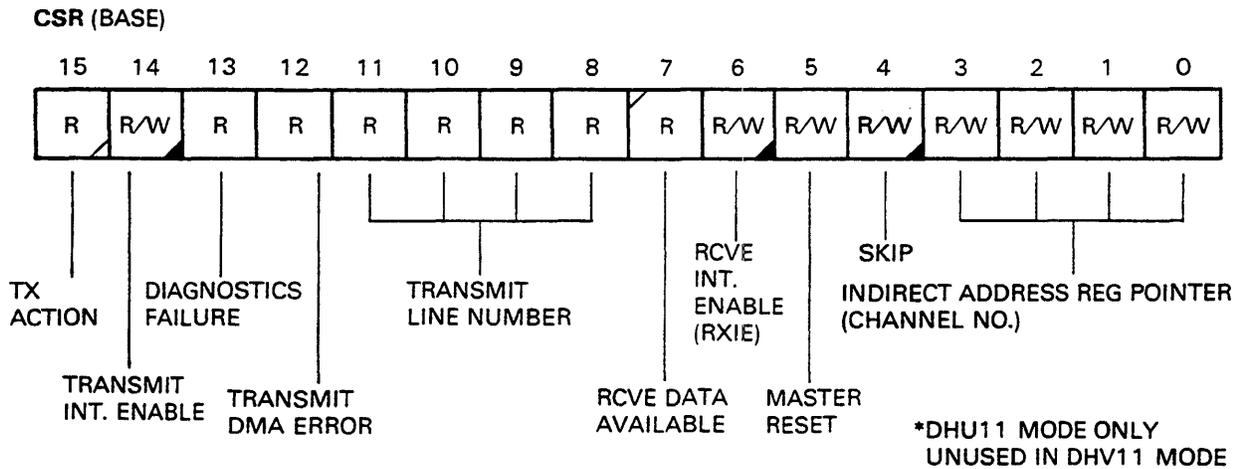

RE10


Bit	Name	Description
15	TX.ACTION (Transmitter Action) (R)	<p>This bit is set by the DHQ11 when:</p> <ol style="list-style-type: none"> <li>1. The last character of a DMA buffer has left the OCTART.</li> <li>2. A DMA transfer has been aborted.</li> <li>3. A DMA transfer has been terminated by the DHQ11 because non-existent memory has been addressed, or because of a host memory parity error.</li> <li>4. In DHV11 mode: a single-character programmed output has been accepted; that is to say, the character has been taken from TX.CHAR.</li> <li>5. In DHU11 mode, following a programmed data transfer, the module has emptied a transmit FIFO.</li> </ol> <p>The bit is cleared if the host reads the CSR after the TX.ACTION FIFO has become empty. To avoid losing TX.ACTION reports, the host must not let more than 16 reports accumulate. It is advisable to read the CSR until TX.ACTION becomes clear.</p>
<b>NOTE</b>		
<b>TX.ACTION reports may be lost if the upper byte of the CSR is discarded following a read of the CSR.</b>		
14	TXIE (Transmit Interrupt Enable) (R/W)	<p>When set, this bit allows the DHQ11 to interrupt the host when CSR &lt; 15 &gt; (TX.ACTION) becomes set.</p> <p>It is cleared by BINIT, but not by MASTER.RESET.</p>
13	DIAG.FAIL (Diagnostic Fail) (R)	<p>When set, this bit indicates that the DHQ11 internal diagnostics have detected an error. The error may have been detected by the self-test sequencer or by the background monitor program (BMP).</p>

Bit	Name	Description
		This bit is associated with the diagnostic-passed LED. When it is set, the LED will be off. When it is cleared, the LED will be on.
		The bit is set by MASTER.RESET. It is cleared after the self-test has run successfully.
		Not valid if MASTER.RESET is set.
12	TX.DMA.ERROR (Transmit DMA Error) (R)	If this bit is set and TX.ACTION is also set, either the channel indicated by CSR <11:8> has failed to transfer DMA data within 10 microseconds of the bus request being acknowledged, OR there is a host memory parity error.
		The TBUFFAD1 and TBUFFAD2 registers will contain the address of the memory location at which the error occurred. TBUFFCT will be cleared.
<11:8>	TX.LINE (Transmit Line Number) (R)	If TX.ACTION is set, these bits hold the line number to which TX.ACTION refers.
7	RX.DATA.AVAIL (Received Data Available) (R)	When set, this bit indicates that a received character is available. It is clear when the receive FIFO is empty. It is used with RXIE to request a receive interrupt.
		It is set after MASTER.RESET because the receive FIFO contains diagnostic information.
6	RXIE (Receiver Interrupt Enable) (R/W)	When set, this bit allows the DHQ11 to interrupt the host when RX.DATA.AVAIL is set. An interrupt is generated under the following conditions. <ul style="list-style-type: none"> <li>1. RXIE is set and a character is placed into an empty receive FIFO.</li> <li>2. The receive FIFO contains one or more characters, and RXIE is changed from 0 to 1.</li> </ul>
		It is cleared by BINIT but not by MASTER.RESET.
5	MASTER.RESET (Master Reset) (R/W)	This bit is set by the host to reset the module. It stays set while the DHQ11 runs the self-test and performs an initialization sequence. The bit is then cleared to tell the host that the process is complete.

Bit	Name	Description
		This bit can be set directly by the host, or indirectly by BINIT (bus initialization signal).
4	SKIP (Skip Self-Test)	In DHU11 mode, this bit is used (RW) to shorten the reset/initialization time to about 30 milliseconds.  The host program must only set this bit at the same time as it sets MASTER.RESET. It must then clear the bit, but must wait at least 20 microseconds before doing so. It is recommended that the host <b>always</b> set SKIP when setting MASTER.RESET. The DHQ11 will execute the full self-test, regardless of whether SKIP is set or not. The 1.7 seconds delay during MASTER.RESET is purely for DHU11 hardware compatibility. In DHV11 mode, this bit is ignored for compatibility reasons.
<3:0>	IND.ADDR.REG (Indirect Address Register) (R/W)	For indexed registers, these bits select one of sixteen channels. However, on the DHQ11 only the lower eight channels are defined. So, when writing these bits, CSR <3> must be zero.

**3.2.2.2 Receive Buffer (RBUF)** – A read from ‘base + 2’ is interpreted by the DHQ11 hardware as a read from the receive FIFO. Therefore RBUF is a 256-character register with a 1-word address. The least-significant bit (LSB) of the character is in bit 0.

RBUF (READ BASE + 2)

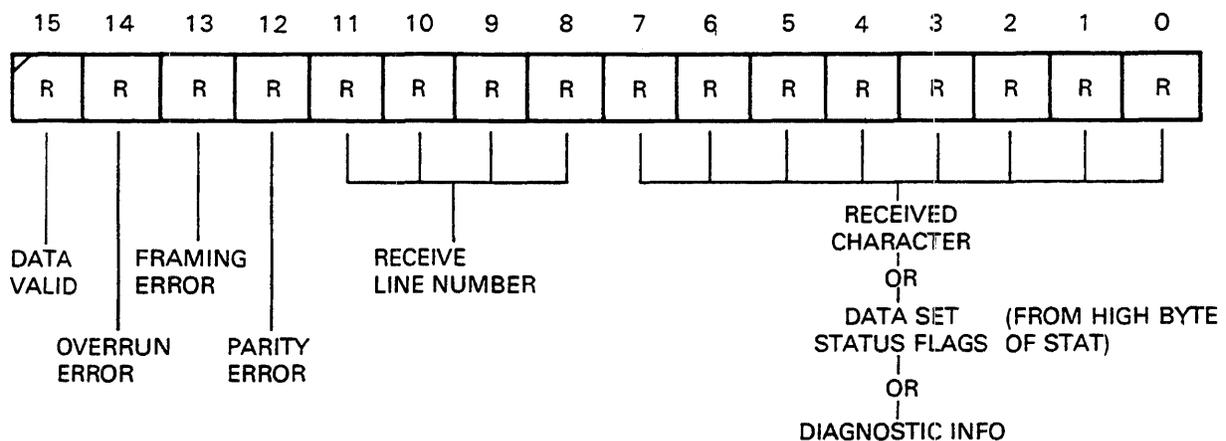

RE2723

Bit	Name	Description
15	DATA.VALID (Data Valid) (R)	This bit is set if there is data in the receive FIFO.  When this bit is clear, the contents of RBUF <14:0> is not valid.  After self-test, diagnostic information is loaded into the receive FIFO. Therefore, this bit is always set after a successful master reset sequence.
14	OVERRUN.ERR (Overflow Error) (R)	This bit is set if one or more previous characters of the channel indicated by bits <11:8> were lost because of a full receive FIFO.


#### NOTE

**The 'all 1s' code for bits <14:12> is reserved. This code indicates that RBUF<7:0> holds modem status or diagnostic information.**

13	FRAME.ERR (Framing Error) (R)	This bit is set if the first stop bit of the received character was not detected (also see RX.CHAR).
12	PARITY.ERR (Parity Error) (R)	This bit is set if this character has a parity error, and if parity is enabled for the channel indicated by bits <11:8> (also see RX.CHAR).
<11:8>	RX.LINE (Receive Line Number) (R)	These bits hold the binary number of the channel on which the character of RBUF <7:0> was received, or on which a data-set change was reported.
<7:0>	RX.CHAR (Received Character) (R)	<p>If RBUF &lt;14:12&gt; = 000, these eight bits contain the oldest character in the receive FIFO. The character is good.</p> <p>If RBUF &lt;14:12&gt; = 001, 010, or 011, these eight bits contain the oldest character in the receive FIFO. The character is bad.</p> <p>If RBUF &lt;14:12&gt; = 111, these eight bits contain diagnostic or modem status information. In this case, RBUF &lt;0&gt; has the following meanings.</p> <p>0 = Modem status in RBUF &lt;7:1&gt; 1 = Diagnostic information in RBUF &lt;7:1&gt;</p>

Bit	Name	Description
		If there is an overrun condition, the four-character UART receive buffer for that channel will be cleared. This data will be lost. A null character is placed in the receive FIFO, and RBUF <14> is set.
		The DHQ11 does not have a break-detect bit. A line break is indicated to the program as a null character with FRAME.ERR set, and overrun is clear.


**3.2.2.3 Transmit Character Register (TXCHAR)** – Single-character programmed transfers are made through the transmit character register.

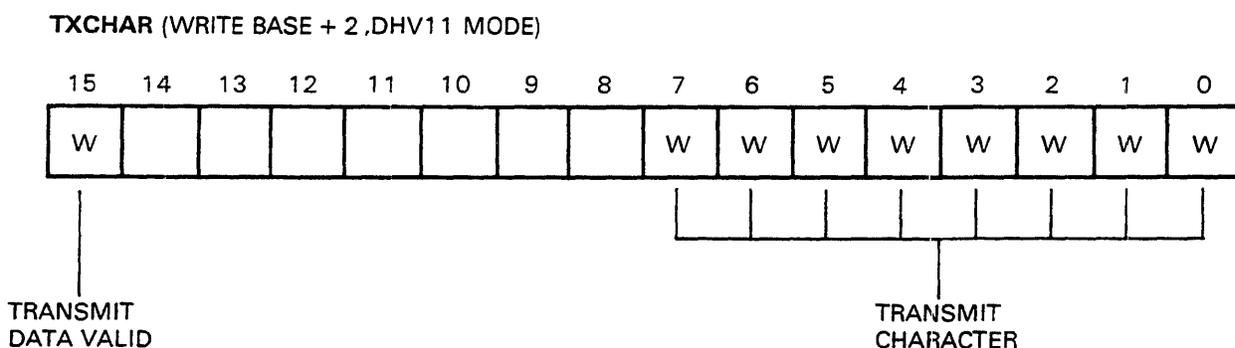

RE2749

Bit	Name	Description
15	TX.DATA.VALID (Transmit Data Valid) (W)	When set, this bit instructs the DHQ11 to transmit the character held in bits <7:0>. The bit is sensed by the DHQ11, which then transfers the character, clears the bit, and sets TX.ACTION.
<7:0>	TX.CHAR (Transmit Character) (W)	This contains the character to be transmitted. The LSB is bit 0.

**3.2.2.4 Receive Timer Register (RXTIMER), DHU11 Mode Only** – The indirect address register (CSR <3:0>) must = 0000 in order to access the receive timer. The host can use the timer to delay the receive interrupt.

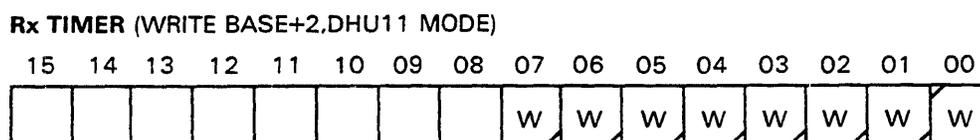


RE2750

Bit	Name	Description
<7:0>	RX.TIMER (Receive timer)	<p>The receive interrupt is normally raised when a received character is loaded into the previously empty receive FIFO. The binary number loaded into RX.TIMER modifies this procedure as follows.</p> <p>0 = Infinite timeout. This timeout will be overridden by the conditions below.</p> <p>1 = No timeout. The interrupt will be raised immediately.</p> <p>2 to 255 = Timer delay in milliseconds.</p> <p>The timer is overridden when the receive FIFO becomes three-quarters full (critical) or when a modem status change is written to the FIFO.</p> <p>This bit is set to 1 by MASTER.RESET.</p>

**3.2.2.5 Line-Parameter Register (LPR) – This register is used to configure its associated channel.**

LPR (BASE + 4)

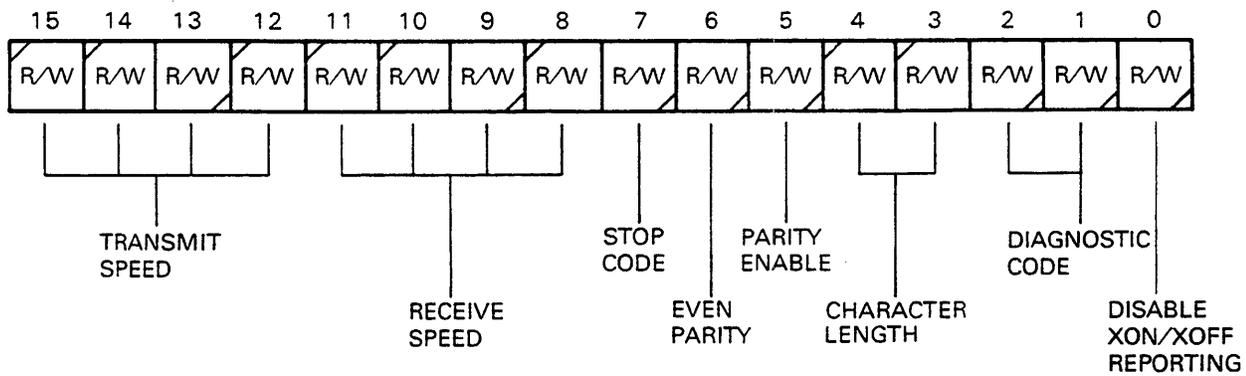

RES239

Bit	Name	Description
<15:12>	<b>TX.SPEED</b> (Transmitted Data Rate) (R/W)	This bit is set to 1101 by MASTER.RESET (9600 bits/s). It defines the transmit data rate (Table 3-2).
<11:8>	<b>RX.SPEED</b> (Received Data Rate) (R/W)	This bit is set to 1101 by MASTER.RESET (9600 bits/s). It defines the receive data rate (Table 3-2).
7	<b>STOP.CODE</b> (Stop Code) (R/W)	<p>This bit defines the length of the transmitted stop bit.</p> <p>0 = 1 stop bit for 5-, 6-, 7-, or 8-bit characters</p> <p>1 = 2 stop bits for 6-, 7-, or 8-bit characters, or 1.5 stop bits for 5-bit characters</p> <p>The bit is cleared by MASTER.RESET.</p>
6	<b>EVEN.PARITY</b> (Even Parity) (R/W)	<p>If LPR&lt;5&gt; is set, this bit defines the type of parity.</p> <p>1 = Even parity</p> <p>0 = Odd parity</p> <p>The bit is cleared by MASTER.RESET.</p>
5	<b>PARITY.ENAB</b> (Parity Enable) (R/W)	<p>This bit causes a parity bit to be generated on transmit, and checked and stripped on receive.</p> <p>1 = Parity enabled</p> <p>0 = Parity disabled</p> <p>The bit is cleared by MASTER.RESET.</p>

Bit	Name	Description
<4:3>	CHAR.LGTH Character Length) (R/W)	<p>These two bits define the length of characters. The length does not include start, stop, and parity bits.</p> <p>00 = 5 bits 01 = 6 bits 10 = 7 bits 11 = 8 bits</p> <p>They are set to 11 by MASTER.RESET.</p>
<2:1>	DIAG (Diagnostic Code) (R/W)	<p>Diagnostic control codes are used by the host as follows.</p> <p>00 = Normal operation</p> <p>01 = Causes the background monitor program (BMP) to report the DHQ11 status through the receive FIFO.</p> <p>Other codes are reserved.</p>
<0>	DISAB.XRPT (Disable XON/XOFF Reporting) (R/W)	<p>0 = XON and XOFF characters are reported on all channels.</p> <p>1 = If LNCTRL&lt;4&gt; is also set for a particular channel, these characters are filtered from the received data stream, to relieve the host of the need to do so.</p> <p>On initialization, this bit is cleared. In order to read or write to this bit, CSR&lt;3:0&gt; must equal zero.</p>

**NOTE**

An XON code =  $21_8 = DC = CTRL/Q$ . An XOFF code =  $23_8 = DC3 = CTRL/S$ . No other codes are specified for the interface.


**Table 3-3 Data Rates**

Code	Data Rate (Bits/s)	Maximum Error (%)
0000	50	0.01
0001	75	0.01
0010	110	0.08

**Table 3-3 Data Rates (Cont.)**

Code	Data Rate (Bits/s)	Maximum Error (%)
0011	134.5	0.07
0100	150	0.01
0101	300	0.01
0110	600	0.01
0111	1200	0.01
1000	1800	0.01
1001	2000	0.19
1010	2400	0.01
1011	4800	0.01
1100	7200	0.01
1101	9600	0.01
1110	19200	0.01
1111	38400	0.01

**3.2.2.6 Line-Status Register (STAT)** – The high byte of this register holds modem status information. In DHV11 mode, the low byte is undefined.

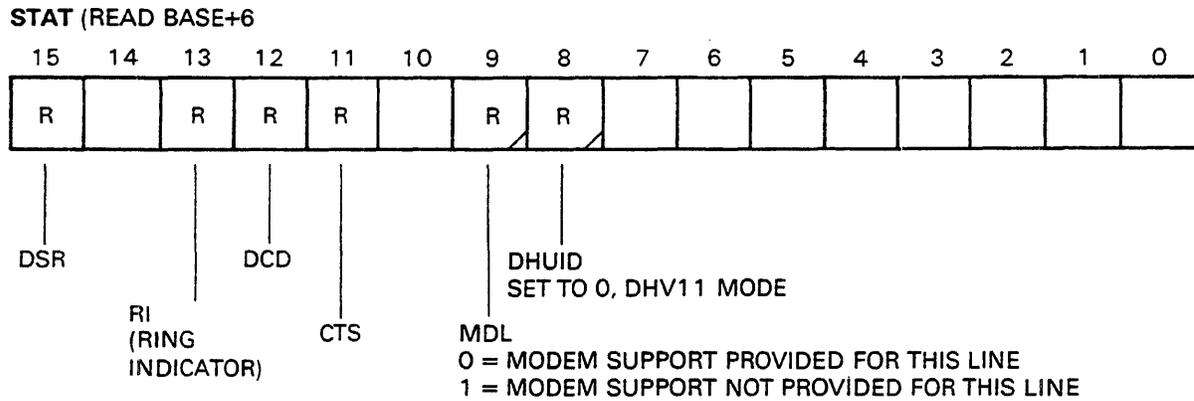

Bit	Name	Description
15	DSR (Data Set Ready) (R)	This bit gives the present status of the Data Set Ready (DSR) signal from the modem.  1 = ON 0 = OFF

Bit	Name	Description
-----	------	-------------

**NOTE**

**In order to report a change of modem status, the DHQ11 writes the high byte of STAT into the low byte of RBUF. RBUF<14:12> = 111 indicates to the host that RBUF<7:0> holds modem status information instead of a received character.**


13	RI (Ring Indicator) (R)	This bit gives the present status of the Ring Indicator (RI) signal from the modem.  1 = ON 0 = OFF
12	DCD (Data Carrier Detected) (R)	This bit gives the present status of the Data Carrier Detected (DCD) signal from the modem.  1 = ON 0 = OFF
11	CTS (Clear to Send) (R)	This bit gives the present status of the Clear To Send (CTS) signal from the modem.  1 = ON 0 = OFF
9	MDL (MDL Modem Support Low) (R)	Always reads as 0 for DHQ11, to indicate that the module has modem support capability.

**NOTE**

**It is only necessary to read the modem support status for one line, since all the other lines will have the same setting.**

8	DHUID (DHU11 Identification bit) (R)	This bit allows software to distinguish between DHV11 mode and DHU11 mode.  0 = DHV11 1 = DHU11
---	--------------------------------------	--


**3.2.2.7 FIFO Size Register (FIFOSIZE), DHU11 Mode Only** – This low-byte register holds a number which indicates the space available in the transmit FIFO.

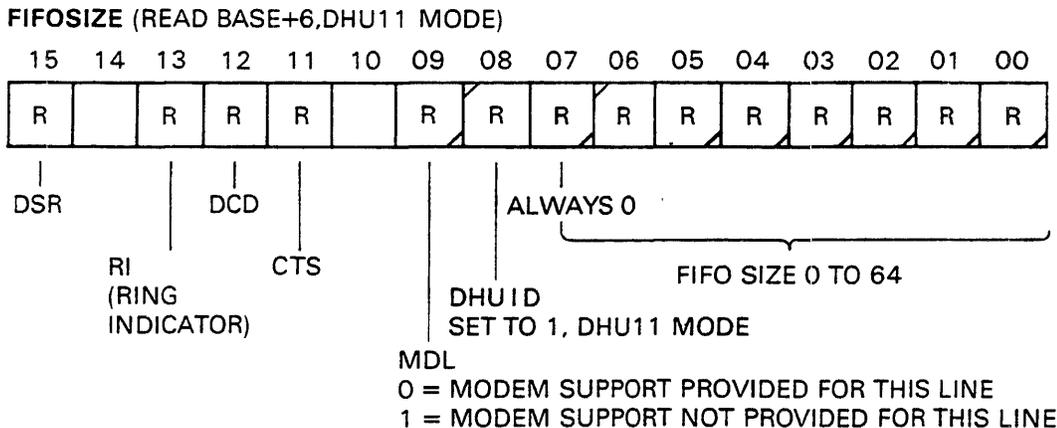

RE4184

Bit	Name	Description
<7:0>	FIFOSIZE (FIFO Size) (R BYTE)	<p>This byte indicates the (in characters) available space in the transmit FIFO. The range is 00000000 (binary) to 01000000 (binary) (0 to 64 (decimal)). This register should be read before sending a character, or a sequence of characters, to the transmit FIFO data register.</p> <p>The byte is set to 01000000 (binary) by MASTER.RESET.</p>

**3.2.2.8 FIFO Data Register (FIFODATA), DHU11 Mode Only** – To send a character or characters through a transmit FIFO, the host writes the character(s) to the transmit FIFO, data register of the appropriate channel. To make sure that there is room in the transmit FIFO, the host should first read the associated transmit FIFO size register. If single characters are sent, they must be written to the low byte of FIFODATA.

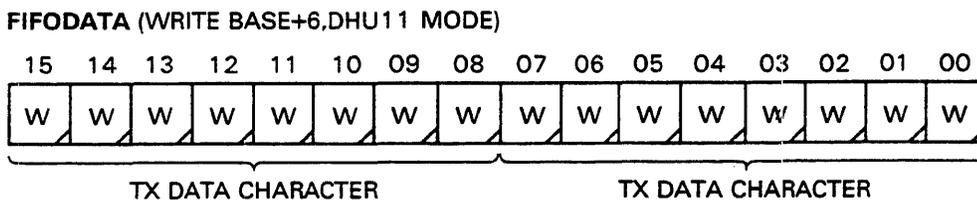


RE2720

Bit	Name	Description
<15:0>	FIFODATA <15:0> (FIFO Data Register) (W)	This word contains two characters for transfer through the transmit FIFO. After a write-word action to this register, FIFODATA <7:0> and then FIFODATA <15:8> are transferred to the transmit FIFO.  The least-significant bits of the characters are in FIFODATA bits 0 and 8.
<7:0>	FIFODATA <7:0> (FIFO Data register) (W BYTE)	This byte contains one character for transfer through the transmit FIFO. After a write-byte action to this register, FIFODATA <7:0> is transferred to the transmit FIFO.  The least-significant bit of the character is in FIFODATA bit 0.

**3.2.2.9 Line-Control Register (LNCTRL) –** The main function of this register is to control the line interface.

LNCTRL (BASE + 10)

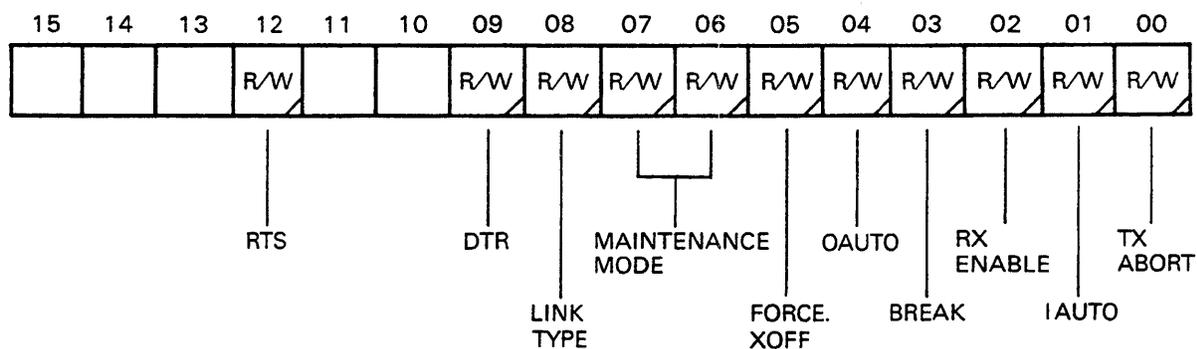

RE2442


Bit	Name	Description
12	RTS (Request To Send) (R/W)	This bit controls the Request To Send (RTS) signal.  1 = ON 0 = OFF
9	DTR (Data Terminal Ready) (R/W)	This bit controls the Data Terminal Ready (DTR) signal.

Bit	Name	Description
		1 = ON 0 = OFF
8	LINK.TYPE (Link Type) (R/W)	This bit must be set if the channel is to be connected to a modem. When the bit is set, any change in modem status will be reported through the receive FIFO as well as the STAT register.  If this bit is cleared, this channel becomes a 'data-leads-only' channel. Modem status information is loaded in the high byte of STAT, but is not placed in the receive FIFO.
<7:6>	MAINT (Maintenance Mode) (R/W)	These bits can be written by the driver or test programs, in order to test the channel.  The coding is as follows:  00 = Normal operation  01 = Automatic echo mode — Received data is looped back to the terminal (regardless of the state of TX.ENA) at the data rate selected for the receiver. The received characters are processed normally and placed in the receive FIFO. Any data that the host attempts to transmit on this channel will be discarded by the OCTART. The RX.ENA bit must be set when operating in this mode.  10 = Local loopback — Data transmitted by the host is looped back to the receive buffer. Data received from the terminal is ignored, and the transmit data line to the terminal is held in the mark condition. The data rate selected for the transmitter is used for both transmission and reception. The TX.ENA bit still controls transmission in this mode. The RX.ENA bit is ignored.  11 = Remote loopback — In this mode, data received from the terminal is looped back to the terminal at a clock rate equal to the received clock rate. The data is not placed in the receive FIFO. The state of TX.ENA is ignored. The RX.ENA bit must be set on this channel.

Bit	Name	Description
5	FORCE.XOFF (Force XOFF) (R/W)	This bit can be set by the program to indicate that this channel is congested at the host system (for example, if the typeahead buffer is full). When it sees this bit set, the DHQ11 will send an XOFF code. Until the bit is cleared, XOFFs will be sent after every alternate character received on this channel. When the bit is cleared, an XON will be sent unless IAUTO is set and the receive FIFO is critical.
4	OAUTO (Outgoing Auto Flow) (R/W)	This bit is the auto-flow control bit for outgoing characters. When set, if RX.ENA is also set, the DHQ11 will automatically respond to XON and XOFF codes received from a channel. The DHQ11 uses the TX.ENA bit in TBUFFAD2 to stop and start the flow. If DISAB.XRPT is also set, XON/XOFF codes are not entered in the receive FIFO.
3	BREAK (Break Control) (R/W)	If set, this bit forces the transmitter of this channel to the spacing state.  If this bit is set while a character is being transmitted, transmission is completed before break is asserted on the line.  Transmission is re-enabled when the bit is cleared.
<b>NOTE</b>		
<b>If the line is idle, there may be a delay of up to 170 microseconds between writing the bit and the channel changing state. If a character is already being transmitted by the OCTART, the BREAK signal will be transmitted immediately afterwards.</b>		
2	RX.ENA (Receiver Enable) (R/W)	If this bit is set, this receiver channel is enabled.  If this bit is cleared when this channel is assembling a character, that character is lost.  The bit is cleared by MASTER.RESET.
1	IAUTO (Incoming Auto Flow) (R/W)	This is the auto-flow control bit for incoming characters. If it is set, the DHQ11 will control incoming characters by transmitting XON and XOFF codes.

Bit	Name	Description
0	TX.ABORT (Transmit Abort) (R/W)	<p data-bbox="760 331 1487 520">If the receive FIFO becomes more than three-quarters full, the DHQ11 will send an XOFF code to that channel, and to any other channel which receives a character and has the IAUTO bit set. When FIFO becomes less than half full, an XON will be sent to all channels which had previously been sent an XOFF.</p> <p data-bbox="760 554 1487 806">This bit is set by the driver program to halt data transmission. If a DMA transfer was in progress, the DMA address and count registers (TBUFFAD1, TBUFFAD2, and TBUFFCT) will be updated to reflect the number of characters which have been transmitted. The transfer can be continued by clearing TX.ABORT, and then setting TX.DMA.START in TBUFFAD2. No characters will be lost.</p> <p data-bbox="760 840 1487 867">If DMA is not in progress, the following actions will occur</p> <p data-bbox="789 903 1143 930">DHV11 mode — no action</p> <p data-bbox="760 966 1487 1121">DHU11 mode — characters in the transmit FIFO will be discarded. Because of buffering, up to two characters could be transmitted after the TX.ABORT bit is set. The host cannot determine exactly how many characters have been lost with this operation.</p> <p data-bbox="760 1157 1487 1276">When an abort sequence has been completed, the DHQ11 will set the TX.ACTION bit in the CSR. If the transmitter interrupt is enabled, the program will be interrupted at the transmit vector.</p> <p data-bbox="760 1312 1487 1411">The program must make sure that TX.ABORT is clear before setting TX.DMA.START, otherwise the transfer will be aborted before any characters are transmitted.</p> <p data-bbox="760 1446 1281 1474">The bit is cleared by MASTER.RESET.</p>


**3.2.2.10 Transmit Buffer Address Register Number 1 (TBUFFAD1) –**  
**TBUFFAD1 (BASE + 12)**

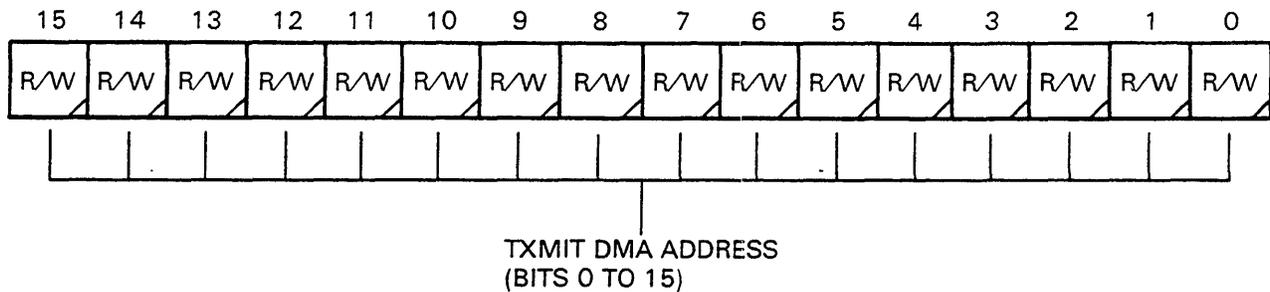

RD1178

Bit	Name	Description
<15:0>	TBUFFAD<15:0> (Transmit Buffer Address [Low]) (R/W)	Bits <15:0> of the DMA address.

**3.2.2.11 Transmit Buffer Address Register Number 2 (TBUFFAD2) –**  
**TBUFFAD2 (BASE + 14)**

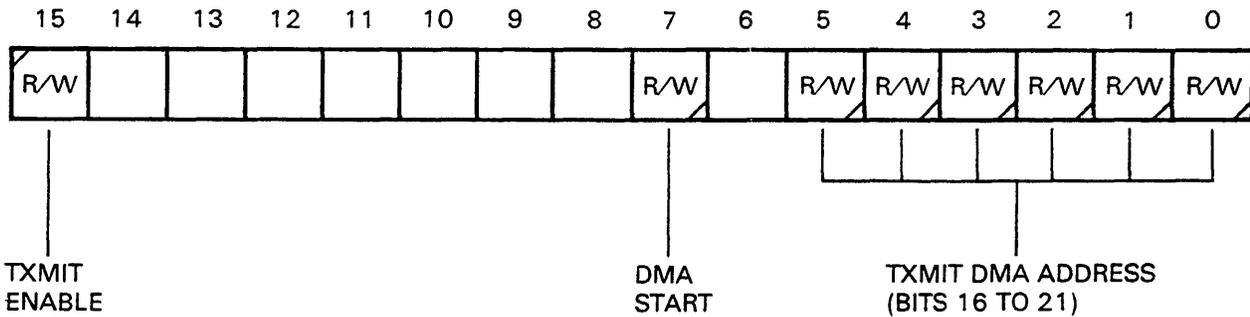


RD1179

Bit	Name	Description
15	TX.ENA (Transmitter Enable) (R/W)	<p>When this bit is set, the DHQ11 will transmit all characters.</p> <p>When this bit is cleared, the DHQ11 will only transmit <b>internally</b> generated flow-control characters.</p> <p>The bit is set by MASTER.RESET.</p> <p>In the OAUTO mode, this bit is used by the DHQ11 to control outgoing characters.</p>

Bit	Name	Description
7	TX.DMA.START (Transmit DMA Start) (R/W)	This bit is set by the host to start a DMA transfer. The DHQ11 will clear the bit before returning TX.ACTION.  The bit is cleared by MASTER.RESET.
<b>NOTE</b>		
<b>After setting this bit, the host must not write to TBUFFCT, TBUFFAD1, or TBUFFAD2 &lt;7:0&gt; until the TX.ACTION report has been returned.</b>		
<5:0>	TBUFFAD<21:16> (Transmit Buffer Address [High]) (R/W)	Bits <21:16> of the DMA address. Before a DMA transfer, TBUFFAD1 and the low byte of TBUFFAD2 are loaded with the start address of the DMA buffer. This address will be continuously changing during a DMA transfer and has no meaning. Once TX.ACTION has been returned, the register contains the final DMA transfer address.

### 3.2.2.12 Transmit DMA Buffer Counter (TBUFFCT) –

TBUFFCT (BASE + 16)

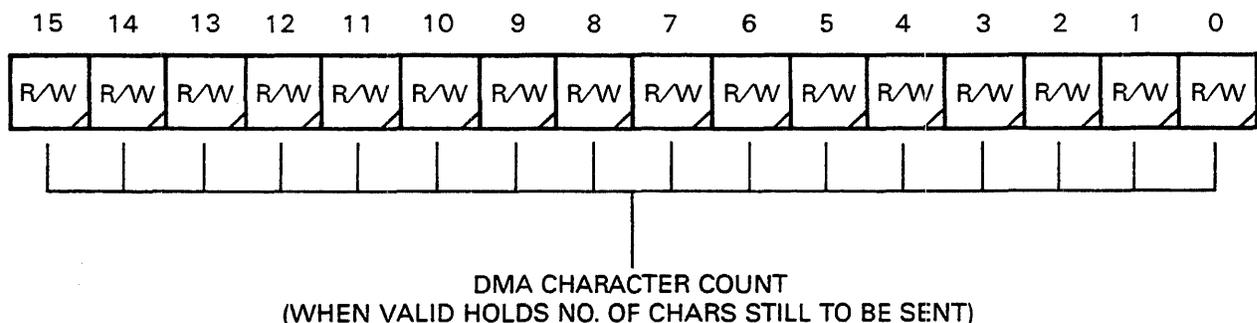

RD1179

Bit	Name	Description
<15:0>	TX.CHAR.CT (Transmit Character Count) (R/W)	This word is loaded with the number of characters to be transferred by DMA.  The number of characters is specified as a 16-bit unsigned integer.

---

<b>Bit</b>	<b>Name</b>	<b>Description</b>
		After a DMA transfer has been aborted, this location will hold the number of characters still to be transferred.
		See also the previous NOTE.

---

### 3.3 PROGRAMMING FEATURES

#### 3.3.1 Initialization

The DHQ11 is initialized by its on-board sequencers.

Initialization takes place after a bus reset sequence, or when the host sets CSR<5> (MASTER.RESET).

Before starting initialization, the on-board sequencers perform a self-test. The results of this test are reported by eight diagnostic bytes in the receive FIFO.

The DHQ11 state, after a successful self-test, is as follows.

1. Eight diagnostic codes are placed in the receive FIFO
2. The diagnostic fail bit (CSR<13>) is clear
3. All channels are set for:
  - a. Send and receive 9600 bits/s
  - b. Eight data bits
  - c. One stop bit
  - d. No parity
  - e. Parity odd
  - f. Auto-flow off
  - g. Receive disabled
  - h. Transmit enabled
  - i. No break on line
  - j. No loopback
  - k. Link type set to data-leads-only
  - l. DTR and RTS off
  - m. DMA character counter zero
  - n. DMA start address registers zero
  - o. TX.DMA.START cleared
  - p. TX.ABORT cleared
  - q. Auto-flow reports enabled

The DHQ11 clears the MASTER.RESET bit (CSR < 5 >) when initialization and self-test are complete.

### 3.3.2 Configuration

After DHQ11 self-initialization, the driver program can configure the DHQ11 as needed. This is done through the LPR and LNCTRL registers.

The line characteristics for a channel can be set up by writing to the LPR and LNCTRL registers associated with this channel. These are:

- Transmit speed
- Receive speed
- Number of stop bits
- Parity type or parity disabled
- Character length
- Flow-control characteristics
- Normal or maintenance mode
- Receiver enable/disable
- Modem or data-leads-only

#### NOTE

**If RX.ENA is reset while a received character is being assembled, that character will be lost.**

### 3.3.3 Transmitting

Each DHQ11 channel can be set up to transfer the characters by DMA or under program control.

**3.3.3.1 DMA Transfers** – Before setting up the transfer of a DMA buffer, the program should make sure that TX.DMA.START is not set. TBUFFCT, TBUFFAD1, and TBUFFAD2 should not be written unless TX.DMA.START is clear.

Transmission will start when the program sets TX.DMA.START. The size of the DMA buffer, and its start address, can be written to TBUFFCT, TBUFFAD1, and TBUFFAD2 in any order, provided that the TX.DMA start bit (TBUFFAD2 < 7 >) is not set. However, TBUFFAD2 contains TX.ENA and TX.DMA.START, so it is probably simpler to write TBUFFAD2 last. By using byte operations on this register, TX.ENA and TX.DMA.START can be separated.

The DHQ11 will perform the transfer, and set TX.ACTION when it is complete. If TXIE is set, the program will be interrupted at the transmit vector. Otherwise, TX.ACTION must be polled. TX.ACTION is not returned until the UART has completely transmitted the last character of the DMA buffer.

To abort a DMA transfer, the program must set TX.ABORT. The DHQ11 will stop transmission, and update TBUFFCT, TBUFFAD1, and TBUFFAD2 <7:0> to reflect the number of characters which have been transmitted. TX.DMA.START will be cleared. If TXIE is set, TX.ACTION will interrupt the program at the transmit vector. If the program clears TX.ABORT and sets TX.DMA.START, the transfer can be continued without loss of characters.

If a DMA transfer fails because of a host memory error, the transmission will be terminated. TBUFFAD1 and TBUFFAD2 will point to the failing location. TBUFFCT will be cleared.

**3.3.3.2 Programmed I/O (DHV11 Mode)** – Single characters are transferred through the channel TX.CHAR register. The character and the DATA.VALID bit must be written as defined in Section 3.2.2.3. Note that the character and the DATA.VALID bit can be written by separate MOV B instructions.

When the DHQ11 removes the character from TX.CHAR, it returns TX.ACTION. This will generate an interrupt if TXIE is set.

#### NOTE

**In single-character mode, TX.ACTION is returned when the DHQ11 accepts the character, not when it has been transmitted. Each channel can buffer up to three characters. Therefore, if line parameters are changed immediately after the last TX.ACTION of a message, the end of the message could be lost unless three null characters are added to the end of each single-character programmed transfer message.**

**3.3.3.3 Programmed I/O (DHU11 Mode)** – Before writing a character or sequence of characters to the FIFODATA register, the program should read the FIFOSIZE register to check that there is space in the transmit FIFO.

If there is enough space, characters can be written as bytes (one character) or words (two characters) to FIFODATA. After a low-byte write, FIFODATA <7:0> is transferred to the FIFO. After a word write, FIFODATA <7:0> is transferred to the FIFO, followed by FIFODATA <15:0>. High-byte writes to FIFODATA are not allowed.

The DHQ11 returns TX.ACTION when the transmit FIFO becomes empty. An interrupt will also be generated if TXIE is set. As distinct from DMA mode, in programmed I/O mode TX.ACTION is returned when the DHQ11 transfers the last character from the transmit FIFO to the OCTART, not when it has been transmitted. Thus, if line parameters are changed immediately after the last TX.ACTION of a message, the end of the message could be lost. The program can avoid this loss by adding two null characters to the end of each programmed transfer FIFO message.

#### **3.3.4 Receiving**

Received characters, tagged with the channel number, error information and DATA.VALID, are placed in the receive FIFO. RX.DATA.AVAIL is clear when the receive FIFO is empty. When a character is put into the empty receive FIFO, the DHQ11 sets RX.DATA.AVAIL. A receive interrupt is generated if RXIE is set. RX.DATA.AVAIL stays set while there is valid data in the receive FIFO. It is recommended that the receive character routine continues to read characters from the receive FIFO until DATA.VALID is clear.

## NOTE

**The interrupt is dynamic. It is raised as RX.DATA.AVAIL is set after RXIE, or as RXIE is set after RX.DATA.AVAIL. If the interrupt routine does not empty the receive FIFO, RXIE must be toggled to raise another interrupt. In DHU11 mode, the interrupt is generated after a delay (set by RX.TIMER).**

If RXIE is not set, the program must poll RBUF often enough to prevent data loss.

### 3.3.5 Interrupt Control

The DHQ11 provides one of two vector addresses during a bus interrupt sequence. The receive vector address is the address set up on the vector address switches. The transmit vector address is the receive vector address + 4.

The receive interrupt vector is generated when:

- RXIE is set and a character is placed into an empty receive FIFO
- RXIE is changed from 0 to 1, and the receive FIFO contains one or more characters.

## NOTE

**In DHU11 mode an interrupt is generated either immediately, or after the delay set by RX.TIMER.**

The transmit interrupt vector is generated when:

- TXIE is set and TX.ACTION becomes set
- TXIE is changed from 0 to 1 while TX.ACTION is set

## NOTE

**Up to 16 TX.ACTION reports are buffered. It is therefore recommended that your program reads the CSR until the TX.ACTION bit becomes clear, otherwise TX.ACTION will be lost.**

At the two vectors, the host must provide the addresses of suitable routines to deal with the above conditions.

In DHU11 mode, an interrupt is generated either immediately data is put into an empty receive FIFO, or after a delay set by RX.TIMER.

### 3.3.6 Auto XON And XOFF

XON and XOFF characters are commonly used to control data flow on communications channels. To use this facility, interfaces must have suitable decoding hardware or software.

A channel using flow control that receives an XOFF stops sending characters until it receives an XON.

If the receive FIFO becomes more than three-quarters full, the DHQ11 will send an XOFF code to that channel, and to any other channel which receives a character and has the IAUTO bit set. When FIFO becomes less than half full, an XON will be sent to all channels which had previously been sent an XOFF.

The DHQ11 automatically controls character flow when programmed accordingly (auto-flow). Four bits control this function:

- IAUTO — LNCTRL<1>
- FORCE.XOFF — LNCTRL<5>
- OAUTO — LNCTRL<4>
- DISAB.XRPT — LPR<0>

IAUTO and FORCE.XOFF both control incoming characters. IAUTO is an enable bit which allows the level of the receive FIFO to control the generation of XOFF and XON characters. The FORCE.XOFF bit is a direct command from the program to control the incoming data stream.

**3.3.6.1 IAUTO** – The DHQ11 hardware recognizes when the receive FIFO is three-quarters full and half full. The logic uses these states for auto-flow control.

Each channel has a separate IAUTO bit. If there are 191 or more characters in the receive FIFO, and a character is received on a channel with IAUTO set, an XOFF character is sent. If the channel does not respond to the XOFF, the DHQ11 will send another XOFF in response to every alternate character received. An XON will be sent when the receive FIFO contains less than 128 characters, unless the FORCE.XOFF bit for that channel is set. XONs are only sent to channels to which an XOFF has previously been sent.

By inserting XON and XOFF characters into the data stream, the program can perform flow control directly. However, if the DHQ11 is in IAUTO mode, the results will be unpredictable.

In IAUTO mode, if RX.ENA is set, XON and XOFF characters will be transmitted even if TX.ENA is cleared.

**3.3.6.2 FORCE.XOFF** – When FORCE.XOFF is set, the DHQ11 sends an XOFF and then acts as if IAUTO is set and the receive FIFO is critical (was three-quarters full, and is not yet less than half full). When FORCE.XOFF is reset, an XON will be sent unless the receive FIFO is critical and IAUTO is set.

**3.3.6.3 OAUTO** – If the program sets OAUTO, the DHQ11 will automatically respond to XON and XOFF characters from the channel. It does this by clearing or setting the TX.ENA bit.

The program may also control the TX.ENA bit, so in this case it is important to keep track of received XON and XOFF characters.

Received XON and XOFF characters will always be reported through the receive FIFO, unless the DISAB.XRPT bit is set. It is possible, during read-modify-write operations by the program, for the DHQ11 to change the TX.ENA bit between the read and the write actions. For this reason, if DMA transfers are started while OAUTO is set, it is advisable to write to the low byte of TBUFFAD2 only.

**3.3.6.4 DISAB.XRPT** – If DISAB.XRPT is clear, XON and XOFF characters will be processed as normal characters and are entered into the receive FIFO. DISAB.XRPT allows the individual line OAUTO bits to control whether XON or XOFF characters received on that channel are discarded. When DISAB.XRPT is set and OAUTO is set, this filtering is enabled.

#### NOTES

1. **When checking for flow-control characters, the DHQ11 only checks characters which do not contain transmission errors. The parity bit is stripped, and the remaining bits are checked for XON (21<sub>8</sub>) and XOFF (23<sub>8</sub>) codes.**
2. **Auto flow-control does not absolutely guarantee that overrun errors will not occur. These errors may still occur if the transmitting devices do not respond to the XOFF immediately.**

#### 3.3.7 Error Indication

Four bits inform the program of transmission and reception errors.

- TX.DMA.ERR — CSR <12>.
- PARITY.ERR — RBUF <12>.
- FRAME.ERR — RBUF <13>.
- OVERRUN.ERR — RBUF <14>.

RBUF <14:12> also identify a diagnostic or modem status code.

#### 3.3.8 Modem Control

Each channel of the module provides modem control bits for RTS and DTR. Also on each channel are modem status inputs CTS, DSR, RI, and DCD. See Section 3.2.2.6 for a description of each of these signals.

CTS, DSR, and DCD are sampled every 10 ms. Therefore, for a change to be detected, these bits must stay steady for at least 10 ms. RI is also sampled every 10 ms, but a change is not reported unless the new state is held for three consecutive samples. Modem signals must be coordinated under program control; there is no hardware modem control logic. Modem status change reports are placed in the receive FIFO only if LINK.TYPE is set, but any changes are updated in STAT irrespective of the state of LINK.TYPE.

Appendix A gives more details of modem control.

By clearing LINK.TYPE, a channel is selected as a 'data-lines only' channel. Modem control and status bits can still be managed by the program, but status bits must be polled at the line-status register. Changes of modem status will **not** be reported to the program.

Status change reporting is done through the receive FIFO as follows.

- When `OVERRUN.ERR`, `FRAME.ERR`, and `PARITY.ERR` are all set, the eight low-order bits contain either status change or diagnostic information. In this case:
- If `RBUF<0> = 0`, `RBUF<7:1>` holds `STAT<15:9>` (see Section 3.2.2.6)
- If `RBUF<0> = 1`, `RBUF<7:1>` holds diagnostic information (see Section 3.3.10).

### 3.3.9 Maintenance Programming

The host can set bits 7 and 6 of `LNCTRL` to allow each channel to be configured in normal, automatic echo, local loopback, and remote loopback modes. These modes allow an individual data channel to be looped back to the host, or to be looped back to the terminal to assist in isolating communication problems.

The host must provide suitable software to use these modes.

### 3.3.10 Diagnostic Codes

**3.3.10.1 Self-Test Diagnostic Codes** – After bus reset or master reset, the DHQ11 executes a self-test and initialization sequence. During the sequence, eight diagnostic codes are put in the receive FIFO, and `RX.DATA.AVAIL` is set.

After an error-free test, `DIAG.FAIL` will be reset and the ‘diagnostic passed’ LED will be on. If an error is detected, `DIAG.FAIL` will be set and the LED will be off.

**3.3.10.2 Interpretation Of Self-Test Codes** – The high byte of diagnostic codes in `RBUF` can be interpreted as in Section 3.2.2.2, except that bits `<11:8>` are not the line number. They indicate the sequence of the diagnostic byte, that is to say, 0 = first byte, 1 = second byte, and so on. Table 3-3 shows the meaning of each of the error codes.

**Table 3-4 DHQ11 Self-Test Error Codes**

Code (Octal) bits <7:0>	Explanation
201	Self-test null code (used as a filler)
203	Self-test skipped
211	OCTART error
225	RAM error
231	RTS-CTS-DCD error
235	DTR-RI-DSR error

All other error codes should be treated as an undefined error.

If bit 7 = 0 and bit 0 = 1, then bits `<5:2>` contain circuit revision information.

**Table 3-4 DHQ11 Self-Test Error Codes (Cont.)**

<b>Code (Octal) bits &lt;7:0&gt;</b>	<b>Explanation</b>
	Bit 6 always reads 1 for the DHQ11, and indicates that the circuit contains control and OCTART chips.
	Bit 1 indicates to which chip the information refers: 0 = Control, 1 = OCTART.

After self-test, the eight FIFO codes consist of six diagnostic codes and two circuit revision codes. If there are less than six errors to report, null codes (201(octal)) fill the unused places.

After an error-free test, six null codes and two circuit revision codes will be returned.

Self-test may be 'skipped' to shorten the initialization cycle (see Section 3.3.10.3).

The module is still tested, even if self-test is skipped. The reset delay is much shorter, but test coverage is not affected; therefore skipping self-test is advantageous.

After 'skip self-test' self-test, the eight FIFO codes consist of six diagnostic codes and two circuit revision codes. If there are less than six errors to report, 203(octal) codes fill the unused places.

After an error-free test, six 203(octal) codes and two circuit revision codes will be returned.

**3.3.10.3 Skipping Self-Test** – In DHU11 mode only, the method is to set SKIP (CSR bit 4) and MASTER.RESET (CSR bit 5) simultaneously, that is, write 60(octal) to the base CSR. SKIP must not be cleared until at least 20 microseconds after it was set. SKIP must be cleared by the host so that the master reset sequence can complete.

In DHV11 mode (this also works in DHU11 mode, but the previous method is preferred) the following method is used:

1. The program resets the DHQ11.
2. The program waits 10 ms ( $\pm$  1 ms) after issuing reset, and then attempts to write 052525<sub>8</sub> to any of the control registers, except the CSR, within the next 4 ms.
3. Following self-test, the DHQ11 hardware checks whether an attempt was made to write the skip code to the registers during the 4 ms window after reset (see step 2 above). If an attempt was made, the MASTER.RESET bit is cleared at 30 ms after issuing a reset instead of 1.2 s. The 1.2 s reset time was retained for compatibility with the DHV11.

**NOTE**

**The program must not write to the CSR, or to the control registers, during the period starting 15 ms after reset, and ending when the MASTER.RESET bit is cleared. Writing during this period could cause a diagnostic fail condition.**

**3.3.10.4 Background Monitor Program (BMP)** – The DHQ11 BMP logic performs background self-tests by checking for OCTART interrupts. One of two codes is returned to the receive FIFO:

1. 305(octal) — DHQ11 running  
307(octal) — DHQ11 defective (also LED off)

A single diagnostic word is returned to the receive FIFO. The low byte contains the diagnostic code. In the high byte, **OVERRUN.ERR**, **FRAME.ERR**, and **PARITY.ERR** are all set to indicate that bits <7:0> do not hold a normal character. The line number (**RBUF<11:8>**) = 0.

BMP normally only reports when it finds an error. However, the program can get a BMP report at any time to check the DHQ11. This is done by setting **DIAG (LPR <2:1>)** of any channel to 01. The line number returned is that of the LPR used to request the report.

On completing the check, BMP clears this 01 code. The host should not write to the LPR of that channel until **LPR <2:1>** becomes 00.

### 3.4 PROGRAMMING EXAMPLES

These programs are not presented as the only way of driving the option, and are neither guaranteed nor supported.

#### 3.4.1 Resetting The DHQ11

In the following example:

- DIAGC is a routine to check the diagnostic codes. It returns with CARRY set if it detects an error code.
- The loop at 1\$ takes 1.2 seconds, so the programmer could poll through a timer or poll at interrupt level zero.

```
;
; A ROUTINE TO RESET THE DHQ11 AND CHECK THAT IT IS FUNCTIONING
; CORRECTLY.
;
DHQRES:
    MOV    #40,#DHQCSR        ; SET MASTER.RESET AND
                                ; CLEAR INTERRUPT ENABLES.
1$:    BIT    #40,#DHQCSR      ; WAIT FOR MASTER.RESET TO
    BNE    1$                 ; CLEAR.
    BIT    #20000,#DHQCSR     ; CHECK THE DIAGNOSTICS
    BNE    DIAGER            ; FAIL BIT.
                                ; NOTE: TEST INSTRUCTION IS
                                ; OK BECAUSE THERE ARE
                                ; NO TRANSMIT.ACTS PENDING.
                                ; SET UP A COUNT.
    MOV    #8.,R5
;
2$:    MOV    #RBUFF,R0       ; GET NEXT DIAGNOSTIC CODE.
    JSR    PC,DIAG           ; PROCESS IT.
    BCS    DIAGER           ; CARRY SET - MUST HAVE
                                ; BEEN AN ERROR.
    SOB    R5,2$            ; GO BACK FOR NEXT CODE.
    RTS    PC                ; RETURN - CARD IS RESET.
;
; DHQ11 HAS FAILED TO RESET PROPERLY, SO HALT AND WAIT FOR
; THE FIELD SERVICE ENGINEER.
;
DIAGER: HALT
        BR    DIAGER
```

### 3.4.2 Configuration

This routine sets the characteristics of channel 1 as follows:

1. Transmit and receive at 300 bits/s
2. Seven data bits with even parity and one stop bit
3. Transmitters and receivers enabled
4. No modem control
5. No automatic flow control.

```
SETUP::
MOV    #1,*DHQCSR           ; LOAD INDEX REG
                                ; WITH CHANNEL NO.
MOV    #052560,*LPR        ; DATA RATE, STOP BITS,
                                ; PARITY AND LENGTH.
MOV    #4,*LNCTRL          ; ENABLE THE RECEIVER.
MOVB   #200,*TBFAD2+1      ; ENABLE THE TRANSMITTER.

RTS    PC                   ; RETURN - CHANNEL 1 DONE.
```

### 3.4.3 Transmitting

3.4.3.1 Single-Character Programmed Transfer (DHU11 Mode) – The following is a program to send a message on channel 1.

The CSR is polled for TX.ACTION reports, but a TX.ACTION interrupt could also be used.

This program would function on a DHQ11 with only this channel active. Otherwise it would lose TX.ACTION reports of other channels. However, a program to control all channels would be too big to use as an example.

```
;
; A ROUTINE TO WRITE A MESSAGE TO CHANNEL 1 USING FIFO OUTPUT
; MODE (PROGRAMMED TRANSFERS).
;
FIFOUT::
    MOV     #1,*DHQCSR           ; POINT TO CHANNEL WE WISH
                                ; TO TALK TO.
    MOV     *MSG,R0              ; POINT TO MESSAGE.
    MOV     MESIZE,R1            ; PUT COUNT IN.
1$:
    TSTB   *FIFOSIZE             ; CHECK THAT THERE IS SPACE IN
    BEQ    1$                    ; THE FIFO.
    MOVB   (R0)+,*FIFODATA       ; MOVE CHARACTER TO TRANSMIT FIFO
    SOB    R1,1$                 ; GO BACK FOR NEXT CHARACTER.
2$:
    MOV     *DHQCSR,R2           ; WAIT FOR TX.ACT.
    BPL    2$
    BIC    *170377,R2            ; ISOLATE CHANNEL NUMBER.
    CMP    *000400,R2           ; IGNORE THE TX.ACT IF IT IS
    BNE    2$                    ; NOT OURS (SHOULD NOT HAPPEN).
    RTS    PC                    ; MESSAGE SENT.
MSG: .ASCII /A TRANSMIT FIFO MESSAGE FOR CHANNEL 1/
MESIZE = .-MSG
.EVEN
```

**3.4.3.2 Single-Character Programmed Transfer (DHV11 Mode)** – This is a program to send a message on channel 1. The message (MESG) is an ASCII string with a null character as terminator.

Polling is used, but a TX.ACTION interrupt could also be used.

This program would function on a DHQ11 with only this channel active. Otherwise it would lose TX.ACTION reports of other channels. However, a program to control all channels would be too big to use as an example.

```

;
; A ROUTINE TO WRITE A MESSAGE TO CHANNEL 1 USING SINGLE-CHARACTER
; MODE.
;
SINGOT:
    MOV     #1, #DHQCSR           ; LOAD INDEX REG WITH
                                ; CHANNEL NO.
    MOV     #MESG, R0            ; POINT TO MESSAGE.
1$:
    MOVB   (R0)+, #TXCHAR        ; MOVE CHARACTER TO TRANSMIT
                                ; BUFFER.
    BEQ    3$                    ; GO RETURN IF ALL CHARACTERS
                                ; GONE.
    MOVB   #200, #TXCHAR+1      ; SET DATA VALID BIT TO START.
2$:
    MOV     #DHQCSR, R1          ; WAIT FOR TX.ACT
    BPL    2$
    BIC    #174377, R1           ; ISOLATE CHANNEL NUMBER.
    CMP    #000400, R1
TXI      BNE    2$                ; IGNORE THE TX.ACT IF IT IS
                                ; NOT OURS (SHOULD NOT HAPPEN).
    BR     1$                    ; GO BACK FOR NEXT CHARACTER.
3$:
    RTS    PC                    ; MESSAGE SENT.
MESG:    .ASCIZ /A SINGLE-CHARACTER MESSAGE FOR CHANNEL 1/

```

### 3.4.3.3 DMA Transfer -

```

;
; THIS PROGRAM SENDS A MESSAGE OUT ON EACH LINE OF THE DHQ11 AND
; HALTS THE MACHINE WHEN ALL TRANSMISSIONS HAVE COMPLETED.
;
; THE MESSAGES ARE TRANSMITTED USING DMA MODE, AND INTERRUPTS ARE
; USED TO SIGNAL TRANSMISSION COMPLETION.
;

```

DMAINT::

```

MOV     *TXINT,*TXVECT ; SET UP THE INTERRUPT VECTORS.
MOV     *200,*TXPSW   ; INTERRUPT PRIORITY FOUR.
MOV     *8.,R0        ; EIGHT LINES TO START.
CLR     R1            ; START AT LINE ZERO.

1$:
MOV     R1,*DHQCSR    ; SELECT THE REGISTER BANK.
MOV     *DMASIZ,*TBFCNT ; SET LENGTH OF MESSAGE.
MOV     *DMAMES,*TBFAD1 ; SET LOWER 16 ADDRESS BITS.
MOV     *100200,*TBFAD2 ; START DMA WITH TRANSMITTER
                        ; ENABLED (ASSUME UPPER ADDRESS
                        ; BITS ARE ZERO).
INC     R1            ; POINT TO NEXT CHANNEL.
SOB    R0,1$         ; REPEAT FOR ALL LINES.

CLR     R5            ; R5 IS USED BY INTERRUPT ROUTINE.
MOV     *100,*DHQCSR+1 ; ENABLE TRANSMITTER INTERRUPTS.

2$:
CMP     *8.,R5        ; WAIT FOR ALL LINES TO FINISH.
BNE    2$

3$:
HALT
BR     3$             ; ALL DONE, SO STOP.

```

```

;
; TRANSMITTER INTERRUPT ROUTINE.
;
; R5 IS INCREMENTED AS EACH LINE COMPLETES.
;

```

TXINT::

```

MOV     *DHQCSR,R0 ; GET LINE NUMBER OF FINISHED LINE.
BIT     *100000,R0 ; CHECK FOR (ANOTHER) TX.ACTION.
BEQ    4$         ; IF NOT, GO RETURN AND WAIT.

INC     R5        ; FLAG THAT ANOTHER LINE HAS FINISHED.
BR     TXINT

4$:
RTI

5$:
HALT
BR     5$         ; MEMORY PROBLEM

```

```

DMAMES: .ASCII <15><12><7><7><7>/SYSTEM CLOSING DOWN NOW/
DMASIZ =      .-DMAMES
        .EVEN

```

### 3.4.3.4 Aborting A Transmission -

```
;
; THIS ROUTINE IS CALLED TO ABORT A TRANSMISSION (EITHER DMA OR
; FIFO) IN PROGRESS ON A SPECIFIED LINE. THIS ROUTINE MAKES THE
; (RATHER RASH) ASSUMPTION THAT THERE ARE NO OTHER TRANSFERS IN
; PROGRESS.
;
; ON ENTRY, R0 CONTAINS THE NUMBER OF THE LINE TO BE ABORTED.
;
```

```
TXABRT::
  MOV    R0,*DHQCSR    ; POINT TO THE CHANNEL TO BE ABORTED.
  BIS    *1,*LNCTRL    ; SET THE TRANSMIT ABORT BIT.
1$:
  MOV    *DHQCSR,R1    ; WAIT FOR THE TX.ACT.
  BPL    1$
  SWAB   R1            ; CHECK IT IS OUR LINE.
  BIC    *177760,R1
  CMP    R0,R1
  BNE    1$            ; IGNORE IT IF IT IS NOT (OUR
                      ; ASSUMPTION WAS WRONG!)

  BIC    1,*LNCTRL    ; CLEAR DOWN THE ABORT FLAG
                      ; FOR NEXT TIME.

  RTS    PC            ; BUFFER COMPLETELY ABORTED.
                      ; IF A DMA WAS IN PROGRESS, THE
                      ; DMA REGISTERS REFLECT WHERE
                      ; THE DHQ11 HAD GOT TO.
```

### 3.4.4 Receiving

```
;
; THIS ROUTINE PROCESSES RECEIVED CHARACTERS UNDER INTERRUPT
; CONTROL. IF AN XOFF IS RECEIVED, THE TRANSMITTER FOR THAT
; CHANNEL IS TURNED OFF. IF AN XON IS RECEIVED, THE TRANSMITTER
; IS TURNED BACK ON. ALL OTHER CHARACTERS ARE IGNORED.
;
; THIS IS JUST AN EXAMPLE. A BETTER WAY TO PERFORM FLOW CONTROL IS
; TO USE THE AUTOMATIC CAPABILITIES OF THE DHQ11.
;
```

RXAUTO::

```
    MOV    *RXINT,*RXVECT ; SET UP THE INTERRUPT VECTORS.
    MOV    *200,*RXPSW   ; INTERRUPT PRIORITY FOUR.
    MOV    *8.,R0        ; ENABLE ALL THE RECEIVERS,
    CLR    R1            ; STARTING AT CHANNEL ZERO,

1$:
    MOVB   R1,*DHQCSR    ; SELECT THE LINE.
    BIS    *4,*LNCTRL    ; ENABLE THIS RECEIVER.
    INC    R1            ; SET POINTER TO NEXT CHANNEL.
    SOB    R0,1$

    MOVB   *100,*DHQCSR  ; ENABLE THE RECEIVER INTERRUPTS.

    RTS    PC            ; RETURN - INTERRUPTS DO THE RESET.
```

```

;
; INTERRUPT ROUTINE TO DO THE MAIN TASK.
;

```

```

RXINT::

```

```

MOV     R0,-(SP)      ; SAVE CALLER'S REGISTERS.

```

```

RXNXTC:

```

```

MOV     #RBUF,R0     ; GET THE CHARACTER.
BPL     RXIEND        ; IF NO DATA VALID, WE HAVE FINISHED.
MOV     R0,-(SP)     ; CHECK FOR ERRORS, MODEM AND
BIC     #107777,(SP)+ ; DIAGNOSTICS CODES.
BNE     RXNXTC        ; - JUST IGNORE THEM (BAD PRACTICE).

```

```

BIC     #170200,R0    ; REMOVE UNNECESSARY BITS.
SWAB   R0             ; POINT TO THIS CHARACTER'S LINE.
BIS     #100,R0       ; (ADD THE INTERRUPT ENABLE BIT.)
MOVB   R0,#DHQCSR
SWAB   R0             ; PUT CHARACTER BACK IN LOWER BYTE.
CMPB   #21,R0        ; WAS IT AN "XON"?
BNE     1$           ; NO - GO CHECK FOR AN "XOFF"

```

```

BISB   #200,*TBFAD2+1 ; ENABLE THE TRANSMITTER.
BR     RXNXTC         ; GO CHECK FOR MORE CHARACTERS.

```

```

1$:

```

```

CMPB   #23,R0        ; WAS IT AN "XOFF"?
BNE     RXNXTC        ; NO - GO CHECK FOR MORE CHARACTERS.

```

```

BICB   #200,*TBFAD2+1 ; DISABLE THE TRANSMITTER.
BR     RXNXTC         ; GO CHECK FOR MORE CHARACTERS.

```

```

RXIEND:

```

```

MOV     (SP)+,R0     ; RESTORE THE DESTROYED REGISTER.
RTI

```

### 3.4.5 Auto XON And XOFF

```
;
; THIS PROGRAM SENDS A MESSAGE OUT ON EACH LINE OF THE DHQ11 AND
; HALTS THE MACHINE WHEN ALL TRANSMISSIONS HAVE COMPLETED.
;
; THE MESSAGES ARE TRANSMITTED USING DMA MODE, AND INTERRUPTS ARE
; USED TO SIGNAL TRANSMISSION COMPLETION.
;
; AUTOMATIC FLOW CONTROL IS ENABLED ON THE OUTGOING DATA.
;

TXAUTO::
    MOV     #ATOINT,#TXVECT ; SET UP THE INTERRUPT VECTORS.
    MOV     #200,#TXPSW    ; INTERRUPT PRIORITY FOUR.
    MOV     #8.,R0         ; EIGHT LINES TO START.
    CLR     R1              ; START AT LINE ZERO.

1$:
    MOVE    R1,#DHQCSR     ; SELECT THE REGISTER BANK.
    BIS     #24,#LNCTRL    ; ENABLE AUTOMATIC FLOW CONTROL
                          ; ON THE TRANSMITTED DATA.
    MOV     #AUTOSZ,#TBFCNT ; SET LENGTH OF MESSAGE.
    MOV     #AUTOMS,#TBFAD1 ; SET LOWER 16 ADDRESS BITS.
    MOV     #100200,#TBFAD2 ; START DMA WITH TRANSMITTER
                          ; ENABLED (ASSUME UPPER ADDRESS
                          ; BITS ARE ZERO).
    INC     R1              ; POINT TO NEXT CHANNEL.
    SOB    R0,1$          ; REPEAT FOR ALL LINES.

    CLR     R5              ; R5 IS USED BY INTERRUPT ROUTINE.
    MOVB   #100,#DHQCSR+1 ; ENABLE TRANSMITTER INTERRUPTS.

2$:
    CMP     #8.,R5         ; WAIT FOR ALL LINES TO FINISH.
    BNE    2$

3$:
    HALT
    BR     3$ ; ALL DONE, SO STOP.
```

```

;
; TRANSMITTER INTERRUPT ROUTINE.
;
; R5 IS INCREMENTED AS EACH LINE COMPLETES.
;
ATOINT::
    MOV     #DHQCSR,R0    ; GET LINE NUMBER OF FINISHED LINE.
    BIT     #10000,R0     ; CHECK FOR DMA FAILURE.
    BNE     4$            ; GO HALT - MEMORY PROBLEM.

    INC     R5            ; FLAG THAT ANOTHER LINE HAS FINISHED.

2$:
    RTI

4$:
    HALT                                ; MEMORY PROBLEM
    BR     4$

AUTOMS: .ASCII <15><12><7><7><7>/SYSTEM CLOSING DOWN NOW/
AUTOSZ =      .-AUTOMS
          .EVEN

```

### 3.4.6 Checking Diagnostic Codes

```
;
; THIS ROUTINE CHECKS THE DIAGNOSTICS CODES RETURNED FROM THE
; DHQ11. ON ENTRY, R0 CONTAINS THE CHARACTER RECEIVED FROM THE
; DHQ11. ON EXIT, THE CARRY BIT WILL BE CLEAR FOR SUCCESS, SET
; FOR FAILURE.
;
```

```
DIAG::
    MOV     R0,-(SP)      ; SAVE THE CODE FOR LATER.

    BIC     #107776,R0   ; CHECK THAT IT IS A DIAG. CODE.
    CMP     #070001,R0
    BNE     DIAGEX       ; IF NOT, JUST EXIT NORMALLY.

    MOV     (SP),R0      ; GET THE CODE BACK.

    BITB   #200,R0       ; CHECK FOR CHIP VERSION NUMBER.
    BEQ    DIAGEX
    CMPB   #201,R0       ; SELF-TEST NULL CODE.
    BEQ    DIAGEX
    CMPB   #203,R0       ; SELF-TEST SKIPPED CODE.
    BEQ    DIAGEX

    CMPB   #305,R0       ; DHQ RUNNING CODE.
    BEQ    DIAGEX
                                ; ALL THE REST ARE ERROR CODES.

    SEC
    BR     DIAGXX        ; AN ERROR CODE WAS RECEIVED, SO
                                ; SET THE CARRY FLAG.

DIAGEX:
    CLC                                ; EVERYTHING OK, SO CLEAR CARRY.
DIAGXX:
    MOV     (SP)+,R0      ; RESTORE THE CHARACTER/INFO.
    RTS     PC
```



## CHAPTER 4 TROUBLESHOOTING

### 4.1 SCOPE

This chapter explains how to isolate the cause of a communications problem between the DHQ11 and the equipment to which it is connected.

### 4.2 PREVENTIVE MAINTENANCE

No preventive maintenance is needed for this option. However, you should always ensure that all cables are clear of danger, and that all the connectors are secure.

Make sure that all cables are clearly labelled, so that you can easily identify which channel number and which DHQ11 module are associated with each terminal.

### 4.3 TROUBLESHOOTING PROCEDURES

Troubleshooting procedures are to identify whether the problem is caused by:

- The module
- A terminal
- The cabling and distribution panels.

First decide whether the problem is associated with one channel, a group of four channels, or all eight channels.

If all channels are faulty, run the user diagnostics to test the module. Also check whether your software has a driver for the DHQ11.

If a group of four channels are faulty, check the BC05L-xx cable connected to the module.


For single-channel problems (EIA-232-D):

1. Check for loose cables and connectors.
2. Verify that the terminal is working correctly. If necessary, swap it with another one.
3. When a modem line is suspect, check that the modem is correctly configured for modem signals supported by the DHQ11. Also check that the software driver has the correct baud-rate setting and that modem support is enabled for that line.
4. If the problem cannot be solved, call DIGITAL Field Service.

For single-channel problems (DEC423)

1. Check for loose cables and connectors.

2. Verify that the terminal is working correctly. If necessary, swap it with another one.
3. Disconnect the BC16C-XX cable from the distribution panel, and connect it to the H3101 loopback connector.
4. Type characters at the terminal connected to the suspect line. If characters are echoed back when the H3101 is connected, the cables and terminal are working. If characters are not echoed back, the fault lies with the cable connection to the terminal, or with the terminal itself.
5. Rectify the cable or terminal fault, if there is one. If not, make sure that the user diagnostics for the module run correctly.
6. If the problem cannot be solved, call DIGITAL Field Service.

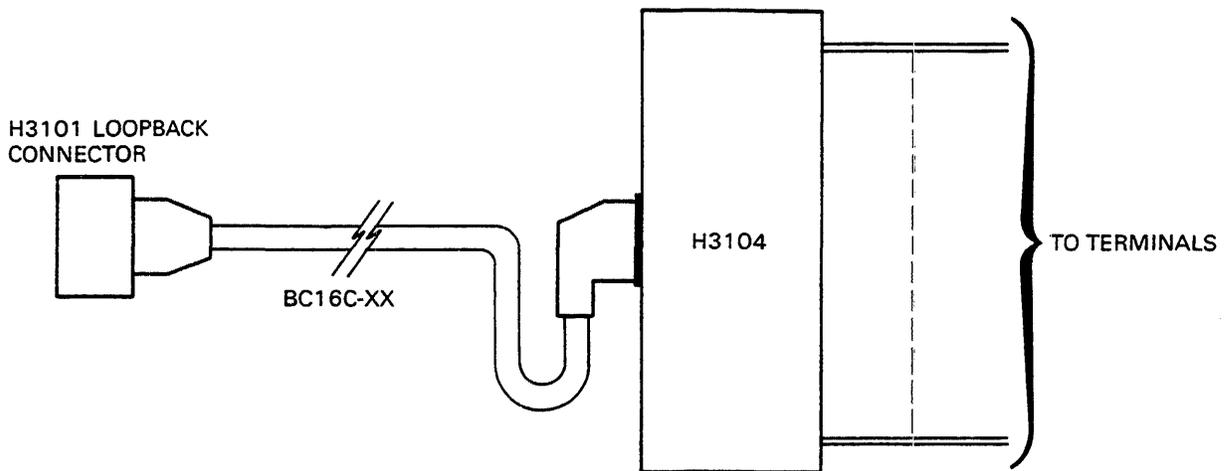

RE3206

Figure 4-1 Troubleshooting DEC423 Installations

#### 4.4 INTERNAL DIAGNOSTICS

Internal diagnostics run without intervention from the operator. There are two tests: the self-test and the background monitor program (BMP).

##### 4.4.1 Self-Test

The self-test starts immediately after the Q-bus or module has been reset. It performs a comprehensive internal logic test but does not test the Q-bus interface. The DIAG.FAIL bit and the 'diagnostics passed' LED on the module give an indication of a successful self-test. The self-test also reports error or status information to the host via the receive FIFO.

The self-test has completed successfully if the LED is on 1.7 seconds after the self-test has been initiated. The self-test is started by setting the MASTER.RESET bit in the CSR, either by resetting the module through the program interface or by a Q-bus initialisation sequence. The LED is turned off when the self-test starts, and the test completes after 30ms. The self-test then finishes in one of three ways:

- If skip self-test was used, the LED turns on and the MASTER.RESET is cleared

- If the board is in DHV11 mode, the LED flickers, and the end of self-test is delayed for 1.2 seconds to maintain compatibility with DHV11. At the end of the delay period the LED turns on and the MASTER.RESET is cleared
- If the board is in DHU11 mode, the LED flickers, and the end of self-test is delayed for 1.7 seconds to maintain compatibility with DHU11. At the end of the delay period the LED turns on and the MASTER.RESET is cleared.

In all three cases, if the self-test encounters a failure, the LED will be off after the self-test (and delay) has completed.

#### NOTE

**The DIAG.FAIL bit controls the LED; when the DIAG.FAIL bit is set, the LED is off, and when it is clear, the LED is off.**

Self-test provides a high level of confidence that the majority of the module logic is working. The user diagnostics must also be used to test the Q-bus interface and verify that the switch settings on the module switchpacks are correct.

#### 4.4.2 Background Monitor Program (BMP)

When the DHQ11 is not doing other tasks, the BMP carries out tests on the module. If an error is detected, the BMP reports to the host via the FIFO, and also switches OFF the 'diagnostics passed' LED.

By writing codes to the line-parameter register, the host can cause the BMP to report the status of the device, even if an error has not been detected. This facility is used if the host suspects that the option is faulty. More information on the self-test and BMP diagnostics is given in Chapter 3 of this manual.

### 4.5 MicroPDP-11 DIAGNOSTICS

#### 4.5.1 User-Mode Diagnostics

These tests can be used by an untrained operator to verify the basic operation of the option. User-mode tests do not cause any disruption to data networks or devices to which the DHQ11 may be connected. Such networks and devices do not have to be disconnected from the DHQ11 during the tests. The MicroPDP-11 system manuals describe how to load and run these diagnostics.

**4.5.1.1 Running User-Mode Tests** – All user-mode tests are run by selection from the test menu displayed when the user diagnostics are booted. See Chapter 2 for more details.

A MicroPDP-11 Maintenance Kit is available, which allows trained personnel to run individual diagnostic programs under the XXDP+ diagnostic monitor, and to configure and run DECX11 system test programs. The XXDP+ functional diagnostic is VHQA\*\*.BIN, and the DECX11 module is XDHV\*\*.OBJ.

#### 4.6 MicroVAX II DIAGNOSTICS

Diagnostics for MicroVAX II systems all run under the MicroVAX Maintenance System (MMS). The MicroVAX II system manuals describe how to load the MMS into the MicroVAX II, and how to run MMS diagnostics. All the tests can be run by selection from the test menus displayed when MMS is booted.

#### **4.6.1 User-Mode Tests**

These tests can be used by an untrained operator to verify the basic operation of the option. User-mode tests do not cause any disruption to data networks or devices to which the DHQ11 may be connected. Such networks and devices do not have to be disconnected from the DHQ11 during the tests. See Chapter 2 for more details.

#### 4.7 FIELD-REPLACEABLE UNITS (FRUs)

The FRUs are:

Reference No.	Item
M3107	Dual-height DHQ11 module
BC05L-xx	Flat cable, 40 conductor

#### For EIA-232-D Installations

H3173-A	Distribution panel
---------	--------------------

#### For DEC423 Installations

H3100	Active distribution panel
BC16C-25	Multiway cable
H3104	Cable concentrator
70-22775-XX	Power cable



## APPENDIX A MODEM CONTROL

### A.1 SCOPE

This appendix contains information useful to both the programmer and the engineer. It defines control signals, describes typical modem control methods, and warns against likely network faults. A detailed example of auto-answer operation is included.

### A.2 MODEM CONTROL

The DHQ11 supports sufficient modem control to permit full-duplex operation over the public switched telephone network (PSTN) and over private telephone lines. Table A-1 lists the control leads supported by the DHQ11, together with an explanation of their use and purpose. In this appendix, the terms **modem** and **dataset** have the same meaning. They refer to the device which is used to modulate and demodulate the signals transmitted over the communications circuits.

Table A-1 Modem Control Leads

Name	EIA-232-D	V.24	25-Pin	Definition
GND	AB	102	7	Signal Ground. This is a reference level for the data and control signals used at the line interface.
TXD	BA	103	2	From DHQ11 to modem. This signal contains the serial bit stream to be transmitted to the remote station.
RXD	BB	104	3	From modem to DHQ11. This signal is the serial bit stream received by the modem from the remote station.
RTS	CA	105	4	From DHQ11 to modem. Causes the modem's carrier to be placed on the line.
CTS	CB	106	5	From modem to DHQ11. Indicates that the modem has successfully placed its carrier on the line, and that data presented on circuit BA will be transmitted to the communication channel.
DSR	CC	107	6	From modem to DHQ11. Indicates that the modem has completed all call establishment functions and is successfully connected to a communications channel.

**Table A-1 Modem Control Leads (Cont.)**

<b>Name</b>	<b>EIA-232-D</b>	<b>V.24</b>	<b>25-Pin</b>	<b>Definition</b>
DTR	CD	108/2	20	From DHQ11 to modem. Indicates to the modem that the DHQ11 is powered up and ready to answer an incoming call.
DCD	CF	109	8	From modem to DHQ11. Indicates to the DHQ11 that the remote station's carrier signal has been detected and is within appropriate limits.
RI	CE	125	22	From modem to DHQ11. Indicates that a new incoming call is being received by the modem.

The DHQ11 modem control interface can be used in many applications. These include control of serial line printers, terminal cluster controllers, and industrial I/O equipment, in addition to the more usual applications in telephone networks. The use of the control leads described in Table A-1 is therefore completely dependent on the application, although there are international standards which telephone network applications should obey. There are no hardware interlocks between the modem control logic and the transmitter and receiver logic. Program control manages these actions, as necessary.

A subset of the leads listed in Table A-1 could be used to establish a communications link using modems connected to the switched telephone network. Ring Indicator (RI), Data Terminal Ready (DTR), and Data Carrier Detected (DCD) are the absolute minimum requirements. In some countries Dataset Ready (DSR) is also needed. It is usually desirable, however, to implement modem control protocols which will operate over most telephone systems in the world. Also, some protection should be included to guard against network faults, particularly in applications such as dial-up timesharing systems. Such faults include:

- Making a channel permanently busy (hung) because of a misdialled connection from a non-data station
- Connecting a new incoming call on an in-use channel. This fault might occur, for example, after a temporary carrier loss, if the host system assumed that the carrier was reasserted by the original caller.

Modem control with some protection against common faults, and which is compatible with the telephone networks in most geographic areas, can be implemented by using all the signals listed in Table A-1, in the way described by the CCITT V.24 recommendations. Section A.2.1 describes a method of implementing a full-duplex auto-answer communications link through modems over the PSTN. It is provided here only to show the operation and interaction of DHQ11 modem control leads in a typical application.

#### **A.2.1 Example Of Auto-Answer Modem Control For The PSTN**

The system operator determines which DHQ11 channels should be configured for either local or remote operation. Local operation implies control of data-leads-only, while remote operation implies that modem control will be supported. The host software will assert DTR and RTS together with the LINK.TYPE bit in the LNCTRL register for all DHQ11 channels configured for remote operation. DTR informs the modem that the DHQ11 is powered up and ready to acknowledge control signals from

the modem. RTS is asserted for the full-duplex mode of operation, and causes the modem to place its carrier on the telephone line when the modem answers a call. Link Type (LNCTRL<8>) enables modem status information to be placed in the receive character FIFO, where it will be handled by an interrupt service routine. Modem status changes are always reported in the STAT register regardless of the state of LNCTRL<8>. The modem is now prepared to auto-answer an incoming call.

Dialing the modem's number causes RI to be asserted at the line interface. This informs the DHQ11 that a new call is being received. RI has to be in a stable state for at least 30 ms, or the change will not be reported by the DHQ11. Since DTR is already asserted, the modem will auto-answer the incoming call and start its handshaking sequence with the calling station. The time needed to complete the handshaking sequence can be in the order of tens of seconds if fallback-mode speed selection and satellite links are involved. The modem will assert DSR to indicate to the DHQ11 that the call has been successfully answered and a connection established.

#### NOTE

**On some older types of modem used on the PSTN, the opposite effect is also true. The RI signal may be very short, or it may not even occur if DTR was previously asserted. When this type of modem answers an incoming call, it asserts DSR almost immediately and deasserts RI at the line interface. Programs must therefore expect RI or DSR or DCD as the first dataset status change received from the modem when establishing a connection.**

As RTS was previously asserted, the modem's carrier will be placed on the line when DSR is asserted. When the modem has successfully placed its carrier on the line it will assert CTS. This indicates to the DHQ11 that it can start to transmit data. If the incoming call is the result of a misdialled number, a carrier signal may never be received. To guard against this, the host starts a timer when it detects RI or DSR. This is usually in the range 15 to 40 seconds, within which time the carrier must be detected. When the modem detects the remote modem's carrier signal on the line, it will assert DCD. This indicates to the DHQ11 that data is valid on the RXD line.

The modem can now exchange data between the DHQ11 and the calling station for as long as DCD, DSR, and CTS stay asserted. If any of these three signals disappears, or if RI is detected during normal transmission, a fault condition is indicated. A change of state of any of these signals causes an interrupt through the receive FIFO.

The handling of the fault conditions now becomes country-specific, since some telephone systems tolerate a transient carrier loss, while others do not. In the USA it is usual to proceed with a call if carrier resumes within two seconds. In non-USA areas it is possible for telephone supervisory signals, such as dial-tone, to be misinterpreted by the modem as a resumption of carrier. In this case the host program would assume that the connection had been re-established to the original caller and would cause a 'hung' channel. To prevent this, DTR should be deasserted immediately after the loss of DCD, CTS, or DSR, to abort the connection. DTR should stay deasserted for at least two seconds, after which time a new call could be answered.



## APPENDIX B FLOATING ADDRESSES

### B.1 FLOATING DEVICE ADDRESSES

On Q-bus systems a block of addresses in the top 4K words of address space is reserved for options with floating device addresses. This range is from 17760010<sub>8</sub> to 17763776<sub>8</sub>.

Options which can be assigned floating device addresses are listed in Table B-1. This table gives the sequence of addresses for both UNIBUS and Q-bus options. For example, the address sequences could be:

DJ11  
DH11  
DQ11  
DU11/DUV11                      and so on.

Having one list allows us to use one set of configuration rules and one configuration program.

**Table B-1 Floating Device Address Assignments**

Rank	Device	Size (Decimal)	Modulus (Octal)	Address
1	DJ11 gap	4	10	17760010
2	DH11 gap	8	20	17760020
3	DQ11 gap	4	10	17760030
4	DU11, DUV11 gap	4	10	17760040
5	DUP11 gap	4	10	17760050
6	LK11A gap	4	10	17760060
7	DMC11/DMR11 gap	4	10	17760070
8	DZ11/DZV11/DZS11/DZ32 gap	4	10 ***	17760100
9	KMC11 gap	4	10	17760110
10	LPP11 gap	4	10	17760120
11	VMV21 gap	4	10	17760130
12	VMV31 gap	8	20	17760140
13	DWR70 gap	4	10	17760150
14	RL11, RLV11 gap	4	10 *	17760160
15	LPA11-K gap	8	20 *	17760200
16	KW11-C gap	4	10	17760210
17	VSV21 gap	4	10	17760220
18	RX11/RX211/RXV11/RXV21 gap	4	10 *	17760230

**Table B-1 Floating Device Address Assignments (Cont.)**

<b>Rank</b>	<b>Device</b>	<b>Size (Decimal)</b>	<b>Modulus (Octal)</b>	<b>Address</b>
19	DR11-W gap	4	10	17760240
20	DR11-B gap	4	10 **	17760250
21	DMP11 gap	4	10	17760260
22	DPV11 gap	4	10	17760270
23	ISB11 gap	4	10	17760300
24	DMV11 gap	8	20	17760320
25	DEUNA gap	4	10 *	17760330
26	KDA50/UDA50/RQDX3 gap	2	4 *	17760334
27	DMF32 gap	16	40	17760340
28	KMS11 gap	6	20	17760360
29	VS100 gap	8	20	17760400
30	TU81 gap	2	4	17760404
31	KMV11 gap	8	20	17760420
32	DHV11/DHU11/DHQ11 gap	8	20	17760440

\* The first device of this type has a fixed address. Any extra devices have a floating address.

\*\* The first two devices of this type have a fixed address. Any extra devices have a floating address.

\*\*\* The DZ11-E and DZ11-F are treated as two DZ11s.

The address assignment rules are as follows.

1. Addresses, starting at 17760010<sub>8</sub> for Q-bus systems, are assigned according to the sequence of Table B-1.
2. Option and gap addresses are assigned according to the octal modulus as follows.
  - Devices with an octal modulus of 4 are assigned an address on a 4<sub>8</sub> boundary (the two lowest-order address bits = 0)
  - Devices with an octal modulus of 10 are assigned an address on a 10<sub>8</sub> boundary (the three lowest-order address bits = 0)
  - Devices with an octal modulus of 20 are assigned an address on a 20<sub>8</sub> boundary (the four lowest-order address bits = 0)
  - Devices with an octal modulus of 40 are assigned an address on a 40<sub>8</sub> boundary (the five lowest-order address bits = 0)
3. Address space equal to the device's modulus must be allowed for each device which is connected to the bus.
4. A 1-word gap, assigned according to rule 2, must be allowed after the last device of each type. This gap could be bigger when rule 2 is applied to the following rank.

5. A 1-word gap, assigned according to rule 2, must be allowed for each unused rank on the list if a device with a higher address is used. This gap could be bigger when rule 2 is applied to the following rank.

If extra devices are added to a system, the floating addresses may have to be reassigned in agreement with these rules.

## B.2 FLOATING VECTORS

Each device needs two 16-bit locations for each vector. For example, a device with one receive and one transmit vector needs four words of vector space.

The vector assignment rules are as follows:

1. Each device occupies vector address space equal to 'Size' words. For example, the DLV11-J occupies 16 words of vector space. If its vector were 300<sub>8</sub>, the next available vector would be at 340<sub>8</sub>.
2. There are no gaps, except those needed to align an octal modulus.

**Table B-2 Floating Vector Address Assignments**

Rank	Device	Size (Decimal)	Modulus (Octal)
1	DC11	4	10
1	TU58	4	10
2	KL11	4	10 **
2	DL11-A	4	10 **
2	DL11-B	4	10 **
2	DLV11-J	16	10
2	DLV11, DLV11-F	4	10
3	DP11	4	10
4	DM11-A	4	10
5	DN11	2	4
6	DM11-BB/BA	2	4
7	DH11 modem control	2	4
8	DR11-A, DRV11-B	4	10
9	DR11-C, DRV11	4	10
10	PA611 (reader + punch)	8	10
11	LPD11	4	10
12	DT07	4	10
13	DX11	4	10
14	DL11-C to DLV11-E	4	10
15	DJ11	4	10
16	DH11	4	10
17	VT40	8	10
17	VSV11	8	10
18	LPS11	12	10

**Table B-2 Floating Vector Address Assignments (Cont.)**

<b>Rank</b>	<b>Device</b>	<b>Size (Decimal)</b>	<b>Modulus (Octal)</b>
19	DQ11	4	10
20	KW11-W, KWV11	4	10
21	DU11, DUV11	4	10
22	DUP11	4	10
23	DV11 + modem control	6	10
24	LK11-A	4	10
25	DWUN	4	10
26	DMC11/DMR11	4	10
27	DZ11/DZS11/DZV11, DZ32	4	10
28	KMC11	4	10
29	LPP11	4	10
30	VMV21	4	10
31	VMV31	4	10
32	VTV01	4	10
33	DWR70	4	10
34	RL11/RLV11	2	4 *
35	TS11, TU80	2	4 *
36	LPA11-K	4	10
37	IP11/IP300	2	4 *
38	KW11-C	4	10
39	RX11/RX211 RXV11/RXV21	2	4 *
40	DR11-W	2	4
41	DR11-B	2	4 *
42	DMP11	4	10
43	DPV11	4	10
44	ML11	2	4 ***
45	ISB11	4	10
46	DMV11	4	10
47	DEUNA	2	4 *
48	KDA50/RQDX3	2	4 *
49	DMF32	16	4
50	KMS11	6	10
51	PCL11-B	4	10
52	VS100	2	4
53	TU81	2	4
54	KMV11	4	10
55	KCT32	4	10
56	IEX	4	10
57	DHV11/DHU11/DHQ11	4	10

**Table B-2 Floating Vector Address Assignments (Cont.)**

<b>Rank</b>	<b>Device</b>	<b>Size (Decimal)</b>	<b>Modulus (Octal)</b>
58	DMZ32/CPI32(async)	12	4
59	CPI32(sync)	12	4
60	QNA	12	4
61	QVSS	4	10
62	VS31	2	4
63	LNV11	2	4
64	QPSS	2	4
65	QTA	2	4
66	DSV11	2	4

\* The first device of this type has a fixed vector. Any extra devices have a floating vector.

\*\* If a KL11 or DL11 is used as the console, it has a fixed vector.

\*\*\* ML11 is a MASSBUS device which can connect to UNIBUS via a bus adapter.



## **APPENDIX C**

### **AUTOMATIC FLOW CONTROL**

#### **C.1 OVERVIEW**

Flow control is the control of the flow of data along a communications line, to prevent an overflow of queues or buffers, or to prevent the loss of data which the receiver is unable to accept.


The method of flow control adopted for the DHQ11 is datastream-embedded ASCII control characters. The control characters used are XOFF (octal 023) and XON (octal 021). XOFF stops transmission and XON starts transmission. The codes are transmitted in the opposite direction to that of the data they control.

The DHQ11 has one mode of operation for transmitted data (received flow-control characters) and two modes of operation for received data (transmitted flow-control characters). Each mode can be enabled on a 'per channel' basis. Each direction of flow is discussed separately within this appendix.

#### **C.2 CONTROL OF TRANSMITTED DATA**

The transmitted-data mode of flow control is the simplest of the three flow-control modes of the DHQ11.

When the DHQ11 receives an XOFF character for a particular channel, the TX.ENA bit for that channel is cleared. When this bit is clear, the DHQ11 will not transmit any data on that channel; however, internally generated flow-control characters will still be transmitted. When an XON character is received, the TX.ENA bit for that channel is set. Figure C-1 illustrates the operation of the transmitted data flow control.

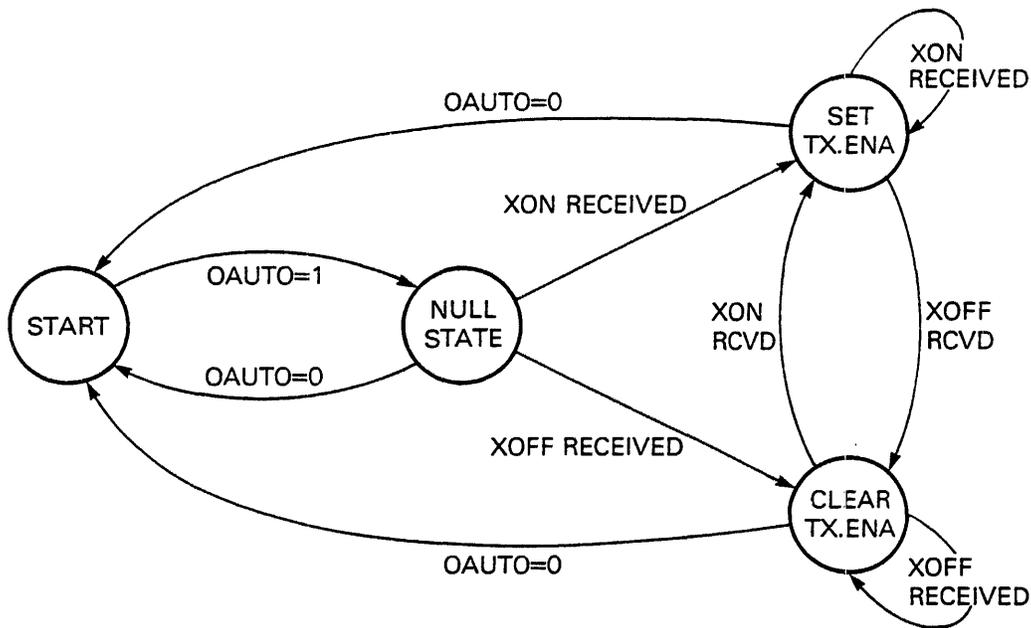

RD2251

Figure C-1 Transmitted Data Flow Control

Only characters without transmission errors are checked for XON and XOFF codes. The characters have their parity bit stripped before comparison.

**NOTE**

**For the automatic flow control to operate correctly, the terminal must also recognize and respond to flow-control characters.**

The transmitted-data mode of flow control is enabled by setting OAUTO (bit 4 of the line control register), and is disabled by clearing it. The default for this mode is disabled.

Received flow-control characters are processed in the same way as normal characters, and are placed into the receive FIFO. This is not affected by OAUTO, but these characters can be filtered out by setting DISAB.XRPT. If DISAB.XRPT is set, you do not need a routine in your software driver to filter flow-control characters from the data stream.

**C.3 CONTROL OF RECEIVED DATA**

Received-data flow control is slightly more complicated than transmitted-data flow control. Therefore the two modes of received-data flow control are described separately.

**C.3.1 Flow Control By The Level Of The Receive FIFO**

Occasionally, the program may not be able to empty the receive FIFO as fast as the received data is filling it. Because the program does not know how full the receive FIFO is, it cannot take action to prevent data loss. To overcome this problem, the DHQ11 can be programmed on a 'per channel' basis. When the receive FIFO becomes three-quarters full, an XOFF is sent to the channels from which data is




The receive FIFO-level flow-control mode is enabled by setting IAUTO (bit 1 of the line control register), and disabled by clearing the bit. The default for this mode is disabled. If IAUTO is cleared after an XOFF is sent, but before the receive FIFO level drops below half full, an XON is still sent.

**NOTE**

**FIFO.CRIT is set (T) when the receive FIFO is being filled, and contains 192 characters. It is cleared (F) when receive FIFO reaches 127 characters as it is being emptied.**

**C.3.2 Flow Control By Program Initiation**

Occasionally, the program itself may need to invoke flow control, for example, when host buffers become full. To allow this, the DHQ11 has a FORCE.XOFF bit (bit 5 of the line control register). When the FORCE.XOFF bit is set, the DHQ11 transmits an XOFF character for that channel. A further XOFF bit is transmitted for every second character received on the channel afterwards. An XON is sent when the FORCE.XOFF bit is cleared. Figure C-3 shows the operation of program-initiated flow control. The FORCE.XOFF bit is cleared by a DHQ11 reset sequence.

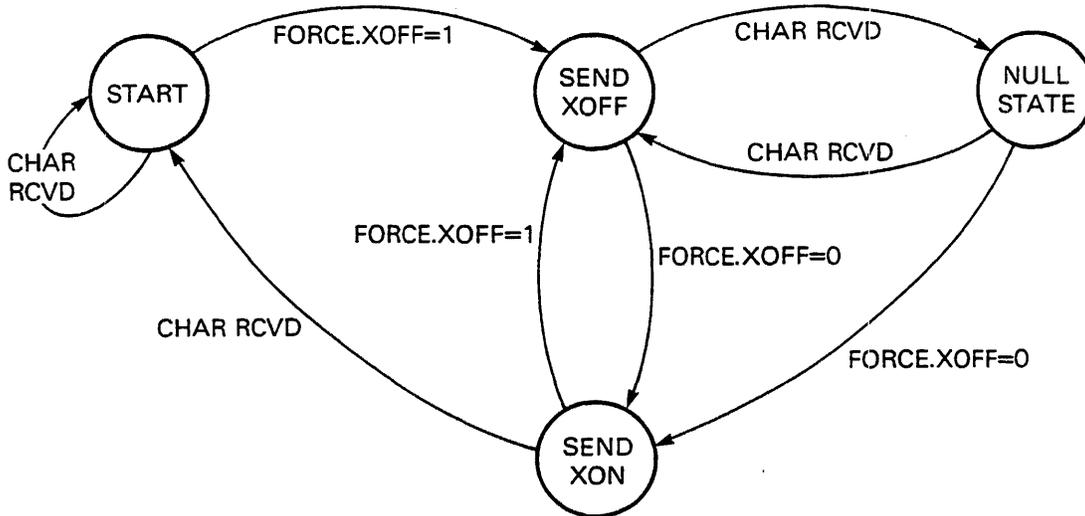

RD2253

Figure C-3 Program-Initiated Flow Control

**NOTE**

**If the program sets the FORCE.XOFF bit and then immediately clears it, the XOFF code may not be transmitted. This is because there is a delay of up to 350 microseconds before the DHQ11 detects the need to send an XOFF. If the conditions for sending an XOFF clear before within this time delay, no XOFF code will be sent.**

### **C.3.3 Mixing The Two Types Of Received-Data Flow Control**

To calculate the effect of using the two modes, they should be logically ORed together; an XON will not be sent until both sources are inactive. An XOFF will be sent when FORCE.XOFF is set, even if FIFO-critical mode is active and an XOFF has already been sent on that channel. If the receive FIFO critical mode becomes active whilst FORCE.XOFF is set, then another XOFF is sent in response to the next received character.



## APPENDIX D GLOSSARY OF TERMS

### D.1 SCOPE

This appendix contains a glossary of terms used in this manual and in other DIGITAL technical manuals in this series. The terms are in alphabetical order for easy reference.

### D.2 GLOSSARY

**Asynchronous.** A method of serial transmission in which data is preceded by a start bit and followed by a stop bit. The receiver provides the intermediate timing to identify the data bits.

**Auto-answer.** A facility of a **modem** or terminal to answer a call automatically.

**Auto-flow.** Automatic flow control. A method by which the DHQ11 controls the flow of data by means of special characters within the data stream.

**Backward channel.** A channel which transmits in the opposite direction to the usual data flow. Normally used for supervisory or control signals.

**Base address.** The Q-bus address of the first (lowest) device register (CSR).

**BMP.** Background Monitor Program.

**CCITT.** Comité Consultatif International de Téléphonie et de Télégraphie. An international standards committee for telephone, telegraph, and data communications networks.

**Dataset.** See **modem**.

**DMA.** Direct Memory Access. A method which allows a bus master to transfer data to or from system memory without using the host CPU.

**Duplex.** A method of transmitting and receiving on the same channel at the same time.

**EIA.** Electrical Industries Association. An American organization with the same function as the CCITT.

**FCC.** Federal Communications Commission. An American organization which regulates and licenses communications equipment.

**FIFO.** First In First Out. The term describes a register or memory from which the oldest data is removed first.

**Floating address.** An address assigned to an option which does not have a fixed address allocated. The address is dependent on other floating address devices connected to the bus.

**Floating vector.** An interrupt vector assigned to an option which does not have a fixed vector allocated. The vector is dependent on other floating vector devices connected to the bus.

**FRU.** Field-Replaceable Unit.

**IC.** Integrated Circuit.

**I/O.** Input/Output.

**LSB.** Least-Significant Bit.

**MMJ.** Modified Modular Jack.

**Modem.** The word is a contraction of **MO**dulator **DE**Modulator. A modem interfaces a terminal to a transmission line. A modem is sometimes called a **dataset**.

**MSB.** Most Significant Bit.

**Multiplexer.** A device which allows a number of inputs to share one common output.

**Null modem.** A cable which allows two terminals which use **modem** control signals to be connected together directly. It is only possible over short distances.

**OCTART.** A single IC containing eight UARTs.

**PCB.** Printed Circuit Board.

**Protocol.** A set of rules which define the control and flow of data in a communications system.

**PSTN.** Public Switched Telephone Network.

**Q-bus.** A global term for a specific **DIGITAL** bus on which the address and data are multiplexed.

**RAM.** Random Access Memory.

**RFI.** Radio Frequency Interference.

**ROM.** Read Only Memory.

**Split-speed.** A facility of a data communications channel which can transmit data at a different speed from the received data.

**UART.** Universal Asynchronous Receiver Transmitter. A device which converts between serial and parallel data, used for transmission and reception of serial **asynchronous** data on a channel.

**XOFF.** A control code ( $23_8$ ) used to disable a transmitter. Special hardware or software is needed for this function.

**XON.** A control code ( $21_8$ ) used to enable a transmitter which has been disabled by an **XOFF** code.

## APPENDIX E DHQ11 Q-BUS CONNECTIONS

**Table E-1 DHQ11 Q-Bus Connections**

Category	Signal	Function	Pin Number
Data/Address	BDAL0.L — 1.L BDAL2.L — 15.L BDAL16.L — 17.L BDAL18.L — 21.L	Data/Address Lines	AU2 — AV2 BE2 — BV2 AC1 — AD1 BC1 — BF1
Data Control	BDOUT.L BRPLY.L BDIN.L BSYNC.L BWTBT.L BBS7.L	Data Output Strobe Reply Handshake Data Input Strobe Synchronize Strobe Write Byte Control I/O Page Select	AE2 AF2 AH2 AJ2 AK2 AP2
Interrupt Control	BIRQ.L BIAKI.L BIAKO.L	Int. Req. Level 4 Int. Ack. Input Int. Ack. Output	AL2 AM2 AN2
DMA Control	BDMR.L BDMGI.L BDMGO.L BSACK.L BREF.L	DMA Request DMA Grant Input DMA Grant Output Bus Grant Acknowledge Refresh and Block Mode	AN1 AR2 AS2 BN1 AR1
System Control	BINIT.L	Initialization Strobe	AT2
Power Supplies	+5 V +12 V	Dc volts Dc volts	AA2 — DA2 AD2, BD2
Grounds	GND GND GND GND	Ground Connections Ground Connections Ground Connections Ground Connections	AC2 — DC2 AT1 — DT1 AJ1 — BJ1 AM1 — BM1



## INDEX

**A**  
Address, device, 2-3, B-1  
vector, 2-3, 2-5, B-3

**B**  
Background monitor program, 3-30, 4-2, 4-3  
BC05L cables, 1-2, 1-6, 1-7, 2-2, 4-1  
BC16C cables, 4-2

**C**  
Cable concentrator, H3104, 2-2, 2-17  
Cables, BC05L, 1-2, 1-6, 1-7, 2-2, 4-1  
BC16C, 4-2  
full modem, 2-21  
null modem, 2-20

**D**  
Data rates, 1-8, 3-11  
DEC423, 1-1, 1-2, 1-6, 1-7, 1-8, 1-9, 1-10, 1-11,  
1-12, 2-2, 2-9, 2-10, 2-11, 2-13, 2-22, 4-1  
Device address, 2-3, B-1  
DHU11 Mode, 1-1, 1-3, 2-5, 2-6, 3-1, 3-13, 3-24  
DHV11 Mode, 1-1, 1-3, 2-5, 2-6, 3-1, 3-13, 3-24  
Diagnostics, 2-13, 3-4, 3-11, 3-41  
MicroPDP-11, 4-3  
MicroVAX II, 4-3  
Distribution panel, panel, 2-11, 2-17  
H3100, 2-22  
H3173A, 2-2, 2-20  
DMA, 3-20, 3-23, 3-35  
request, 2-8  
Driver, line, 1-10

**E**  
ELA-232-D, 1-1, 1-2, 1-6, 1-7, 1-8, 1-9, 1-10,  
1-11, 2-2, 2-9, 2-10, 2-11, 2-13, 2-17, 2-20,  
4-1, A-1

**F**  
Full modem cables, 2-21

**H**  
H3100 distribution panel, 2-22  
H3101 loopback connector, 2-2, 2-17, 4-2  
H3104 cable concentrator, 2-2, 2-17  
H3173A distribution panel, 2-2, 2-20

**I**  
Interface, serial, 1-9  
Interrupt request, 2-8

**L**  
Line driver, 1-10  
receiver, 1-10  
Loopback connector, H3101, 2-2, 2-17, 4-2

**M**  
MicroPDP-11 diagnostics, 4-3  
MicroVAX II diagnostics, 4-3  
Mode,  
DHU11, 1-1, 1-3, 2-5, 2-6, 3-1, 3-13, 3-24  
DHV11, 1-1, 1-3, 2-5, 2-6, 3-1, 3-13, 3-24  
Modem control, 1-2, 1-12, 3-27, A-1  
signals, 1-9, 2-19, 3-12, 3-13, A-1  
full, cables, 2-21  
null, cables, 2-20  
signals, 2-21  
Monitor, background, program, 3-30, 4-2, 4-3

**N**  
Null modem cables, 2-20  
signals, 2-21

**O**  
OCTART, 1-16

**P**  
Panel, distribution, 2-11, 2-17  
H3100 distribution, 2-22  
H3173A distribution, 2-2, 2-20  
PSTN, A-2, A-3

**Q**  
Q-bus, 1-2, 1-8, 1-12, 2-7

**R**  
Receiver, line, 1-10  
Request, DMA, 2-8  
interrupt, 2-8

## S

Self-test, 3-28, 4-2  
Serial interface, 1-9  
Signals, modem control, 1-9, 2-19, 3-12, 3-13,  
A-1  
null modem, 2-21  
Switchpacks, 1-2, 1-3, 2-3, 2-4, 2-5, 2-6

## V

V.10, 1-9  
V.24, 1-9, A-1  
V.28, 1-9  
Vector address, 2-3, 2-5, B-3

## X

X.26, 1-9  
Xoff, 1-2, 3-25, 3-26, 3-39, C-1, C-2, C-3, C-4,  
C-5  
Xon, 1-2, 3-25, 3-26, 3-39, C-1, C-2, C-3, C-4,  
C-5