


Terminet^{*} DATA COMMUNICATION PRODUCTS

INSTALLATION INSTRUCTION

FRONT PAPER LOW SWITCH KIT

(44C414731-G01)

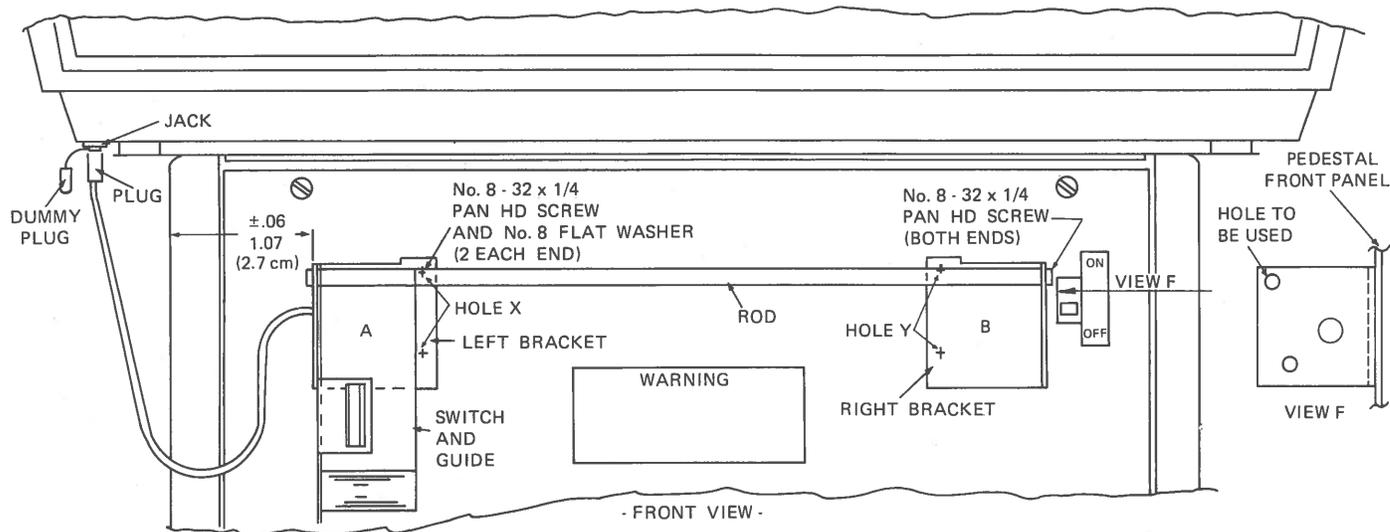

Installation of Optional Front Paper Low Switch Kit

To install the Front Paper Low Switch Kit (44C414731-G01) on the Terminet 340 Series Printer, perform the following steps (no special tools required):

1. Attach rod to left bracket A and right bracket B at upper bracket holes (see view F on figure), using two No. 8-32 x 1/4" pan head screws. (Bracket angles are at outer sides.)
2. Using four No. 8-32 x 1/4" pan head screws and four No. 8 flat washers, attach brackets to existing vent slots on external side of front pedestal panel 1.07 inches (2.7 cm) from left side in accordance with figure. Secure bracket A at holes X and bracket B at holes Y. Horizontal levelling is aided by positioning brackets at bottom of vent holes.
3. Snap Switch and Guide Assembly onto left end of rod as illustrated.
4. Remove dummy plug from jack in left bottom of of Printer and plug in jack from front paper low switch. (When plug from front paper low switch is installed in jack, both the front and rear low paper sensing are enabled.) ASSURE THAT PLUG IS SECURELY INSTALLED IN JACK.
5. Place approximately 10 feet (3 meters) paper supply at front of Printer.
6. Raise clear plastic paper shield and push Paper Loading Lever in and down to LOAD position.

*Trademark, General Electric Company, USA

© Copyright General Electric Company, USA 1976

The information contained herein does not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to General Electric Company, USA.

GENERAL  ELECTRIC

7. Feed paper up into front of Printer. If multiple form sets are used, shiny side of carbon paper should be toward rear for front loading.

NOTE

Slide paper over Paper Out Switch and not beside it, since paper cannot move laterally onto switch.

8. Continue feeding paper until it appears in front of platen. Pull enough paper through to reach beyond tractors. Be sure paper alignment is

straight with respect to Printer so that no side pressure or tension is applied to the paper.

9. Align tractors with paper and install paper on tractors.
10. Push up on Paper Loading Lever to RUN position and close clear plastic shield.
11. Check paper alignment with paper rack on top of Printer and with Front Paper Low Switch Kit on Pedestal.
12. Start Printer and check operation of switch.

PARTS

The Front Paper Low Switch Kit (44C414731-G01) contains the following parts:

IDENTIFICATION NUMBER	DESCRIPTION	QUANTITY
44A410517-G06	Switch and Guide	1
44B419166-001	Left Bracket	1
44B419166-002	Right Bracket	1
44B410497-004	Rod	1
N57P15004C	Screw (8-32 x 1/4)	6
N402P38C	Washer (No. 8 Flat)	4
GEK-49285	Installation Instruction	1

Data Communication Products Department • General Electric Company

Waynesboro, Virginia 22980, USA

GENERAL  **ELECTRIC**