

RTE-A Index and Glossary

NOTICE

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THE MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

RESTRICTED RIGHTS LEGEND

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARs 252.227.7013.

Copyright © 1981, 1985, 1986, 1989, 1990, 1992, 1993, 1995 by Hewlett-Packard Company

Printing History

The Printing History below identifies the edition of this manual and any updates that are included. Periodically, update packages are distributed which contain replacement pages to be merged into the manual, including an updated copy of this printing history page. Also, the update may contain write-in instructions.

Each reprinting of this manual will incorporate all past updates; however, no new information will be added. Thus, the reprinted copy will be identical in content to prior printings of the same edition with its user-inserted update information. New editions of this manual will contain new information, as well as all updates.

To determine what manual edition and update is compatible with your current software revision code, refer to the Manual Numbering File. (The Manual Numbering File is included with your software. It consists of an "M" followed by a five digit product number.)

First Edition	Dec 1981	
Second Edition	Jan 1985	
Third Edition	May 1989	Rev. 5010
Fourth Edition	Oct 1990	Rev. 5020
Fifth Edition	Dec 1992	Rev. 6000
Sixth Edition	Nov 1993	Rev. 6100
Seventh Edition	Apr 1995	Rev. 6200

Preface

This is the Index and Glossary for the RTE-A manual set. In it are three sections:

- 1. A guide to the manuals in the set, with a document map to help you find the right manual (or manuals) quickly and a legend of codes used to identify the manuals in the glossary and index.
- 2. A glossary that defines the most important RTE-A terms. After each entry, a list of codes points to other manuals that use or describe the term.
- 3. A combined index for the entire manual set. It goes beyond the glossary manual codes to help you find every reference to all special RTE-A terms. Note that the index also has appropriate references to manuals for subsystems such as Mail/1000, Symbolic Debug, FORTRAN, and so on.

How you use this Index and Glossary is determined by how you want to use RTE-A and by how much experience you have with RTE operating systems. New users can begin in the Guide to RTE-A Manuals section, and work from left to right through the document map to learn more about the system and the languages or subsystems they need. Advanced users will usually begin with the glossary or index, and use the document map to identify manuals related to their work.

The following codes are used throughout the Index and Glossary to identify the RTE-A manuals. In the glossary, several manual codes are listed after the definitions to point to manuals that explain or use the terms. To get more information about a term, refer to the manuals listed after its definition. In the index, instead of only chapter and page numbers for each entry, manual codes *plus* chapter and page numbers are given.

Manual Code	Manual Title (and Part Number)
BKUP	RTE-A Backup and Disk Formatting Utilities Reference Manual (92077-90249)
DATA	Datapair/1000 Reference Manual (92050-90001)
DBUG	Symbolic Debug/1000 Reference Manual (92860-90001)
DDM	RTE-A Driver Designer's Manual (92077-90019)
DRM	RTE-A Driver Reference Manual (92077-90011)
EDIT	EDIT/1000 User's Manual (92074-90001)
FTN	FORTRAN 77 Reference Manual (92836-90001)
GSA	Getting Started With RTE-A (92077-90039)
HPIB	The HP-IB in HP 1000 Computer Systems User's Manual (59310-90064)
LINK	LINK User's Manual (92077-90035)
MAC	Macro/1000 Reference Manual (92059-90001)
MAIL	Mail/1000 User's Manual (92511-90001)
PRIM	RTE-A Primary System Installation Manual (92077-90038)
PRNT	RTE-A Print and Spooling Reference Manual (92077-90248)
PROG	RTE-A Programmer's Reference Manual (92077-90007)
REL	RTE-A Relocatable Libraries Reference Manual (92077-90037)
SCSI	SCSI Host Bus Adapter Card Installation and Reference Manual (12016-90001)
SDM	RTE-A System Design Manual (92077-90013)
SGI	RTE-A System Generation and Installation Manual (92077-90034)
SMM	RTE-A System Manager's Manual (92077-90056)
USER	RTE-A User's Manual (92077-90002)

Table of Contents

∽ -	-! -! -	1_	$\mathbf{D}^{\mathbf{T}}$	- ^	B /		1	_
(7	uae	TO	КI	E-A	IVI	an	เเลเ	S
\sim	иімо					MI.	чч	

Descriptions	9
12016-90001 HP 12016A SCSI Host Card Installation and Reference Manual	9
59310-90064 The HP-IB in HP 1000 Computer Systems User's Guide	g
92050-90001 Datapair/1000 Reference Manual	9
92059-90001 Macro/1000 Reference Manual	g
92074-90001 EDIT/1000 User's Manual	10
92077-90002 RTE-A User's Manual	10
92077-90007 RTE-A Programmer's Reference Manual	10
92077-90011 RTE-A Driver Reference Manual	10
92077-90013 RTE-A System Design Manual	10
92077-90019 RTE-A Driver Designer's Manual	10
92077-90020 RTE-A Quick Reference Guide	11
92077-90034 RTE-A System Generation and Installation Manual	11
92077-90035 LINK User's Manual	11
92077-90036 RTE-A Index and Glossary	11
92077-90037 RTE-A Relocatable Libraries Reference Manual	11
92077-90038 RTE-A Primary System Installation Manual	11
92077-90039 Getting Started With RTE-A	11
92077-90050 RTE-A Software Entry Point Directory	12
92077-90056 RTE-A System Manager's Manual	12
92077-90248 RTE-A Print and Spooling Reference Manual	12
92077-90249 RTE-A Backup and Disk Formatting Utilities Reference Manual	12
92511-90001 Mail/1000 User's Manual	12
92836-90001 FORTRAN 77 Reference Manual	12
92860-90001 Symbolic Debug/1000 User's Manual	12
Glossary of RTE-A Terms	
A L.L. usadisadis usa	1.5
Abbreviations	15 16
	10

Index to RTE-A Manuals

Guide to RTE-A Manuals

Descriptions

The following are brief descriptions of the manuals included with the RTE-A Operating System. The descriptions are sorted by HP part number. After the descriptions, there is a map of the RTE-A manuals. The "neighborhoods" on the map group the manuals by the kinds of system functions they describe. The "roads" are paths that you might use to other manuals when you need more information than is available in the manual you are reading.

12016-90001 HP 12016A SCSI Host Card Installation and Reference Manual

Describes the hardware and software interface between SCSI devices and HP 1000 A-Series computers under RTE-A. It explains how to install the SCSI hardware and software, and how to use the product.

59310-90064 The HP-IB in HP 1000 Computer Systems User's Guide

Describes the hardware and software interface between HP 1000 computers under RTE operating systems, including A-Series computers under RTE-A. It explains briefly how to prepare and connect the hardware, and describes HP-IB programming in detail for FORTRAN, BASIC/1000D, and BASIC/1000C. It includes detailed loading information for all RTE operating systems.

92050-90001 Datapair/1000 Reference Manual

Describes the Datapair/1000 paired disk system that allows the user to duplicate the contents of one disk onto a second disk so that both disks continually contain identical data. Describes how to generate Datapair/1000 into the RTE-A system and boot the system with mirrored disks.

92059-90001 Macro/1000 Reference Manual

Explains Macro/1000 Assembly Language programming under a range of RTE operating systems, including RTE-A. It describes the Macro/1000 machine and assembler instructions, source file generation and assembly, including conditional assembly. It also describes macro creation and macro libraries.

92074-90001 EDIT/1000 User's Manual

Guides new EDIT/1000 users from the basic editing concepts of creating, modifying, and manipulating ASCII files to detailed descriptions of EDIT/1000's powerful commands. For advanced users, it includes an alphabetic listing of descriptions of the complete EDIT/1000 command set and special editing characters. It also explains how to load EDIT/1000 into an RTE operating system.

92077-90002 RTE-A User's Manual

Introduces interactive use of RTE-A through the Command Interpreter program, CI, and the File Manager program, FMGR. It also describes the RTE-A optional VC+ Virtual Code feature package. For new RTE-A users, a tutorial section starts with simple system information requests and advances to program control and multi-user functions. For experienced RTE-A users, a reference section lists and describes the CI and FMGR commands.

92077-90007 RTE-A Programmer's Reference Manual

An advanced manual for programmers who wish to access the RTE-A Operating System directly from their programs. Describes I/O and device control, resource management, and program scheduling from other programs. It also explains use of the optional VC+ features of RTE-A from user programs. Program use of the file management package (FMP) subroutines is also described.

92077-90011 RTE-A Driver Reference Manual

For programmers who wish to use the RTE-A interface and device drivers to control I/O peripherals. All of the available drivers are described. For all of the drivers, the EXEC calls that give user programs access to the drivers are described in detail.

92077-90013 RTE-A System Design Manual

Explains the RTE-A Operating System with special emphasis on helping the system manager configure a new system, troubleshoot a problem system, or alter the existing system. It describes RTE-A data structures, system memory use, internal system routines, and some system generation and installation considerations.

92077-90019 RTE-A Driver Designer's Manual

For advanced programmers who want to write new interface or device drivers, or alter existing drivers for special purposes. Describes the I/O conventions and operating system interface considerations that must be followed to design a driver that cooperates with the others and with the system and its peripherals.

92077-90020 RTE-A Quick Reference Guide

Lists and briefly describes the commands for CI, FMGR, EDIT/1000, LINK, and the interactive RTE-A utilities; lists and describes the FMP and FMGR file-handling subroutines, system library subroutines, EXEC calls, and VMA/EMA subroutines; describes the RTE-A boot-up procedure; shows the system tables; and explains the error messages generated by the operating system and its utilities, routines, and subsystems.

92077-90034 RTE-A System Generation and Installation Manual

Helps the system manager generate a new RTE-A Operating System and install it in an A-Series HP 1000 Computer System. It explains how to use the RTAGN generator program, how to create a generator answer file, and lists the generator program commands. Finally, it describes installation of the newly-generated system.

92077-90035 LINK User's Manual

Guides a new user from a sample loader session to illustrate how LINK takes a relocatable file and creates a type 6 program file that can be run on an RTE-A system to a detailed functional description of the features of LINK, and special performance optimization methods. For experienced users, it includes a reference section of the LINK commands. There is also an error messages list, and an installation guide for loading LINK on an RTE-A system.

92077-90036 RTE-A Index and Glossary

You've got it in your hands. A roadmap to the RTE-A manual set. It describes the manuals, defines the terms they use, and cross references their indexes.

92077-90037 RTE-A Relocatable Libraries Reference Manual

For programmers who need to use the system library from their programs. It describes the library routines and call sequences, lists the subroutines for reference, and explains the feature routines available with the RTE-A optional VC+ package.

92077-90038 RTE-A Primary System Installation Manual

Explains how to install a newly purchased RTE-A Operating System, boot the new system, and prepare it for use. It explains the installation procedure from any of the media on which HP software is shipped.

92077-90039 Getting Started With RTE-A

Takes the first timer from starting up the system and logging on, through the beginning CI commands for file handling, into the editor to learn how to create a program or text file, and on to how to create and run simple programs. It tells how to find help or additional information, and makes it easy to become comfortable with the RTE-A system.

92077-90050 RTE-A Software Entry Point Directory

Lists all the entry points and the modules in which they reside in the RTE-A Operating System and Virtual Code (VC+). This manual also contains entry points names for all HP 1000 languages, data communication and data management products. RTE Profile Monitor, Symbolic Debug/1000, Forms/1000, Control/1000, PMC/1000, QDM/1000, and PCIF/1000 entry points are listed also.

92077-90056 RTE-A System Manager's Manual

Describes the duties of a system manager. It complements the RTE-A System Generation and Installation Manual and refers particularly to the System Design Manual, the Driver Reference Manual, and the Programmer's Reference Manual. The manual also describes the Group and User Management Program (GRUMP), Security/1000, and the SECTL, SESLU, and KILLSES utilities.

92077-90248 RTE-A Print and Spooling Reference Manual

Describes the programs available on RTE-A to print or spool files. It contains usage information for the RTE-A user as well as information required by the system administrator to set up the spooling system.

92077-90249 RTE-A Backup and Disk Formatting Utilities Reference Manual

Describes the use of backup and disk formatting utilities available on RTE-A. The detailed description of each of the utilities is organized alphabetically in Chapter 2.

92511-90001 Mail/1000 User's Manual

Describes the Mail/1000 message system, how it works, and the tasks you can perform. The manual is a reference document with a task-oriented format. Commands are described in terms of specific tasks, in a generalized form accompanied by specific examples as needed.


92836-90001 FORTRAN 77 Reference Manual


This is the reference manual of the FORTRAN 77 programming language for the HP 1000 Computer System. The compiler for the FORTRAN 77 language operates under both the RTE-6/VM and the RTE-A operating systems.

92860-90001 Symbolic Debug/1000 User's Manual

This manual is a tutorial guide and reference for the Symbolic Debug/1000 program. The manual gives installation and configuration information, describes the steps necessary to prepare a program for debugging, and describes how to use the Debug program.

RTE-A OPERATING SYSTEM DOCUMENTATION MAPS

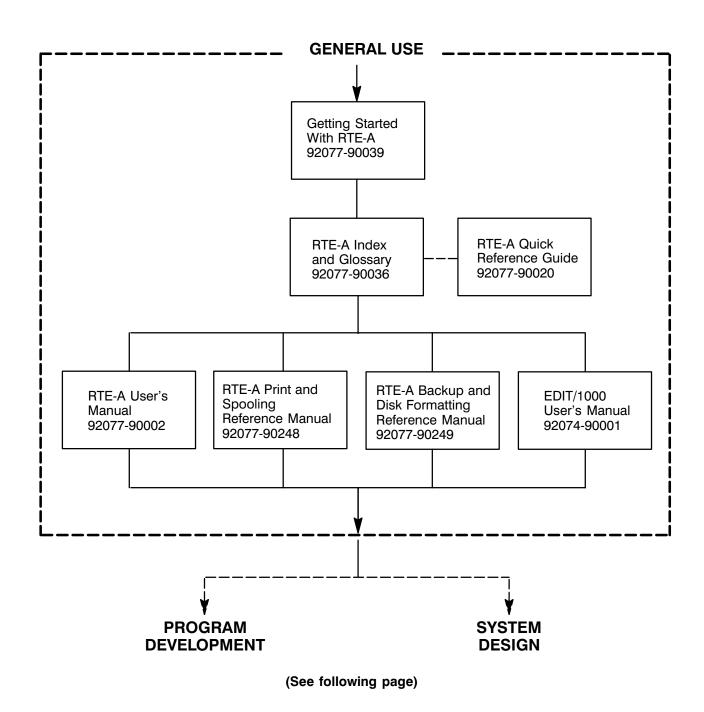

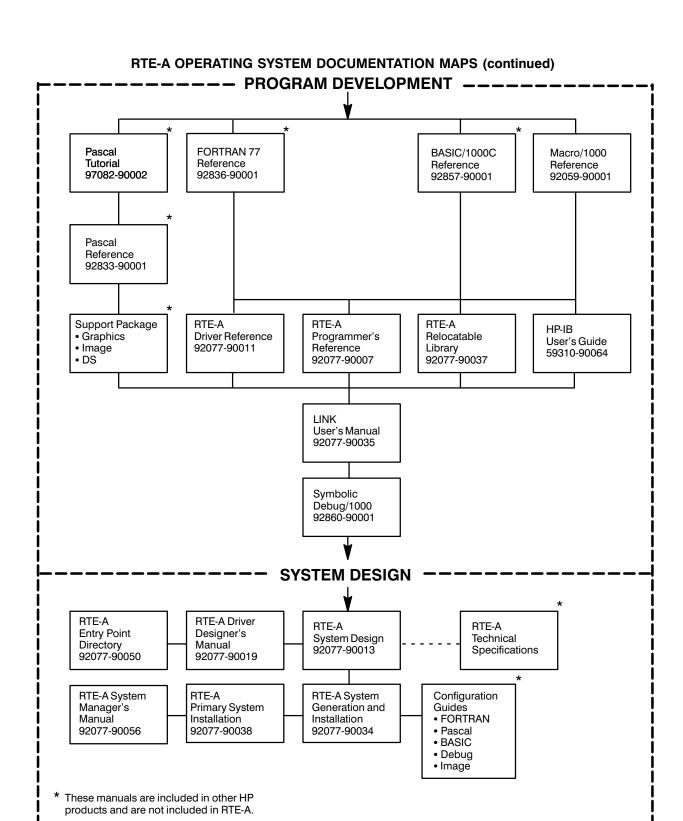

Glossary of RTE-A Terms

Abbreviations

CDS - Code and Data Separation

CI - Command Interpreter

CRN - Cartridge Reference Number

CTD - Cartridge Tape Drive

CTU - Cassette Tape Unit

DCB - Data Control Block

DMA - Direct Memory Access

DMS - Dynamic Mapping System

DVT - Device Table

EMA - Extended Memory Area

EVB - Environment Variable Block

FMGR - File Manager

FMP - File Management Package

IFT - Interface Table

INT – Interrupt Table

LU - Logical Unit

LUT – Logical Unit Table

MSEG - Mapping Segment

SAM - System Available Memory

TBG - Time Base Generator

UDSP - User-Definable Directory Search Path

VCP - Virtual Control Panel

VMA - Virtual Memory Area

VSEG - Virtual Memory Mapping Segment

Definitions

absolute program

A program that has been relocated by the LINK loader. The relative addresses in the program have been replaced with absolute addresses: the program can be loaded directly from a disk or other mass storage device into memory for execution. Absolute programs are usually called relocated programs, binary memory images, or type 6 files. Some absolute programs can be run stand-alone (offline) without the RTE-A Operating System. See *offline*. PROG, MAC

absolute system

The RTE-A Operating System in the form of an absolute program that can be loaded directly from a disk or other mass storage device into main memory. See *boot up*. MAC

account

In the multiuser environment, users and sets of users (groups) are assigned to accounts. Accounts enable the operating system to maintain the multiuser environment that allows users and groups to tailor their use of system resources. SMM, USER

answer file

A file that contains commands for defining system parameters and configuring supported I/O devices; an answer file is provided with the Primary System and may be customized to generate a new system. SGI

asynchronous device

An I/O device that transmits characters synchronized by handshaking or start/stop characters passed between the device and the computer. Compare *synchronous device*.

back up

Copy the contents of a set of disk volumes, usually onto magnetic tape, but often onto another disk. Disks should be backed up periodically to prevent loss of data from hardware, software, or operator errors. SGI

backing store file

A file on disk that contains all of the VMA data except the working set. The backing store file can contain up to 65536 pages of VMA data. See *virtual_memory area* and *working set*. PROG

base page

See system base page and user base page.

binary memory image

See absolute program.

bit bucket

An I/O address at which I/O requests are completed by ignoring the data. I/O requests directed to a bit bucket complete immediately. LU zero is an example of a bit bucket. USER

block

Two logical CS/80 disk sectors of 128 bytes each, totaling 256 bytes, or 128 words. The block is used to express the size of files or data transfers. The actual sectoring of a physical disk may or may not be the same as the logical sectoring of a disk. USER

BOOTEX

The boot up extension program, located at the beginning of the system disk, outside of the user file area. Its main job is loading the operating system into main memory, but it also mounts disk LUs, defines program partitions, sets up the swap file, and restores programs to be included in the operating system. SGI, PRIM

boot up

Load the operating system into main memory from a disk or other storage device. SGI, PRIM

buffer

An area in main memory or on a peripheral device used to store data temporarily, especially for I/O. SDM

capability level (CPLV)

An integer ranging from 0-31 assigned by the system manager to users, system level routines, system level commands, and programs for the purpose of governing function and resource use. SMM

cartridge reference number (CRN)

An integer from 0-32767 or two ASCII characters used to identify a FMGR disk cartridge. USER

cartridge tape drive (CTD)

The unit into which a cartridge tape can be inserted for the purpose of loading data from the tape to the disk or making a tape back-up of the disk. The CTD may be either stand-alone or part of a CS/80 disk drive. SGI

cassette tape unit (CTU)

Tape unit in a 264x terminal for data storage and retrieval. DRM

class I/O

A method of buffering data transfers between programs or between devices and programs that lets the program continue executing while the I/O takes place. Class I/O is also called I/O without wait, or mailbox I/O. SDM

closed file

A file that is not available for read and write access by a program. Compare *open file*. PROG

code and data separation (CDS)

An optional RTE-A feature that lets the operating system support large programs or programs that share code. In a CDS program, the code (instructions) and data are stored in separate areas of memory. USER, SDM, SGI, MAC

code block

A subdivision of the code partition of a CDS program. Each code segment of a CDS program is loaded from disk into a code block as the program is executed. PROG, SDM

code partition

An area of memory that contains the code portion of a CDS program while the program executes. Compare *data partition*. PROG, SDM

code segment

A subdivision of the code portion of a CDS program. The LINK loader divides the code portion of large CDS programs into a number of segments, each up to 31 pages long. There may be as many as 128 code segments in a CDS program. PROG, SDM, LINK, USER, MAC

Command Interpreter (CI)

A program to process operator commands for RTE-A. CI lets the operator manipulate files and manage disk storage, run and terminate programs, modify system parameters, and gain access to a number of operating system features. CI is identified by the CI> prompt. CI is the primary RTE-A file management program. Compare *File Manager*. USER

common

A reserved area of memory used to pass data between a main program and its subprograms. In RTE-A, system common memory can be used to pass data between programs. SDM, MAC

configuration

The I/O and memory mapping structures of the operating system, and the modifications made to the operating system to create the structures. There are two main steps in system configuration: generation and modification by BOOTEX. SGI, SDM

CRN

The Cartridge Reference Number, either an integer from 0 through 32767 or two ASCII characters, identifies an FMGR cartridge. USER

CS/80

Command Set/80, a Hewlett-Packard instruction convention for mass storage devices, and the disk drives and tape drives that conform to it. BKUP, PROG, SGI, SDM

current directory

See working directory.

current page

The memory page in which the currently executing instruction is located. Some memory reference instructions can refer directly only to locations in the current page and the base page. SDM

cylinder

A collection of tracks, one from each disk surface. See track. SGI

data control block (DCB)

A buffer within an executable program that contains information used by the File Management Package (FMP) for file accesses. PROG, SDM

data partition

An area in memory that contains the data portion of a CDS program. Compare *code* partition. PROG, USER, SDM

data segment

The data portion of a CDS program, up to 31 pages long without the EMA/VMA feature or longer with EMA/VMA. PROG, SDM, MAC

default directory

See working directory.

device driver

A software module that passes data and control information between the operating system and an interface driver. The device driver processes I/O request data for a particular device so that the information matches the requirements of the device. Device drivers are always associated with an interface driver. A typical device driver and interface driver pair is ID.37 and DDC12. ID.37 is the interface driver for the HP-IB. DDC12 is the device driver for the 2608S printer when it is controlled by the HP-IB. DDC12 prepares data for the printer and passes it to ID.37. Compare *interface driver*. SGI, SDM, DRM, DDM

device-independent

A program that refers to an I/O device by its LU number without regard to the type of device represented by the number.

device table (DVT)

A table created during system generation for each LU in the system. It contains the device type, time-out value, and driver type, if there is a device driver. Device LUs are associated with DVTs in the logical unit table (LUT). Each DVT refers to an entry in the interface table (IFT). SDM

direct memory access (DMA)

An I/O method that permits data to be transferred directly from memory to an interface card without CPU intervention. PROG, SDM, DDM

directory

A data structure containing the names of subdirectories and files on a disk LU. The directory contains information about the subdirectories and files within it, including file lengths, file types, and location on the disk. See *working directory*. PROG, USER

disk-based

A program stored, in part or completely, on disk while it is running or waiting to run. Disk-based systems and programs take up less memory than memory-based systems, but execution speed is traded for the memory gain, because time is spent loading sections of the system into memory as they are needed. This term is also used for an operating system which supports such programs.

Disk-based also describes a real-time system that permits programs to be swapped between disk and memory to let other programs run. SGI

disk formatting

Defining track, block, and sector address information for a disk, and writing it to the disk. disk formatting usually includes verification and bad-track sparing. BKUP, SGI

disk-resident

Stored on a disk, usually referring to absolute programs or subroutines that are stored on disk and loaded into memory for execution in response to a program or operator request, a time schedule, or an I/O interrupt.

disk volume

See volume.

dismount

Remove a disk or tape volume from the system, either logically or physically. Compare *mount*. USER

dispatcher

An RTE-A system routine that selects, from the scheduled programs list, the program to be executed. The dispatcher is central to RTE-A multiprogramming. It selects the program to be executed according to program priority, time scheduling, and availability of I/O devices. If the selected program is not already in main memory, the dispatcher loads it from the disk and begins execution. SDM

dormant program

An executable program that is not executing, scheduled, or suspended. A program becomes dormant when it is restored by the RP operator command but not scheduled or when it aborts or completes and the ID segment is not released. See *program* management, executing program, scheduled program, and suspended program. PROG

down

The state of a peripheral device or I/O controller that is not available to the system. Devices can be down for a number of reasons, including a device time-out or execution of the FMGR command DN. Compare *up*. USER

driver partition

An area of memory that contains an interface or device driver during execution. SGI, SDM, DDM

dynamic buffer space

Buffer space allocated to a program, located in memory after the program itself. The buffer size can be altered by the program. SDM

dynamic mapping system (DMS)

A hardware feature that lets the 16-bit A-Series computer address up to 32 megabytes of physical memory. PROG, SDM, MAC

dynamic memory allocation

Creating a memory partition in the dynamic memory area for a program or shareable EMA. The process is dynamic because the area is allocated as it is needed, and the memory is freed afterwards. The dispatcher controls dynamic memory allocation. PROG, SDM

dynamic memory area

The area of physical memory in which the dispatcher performs dynamic memory allocation. PROG, SDM

environment variable block

Environment variables allow programs within a session to share variables. Any program in the session can be allowed to access the value of an environment variable. The environment variables are stored in a memory space called the Environment Variable Block (EVB). USER

EXEC

An RTE-A system module that permits user programs to use operating system functions, such as I/O operations, program scheduling, and system time requests. Programs can access these functions through calls to EXEC. PROG, REL

executable program

A program with an assigned ID segment that can be scheduled and executed. Executable programs are present in the operating system's program lists. See *executing program*, *restored program*, and *ID segment*. PROG, USER

executing program

The highest priority scheduled program. Given below are some of the conditions that move programs from the scheduled, dormant, and suspended program lists to the executing program state.

A dormant program cannot be executed until it has been scheduled (placed in the scheduled programs list).

A suspended program executes when either of the following occur:

- 1. The unavailable resource that suspended it becomes available.
- 2. The operator issues a GO command, after the program was suspended by the SS command.

A scheduled program executes when either of the following is true:

- 1. It is scheduled for immediate execution.
- 2. The system time matches the program's scheduled execution time.

See program management, dormant program, scheduled program, and suspended program. PROG

extended file

A file that has been made larger in response to a write request beyond the end of the file. An extent (additional space on the disk) is created by the operating system to contain the new data, and the write request continues. USER

extended memory area (EMA)

An area of physical memory that extends beyond the logical space of a program, and it can be used as a large data area. The EMA is contained entirely in physical memory, and it can occupy all the free physical memory in a partition. EMA areas can be shared by two or more programs, as described in the Programmer's Reference Manual. Compare *virtual memory area*. PROG

extended system available memory (XSAM)

XSAM is temporary storage in physical memory used by the system for requests that typically stay around longer than I/O requests: signals, UDSPs, LU access tables, and prototype ID segments. XSAM is very similar to SAM and it is possible to have SAM and XSAM use the same block of memory. SDM, SGI

file

A series of records on a mass-storage device that contains data or a program and identification information. The storage device contains at least one file, called the directory, that lists all the files on the device. USER, MAC

file descriptor

The various parameters that specify a particular file. Refer to the RTE-A User's Manual for a definition of the file descriptor.

The CI file descriptor consists of the following parameters:

```
/dir/subdir/filename.typex[.qual:::[type[:size[:reclen]]]]
USER, EDIT, PROG
```

file extents

See extended file.

file management

The operating system functions associated with maintaining disk files, such as translating file names to disk addresses, maintaining directories and subdirectories, and checking for file security. see *file manager* and *command interpreter*. PROG, USER

file management package (FMP)

A collection of RTE-A routines that perform file management. See *file management*. PROG

File Manager (FMGR)

An RTE-A program that helps create and use files. FMGR is the secondary RTE-A file management program, used to maintain files from other versions of the RTE operating system. Compare *command interpreter*. PROG

file mask

A feature in the file system used to specify several files at once. It includes wildcard characters in the file name and file type extension and other file information in a qualifier field. USER

file type extension

A field of up to four characters that specifies the type of information in the file. This field is appended to the file name in the CI file descriptor separated by a period. USER, PROG

filedescriptor

A parameter in a subroutine specifying a file descriptor. USER, PROG

filename

A file descriptor parameter that identifies the name of a file on a mass storage device. For FMGR files, it consists of 1 to 6 characters, subject to RTE file naming conventions. For CI files, it consists of one to 16 uppercase or lowercase letters, numerals, or symbols subject to the CI file naming conventions as defined in the User's Manual. USER, EDIT, PROG

firmware

Code stored in ROM, including microcode and machine language programs. The ROM loader, self-test, and VCP programs are firmware.

function

An activity carried out by the system on behalf of the user.

generation

Creation of an operating system that meets specific I/O and memory mapping needs. The primary operating system shipped with the computer system was created with a general I/O configuration that works for many applications; it may need to be changed for some applications. See *configuration*.

group

In a multiuser system, a group is a set of system users — usually users who will share common functions, applications, and/or resources — for which a unique configuration file may be created and modified. USER, SMM

GRUMP utility

The GRoup and User Management Program is a command driven utility for managing a multiuser account system. It is part of the VC+ multiuser product. USER, SMM

HP-IB (Hewlett-Packard Interface Bus)

Hewlett-Packard's enhanced version of IEEE 488-1978, Digital Interface for Programmable Instrumentation. The HP-IB is an eight-bit parallel interface bus that lets computers and peripherals communicate. HPIB, DRM

ID segment

A program table entry in physical memory that identifies an executable program. It is similar to the task control block in other operating systems, and contains information such as the program name, priority, location on disk, and so on.

The number of available ID segments in the system is fixed at generation, and each ID segment can identify only one program at a time. See *restoration* and *executable program*. SDM

IFT extension

Extra buffer space added to an interface table entry during system generation. The IFT extension gives more storage space for buffering I/O data. See *interface table*. SDM

indexed library

A subroutine library that has been indexed by the LINDX utility. Indexed libraries can be scanned faster by LINK, which speeds up program loading time. LINK

interface driver

A software module that passes data and control information from the operating system or a device driver to an interface card. If there is a device driver, the interface driver processes I/O requests for the interface card. If there is no device driver, the interface driver processes requests for the card and for the devices attached to the card. Compare device driver. SDM, SGI, DRM, DDM

interface table (IFT)

A system table set up at generation time for each interface card. This table lists the interface driver type, time-out queuing, and driver parameters for the card, and includes an extension for buffering I/O data. Refer to the RTE-A System Design Manual for the IFT format. SDM

interrupt

A raised flag on an interface card, the system clock, or the power fail/auto restart system to indicate the need to initiate or complete an I/O transfer, update the system time, or respond to a power failure. SDM

interrupt location

A location in the base page that contains an instruction to be executed in response to an interrupt. There is one interrupt location for each select code. The instruction in the interrupt location is a branch to the interrupt table entry for the select code with the following exceptions:

- The interrupt location for a privileged driver contains a branch to the driver. Privileged drivers process their own interrupts. See *privileged driver* and *privileged interrupt*.
- The interrupt locations for the time base generator (TBG) and the power fail/auto restart system are branches to operating system routines for those devices.

Interrupt locations are also called trap cells. SDM

interrupt table (INT)

A table set up at generation that matches IFTs to select codes. When an interrupt is generated by an interface card, the interrupt handling system routine performs a branch to the trap cell corresponding to the select code of the interface card. The trap cell contains a branch instruction to the INT entry for the select code. The INT entry points to the address of the IFT for that select code. The IFT contains the name of the interface driver that should be called to process the interrupt. SDM

I/O (Input/Output)

A general term for any transfer of data between a computer and its peripheral devices.

I/O controller

An interface card, used to control one or more I/O devices. SGI, SDM, DDM

I/O device

Any peripheral device that receives data from the computer or sends data to it. Printers, modems, terminals, and disk drives are I/O devices. SGI, SDM

I/O management

Control of all I/O by the operating system. RTE-A takes control of I/O transfers to facilitate multiprogramming. SDM

I/O without wait

See class I/O.

library

See relocatable libraries.

LINK

The RTE-A loader. LINK converts the relative addresses of relocatable programs to absolute addresses. LINK produces type 6 files, ready to be loaded into memory and executed. LINK

locked file

A file opened exclusively to one program and therefore not available to any other program. Compare *open file*. USER

locked LU

An I/O device available for exclusive access by one program, to prevent multiple requests on the device. PROG

logical memory

The memory area (up to 64k bytes) defined by the currently enabled memory map. See *system map*, user maps, and port maps. SDM

logical unit (LU) number

A number used to identify I/O devices in RTE-A. Programs refer to I/O devices by their LU numbers, which are match to devices in the logical unit table (LUT). SDM, SGI

logical unit table (LUT)

A system table that links logical unit numbers with device table (DVT) entries. The operating system uses the LUT in I/O request processing to identify peripherals. SDM

log off

Terminate operations in the multiuser environment. USER

log on

Supply identification information to the system to establish a session and use the system. USER

mailbox I/O

See class I/O.

main program

The main body of a program, excluding any subroutines or program segments.

mapping segment (MSEG)

The part of a program's logical address space that is used for mapping into the EMA or VMA area. The mapping segment size is the maximum window size into EMA/VMA, expressed in pages, that the program uses without remapping. SDM, MAC

memory image

See absolute program.

memory map

One of the 32 sets of 32 map registers used by the dynamic mapping system. See *dynamic mapping system*. SDM

memory page

See page.

memory protect

A hardware feature that protects pages of physical memory against unauthorized access. SDM

module

A unit of code, usually a subroutine. MAC

mount

Add a disk volume or magnetic tape unit to a list of available mass storage units. disk and tape drives must be mounted before they can be accessed. The term evolved from the physical mounting of a magnetic tape on a tape unit or a disk cartridge in a disk drive. USER

multiprogramming

An interleaving technique that lets two or more programs appear to run at the same time. Multiprogramming improves the efficiency of a computer by taking advantage of the fact that most programs only use part of the computer's resources while they run.

In a real time multiprogramming system, several programs can be active at the same time. Each program has a priority number that determines when it can run. The highest priority active program always runs until it completes or makes a request for a system resource that is not available. While the highest priority program waits for the resource, the second priority program runs. If the second priority program also must wait for a resource, then the computer runs the third priority program, and so on. When any higher priority program becomes ready again, the computer suspends the low priority program, and continues running the higher priority program. See *timeslicing* and *real-time executive*. SDM

multiuser environment

An operating system that can support several users at a time. USER

namr

In FMGR file descriptions, the representation of a file descriptor or an LU number. See *logical unit (LU) number, file*, and *file descriptor*. PROG, EDIT

offline

Used without RTE-A. Some A-Series software and hardware can be used without the RTE-A Operating System, either stand-alone or with a special-purpose operating system. The disk formatting utility FORMF is an offline utility.

online

Refers to programs that are run with RTE-A. These programs are disk-resident and require the RTE-A operating system to schedule and execute them.

open file

A file that has been made available for read and write operations by a program. Compare *closed file*. USER

operating system

A collection of software designed to make best use of a computer system. It is the main software interface between user programs and the computer hardware. The operating system performs memory management, file management, interrupt handling, program scheduling, and I/O operations. In general, these functions are transparent to the user of the system, but they can be accessed through a command interpreter (CI) or through program calls (EXEC). See *Real-Time Executive*, *Command Interpreter*, and *EXEC*. SDM

overlays

See program overlay.

page

The largest area of memory (1024 words) that can be directly addressed by a one-word memory reference instruction. SDM

page table

A list of the VMA data pages currently in the working set, and the locations of the pages. SDM

partition

An area of physical memory allocated to contain a program while it is executing. There are two partition types: reserved and dynamic. Reserved partitions are defined at boot up, and their sizes are fixed. Dynamic partitions are defined in an area of free memory when a program is run; the size is set by the dispatcher. See *dynamic memory allocation*. PROG, SDM, MAC

physical memory

Physical memory is the entire memory area defined at generation and available to the operating system. RTE-A, with the dynamic mapping system, can access up to 32M bytes of physical memory. SDM

port maps

Sets of map registers that describe the physical memory areas to and from which I/O is taking place. SDM

positional variables

Up to nine values that can be passed to a command file as parameters of the TR command. The command file can recall a value by referencing \$1 through \$9, according to the position of the parameter in the runstring. USER

power fail/auto restart

A system in the HP 1000 that lets it save the current state of the system in memory when power is lost, and to restart the system to a predefined condition when power returns. SGI

predefined variables

Session-management variables initialized by CI at the start of each session. These variables have names starting with a \$ sign, like \$session. You cannot change the name or delete a variable, but you can change its value with the SET command, or display its value with the ECHO command. USER

primary

The Primary System is a tested, factory preconfigured operating system providing a starter system that can be used to regenerate a customized operating system. SGI

priority

The number assigned to a program that determines whether it runs immediately or waits for higher priority programs to complete or become suspended. Program priorities are represented as integers between 1 (highest) and 32767. See *multiprogramming*. USER

privileged drivers

I/O drivers that process the interrupts generated by the interface cards under their control (see *privileged interrupts*). Privileged drivers offer improved interrupt response time, but they must save the status of the interrupted program and restore the program after processing the interrupt, functions normally performed by the operating system. SDM

privileged interrupts

Interrupts that bypass normal interrupt processing to improve response time. Privileged interrupts are used when the interrupt must be processed immediately. Privileged interrupts are processed by privileged drivers. SDM

program management

Maintenance of the dormant, scheduled, and suspended program lists, and control of programs as they execute and move between the lists. The program lists are diagrammed in the RTE-A Programmer's Reference Manual. See *dormant program*, *executing program*, *scheduled program*, and *suspended program*. PROG, USER

program overlay

A technique for accommodating non-CDS programs that are larger than the available logical memory. The data portion of a large non-CDS program can be divided into a main program section and several smaller sections, which fit into the available memory. The main program section remains in memory while the overlays are copied from disk into memory as they are needed. Each new overlay is copied into the same memory area as the previous one. PROG, USER

program state

The current status of an executable program. Programs may be dormant, executing, scheduled, or suspended. See *dormant program*, *executing program*, *scheduled program*, *suspended program*, and *program management*. USER

prototype ID segment

A skeleton program ID segment stored in a list in XSAM which is used to quickly create a program ID segment when that program is scheduled. Also referred to as proto ID. PROG, SDM

purge

Instruct the operating system to delete a file from a mass-storage device directory. It is usually used to describe deletion of disk files by the PU operator command. USER

Real Time Executive (RTE)

The operating system of the HP 1000 computer. The operating system is made up of software modules (routines) and a number of tables through which the modules communicate. In RTE-A documentation, the terms operating system, real-time executive, and RTE-A are synonymous.

The RTE-A operating system is called real-time to differentiate it from time-shared systems. In a time-shared system, all programs are given an equal share of the CPU processing time. The system simply steps from one program task to the next. In a real-time system, priority numbers determine how much processing time is allotted for each program. See *priority*. Real-time also means that the operating system can respond immediately to asynchronous events. PROG, SDM

record

A logical subdivision of a file terminated by an end-of-record mark. USER

reentrant routine

A routine that can be used by a number of programs at the same time. A high priority program can suspend a low priority program and take over use of the routine. When the high priority program is finished, the original program can reenter the routine at the point where it was interrupted. SDM, USER

relocatable code

A compiled program containing instructions with relative addresses that must be replaced with absolute addresses before the program can be loaded into memory and executed. The LINK loader relocates (replaces the addresses) the code and creates a type 6 file that can be loaded and executed. LINK, MAC

relocatable libraries

A collection of often used relocatable subroutines. For example, the \$FMP library contains file management subroutines. Libraries of often used subroutines, such as math routines, simplify and standardize programming. Libraries are usually indexed with the LINDX utility. SGI, SDM, REL

relocating loader

See LINK.

reserved partition

A fixed area in memory that contains a program while it is executing. The size of reserved partitions is defined at boot up time. PROG, SDM, DDM

response time

The total amount of time required to bring a program or routine into execution in response to an interrupt, an interval timer, a call from another program, or an operator request.

restore

Set up a real ID segment or a prototype ID segment for a program. All type 6 (program) files begin with a block of information used by the operating system to create an ID segment. Programs can be restored by the operator with the RP, RU, or XQ commands, or by another program with a call to the operating system routine FmpRpProgram. If the ID segment is set up by RU or XQ, it is released automatically after the program completes. If it is set up by RP or FmpRpProgram, then it may need to be released by the OF command. See *ID segment* and *executable program*. PROG, USER

ROM-resident

Program storage in read-only memory (ROM). Programs in ROM can be run as soon as the system is turned on, without having to load them from a disk. As a result, self-test and boot up programs, and often operating system or language subsystem programs are ROM-resident, so that the computer is ready to run as soon as it is turned on.

RTE-A

See real-time executive.

scheduled program

A program that has been entered in the scheduled programs list, but has not yet begun execution. Programs are entered in the scheduled programs list in response to an operator request for immediate or delayed execution of the program, or a request from another program. See *program management*, *dormant program*, *executing program*, and *suspended program*. USER

scheduler

An RTE-A system routine that manages the movement of programs from one program state to another. For example, when a program is run with the RU operator command, the scheduler is called to move the program from the dormant state to the scheduled state. When there are no higher priority scheduled programs, the dispatcher moves the program to the executing state. See *dormant program*, *executing program*, *scheduled program*, *program management*, and *dispatcher*. SDM

SCSI (Small Computer System Interface)

An industry-standard hardware and software interface protocol that allows computer peripherals from different manufacturers to be used on a single interface bus. SCSI

sector

A 128-byte area on a disk. disk memory is divided into logical units, cartridges, cylinders, tracks, blocks, logical sectors, records, bytes, and bits. The sector is one-half of the smallest division that most disks can address. In RTE-A, disk access is always to blocks which are two sectors long. The block is the smallest addressable division on HP disk drives. Access to the smaller divisions, down to the individual bits, must be performed by software. SGI

security table

Contains the set of rules based on capability levels, categories, and functions as the system manager defines them.

segmented program

The code portion of a large CDS program that has been divided into segments by the LINK loader. The data portion is never segmented. Each code segment can be up to 31 pages long. There may be up to 128 code segments in a segmented program, but only one data segment. The data segment can be expanded to more than 31 pages if the VMA/EMA feature is used. Segmentation permits programs that are larger than the available logical memory to run under RTE-A. MAC

select code

An octal number (20 through 77) that specifies the address of an I/O device interface card. SGI, SDM, MAC

session

For each user of the system, a set of records are set up when he or she logs in. The session keeps track of various information about the user and his or her tasks. Each session is identified by a session number. USER

shared code

The code portion of a CDS program that can be executed by several users at once. PROG

shareable EMA

An area of memory containing program data that is available to up to 63 programs. The area occupies its own partition in physical memory, and is described in detail in the RTE-A Programmer's Reference Manual. See *EMA*. PROG

signals

A functionality which provides a means for programs to react to externally generated asynchronous events through the use of a "software interrupt" routine. The three types of signals are program violation (MP, VI, CS06, and so on), timer events, and class I/O completion. PROG

SNAP file

A type 3 file created at system generation time that lists and locates entry points, tells which libraries are to be searched by LINK, and other loader information. The SNAP file is required by LINK to load programs. LINK, SGI

SPOOL

Simultaneous peripheral operations online, an RTE-A feature that speeds up I/O operations. In a SPOOL output operation, output data from a program is written to a disk, then transferred from the disk to a peripheral while the program continues to execute. Spooling is useful for performing I/O with slow devices, because disk I/O is much faster than most other peripheral I/O. The program that performs spooled I/O completes its I/O operations sooner than if it performed I/O directly to the slow device. PROG, USER

subdirectory

A directory contained in another directory or subdirectory. Directories can be nested to any level. There is always a top-level (global) directory for any set of subdirectories. USER

superuser

A user that has access to all functions and resources in the system. A superuser is not subject to file system protection, system routine and command protection, CI command protection, and so on. In most instances, only the system manager is given superuser capabilities. USER

suspended program

A program that has been put aside by the operating system. Programs are suspended when a higher-priority program is scheduled, when an I/O request that cannot be executed immediately is made, or when the SS command is issued by the operator. The suspension point is recorded in its ID segment, and the program name is entered in the suspended programs list. See *dormant program*, *executing program*, *scheduled program*, and *program management*. USER

swap file

Programs that are swapped out of physical memory are stored in a swap file while they are suspended. The swap file is defined at boot up. SDM

swapping

In a multiprogramming system, suspending a program and transferring it to mass storage so that a higher priority program can occupy the same memory partition. When the higher priority program completes or is suspended by an I/O wait, the original program can be swapped back into the partition to continue at the point where it was suspended. See *suspended program*. SDM

synchronous device

An I/O device that transmits or receives characters at the same rate that the computer or other device receives or sends them. Error detection is performed by transmission of checking characters.

system available memory (SAM)

A temporary storage area in physical memory used by the system for class I/O (mailbox I/O), re-entrant I/O, automatic buffering, and parameter string passing. PROG, SDM, SGI

system base page

An area of memory that contains trap cells for interrupt processing, system tables and special system variables. SDM, SGI, MAC

system common memory

An area of memory that can be shared by programs to pass parameters. See *common*. SDM, SGI

system library

A group of subroutines available to user programs that perform operating system functions, but are independent of the system itself. The subroutines permit user programs to perform operating system functions without calling the operating system. SDM, SGI

system logical memory

See logical memory.

system map

A set of registers that describe the areas of physical memory restricted for operating system use. SDM

system tables

Lists of information kept by RTE-A, such as the interface tables (IFTs), device tables (DVTs), ID segments, interrupt table (INT), and the dormant, scheduled, and suspended program lists. SDM

tape block

The smallest unit of information that can be addressed by a CS/80 tape unit, 1024 bytes (512 words) in length. BKUP

time base generator (TBG)

A hardware clock that generates an interrupt, called a TBG tick, every 10 milliseconds. It is used to trigger execution of time scheduled programs, to control timeslicing for multiprogramming, and for determining device timeouts.

timeout

A time limit that the operating system will wait for a device to respond to an I/O request. If the system tries to access a device, and the device does not respond within its timeout period, the system assumes that the device is inoperative, and makes the device unavailable. The timeout feature prevents programs from being hung by malfunctioning devices. USER

time-scheduling

Placing a program on the time-scheduled programs list for execution at a preset time of day and, if desired, at regular intervals afterwards. Programs are time-scheduled with the AT command. USER, PROG

timeslicing

A method of resolving CPU usage conflicts among programs of equal priority. When several such programs contend for processing time, the system gives each a fixed period of time to execute before another gets its turn. If a higher priority program becomes active, it supersedes the timeslicing. Without timeslicing, one program could monopolize the CPU until it completed. SDM, USER

track

An addressable unit of a disk surface. It is the area of a single disk surface at a particular distance from the center of the disk that passes under a head in one revolution. Compare *cylinder*. SGI, REL

trap cell

See interrupt location.

up

The state of a device that is available for use by the system. UP refers to the system UP command. Compare *down*. USER

user base page

The first page of a user program partition, containing links to the other memory areas in the system, such as the system common, and a number of special storage registers. SDM, SGI, MAC

user logical memory

The 64k-byte memory space used by a user program during execution. CDS programs require two areas: one for code, another for data. SDM

user-definable directory search path (UDSP)

The order in which you want the system to search directories for a file. Use the PATH command, either interactively or in your LOGON file, to specify up to eight different UDSPs for your session. USER

user-defined variables

CI variables with both names and value defined by the SET command. To reference a variable after it has been defined, use the name preceded by a \$ sign. USER

user maps

Sets of map registers that describe the areas of physical memory available to user programs. SDM

virtual control panel (VCP)

A ROM-resident program in the A-Series computer that replaces the hardware front panel of earlier computers. One terminal can be defined as the VCP terminal. The VCP program is activated by pressing the BREAK key on the VCP terminal or the RESET switch on the CPU, or by turning the system on (refer to the Computer Reference Manual for startup options). The VCP display shows the contents of the CPU registers and the VCP prompt:

```
P 001604 A 000000 B 000000 RW 100003 M 001603 T 100020 VCP>
```

The VCP program lets you change the contents of the registers, as with a hardware front panel. The operating system can be booted up from the VCP prompt. GSA, PROG, SGI

virtual memory area (VMA)

An area on disk (the backing store file) used as an extension of physical memory, and an area of physical memory (the working set) used to permit program access to the data in the backing store file. The EMA/VMA feature lets programs manipulate data structures as large as 65536 pages. The VMA/EMA operations are transparent to the user program. See *working set* and *backing store file*. PROG, SDM

virtual memory mapping segment (VSEG)

The last two pages of a program's logical address space, used by the EMA/VMA firmware to map data in the EMA and VMA. PROG

volume

For a disk, an addressable portion of the storage media on a given unit. When the term is used in file management descriptions, it is synonymous with a disk LU. USER, PROG

working directory

The directory used by default when no other directory is specified in a file descriptor. In the multi-user environment, each user can have a different working directory. The working directory is also called the default directory or current directory.

working set

Data transferred from the backing store file into physical memory for access by a program. Not all VMA data reside at all times on disk. The part that is on disk is located in the backing store file. The remainder is the working set. The working set page addresses are stored in the page table. See *virtual memory area*. PROG, USER, SDM

Index to RTE-A Manuals

Symbols	.ENTP: <i>REL</i> 5-29
•	.ENTR: FTN 7-11; REL 5-29
CCM: <i>REL</i> 3-132	.ENTR call sequence: <i>REL</i> 2-1
DCM: <i>REL</i> 3-133	.EOR.: <i>FTN</i> E-2
DLC: <i>REL</i> 3-134	.EQ.: FTN 2-24
FCM: REL 3-135	.EQV.: FTN E-2
MAP: <i>REL</i> 5-41	.EQV. operator: FTN 2-25
TCM: REL 3-136	ESEG subroutine: <i>PROG</i> 9-53
ABS: REL 3-62	.EXIT: <i>FTN</i> 7-3
AND.: FTN 2-25, E-2	.EXP: <i>REL</i> 3-86
ATAN: REL 3-63	no error return, /EXP: REL 3-169
ATN2: REL 3-64	range reduction, /CMRT: <i>REL</i> 3-168
.BLE: REL 3-65	FAD: <i>REL</i> 3-87
.CADD: <i>REL</i> 3-66	.FDV: <i>REL</i> 3-88
.CDBL: <i>REL</i> 3-67	.FIXD: <i>REL</i> 4-12
.CDIV: REL 3-68	.FLTD: <i>REL</i> 4-13
.CFER: <i>REL</i> 3-69	.FLUN: <i>REL</i> 3-89
.CHEB: <i>REL</i> 3-70	.FMP: <i>REL</i> 3-90
.CINT: REL 3-70	.FMUI: <i>REL</i> 5-30
.CMPY: <i>REL</i> 3-71	.FMUO: <i>REL</i> 5-32
.CMR 1. REL 3-72 .CMRS: REL 3-73	.FMUP: <i>REL</i> 5-32
.COS: <i>REL</i> 3-74	.FMUR: <i>REL</i> 5-32
no error return, /COS: <i>REL</i> 3-167	.FPWR: <i>REL</i> 3-91
range reduction, /CMRT: <i>REL</i> 3-168	.FSB: <i>REL</i> 3-91
.CPM: REL 3-75	FTN extension: GSA 5-2
.CSUB: <i>REL</i> 3-76	.GE.: FTN 2-24
.CSUB. REL 3-70 .CTBL: REL 3-77	.GE <i>FTN</i> 2-24 .GOTO: <i>REL</i> 5-35
	.GOTO: <i>REL</i> 3-33 .GT.: <i>FTN</i> 2-24
.CTOI: <i>REL</i> 3-78 .DADS: <i>REL</i> 4-3	
.DBG file extension: DBUG 2-4	.ICPX: <i>REL</i> 3-92 .IDBL: <i>REL</i> 3-93
DCO: REL 4-4	IENT: <i>REL</i> 3-94
.DCPX: <i>REL</i> 3-79 .DDE: <i>REL</i> 4-5	.IMAP: <i>FTN</i> 6-15; <i>PROG</i> 9-48 .IRES: <i>PROG</i> 9-49
.DDI, .DDR: REL 4-6	ITBL: REL 3-95
.DDS: REL 4-7	ITOI: REL 3-96
DFER: REL 3-80	JMAP: FTN 6-15
.DIN: <i>REL</i> 4-8	JMAP subroutine: <i>PROG</i> 9-50 JRES subroutine: <i>PROG</i> 9-51
DINT: REL 3-81	
.DIS: <i>REL</i> 4-9 .DMP: <i>REL</i> 4-10	LBP, LBPR subroutines: <i>PROG</i> 9-54
	LE.: FTN 2-24
.DNG: <i>REL</i> 4-11	LOG: <i>REL</i> 3-97
DTBL: REL 3-82	no error return, /LOG: <i>REL</i> 3-171
DTOD: REL 3-83	LOG0: <i>REL</i> 3-98
DTOI: REL 3-84	no error return, /LOG0: <i>REL</i> 3-172
DTOR: REL 3-85	LPX, LPXR subroutines: <i>PROG</i> 9-54
EMIO subroutine: PROG 9-55	LT: FTN 2-24
ENTC: REL 5-28	.MANT: <i>REL</i> 3-99
.ENTN: <i>REL</i> 5-28	.MAP: <i>REL</i> 5-36

.MAX1: REL 3-100	?: DBUG 2-14, 5-19; MAIL 2-3, 3-8, 3-11, 3-15,
.MIN1: REL 3-100	4-4, 4-10, 5-8, 5-9, 6-3
.MOD: <i>REL</i> 3-101	? (help) command: <i>EDIT</i> 2-20, 4-92, 4-94; <i>LINK</i>
.MPY: REL 3-102	3-26
.NE.: FTN 2-24	? (help) command, CI: <i>USER</i> 2-3, 6-3
NEQV.: FTN E-2	? command
NFEX: FTN 7-3	GRUMP utility. See Help (HE) command
.NGL: <i>REL</i> 3-103	SECTL utility. See Help (HE) command
.NOT.: <i>FTN</i> E-2	? RM (help on recovery): EDIT 3-47
.OPSY: <i>REL</i> 5-37	??: DBUG 5-32; MAIL 3-11
.OR.: <i>FTN</i> E-2	?? command: <i>EDIT</i> 4-92, 4-95
.PACK: <i>REL</i> 3-104	" (default a parameter): EDIT 3-36
.PAUS: <i>REL</i> 5-38	; (semicolon): DBUG 2-12
.PCAD: <i>REL</i> 5-39	: command: <i>MAIL</i> 2-4, 4-10
.PWR2: <i>REL</i> 3-105	:AND: (logical AND): MAC 4-61
.RTOD: <i>REL</i> 3-106	:ASH:: <i>MAC</i> 4-59
.RTOI: REL 3-107	:L: (length attribute): MAC 4-55
.RTOR: REL 3-108	:LSH:: <i>MAC</i> 4-59
RTOT: <i>REL</i> 3-109	:MOD:: <i>MAC</i> 4-59
.SIGN: <i>REL</i> 3-110	:NOT:: <i>MAC</i> 4-55
.SIN: <i>REL</i> 3-111	:OP:: <i>MAC</i> 5-11
.SQRT: <i>REL</i> 3-112	:OR: (logical OR): <i>MAC</i> 4-61
no error return, /SQRT: REL 3-174	:ROT:: <i>MAC</i> 4-59
.TADD: <i>REL</i> 3-113	:S: (substring): <i>MAC</i> 4-55
.TAN: <i>REL</i> 3-114	:T: (type attribute): MAC 4-55
no error return, /TAN: REL 3-175	:UC: (uppercase attribute): MAC 4-55
range reduction, /CMRT: REL 3-168	"." and "" directory specifiers: USER 3-9
.TANH: <i>REL</i> 3-115	"FTN7X installation guide: FTN 1-5
range reduction, /CMRT: REL 3-168	"MACLB library: MAC E-11
TAPE: <i>REL</i> 5-40	() space command: EDIT 3-32
TCPX: REL 3-116	(:): <i>MAIL</i> 1-3, 2-4, 4-1, 4-5, 5-9
TDBL: REL 3-117	(\): MAIL 3-1
TDIV: REL 3-117	(1). MAIL 3-1 &.DATE: MAC K-2
TENT: REL 3-118	&.ERROR: MAC K-1
TFTD: REL 4-14	&.PARM: MAC K-3
.TFXD: <i>REL</i> 4-15	&.PCOUNT: MAC K-3
TINT: REL 3-119, 3-176	&.Q: <i>MAC</i> K-1
.TMPY: <i>REL</i> 3-113	&.REP: <i>MAC</i> K-3
.TPWR: <i>REL</i> 3-120	&.RS1 and &.RS2: <i>MAC</i> K-2
.TSUB: <i>REL</i> 3-113	&.RS1=: $MAC E-5$
.TTOI: <i>REL</i> 3-121	&.RS2=: <i>MAC</i> E-5
.TTOR: <i>REL</i> 3-122	&Q: <i>MAC</i> 5-8
.TTOT: <i>REL</i> 3-123	# (pound sign): FTN F-1
.XADD: <i>REL</i> 3-124	#COS: REL 3-137
.XCOM: REL 3-125	#EXP: <i>REL</i> 3-138
.XDIV: <i>REL</i> 3-126	#LOG: <i>REL</i> 3-139
.XFER: <i>REL</i> 3-127	#MACRO: <i>MAC</i> E-11
.XFTD: REL 4-16	# white E-11 #n directory specifier: USER 3-10
.XFXD: <i>REL</i> 4-17	#SIN: REL 3-140
.XMPY: REL 3-128	\$ (end-of-file): EDIT 2-21
.XOR.: FTN E-2	\$A990_CSID entry point: PROG 9-20
.XPAK: <i>REL</i> 3-129	\$ALIAS. See ALIAS directive
.XPLY: <i>REL</i> 3-130	\$AUTO_LOGOFF variable: USER 2-16
.XSUB: <i>REL</i> 3-124	\$BGCD\(\overline{S}\), CDS library: SGI 11-7
.YINT: <i>REL</i> 3-131	\$CDS. See CDS directive
.ZPRV: <i>SDM</i> 8-4	\$CLIMIT. See CLIMIT directive
.ZRNT: <i>SDM</i> 8-4	\$CLWRT: <i>DDM</i> 7-10
!: <i>MAIL</i> 4-4, 4-10	\$CMNDO environment variable: LINK 2-6
! (exclamation point): FTN E-2	\$CMNDO variable: USER 2-17
!RESTORE, booting: PRIM 2-6	\$CMNDO LINK environment variable: LINK 2-6
, O ,	

\$COLUMNS variable: USER 2-17, 7-8 \$READ: *DDM* 7-5 \$DATC variable: USER 2-17 \$REPROMPT variable: USER 2-19 \$DIOC: DDM 7-1 \$RETURN_S variable: USER 2-19 $\$RETURN\overline{1} - \$RETURN5$ variables: *USER* 2-19 \$DMPR: DDM 7-3 \$rte help: PRNT 2-39 \$DTCLB library routines: *DRM* 2-83 \$rte libs: PRNT 2-39 XCOMP: *DRM* 2-89 XCOPY: DRM 2-88 \$rte_mklnks: PRNT 2-39 XDESC: DRM 2-87 \$rte progs: PRNT 2-40 XINMD: DRM 2-87 \$rte snap: PRNT 2-40 \$rte_usr: *PRNT* 2-40 XRELD: DRM 2-87 XRELS: DRM 2-87 $R\overline{U}$ FIRST variable: *USER* 2-19 XRQST: DRM 2-87 \$SAVE STACK variable: USER 2-20 \$DVLU: DDM 7-2 \$SELR: *DDM* 7-8 \$ELSE. See ELSE directive \$SESSION variable: USER 2-20 \$ELSEIF. See ELSEIF directive \$SET. See SET directive \$SETM: DDM 7-5 \$EMA. See EMA directive \$EMA statement: *PROG* 9-15 \$SETP: REL 5-42 \$ENDIF. See ENDIF directive \$SETR: DDM 7-7 \$EVB SIZE variable: USER 2-17 \$SQRT: REL 3-144 \$EXP: REL 3-141 \$SYSA: *SDM* 5-3, 5-13 \$FILES. See FILES directive \$TAN: REL 3-145 \$FRAME SIZE variable: USER 2-17 \$TITLE. See TITLE directive \$HOME variable: USER 2-17 \$TMP1 through \$TMP5: PROG 5-7 \$IDRPL: *SDM* 5-1 \$TRACE. See TRACE directive \$IF. See IF directive \$UFMP: PROG G-3 \$IFDEF/\$IFNDEF. See IFDEF/IFNDEF directive \$UpIft: DDM 7-2 \$IFDVR variable: USER 2-17 \$UPIO: DDM 7-2 \$INCLUDE. See INCLUDE directive \$VISUAL environment variable: *DBUG* 5-8, 7-3 \$KILLCHAR variable: USER 2-17 \$VISUAL mode command line editing: USER 7-8 \$LIBR: PROG 12-3; SDM 8-2, 8-4 \$VISUAL variable: USER 2-20 \$LIBX: *PROG* 12-3 \$WD variable: USER 2-20 \$LINES variable: *PROG* 8-34, 8-35, 8-51; *USER* \$WRIT: *DDM* 7-6 \$XOSB: *DDM* 7-3 \$LINK environment variable: LINK 2-9 %ABS: REL 3-146 \$LIST. See LIST directive %AN: REL 3-147 \$LOG: REL 3-142 %AND: REL 3-148 \$LOG variable: USER 2-18 %ANH: REL 3-149 \$LOGON variable: USER 2-18 %BS: REL 3-150 \$LOGT: *REL* 3-143 %C command: GSA 1-2 \$lp hostname: PRNT 2-38 %ENVRN: *SDM* 5-13 \$lp_loadprogs: PRNT 2-39 \$lp_local: PRNT 2-39 %FIX: *REL* 3-151 %IGN: REL 3-152 \$lp_remote: PRNT 2-39 %IN: REL 3-153 \$lp remotein: PRNT 2-39 %INT: REL 3-154 \$lp remoteout: PRNT 2-39 %LOAT: REL 3-155 \$lp_update: PRNT 2-39 %LOG: REL 3-156 \$MSALC: *DDM* 7-9 %LOGT: REL 3-157 \$MSEG. See MSEG directive %NT: REL 3-158 \$MSRTN: *DDM* 7-9 %OR: REL 3-159 \$MY NAME variable: USER 2-18 %OS: REL 3-160 \$OLDPWD variable: *USER* 2-18 %OT: *REL* 3-161 **\$ONER:** *DDM* 7-6 %QRT: REL 3-162 \$ONEW: DDM 7-7 %RPL90: SDM 5-5 \$OPSY variable: *USER* 2-18 %RPL91: SDM 5-5 %SIGN: REL 3-163 \$OPTPARMS. See OPTPARMS directive %SSW: REL 5-43 \$PAGE. See PAGE directive \$POLL variable: USER 2-18 %TAN: REL 3-164 %XP: REL 3-165 \$POLLINT variable: USER 2-18 \$PROMPT variable: USER 2-18 @: MAIL 1-3, 3-2 \$QUIET CMD variable: USER 2-19 @ (at sign): *FTN* E-2

@ character. See indefinite (@) character	^K command: EDIT 2-28
@ default character: MAC E-4	^Q command: EDIT 2-17
@ file mask character: GSA 3-11	^ R command: <i>EDIT</i> 2-37, 3-31
+ option. See append (+) option	^ S command: <i>EDIT</i> 2-16, 3-31
+n, -n. See line specification	^ T command: <i>EDIT</i> 2-15, 3-32
– default character: MAC E-4	^ U command: <i>EDIT</i> 2-17, 2-21
– file mask character: GSA 3-11	^ X command: <i>EDIT</i> 2-16, 3-32
−B option: <i>DBUG</i> 2-6	(command separator). See command separator
−B runstring option: <i>EDIT</i> 3-3	command: MAIL 3-9, 3-21, 4-4, 4-10
−D option: DBUG 2-7	<\$> (break line metacharacter): EDIT 5-18
-d option (Xdb): DBUG 7-2	> prompt: MAIL 3-4, 3-5
-I option: DBUG 2-7	\sim substitution: <i>USER</i> 2-21
-L option: DBUG 2-8	~?: MAIL 3-4, 3-5
-L runstring option: EDIT 3-3	_ (underscore): FTN E-2
-M option: DBUG 2-8	
-P option: DBUG 2-9	Numbers
-p option (Xdb): DBUG 7-2	1600 hai magnatia tana. PRIM C 1
-Q runstring option: <i>EDIT</i> 3-4 -r option (Xdb): <i>DBUG</i> 7-2	1600 bpi magnetic tape: <i>PRIM</i> C-1 248x integrated disk loading: <i>SGI</i> H-14
-R runstring option: <i>EDIT</i> 3-4, C-2	66 mode: <i>FTN</i> 1-1, 2-11, 7-1, 8-1, E-3
-RB option: DBUG 2-10	compared with 77 mode: FTN 8-1
-S runstring option: <i>EDIT</i> 3-4, 3-47, C-2	77 mode: <i>FTN</i> 1-1, 7-1, 8-1, E-3
-V option: DBUG 2-10	compared with 66 mode: FTN 8-1
-W option: DBUG 2-10	7902 disk drive special considerations: <i>SGI</i> C-20
* (asterisk): FTN E-3	7906M disk drive: <i>SGI</i> C-26
* (comment) command: LINK 3-26	
SECTL: SMM 5-8	Α
* (comment), transfer files: USER 6-3	A
* (line specification character): <i>EDIT</i> 3-15	A (Abort) command: EDIT 1-7, 1-8, 1-13, 2-8, 4-2
/ (command stack command): EDIT 2-35, 4-92	A- and B-Register returns: <i>PROG</i> 7-4
/ (EDIT prompt): <i>EDIT</i> 2-7, 3-32	EXEC 1 and 2: <i>PROG</i> 3-5
/ command: GSA 2-3	EXEC 10: <i>PROG</i> 5-10
/ command stack editor: USER 7-1	EXEC 14: <i>PROG</i> 7-3
/ATLG: <i>REL</i> 3-166	EXEC 17: <i>PROG</i> 4-13
/CMRT: <i>REL</i> 3-168	EXEC 18: <i>PROG</i> 4-13
/COS: <i>REL</i> 3-167 /etc/hosts file: <i>PRNT</i> 2-37	EXEC 19: <i>PROG</i> 4-24
/etc/inetd.conf file: PRNT 2-37, 2-40	EXEC 20: <i>PROG</i> 4-13
/etc/services file: PRNT 2-37	EXEC 21: <i>PROG</i> 4-21
/EXP: REL 3-169	EXEC 23: <i>PROG</i> 5-10 EXEC 24: <i>PROG</i> 5-10
/EXTH: REL 3-170	EXEC 24. 1 ROG 5-10 EXEC 26: PROG 5-15
/LOG: <i>REL</i> 3-171	EXEC 3: <i>PROG</i> 3-9
/LOG0: <i>REL</i> 3-172	EXEC 8: PROG 5-3
/mail/lost: MAIL 7-3	EXEC 9: <i>PROG</i> 5-10
/SCRATCH directory: <i>MAC</i> E-6	signal subroutines: PROG 13-5
/SIN: <i>REL</i> 3-173	A option: MAC E-1
/SQRT: <i>REL</i> 3-174	A- and B-Register contents: <i>DRM</i> 1-9, 1-15
/TAN: <i>REL</i> 3-175	A-Register: <i>FTN</i> B-11
/TINT: REL 3-176	A_B_Registers: <i>REL</i> 12-1
/TR command: SMM 3-30	A_Register: <i>REL</i> 12-1
/USERS directory: SMM 2-8; USER 5-4	A- and B-Registers, ABREG: <i>REL</i> 5-2
/usr/spool/lp/log file: PRNT 2-45	A-Register: SDM 5-3
/usr/spool/lp/lpd.log file: PRNT 2-38, 2-45	A2 to decimal converison, SA2DE: <i>REL</i> 10-31
/usr/spool/lp/seqfile file: PRNT 2-45	A990
^ character. See anchor (^) character ^B command: EDIT 3-32	reading real-time clock: <i>REL</i> 7-40
^ C command: <i>EDIT</i> 5-32 ^ C command: <i>EDIT</i> 2-20, 2-21, 3-31	setting real-time clock: <i>REL</i> 7-54 A990 Computer, clock: <i>USER</i> 6-23
^ D command: <i>EDIT</i> 2-20, 2-21, 3-31	A990 Computer, clock. USER 0-25 A990 firmware
^F command: <i>EDIT</i> 2-37	upgrade for EMA/VMA: <i>PROG</i> 9-14
^I command: EDIT 2-13, 2-21 ^I command: EDIT 3-31	upgrade procedure: SGI 9-20

A OOOEWID massacra, CCL 0 20	accounting limits used and anoun Cat A sat Limites
A990FWID program: SGI 9-20	accounting limits, user and group, SetAcctLimits:
AB (abort) command: LINK 3-4	REL 6-17
AB (abort) LINK command: GSA 5-5	ack variable: MAIL 5-4
AB2MI: ÚSER 6-4	acknowledge control character: EDIT 3-26
error messages: USER 6-5	acknowledge delivery/read: MAIL 3-9, 3-10
ABI chip: HPIB 2-3, 4-5	ACOS: FTN B-6
ABORT: SDM 5-3	ACOSH: FTN B-6, E-3
abort: DDM 4-4	action criterion: MAIL 5-10
and save work file: <i>EDIT</i> 1-7	Activate Breakpoint command: <i>DBUG</i> 5-3
EDIT program: <i>EDIT</i> 1-7, 1-8, 1-13, 2-24	actual address, array element, .MAP: REL 5-36
I/O request, programmatic: PROG 3-11	actual argument: FTN 6-11
Abort (/A) command: SMM 3-7	actual macro parameters: MAC 5-3, 5-9
Abort and Save (AS) command. See AS command	ADA: <i>MAC</i> 3-2, B-2
abort bit: DDM 3-4	ADB: <i>MAC</i> 3-2, B-2
abort program execution command OF: GSA 2-5	add
ABORT statement: HPIB 4-18	complex to complex: REL 3-66
aborted data transfer: HPIB 6-4	double integer: <i>REL</i> 4-3
aborting, LINK: LINK 3-4	DVADD (double precision): REL 8-9
AbortRq call: PROG 3-11	DWADD (EMA double precision): <i>REL</i> 8-9
ABREG: FTN 7-12; REL 5-2, 12-1	extended real: REL 3-124
ADDEC cells CCCLA A A 0	real: REL 3-87
ABREG call: SCSI A-4, A-9	
ABRT subroutine: <i>HPIB</i> 4-18	VADD (single precision): <i>REL</i> 8-9
ABS: FTN B-2, B-8; MAC 4-40, 4-42, B-16; REL	WADD (EMA single precision): <i>REL</i> 8-9
3-2	ADD (system macro): MAC L-10
ABS entry (call-by-name), %BS: REL 3-150	adding
absolute	printer, LP spool system: <i>PRNT</i> 2-41
assembly: MAC E-1	remote printer, LP spool system: <i>PRNT</i> 2-42
code: MAC 1-1	user to a group: SMM 3-13
expressions: MAC 2-10	adding a signature file to a message: MAIL 5-7
programs: MAC 2-10, 4-7, 4-13	adding a spell-checker: MAIL 5-8
value: MAC 4-42	adding text: EDIT 2-12
absolute address: FTN 7-13	adding text to end of lines: <i>EDIT</i> 5-22
absolute value	addition: FTN 2-19
double real: REL 3-62	additional sense code: SCSI A-5, A-9
extended real: REL 3-20	address
integer: REL 3-43	actual, array element, .MAP: <i>REL</i> 5-36
	aliases: MAIL 1-1
of a real: REL 3-2	
of complex (real): REL 3-12	and LU numbers: HPIB 3-1
routine	array element, .MAP: <i>REL</i> 5-41
DVABS (double precision): <i>REL</i> 8-13	ASCII representation: <i>HPIB</i> 2-5, 4-1
DWABS (EMA double precision): REL 8-13	assignment table: HPIB 2-6
VABS (single precision): <i>REL</i> 8-13	author or re-sender's: MAIL 7-12
WABS (EMA single precision): REL 8-13	book: MAIL 5-1, 6-3
AC command: SGI 9-5, J-7	definition: HPIB 1-4, 4-1
AC option: EDIT 3-25	destination: MAIL A-5
accept program: PRNT 2-7	device: HPIB 2-5
	dual-address devices: HPIB 2-5
accessing	
a file: EDIT 3-8, 3-11	formats: MAIL 3-3
EDIT: EDIT 1-6	HP 12009A interface card: HPIB 2-3
next screen: EDIT 2-15	HP 59310B interface card: HPIB 2-1
previous screen: EDIT 2-15	listen: HPIB 1-3
screen mode: EDIT 2-10	missing message return: MAIL B-1
accessing another subroutine: <i>DBUG</i> 3-12	of a user: MAIL 3-3
accessing mirrored disk volume, during restore op-	parameters: MAIL 3-2
eration: <i>DATA</i> 3-12	receiving user's: MAIL A-7
AccessLU, check for LU access: <i>REL</i> 6-2	records: MAIL 7-5
· · · · · · · · · · · · · · · · · · ·	
account structure	secondary: HPIB 1-4
group account planning: SMM 2-7	subchannels: HPIB 3-1
overview: SMM 2-5	switches: HPIB 2-3
user account planning: SMM 2-7	talk: HPIB 1-3

true, of parameter, .PCAD: <i>REL</i> 5-39	alignment: FTN 2-9
address and symbol, definition: MAC B-16	All (A) option: <i>EDIT</i> 2-32, 3-24
address definition, instructions: MAC 4-1, 4-40,	ALLOC: <i>MAC</i> 4-19, 4-22, 4-23, 4-41, B-14
B-16	ALLOC command: <i>MAC</i> 4-9
address of SCSI card: SCSI 2-6, 4-8	ALLOCATE: MAC H-8
address operators: DBUG 4-9	allocate additional map sets, \$MSALC: <i>DDM</i> 7-9
address transfer	allocating
.ENTC: <i>REL</i> 5-28	class numbers: SGI 7-1
.ENTN: <i>REL</i> 5-28	debug table entries: SGI 7-2
.ENTP: <i>REL</i> 5-29	dynamic memory: SDM 3-5
.ENTR: <i>REL</i> 5-29	extended schedule table: SGI 7-5
addressable mode devices: HPIB 2-6	extended system available memory (XSAM):
addressbook.mail: MAIL 5-1, 7-2, A-10, B-2	SGI 7-3
addressed commands: HPIB 4-5	ID segments: SGI 7-2
addresses	memory descriptors: SGI 7-3
of domains: MAIL A-8	reserved partitions: SDM 3-5
using aliases in: MAIL 5-2	resource numbers: SGI 7-1
using multiple: MAIL 5-2	secondary SHEMA areas: PROG 9-16
addressing: HPIB 4-1	system available memory (SAM): SGI 7-3
automatic: HPIB 3-3, 4-22	system message block: SGI 7-6
direct: <i>HPIB</i> 3-3, 4-2, 4-17	allocation: <i>FTN</i> 3-39, 3-40
messages: MAIL 3-2	dynamic: FTN H-1
more than one user: MAIL 3-3	static: FTN H-1
secondary: HPIB 4-2, 4-22	ALOG: FTN B-6; REL 3-5
addressing mode: FTN 3-34	ALOG entry (call-by-name), %LOG: REL 3-156
AddressOf: REL 7-1	ALOG10: FTN B-6
adjustable array declarator: FTN 6-14	ALOGT: REL 3-6
ADX: <i>MAC</i> 3-9, B-7	ALOGT entry (call-by-name), %LOGT: <i>REL</i>
ADY: <i>MAC</i> 3-9	3-157
AELSE: MAC 4-63, B-17	ALR: <i>MAC</i> 3-5, B-4
AELSEIF: <i>MAC</i> 4-63, B-17	ALS: <i>MAC</i> 3-5, B-4
AENDIF: <i>MAC</i> 4-63, B-17	Alter Group (AL G) command: SMM 3-7
AENDWHILE: <i>MAC</i> 4-63, B-17	
	Alter User (AL U) command: SMM 3-9, 3-14
AH: auto-home bit, serial I/O drivers: <i>DRM</i> 2-154	alter-skip group: MAC 3-8, B-6
AIF: MAC 4-63, B-17	altering your environment: MAIL 5-4
AIMAG: FTN B-2; REL 3-3	alternate entry: FTN 7-10
AINT: FTN B-5; REL 3-4	alternate PROGRAM statement: FTN 3-70
AINT entry, %INT: REL 3-154	alternate return: FTN 3-82, 6-7
AL (all memory locked) command: LINK 3-4	alternate return statement: FTN 6-3
ALÀRM: SDM 5-3	alternate returns: <i>REL</i> 2-3
alarm program schedule, ID*01: <i>DRM</i> J-78	alternate variable display: DBUG 4-11
ALF: <i>MAC</i> 3-5, B-4	AMAX0: FTN B-2; REL 3-7
alias: MAC 4-19, 4-21	AMAX1: FTN B-2; REL 3-8
defining: USER 6-6	American National Standards Institute. See ANSI
deleting: <i>USER</i> 6-6, 6-187	Amigo standard: <i>HPIB</i> 2-5, 5-7, 5-16
displaying: USER 6-6	AMIN0: FTN B-2; REL 3-7
ALIAS command: USER 6-6	AMIN1: FTN B-2; REL 3-8
ALIAS directive: FTN 6-18, 7-10	AMOD: FTN B-2; REL 3-9
DIRECT option: FTN 7-11	anchor: EDIT B-1
EMA option: FTN 7-12	anchor (^) character: EDIT 1-15, 2-33, 3-18, 3-25
NOABORT option: FTN 7-11	5-2
NOALLOCATE option: FTN 3-17, 7-13	AND: MAC 3-2, B-2
NOEMA option: FTN 7-12	AND entry, logical (call-by-name), %AND: REL
WXTRN option: FTN 7-11	3-148
alias:address pair: MAIL 5-2	ANINT: FTN B-5
aliases: <i>MAIL</i> 1-1, 5-1, 5-2, 7-2, A-5, A-9, A-10,	ANSI 66
B-2	compatibility extensions: FTN 8-1, D-1
non-expanded: MAIL 5-3	mode: FTN 7-1, 8-1
aliases in the address: MAIL 5-2	standard: <i>FTN</i> 1-1, 8-1
ALIGN command: SGI 4-5, 5-6	ANSI 77: FTN 8-1 8-6 8-8 F-2 H-2

extension to the standard: FTN 2-1, 2-2, 2-3,	elements: FTN 2-14
2-5, 2-9, 2-10, 2-11, 2-12, 2-27, 2-28, 3-17,	FORTRAN versus Pascal: FTN 7-30
3-23, 3-24, 3-31, 3-33, 3-40, 3-41, 3-43, 3-46,	in subprogram: FTN 6-13
3-48, 3-59, 3-62, 3-63, 3-70, 3-71, 3-75, 3-81,	multidimensional: FTN 8-7
3-82, 3-86, 5-2, 5-14, 6-9, 6-18, 8-4, H-3	name: FTN 2-14
intrinsic functions: FTN 2-4	passing: FTN 6-12
MIL-STD-1753 extension: <i>FTN</i> 2-12, 3-29, 3-54,	subscripted: FTN 6-13
3-55, B-10	array initialization (VIS): <i>REL</i> 9-12
mode: FTN 7-1, 8-1	arrays, assembly time: MAC 4-49
ANSI X3.9-1966: <i>FTN</i> 1-1	arrays in memory: <i>REL</i> 8-2 ARS: <i>MAC</i> 3-5, B-4
ANSI X3.9-1978: <i>FTN</i> 1-1	
answer file: PRIM 2-12; SCSI 3-3 building: SGI 6-9	ARSTR physical restore utility: BKUP 2-2
example: DATA 4-5	ABort: <i>BKUP</i> 2-3 break detection: <i>BKUP</i> 2-12
modification: DATA 4-2	calling ARSTR: BKUP 2-2
Primary: SGI G-1	checking the disks: <i>BKUP</i> 2-9
APOSN (position a disk file) routine: <i>PROG</i> C-1	command examples: BKUP 2-8
APOSN (position disk file) routine: PROG B-9	commands: BKUP 2-2
apostrophe: FTN 2-10	disk locking: BKUP 2-10
append (+) option: EDIT 4-41	ENd: BKUP 2-3
appending	error messages: BKUP 2-14
a file: EDIT 4-41	example: BKUP 2-13
a line: EDIT 4-97	EXit: BKUP 2-3
text: EDIT 3-6, 4-92, 4-97	HElp: BKUP 2-4
application program development: GSA 5-2	LH List Header: <i>BKUP</i> 2-4
applications (VIS): REL 9-11	LL List Device: BKUP 2-4
arctangent	loading ARSTR: BKUP 2-12
extended real: REL 3-21	offline system: BKUP 2-12
of a real: REL 3-10	order of disk restoration: BKUP 2-10
quotient of two double reals: REL 3-64	RE command options: BKUP 2-6
quotient of two extended reals: <i>REL</i> 3-22	REstore: BKUP 2-5
quotient of two reals: <i>REL</i> 3-11	restore operation: BKUP 2-9
A-Register, return: <i>PROG</i> 1-4	restoring the data: BKUP 2-11
environment variable block: PROG 14-4	RW Rewind: BKUP 2-7
argument	save definition records: BKUP 2-10
actual: FTN 6-11	sectors per track must match: BKUP 2-9
formal: FTN 6-11	TApe LU: BKUP 2-7
argument correspondence: FTN 6-12	total number of tracks may differ: BKUP 2-9
argument list: FTN 6-11	UE User Error Handling: <i>BKUP</i> 2-8
arithmetic, double real: <i>REL</i> 3-113	unit restore: BKUP 2-10
arithmetic assignment statement: FTN 3-7	verification: BKUP 2-11
arithmetic constant expression: FTN 2-22	ARSTR utility: PRIM 2-12
arithmetic expression: FTN 2-18	AS (assign partition) command: LINK 3-4
order of evaluation: FTN 2-19	AS command: <i>EDIT</i> 1-7, 3-47, 4-3; <i>SGI</i> 9-6, J-5;
arithmetic functions: FTN B-2	USER 4-10, 6-8
arithmetic IF statement: FTN 3-49, 8-8	AS option: EDIT 3-25
arithmetic negation: MAC 4-55	ASAVE: SCSI 6-1
arithmetic operators: DBUG 4-8; FTN 2-18; MAC	ASAVE physical backup utility: BKUP 2-19
2-10, 4-51, 4-59, 4-63	ABort: BKUP 2-21
arithmetic relational expression: <i>FTN</i> 2-24 arithmetic routines: <i>REL</i> 8-9	break detection: BKUP 2-29
	calling ASAVE: BKUP 2-19
array: FTN 2-13, 2-14, 3-26, 3-33, 6-15, 8-6	command options: <i>BKUP</i> 2-26 commands: <i>BKUP</i> 2-20
adjustable: <i>FTN</i> 6-14 bounds: <i>FTN</i> 3-38, 6-13, E-3	data record: BKUP 2-31
character: <i>FTN</i> 2-17	disk locking: BKUP 2-26
declarator: FTN 2-14, 2-15, 3-21, 3-84	ENd: <i>BKUP</i> 2-21
decidation: FTN 2-14, 2-15, 5-21, 5-64 dimension: FTN 2-14, 3-40, 6-13, E-3	end-of-data record: BKUP 2-32
dimension bound: <i>FTN</i> 2-14	error messages: BKUP 2-33
dimension declarator: FTN 2-14	example: BKUP 2-32
element storage: FTN 2-16	EXit: BKUP 2-21

header records: <i>BKUP</i> 2-30 HElp: <i>BKUP</i> 2-21 LH List Header: <i>BKUP</i> 2-21	variable value substitution: <i>MAC</i> 4-47 variables (ATVs): <i>MAC</i> 1-12, 2-7, 4-47, 4-48, K-1
LL List Device: BKUP 2-22	assign
loading ASAVE: BKUP 2-29	code partition: LINK 3-4
RW Rewind: BKUP 2-22	data partition: LINK 3-4
SA command options: BKUP 2-23	ASSIGN statement: FTN 3-6, 3-48, 8-6
SAve: <i>BKUP</i> 2-22	assigned GOTO statement: FTN 3-48
save definition record: <i>BKUP</i> 2-31	assigning
save file records: BKUP 2-27	partitions: USER 4-10
save operation: BKUP 2-26	programs to partitions: USER 6-8
saving disks to tape: BKUP 2-27	assignment statement: FTN 3-7
tape and file formats: BKUP 2-29	arithmetic: FTN 3-7
TApe LU: BKUP 2-24	character: FTN 3-10
tape positioning: BKUP 2-27	logical: FTN 3-9
tape records: BKUP 2-30	assumed-size array declarator: FTN 6-14
TItle: BKUP 2-24	asterisk: FTN 2-28, 3-36, 3-46, 3-69, 3-72, 3-73,
UE User Error Handling: BKUP 2-25	3-76, 3-83, 6-3, 6-10, 6-14, 6-15, 6-18; <i>MAC</i> 2-7
unit save LU checking: BKUP 2-26	as upper dimension bound: FTN 2-14
verification: BKUP 2-28	asterisk (*): FTN E-3
ASAVE use in disk backup: <i>DATA</i> C-1	asterisk (*) command. See comment (*) command
ASAVE utility: <i>PRIM</i> 2-12	asterisk (*) line specification: EDIT 3-15
ASC: MAC 4-35, B-15	asynchronous interrupt: DDM 3-2
ASCII: <i>FTN</i> 8-7, D-8	defined: DDM 1-5
digit to internal numeric conversion, .FMUI:	response to attention: <i>DDM</i> 6-3
REL 5-32	AT command: <i>USER</i> 4-5, 6-11
ASCII address strings: <i>HPIB</i> 4-2, 4-5	at sign (@): <i>FTN</i> E-2
ASCII characters: FTN 2-1; MAC 4-35	ATACH, attach to session: <i>REL</i> 6-3
ASCII collating sequence: FTN 2-25	ATAN: <i>FTN</i> B-6; <i>REL</i> 3-10
ASCII to double integer conversion	ATAN entry (call-by-name), %TAN: REL 3-164
DecimalToDint: REL 7-21	ATAN2: <i>FTN</i> B-6; <i>REL</i> 3-11
OctalToDint: REL 7-37	ATANH: FTN B-6, E-3
ASCII to single integer conversion	ATCRT, attach a CRT: REL 6-4
DecimalToInt: REL 7-22	ATN bus management line: HPIB 1-7
OctalToInt: REL 7-38	attach a CRT, ATCRT: REL 6-4
ASCII vs. binary read modes: DRM 2-147	attach to session, ATACH: REL 6-3
ASHIFT (system macro): MAC L-15	attribute operators: DBUG 4-8
ASIC interface drivers, ID*00/ID*01: DRM J-66	author or re-sender's address header: MAIL 7-12
ASIN: FTN B-6	author's return address header: MAIL 7-12
ASINH: FTN B-6, E-3	auto-home bit, read request: DRM 2-152
ASK command: USER 6-9	autoboot switch settings: SGI 9-23, 10-13
askdisp variable: <i>MAIL</i> 5-4	automatic message handling: MAIL 5-1
Asking (AS) option: EDIT 1-14, 3-25	AUTOR program: <i>DRM</i> H-2
ASL: <i>MAC</i> 3-12, B-11	AUTOR routine: SDM 5-5
ASMB assembly language: MAC 1-2	autoreply: MAIL 5-11
ASR: <i>MAC</i> 3-12, B-11	AWHILE: <i>MAC</i> 4-63, 4-65, B-17
assembler	
control instructions: <i>MAC</i> 4-1, 4-2, 4-3	D.
instructions: <i>MAC</i> 1-10, B-14	В
pseudo ops: MAC 4-1	B command: EDIT 2-31, 3-18, 4-4
assembling the bus: HPIB 2-7	B option: <i>MAC</i> E-2
assembly language	B-Register return value: <i>PROG</i> 1-4
constructs: MAC M-3	
programming: MAC M-1	B_Register: REL 12-1
assembly listing control instructions: MAC 4-25	background
assembly time	partitions: SDM 3-2
	priority: SGI 7-4
arrays: MAC 4-49	command (BG): SGI 7-11
global variables: MAC 4-48	programs: SDM 1-3, 3-1, 3-2
local variables: MAC 4-49	background programs: GSA 1-6
variable declaration: MAC 4-1, 4-47, B-16	backing store file: <i>PROG</i> 9-2

backing up	syntax: HPIB 4-12
disk LUs: BKUP 2-19	BASIC/1000D
system	automatic addressing: HPIB 4-22
logical backup: SMM 1-18	device control: HPIB 4-14
overview: SMM 1-15	secondary addressing: HPIB 4-3, 4-22
physical backup: SMM 1-17	strings: HPIB 4-20
recommendations: SMM 1-19	syntax: HPIB 4-12
strategy: SMM 1-16	batch mode: <i>EDIT</i> 3-3, 3-49
temporary files: BKUP 2-233	batch operation: EDIT 1-10
the target system: SGI 9-19, 10-13	baud rates, supported: <i>DRM</i> 2-165
backing up your system: <i>PRIM</i> 2-12	BC command: EDIT 4-6
backslash: MAC 2-14	BE option: EDIT 3-25
backspace: EDIT 3-31	beginning-of-information: FTN 3-78
backspace key: GSA 1-1	Bell (BE) option: EDIT 3-25
BACKSPACE statement: FTN 3-11, 5-5, 5-13	BG command: SGI 7-11, 9-5, J-7
backspace tape, .TAPE: REL 5-40	binary bit, read request: <i>DRM</i> 2-152
backup	binary codes: MAC D-1
logical: <i>BKUP</i> 1-2 online: <i>BKUP</i> 1-2	binary vs. ASCII read modes: <i>DRM</i> 2-147
utilities	bit bucket: <i>PROG</i> 4-13, 4-22 bit manipulation functions: <i>FTN</i> B-3
ARSTR: BKUP 2-2	bit manipulation intrinsics: FTN E-1
ASAVE: <i>BKUP</i> 2-19	
COPYL: BKUP 2-34	bit map: <i>USER</i> 3-36 displaying, MPACK: <i>USER</i> 6-117
DRSTR: <i>BKUP</i> 2-36	free space table: USER 6-73
DSAVE: <i>BKUP</i> 2-52	bit map manipulation routines: <i>REL</i> 7-2
FC: <i>BKUP</i> 2-85	ChangeBits: REL 7-2
FST: <i>BKUP</i> 2-172	CheckBits: <i>REL</i> 7-2
LIF: BKUP 2-219	ClearBitMap: <i>REL</i> 12-2
overview: BKUP 1-1	FindBits: REL 7-3
TF: BKUP 2-230	GetBitMap: REL 12-8
backward compatibility: FTN E-1, E-3; MAC 1-2,	HpZDumpBitMap: REL 12-48
B-18, J-1	PutBitMap: REL 12-82
constructs: MAC J-1	SetBitMap: REL 12-84
option: MAC E-2	Test_SetBitMap: REL 12-86
bad pages, specifying: SGI 9-3	TestBitMap: REL 12-85
base line specification. See line specifications	bit masking: FTN 2-27
base line specification default: <i>EDIT</i> 3-15	bit processing: FTN B-10; MAC 3-3
base page: SDM 9-2	bit subfields: FTN B-10
data: MAC 4-9	bits
linking: SDM 9-5	change: REL 7-2
links: <i>SDM</i> 9-4, 9-5	check: REL 7-2
in source BOOTEX: USER 6-89	find free bits: <i>REL</i> 7-3
links, allocation: SDM 9-5	BK command: EDIT 4-8
relocatable space: MAC 1-11, 4-3	blank common: <i>FTN</i> 3-15, 3-20
system: SDM 9-1	blank interpretation edit descriptors: FTN 4-17
user: <i>SDM</i> 9-5	blank program common: SDM 8-1
base set command: USER 6-1	blank system common: SDM 8-1, 8-3
RU command: USER 6-155	blanks: FTN 2-1, 2-10, 3-47
TM command: USER 6-180	BlankString: REL 7-4
XQ command: USER 6-207	BLF: <i>MAC</i> 3-5, B-4
BASIC arrays: DBUG 4-6	blind carbon copy addressing headers: MAIL 3-6
BASIC language: FTN 7-30	BLOCC command: SGI 4-5
BASIC/1000C	block: FTN 3-59, 5-3, 7-18
and BASIC/1000D strings: HPIB 4-20	block and sector to track and sector: REL 7-4
automatic addressing: HPIB 4-22	block copy: EDIT 4-6
CHARACTER variable type: HPIB 4-20	BLOCK DATA statement: FTN 3-12, 6-18
device control: HPIB 4-14	block data subprogram: FTN 1-4, 3-12, 3-17, 6-1
I/O specifiers: HPIB 4-13	6-18, 7-13, E-3
secondary addressing: HPIB 4-3, 4-22	block data subroutines: LINK 4-8
service requests: HPIB 5-9	block DO loop: FTN 3-23, 3-24, 3-30, E-1

block IF statement: FTN 3-51, 6-17	SZ: SGI 9-6, J-5
block mode read, serial I/O drivers: DRM 2-153	boot extension. See BOOTEX
block move: EDIT 4-9	boot preparation: SGI 9-11
BlockToDisc: REL 7-4	boot procedure: SGI H-1
BLR: MAC 3-5, B-4	boot-up command string: GSA 1-2
BLS: <i>MAC</i> 3-5, B-4	bootable medium
BM command: EDIT 4-9	CTD: <i>SGI</i> 10-8
body of the macro definition: MAC 5-2	disk volume: SGI 10-8
Boolean (Pascal): FTN 7-30	FMGR cartridge: SGI 10-9
boot	magnetic or DAT tape: SGI 10-8
command file: SCSI 3-5	merged system file: SGI 10-7
configuration: SCSI 6-1	PROM: <i>SGI</i> 10-7
device media: SCSI 6-3	bootable system installation utility (FPUT): USER
device type parameter: SCSI 6-5	6-62
disk	FPUT operation: USER 6-63
count: SCSI 6-3	BOOTEX: SDM 4-1, 11-2; SGI 9-9, J-1; USER
default drive parameters: SCSI 6-3	6-87
media: SCSI 6-3	and FMGR: USER B-10, B-28
partial: SCSI 6-3	functions: SDM 4-2
file number: SCSI 6-5	initializing: USER 6-87
SCSI bus address: SCSI 6-5	installation considerations: SGI 9-8
string: SCSI 6-5	installing: USER 6-62
device type parameter: SCSI 6-5	messages: DATA A-9
file number parameter: SCSI 6-5	mirrored disk installation: DATA 4-10
loader parameter: SCSI 6-5	operation: SGI J-1
SCSI bus address parameter: SCSI 6-5	prompt: SDM 1-11
select code parameter: SCSI 6-5	running BOOTEX: DATA 4-16
text parameter: SCSI 6-5 unit number parameter: SCSI 6-5	skipping: <i>SGI</i> J-8 VCP/loader ROM: <i>USER</i> 6-87
_	booting
tape count: SCSI 6-4	!RESTORE: PRIM 2-6
data: SCSI 6-4	from disk, using BOOTEX: SGI 10-9
default drive parameters: SCSI 6-4	from FMGR cartridge: SGI 10-9
media: SCSI 6-4	Primary System: <i>PRIM</i> 2-9, 2-12
partial: SCSI 6-4	the target system: SGI 9-16, 10-9
boot command file: SGI 9-2, J-8	booting from SCSI: SCSI 6-5
example: <i>DATA</i> 4-12; <i>SGI</i> 9-7, J-8	booting the system: GSA 1-2
modification: DATA 4-11	command string: GSA 1-2
boot commands	bootstring
AC: SGI J-7	format examples: SCSI 6-6
AS: SGI J-5	specific examples: SCSI 6-6
BG: SGI J-7	bounce: <i>MAIL</i> 3-6, 4-3
BP: <i>SGI</i> J-4	bouncing a message: MAIL 4-7
ECHO: SGI J-2	BP (report base page usage): LINK 3-5
EN: SGI J-7	BP command: SGI 9-3, J-4
MC: SGI J-3	BR command: <i>GSA</i> 2-5; <i>USER</i> 4-7, 6-13
MI: SGI J-2	use with RE, VE commands: <i>DATA</i> 3-12, 3-14
MS: SGI J-3	break (halt) program execution command BR:
PR: SGI J-5	GSA 2-5, 2-6
QU: SGI J-7	BREAK command: <i>MAC</i> 4-18, B-17, M-8
RP: SGI J-5	Break command: DBUG 2-13, 5-4
RV: SGI J-6	BREAK Key: SDM 1-9
S2: SGI J-2	BREAK macro: MAC N-12
SA: <i>SGI</i> J-3	Break Uplevel command: DBUG 5-7
SC: SGI 9-4, J-3	breakflag test, IFBRK routine: <i>PROG</i> 7-11
SN: <i>SGI</i> 9-2, J-2	breaking a line
SS: <i>SGI</i> J-7 ST: <i>SGI</i> J-5	line mode: <i>EDIT</i> 3-32 screen mode: <i>EDIT</i> 3-37, 4-62
SN: <i>SGI</i> J-6	through regular expressions: <i>EDIT</i> 5-18
SY: <i>SGI</i> J-2	breaking program execution: <i>USER</i> 4-7, 6-13
U I 1 U U I U W	DISUMINE DISCIUM CASCUMICAM, CAMAR TELLUSIA

Breakpoint command: DBUG 3-4	functional description: HPIB 1-3
breakpoints	interface card HP 12009A: HPIB 2-3
activating: DBUG 5-3	interface card HP 59310B: HPIB 2-1
clearing: <i>DBUG</i> 3-6, 5-7, 5-8	LU numbers: HPIB 3-1
deactivating: DBUG 5-10	operation example: HPIB 1-2
displaying: DBUG 3-6, 5-5	programming languages: HPIB 1-3
numbers: DBUG 3-4	RTE-6/VM LU assignment: HPIB 3-4
setting: DBUG 3-4	RTE-A LU assignment: HPIB 3-6
setting at returns: DBUG 5-7	service program: <i>HPIB</i> 5-11, D-1
setting conditional: DBUG 3-5	specifications: HPIB 1-4
setting temporary at returns: DBUG 5-30	structure: HPIB 1-5
BRG range: <i>DRM</i> 2-165	bus terminator: SCSI 2-8
ID800/ID801 default: <i>DRM</i> 2-175	busy device: SDM 1-14
bringing up a device: USER 2-11, 6-190	busy state: GSA 2-3, 2-5
BRS: <i>MAC</i> 3-5, B-4	bypass bit (bit 15): <i>DRM</i> 2-149
BSS: MAC 4-34, B-15	BYT: <i>MAC</i> 4-35, 4-36, B-15
	byte length: FTN E-2
BSTAT subroutine: HPIB 5-2, 5-5	byte manipulation, GetByte: <i>REL</i> 12-8
BTEST: <i>FTN</i> B-3, B-10, E-1	byte processing: MAC 3-3, 4-44
buffer DCB: PROC 8 2	byte processing. WAC 5-5, 4-44
DCB: PROG 8-2	
limits: <i>SDM</i> 1-14	С
system buffer: SDM 1-9, 1-13	
user: PROG 8-8	C command: <i>EDIT</i> 3-31, 4-11
user buffer: SDM 1-13	C compiler option: FTN F-1
zero, ClearBuffer: <i>REL</i> 7-6	C language, expressions and formats (Xdb):
buffer block: FTN 5-9	DBUG 7-12
buffer limit: DDM 2-7	C option: <i>MAC</i> E-2
See also S bit	cable
displaying and modifying, FMGR: USER B-64	connector hardware: HPIB 2-8
buffered I/O: PROG 4-4; SDM 1-13	installation: HPIB 2-7
REIO routine: <i>PROG</i> 3-10	length restrictions: HPIB 2-3
buffered I/O request: SDM 2-8	cables: <i>SCSI</i> 1-1, 1-3
buffered operation: <i>PROG</i> 3-2	CABS: <i>FTN</i> B-2, B-8; <i>REL</i> 3-12
buffered read: DRM 2-179	caching scheme: BKUP 1-9
BUFSIZ: FTN 5-3, 7-18, E-2	Calc_Dest_Name: PROG 8-14
BUILD: <i>SDM</i> 3-8, 11-2	calculate sign
BUILD command file: SGI I-9	real or integer times integer: <i>REL</i> 3-50
BUILD commands: SGI I-3	real or integer times real: <i>REL</i> 3-54
??: <i>SGI</i> I-4	call by value (non-FORTRAN 77 languages): FTN
/A: SGI I-4	6-11
/C: SGI I-4	CALL EXIT statement: FTN 3-81
/E: SGI I-4	call formats
/R: <i>SGI</i> I-4	EXEC: PROG 1-3
command file for RAM disk: SGI I-9	system library: <i>PROG</i> 1-3
PA (partition): SGI I-4	call LOGOF, CLGOF: <i>REL</i> 6-5
PR: SGI I-4	call LOGON, CLGON: REL 6-6
PT: <i>SGI</i> I-3	CALL macro: MAC L-2, L-5, N-7
RP: <i>SGI</i> I-3	CALL statement: <i>FTN</i> 3-12, 3-76, 6-2, 6-3
SS: SGI I-3	CALL subroutine operations: <i>MAC</i> L-4
ST: SGI I-4	CALL summary
SZ: <i>SGI</i> 10-3, I-4	CALL: MAC N-7
BUILD program: SGI 10-2, I-1	DCALL: MAC N-7
completion codes: SGI 10-5	DLCALL: MAC N-7
error messages: SGI A-8	DUCALL: MAC N-7
example command file: SGI 10-6	LCALL: MAC N-7
examples: SGI I-5	PCALL: MAC N-7
BUMPEXIT macro: MAC N-6	UCALL: MAC N-7
bus	CALLB: DRM H-5
assembly: HPIB 2-7	calling BASIC language: FTN 7-30
command messages: HPIB 4-5	calling conventions: <i>REL</i> 2-1

calling FORTRAN: FTN 7-30	CCA: MAC 3-8, B-6
calling Macro/1000: FTN 7-30	CCB: <i>MAC</i> 3-8, B-6
calling macros: MAC 5-1, 5-3	CCE: <i>MAC</i> 3-8, B-6
calling non-FORTRAN subprograms: FTN 7-30	CCOS: FTN B-6
calling Pascal: FTN 7-30	CD (code segment) command: LINK 3-5; PROG
CALLM utility, include directive: <i>USER</i> 6-15	10-2 CD
CALLS utility	CD command: <i>USER</i> 2-24, 4-12, 6-20
catalog file: <i>USER</i> 6-17 directives: <i>USER</i> 6-17	CDS: FTN 3-48, 7-14, 7-24, A-19, B-12; MAC 4-8 B-17
index file: USER 6-19	assembly language
online help facility: USER 6-16	constructs: MAC M-3
relating topics to other topics: <i>USER</i> 6-18	programming: MAC M-1
cancel program: PRNT 2-8	code mixing: PROG 10-5
canceling	code segment block assignment: LINK 3-5
EDIT: EDIT 2-8	command: MAC M-4
last change: EDIT 2-29	converting programs to: PROG 10-5
capability levels: SMM 4-4; USER 5-5	data and strings: MAC N-2
checking: SMM 4-12	definition: MAC M-1
for CI commands: USER 6-1	displaying code partition size: USER 6-44
ORGCPLV: SMM 4-5	displaying data partition size: USER 6-50
PROGCPLV: SMM 4-5	environment: MAC 4-11
protecting access to programs: SMM 4-12	features: MAC M-1
range: SMM 4-4	FORTRAN conversion to: <i>PROG</i> 10-6
RQUSCPLV: SMM 4-5	library considerations: LINK 4-10
within commands: USER 5-6	load map overview: LINK 4-16
capitalizing first letters: EDIT 5-21	modifying code partition size: <i>USER</i> 6-44
carbon copy addressing headers: MAIL 3-6	modifying data partition size: <i>USER</i> 6-50
card registers: DDM 9-2	no automatic conversion: <i>PROG</i> 10-5
caret (^) character. See anchor (^) character	no more data space: PROG 10-7
carriage control characters: <i>ETN 4.4</i>	non-CDS code mixing: <i>PROG</i> 10-5 opcodes: <i>MAC</i> 3-17
carriage control characters: FTN 4-4 carriage control when printing: PRNT 4-1, 4-4	Pascal conversion to: <i>PROG</i> 10-6
carriage return control character: <i>EDIT</i> 3-26	program: USER 4-11
carriage return key: GSA 1-1	memory requirement: USER 4-12
cartridge	program current page links: SDM 9-5
initializing in FMGR: USER B-11	program examples: MAC M-11
tape drive	program structure: SDM 3-3
CS/80 definition: <i>BKUP</i> 1-9	programming: <i>PROG</i> 10-1
loading from: SGI H-9	programs: PROG 10-1
cartridge directory: SDM 11-26	strings and data: MAC N-9
cartridge mount/dismount: SDM 1-17	tables: <i>SDM</i> 11-44
Case Folding (CF) option: <i>EDIT</i> 2-32, 2-34, 3-19,	CDS control: MAC B-17
3-25, 3-50, 4-4, B-1	CDS directive: FTN 7-14
CaseFold, convert lowercase to uppercase: <i>REL</i>	CDS library, \$BGCDS: SGI 11-7
7-5	CDS programs: REL 2-4
CATALOGS directory: SGI 9-14	CDS/non-CDS subroutine calls: MAC N-1
categories (Security/1000): SMM 4-8	CDSFH: SDM 5-4
categories of printers: PRNT 2-2	CDSONOFF macro library: MAC N-1
Category Function Table (CFT)	CDSONOFF strings and data
definition: SMM 4-8	BREAK macro: MAC N-12
format: SMM 4-9	COMPARE macro: <i>MAC</i> N-10 COMPAREBYTES macro: <i>MAC</i> N-11
Category Index Table (CIT) definition: <i>SMM</i> 4-8	COMPAREBITES macro: MAC N-11 COMPAREWORDS macro: MAC N-11
format: SMM 4-9	EMPTYSTRING macro: MAC N-9
CAX: <i>MAC</i> 3-9, B-7	END macro: MAC N-13
CAY: MAC 3-9, B-7	LOCAL macro: MAC N-11
CBS: MAC 3-4, B-3	MOVE macro: MAC N-10
CBT: MAC 3-3, B-3	MOVEBYTES macro: MAC N-10
CBX: <i>MAC</i> 3-9, B-7	MOVECODETODATA macro: MAC N-10
CBY: <i>MAC</i> 3-9, B-7	MOVEWORDS macro: MAC N-10
/	

RELOC macro: MAC N-12	CHARACTER statement: FTN 2-10
STRING macro: MAC N-9	character strings: REL 2-5
CEXP: <i>FTN</i> B-6; <i>REL</i> 3-13	CHARACTER[*len] statement: FTN 3-83
CEXP entry, #EXP: REL 3-138	characters in arrays, compare, CharsMatch: <i>REL</i>
CF option: <i>EDIT</i> 2-32, 3-25	7-6
CGLOBAL: MAC 4-48, 4-50, B-16	CharFill: REL 7-5
Change List File command: <i>DBUG</i> 5-7	CharsMatch: REL 7-6
change protection status command PROT: GSA	Chebyshev series, evaluate: <i>REL</i> 3-70
3-12	CHECK: SDM 5-4
ChangeBits: REL 7-2	check if user is in group (RTE-A only), Member:
changing	REL 6-13
associated group: USER 3-31	check system session table address, FromSySession:
CDS program memory requirement: <i>USER</i> 4-12	REL 6-8
code partition size: <i>USER</i> 6-44	CheckBits: REL 7-2
data partition size: USER 6-50	checking consistency on a CI file system disk LU:
device timeout: USER 6-181	USER 6-73
directory owner: USER 3-31	checking file size: <i>EDIT</i> 4-74
directory protection: USER 3-33, 6-139	checking for new mail
file protection: USER 3-27, 6-139	from CI: MAIL 6-1
I/O device attributes: USER 2-11	from Mail/1000: MAIL 3-11
memory requirements: USER 4-9	CHNGPR, change program priority: <i>PROG</i> 5-4
program priorities: USER 4-9, 6-138	choosing, correct driver: <i>DRM</i> E-4
program size: USER 6-179	chunks: SDM 12-7
stack area size: LINK 3-22	CI (Command Interpreter): GSA 2-1
subdirectory protection: <i>USER</i> 3-33	See also Command Interpreter (CI)
UDSP: <i>USER</i> 6-134	auxiliary programs: SGI 9-15
VMA size: USER 4-11, 6-191	directory organization: SMM 1-11
VMA working set size: USER 6-206	required directories: SGI 9-13
working directory: <i>USER</i> 6-20, 6-194	required programs: <i>SGI</i> 9-13 CI commands
changing case of text: <i>EDIT</i> 5-20 changing file name: <i>GSA</i> 3-9	? (help): USER 6-3
changing printers: MAIL 5-6	* (comments): USER 6-3
changing the value of a variable: <i>DBUG</i> 3-7, 5-25	ALIAS: USER 6-6
CHAR: <i>FTN</i> B-4, B-5, E-3	AS: USER 6-8
CHAR functions: FTN 2-10	ASK: USER 6-9
character	AT: USER 6-11
argument: FTN 6-15	BR: <i>USER</i> 6-13
assignment: FTN 3-10	CD: <i>USER</i> 6-20
constant: <i>FTN</i> 2-1, 2-10, 8-5	CL: USER 6-22
constant expression: FTN 2-23	CLOCK: USER 6-23
data type: <i>FTN</i> 2-10, E-3	CN: <i>USER</i> 6-24
expression: <i>FTN</i> 2-18, 2-23, 8-5	CO: <i>USER</i> 6-26
format: FTN D-8	CP: <i>USER</i> 6-29
format descriptor: FTN 4-14	CR: <i>USER</i> 6-32
manipulation: FTN E-3	CRDIR: USER 6-35
operator: FTN 2-23	CRON: USER 6-37
position: FTN 2-10	CRONTAB: USER 6-38
relational expression: FTN 2-25	CZ: <i>USER</i> 6-44
string: <i>FTN</i> 2-23, E-3	DC: <i>USER</i> 6-45
string initializing: FTN 2-10	DL: <i>USER</i> 6-46
substring: <i>FTN</i> 2-17, 3-27, 6-15, E-3	DT: <i>USER</i> 6-50
substring length: FTN 2-17	ECHO: USER 6-51
variable: <i>FTN</i> 2-17, 3-33	EX: USER 6-52
character classes	FGREP: USER 6-80
definition: EDIT B-1	FUNCTION: USER 6-70
metacharacters: EDIT 5-10	FUNCTIONS: USER 6-72
negated: EDIT 5-11	GO: <i>USER</i> 6-79
range of characters (–): EDIT 5-11	GREP: <i>USER</i> 6-80
character count: USER 6-192	IN: USER 6-85
character function: FTN B-4	IO: USER 6-90

IC. LICED 6 05	rta rraggi MAII A 2
IS: USER 6-95	rte_progs: MAIL A-3
KTEST: USER 6-96	rte_snap: MAIL A-3
LI: USER 6-98	CI> prompt: GSA 1-3
LNS: <i>USER</i> 6-103	circular doubly linked lists: SDM 6-5
MC: USER 6-108	circular DVT list: DDM 2-5
MO: <i>USER</i> 6-116	circular linked lists: SDM 6-3
MV: <i>USER</i> 6-124	circular node list: DDM 2-12
OF: <i>USER</i> 6-128	CIX program: USER 6-27
OWNER: USER 6-133	CL command: SGI 7-4, 7-11; USER 6-22
PATH: <i>USER</i> 6-134	CLA: <i>MAC</i> 3-8, B-6
POLL: USER 6-137	CLAS command: SGI 7-8
PR: USER 6-138	CLASS: SDM 5-4
PROT: <i>USER</i> 6-139	module: SDM 5-4
PS: <i>USER</i> 6-141	class
PU: USER 6-143	buffer limits: SGI 7-4
PWD: <i>USER</i> 6-145	I/O: SDM 1-7, 2-9
RETURN: USER 6-147	limits, command (CL): SGI 7-4, 7-11
RM: <i>USER</i> 6-148	numbers: SDM 1-8
RN: USER 6-149	table: <i>SDM</i> 11-21
RP: USER 6-150	displaying information: USER 6-198
RS: <i>USER</i> 6-152	Class Get
RU: <i>USER</i> 6-153	See also EXEC 21
SET: <i>USER</i> 6-171	parameters: <i>PROG</i> 4-18
SP: <i>PRNT</i> 3-1	Class I/O: PROG 4-1
SS: <i>USER</i> 6-176	buffer use: PROG 4-25
SYSTZ: USER 6-177	buffered: PROG 4-4
SZ: <i>USER</i> 6-179	completion (SgIIO): PROG 13-4
TM: USER 6-180	control parameters: PROG 4-26
TO: USER 6-181	Get call format: PROG 4-11
TOUCH: USER 6-182	nonbuffered: PROG 4-4
TR: <i>USER</i> 6-184	operation: PROG 4-3
UL: USER 6-186	programming examples: <i>PROG</i> 4-5
UNALIAS: USER 6-187	Read call format: <i>PROG</i> 4-14
UNPU: USER 6-188	rethread example: <i>PROG</i> 4-29
UNSET: <i>USER</i> 6-70, 6-189	
UP: <i>USER</i> 6-190	rethread request format: <i>PROG</i> 4-25 rethread uses: <i>PROG</i> 4-25
	terms: PROG 4-2
use with Datapair/1000: DATA D-1	
VS: <i>USER</i> 6-191	Write call format: PROG 4-14
WC: USER 6-192	Write/Read call format: PROG 4-15
WD: USER 6-194	class I/O from a driver, \$CLWRT: DDM 7-10
WH: <i>USER</i> 6-195	class number
WHOSD: USER 6-204	A-Register returns after acquiring: <i>PROG</i> 4-14
WS: <i>USER</i> 6-206	allocating: SGI 7-1
XQ: USER 6-207	Class Get: PROG 4-19
CI file system: FTN 3-65	command (CLAS): SGI 7-8
CI files, accessing: <i>PROG</i> 8-4	in a rethread request: PROG 4-28
CI return variables: FTN 7-7	class parameter
CI variables: MAIL A-3	EXEC 17: <i>PROG</i> 4-11
mail_dir: MAIL A-3	EXEC 18: <i>PROG</i> 4-11
mail_dns: MAIL A-3	EXEC 20: <i>PROG</i> 4-11
mail_domain: MAIL A-3	classes. See printer classes
mail fwders: MAIL A-4	CLB: <i>MAC</i> 3-8, B-6
mail nmsrv: MAIL A-4	CLC: <i>MAC</i> 3-13, B-10
mail_smtp: MAIL A-3	CLCC: MAC B-10
mail_start: MAIL A-3	CLCUC, convert lowercase to uppercase: REL 7-7
rte cats: MAIL A-3	CLE: MAC 3-5, 3-8, B-4, B-6
rte cds: MAIL A-3	cleaning up open files: <i>PROG</i> F-1
rte etc: MAIL A-3	how clean-up is done: PROG F-2
rte_help: MAIL A-3	CI files: PROG F-2
rte mklnks: MAIL A-3	CI temporary files: <i>PROG</i> F-2
	01 vimporary mest 1100 1 2

FMGR files: <i>PROG</i> F-3	UnStartCmndo: PEL 78
FMGR temporary files: <i>PROG</i> F-4	HpStartCmndo: <i>REL</i> 7-8 HpStopCmndo: <i>REL</i> 7-10
Clear Breakpoint command: DBUG 5-8	CMNDO monitor: LINK 2-6; USER 7-17
Clear command: DBUG 5-7	CmndStackInit, initialize command stack: <i>REL</i>
clear flag indicator: MAC J-1	7-12
CLEAR statement: HPIB 4-15	CmndStackMarks, check for marked lines: REL
CLEAR subroutine: HPIB 4-15	7-13
CLEARBIT (system macro): MAC L-2, L-12	CmndStackPush, add line to command stack: REL
ClearBitMap: REL 12-2	7-13
ClearBuffer, zero a passed buffer: <i>REL</i> 7-6	CmndStackRestore, restore command stack: <i>REL</i>
clearing breakpoints: <i>DBUG</i> 3-6, 5-7, 5-8	7-14
clearing tracepoints: <i>DBUG</i> 5-8	CmndStackSaveP, CmndStackRstrP, save and reset command stack: <i>REL</i> 7-15
CLF: MAC 3-13, B-10 CLGOF, call LOGOF: REL 6-5	CmndStackScreen: <i>REL</i> 7-16
CLGON, call LOGON: REL 6-5	CmndStackStore, store command stack contents in
CLIMIT directive: FTN 7-14	a file: REL 7-17
CLO: <i>MAC</i> 3-13, B-10	CmndStackUnmark, remove marks from command
CLOCAL: MAC 4-48, 4-50, B-16	stack lines: REL 7-17
clock	CMPLX: FTN B-5, B-8, E-3; REL 3-15
A990 Computer: USER 6-23	CMW: <i>MAC</i> 3-3, B-3
real-time operation: <i>PROG</i> 6-1	CN command: <i>USER</i> 6-24
system: USER 6-180	CNFG subroutine: HPIB 7-6
CLOCK command: USER 6-23	CNTWD parameter: <i>DRM</i> 1-5, 1-12, 1-17
clock daemon (CRON): USER 6-37	CNUMD, CNUMO, DCVT, binary to ASCII con-
CLOG: FTN B-6; REL 3-14	version: PROG 7-11
CLOG entry, #LOG: REL 3-139	CO command: <i>EDIT</i> 2-2, 2-23, 2-25, 2-28, 2-38,
CLOSE (close a file): PROG B-7, C-2	3-36, 4-12; GSA 3-8; USER 3-20, 3-24, 3-39,
CLOSE statement: <i>FTN</i> 3-14, 5-5, 5-10	6-26 CODE: FTV II 2
CLOSE utility: USER 3-43 closing	CODE: FTN H-3
a file: EDIT 3-10	code, segments: <i>SDM</i> 3-3 code and data separation (CDS): <i>FTN</i> 7-14, H-1
a list file: EDIT 4-20	See also CDS
See also FCL command	code and data separation programming: MAC M-1
a source file: <i>EDIT</i> 3-10, 4-21	code modification: FTN H-1
closing Mail/1000: MAIL 3-19	code partition: PROG 10-2; USER 4-12
closing options: <i>MAIL</i> 3-8, 3-9, 3-10, 3-19, 4-1	assigning: LINK 3-4
closure character (*). See metacharacter match	displaying/modifying size: USER 6-44
zero or more (*)	code segment: USER 4-12
CLRQ	code segment errors: PROG A-5
class management request format: <i>PROG</i> 4-8	Code Segment Table (CST): SDM 11-44
example: PROG 4-10	code space: FTN H-1, H-2
parameters: PROG 4-8	COL: <i>MAC</i> 4-25, B-15
processing: PROG 4-10	colon: FTN 4-19
system library routine: <i>PROG</i> 5-6 CLSVM: <i>PROG</i> 9-43	colon character: EDIT 2-23 column major order: FTN 2-16, 3-20, 3-26
CLWRT: <i>DDM</i> 7-10	column sensitive: FTN 1-5
CM copy of CI: GSA 2-5	columns: FTN 1-4
CM program	COM: <i>MAC</i> B-18, J-6
copy of CI: USER 1-5	COM command: SGI 7-13
secondary program: SGI 9-19	combinations of vector instructions: REL 9-7
CM> prompt: GSA 2-5	command
CMA: <i>MAĈ</i> 3-8, B-6	addressed: HPIB 4-6
CMB: <i>MAC</i> 3-8, B-6	AT: <i>PROG</i> 5-6
CMDFILES directory: SGI 9-14	ATN—The Command Mode: <i>HPIB</i> 4-11
CMDW/CMDR subroutines: HPIB 4-20	capability levels: USER 5-6
CME: <i>MAC</i> 3-8, B-6	DCL—Device Clear: HPIB 4-8, 4-15
CMNDO	EOI and ATN—Parallel Poll: HPIB 4-9
example program: <i>REL</i> 7-10	file: EDIT 3-49
routines: REL 7-8 HpReadCmndo: REL 7-9	GET—Group Execute Trigger: HPIB 4-7, 4-17 GTL—Go To Local: HPIB 4-6, 4-16
1 11/18CAUS 11111CO. 1817/17 1=7	VIL (10 10 LOCAL 111 11) 4-0, 4-10

IFC—Interface Clear: HPIB 4-11	editor: USER 7-1
interpreter: GSA 2-1	posting contents: USER 3-31
line delimiters: GSA 3-5	using: USER 2-4
line length: GSA 3-5	Command Stack (/) command: DBUG 5-8
line mode: EDIT 1-10	command stack (Debug): DBUG 5-8
LINK: GSA 5-2, 5-5, 5-6	command stack (Xdb): DBUG 7-3
LLO—Local Lockout: HPIB 4-8, 4-16	command stack example program: <i>REL</i> 7-18
mode: <i>HPIB</i> 1-7, 4-1, 4-5	command summary: DBUG 5-1
number in command string: EDIT 3-4	Command Syntax: BKUP 5
OF: <i>PROG</i> 5-6	command syntax parameters: MAIL 3-1
options: EDIT 3-24, B-2	commands
parameters: EDIT 3-13	AC: SGI 9-5, J-7
parsing: EDIT 3-21	activate breakpoint: DBUG 5-3
pattern defaults: EDIT 2-44	ALIGN: SGI 4-5
PPC—Parallel Poll Configure: HPIB 4-6	AS: SGI 9-6, J-5
PPU—Parallel Poll Unconfigure: HPIB 4-9	BG: <i>SGI</i> 7-11, 9-5, J-7
REN—Remote Enable: HPIB 4-10, 4-15	BLOCC: SGI 4-5
repeat: EDIT 4-98	BP: <i>SGI</i> 9-3, J-4
review: EDIT 2-35	break: <i>DBUG</i> 2-13, 5-4
RU: <i>PROG</i> 5-6, 5-8	break uplevel: DBUG 5-7
SDC—Selected Device Clear: HPIB 4-6, 4-15	breakpoint: DBUG 3-4
separator: <i>EDIT</i> 3-22, 3-32	change list file: DBUG 5-7
SPD—Serial Poll Disable: HPIB 4-9	CL (class limits): <i>SGI</i> 7-4, 7-11
SPE—Serial Poll Enable: HPIB 4-9	CLAS (class number): SGI 7-8
SRQ—Service Request: HPIB 4-10	clear: DBUG 5-7
stack: EDIT 3-50	clear breakpoint: DBUG 5-8
stack command: EDIT 1-2, 2-35, 4-92, 4-96, B-1	COM: <i>SGÎ</i> 7-13
stack command /: GSA 2-3	command stack (/): DBUG 5-8
string: EDIT 3-50, B-1	comment (*): DBUG 5-9
syntax: EDIT 3-4, 3-13, 3-15	concurrent user US: SGI 7-12
TM: PROG 6-1, 6-2, 6-6	create variable: DBUG 5-9
XQ: PROG 5-6, 5-8	deactivate breakpoint: DBUG 5-10
command arguments (Xdb): DBUG 7-3	DISPLAY: SGI 4-5
Command Descriptor Block (CDB): DRM 2-35	display: <i>DBUG</i> 2-13, 3-6, 5-10
command editing: USER 7-1	display automatically: <i>DBUG</i> 5-11
\$VISUAL mode: USER 7-8	display entry points: DBUG 5-11
CMNDO monitor: USER 7-17	display location: DBUG 5-12
CSH visual editing mode: USER 7-17	display symbols: DBUG 5-12
EMACS/GMACS visual editing mode: USER	display type: DBUG 5-13
7-9	display variables: DBUG 5-13
VI visual editing mode: USER 7-13	do while: DBUG 5-14
command file	DVT: SGI 6-13
examples: LINK 2-7	EC: <i>SGI</i> 9-2
installation: SGI 9-8	ECHO: <i>SGI</i> J-2
usage during system generation: SGI 2-2	echo: DBUG 5-15
command files to down paired disks: <i>DATA</i> B-2	else: DBUG 5-15
Command Interpreter (CI): EDIT 1-1, 1-3, 1-4,	EN: <i>SGI</i> 9-6, 9-7, J-7
1-6, 2-2, 2-7, 2-19, 2-27; <i>USER</i> 1-1	END: <i>SGI</i> 4-5, 6-18, 6-19
CM, copy of CI: <i>USER</i> 1-5	enddo: <i>DBUG</i> 5-16
deleting files: EDIT 3-11	endif: DBUG 5-16
features: USER 1-2	execute: DBUG 5-17
termination: USER 1-5	exit: <i>DBUG</i> 2-14, 3-7, 5-17
unavailability: <i>USER</i> 1-5 use of back quotes: <i>EDIT</i> 3-5	find: <i>DBUG</i> 5-18 goto: <i>DBUG</i> 5-19
command line: FTN 8-9, B-16, F-1	help: DBUG 2-14, 5-19
command line editing, RteShellRead routine: <i>REL</i>	histogram: DBUG 5-20
7-45	ID segment (ID): SGI 7-9
command separator: EDIT 3-4, 3-50	if: <i>DBUG</i> 5-20
Command Separator (CS) option: EDIT 3-25	IFT: SGI 6-10
command stack: LINK 2-6	include: <i>DBUG</i> 5-21

kill variable: DBUG 5-22	SC (specify scratch LU): SGI 9-4, J-3
labeled common: SGI 7-13	SEÀRCH: SGI 4-3
LENTRIES: SGI 4-5	set: DBUG 5-31
LIB (library): SGI 7-14	SL (spooling limits): SGI 7-4, 7-11
line mode and visual mode compared: MAIL	SN (snapshot file), BOOTEX: SGI 9-2, J-2
4-3	SP (specify number of shared programs): SGI
list: DBUG 5-23	7-12
LOCC: SGI 4-4	SS: <i>SGI</i> 9-5, 10-3, I-3, J-7
LOGOF buffer limit LB: SGI 7-12	ST: SGI 9-6, 10-4, I-4, J-5
MB (system memory block): SGI 7-12	status: DBUG 5-32
MC: SGI 9-3, J-3 memory allocation phase: SGI 7-8	step: DBUG 3-8, 5-32 step into: DBUG 3-10
BG command: SGI 7-11	SW: <i>SGI</i> 9-4, J-6
CL command: <i>SGI</i> 7-11	SY: <i>SGI</i> 9-2, J-2
CLAS command: SGI 7-8	system relocation phase: SGI 4-2
ID command: SGI 7-9	ALIGN command: SGI 4-5
labeled common command: SGI 7-13	BLOCC command: SGI 4-5
LB command: SGI 7-12	DISPLAY command: SGI 4-5
LIB command: SGI 7-14	END command: SGI 4-5
MB command: SGI 7-12	LENTRIES command: SGI 4-5
QU command: SGI 7-11	LOCC command: SGI 4-4
RESN command: SGI 7-9	MSEARCH command: SGI 4-3
RS command: SGI 7-10	PA (partition) command: SGI 4-8
SAM command: SGI 7-10	RELOCATE command: SGI 4-3
SL command: <i>SGI</i> 7-4, 7-11	SEARCH command: SGI 4-3
SP command: SGI 7-12	TG command: SGI 4-6
unlabeled (blank) common command: SGI	SZ (size)
7-13	BOOTEX: <i>SGI</i> 9-6, J-5
US command: SGI 7-12	BUILD utility: SGI 10-3, I-4
MI: <i>SGI</i> 9-2, J-2 modify: <i>DBUG</i> 2-14, 3-7, 5-25	table generation phase: SGI 6-10 DVT command: SGI 6-13
MS: <i>SGI</i> 9-3, J-3	END command: <i>SGI</i> 6-18, 6-19
MSEARCH: <i>SGI</i> 4-3	IFT command: SGI 6-10
NODE: <i>SGI</i> 6-18	INT command: SGI 6-19
operator suspend: DBUG 5-26	NODE command: SGI 6-18
overview: DBUG 5-26	TG: SGI 4-6
PA (partition)	trace: DBUG 5-34
BUILD utility: SGI 10-4, I-4	unlabeled (blank) common COM: SGI 7-13
RTAGN utility: SGI 4-8	view: DBÙG 5-35
path: DBUG 5-27	where: <i>DBUG</i> 3-11, 5-35
PR (priority)	commands and command files
BOOTEX: <i>SGI</i> 9-6, J-5	command descriptions: USER 6-1
BUILD utility: SGI 10-3, I-4	comments in: <i>USER</i> 6-3, 6-185
proceed: <i>DBUG</i> 2-13, 5-28	editing commands: USER 7-3
proceed across terminations: DBUG 5-29	entering multiple commands in one line: USER
proceed uplevel: DBUG 5-30	2-24
PT: SGI 10-3, I-3	executing a command file: <i>USER</i> 2-13
QU: SGI 9-5, J-7	execution control: USER 2-25
QU (quantum timeslice): SGI 7-11 RELOCATE: SGI 4-3	file manipulating commands: <i>USER</i> 3-2, 3-3 nesting: <i>USER</i> 2-21
RESN: <i>SGI</i> 7-9	quoting: USER 2-23
resource number RESN: SGI 7-9	return status: USER 2-24
return: DBUG 5-30	returning from: USER 6-147
RP: SGI 9-6, 10-3, I-3, J-5	sample command file: USER 2-13
RS (memory descriptor): SGI 7-10	transferring to command file: USER 6-184
run: DBUG 5-30	commas, PutInCommas: REL 7-39
RV: SGI 9-7, J-6	commas as placeholders: FTN 7-5
S2: <i>SGI</i> 9-2, J-2	comment: FTN 2-28
SA: <i>SGI</i> 9-3, J-3	delimiter
SAM (system available memory): SGI 7-10	semicolon: MAC 2-12

1/// 0.40	FORED AND COLUMN
space: MAC 2-13	FORTRAN: GSA 5-2
embedded: FTN 2-28	FTN7X: <i>GSA</i> 5-2, 5-4
end-of-line: FTN E-2	I option: FTN B-11
field: <i>MAC</i> 1-6, 2-1, 2-2, 2-12	J option: FTN B-11
in macro definition: MAC 5-6	revision: FTN 7-7
transfer files: USER 6-3	status values: FTN 7-7
Comment (*) command: DBUG 5-9; LINK 3-26	X option: FTN B-11
comment (*) command: EDIT 4-100	Y option: FTN B-11
comment line: <i>FTN</i> 1-5, 2-28; <i>LINK</i> 3-26	compiler directives. See directives
comment lines: MAIL 5-1	compiler invocation: FTN 7-3
commenting an Include file: DBUG 5-9	compiler messages: FTN 7-6
comments header: MAIL 3-7	compiler option
common: FTN 3-70	C: <i>FTN</i> F-1
allocation: LINK 4-1	D: FTN 8-9
definition of: LINK 4-1	E: <i>FTN</i> 3-33, 7-12, 7-15
partition: SDM 2-13	I: FTN 2-11, 2-21, B-1
program relocation using: SDM 8-3	J: FTN 2-6, 2-11, B-1
system: LINK 4-1; SDM 2-6	summary: FTN 7-2
types: SDM 8-1	T: <i>FTN</i> H-3
common block: <i>FTN</i> 2-3, 3-12, 3-15, 3-17, 3-33,	X: FTN 8-4, B-1
3-79, 6-2, 6-11, 6-13, 6-14, 6-16, 6-18, 7-10, 7-15,	Y: <i>FTN</i> B-1
E-2, H-1	compiler options: <i>DBUG</i> 2-4
absolute: FTN 7-13	compiling a program: GSA 5-4
alignment of data in: FTN 2-9	complement
equivalencing of elements: FTN 3-41	complex: REL 3-132
labeled: FTN 3-16, 6-1, 7-13	double real unpacked mantissa: REL 3-125
saved: FTN 3-79	real: <i>REL</i> 3-135
unlabeled (blank): FTN 3-16	complex: REL 3-15
common logarithm	conjugate: REL 3-16
double real: REL 3-98	constant: FTN 2-8
extended real: REL 3-29	
	data type: FTN 2-8
real: REL 3-6	exponential: <i>REL</i> 3-13
COMMON relocatable space: <i>MAC</i> 1-11, 4-3, 4-9,	extract real: REL 3-53
4-22	return extended precision: <i>REL</i> 3-67
COMMON statement: <i>FTN</i> 3-15, 3-21, 3-41, 6-13,	format: FTN D-5
6-15	natural logarithm: REL 3-14
COMND program: BKUP 2-12; USER B-64	values: FTN 8-3
commands: <i>USER</i> B-71	COMPLEX statement: FTN 2-8, 3-83
compacting files: USER 6-117	COMPLEX*16 statement: FTN 3-83, D-6
compare, double integer: REL 4-4	COMPLEX*8 statement: FTN 2-8, 3-83, D-5
compare characters in arrays, CharsMatch: <i>REL</i>	CompressAsciiRLE: REL 12-4
7-6	compute LU from DVT, \$DVLU: DDM 7-2
COMPARE macro: MAC N-10	computed GOTO statement: FTN 3-47, 8-2
CompareBufs: REL 12-3	Concat, concatenate strings: <i>REL</i> 7-20
COMPAREBYTES macro: MAC N-11	
	concatenate
CompareWords: REL 12-3	many files into one, MERGE: USER 6-109
COMPAREWORDS macro: MAC N-11	programs and subroutines: USER 6-109
comparing	concatenation: <i>FTN</i> 2-23, 3-85, 6-11, 6-15, E-2;
strings or numbers, IS command: USER 6-95	MAC 4-51
two files, SCOM: USER 6-159	ConcatSpace, concatenate strings with embedded
comparison, serial drivers: <i>DRM</i> C-1	blanks: REL 7-20
comparison operators: <i>MAC</i> 4-51, 4-61, 4-63	concurrent user command US: SGI 7-12
compatibility: FTN 8-4, H-2	conditional assembly: <i>MAC</i> 1-12, 4-1, 4-63, B-17
compatibility extension: FTN 7-16, 8-1	conditional compilation: FTN 3-52
compilation error messages: FTN A-4	conditional execution of LINK command: <i>LINK</i>
compilation errors: FTN F-1	3-11
	•
format: FTN A-2	configuration: DBUG 2-1; HPIB 7-1
types: FTN A-1	CNFG subroutine: HPIB 7-6
compiler	Primary System: <i>PRIM</i> B-1
directive keywords: FTN 2-2	rules: PRIM 1-3

configuration file: <i>MAIL</i> 2-1, 7-1, 7-6 keywords	inquire: <i>EDIT</i> 3-26 line feed: <i>EDIT</i> 3-26
domain: MAIL A-4, A-5	null: <i>EDIT</i> 3-26
errlog: MAIL A-4, A-9	commands
flags: MAIL A-4, A-9	line mode: EDIT 3-31
gateway: MAIL A-4, A-7	screen mode: <i>EDIT</i> 3-31
hidden: MAIL A-4, A-8	file, FMGR: <i>USER</i> B-51
log: MAIL A-4, A-9	key combinations: <i>EDIT</i> 4-61
notify: MAIL A-4, A-7	keys: <i>EDIT</i> 2-36, 4-61
postmaster: MAIL A-4, A-6	canceling: EDIT 3-37
retry: MAIL A-4, A-8	double execution: <i>EDIT</i> 3-37
service: MAIL A-4, A-7	line mode: EDIT 3-31
timezone: MAIL A-4, A-6	screen mode: <i>EDIT</i> 2-15, 2-20, 3-36
configuration word: HPIB 7-1	single execution: EDIT 3-37
D bit: HPIB 7-3	control calls (DDQ30): DRM 2-62
E bit: HPIB 7-5	control commands, program: USER 4-1
I bit: HPIB 7-4	control key combination commands (editor): GSA
J bit: <i>HPIB</i> 7-4	4-4
O bit: HPIB 7-4	control line test: SCSI 7-6
P bit: HPIB 7-4	control parameter definitions: <i>DRM</i> 1-12
R bit: HPIB 7-2	CNTWD: <i>DRM</i> 1-12
S bit: HPIB 7-2	ecode: DRM 1-12
configuring	KEYWD: DRM 1-15
CS/80 disks: <i>SGI</i> C-12	PRAM1 through PRAM4: DRM 1-14
disk subsystem: SGI C-1	ZERO: <i>DRM</i> 1-15
non-CS/80 HP-IB disks: SGI C-7	control request calling format: DRM 1-11
RAM disk: SGI C-11	control request conventions: <i>DRM</i> 1-11
SCSI disks: SGI C-4	control request, serial I/O drivers: DRM 2-158
configuring the system: <i>PRIM</i> 1-2	control word CNTWD: DRM 2-158
CONJG: <i>FTN</i> B-2, B-9; <i>REL</i> 3-16	dynamic status special forms: DRM 2-164
conjugate, of complex: <i>REL</i> 3-16	ID400/ID800 firmware revision codes: <i>DRM</i>
connect time limit: SMM 3-13	2-164
connectors: SCSI 1-1, 1-3	ENQ/ACK handshake details: <i>DRM</i> 2-185
conserving space: SGI 3-1	function code 11B: line spacing/page eject:
constant: FTN 2-5	DRM 2-164
character: <i>FTN</i> 2-1, 2-10, 8-5	function code 16B: configure baud rate genera-
complex: FTN 2-8	tor: <i>DRM</i> 2-165
double complex: FTN 2-9	function code 17B: definable terminator: <i>DRM</i>
double precision: FTN 2-8	2-166
hexadecimal: FTN 2-12	function code 20B: enable prog scheduling:
Hollerith: <i>FTN</i> 2-1, 2-11, 8-5, D-8	DRM 2-167
integer: FTN 2-6	pass program name: DRM 2-167
logical: FTN 2-9	program scheduling conditions: DRM 2-167
constant definition, instructions: <i>MAC</i> 4-1, 4-35, B-15	RTE compatibility: pass program name: <i>DRM</i> 2-168
constant expression: FTN E-3	function code 21B: disable prog scheduling:
constant values: FTN 2-1	DRM 2-168
constant values. 1717 2-1 constants: DBUG 4-14	function code 22B: set device timeout: <i>DRM</i>
continuation line: FTN 1-4, 3-1, E-3	2-169
continue program execution command GO: GSA	function code 25B: read HP terminal straps:
2-5	DRM 2-169
CONTINUE statement: FTN 3-18	function code 26B: flush input buffers: <i>DRM</i>
continuous streaming mode: BKUP 1-9; USER	2-169
6-41	function code 30B: set port configuration: <i>DRM</i>
control	2-170
character: EDIT B-1	default BRG ranges (ID800/ID801 only):
characters/codes	DRM 2-175
acknowledge: EDIT 3-26	function code 31B: modem environment: <i>DRM</i>
carriage return: EDIT 3-26	2-177
delete: EDIT 3-26	function code 32B; generate break; <i>DRM</i> 2-177

function code 33B: FIFO buffer mode control:	double integer to extended real: REL 4-16
DRM 2-178	double integer to octal
function code 34B: set port protocol: <i>DRM</i>	DintToOctal: REL 7-23
2-180	IntToOctal: REL 7-34
function code 35B: reset baud rate generator:	double length regard number to real. <i>BEL</i> 4.2
DRM 2-186 function code 40B: enable prog scheduling:	double length record number to real: <i>REL</i> 4-2 double precision to integer, /TINT: <i>REL</i> 3-176
DRM 2-186	double real to complex real: <i>REL</i> 3-116
function code 41B: disable prog scheduling:	double real to double integer: <i>REL</i> 4-15
DRM 2-186	double real to extended real without rounding:
function code 6B: dynamic status: DRM 2-159	REL 3-117
driver defined errors: DRM 2-162	double real to integer: REL 3-81, 3-119
DVT16: error code: <i>DRM</i> 2-161	double real to real: <i>REL</i> 3-103
DVT17: transmission log: <i>DRM</i> 2-163	extended real to complex: <i>REL</i> 3-79
DVT18: interface card status: <i>DRM</i> 2-163	extended real to double integer: <i>REL</i> 4-17
DVT19: interface driver information: <i>DRM</i> 2-163	extended real to double real: <i>REL</i> 3-82
DVT20: driver communication area: <i>DRM</i>	extended real to real: <i>REL</i> 3-56 without rounding: <i>REL</i> 3-57
2-164	HP 1000 single precision floating point to IEEE,
DVT6: device status: <i>DRM</i> 2-160	FCHI: REL 11-2
system defined errors: <i>DRM</i> 2-161	IEEE standard format double precision to HP
control requests: DDM 2-9	1000, DFCIH: <i>REL</i> 11-2
control statement: <i>FTN</i> 1-5, 3-4, 7-1, F-1; <i>MAC</i>	IEEE standard format single precision to HP
1-2, 1-3, 5-15, E-1, J-1	1000, FCIH: <i>REL</i> 11-3
control structures	integer to complex: REL 3-92
execution: USER 2-25	integer to double real: REL 3-95
IF-THEN-ELSE-FI: <i>USER</i> 2-24, 2-25, 6-83	integer to extended real: <i>REL</i> 3-93
WHILE-DO-DONE: <i>USER</i> 2-24, 2-25, 6-203 control transfer, computed GOTO, .GOTO: <i>REL</i>	integer to real: <i>REL</i> 3-42 internal to normal format, .FMUP: <i>REL</i> 5-32
5-35	lowercase to uppercase
control word: DDM 5-1	CaseFold: REL 7-5
parameter	CLCUC: REL 7-7
EXEC 13: <i>PROG</i> 3-12	numeric to ASCII, .FMUO: REL 5-32
rethread request: PROG 4-25	real part of complex to integer: REL 3-71
controller: HPIB 1-3	real to double integer: <i>REL</i> 4-12
address: HPIB 2-1	real to double real: REL 3-65
as talker/listener: HPIB 4-5	real to extended: <i>REL</i> 3-23
configuration: HPIB 7-1	real to integer: <i>REL</i> 3-47
EOR requirements: <i>HPIB</i> 7-4 controlling	segment address to program name and LU number, IdAddToName: <i>REL</i> 7-30
devices: USER 2-10, 6-24	segment address to segment number, IdAddTo-
programs: USER 4-1	Number: REL 7-30
conventions, calling: REL 2-1	segment number to segment address, IdNumber-
conventions used in manual: USER 6	ToAdd: REL 7-31
Conventions Used in this Manual: <i>BKUP</i> 5	signed mantissa into normalized real format:
conversion	REL 3-104
ASCII digit to internal numeric, .FMUI: <i>REL</i>	track, sector, to double integer block number:
5-32 ASCII to double integer OctolToDint: DEI	REL 7-24
ASCII to double integer, OctalToDint: <i>REL</i> 7-37	conversion rules for arithmetic assignments: <i>FTN</i> 3-8
ASCII to double integer conversion, DecimalTo-	converting
Dint: REL 7-21	FMGR directory structure: <i>USER</i> 6-67
ASCII to single integer, OctalToInt: <i>REL</i> 7-38	programs to CDS: <i>PROG</i> 10-5
ASCII to single integer conversion: <i>REL</i> 7-22	FORTRAN: PROG 10-6
block and sector to track and sector: REL 7-4	general considerations: PROG 10-5
complex real to double real: REL 3-77	not automatic: PROG 10-5
double integer to ASCII	Pascal: PROG 10-6
DintToDecimal: REL 7-22	converting FMGR file calls: <i>PROG</i> B-1
IntToDecimal: REL 7-32	converting FORTRAN DO loops, with VIS: <i>REL</i>
double integer to double real: <i>REL</i> 4-14	9-1

copy: <i>MAIL</i> 3-1, 3-13, 3-14, 5-10, 7-2 blind carbon: <i>MAIL</i> 3-5	create file failure: <i>EDIT</i> 3-7 Create Variable command: <i>DBUG</i> 5-9
carbon: MAIL 3-5	•
	creating a directory: <i>USER</i> 3-29, 6-35
copy command: EDIT 2-28	
copy file command CO: GSA 3-9	a disk file: <i>USER</i> 6-32
copy of CI (CM program): USER 1-5	a file: EDIT 2-7, 2-9, 3-5, 3-6, 4-15, 4-86
copy one string to another, StringCopy: <i>REL</i> 7-50	a subdirectory: USER 3-30, 6-35
copy routine	empty files: USER 3-26
DVSWP (double precision): REL 8-24	folders: <i>MAIL</i> 3-17
DWSWP (EMA double precision): REL 8-24	Mail/1000 messages: <i>MAIL</i> 3-2, 4-3, 4-5
VSWP (single precision): REL 8-24	merged system file: SGI 10-2
WSWP (EMA single precision): <i>REL</i> 8-24	printer class, LP spool system: <i>PRNT</i> 2-43
Copy System utility (CSYS): USER 6-40	regular expressions patterns: <i>EDIT</i> 5-20
error messages: USER 6-43	symbolic links: <i>USER</i> 3-28
examples: USER 6-41	LNS command: USER 6-103
loading CSYS: USER 6-42	text: EDIT 2-12
operation: USER 6-41	the address book: MAIL 5-1
copying	user accounts: USER 5-5
CO command: USER 6-26	users: <i>MAIL</i> 2-1, 7-2, 7-4
CP command: USER 6-29	creating folders: MAIL 3-16
files: <i>USER</i> 3-24, 6-26	creating macro libraries
files and directories: <i>USER</i> 6-29	control statement: <i>MAC</i> E-1
memory image files to tape: USER 6-40	description: MAC 5-1, 5-15
recursive: USER 6-29	M option: MAC 5-15
screen memory: EDIT 4-68	macro: MAC 5-15
screen mode text: EDIT 4-6	T Option: MAC 5-15
text: <i>EDIT</i> 2-28, 2-30, 4-12	creating users: MAIL A-11
to/from devices: USER 6-27, 6-30	CRETS (create a scratch disk file): <i>PROG</i> B-8,
type 1 files: <i>USER</i> 6-27, 6-30	C-5
type 2 files: <i>USER</i> 6-27, 6-30	CRETS routine: <i>USER</i> B-34
variable-length file: USER 6-27, 6-30	CREVM: PROG 9-41
copying messages to disk: MAIL 3-14	crf: <i>MAIL</i> 3-17
COPYL. See disk-to-disk copy utility	CRMC (mount a cartridge to the system): <i>PROG</i>
correcting typing errors in command line: GSA 1-1	C-6
COS: <i>FTN</i> B-6; <i>REL</i> 3-17	CRN: <i>FTN</i> 3-65
COS entry (call-by-name), %OS: REL 3-160	CRON command (clock daemon): USER 6-37
COSH: FTN B-6	CRONTAB command: USER 6-38
cosine	cross-reference table: FTN 7-2, F-1; MAC 1-9
#COS: <i>REL</i> 3-137	generator: MAC F-1
complex: REL 3-18	listing: MAC E-2
double precision: <i>REL</i> 3-74	crusr: <i>MAIL</i> 7-2, 7-4, A-11
extended real: <i>REL</i> 3-24	CS option: <i>EDIT</i> 3-25
real: REL 3-17	CS/80
count, line, word, char: USER 6-192	cartridge tape drive
CP command: USER 6-29	copying to: USER 6-40
CPA: <i>MAC</i> 3-2, B-2	definitions: BKUP 1-9
CPB: <i>MAC</i> 3-2, B-2	configuration scheme: SGI E-1
CPUID, get CPU identification: <i>PROG</i> 7-9	disk, configuring: SGI C-12
CPUT, put character into buffer: <i>PROG</i> 7-18	disk driver DD*33. See DD*33 CS/80 disk de-
CR (specify VMA backing store file) command:	vice driver
LINK 3-6	CS/80 cartridge tape: <i>PRIM</i> 2-5, C-1
CR command: <i>GSA</i> 3-7; <i>USER</i> 3-26, 6-32	CS/80 disk formatting utility (FORMC): BKUP
CRDC (dismount a cartridge): PROG C-3	2-137
CRDIR command: <i>GSA</i> 3-6; <i>USER</i> 3-29, 6-35	ABort, ENd, and EXit commands: BKUP 2-139
CREAT (create a file): PROG B-8, C-4	break detection: BKUP 2-138
create	calling FORMC: BKUP 2-137
a source file: GSA 5-2	command execution: BKUP 2-138
a working directory command CRDIR: GSA 3-6	converting spares during tape formatting: BKUP
directory command CRDIR: GSA 3-6	2-145
file command CR: GSA 3-7	data loss during sparing: BKUP 2-147

default record interleave factor: BKUP 2-142	CTRL-Z: <i>EDIT</i> 3-37, 4-62
device driver status: BKUP 2-138	CTRL-D: <i>EDIT</i> 4-63
disk formatting information: BKUP 2-141	CTU device driver, DD*20: <i>DRM</i> J-18
disk formatting process: BKUP 2-143	current date command TM: GSA 2-2
dismounting LUs: BKUP 2-142	current page links: SDM 9-4
	current prompt: EDIT B-1
error messages: BKUP 2-151	
FOrmat command: <i>BKUP</i> 2-140	current record: FTN 5-2
formatting a system disk: BKUP 2-143	current time command TM: GSA 2-2
formatting operation: BKUP 2-141	cursor location: <i>EDIT</i> 2-22, 2-24, 3-36
FORMC commands: BKUP 2-139	custom printer interfaces: PRNT 2-61
help command: BKUP 2-140	customizing
inserting the cartridge: BKUP 2-144	message disposition query: MAIL 5-4
loading FORMC: BKUP 2-151	read acknowledgement: MAIL 5-4
re-certification and spare conversion: BKUP	read message displays: MAIL 5-8
2-144	skipping messages marked for deletion: MAIL
readying a tape for verification: BKUP 2-148	5-4
SPare command: BKUP 2-140	the editor: MAIL 5-5
sparing defective blocks: BKUP 2-146	the environment: <i>MAIL</i> 5-1, 5-4
sparing operation: BKUP 2-146	the Mail/1000 command prompt: MAIL 5-6
specifying a start track or block for verification:	the message line prefix: MAIL 5-6
BKUP 2-149	the message reader: MAIL 5-7
specifying an interleave factor: BKUP 2-142	the message terminator: <i>MAIL</i> 5-5
specifying the number of tracks or blocks to	the shell variable: MAIL 5-5
	the visual mode menu order: MAIL 5-7
verify: BKUP 2-149	
specifying the track when sparing: <i>BKUP</i> 2-146	CXA: <i>MAC</i> 3-9, B-7
tape certifying and skip sparing: BKUP 2-144	CXB: <i>MAC</i> 3-9, B-7
tape formatting information: BKUP 2-144	CYA: <i>MAC</i> 3-9, B-7
tape formatting process: BKUP 2-145	CYB: <i>MAC</i> 3-9, B-7
	Cyclic Redundancy Check (CRC): REL 12-13
verification process: BKUP 2-150	
VErify command: <i>BKUP</i> 2-141	cylinder arrangement: SGI C-8
verifying an entire disk LU or tape: BKUP 2-148	CZ command: USER 6-44
verifying operation: BKUP 2-148	
CS/80 disk support: DATA 1-2	D
CS/80 Exerciser utility. See EXER utility	
CSET: MAC 4-50, B-16	D (specifying exponent): FTN 2-8
CSH visual editing mode: <i>USER</i> 7-17	D command: EDIT 4-13
CSIN: FTN B-6	D compiler option: FTN 8-9
CSNCS: REL 3-18	
	D option: MAC E-2
CSQRT: <i>FTN</i> B-6; <i>REL</i> 3-19	D.RTR: <i>SDM</i> 10-1, 10-2
CST: <i>SDM</i> 11-44	D1 decimal substring carries, SDCAR: <i>REL</i> 10-34
format: <i>SDM</i> 11-44	D1 format: REL 10-6
CSYS: <i>SGI</i> 10-8	D1 to D2 decimal format conversion, SD1D2:
CTAN: <i>FTN</i> B-6, E-3	
	REL 10-37
CTRL: EDIT 2-15	D2 decimal substring carries, SCARY: <i>REL</i> 10-33
CTRL-A: <i>EDIT</i> 3-37, 4-62	D2 format: REL 10-4
CTRL-B: EDIT 3-32	D2 to A2 substring conversion, SDEA2: REL
CTRL-C: <i>EDIT</i> 2-20, 3-31, 3-38, 4-62	10-36
CTRL-D: <i>EDIT</i> 2-37	D2 to D1 decimal substring conversion, SD2D1:
CTRL-F: <i>EDIT</i> 2-15, 2-21, 3-35, 3-38, 4-62	REL 10-38
CTRL-I: EDIT 3-31	DABS: <i>FTN</i> B-2; <i>REL</i> 3-20
CTRL-J: <i>EDIT</i> 3-38, 4-62	DACOS: FTN B-6
CTRL-K: <i>EDIT</i> 2-28, 3-38, 4-63	
	DACOSH: FTN B-6, E-3
CTRL-O: <i>EDIT</i> 3-38, 4-63	dangerous command confirmation: <i>EDIT</i> 1-13,
CTRL-P: <i>EDIT</i> 3-35, 3-38, 4-62, 4-63	1-15, 2-8, 2-41, 3-5, 3-8, 3-47, 4-2, 4-3, 4-22, 4-35
CTRL-Q: <i>EDIT</i> 2-17, 3-38, 4-63	4-79
CTRL-R: <i>EDIT</i> 2-37, 3-31	DASIN: FTN B-6
CTRL-S: <i>EDIT</i> 2-16, 3-31, 3-38, 4-63	
、 , , , , , , , , , , , , , , , , , , ,	$D\Delta SINH$ · FTN B ₋ 6 F ₋ 3
	DASINH: FTN B-6, E-3
CTRL-T: <i>EDIT</i> 2-15, 3-32, 3-38, 4-63	data
CTRL-T: <i>EDIT</i> 2-15, 3-32, 3-38, 4-63 CTRL-U: <i>EDIT</i> 2-17, 2-21, 3-38, 3-39, 4-63	data lines: HPIB 1-5
CTRL-T: <i>EDIT</i> 2-15, 3-32, 3-38, 4-63 CTRL-U: <i>EDIT</i> 2-17, 2-21, 3-38, 3-39, 4-63	data lines: HPIB 1-5
CTRL-T: <i>EDIT</i> 2-15, 3-32, 3-38, 4-63	data
CTRL-T: <i>EDIT</i> 2-15, 3-32, 3-38, 4-63 CTRL-U: <i>EDIT</i> 2-17, 2-21, 3-38, 3-39, 4-63	data lines: HPIB 1-5

mode: <i>HPIB</i> 1-7, 4-1, 4-11	terminal device driver: DRM J-1
settling time: HPIB 2-3	DD*12 line printer driver: <i>DRM</i> 2-2
storage requirements: USER 4-11	control request: DRM 2-3
transfer to and from devices: USER 3-39	control word CNTWD: DRM 2-4
data and strings: MAC N-2	function code 00: clear & reset: DRM 2-4
data control block: FTN 5-3, 5-4, 7-18, 7-19	function code 11B: line skipping & form feed:
data control block (DCB): PROG 8-2; SDM 12-10	DRM 2-4
data line test: SCSI 7-6	extended status request: DRM 2-6
data partition: PROG 10-3; USER 4-10	status request: DRM 2-5
assigning: LINK 3-4	control word CNTWD: DRM 2-5
displaying/modifying size: USER 6-50	STAT1 and STAT2 parameters: <i>DRM</i> 2-6
data passage synchronization: <i>PROG</i> 4-1	STAT3 and STAT4 parameters: <i>DRM</i> 2-6
data space: FTN H-1, H-2	write request: <i>DRM</i> 2-2
data space, CDS: PROG 10-7	A- and B-Register contents: <i>DRM</i> 2-3
DATA statement: <i>FTN</i> 2-10, 3-19, 3-25, 3-27, 6-13,	BUFR and BUFLN: DRM 2-3
8-5, E-1, E-3, H-1, H-3	control word CNTWD: DRM 2-2
position: <i>FTN</i> 3-20	DD*20: DRM 2-145
data structure: FTN 3-37	DD*20 CTU device driver: <i>DRM</i> J-18
data transfer: SDM 1-12	DD*23 magnetic tape driver: <i>DRM</i> 2-22
data type: <i>FTN</i> 2-1, 2-5, D-1	control request: <i>DRM</i> 2-23
character: FTN 2-10	extended status request: DRM 2-25
complex: FTN 2-8	read/write request: DRM 2-22
default: FTN 2-3	A- and B-Register contents: <i>DRM</i> 2-22
	BUFR and BUFLN: DRM 2-22
double complex: FTN 2-9	
double integer: FTN 2-6	control word CNTWD: DRM 2-22
double logical: FTN 2-9	status request: <i>DRM</i> 2-24
double precision: FTN 2-8	control word CNTWD: DRM 2-24
integer: FTN 2-6	STAT1 and STAT2 parameters: <i>DRM</i> 2-24
logical: FTN 2-9	STAT3 and STAT4 parameters: <i>DRM</i> 2-25
real: FTN 2-7	DD*24 magnetic tape driver: <i>DRM</i> 2-27
rules for intrinsic functions: FTN B-11	control request: DRM 2-28
database file: FTN B-13	A- and B-Register returns: <i>DRM</i> 2-30
DATAN: FTN B-6; REL 3-21	control word CNTWD: DRM 2-28
DATAN2: FTN B-6	extended status request: <i>DRM</i> 2-31
DATANH: FTN B-6, E-3	read/write request: DRM 2-27
Datapair/1000: <i>DATA</i> 1-1	A- and B-Register returns: <i>DRM</i> 2-28
date: <i>MAIL</i> 3-2, 3-12, 5-8, 7-3, 7-13, A-7	BUFR and BUFLN: DRM 2-28
date and time headers: MAIL 7-12	control word CNTWD: DRM 2-27
date command TM: GSA 2-2	status request: DRM 2-30
dating files: EDIT 3-8	control word CNTWD: DRM 2-30
DATN2: REL 3-22	STAT1 and STAT2 parameters: <i>DRM</i> 2-30
DAV handshake line: HPIB 1-6	STAT3 and STAT4 parameters: <i>DRM</i> 2-31
daylight savings time: USER 6-177	DD*30 disk device driver: <i>DRM</i> 2-46
DayTime, seconds since January 1, 1970: <i>REL</i>	control request: DRM 2-47
7-21	error information: DRM 2-52
DB (DBUGR) command: LINK 3-6	extended status request: DRM 2-49
DBL: <i>MAC</i> 3-4, 4-40, 4-44, B-16, H-10	read/write request: DRM 2-46
DBLE: <i>FTN</i> B-5; <i>REL</i> 3-23	A- and B-Register contents: <i>DRM</i> 2-47
DBR: MAC 3-4, 4-40, 4-44, B-16	BUFR and BUFLN: <i>DRM</i> 2-46
DC command: <i>USER</i> 3-36, 6-45	control word CNTWD: DRM 2-46
DCALL: MAC N-8	
	TRACK and SECTOR parameters: <i>DRM</i>
DCB: FTN 5-3, 5-4, 7-18, 7-19	2-47
See also data control block	status request: DRM 2-48
DcbOpen: PROG 8-14	control word CNTWD: DRM 2-48
DCL bus command: HPIB 4-8	driver parameter area: DRM 2-49
DCMPLX: FTN B-5	STAT1 and STAT2 parameters: <i>DRM</i> 2-48
DCONJG: FTN B-2	STAT3 and STAT4 parameters: <i>DRM</i> 2-49
DCOS: FTN B-6; REL 3-24	DD*33 CS/80 disk device driver: <i>DRM</i> 2-68
DCOSH: FTN B-6	access errors field (Class 3): DRM 2-77
DD*00: DRM 2-145	bad tape indicator: <i>DRM</i> 2-91
DD 00. DIMI 2-143	oad tape mulcator. Dittil 2-31

		CNTWD. DDM 2.0
	control request: DRM 2-70	control word CNTWD: DRM 2-9
	control word CNTWD: DRM 2-70	DDEF: MAC 4-40, 4-41, B-16
	CTD control request: <i>DRM</i> 2-80	DDIM: FTN B-2
	clear cache: DRM 2-81	DDINT: FTN B-5; REL 3-25
	close cache: DRM 2-81	DDM30 disk device driver: DRM 2-54
	unload tape: DRM 2-82	control request: DRM 2-55
	using the cartridge tape drive (CTD): DRM	driver parameter area: DRM 2-57
	2-80	error information: DRM 2-59
	CTD read/write request: DRM 2-79	extended status request: DRM 2-57
	BUFR and BUFLN: DRM 2-79	read/write request: DRM 2-54
	CTD A- and B-Register contents: <i>DRM</i> 2-80	A- and B-Register contents: <i>DRM</i> 2-55
	HIBLK,LOBLK: DRM 2-79	BUFR and BUFLN: <i>DRM</i> 2-54
	direct disk control: <i>DRM</i> 2-83	control word CNTWD: DRM 2-54
	calling format: DRM 2-83	TRACK and SECTOR parameters: <i>DRM</i>
	complementary command array (ICOMP):	2-55
	DRM 2-84	status request: <i>DRM</i> 2-56
	ICOMP array: DRM 2-84	control word CNTWD: DRM 2-56
	XCOMP routine: DRM 2-89	STAT1 and STAT2 parameters: <i>DRM</i> 2-56
	XCOPY routine: <i>DRM</i> 2-88	STAT3 and STAT4 parameters: <i>DRM</i> 2-56
	XDESC routine: DRM 2-87	DDP31, DVT specification: <i>DATA</i> 4-2
	XINMD routine: <i>DRM</i> 2-87	DDQ24 SCSI tape device driver: <i>DRM</i> 2-34
	XRELD routine: <i>DRM</i> 2-87	calling sequence parameters, control word bits:
	XRELS routine: <i>DRM</i> 2-87	DRM 2-34, 2-36
	XRQST routine: DRM 2-87	control calls: DRM 2-36
	driver parameter area: DRM 2-73	control commands
	error information: <i>DRM</i> 2-89	control 0B/4B rewind: DRM 2-37
	EXEC function and subfunction codes: <i>DRM</i>	control 10B backward space set mark: DRM
	2-81	2-40
	extended status: <i>DRM</i> 2-73	control 11B forward space set mark: <i>DRM</i>
	fault errors field (Class 2): DRM 2-76	2-40
	information errors field (Class 4): DRM 2-78	control 13B forward space file: <i>DRM</i> 2-40
	read/write request: DRM 2-68	control 14B backward space set mark: <i>DRM</i>
	A- and B-Register contents: <i>DRM</i> 2-70	2-41
	BUFR and BUFLN: <i>DRM</i> 2-69	control 15B set tape density, compression:
	control word CNTWD: DRM 2-69	DRM 2-41
	TRACK and SECTOR: <i>DRM</i> 2-69	
		control 16B enable/disable request sense: DRM 2-42
	read/write request (CTD): DRM 2-79	
	reject errors field (Class 1): DRM 2-75	control 1B write file mark: <i>DRM</i> 2-37
	retry after error: <i>DRM</i> 2-90	control 2B backward space record: <i>DRM</i>
	status request: DRM 2-71	2-38
	control word CNTWD: DRM 2-71	control 3B forward space record: <i>DRM</i> 2-38
	STAT1 and STAT2 parameters: <i>DRM</i> 2-71	control 5B rewind and unload tape: <i>DRM</i>
	STAT3 and STAT4 parameters: <i>DRM</i> 2-72	2-38
	DC00: DRM 2-145, 2-148	control 6B dynamic status: <i>DRM</i> 2-39
	DC01: DRM 2-145, 2-148	control 7B write set mark: DRM 2-39
D	DC12 printer driver: <i>DRM</i> 2-8	control word bits
	control request: <i>DRM</i> 2-12	BUFLN buffer length: DRM 2-35
	control word CNTWD: DRM 2-12	BUFR buffer address: <i>DRM</i> 2-34
	error information: <i>DRM</i> 2-20	driver parameter table: DRM 2-42
	extended status request: DRM 2-19	read and write calls: DRM 2-34
	powerfail recovery: DRM 2-8	read SCSI command and sense data: DRM 2-35
	printer, bringing up automatically: <i>DRM</i> 2-8	status: DRM 2-42
	status request: DRM 2-17	communication word – DVT20: <i>DRM</i> 2-45
	control word CNTWD: DRM 2-17	driver error – DVT16: DRM 2-43
	STAT1 and STAT2 parameters: <i>DRM</i> 2-17	logical unit status – DVT6: DRM 2-43
	STAT3 and STAT4 parameters: DRM 2-18	SCSI & transaction status DVT18: DRM
	VFC definition request: <i>DRM</i> 2-11	2-44
	BUFR and BUFLN: <i>DRM</i> 2-11	sense key & additional sense code – DVT19:
	write request: DRM 2-9	DRM 2-45
	BUFR and BUFLN: <i>DRM</i> 2-11	transmission log – DVT17: DRM 2-44
	DOLK and DOLLIN, DIWI 2-11	uansinission log DVII/. DIWI 2-44

Z-buffer calls: DRM 2-35	−P: <i>DBUG</i> 2-9
COMMAND descriptor block (CDB): DRM	-RB: <i>DBUG</i> 2-10
2-35	-V: <i>DBUG</i> 2-10
length of command descriptor block: <i>DRM</i>	-W: DBUG 2-10
2-35	suspending: DBUG 5-26
DDQ30 SCSI disk device driver: DRM 2-61	debug, LP spool system: PRNT 2-62
control calls: DRM 2-62	debug line: FTN 8-9
control 16B enable/disable request sense: <i>DRM</i> 2-63	debug table entries: SGI 7-2
control 76B copy RTE block information:	Debug/1000: FTN 7-2 DEC: MAC 4-35, 4-37, B-15
DRM 2-63	decimal constants: <i>MAC</i> 4-37, 4-38
driver communication word – DVT20: <i>DRM</i>	decimal integer: MAC 4-37
2-67	decimal point: FTN 2-7
driver parameter table – DVP: <i>DRM</i> 2-64	decimal string arithmetic subroutines: <i>REL</i> 10-1
driver error – DVT16: <i>DRM</i> 2-65	DecimalToDint, ASCII to double integer conver-
logical unit status – DVT6: DRM 2-65	sion: <i>REL</i> 7-21
SCSI & transaction status – DVT18: <i>DRM</i>	DecimalToInt, ASCII to single integer conversion:
2-66	REL 7-22
sense key & additional sense code – DVT19:	declarator
DRM 2-66	adjustable array: FTN 6-14
transmission log – DVT17: DRM 2-66	assumed-size array: FTN 6-14
read and write calls: <i>DRM</i> 2-61	declaring
BUFLN buffer length: DRM 2-62	EMA: <i>PROG</i> 9-15
BUFR buffer address: <i>DRM</i> 2-62	program to be a system utility: LINK 3-23
control word bits: DRM 2-61	shareable program: LINK 3-22
control word CNTWD: DRM 2-61	declaring assembly-time variables: MAC 4-1, 4-47
TRACK and SECTOR addresses: <i>DRM</i> 2-62	DECODE, list-directed: FTN 8-7
read/write requests: <i>DRM</i> 2-61	DECODE statement: FTN 5-14, 8-6, H-3
Z-Buffer calls: <i>DRM</i> 2-62	decrement double integer: <i>REL</i> 4-5
DDQ35 SCSI disk device driver, driver parameter	(and skip if zero): REL 4-7
table – DVP, driver error – DVT16: <i>DRM</i> 2-100	DEF: MAC 4-40, B-16 default: EDIT B-2
DE (Debug) command: LINK 3-6	device and interface parameters: SGI 6-8
Deactivate Breakpoint command: DBUG 5-10	directory path: LINK 2-8
dead lock. See deadly embrace	DVT entries, by driver name: SGI F-1
deadlock prevention algorithm: SDM 3-9	file naming: LINK 4-4
deadly embrace	generation record: SGI D-3
and LURQ: PROG 2-10	IFT and DVT parameter: SGI 6-8
and RNRQ: PROG 2-7	libraries, specifying: SGI 7-7
deallocate a map set, \$MSRTN: DDM 7-9	library file search sequence: LINK 4-4
deallocate ID segment, IDCLR: REL 7-30	logon group: <i>SMM</i> 2-12, 3-14
Debug	search sequence: USER 3-34
command stacking: DBUG 5-8	VCP parameters for boot: SGI H-3
command summary: DBUG 5-1	default data type: FTN 2-3
compiling programs: <i>DBUG</i> 2-4	default macro parameters: MAC 5-10
configuration: DBUG 2-1	default mode: FTN 7-1
error messages: DBUG A-1	default operating mode: MAIL 3-1
exiting: DBUG 2-14	default output file formats: MAC E-6
limitations: DBUG 2-3	default parameters: <i>REL</i> 2-2
LINK options: DBUG 2-4	defaulting a parameter: EDIT 3-36
loading: DBUG 2-2	defining
program profiler: DBUG 6-1	UDSPs: USER 3-34
prompt: DBUG 2-12 runstring: DBUG 2-5	variables: USER 6-171
	defining a working directory, WD: GSA 3-6
runstring options: <i>DBUG</i> 2-6 —B: <i>DBUG</i> 2-6	defining constants: <i>DBUG</i> 4-14 DEL key: <i>GSA</i> 1-1
-B. <i>DBUG</i> 2-0 -D: <i>DBUG</i> 2-7	DELAY in EXEC 12: <i>PROG</i> 6-2
-D. DBUG 2-7 -I: DBUG 2-7	DELETE: <i>MAC</i> 5-16, B-14
-1. DBUG 2-7 -L: DBUG 2-8	delete: MAIL 2-4, 3-10, 3-12, 4-2, 4-3, 4-8, B-1
-M: DBUG 2-8	Delete (D) command: <i>EDIT</i> 4-13
111. DD00 2 0	Delete (D) commune. LDII 7-13

delete control character: EDIT 3-26	driver errors: <i>PROG</i> A-10
deleting	drivers: DRM 2-1
a file: EDIT 3-11	error recover: PROG 3-2
aliases: USER 6-187	errors: <i>PROG</i> 3-2
characters: EDIT 2-12	file DCB: <i>SDM</i> 12-12
folders: MAIL 3-18	independence: SDM 1-12
functions: USER 6-70	independent programming: SDM 1-12
lines: EDIT 2-12, 4-13, 4-35	linking: SDM 1-12
marking messages for: MAIL 4-8	manipulation, in FMGR: USER B-64
messages: MAIL 3-10, 3-12, 4-7	peripheral: FTN 5-1
tabs: EDIT 4-78	priority: <i>DDM</i> 2-4, 2-12, 2-13
text: <i>EDIT</i> 2-29, 2-42, 3-33	referenced as a file: USER 3-2
trailing blanks: EDIT 4-8	status: DDM 2-5, 2-6; PROG 3-2, 3-12; SCSI
user-defined variables: USER 6-189	4-6
deleting messages: MAIL 3-14	displaying from FMGR: USER B-69
delimiter: EDIT 2-31, B-2	storage: FTN 5-1
delivering messages: <i>MAIL</i> 3-8, 3-9, 3-10, 4-5, 7-2	table: <i>DRM</i> 1-2; <i>SDM</i> 1-12, 11-12
DENTRY macro: MAC N-6	DVT 16: <i>SCSI</i> A-1, A-2
descriptions of system macros: MAC L-4	DVT 19: <i>SCSI</i> A-4, A-9
descriptors	format: SDM 11-12
blank interpretation: FTN 4-17	statement(s): SCSI 3-4
character: FTN 4-14	table (DVT): SGI 6-1
colon: FTN 4-19	timeout: USER 2-12
edit: FTN 3-45, 4-7, 4-9, 4-17	displaying/modifying: USER 6-181
fixed- or floating-point: FTN 4-13	transferring data to/from: USER 3-39
fixed-point: FTN 4-11	type: DDM 2-6
floating-point: FTN 4-12	up: DDM 7-2
format: FTN 3-44, 4-7, 4-8	vendor-model list: SCSI 4-6
integer: FTN 4-10	device address: HPIB 2-5
literal: FTN 4-17	address assignment table: HPIB 2-6
logical: FTN 4-15	addressable mode devices: <i>HPIB</i> 2-6
numeric: FTN 4-9	and LU numbers: HPIB 3-1
octal: FTN 4-16	and subchannels: HPIB 3-1
position: FTN 4-18	dual-address devices: HPIB 2-5
real and double precision: FTN 4-10	switches: HPIB 2-3
record terminator: FTN 4-19	device and interface
scale factor: FTN 4-20	driver communication, serial drivers: <i>DRM</i> 2-187
tab edit: FTN 4-19 destination availability: PRNT 2-4	driver separation: <i>DRM</i> 1-1
destination availability. TRIVI 2-4 destination file masks: USER 3-20	device command UP: GSA 2-3
detach from session, DETACH: <i>REL</i> 6-7	device communications
determining	CMDW/CMDR subroutines: <i>HPIB</i> 4-20
line number: EDIT 2-21	data messages: HPIB 4-11
location: EDIT 2-21	IOCNT subroutines: HPIB 4-23
user requirements: SMM 1-4	PACK USING statement: HPIB 4-21
dev/intfc driver comm, serial I/O drivers, multibuf-	READ/ENTER/INPUT/WRITE/PRINT state
fer linked list structure: <i>DRM</i> 2-189	ments: HPIB 4-22
developing a program: GSA 5-1	SECW/SECR/SECWR/SECRR subroutines:
device	HPIB 4-22
availability: DDM 2-5	device control
bringing up: USER 2-11	CLEAR statement: HPIB 4-15
changing attributes: <i>USER</i> 2-11	CLEAR subroutine: HPIB 4-15
changing timeout values: USER 2-12	GTL subroutine: HPIB 4-16
control functions: USER 2-10, 6-24	LLO subroutine: HPIB 4-16
controlling: USER 2-10	LOCAL LOCKOUT statement: HPIB 4-17
copying to/from: USER 6-27, 6-30	LOCAL statement: HPIB 4-16
driver: <i>SDM</i> 1-12	LOCL subroutine: HPIB 4-17
generation tables: SGI E-1	REMOTE statement: HPIB 4-16
serial I/O: <i>DRM</i> J-1	RMOTE subroutine: HPIB 4-15
terminal: DRM J-1	TRIGGER statement: HPIB 4-17

TRIGR subroutine: HPIB 4-17, 4-18	self-test: SCSI 7-2
device driver	TERMPWR check: SCSI 7-3
entry and exit: <i>DDM</i> 3-1	tests: SCSI 7-2
exit flags: DDM 3-2	without VCP terminal: SCSI 7-1
purpose: <i>DDM</i> 1-3	diagnostics: PRIM C-3
device status	booting from disk: <i>PRIM</i> C-4
busy: <i>GSA</i> 2-3	booting from tape: <i>PRIM</i> C-3
command IO: GSA 2-3	DIAL program: <i>DRM</i> J-62
down: GSA 2-3	difference, positive real: <i>REL</i> 3-27
error message: GSA 2-3	differences between FMGR and CI files: USER
device table: <i>DDM</i> 1-1, 2-1, 2-3	3-40
extension: DDM 2-5	differences between FMGR and RTE-A files:
format of: DDM 2-4	SDM 10-7
device table (DVT): HPIB 3-1	DIM: <i>FTN</i> B-2; <i>REL</i> 3-27
devices for SCSI boot: SCSI 6-1	DIMENSION: FTN 6-13
DEX: MAC 4-35, 4-37, B-15	dimension: FTN 2-14
DEXEC*: FTN E-3	bound: FTN 2-14, 3-21
DEXP: FTN B-6	declarator: FTN 2-14, 3-21
DEXP entry: <i>REL</i> 3-26	DIMENSION statement: FTN 3-21, 6-13
\$EXP: <i>REL</i> 3-141	DINT: FTN B-5
DEY: MAC 4-35, 4-38, B-15	DintToDecimal, double integer to ASCII conver-
df: MAIL 3-18	sion: REL 7-22
DF option: <i>EDIT</i> 3-26	DintToDecimalr, double integer to ASCII conver-
DFCHI, HP 1000 double precision floating point	sion: <i>REL</i> 7-23
to IEEE conversion: <i>REL</i> 11-1	DintToOctal, double integer to octal conversion:
DFCIH, IEEE standard format double precision to	REL 7-23
HP 1000 conversion: REL 11-2	DintToOctalr, double integer to octal conversion:
DI (display) command: LINK 3-6	REL 7-24
DI command	DIO lines and parrellel polling: HPIB 4-7
display format: DATA 3-4	DIOC: DDM 7-1
entering LU range: DATA 3-4	DIR directory extension: GSA 3-4, 3-6
examples: DATA 3-5	direct, disk control, DD*33: DRM 2-83
flags: DATA 3-4	direct access: FTN 5-2
function: DATA 3-4	direct access file: FTN 3-35, 3-59, 3-74, 5-13
runstring: DATA 3-4	direct access input/output: FTN 8-8
status displays: DATA 3-4	direct address, AddressOf: REL 7-1
Diagnostic Control System (DCS): SCSI 7-1	direct addressing: HPIB 4-20
diagnostic program	direct calls: REL 2-3
automatic mode: SCSI 7-7	direct memory access: SDM 1-14
multiple cards: SCSI 7-9	See also DMA
card priority: SCSI 7-9	directive: FTN 1-5
example session: SCSI 7-9	ALIAS: FTN 6-18, 7-10
tests executed: SCSI 7-9	CDS: <i>FTN</i> 7-14
single card: SCSI 7-7	CLIMIT: FTN 7-14
_	ELSE: FTN 7-21
example session: SCSI 7-8	ELSEIF: FTN 7-21
loop continuously on tests: SCSI 7-8	EMA: <i>FTN</i> 7-15
tests executed: SCSI 7-7	ENDIF: <i>FTN</i> 7-21
execution times: SCSI 7-11	FILES: <i>FTN</i> 5-3, 7-18
firmware timestamp display: SCSI 7-4	IF: FTN 7-20
interactive mode: SCSI 7-10	IFDEF/IFNDEF: FTN 7-20
download Z180 code to SCSI card: SCSI 7-10	INCLUDE: FTN 7-22
loop (repeat) test: SCSI 7-11	LIST: <i>FTN</i> 3-55, 7-23
runstring: SCSI 7-11	LIST OFF: FTN 7-23
tests executed: SCSI 7-10	LIST ON: FTN 7-23
loading: SCSI 7-1	MSEG: FTN 7-23
loopback test: SCSI 7-6	OPTPARMS: FTN 7-24
RAM test: SCSI 7-5	PAGE: FTN 7-24
RAM test bypass: SCSI 7-5	SET: FTN 7-24
RAM test enable: SCSI 7-5	TITLE: FTN 7-26

device driver, DD*30. See DD*30 disk device driver
dismounting a volume, DC command: USER
6-45
failure detection: <i>DATA</i> B-1
file, DCB (data control block): SDM 12-10
initializing, IN command: USER 6-85
interface driver, ID*27. See ID*27 disk interface
driver
logical unit: <i>SDM</i> 1-17, 1-18
LU mirroring after installation: DATA 4-11
management: SDM 10-4
CI interface: SMM 1-8
considerations: SMM 1-8
directory organization: SMM 1-11
file volumes (LUs): SMM 1-9
FMGR interface: SMM 1-8
manipulation, from FMGR: USER B-7
mapping: SDM 1-15
mounting, MC command: USER 6-108
packing, FPACK: USER 6-57
pairing relationships: DATA 2-3
problems
volume dismounted: USER 8-5
volume full: USER 8-3
restore process: DATA 2-2
space, reporting amount used: USER 6-54
state combinations: DATA 2-2
states: DATA 2-1
type 12 files, DCB definitions: SDM 12-11
volume: <i>SDM</i> 1-15, 1-16, 1-17, 1-18 mounting: <i>SGI</i> 9-3
volume header: SDM 12-1
disk blocks: BKUP 1-5
address: BKUP 1-5
CS/80 definition: BKUP 1-9
postamble: BKUP 1-5
preamble: BKUP 1-5
read/processing time calculated for interleave
factor: BKUP 1-8
sparing defective ones: BKUP 2-146
status bits: BKUP 1-7
testing: BKUP 1-5
user data area: BKUP 1-5
disk device driver DDM30. See DDM30 disk de-
vice driver
disk formatting: PRIM A-1
FORMC: PRIM A-3
VSCSI: PRIM A-2
disk formatting utility (FORMF): BKUP 2-152
ABort, ENd, EXit commands: BKUP 2-154
break detection: BKUP 2-153
calling FORMF: <i>BKUP</i> 2-152 command execution: <i>BKUP</i> 2-153
device driver status: <i>BKUP</i> 2-153
error messages: BKUP 2-158
FOrmat command: BKUP 2-155
formatting operation: BKUP 2-156
formatting process: BKUP 2-157
FORMF commands: BKUP 2-154

HElp command: <i>BKUP</i> 2-155 specifying an interleave factor: <i>BKUP</i> 2-156	resource number information: <i>USER</i> 6-200 source file status: <i>EDIT</i> 4-95
supported disk drives: BKUP 2-152	system
VErify command: <i>BKUP</i> 2-155	clock: USER 6-180
verifying operation: <i>BKUP</i> 2-157	time-zone offset: USER 6-177
disk initialization: SCSI 4-5	status: USER 2-5
disk interface card requirements: DATA 1-2	time: USER 2-13
disk packs: USER B-8	text: EDIT 4-40
disk space: EDIT 4-16	the next "page" of the message list: MAIL 4-4,
disk-based system installation procedure: SGI 9-1	4-5
disk-to-disk copy utility (COPYL): <i>BKUP</i> 1-3, 2-34 calling COPYL: <i>BKUP</i> 2-34	the previous "page" of the message list: MAIL
copy operation: BKUP 2-35	4-4, 4-5
error messages: BKUP 2-35	UDSP: <i>USER</i> 6-134
disks supported: DATA 1-2	variables: USER 6-171
dismounting disk before pairing: DATA 3-7	VMA size: USER 6-191
dismounting volumes: <i>USER</i> 3-36, 6-45	VMA working set size: USER 6-206
dispatcher's address headers: MAIL 7-12	working directory: USER 3-30, 6-145, 6-194
dispatching: SDM 1-13	displaying breakpoints: DBUG 3-6, 5-5
DispatchLock: PROG 12-2	displaying entered Debug commands: DBUG 5-8
DispatchUnlock: PROG 12-2	displaying status information: DBUG 5-32
Display Automatically command: DBUG 5-11	distlists: MAIL 5-1 Distributed System (DS) Network: USER 2-41
DIŚPLAY command: SGI 4-5	Distributed System (DS) Network: USER 3-41
Display command: <i>DBUG</i> 2-13, 3-6, 5-10	See also DS
display configuration program PAIO: DATA 3-15	distribution list: MAIL 5-2, 5-4
Display Entry Points command: DBUG 5-11	DIV: MAC 3-11, B-11
Display Functions (DF) option: EDIT 3-26	DIVD: MAC 3-11, B-11 divide
Display Location command: <i>DBUG</i> 5-12	complex by complex: <i>REL</i> 3-68
Display Symbols command: <i>DBUG</i> 5-12	double integer: REL 4-6
Display Type command: <i>DBUG</i> 5-13	DVDIV (double precision): <i>REL</i> 8-9
Display Variables command: <i>DBUG</i> 5-13	DWDIV (EMA double precision): <i>REL</i> 8-9
displaying	extended real by extended real: <i>REL</i> 3-126
a file: EDIT 2-22	real: REL 3-88
A990 Computer clock: USER 6-23	substrings, SDIV: REL 10-19
aliases: USER 6-6	VDIV (single precision): <i>REL</i> 8-9
CPU usage, METER: USER 6-111	WDIV (EMA single precision): REL 8-9
device status, from FMGR: <i>USER</i> B-69	divide by zero: FTN 2-18
device timeout: USER 6-181	division: FTN 2-19
directory owner: USER 3-31	DJP: <i>MAC</i> 3-16, B-12
directory protection: <i>USER</i> 3-33, 6-139 disk space used, FOWN: <i>USER</i> 6-54	DJS: <i>MAC</i> 3-16, B-12
free disk space, FREES: USER 6-64	DL command: GSA 2-1, 3-7, 3-8, 3-10, 3-12;
header fields: MAIL 3-22, 4-9	USER 3-22, 6-46
I/O configuration: USER 2-8, 6-90	DLCALL: MAC N-8
information: EDIT 2-20, 2-39	DLD: <i>MAC</i> 3-11, B-11
large screen: EDIT 2-16	DLENTRY macro: MAC N-5
line number: <i>EDIT</i> 2-21, 4-53	DLOG: FTN B-6
Mail/1000 directories: MAIL 3-19	DLOG entry: <i>REL</i> 3-28
memory usage: USER 2-8	\$LOG: <i>REL</i> 3-142
multiuser accounting information: SMM I-3	DLOG10: FTN B-6
online help messages: MAIL 4-4, 4-10	DLOGT entry: <i>REL</i> 3-29
online reference: <i>EDIT</i> 4-94	\$LOGT: <i>REL</i> 3-143
options: EDIT 3-29	DM (debug monitor) command: LINK 3-7
See also viewing options	DMA
parameters at terminal: USER 6-51	chaining: DDM 6-1, 9-7
portion of a file: EDIT 2-22	control and flag bits: DDM 9-8
See also L command, W command	initialization: <i>DDM</i> 9-6
program size: USER 6-179	overrun: <i>DDM</i> 9-7, 9-8
program status: <i>USER</i> 2-6, 4-8, 6-141	parity error, \$DMPR: DDM 7-3
prompt and read response: USER 6-9	registers: DDM 9-5

residue: DDM 9-7	data type: FTN 2-6
self-configuration: <i>DDM</i> 9-5, 9-7	format: FTN D-2
termination: <i>DDM</i> 9-7	double integer to ASCII conversion
DMA priority: SCSI 2-7, 2-11	DintToDecimal: REL 7-22
DMAX1, DMIN1: REL 3-30	DintToDecimalr: REL 7-23
DMAX2: FTN B-2	double integer to octal conversion
DMIN1: FTN B-2	DintToOctal: REL 7-23
DMOD: <i>FTN</i> B-2; <i>REL</i> 3-31	DintToOctalr: <i>REL</i> 7-24
DMPR: DDM 7-3	double logical
DNINT: FTN B-5	data type: FTN 2-9
DNS. See Domain System Administration (DNS)	format: FTN D-7
DO loop: FTN 3-22, 6-17, 8-2	DOUBLE PRECISION: <i>FTN</i> D-4
block: FTN 3-22, 3-23, 3-24, 3-30	double precision
execution: FTN 3-22	constant: FTN 2-8
exiting: FTN 3-31	data type: FTN 2-8
extended range: FTN E-2	format: FTN D-4
implied: <i>FTN</i> 3-19, 3-22, 3-25, E-3	double precision floating point conversion
index: <i>FTN</i> 3-23, E-3	DFCHI: REL 11-1
labeled: FTN 3-18, 3-22, 3-23, 3-24, 3-30	DFCIH: REL 11-2
range: FTN 3-31	DOUBLE PRECISION statement: FTN 2-8, 3-83
DO loops, converting, with VIS: REL 9-1	double precision to integer conversion, /TINT:
DO statement: FTN 3-22	REL 3-176
Do While command: <i>DBUG</i> 5-14	DOUBLE PRECISION*6: FTN D-3
DO WHILE loop: FTN 3-22, 3-29, 3-30, E-1	double quotation mark: FTN 3-45
DO WHILE statement: FTN 3-29	double real
dollar sign: FTN 8-9	arithmetic: REL 3-113
dollar sign (\$). See end-of-file, metacharacter	remainder: REL 3-101
domain: <i>MAIL</i> 3-2, 3-3, 5-2, 7-6, A-4, A-5, A-8,	down device: DDM 5-6
A-9, A-10	bringing up: USER 2-11
Domain Name System Administration (DNS):	Down state, disk: DATA 2-1
MAIL 7-5	down state: GSA 2-3
and SMTP: MAIL 7-5	DOWNLOAD program: PROG 9-14, 9-20; SGI
and the sendmail program: MAIL 7-5	9-20
display DNS information: MAIL 7-8	DP (do not purge) command: LINK 3-7
DNS configuration files	DPÒLY: REL 3-32
/etc/named.boot: MAIL 7-7	DPROD: FTN B-2, E-3
/etc/resolv.conf: MAIL 7-6	DPTRP, module relocation: DATA 4-2
sig named: MAIL 7-8	driver
DNS on the HP 1000: MAIL 7-5	choosing correct serial driver: DRM E-4
nslookup —— display DNS information: MAIL	comparison of serial drivers: DRM C-1
7-8	DD*00: <i>DRM</i> J-1
domainalias.cf: MAIL A-5, A-6, A-9, A-10	DD*20: <i>DRM</i> J-18
dormant program: SDM 1-2	entry points: <i>DDM</i> 1-9
dot (.) metacharacter: EDIT 5-7	ID*00/ID*01: <i>DRM</i> J-66
dot product routine: REL 8-17	IDM00: <i>DRM</i> J-39
DVDOT (double precision): REL 8-17	interaction with user request: <i>DDM</i> 1-5
DWDOT (EMA double precision): REL 8-17	modules, relocating during generation: SGI 4-1
VDOT (single precision): REL 8-17	NAM record: <i>DDM</i> 1-7
WDOT (EMA single precision): REL 8-17	parameter area: DDM 2-12
double buffering: <i>DDM</i> 2-11	parameters: <i>DDM</i> 1-10, 3-3, 5-1
See also Z bit	requests: DDM 1-2
DOUBLE COMPLEX: FTN D-6	type codes: <i>DDM</i> 1-8
double complex: FTN E-2	driver model number paired disks: DATA 1-1
constant: FTN 2-9	driver parameters, use in specifying pairing: DATA
data type: FTN 2-9	4-4
format: FTN D-6	driver partition: SDM 2-14
statement: FTN 2-9	drivers: SCSI 3-2
DOUBLE COMPLEX statement: FTN 3-83	comparison of serial drivers: DRM 2-145
double integer: FTN 2-3, 2-6	device support: SCSI 1-4
constant: FTN 2-6	disk device (DDQ30): SCSI 3-2

CCCV + A	1 DYWYD 2 #2
errors: SCSI A-2	commands: BKUP 2-53
source code: SCSI 3-2	disk locking: BKUP 2-60
generation records: SCSI 3-2	ENd: <i>BKUP</i> 2-54
interface (IDQ35): SCSI 3-2	error messages: BKUP 2-66
errors: SCSI A-3	EXit: <i>BKUP</i> 2-54
MACRO/1000 support routine: SCSI 3-2	header records: BKUP 2-64
partitions: SCSI 3-3	HElp: <i>BKUP</i> 2-54
priveleged: SDM 11-20	LH List Header: BKUP 2-54
tape device (DDQ24): SCSI 3-2	LL List Device: BKUP 2-56
error codes: SCSI A-1	loading DSAVE: BKUP 2-63
DRSTR physical restore utility: <i>BKUP</i> 2-36	MEdia: BKUP 2-56
ABort: BKUP 2-37	no locking: BKUP 2-58
break detection: BKUP 2-46	removable disk media and file formats: BKUP
calling DRSTR: BKUP 2-36	2-64
checking the disks: <i>BKUP</i> 2-42	removable disk overwriting: BKUP 2-60
commands: BKUP 2-36	SA command options: BKUP 2-57
disk locking: BKUP 2-43	SAve: BKUP 2-57
ENd: BKUP 2-37	save file records: BKUP 2-61
error messages: BKUP 2-47	save operation: BKUP 2-59
EXit: <i>BKUP</i> 2-37	saving to the removable disk: BKUP 2-61
file-by-file (LU) restore: BKUP 2-39	TItle: BKUP 2-58
header records: BKUP 2-45	UE User Error handling: BKUP 2-59
HElp: <i>BKUP</i> 2-37	UNit save: BKUP 2-58
LH List Header: BKUP 2-38	unit save LU checking: BKUP 2-60
LL List Device: BKUP 2-38	verification: BKUP 2-62
loading DRSTR: BKUP 2-46	VErify: BKUP 2-58
MEdia: BKUP 2-39	DsCloseCon: PROG 8-88
order of disk restoration: <i>BKUP</i> 2-43	DsDcbWord: PROG 8-88
RE command options: BKUP 2-41	DsDiscInfo: PROG 8-89
REstore: BKUP 2-39	DsDiscRead: PROG 8-89
restore operation: BKUP 2-42	DsFstat: PROG 8-90
restoring fixed disks from removable disks:	DSIGN: FTN B-2; REL 3-34
<i>BKUP</i> 2-44	DSIN: <i>FTN</i> B-6; <i>REL</i> 3-35
restoring the data: BKUP 2-45	DSINH: FTN B-6
sectors per track must match: BKUP 2-42	DSKER
total number of tracks may differ: BKUP 2-42	AS use: DATA 4-12
UE User Error handling: BKUP 2-41	EXEC calls: DATA 2-5
UNit restore: BKUP 2-41	naming requirements: DATA 2-4
unit restore: <i>BKUP</i> 2-40, 2-44	optional error-handling program: <i>DATA</i> 2-4
verification: BKUP 2-46	parameters passed: <i>DATA</i> 2-4
VErify data: BKUP 2-41	partition, assignment, locking: DATA 2-4
DS: FTN 3-63, 3-65; PROG 8-2	processing time requirements: DATA 2-4
and FMP calls: <i>PROG</i> 8-87	reserved partition: DATA 4-12
and FMP routines: <i>PROG</i> 8-87	scheduling: DATA 2-4
file access: USER 3-41	DsNodeNumber: PROG 8-90
file access considerations: USER 3-43	DsOpenCon: PROG 8-91
loading system over DS: SGI H-11	DSQ: SDM 5-4
node: PROG 8-4	DSQRT: FTN B-6
programmatic logon: REL 6-4	DSQRT entry: <i>REL</i> 3-36
software errors: <i>USER</i> A-23, A-24	\$SQRT: <i>REL</i> 3-144
user: PROG 8-3	DsSetDcbWord: PROG 8-91
DS file transparency: MAIL A-1	DST: MAC B-11
default logon account: SMM 4-4	DSX: <i>MAC</i> 3-9, B-8
DSRTR: <i>SGI</i> 9-25	DSY: <i>MAC</i> 3-9, B-8
software installation: SGI 9-25	DT command: <i>USER</i> 2-24, 4-12, 6-50
TRFAS: SGI 9-25	DTACH, detach from session: <i>REL</i> 6-7
DSAVE physical backup utility: <i>BKUP</i> 2-52	DTAN: FTN B-6; REL 3-37
ABort: BKUP 2-54	no error, \$TAN: REL 3-145
break detection: BKUP 2-62	DTANH: <i>FTN</i> B-6; <i>REL</i> 3-38
calling DSAVE: BKUP 2-52	DUCALL: MAC N-9

dummy library: SDM 5-13	DWDOT, vector dot product routine (EMA double
\$SÝSA: <i>SĎM</i> 5-13	precision): REL 8-17
duplicate pending line and edit. See O command	DWMAB, vector largest value (absolute) (EMA
dusr: MAIL 7-4	double precision): REL 8-20
DVABS, absolute value routine (double precision):	DWMAX, vector largest value (EMA double preci
REL 8-13	sion): <i>REL</i> 8-20
DVADD, vector add (double precision): <i>REL</i> 8-9	DWMIB, vector smallest value (absolute) (EMA
DVDIV, vector divide (double precision): <i>REL</i> 8-9	double precision): REL 8-20
DVDOT, vector dot product routine (double preci-	DWMIN, vector smallest value (EMA double pre-
sion): <i>REL</i> 8-17	cision): REL 8-20
DVLU: DDM 7-2	DWMOV, vector move routine (EMA double pre-
DVMAB, vector largest value (absolute) (double	cision): REL 8-24
precision): REL 8-20	DWMPY, vector multiply (EMA double precision)
DVMAX, vector largest value (double precision):	REL 8-9
REL 8-20	DWNRM, vector sum routine (absolute) (EMA
DVMIB, vector smallest value (absolute) (double	double precision): <i>REL</i> 8-14
precision): REL 8-20	DWPIV, vector pivot routine (EMA double preci-
DVMIN, vector smallest value (double precision):	sion): <i>REL</i> 8-18
REL 8-20	DWSAD, vector-scalar add (EMA double preci-
DVMOV, vector move routine (double precision):	sion): REL 8-11
REL 8-24	DWSDV, vectro-scalar divide (EMA double preci-
DVMPY, vector multiply (double precision): <i>REL</i>	sion): REL 8-11
8-9	DWSMY, vector-scalar multiply (EMA double pre
DVNRM, vector sum routine (absolute) (double	cision): REL 8-11
precision): REL 8-14	DWSSB, vector-scalar subtract (EMA double pre-
DVPIV, vector pivot routine (double precision):	cision): <i>REL</i> 8-11 DWSUB, vector subtract (EMA double precision):
REL 8-18	
DVSAD, vector-scalar add (double precision):	REL 8-9 DWSLIM yeater sum routing (EMA double presi-
REL 8-11	DWSUM, vector sum routine (EMA double preci-
DVSDV, vector-scalar divide (double precision):	sion): REL 8-14
REL 8-11	DWSWP, vector copy routine (EMA double precision): <i>REL</i> 8-24
DVSMY, vector-scalar multiply (double precision):	DWVMV, vector EMA/non-EMA move routine
REL 8-11	(double precision): <i>REL</i> 8-26
DVSSB, vector-scalar subtract (double precision):	dynamic dynamic
REL 8-11	mapping system: SDM 2-1
DVSUB, vector subtract (double precision): <i>REL</i>	memory
8-9 DVSLIM vector sum routine (double precision).	allocation: USER 4-9
DVSUM, vector sum routine (double precision):	partitions: USER 4-10
REL 8-14 DVSV/P vector convergeting (double precision):	memory descriptors: SDM 11-27, 11-28
DVSWP, vector copy routine (double precision):	memory swapping: SDM 3-6
REL 8-24	dynamic mapping system: MAC B-12
DVT: <i>SDM</i> 1-8, 1-12, 1-14, 2-9, 11-12	instructions: MAC 3-15
See also device table	dynamic status. See status requests
command: SGI 6-13	ay namic status. See status requests
definition: <i>DRM</i> 1-2 entries, default: <i>SGI</i> F-1	_
	E
parameter defaults: <i>SGI</i> 6-8 DVT 20, bit definitions, serial driver: <i>DRM</i> 2-187	E compiler ention, ETM 2 22 7 12 7 15
DVT specification at system generation: <i>DATA</i> 4-3	E compiler option: FTN 3-33, 7-12, 7-15
DVWMV	EAPOS (extended range positioning): <i>PROG</i> C-7
vector non- EMA to EMA copy routine (double	EC (echo) command: LINK 3-8
	EC command: <i>EDIT</i> 1-7, 2-9, 2-17, 3-6, 3-46, 4-15;
precision): <i>REL</i> 8-26 vector non-EMA to EMA move routine (double	SGI 9-2 FC option: FDIT 3-26
precision): REL 8-26	EC option: EDIT 3-26 echo: MAIL 3-20
DWABS, absolute value routine (EMA double pre-	
	echo bit, read request: <i>DRM</i> 2-151
cision): <i>REL</i> 8-13 DWADD, vector add (EMA double precision):	ECHO command: SGI J-2; USER 2-24, 6-51
REL 8-9	Echo commands: SCI 9-2: USER R-5 R-6
DWDIV, vector divide (EMA double precision):	echoing commands: SGI 9-2; USER B-5, B-6
REL 8-9	ECLOS (extended close): <i>PROG</i> C-7 ECODE
NEL 0-3	ECODE

in EXEC 22: <i>PROG</i> 5-13 in EXEC 26: <i>PROG</i> 5-14	ELSE directive: <i>FTN</i> 7-21 ELSE IF statement: <i>FTN</i> 3-52
in EXEC 8: <i>PROG</i> 5-14	ELSE statement: FTN 3-52 ELSE statement: FTN 3-51
in EXEC 9, 10, 23, 24: <i>PROG</i> 5-8	
ecode parameter: <i>DRM</i> 1-5, 1-12, 1-17	ELSEIF (system macro): <i>MAC</i> L-8 ELSEIF directive: <i>FTN</i> 7-21
no-abort bit: <i>DRM</i> 1-22	
Edit Capability Level (EC) command: SMM 5-3	EM (extended memory access) command: <i>LINK</i> 3-8
edit descriptor: FTN 4-19	EMA: <i>FTN</i> 3-33, 6-11, 6-14, 7-3, 7-12, 7-15, 7-24,
edit descriptors: FTN 3-45, 4-7, 4-9, 4-17	H-1; MAC 4-9, B-18, H-9, J-7; SDM 3-3
edit pending line and advance. See C command	allocation of: LINK 4-2
edit variable: MAIL 5-5, 5-7	area page align: LINK 3-17
EDIT/1000: USER 1-1	call by value and call by reference (VIS): <i>REL</i> 9-17
accessing the program: <i>EDIT</i> 1-6	
basics: EDIT 1-1	considerations (VIS): <i>REL</i> 9-16
command	copy routine, DVWMV (double precision):
listing: EDIT 2-20	REL 8-26
options: EDIT B-2	declaration: <i>PROG</i> 9-15
syntax: EDIT 3-13	maximum size in pages: USER 4-13
description: EDIT 1-1	models: USER 4-13
error/information messages: <i>EDIT</i> A-1	partition: USER 6-186
exiting the program: <i>EDIT</i> 1-7, 4-2, 4-3, 4-15,	passing between FORTRAN and Pascal: <i>FTN</i>
4-16 factures: EDIT 1.2	7-30
features: EDIT 1-2	programming: PROG 9-15
file size: EDIT 1-13, 3-14 file size limit: EDIT 2-17	shareable: <i>USER</i> 6-201 shareable EMA: <i>PROG</i> 9-5, 9-6
information sources: <i>EDIT</i> 1-4	variables: <i>REL</i> 2-5
loading: EDIT C-1	EMA directive: FTN 7-15
memory requirements: <i>EDIT</i> C-2	EMA programming: <i>MAC</i> 4-35
multipoint environment: EDIT D-1	EMA relocatable space: <i>MAC</i> 1-11, 4-3, 4-22, 4-34
operations: EDIT 1-8	4-41
prompt: <i>EDIT</i> 1-6, 1-10, 1-13, 1-14, 2-7, 2-21,	EMA statement: FTN 3-33, E-2
3-6, 3-31, B-1	EMA/non-EMA, move routine: REL 8-26
record limit: EDIT 2-17	DVWMV (double precision): REL 8-26
regular expressions: EDIT 3-22	VWMOV (single precision): REL 8-26
runstring: <i>EDIT</i> 1-2, 1-6, 1-8, 1-11, 2-7, 2-10,	WVMOV (single precision): REL 8-26
3-3, 3-34, 3-47, B-3	EMA/non-EMA move routine, DWVMV (double
screen error message: EDIT 2-12	precision): REL 8-26
screen mode: EDIT 4-61	EMA/VMA
security: EDIT 3-48	firmware, A990 upgrade: PROG 9-14
session options: <i>EDIT</i> 2-20, 3-25, 4-72, B-2	models: PROG 9-14
tutorial: EDIT 2-1	subroutines: PROG 9-17
work area: <i>EDIT</i> 1-8, 3-48	FMGR VMA subroutines: <i>PROG</i> 9-17
Edit/1000: MAIL 3-8, 4-3, 5-1, 5-5, 5-7, 5-9	I/O management subroutines: <i>PROG</i> 9-17,
editing: GSA 4-1	9-21
a new file: EDIT 2-9	information subroutines: <i>PROG</i> 9-17, 9-18
an existing file: EDIT 2-9	mapping management subroutines: <i>PROG</i>
line mode: <i>EDIT</i> 1-2, 1-10, 3-31, 3-33	9-17 shareable EMA subroutines: <i>PROG</i> 9-17,
modes: <i>EDIT</i> 1-10, 3-8 screen mode: <i>EDIT</i> 1-2, 1-11, 2-4, 2-10, 3-34,	9-26
B-3	VMA file subroutines: <i>PROG</i> 9-17
text: EDIT 3-36	EMA/VMA models: SDM 11-23
editing messages: <i>MAIL</i> 3-4, 3-8, 3-9, 3-15, 4-5, 5-5	EMA/VMA programming: <i>PROG</i> 9-1
editor prompt character /: GSA 4-1	EMACS/GMAC visual editing mode: USER 7-9
EIOSZ subroutine: <i>PROG</i> 9-24	EMAST subroutine: <i>PROG</i> 9-18
ELA: <i>MAC</i> 3-5, B-4	embedded comment: FTN 2-28
ElapsedTime: <i>REL</i> 7-25	empty directory: GSA 2-2, 3-8
ELB: <i>MAC</i> 3-5, B-4	empty file, creating: USER 3-26
ELOCF (extended LOCF): <i>PROG</i> C-9	EMPTYSTRING macro: MAC N-9
ELSE (system macro): MAC L-7	EN (end of instructions) LINK command: GSA
Else command: DBÚG 5-15	5-5

EN (end) command: <i>LINK</i> 3-9 EN command: <i>SGI</i> 9-6, 9-7, J-7 ENABLE INTR statement: <i>HPIB</i> 5-3, 5-19	entry records: <i>SGI</i> D-4 ENTRY statement: <i>FTN</i> 3-36, 6-17, E-2, E-3 restrictions: <i>FTN</i> 6-18
enable program: <i>PRNT</i> 2-13 encapsulation: <i>FTN</i> 3-37	ENTRY subroutine operations: <i>MAC</i> L-4 environment buffer, RTE-A signals: <i>PROG</i> 13-12
ENCODE statement: FTN 5-14, 8-6, H-3	environment variable
encoding binary files: <i>MAIL</i> 6-5 END: <i>MAC</i> 1-4, 4-3, 4-32, B-14	\$CMNDO: <i>LINK</i> 2-6 \$CMNDO LINK: <i>LINK</i> 2-6
END command: <i>MAC</i> 4-12, 4-13; <i>SGI</i> 4-5, 6-18,	\$LINK: <i>LĪNK</i> 2-9
6-19	environment variable access
END DO statement: <i>FTN</i> 3-18, 3-23, 3-24, 3-29, 3-30, 3-31	A-Register return: <i>PROG</i> 14-4 deleting a variable: <i>PROG</i> 14-3
end EDIT: EDIT 2-8, 2-17	getting the value of a variable: <i>PROG</i> 14-2
END IF statement: FTN 3-51 END macro: MAC N-13	retrieving modification count: <i>PROG</i> 14-3 setting a variable: <i>PROG</i> 14-2
END statement: FTN 1-4, 3-34, 6-2, 6-16	Environment Variable Block (EVB): SMM 2-3;
end-of-file	USER 6-6, 6-70, 6-171
characters: EDIT 1-13, 2-21	modifying its size: SMM 3-11
display: EDIT 2-11	environment variables: <i>USER</i> 2-16
perform on tape, .TAPE: <i>REL</i> 5-40	ENVRN: SDM 5-5
end-of-file record: FTN 3-35, 5-2	EOF: <i>FTN</i> 3-35, 3-55
end-of-line comment: FTN E-2	See also end-of-file
end-of-record: DDM 5-2	EOI and ATN bus command: <i>HPIB</i> 4-9
end-of-transmission: <i>DDM</i> 9-7	EOI bus management line: HPIB 1-7
Enddo command: <i>DBUG</i> 5-16	EOR
ENDFILE, statement: FTN 5-13	requirements for controller: HPIB 7-5
ENDFILE statement: FTN 3-35, 5-2, 5-5	requirements for devices: HPIB 7-4
ENDIF (system macro): MAC L-9	EPOSN (extended range positioning): <i>PROG</i> C-10
Endif command: DBUG 5-16 ENDIE directive: ETN 7-21	EQLU, interrupting LU query: <i>PROG</i> 7-10
ENDIF directive: FTN 7-21 ENDMAC: MAC 5-2, 5-7, B-17	EQT overflow: <i>HPIB</i> 6-4 EQU: <i>MAC</i> 4-40, 4-43, B-16
ENDREP: <i>MAC</i> 4-63, 4-66, B-17	equipment table (EQT): HPIB 3-1
enlarge free space areas on disks: <i>USER</i> 6-117	equivalence: FTN E-2, H-3
ENQ/ACK handshake, serial I/O driver: DRM	EQUIVALENCE statement: FTN 3-38, 6-13, 8-7
2-185	equivalenced data: FTN 2-9
ENT: <i>MAC</i> 4-19, B-14	equivalencing: FTN 3-33, 3-38
enter message text: MAIL 3-4	arrays of different dimensions: FTN 3-40
entering	in common blocks: FTN 3-41
line commands from screen mode: EDIT 2-20	of array elements: FTN 3-38
screen mode: EDIT 2-10	of character variables: FTN 3-41
text: <i>EDIT</i> 1-10, 2-7	of VMA or EMA variables: FTN 7-16
entering and leaving the editor: GSA 4-1	ER command: <i>EDIT</i> 1-7, 2-7, 2-9, 2-17, 2-35, 3-6,
entering the command line: GSA 3-5	3-46, 4-16
ENTIE: REL 3-39	ER0.E: <i>REL</i> 5-3
ENTIER	ERA: <i>MAC</i> 3-5, B-4
extended real: <i>REL</i> 3-40 real: <i>REL</i> 3-39	erasing errors: EDIT 3-31, 3-46
ENTIX: <i>REL</i> 3-39	ERB: <i>MAC</i> 3-5, B-4 EREAD (extended range read): <i>PROG</i> C-10
entry	ERLOG: SDM 5-5
association: FTN 6-17	errlog: MAIL A-4, A-9
name: FTN 6-17	ERRLU: REL 5-4
ENTRY macro: <i>MAC</i> L-2, L-4, M-9, N-4	ERRO: REL 5-5
entry macros	error
BUMPEXIT: MAC N-6	aborted data transfer: HPIB 6-4
DENTRY: MAC N-6	bit: <i>DDM</i> 2-11, 5-5
DLENTRY: MAC N-5	code segment: PROG A-5
ENTRY: MAC N-4	codes: HPIB 6-1; PROG 8-8
EXIT, EXIT1, EXIT2: MAC N-6	FMP: PROG A-14
OENTRY: MAC N-4	table of: DDM 5-7
entry point: FTN 3-70	VMA/EMA: PROG A-11

	dispatching: PROG A-4	VCP: SGI H-1
	EQT overflow: HPIB 6-4	error message logging: MAIL 7-3
	formats: USER A-1	error messages: DBUG A-1; FTN 7-6, 7-23; GSA
	Group II: PROG A-1	1-4; <i>SGI</i> A-1
	Group III: PROG A-4	assembly: MAC E-9
	Group IV halt: PROG A-8	BOOTEX: DATA A-9
	Group V interrupt: <i>PROG</i> A-9	BUILD program: SGI A-8
	Group VI device driver: <i>PROG</i> A-10	INSTL: DATA A-8
	Group VII parity: PROG A-10	LINK: LINK A-1
	Group VIII VMA/EMA: PROG A-11	localizable programs: SGI K-11
	handling: <i>DDM</i> 3-5, 4-5, 5-4, 5-6, 6-1	MIMON: DATA A-8
	signal subroutines: <i>PROG</i> 13-5	PAIR: DATA A-1
	I/O: PROG A-7	PINIT: DATA A-6
	IBERR subroutine: HPIB 6-1	PREPAIR: DATA A-4
	IFT space too small: HPIB 6-4	RTAGN errors: SGI A-1
	illegal interrupt: HPIB 6-3	runstring/control statement: MAC E-9
	IO00: <i>PROG</i> 4-9	VCP loader: SGI A-11
	IO04: <i>PROG</i> 4-3, 4-13, 4-24, 4-26, 4-27	cartridge tape loader errors: SGI A-11
	IO10: PROG 4-4	CS/80 disk loader errors: SGI A-12
	logging	DS/1000 loader errors: SGI A-11
	determine if enabled: <i>PROG</i> 7-13	HP 12022 interface loader errors: <i>SGI</i> A-13
	start/stop: PROG 11-7	magnetic tape loader errors: SGI A-12
	logging (VC+): <i>USER</i> 2-26	other loader errors: SGI A-13
	memory protect: PROG A-2	PROM card loader errors: <i>SGI</i> A-11
	message descriptions: <i>EDIT</i> 1-15	SCSI disk loader errors: <i>SGI</i> A-12
	message display format: <i>EDIT</i> 1-13, 3-12, 3-45	SCSI tape loader errors: SGI A-12
	messages: <i>EDIT</i> 3-42, 3-48, A-1; <i>PROG</i> A-1;	error messages (VIS): REL 9-62
	USER A-1	Error Rate Test utility (ERTSH): BKUP 1-5, 2-67,
	avoidance of: <i>DDM</i> 5-7	2-129, 2-133
	messages and codes: <i>USER</i> A-1, A-4, A-13	BP Build Test Pattern command: <i>BKUP</i> 2-69
	number: DDM 5-6	break detection: BKUP 2-78
	option: PROG A-6	commands: BKUP 2-68
	processing	CY Define Cylinder Range command: BKUP
	by program: HPIB 6-1	2-69
	by system: HPIB 6-2	error interpretation: BKUP 2-80
	example: HPIB 6-5	error messages: BKUP 2-83
	recovery: EDIT 3-45, 3-46-3-48	ERTSH structure: BKUP 2-67
	line mode errors: <i>EDIT</i> 1-11, 3-31	EXit command: BKUP 2-70
	screen mode error: EDIT 2-12	HD Define Disk Head Range command: BKUP
	returns on FMP calls: PROG 8-8	2-70
	SC03: PROG A-4	help command: BKUP 2-69
	SC05: <i>PROG</i> 5-3	initializing and testing a new disk: BKUP 2-75
	SC06: <i>PROG</i> 5-3	installation procedure summary: BKUP 2-79
	SC10: <i>PROG</i> 5-11, 7-4	LL Extra Log Device command: BKUP 2-70
	screen mode message: <i>EDIT</i> 1-12, 2-12	LU Selecting Disk LU to Test command: BKUP
	soft error: <i>DDM</i> 2-6, 5-5	2-71
	specified program does not exist: HPIB 6-4	P# Set Test Pass Count command: BKUP 2-71
	SR: PROG A-3	RO Execute Read-Only Error Rate Test com-
	timeout or transmission: HPIB 6-2	mand: BKUP 2-72
er	ror code	SC Define Disk Sector Range command: BKUP
	for ERO.E: REL 5-5	2-72
	for ERRLU: REL 5-4	specialized use of ERTSH: BKUP 2-78
er	ror information	SS Spare Sectors command: BKUP 2-73
	DD*30 driver: <i>DRM</i> 2-52	testing disks formatted with FORMF: BKUP
	DD*33: DRM 2-89	2-75
	DDC12 driver: DRM 2-20	testing the functionality of a disk and its control-
	DDM30 disk device driver: DRM 2-59	ler: BKUP 2-67
	ID*27 disk interface driver: <i>DRM</i> 2-98	TP Test Pattern command: BKUP 2-73
	ID*36 PROM storage module driver: <i>DRM</i>	typical use of ERTSH: BKUP 2-75
	2-104	using ERTSH: BKUP 2-75

WR Write/Read Error Rate Test command: <i>BKUP</i> 2-74	Exchange (X) command: <i>EDIT</i> 2-34 Exchange and Search (Y) command. <i>See</i> Y com-
error reporting: MAC 1-8, B-17	mand
on default names: LINK 4-6	exchanging patterns: EDIT 2-34, 2-42
error returns from IDP31: DATA A-11	exchanging text: EDIT 3-19
error.log: <i>MAIL</i> 7-1, 7-3, A-9, B-1	exclamation point (!): FTN 1-5, 2-28, E-2
error-handling program, DSKER: <i>DATA</i> 2-4	EXEC: FTN B-7, B-9, E-3; SDM 5-5
compilation: FTN A-1	call formats: <i>PROG</i> 1-3 call spooling: <i>PROG</i> 11-1
compilation time: FTN F-1	error processing: PROG 1-4
format: FTN A-2	error returns: <i>DRM</i> 1-21
library subroutine: FTN A-19	EXEC 1 and 2
listing of compilation errors: FTN A-4	A- and B-Register returns: <i>PROG</i> 3-5
partition size: DBUG 2-3	optional parameters: <i>PROG</i> 3-5
program abort: <i>DBUG</i> 2-3	read and write request: PROG 3-3
sense key and additional sense code	read/write parameters: PROG 3-4
disk drive: SCSI A-4	read/write request: <i>PROG</i> 3-5
tape drive: SCSI A-9	EXEC 11
ERTSH. See Error Rate Test utility	parameters: PROG 6-1
ES (EMA segment) command: LINK 3-9	time-retrieval request: <i>PROG</i> 6-1
ESC-4 CTRL-B: <i>EDIT</i> 3-37, 4-62	EXEC 12
escape (\) character: EDIT 3-19, 3-32, 5-4, B-2	initial offset scheduling: PROG 6-2
Escape Character (EC) option: <i>EDIT</i> 3-26	parameters: PROG 6-2
escape sequence, PCL: PRNT 2-52 escaping screen mode: EDIT 1-11, 2-21	timed execution, absolute start time: <i>PROG</i> 6-4 timed execution, initial offset: <i>PROG</i> 6-2
establishing initial pairing, with MI command:	EXEC 13
DATA 3-8	A- and B-Register returns: <i>PROG</i> 3-16
Ethernet LAN: <i>PRNT</i> 2-2	device status: <i>PROG</i> 3-12
ETime: REL 7-25	device status parameters: PROG 3-13
Euclidean norm: REL 8-17	optional parameters: <i>PROG</i> 3-15
EV02 error: PROG 14-1	status request: PROG 3-13
evaluation: FTN 2-19	EXEC 14
evaluation of expressions: MAC 4-64	A- and B-Register returns: <i>PROG</i> 7-4
EWRIT (extended file write): <i>PROG</i> C-11	parameters: PROG 7-3
EX command: GSA 1-5; USER 1-5, 6-52	procedures: PROG 7-4
examining a location: <i>DBUG</i> 3-6, 5-10	string passage call: PROG 7-3
example CDS program link: LINK 4 15	usage: PROG 7-4
CDS program link: <i>LINK</i> 4-15 Class I/O programming examples: <i>PROG</i> 4-5	EXEC 14 call: FTN B-17 EXEC 17
Class I/O to a terminal: <i>PROG</i> 4-17	A- and B-Register returns: <i>PROG</i> 4-13
class rethread: PROG 4-29	call format: PROG 4-11
CLRQ: PROG 4-10	key word parameter: <i>PROG</i> 4-11
EXEC 12	parameters: PROG 4-12
absolute start time: PROG 6-6	UV user variable: <i>PROG</i> 4-13
initial offset scheduling: PROG 6-3	EXEC 18
EXEC 6: <i>PROG</i> 5-7, 5-15	A-and B-Register returns: <i>PROG</i> 4-13
EXEC 9, 10, 23, 24: <i>PROG</i> 5-12	call format: PROG 4-11
GETST: PROG 7-6	key word parameter: <i>PROG</i> 4-11
IFT entry: SGI 6-12	parameters: PROG 4-12
non-CDS program load map: LINK 4-11	UV user variable: <i>PROG</i> 4-13
page mode application: <i>DRM</i> F-1	EXEC 19
protocol charts: <i>DRM</i> D-1	A- and B-Register returns: <i>PROG</i> 4-24
RMPAR usage: <i>PROG</i> 7-2 using CMNDO routines: <i>REL</i> 7-10	control call format: <i>PROG</i> 4-22 I/O device control: <i>PROG</i> 4-22
using VMA file subroutines: <i>PROG</i> 9-40	optional parameters: <i>PROG</i> 4-23
example of a macro: MAC 5-2	parameters: PROG 4-22
example VIS programs: <i>REL</i> 9-24	EXEC 20
examples of the Macro/1000 runstring: MAC E-7	A- and B-Register returns: <i>PROG</i> 4-13
exception condition handling: USER 8-1	call format: PROG 4-11
Exchange (G) command: EDIT 2-34	key word parameter: PROG 4-11

parameters: PROG 4-12	execution confirmation. See dangerous command
UV user variable: <i>PROG</i> 4-13	confirmation
EXEC 21	EXER utility: USER C-1
A- and B-Register returns: <i>PROG</i> 4-21	error handling: <i>USER</i> C-8
Class I/O Get: PROG 4-18	EXER and cache disks (793xXP): USER C-8
optional parameters: <i>PROG</i> 4-20	EXER and CS/80 tape drives: USER C-8
parameters: <i>PROG</i> 4-18	EXER and subset 80 disks: <i>USER</i> C-8
SC save class bit: PROG 4-19	loading the program: USER C-2
transmission log: PROG 4-19 EXEC 22 program swapping control: PROC 5 13	selected command descriptions: <i>USER</i> C-5
EXEC 22, program swapping control: <i>PROG</i> 5-13 EXEC 23: <i>PROG</i> 5-9	CHANGE LU: <i>USER</i> C-5 DESCRIBE: <i>USER</i> C-5
EXEC 24: <i>PROG</i> 5-9	ERT LOG: USER C-5
EXEC 26	FAULT LOG: USER C-6
A- and B-Register returns: <i>PROG</i> 5-15	INPUT: USER C-7
memory size request: <i>PROG</i> 5-14	OUTPUT: USER C-7
parameter relationships: <i>PROG</i> 5-15	REV: USER C-7
EXEC 29, retrieve ID segment address: <i>PROG</i>	RO ERT: USER C-7
5-16	RUN LOG: USER C-6
EXEC 3	TABLES: USER C-6
A- and B-Register returns: <i>PROG</i> 3-9	using the Exerciser: <i>USER</i> C-2
I/O device control: PROG 3-8	exit: <i>MAIL</i> 3-8, 3-14, 3-16, 3-19, 4-3
I/O device control parameters: <i>PROG</i> 3-9	Exit (EX) command
optional parameters: <i>PROG</i> 3-9	GRUMP utility: SMM 3-15
EXEC 37: <i>PROG</i> 13-5	SECTL utility: SMM 5-3
See also RTE-A signals	Exit and Create (EC) command: EDIT 2-9
EXEC 38: <i>PROG</i> 13-28	Exit and Replace (ER) command: EDIT 2-7, 2-9
See also Timer signals	Exit command: <i>DBUG</i> 2-14, 3-7, 5-17
A- and B-Register returns: <i>PROG</i> 13-29	EXIT macro: <i>MAC</i> L-2, L-5, M-10, N-6
parameter relationships: PROG 13-28	EXIT subroutine operations: MAC L-4
EXEC 39: <i>PROG</i> 14-1	EXIT1 macro: MAC N-6
EXEC 6	EXIT2 macro: MAC N-6
call format: PROG 5-5	exiting
optional parameters: PROG 5-5	CI: <i>USER</i> 6-52
parameters: PROG 5-5	EDIT: <i>EDIT</i> 1-7, 4-2, 4-3, 4-15, 4-16
stop program execution: <i>PROG</i> 5-5	saving: <i>EDIT</i> 2-9, 2-17
EXEC 7, program suspend: <i>PROG</i> 5-8	without saving: <i>EDIT</i> 2-8
EXEC 8	screen mode: <i>EDIT</i> 1-11, 2-17, 3-42
A- and B-Register returns: <i>PROG</i> 5-3	exiting Mail/1000
overlay load: <i>PROG</i> 5-2	deleting marked messages: MAIL 4-3, 4-11
parameters: PROG 5-2	undeleting marked messages: MAIL 4-3, 4-11
EXEC 9, 10, 23, 24	EXP: FTN B-6; REL 3-41
A- and B-Register returns: <i>PROG</i> 5-10	EXP entry (call-by-name), %XP: REL 3-165
optional parameters: <i>PROG</i> 5-11	ExpandAsciiRLE: REL 12-5
parameters: PROG 5-9	exponent: FTN 2-7, 2-8, E-2
program schedule calls: <i>PROG</i> 5-8	exponential, extended real: <i>REL</i> 3-26
scheduling differences: <i>PROG</i> 5-9	exponentiate
EXEC calls: SDM 2-9	double real to double real power: <i>REL</i> 3-123
EXEC module: SDM 5-5	double real to integer power: <i>REL</i> 3-121
EXEC requests. See EXEC calls	double real to unsigned integer power: <i>REL</i>
executable	3-120 integer to integer newers REL 2 06
file (type 6): GSA 5-6, 5-7	integer to integer power: <i>REL</i> 3-96
program: GSA 5-2	real to double real power: <i>REL</i> 3-109
executable program: FTN 1-4 executable statements: FTN 3-1	real to integer power: <i>REL</i> 3-107
table of: FTN 3-2	real to real power: <i>REL</i> 3-108 real to unsigned integer power: <i>REL</i> 3-91
Execute command: <i>DBUG</i> 5-17	exponentiate e
executing a program: USER 4-3	double real power: <i>REL</i> 3-86
executing a program on a message: MAIL 5-10	real power: REL 3-41
executing Mail/1000 commands from a File: MAIL	exponentiation: <i>FTN</i> 2-19, 2-22, 3-66
3-21	exponentiation operator: FTN 2-22

exported function: <i>USER</i> 6-70 exported variable: <i>USER</i> 6-6, 6-171	disk drive: SCSI A-4 tape drive: SCSI A-9
expression: <i>FTN</i> 2-5, 2-18, 3-7	extended system available memory: SDM 1-7
arithmetic: FTN 2-18 arithmetic constant: FTN 2-22	extended system available memory (XSAM): SDM
	2-10; <i>USER</i> 6-156 extender cable: <i>SCSI</i> 1-3
arithmetic relational: FTN 2-24	
bit masking expression: FTN 2-27	extensions, file type: <i>PROG</i> B-13 extent: <i>FTN</i> 3-59
character: FTN 2-18, 2-23	file: BKUP 2-190; USER 3-12, 6-57
character constant: FTN 2-23	
character relational: FTN 2-25	eliminate using FC: BKUP 2-94
logical: FTN 2-18, 2-25	reducing for performance: BKUP 2-107
relational: FTN 2-18, 2-24	extent entry: <i>SDM</i> 12-9 external file: <i>FTN</i> 5-2
expressions	external name: FTN 7-10
address operators: DBUG 4-9	
alternate variable display: DBUG 4-11	EXTERNAL statement: <i>FTN</i> 3-43, 3-60, 8-3, 8-8
arithmetic operators: <i>DBUG</i> 4-8	EXTRACT: MAC 5-16, B-14
attribute operators: DBUG 4-8	extract real from complex: <i>REL</i> 3-53
definition: MAC 2-10	return extended precision: <i>REL</i> 3-67
legal use of: MAC 2-11	
operator precedence: DBUG 4-10	F
operators: MAC 2-5, 4-51	
override operators: DBUG 4-10	F command: <i>EDIT</i> 2-23, 2-31, 3-18, 3-46, 4-18
substrings: DBUG 4-14	F option: MAC E-2
using: DBUG 4-7	FAD: MAC 3-14, B-11
using assembly-time variables: MAC 4-52	failed disk replacement: DATA B-1
EXT: MAC 4-19, B-14, H-6	FakeSpStatus: REL 12-6
extend complement, real: <i>REL</i> 3-133	Fast FORTRAN Processor (FFP): REL 2-6
extended	FattenMask: PROG 8-15
arithmetic group: MAC 3-11	FC: USER 1-1
arithmetic unit: MAC B-11	See also File Copy
EMA/VMA model: PROG 9-14	FCHI, HP 1000 single precision floating point to
instruction group: <i>MAC</i> B-7 precision constants: <i>MAC</i> 4-37	IEEE conversion: <i>REL</i> 11-2
REIO call (XREIO): <i>PROG</i> 3-11	FCIH, IEEE standard format single precision to
relocatable records: MAC 1-2, 1-3	HP 1000 conversion: <i>REL</i> 11-3
schedule table: SGI 7-5	FCL command: <i>EDIT</i> 3-7, 3-9, 3-10, 4-20
system available memory (XSAM), allocating:	FCONT (Type 0 file control): PROG C-11
SGI 7-3	FCS command: <i>EDIT</i> 3-10, 4-21 FDV: <i>MAC</i> 3-14, B-11
extended device status: <i>DRM</i> 1-19	fence priority: PRNT 2-25
extended memory area: FTN 3-33, 7-15	FFRCL: FTN B-13
See also EMA	Fgetopt routine: <i>REL</i> 7-26
extended precision, format: FTN D-3	FGREP command: USER 6-80
extended real	FI command: <i>EDIT</i> 2-9, 2-24, 3-8, 3-46, 4-22
to integer, truncate: REL 3-25, 3-46	FIELD (system macro): MAC L-2, L-14
to real, conversion: <i>REL</i> 3-56	FIFO linking: <i>DDM</i> 2-4
without rounding: REL 3-57	file: FTN 3-56, 3-61, 3-85
extended record converter utility (OLDRE):	access: FTN 5-2; SDM 1-16
USER 6-129	adding files to message folder: MAIL 3-19
error messages: USER 6-132	backup utilities: BKUP 1-2
extended records: <i>USER</i> 6-129	comparison, SCOM: USER 6-159
FORTRAN code: USER 6-132	connection: FTN 5-4
FORTRAN code processing: USER 6-130	creation defaults: GSA 3-7
Macro code: USER 6-131	database: FTN B-13
Macro code processing: USER 6-130	definition of: FTN 5-1
operation: USER 6-129	descriptor: <i>EDIT</i> 1-13, 2-24, 3-34; <i>PROG</i> 8-2
Pascal code: USER 6-131	in Macro: PROG 8-6
program restrictions: <i>USER</i> 6-131 translation results: <i>USER</i> 6-130	in Pascal: PROG 8-5
extended record, definition of: <i>USER</i> 6-129	descriptors: GSA 3-1 direct: FTN 5-2
extended status	direct access: <i>FTN</i> 3-35, 3-59, 3-74, 5-13
TITTI DOG DIGITAL	

1' , DDOC 0.1 CDM 1.15	E'1 C (EC) PEUD 1 4 2 05
directory: PROG 8-1; SDM 1-15	File Copy (FC): <i>BKUP</i> 1-4, 2-85
entry: SDM 12-7	ABort command: BKUP 2-89
existence: FTN 5-11	brief, full status display format: BKUP 2-93
extension: GSA 3-3; SDM 1-16	calling FC: BKUP 2-85
extent: <i>BKUP</i> 2-94; <i>EDIT</i> 4-16	cartridge lock, open: BKUP 2-95, 2-108
external: FTN 5-2	CF name comment file command: BKUP 2-89
FMGR: <i>SDM</i> 10-6	CL Cartridge List command: <i>BKUP</i> 2-89
FPOSN: FTN B-14	clear destination disk: BKUP 2-94
group configuration: SDM 11-40	CO command examples: BKUP 2-96
include: FTN 7-22	CO command options: BKUP 2-93
interchange utilities: BKUP 1-4	CO command source and destination parame-
FC: <i>BKUP</i> 2-85	ters: <i>BKUP</i> 2-92
FST: <i>BKUP</i> 2-172	command summary function (?): BKUP 2-88
LIF: <i>BKUP</i> 2-219	COpy command: BKUP 2-90
overview: BKUP 1-1	copy single volume of multi-volume tape set:
TF: <i>BKUP</i> 2-230	BKUP 2-95
internal: FTN 5-2, 5-14	DEfault command: BKUP 2-99
line limit: EDIT 3-14	destination disk handling: BKUP 2-106
management: SDM 1-15	display required tape length: BKUP 2-95
mask character @: GSA 3-11	DL Directory List command: BKUP 2-100
mask character -: GSA 3-11	ECho command: BKUP 2-102
masking: GSA 3-11	eliminate extents: BKUP 2-94
MASTERACCOUNT: SDM 11-43	error handling in transfer files: BKUP 2-110
MASTERGROUP: SDM 11-42	error messages: BKUP 2-112
merging: EDIT 2-30	EXit command: BKUP 2-102
name: GSA 3-3	extents, file: <i>BKUP</i> 2-94, 2-107
first-character check: GSA 3-3	
	FC commands: BKUP 2-86
naming conventions: EDIT 3-11	globals used in transfer files: BKUP 2-108
localizable programs: SGI K-2	GRoup CO commands: BKUP 2-102
namr: <i>EDIT</i> 1-13, B-2; <i>SDM</i> 1-18	ignore data errors: <i>BKUP</i> 2-94
See also filename specification	keep tape online: <i>BKUP</i> 2-95, 2-103, 2-106
ownership, reporting using FOWN: USER 6-54	LC List Comment files command: <i>BKUP</i> 2-103
packing, MPACK: <i>USER</i> 6-117	LH List Header files command: BKUP 2-103
Pascal: FTN 7-30	LL List device command: BKUP 2-103
positioning: FTN 5-13	loading FC: BKUP 2-108
posting: EDIT 3-7	master security code: BKUP 2-91
protection: GSA 3-12; SDM 1-18	performance considerations, file copy opera-
protection status default: GSA 3-12	tions: BKUP 2-107
renaming during conversion, FMGR: <i>USER</i>	purge source file: BKUP 2-95
6-68	recover unused space: BKUP 2-96
scratch: <i>FTN</i> 5-5, 5-8, 5-10	replace duplicate files: BKUP 2-94
search path: GSA 3-1, 3-4, 3-6	SCratch area definition command: <i>BKUP</i> 2-104
sequential: FTN 3-11, 3-35, 3-56, 3-59, 3-78, 5-2	SKip volume option in multi-volume read:
size: EDIT 4-74; SDM 1-15	BKUP 2-105
size limit: <i>EDIT</i> 2-17, 3-14	tape directory list format: <i>BKUP</i> 2-101
size values: GSA 3-1	tape handling: BKUP 2-105
source: FTN 1-2	TItle command: BKUP 2-104
space: SDM 1-16, 1-17, 1-19	TRansfer command (to/from command file):
spool: FTN 5-1	BKUP 2-104
structure: GSA 3-1, 3-2	verify transferred data integrity: BKUP 2-96
subdirectory entry: <i>SDM</i> 12-8	File Input (FI) command: EDIT 2-9
symbolic link: <i>SDM</i> 10-5	File Manager (FMGR): <i>EDIT</i> 2-7, 3-11, 3-12;
system: <i>GSA</i> 3-1; <i>SDM</i> 10-1	PROG 8-1
truncation: EDIT 1-13	file manipulation, in FMGR: USER B-33
type extension: EDIT 3-11; GSA 3-3	command summary: USER B-36
type values: GSA 3-3	file manipulation utilities
types: <i>SDM</i> 1-15	compare files (SCOM): USER 6-159
file and directory names: <i>PROG</i> B-1	concatenate files (MERGE): USER 6-109
file attribute specification: MAC E-6	extended record converter (OLDRE): <i>USER</i>
file control specifiers: <i>FTN</i> 5-6, 5-7, 5-10, 5-11	6-129

summary of: USER 3-38	PRevious command: BKUP 2-181
file name: FTN 3-55	purge option (P): BKUP 2-191
file naming, defaults: LINK 4-4	quiet option (Q): BKUP 2-191
file pointer: FTN 5-2, 5-13	recommended system usage: BKUP 2-206
file positioning statements: FTN 5-13	replacing reserved characters in FMGR file
File Storage to Tape utility (FST): <i>BKUP</i> 2-172	names: <i>BKUP</i> 2-205
append option (A): BKUP 2-188	REstore command: <i>BKUP</i> 2-182
appending data: BKUP 2-201	restoring files from overwritten tape: BKUP
backing up using file masking: BKUP 2-193	2-189, 2-204
Backup Bits: BKUP 2-189	restoring from incremental backups: BKUP
BAckup command: BKUP 2-176	2-199
preserving FMGR security codes: BKUP	restoring using file masking: BKUP 2-195
2-176	RUn command: BKUP 2-183
brief option (B): BKUP 2-189	rwndoff option (R): BKUP 2-191
building a new directory file: BKUP 2-204	SC Select Comment file command: BKUP 2-183
calling FST: BKUP 2-173	SD Set tape Density command: BKUP 2-183
clear option (C): BKUP 2-189	SEcure command: BKUP 2-184
command options summary: BKUP 2-188	Shareable EMA (SHEMA): BKUP 2-205
command stack: BKUP 2-176	SHow user selected states command: BKUP
commands: BKUP 2-175	2-184
consecutive backups: BKUP 2-201	srchapp option (S): BKUP 2-191
D, K, N, and S qualifiers: BKUP 2-193	streaming during verify pass: BKUP 2-192
delta backups: BKUP 2-197	streaming mode: <i>BKUP</i> 2-182, 2-192, 2-206
DF Directory File command: BKUP 2-177	tape format: BKUP 2-207
disk directory file: <i>BKUP</i> 2-205 DL List Directory command: <i>BKUP</i> 2-177	tape loading: BKUP 2-202
	tape positioning on overwritten tapes: <i>BKUP</i> 2-204
duplicate option (D): <i>BKUP</i> 2-189 EM SHEMA Size command: <i>BKUP</i> 2-178	TAr command: BKUP 2-184
end-of-file position ignored with W option:	TF compatibility: BKUP 2-202
BKUP 2-192	TItle command: BKUP 2-185
error handling: BKUP 2-209	TRansfer to command file command: <i>BKUP</i>
error messages and warnings: BKUP 2-210	2-185
EXit command: BKUP 2-178	UNIX TAR Format: BKUP 2-184
extents, file: <i>BKUP</i> 2-190, 2-206	UNselect command: BKUP 2-186
faulty option (F): BKUP 2-189	update option (U): BKUP 2-191, 2-200
file masking and renaming: BKUP 2-193	verify option (V): BKUP 2-192
FST.RC start-up file: BKUP 2-173, 2-174	whole option (W): BKUP 2-192
full backups: BKUP 2-197	yes option (Y): <i>BKUP</i> 2-192
GO begin backup/restore command: BKUP	Z option: BKUP 2-192
2-178	file support, type 12 files: <i>PROG</i> G-1
HElp command: BKUP 2-178	file system
incremental backup: BKUP 2-197	considerations: SGI C-4
inhibit option (I): BKUP 2-189	conversion, FSCON: USER 6-67
installing FST: BKUP 2-209	organization: SDM 10-1
keep option (K): BKUP 2-190, 2-201	verification, FVERI: <i>USER</i> 6-73
LC List Comment file command: BKUP 2-179	file system security: SMM 4-1, 4-2
LH List Header command: BKUP 2-179	CI: SMM 4-2
LI List selected files sommand: BKUP 2-179	directory ownership: SMM 4-2
LL select log device/file command: BKUP 2-179	directory protection: SMM 4-2
LN List Non-selected files command: BKUP	file ownership: SMM 4-2
2-180	file protection: SMM 4-2
lock option (L): BKUP 2-190	FMGR: SMM 4-3
mindir option (M): BKUP 2-190 MT specify tape LII command: BKUP 2-180	volume ownership: SMM 4-3
MT specify tape LU command: BKUP 2-180	volume protection: <i>SMM</i> 4-3 file system utilities
multiple reels: BKUP 2-201	
NExt command: <i>BKUP</i> 2-181 normal option (N): <i>BKUP</i> 2-190	file compacting and disk pack (MPACK): <i>USER</i> 6-117
options: <i>BKUP</i> 2-187	File System Conversion (FSCON): <i>USER</i> 6-67
original option (O): BKUP 2-190	file system pack (FPACK): USER 6-57
POsition command: BKUP 2-181	file system verification (FVERI): USER 6-73
1 Conton Communa. Ditt 2 101	ine observe vermention (1 villy. Oblit 0-75

report disk Free Space (FREES): USER 6-64	types: <i>USER</i> 3-1, 3-11
report file space by owner (FOWN): USER 6-54	unpurging: <i>USER</i> 3-26, 6-188
summary of: USER 3-38	unusual access errors: USER 8-1
file type extensions: <i>PROG</i> B-13	updating times: USER 6-182
filename: EDIT 3-4	FILES directive: FTN 5-3, 7-18
default: EDIT 3-11	files, printing. See PRINT Utility
display: EDIT 2-11	filing messages in folders: MAIL 3-17
in EDIT runstring: EDIT 2-7	fill number: BKUP 1-8
parameters: EDIT 1-13	FillBuffer: <i>REL</i> 12-7
specification: <i>EDIT</i> 1-13	filtering criteria: MAIL 5-9
files: PROG 8-1	action criterion: MAIL 5-10
access errors: USER 8-1	allowed conditions: MAIL 5-9
cannot create directory: USER 8-2	autoreply: MAIL 5-11
cannot open file: USER 8-2	copy: MAIL 5-11
file not found: USER 8-2	execute: MAIL 5-10
non-standard file names: USER 8-1	folder: MAIL 5-11
OWNER, PROT, or WD command failures:	forward: MAIL 5-11
USER 8-3	leave: MAIL 5-10
same directory and cartridge name: <i>USER</i> 8-2	refuse: MAIL 5-10, 5-11
clearing open ones: USER 8-5	Find (B) command: EDIT 2-31
command: <i>USER</i> 2-13, 2-21	Find (F) command: EDIT 2-31
copying: <i>USER</i> 3-24, 6-26, 6-29	Find command: <i>DBUG</i> 5-18
creating a disk file: USER 6-32	FindBits: <i>REL</i> 7-3
creating empty: USER 3-26	finding a pattern: <i>EDIT</i> 2-31, 3-18, 4-4, 4-18
descriptors: USER 1-4, 3-5	firmware
destination masks: USER 3-20	EMA/VMA for A990: PROG 9-14
directories: <i>USER</i> 1-4, 3-1, 3-6	release date: SCSI 7-4
directory specifiers: <i>USER</i> 3-9, 3-10	Rev. 4: <i>SDM</i> 5-13
extents: USER 3-12	revision codes: SCSI 7-4
FMGR: <i>USER</i> 3-20, 3-40	timestamp: SCSI 4-8, 4-12, 7-4
I/O devices referenced as: USER 3-2	FirstCharacter: REL 12-7
identification: USER 3-1	FIX: <i>MAC</i> 3-14, B-11
introduction to: USER 1-4	fixed- or floating-point format descriptor: FTN
length: USER 3-1	4-13
listing: USER 3-23, 6-98	fixed-length strings: <i>PROG</i> 8-4
manipulating: USER 3-1	fixed-point format descriptor: FTN 4-11
manipulating commands: USER 3-2, 3-3	flags: MAIL A-4, A-9
mask characters: USER 3-15	FLOAT: FTN B-5, B-8; REL 3-42
masks: USER 3-14, 3-20	FLOAT entry (call-by-name), %LOAT: REL 3-155
moving: <i>USER</i> 3-25, 6-116, 6-124	floating point
names: <i>USER</i> 1-4, 3-1, 3-4, 8-1	instructions: MAC 3-14, B-11
open, clearing: USER 8-5	number: MAC 4-37
operations: USER 3-22	floating-point: FTN 2-7, 2-24
ownership and associated group: USER 3-13	floating-point format descriptors: FTN 4-12
printing. See LP spool system	FLOCF: FTN B-14
properties: USER 1-4, 3-1	FLT: <i>MAC</i> 3-14, B-11
protection: USER 3-1, 3-13, 3-27, 6-139	FLTDR: REL 4-2
purging: <i>USER</i> 3-25, 6-143	flush: DDM 5-6
record length: USER 3-1, 3-12	FM option: EDIT 4-72
remote: <i>USER</i> 3-41, 3-43	FMGR: USER B-1
removing: USER 6-148	accessing a disk file: USER B-34
renaming: USER 3-24, 6-124, 6-149	cartridge directory: USER B-10
restoring program: <i>USER</i> 6-150	cartridge file directory: SDM 12-13; USER B-10
searching for: USER 3-34, 3-35	cartridge header: SDM 12-13, USER B-10
	cartridge initialization: <i>USER</i> B-11
searching for a pattern: USER 6-80	
size: USER 3-1, 3-12	cartridge label: SDM 1-18
subdirectories: USER 1-4, 3-8	cartridge number: SDM 1-18
temporary: USER 3-2	cartridges: SDM 10-7
time stamps: USER 3-1, 3-14	cartridges and cartridge reference numbers:
type extensions: <i>USER</i> 1-4, 3-4	USER B-8

changing the moster sequenty and USED D 12	soverity and USED D 2
changing the master security code: <i>USER</i> B-12	severity code: <i>USER</i> B-2
configuration of logical units/cartridges: USER	storing data on a device or new file: USER B-36
B-8	transferring files between disk cartridges: <i>USER</i>
control commands: USER B-2	B-15
??: <i>USER</i> B-3	FMGR calls: <i>PROG</i> C-1
LL: USER B-4	APOSN: <i>PROG</i> C-1
LO: USER B-5	CLOSE: PROG C-2
SV: USER B-5	CRDC: PROG C-3
converting directory structure: USER 6-67	CREAT: PROG C-4
creating a file: USER B-35	general considerations: <i>PROG</i> B-1
device manipulation: <i>USER</i> B-64	FMGR files: <i>PROG</i> B-12
calling FMGR and COMND: USER B-64	CRETS: PROG C-5
	CRMC: PROG C-6
DN: USER B-68	
downing a device: <i>USER</i> B-64	EAPOS: PROG C-7
device manipulation commands, BL: USER	ECLOS: PROG C-7
B-66	ECREA (extended file create): <i>PROG</i> C-8
directories: SDM 12-13	ELOCF: <i>PROG</i> C-9
disk file entry: SDM 12-14	EPOSN: PROG C-10
disk logical units and LU numbers: <i>USER</i> B-7	EREAD: <i>PROG</i> C-10
disk manipulation: USER B-7	EWRIT: <i>PROG</i> C-11
disk manipulation commands: USER B-15	FCONT: PROG C-11
CL: <i>USER</i> B-16	FSTAT: PROG C-12
CO: USER B-17	IDCBS: PROG C-13
DC: USER B-23	INAMR: PROG C-13
DL: USER B-24	LOCF: PROG C-14
IN: USER B-27	NAMF: PROG C-15
	NAMR: PROG C-16
MC: USER B-30	
PK: <i>USER</i> B-31	OPEN: PROG C-18
end-of-directory entry: SDM 12-16	OPENF: PROG C-22
errors: USER B-2	POSNT: PROG C-25
file cartridges: SDM 1-18	POST: PROG C-26
file extent entry: SDM 12-15	PURGE: <i>PROG</i> C-26
file manipulation commands	READF: <i>PROG</i> C-27
CR: <i>USER</i> B-37	RWNDF: PROG C-30
DU: USER B-40	WRITF: PROG C-30
LI: USER B-42	XQPRG: PROG C-32
PU: USER B-44	XQTIM: PROG C-34
RN: USER B-45	FMGR VMA file routines: PROG 9-41
ST: USER B-45	CLSVM: PROG 9-43
file security: <i>SDM</i> 1-18, 1-19	CREVM: PROG 9-41
files: <i>SDM</i> 10-6; <i>USER</i> 3-20, 3-40, B-1	OPNVM: PROG 9-42
handling: <i>USER</i> 3-40	PSTVM: PROG 9-43
list device: USER B-2	PURVM: PROG 9-43
listing the contents of a file: USER B-36	VREAD: PROG 9-44
log device: USER B-2	VWRIT: PROG 9-45
masking: USER 3-20	FMP: <i>MAC</i> 3-14, B-11
mounting and dismounting cartridges: USER	calls, error returns: <i>PROG</i> 8-8
B-9	calls and DS: PROG 8-87
new cartridge initialization: <i>USER</i> B-28	calls and FMGR files: <i>PROG</i> B-12
non-disk file entry: <i>SDM</i> 12-16	error code: USER A-13
packing a file cartridge: <i>USER</i> B-14	error codes: <i>PROG</i> A-14
program: <i>USER</i> 1-1, 3-40	example
purged file entry: <i>SDM</i> 12-16	advanced: PROG 8-94
purging files: <i>USER</i> B-35	mask: PROG 8-93
purging files on a cartridge during re-initializa-	programs: PROG 8-92
tion: USER B-13	read/write: PROG 8-92
re-initializing a cartridge: <i>USER</i> B-12	FMP routines: <i>PROG</i> 8-1; <i>SDM</i> 10-2
records and file types: USER B-33	calling sequence and parameters: <i>PROG</i> 8-1
renaming files: USER B-36	descriptions of: PROG 8-10
scratch files: <i>USER</i> B-34	example programs: <i>PROG</i> 8-92

advanced FMP: PROG 8-94	T option: PROG 8-43
mask: PROG 8-93	U option: PROG 8-44
read/write: PROG 8-92	X option: PROG 8-44
use with DS: PROG 8-87	FmpOpenFiles: PROG 8-45
FMP tables: SDM 12-1	FmpOpenScratch: PROG 8-45
FmpAccessTime: PROG 8-15	FmpOpenTemp: PROG 8-47
FmpAppend: <i>PROG</i> 8-16	FmpOwner: <i>PROG</i> 8-48
FmpBitBucket: PROG 8-16	FmpPackSize: PROG 8-49
FmpBuildHierarch: PROG 8-17	FmpPagedDevWrite: PROG 8-49
FmpBuildName: PROG 8-18	FmpPagedWrite: PROG 8-50
FmpBuildPath: PROG 8-19	FmpPaginator: PROG 8-51
FmpCloneName: PROG 8-20	FmpParseName: PROG 8-52
FmpClose: PROG 8-21	FmpParsePath: PROG 8-53
FmpControl: PROG 8-21	FmpPosition: PROG 8-55
FmpCopy: PROG 8-22	FmpPost: PROG 8-56
A option: PROG 8-22	FmpPostEof: PROG 8-56
B option: PROG 8-22	FmpProtection: <i>PROG</i> 8-57
C option: PROG 8-22	FmpPurge: PROG 8-57
D option: PROG 8-22	FmpRawMove: PROG 8-58
N option: PROG 8-22	FmpRead: PROG 8-58
P option: PROG 8-22	FmpReadLink: <i>PROG</i> 8-60
Q option: PROG 8-22	
	FmpReadString: PROG 8-60
T option: PROG 8-22	FmpRecordCount: PROG 8-61
U option: PROG 8-22	FmpRecordLen: PROG 8-62
FmpCreateDir: PROG 8-24	FmpRename: PROG 8-63
FmpCreateTime: PROG 8-24	FmpReportError: PROG 8-64
FmpDcbPurge: PROG 8-25	FmpRewind: PROG 8-64
FmpDevice: PROG 8-25	FmpRpProgram: PROG 8-65
FmpDismount: PROG 8-26	FmpRunProgram: PROG 8-67
FmpEndMask: PROG 8-26	FmpRwBits: PROG 8-68
FmpEof: PROG 8-27	FmpSetDcbInfo: PROG 8-68
FmpError: PROG 8-28	FmpSetDirInfo: PROG 8-69
FmpExpandSize: PROG 8-28	FmpSetEof: PROG 8-70
FmpFileName: PROG 8-29	FmpSetFpos: PROG 8-70, G-1
FmpFpos: PROG 8-29, G-1	FmpSetIoOptions: PROG 8-71
FmpHierarchName: <i>PROG</i> 8-30	FmpSetOwner: <i>PROG</i> 8-72
FmpInfo: PROG 8-31	FmpSetProtection: PROG 8-72
FmpInitMask: PROG 8-31	FmpSetProtection: PROG 8-73
FmpInteractive: PROG 8-32	FmpSetWord: PROG 8-74
FmpIoOptions: PROG 8-32	FmpSetWorkingDir: PROG 8-75
FmpIoStatus: <i>PROG</i> 8-33	FmpShortName: PROG 8-75
FmpLastFileName: <i>PROG</i> 8-33	FmpSize: PROG 8-76
FmpList: PROG 8-34	FmpStandardName: PROG 8-76
FmpListX: PROG 8-35	FmpTruncate: PROG 8-77
FmpLu: PROG 8-36	FmpUdspEntry: PROG 8-78
FmpMakeSLink: PROG 8-37	FmpUdspInfo: PROG 8-78
FmpMaskName: PROG 8-37	FmpUniqueName: <i>PROG</i> 8-79
FmpMount: PROG 8-38	FmpUnPurge: PROG 8-79
FmpNextMask: PROG 8-39	FmpUpdateTime: PROG 8-80
FmpOpen: PROG 8-40	FmpWorkingDir: PROG 8-81
C option: PROG 8-42	FmpWrite: PROG 8-82
D option: PROG 8-42	FmpWriteString: PROG 8-83
E option: PROG 8-42	FO (force) command: LINK 3-10
F option: PROG 8-42	folder: MAIL 3-9, 3-11, 3-12, 4-3, 5-6-5-11, B-1
I option: PROG 8-43	adding a file: MAIL 3-19
L option: PROG 8-43	creating: MAIL 3-17
N option: PROG 8-43	listing names: MAIL 3-17
n option: PROG 8-44	saving a message to another: MAIL 4-8
Q option: PROG 8-43	switching to a different: MAIL 4-8
S option: PROG 8-43	updating the current: MAIL 4-7
r · · · · · · · · · · · · · · · · · · ·	1 6

folders	FORMT. See offline disk formatting and initializa-
converting to hierarchical (renaming): MAIL	tion
3-18	FORTRAN
creating and using: MAIL 3-16	and BASIC/1000D strings: HPIB 4-20
deleting: MAIL 3-18	automatic addressing: HPIB 4-20
hierarchical: MAIL 3-16	conversion to CDS: <i>PROG</i> 10-6
non-hierarchical: MAIL 3-16	device control: HPIB 4-12
renaming: MAIL 3-18	DO loops, converting, with VIS: <i>REL</i> 9-1
font selection, PCL: PRNT 2-53	routines callable from: <i>REL</i> 2-6
FORMA. See initialize and spare utility	secondary addressing: HPIB 4-3, 4-22
formal argument: FTN 6-11	syntax: HPIB 4-12
of a statement function: FTN 6-12	FORTRAN 4: FTN 7-16
of a subprogram: FTN 6-12	FORTRAN 4X: FTN 1-1, 6-18, 7-16, 8-1, 8-4, E-1,
formal macro parameters: MAC 5-3, 5-4, 5-7	E-3
format, printer model file: PRNT 2-61	forwarding
format a disk: SCSI 4-5	a message: <i>MAIL</i> 3-13, 4-3, 4-7
format descriptors: FTN 3-44, 4-7, 4-8	and copying messages: MAIL 5-11
format designator: FTN 3-72, 3-73	FOWN: USER 6-54
format editing commands: MAIL 3-5	examples: USER 6-55
format of routines: <i>REL</i> 3-1, 4-1, 5-1	FPACK: USER 6-57
format specifications: FTN 4-5	moving directories: <i>USER</i> 6-59
in input/output statements: FTN 4-5	moving files: <i>USER</i> 6-61
nesting of: FTN 4-22	moving subdirectories: USER 6-60
format specifier: FTN 8-6	packing process: USER 6-57
FORMAT statement: <i>FTN</i> 3-6, 3-44, 3-69, 3-72,	FPARM: <i>FTN</i> 3-70, B-16
3-73, 3-85, 4-5	FPOSN: FTN 3-64, B-14
formats for restoring files	FPOSN file: FTN B-14
CI CO for mini-cart and mag tape: <i>PRIM</i> D-4	FPOST: FTN B-13
floppies in CI format: <i>PRIM</i> D-6	FPUT: SGI 9-9, 10-8
floppies in FMGR format: <i>PRIM</i> D-5	free space: FTN 7-13
FST format for DDS, CS/80, mag tape: <i>PRIM</i>	free space table
D-2 TE for CS/90 and mag toma, PRIM D-2	See also bit map
TF for CS/80 and mag tape: PRIM D-3	on an FMGR cartridge: USER 6-67
VCP bootable for CS/80 CTD: PRIM D-3 formatted ASCII time massage ETIME: PROC	FREESPACE: FTN 5-3, 7-18 From SySoscient: PEL 6.8
formatted ASCII time message, FTIME: <i>PROG</i> 6-7	FromSySession: <i>REL</i> 6-8 FRPLS file: <i>FTN</i> 7-14
formatted record: FTN 5-1	FSB: <i>MAC</i> 3-14, B-11
formatting	FSCON: <i>USER</i> 6-67
creating system with format program: SGI 9-15	conversion process: USER 6-67
formatted input: FTN 4-1	error messages: USER 6-69
formatted output: FTN 4-3	renaming during conversion: USER 6-68
carriage control characters: FTN 4-4	requirements for conversion: USER 6-67
PRINT statement: FTN 4-3	FST. See file storage to tape utility
WRITE statement: FTN 4-3	FSTAT (retrieve system cartridge list): <i>PROG</i>
FORMC: PRIM A-3	C-12
general information: BKUP 1-5	FSYSU: FTN 5-15
list-directed: <i>FTN</i> 3-11, 5-3, 5-13, 8-7	FTIME, formatted ASCII time message: PROG
utilities: BKUP 1-5	6-7
CS/80 disk (FORMC): BKUP 1-5, 2-137	FTN4X: FTN H-3
disk (FORMF): <i>BKÚP</i> 1-5, 2-152	FTN66: <i>FTN</i> 8-1, E-3
error rate test (ERTSH): BKUP 1-5, 2-67	FTRAP: REL 5-6
initialize and spare (FORMA): <i>BKUP</i> 1-5, 2-129	full duplex, pseudo (A400 only), serial I/O drivers: DRM 2-153
offline disk formatting (FORMT): BKUP 1-5,	function: FTN 2-3, 2-5, 3-36, 6-1, 6-5
2-160	CHAR: <i>FTN</i> 2-10
VSCSI: PRIM A-2	character: FTN 6-10
formatting replacement disk: DATA B-3	generic name: FTN 6-9
FORMC: PRIM A-3	GETINTR: <i>HPIB</i> 5-6, 5-20
See also CS/80 disk formatting utility	intrinsic: FTN 3-60, 6-9, B-1
FORMF. See disk formatting utility	PPOLL: HPIB 5-6

random number generaor: FTN B-15	GetAcctInfo, access user and group accounting:
SPOLL: HPIB 5-5	REL 6-8
statement: FTN 6-8	GetBitMap: REL 12-8
subprogram: FTN 6-5	GetByte: <i>REL</i> 12-8 GetDibit: <i>REL</i> 12-9
typing: FTN 6-5 value returned: FTN 6-7, 6-10	GetFatherIdNum: <i>REL</i> 7-28
FUNCTION statement: FTN 3-46, 3-54	GETINTR function: HPIB 5-6
function subprogram: FTN 6-1	GetNibble: <i>REL</i> 12-9
functional description: DATA 2-1	GetOwnerNum: REL 6-10
functions	GetRedirection routine: <i>REL</i> 7-28
defining: USER 6-70	GetResetInfo, access/reset user accounting: <i>REL</i>
deleting: USER 6-70	6-10
exporting: USER 6-70	GetRteTime: REL 7-29
FUNCTION command: USER 6-70	GetRunString: REL 12-10
FUNCTIONS command: USER 6-72	GETSN, get session number: REL 6-11
importing: USER 6-70	GETST: FTN B-17; PROG 5-11; REL 5-9
fuse: SCSI 2-7	recover parameter string: <i>PROG</i> 7-5
FVERI: USER 6-73	GetString: REL 12-11
error messages: USER 6-76	getting help: USER 2-3
error recovery: USER 6-75	getting help for Mail/1000 commands: MAIL 3-15
fwd: MAIL 3-6, 3-13, 4-3	global assembly-time variable: MAC 4-48
	global changes: EDIT 2-24
G	See also G command, X command, U command
G	global directory: SDM 10-2
G command: <i>EDIT</i> 2-34, 3-18, 4-26	global parameter area: LINK B-4
G-type global parameters: <i>USER</i> B-5, B-51	global parameters: LINK B-4
setting: USER B-61	global register: DDM 9-1, 9-2, 9-5
gateway: MAIL 5-2, 7-1, A-4, A-7, A-8	GO (system command): FTN 3-68 GO command: GSA 2-5; USER 4-8, 6-79
GEN command: MAC 4-18, B-14	go to a specific line: EDIT 4-54
GEN instruction: DDM 1-10	GOPRV: PROG 12-1
general purpose system: SDM 1-3	Goto command: DBUG 5-19
generate microcode instructions: MAC E-2	GOTO statement: <i>FTN</i> 3-6, 3-31, 3-47, 7-11
Generate Table (GT) command: SMM 5-4 generate the system: SCSI 3-5	assigned: FTN 3-48
generating	computed: <i>FTN</i> 3-47, 8-2
a system: <i>SMM</i> 1-11, 1-12	unconditional: FTN 3-47
security tables: SMM 5-4, 5-9	GPIO/parallel interface card driver ID*50. See
serial drivers into your system: <i>DRM</i> E-1	ID*50 GPIO/parallel interface card driver
generating system common: SDM 8-2	GPNAM: REL 6-11
generating your own system: <i>PRIM</i> 2-12	GRAN: FTN B-15
generation defaults. See GEN instruction	graphics coordinate transformation (VIS): REL
generation file entries: SGI E-2	9-15
generation of system: <i>DATA</i> 4-1	greatest integer
See also system generation	(ENTIER), real: REL 3-39
generation record: SCSI 1-2, 3-4; SGI D-1	double real: REL 3-118
default: SGI D-1, D-3	real: REL 3-94
format: SGI D-1	GREP command: USER 6-80
generator, running: SGI 2-1	greply: <i>MAIL</i> 3-13, 4-3
generator control: MAC B-14	group
instructions: MAC 4-1, 4-17	accounts: USER 5-4
generator current page linking: SDM 9-4	configuration file: SMM 2-11
generator routine: MAC F-1	group configuration file: SDM 11-40
generic model file: PRNT 2-50	group ID Group Told: PEL 6.12
generic name: <i>FTN</i> 3-60, 6-9, B-1	GroupToId: <i>REL</i> 6-12 OwnerToId: <i>REL</i> 6-14
get redirection commands: <i>REL</i> 7-28	group identification: GSA 1-3
runstring option: <i>REL</i> 7-26	Group II errors: <i>PROG</i> A-1
get a character, SGET: REL 10-10	Group III errors: PROG A-4
GET bus command: HPIB 4-7	Group IV halt errors: <i>PROG</i> A-8
get session number, GETSN: REL 6-11	Group V interrupt errors: <i>PROG</i> A-9

Group VI device driver errors: PROG A 10	HEI P directory: SCI 0.14
Group VI device driver errors: <i>PROG</i> A-10 Group VIII errors: <i>PROG</i> A-11	HELP directory: <i>SGI</i> 9-14 hexadecimal constant: <i>FTN</i> 2-12, E-1
GRUMP commands	HexToInt: REL 7-29
Abort (/A): SMM 3-7	hidden: MAIL A-4, A-8
Alter Group (AL G): SMM 3-7	high-speed linking: LINK 4-3, 4-18
Alter User (AL U): SMM 3-9	high-speed operation: HPIB 2-3
Exit (EX): SMM 3-15	histogram: DBUG 6-1, 6-3
Help (HE or ?): SMM 3-16	displaying: DBUG 6-3
Kill Session (KI): SMM 3-16	plotting: DBUG 5-20
List Group (LI G): SMM 3-16	Histogram command: DBUG 5-20
List User (LI U): SMM 3-17	HL command: EDIT 4-31
New Group (NE G): SMM 3-21	HLT: MAC 3-13, B-10
New User (NE U): SMM 3-23	HLT errors: <i>PROG</i> A-8
Password (PA): SMM 3-27	HLTC: MAC B-10
Purge Group (PU G): SMM 3-27	HMSCtoRteTime: <i>REL</i> 7-29
Purge User (PU U): SMM 3-28	Hollerith: FTN H-2
Reset Group (RE G): SMM 3-29	constant: <i>FTN</i> 2-1, 2-11, 8-3, 8-5, D-8
Reset User (RE U): SMM 3-29	data: <i>FTN</i> 2-24
Run (RU): <i>SMM</i> 3-30	format: FTN D-8
Transfer (TR): SMM 3-30	home directory: <i>MAIL</i> 3-4, 5-1, 5-4, 5-7
GRUMP utility: <i>SGI</i> 11-1	horizontal pitch, PCL: PRNT 2-53
command conventions: <i>SMM</i> 3-5	horizontal search window: <i>EDIT</i> 3-18
command file example: <i>SMM</i> C-1	host reception tracking: MAIL 7-13
command summary: SMM 3-4	hours in EXEC 12: PROG 6-5
log file example: SMM C-3	how Mail/1000 works: MAIL 1-2
overview: SMM 3-1	HP 1000, single precision floating point to IEEE
running GRUMP interactively: SMM 3-2	conversion, FCHI: REL 11-2
running GRUMP with command file: SMM 3-3	HP ASCII character set: FTN 1-4
runstring: SMM 3-2	HP computer systems file copy utility (LIF): BKUF
GTL bus command: HPIB 4-6	2-219
GTL subroutine: HPIB 4-14	Calling LIF: BKUP 2-220
guidelines for using shared subroutines: SDM 8-5	CO command: BKUP 2-222
	DL Directory List command: <i>BKUP</i> 2-223
	EXit command: BKUP 2-224
Н	HElp command: BKUP 2-224
H (specifying Hollerith): FTN 2-11	INitialize command: BKUP 2-224
H command: <i>EDIT</i> 1-6, 2-20, 4-28	LIF commands: BKUP 2-220
halt errors: <i>USER</i> 8-6	LIF error handling: BKUP 2-229
	List command: BKUP 2-225
halt instruction: MAC 3-12, B-9	LL set Logical List device command: BKUP
handling messages automatically: MAIL 5-9	2-225
handshake lines: HPIB 1-6	MC Mount Cartridge command: <i>BKUP</i> 2-225
hardware environment: DATA 1-2	naming conventions: BKUP 2-219
hardware requirements: DBUG 2-1	PK Pack Cartridge command: <i>BKUP</i> 2-226
HE (Heap area) command: LINK 3-10	PUrge command: BKUP 2-226
header lines: EDIT 4-31	RN rename command: <i>BKUP</i> 2-226
headers and header fields: <i>MAIL</i> 1-3, 3-2, 3-4, 3-5,	STore command: BKUP 2-227
3-6–3-8, 3-9, 3-22, 4-9, 5-8, 6-3, 7-12, 7-13, A-5,	
B-1	SV severity command: <i>BKUP</i> 2-228 TR TRansfer control command: <i>BKUP</i> 2-228
heading: MAC 4-26	
HED: <i>MAC</i> 4-25, 4-26, B-15	HP JetDirect card: PRNT 2-2
HELLO program: GSA 1-6	HP-IB addressing: FTN E-2
help: EDIT 1-6, 2-20, 4-28, 4-94; LINK 2-4; MAIL	HP-supplied printer interfaces: <i>PRNT</i> 2-49
2-3, 3-4, 3-5, 3-8, 3-15, 4-4, 4-10, B-1	passthru interface: PRNT 2-56
Help (?) command: <i>EDIT</i> 4-94; <i>LINK</i> 3-26	remote interface: PRNT 2-57
Help (HE) command	rtestd interface: <i>PRNT</i> 2-50
GRUMP utility: SMM 3-16	HP-IB configuration rules: <i>PRIM</i> 1-6
SECTL utility: SMM 5-4	HPCRT library routines: <i>REL</i> 12-1
Help command: DBUG 2-14, 5-19	HpCrtCharMode: REL 12-11
help command: GSA 1-6, 4-3; USER 2-3	HpCrtCheckStraps: REL 7-12, 12-12
CI: USER 6-3	HpCrtCRC16 F: REL 12-13

HpCrtCRC16 S: REL 12-13	HpZBinc: REL 12-42
HpCrtGetCursor: REL 12-14	HpZBino: REL 12-42
HpCrtGetCursorXY: REL 12-15	HpZDecc: REL 12-43
HpCrtGetfield_I: REL 12-16	HpZDeco: <i>REL</i> 12-42
HpCrtGetfield_S: REL 12-17	HpZDecv: REL 12-42
HpCrtGetLine_Pos: REL 12-18	HpZDefIBuf: REL 12-43
HpCrtGetMenuItem: REL 12-19	HpZDefIString: <i>REL</i> 12-44
HpCrtHardReset: REL 12-19	HpZDefOBuf: <i>REL</i> 12-44
HpCrtLineMode: REL 12-20	HpZDicv: REL 12-44
HpCrtMenu: REL 12-20	HpZDParse: REL 12-45
HpCrtNlsMenu: REL 12-21	HpZDumpBitMap: <i>REL</i> 12-48
HpCrtNlsXMenu: REL 12-21	HpZDumpBuffer: REL 12-49
HpCrtPageMode: REL 12-22	HpZFieldDefine: REL 12-50
HpCrtParityChk: DRM 2-173; REL 12-22	HpZFmpWrite: REL 12-51
HpCrtParityGen: DRM 2-173; REL 12-23	
	HpZGetNextChar: REL 12-51
HpCrtQTDPort7: REL 12-23	HpZGetNextStrDsc: REL 12-52
HpCrtReadChar: DRM 2-150; REL 12-24	HpZGetNextToken: <i>REL</i> 12-52
HpCrtReadPage: REL 12-25	HpZGetNumB2: REL 12-53
HpCrtRestorePort: REL 12-26	HpZGetNumB4: REL 12-53
HpCrtSavePort: REL 12-26	HpZGetNumD2: REL 12-53
HpCrtSchedProg: REL 12-27	HpZGetNumD4: REL 12-53
HpCrtSchedProg S: REL 12-27	HpZGetNumO2: REL 12-53
HpCrtScreenSize: REL 12-27	HpZGetNumO4: REL 12-53
HpCrtSendChar: REL 12-28	HpZGetNumStrDsc: REL 12-54
HpCrtSSRCDriver: REL 12-29	HpZGetNumX: REL 12-55
HpCrtSSRCDriver?: REL 12-29	HpZGetRemStrDsc: REL 12-56
HpCrtStatus: REL 12-30	HpZHexc: REL 12-56
HpCrtStripChar: REL 12-31	HpZHexi: REL 12-57
HpCrtStripCntrls: REL 12-31	HpZHexo: <i>REL</i> 12-58
HpCrtXMenu: REL 12-32	HpZIBufRemain: <i>REL</i> 12-58
HpCrtXReadChar: REL 12-32	HpZIBufReset: REL 12-58
HpCrtXSendChar: REL 12-33	HpZIBufUsed: REL 12-58
HpGetTZ, get system time-zone offset: <i>PROG</i> 6-7	HpZIBufUseStrDsc: REL 12-59
HPHPHP file: <i>PRIM</i> D-1	HpZInsertAtFront: <i>REL</i> 12-60
HP-IB	HpZmbt: <i>REL</i> 12-60
interface card driver, ID*37. See ID*37 HP-IB	HpZMesss: <i>REL</i> 12-61
interface card driver	HpZMoveString: <i>REL</i> 12-62
line printer driver, DD*12. See DD*12 line	HpZmvc: REL 12-62
printer driver	HpZmvs: REL 12-63
magnetic tape driver	HpZmvs_Control: REL 12-64
DD*23. See DD*23 magnetic tape driver	HpZmvs_Escape: REL 12-65
DD*24. See DD*24 magnetic tape driver	HpZmvs_Large: REL 12-65
printer driver, DDC12. See DDC12 printer driv-	HpZNIsMvs: REL 12-66
· · · · · · · · · · · · · · · · · · ·	
Uni avarCasaNama, DEL 12 22	HpZNlsSubset: REL 12-66
HpLowerCaseName: REL 12-33	HpZOBufReset: REL 12-66
HPMDM: DRM H-2	HpZOBufUsed: REL 12-67
hpnp_passthru model file: PRNT 2-60	HpZOBufUseStrDsc: REL 12-67
hpnp_pcl model file: <i>PRNT</i> 2-59	HpZOctc: <i>REL</i> 12-68
HpReadCmndo: <i>REL</i> 7-9	HpZOctd: <i>REL</i> 12-68
HpRte6: <i>REL</i> 12-34	HpZOcto: <i>REL</i> 12-69
HpRteA: REL 12-34	HpZOctv: <i>REL</i> 12-69
HpStartCmndo: REL 7-8	HpZPadToCount: REL 12-70
HpStopCmndo: REL 7-10	HpZPadToPosition: <i>REL</i> 12-70
HpZ, mini-formatter: <i>REL</i> 12-35	HpZParse: REL 12-71
HpZAscii64: REL 12-38	HpZPeekNextChar: REL 12-51
HpZAscii95: <i>REL</i> 12-38	HpZPlural: REL 12-73
HpZAsciiHpEnh: REL 12-39	HpZPopObuf: REL 12-75
HpZAsciiMne3: REL 12-40	HpZPrintPort: REL 12-74
HpZAsciiMne4: REL 12-41	HpZPushObuf: REL 12-75
HpZBackSpaceIbuf: REL 12-41	HpZQandA: <i>REL</i> 12-76

HpZReScan: REL 12-76	IBITS: FTN B-3, B-10, E-1
HpZRomanNumeral: REL 12-77	IBSET: <i>FTN</i> B-3, B-10, E-1
HpZsbt: REL 12-78	IC option: EDIT 3-26
HpZStripBlanks: REL 12-78	ICHÂR: FTN B-4, B-5, B-9, E-3
HpZUdeco: REL 12-78	ICOMP, complementary command array: <i>DRM</i>
HpZUdecv: REL 12-79	2-84
HpZWriteExec14: REL 12-79	ID
HpZWriteLU: REL 12-79	segment: PROG 8-65; SDM 1-8, 11-2; USER
HpZWriteToString: REL 12-80	4-2, 4-3, 4-5, 4-11
HpZWriteXLU: REL 12-79	address, retrieving (EXEC 29): <i>PROG</i> 5-16
HpZYesOrNo: REL 12-80	allocating: SGI 7-2
hyperbolic tangent double real: <i>REL</i> 3-115	command (ID): SGI 7-9
extended real: REL 3-38	displaying prototypes: <i>USER</i> 6-199 extensions: <i>SDM</i> 11-10
real: REL 3-61	format: SDM 11-2
ical. ALL 5 01	table, use of: SDM 11-36
	ID (SCSI card) display: <i>SCSI</i> 4-8, 4-12
I	ID command: <i>SGI</i> 7-9
I hit. DDM 2.12	ID segment, deallocate, IDCLR: <i>REL</i> 7-30
I bit: DDM 2-12	ID.43: SDM 5-5
I command: EDIT 4-33	drivers: SDM 5-5
I compiler option: FTN 2-11, 2-21, B-1, B-11 I option: MAC E-2	ID*00: <i>DRM</i> 2-145, J-66
I/O	ID*01: <i>DRM</i> 2-145, J-66
and swapping: PROG 3-2	modem capabilities: DRM J-78
buffering: SDM 2-9	ID*27 disk interface driver: <i>DRM</i> 2-92
buffering requirements: SDM 2-9	control request: DRM 2-93
command: USER 2-8	error information: <i>DRM</i> 2-98
completion: SDM 1-14	extended status: DRM 2-95
configuration, displaying: USER 2-8, 6-90	error codes from DVT16: DRM 2-96
control blocks: SDM 11-16	status codes from DVT18: DRM 2-97
control with EXEC: PROG 3-1	parameter area: DRM 2-95
devices	read/write request: DRM 2-92
changing attributes: USER 2-11	A- and B-Register contents: <i>DRM</i> 2-93
controlling: USER 2-10	BUFR and BUFLN: DRM 2-92
referenced as files: USER 3-2	CNTWD read request example: <i>DRM</i> 2-93
driver: SDM 1-10	control word CNTWD: DRM 2-92
drivers: <i>SDM</i> 1-12, 7-1	TRACK and SECTOR: DRM 2-92
errors: PROG A-7; USER A-2	status request: DRM 2-94
extended logical unit EXEC (XLUEX): PROG	control word CNTWD: DRM 2-94 STAT1 and STAT2 parameters. DRM 2-94
3-10 list CDM 1 1	STAT1 and STAT2 parameters: <i>DRM</i> 2-94 STAT3 and STAT4 parameters: <i>DRM</i> 2-95
list: SDM 1-1	ID*36 PROM storage module driver: <i>DRM</i> 2-101
management: <i>SDM</i> 1-7, 1-11 request: <i>SDM</i> 1-11, 1-13	control request: DRM 2-102
conventions: DRM 1-1	error information: <i>DRM</i> 2-104
requests nonbuffered: <i>PROG</i> 3-1	extended status: DRM 2-103
suspend: SDM 1-14	parameter area: DRM 2-104
transfers to/from the VMA/EMA: <i>PROG</i> 9-21,	read/write request: DRM 2-101
9-24	A- and B-Register contents: <i>DRM</i> 2-102
without wait: SDM 1-13	BUFR and BUFLN: DRM 2-101
advantages: PROG 4-2	control word CNTWD: DRM 2-101
definition: PROG 4-1	example read request: DRM 2-102
I/O driver: <i>FTN</i> 3-75, 3-86, 5-6	TRACK and SECTOR: DRM 2-101
I/O specifiers: HPIB 4-2, 4-13	status reporting: <i>DRM</i> 2-102
I/O suspension during disk verify: DATA 3-14	control word CNTWD: DRM 2-102
I/O under program control: DDM 9-4	STAT1 through STAT4 parameters: <i>DRM</i>
IABS: FTN B-2; REL 3-43	2-103
IABS entry (call-by-name), %ABS: REL 3-146	ID*37 HP-IB interface card driver: <i>DRM</i> 2-105
IAND: FTN B-2, E-1; REL 3-44	control request, auto-addressed: <i>DRM</i> 2-109
IBCLR: FTN B-3, B-8, E-1 IREPP subrouting: HPIR 6.1	function code 00: selected dev clear (SDC): DRM 2-110
IBERR subroutine: <i>HPIB</i> 6-1	DIWI 4-11U

device addresses: DRM 2-115 function code 06B: device dynamic status: DRM 2-110 PRAM3 and PRAM4 control buffer descripfunction code 16B: set REN true: DRM 2-111 tors: DRM 2-116 function code 17B: go to local (GTL): DRM status request: DRM 2-120 control word CNTWD: DRM 2-120 function code 20B: SRQ prog scheduling: driver parameter area: DRM 2-120 DRM 2-111 STAT1 and STAT2 parameters: *DRM* 2-120 function code 21B: disable SRQ prog schedul-STAT3 and STAT4 parameters: *DRM* 2-120 ing: DRM 2-112 universal commands: DRM 2-121 function code 22B: set intfc driver timeout: ID*50 GPIO/parallel interface card driver DRM 2-112 control requests: DRM 2-129 function code 23B: parallel poll assignment: control word CNTWD: DRM 2-129 DRM 2-112 function code 00: clear and reset card: DRM function code 24B: set device address: DRM 2-129 2-112 function code 06B: dynamic status of card: function code 27B: group execute trigger DRM 2-129 (GET): *DRM* 2-113 function code 20B: enable program schedulfunction code 30B: disable SRQ interrupts: ing: DRM 2-130 DRM 2-113 function code 21B: disable program schedulfunction code 31B: restore SRQ interrupts: ing: *DRM* 2-130 DRM 2-113 function code 23B: enable/disable async interfunction code 40B: enable parallel poll schedrupts: *DRM* 2-130 uling: DRM 2-114 function code 24B: set PIC control lines: function code 41B: disable parallel poll sched-DRM 2-131 uling: *DRM* 2-114 function code 40B: configure card control control request, direct I/O: DRM 2-116 word: DRM 2-131 control word CNTWD: DRM 2-116 parallel interface card control register: DRM function code 00: clear and reset device: 2-134 DRM 2-117 parallel interface card status: DRM 2-136 function code 06B: dynamic bus status: DRM program scheduling: DRM 2-137 read/write requests: DRM 2-128 function code 16B: set REN true: DRM 2-118 BUFR and BUFLN: DRM 2-128 function code 17B: go to local (GTL): DRM control word CNTWD: DRM 2-128 2-118 PRAM1 optional parameter: DRM 2-128 function code 23B: parallel poll configure: status reporting: DRM 2-133 DRM 2-118 control word CNTWD: DRM 2-133 function code 25B: local lockout (LLO): driver parameter area: DRM 2-134 DRM 2-119 STAT1 through STAT4 parameters: *DRM* function code 27B: group execute trigger: DRM 2-119 ID*52 PIC intercomputer comm driver: DRM function code 40B: enable parallel poll sched-2-138 uling: *DRM* 2-119 control requests: DRM 2-139 function code 41B: disable parallel poll schedcontrol word CNTWD: DRM 2-139 uling: *DRM* 2-119 function code 00: clear and reset card: DRM function code 51B: bailout (ABORT): DRM 2-119 function code 01B: send EOF: DRM 2-139 PRAM3 and PRAM4 control buffer descripfunction code 06B: return dynamic status: tors: DRM 2-119 DRM 2-140 end-of-record processing: DRM 2-107 function code 11B: top-of-form EOF: DRM extended status: DRM 2-121 2 - 140operating modes: DRM 2-106 function code 20B: enable program schedulauto-addressing: DRM 2-106 ing: DRM 2-141 direct I/O: *DRM* 2-106 read/write request, auto-addressed: DRM 2-108 function code 22B: set timeout: DRM 2-141 function code 45B: use level mode DVCMD: BUFR and BUFLN: DRM 2-109 DRM 2-141 control word CNTWD: DRM 2-108 PRAM3 – secondary address: DRM 2-109 function code 46B: use pulse mode DVCMD: read/write requests, direct I/O: DRM 2-114 DRM 2-141 BUFR and BUFLN: DRM 2-115 function codes 21B/23B: disable prog schedulcontrol word CNTWD: DRM 2-115 ing: DRM 2-141

parallel interface card control register: DRM	read/write request: DRM 2-123
2-143	A- and B-Register contents: <i>DRM</i> 2-124
parallel interface card status: DRM 2-144	BUFR and BUFLN: DRM 2-123
read/write requests: DRM 2-138	CNTWD read request example: <i>DRM</i> 2-124
BUFR and BUFLN, WBUF and WBUFL:	control word CNTWD: DRM 2-123
DRM 2-138	TRACK and SECTOR: DRM 2-123
control word CNTWD: DRM 2-138	status request: DRM 2-126
PRAM1 optional parameter: DRM 2-138	control word CNTWD: DRM 2-126
status reporting: <i>DRM</i> 2-142	STAT1 and STAT2 parameters: <i>DRM</i> 2-126
control word CNTWD: DRM 2-142	STAT3 and STAT4 parameters: <i>DRM</i> 2-126
driver parameter area: DRM 2-142	IdToGroup: REL 6-12
STAT1 through STAT4 parameters: <i>DRM</i>	IdToOwner: REL 6-13
2-142	IDZ00 interface driver: <i>DRM</i> 2-147
ID100 interface driver: <i>DRM</i> 2-147	IEC 625-1 (equivalent): HPIB 2-8
ID101 interface driver: DRM 2-147	IEEE standard format
ID400 interface driver: DRM 2-147	double precision to HP 1000 conversion,
firmware revision code: <i>DRM</i> 2-164	DFCIH: REL 11-2
ID800 interface driver: <i>DRM</i> 2-147	single precision to HP 1000 conversion, FCIH:
baud rate generator: DRM 2-147	REL 11-3
BRG ranges (default): DRM 2-175	IEEE-488-1978: <i>HPIB</i> 1-4
firmware revision code: <i>DRM</i> 2-1/3	IEOR: <i>FTN</i> E-1
ID801 interface driver: DRM 2-147	IEXOR: FTN B-2
IdAddToName, convert segment address to pro-	IF (conditional execution) command: LINK 3-11
gram name and LU number: <i>REL</i> 7-30	IF (system macro): MAC L-6
IdAddToNumber, convert segment address to seg-	If command: DBUG 5-20
ment number: REL 7-30	IF directive: FTN 7-20
IDCBS (retireve number of DCB words): <i>PROG</i>	IF statement: FTN 3-49
C-13	arithmetic: FTN 3-49, 8-8
IDCLR: REL 7-30	block: FTN 3-50
identification, user.group: GSA 1-3	logical: FTN 3-50
identifying programs: <i>USER</i> 4-2, 5-8	IF-THEN-ELSE-FI: <i>USER</i> 1-5, 2-24, 6-83
IDGET, retrieve ID segment address: <i>PROG</i> 7-14	IFBRK, break test: <i>PROG</i> 7-11
IDIM: FTN B-2; REL 3-45	IFC bus command: HPIB 4-10
IDINFO, return ID segment information: <i>PROG</i>	IFC bus management line: HPIB 1-7
7-15	IFDEF/IFNDEF directive: FTN 7-20
IDINT: <i>FTN</i> B-5; <i>REL</i> 3-46	IFIX: FTN B-5, B-8; REL 3-47
IDM00: <i>DRM</i> 2-145, J-39	IFIX entry (call-by-name), %FIX: REL 3-151
for HP 12040A MUX: <i>DRM</i> J-27	IFN: <i>MAC</i> B-18, J-3
IDNINT: FTN B-5	IFT: <i>SDM</i> 1-8, 11-14
IdNumberToAdd, convert segment number to seg-	See also interface table
ment address: REL 7-31	command: SGI 6-10
IDP31	example IFT entry: SGI 6-12
changing disk states automatically: DATA 2-2	parameter defaults: SGI 6-8
error returns: DATA A-11	IFT (interface table): SDM 9-2
functions: DATA 2-1	IFT space too small: HPIB 6-4
initial pairing physical requirements: DATA 2-3	IFT specification at system generation: <i>DATA</i> 4-3
interface provided: <i>DATA</i> 2-1	IFT/DVT, worksheet: SGI 6-5
internal disk states: DATA 2-1	IFTTY, interactive LU test: <i>PROG</i> 7-12
internal status table in memory: DATA 2-3	IFX: MAC J-3
module: DATA 1-2	IFZ: <i>MAC</i> B-18
relocation during system generation: <i>DATA</i> 4-2	IGET: <i>REL</i> 5-10
IDQ35 SCSI interface driver: <i>DRM</i> 2-99	IGLOBAL: <i>MAC</i> 4-48, 4-50, B-16
DVT status: <i>DRM</i> 2-99	ignore: MAIL 5-8
DVT transformation: <i>DRM</i> 2-99	illegal interrupt: HPIB 6-3
IDR27 RAM disk interface driver: DRM 2-123	illegal requests: DDM 5-4
configuration request: DRM 2-125	ILOCAL: MAC 4-48, 4-50, B-16
control request: DRM 2-124	IMAG: FTN B-2
deallocate request: DRM 2-125	imaginary part, extraction of: REL 3-3
extended status: DRM 2-127	implementation notes: MAC I-1
parameter area: DRM 2-127	IMPLICIT NONE statement: FTN 3-54, A-2, E-1
-	, , , , , , , , , , , , , , , , , , ,

IMPLICIT statement: <i>FTN</i> 2-3, 2-6, 2-7, 3-53, 6-9	byte/index address: BKUP 2-132
implied DO loop: <i>FTN</i> 3-25, 3-27, E-3	calling FORMA: BKUP 2-131
in input/output statement: FTN 3-25	converting from FORMF to FORMA: BKUP
in DATA statement: FTN 3-27	2-133
implied typing: FTN 2-3	definitions: BKUP 2-129
imported function: USER 6-70	disk error decoding: BKUP 2-136
imported variable: <i>USER</i> 6-6, 6-171 IN command: <i>SGI</i> 10-8; <i>USER</i> 3-38, 6-85	error handling: <i>BKUP</i> 2-134 error messages: <i>BKUP</i> 2-134
INA: <i>MAC</i> 3-8, B-6	ERTSH works with FORMA: <i>BKUP</i> 2-129,
INAMR routine: <i>PROG</i> C-13; <i>REL</i> 5-11	2-133
INB: <i>MAC</i> 3-8, B-6	FORMA commands: <i>BKUP</i> 2-131
inbox: MAIL 2-1-2-3, 3-4, 3-12, 3-16, 3-18, 4-1,	help command: BKUP 2-131
5-10, 7-4	IM Initialize Media command: BKUP 2-131
INCLUDE: MAC B-14	installing a new internal hard disk: BKUP 2-133
Include command: DBUG 5-21	SS command options: BKUP 2-133
INCLUDE directive: FTN 7-22	SS Spare Sector command: BKUP 2-132
include file: FTN 7-22	typical track format: BKUP 2-130
INCLUDE statement: <i>FTN</i> 3-55, E-1; <i>MAC</i> 1-13,	initializing
4-15, 5-1 inclusive OR entry	a cartridge in FMGR: <i>USER</i> B-11 and testing a new disk: <i>BKUP</i> 2-75
(call-by-name), %OR: REL 3-159	BOOTEX, using INSTL: USER 6-86
integer: REL 3-51	disk volume, IN command: USER 6-85
logical: REL 3-49	disk volumes: USER 3-38
inconsistent states, causes: <i>DATA</i> 4-19, A-9	hard disks: BKUP 1-7
increasing, free space on disk: USER 6-57	multiuser account system: SMM 2-13
increment double integer: REL 4-8	Security/1000: <i>SMM</i> 4-18, 5-5
(and skip if zero): <i>REL</i> 4-9	spool system: <i>PROG</i> 11-4
increment parameters other than one (VIS): <i>REL</i>	initializing a disk: SCSI 4-5
9-8 IND E. REL 5-14	initializing character strings: FTN 2-10
IND.E: <i>REL</i> 5-14 indefinite (@) character: <i>EDIT</i> 2-33, 3-18, 5-2,	INPRS, inverse parse buffer conversion: <i>PROG</i> 7-8
5-15	input
indefinite character option: <i>EDIT</i> 3-26	list-directed: FTN 4-23
indenting: FTN 1-5	unformated: FTN 4-28
INDEX: <i>FTN</i> B-4, B-9, E-3	input buffer, read: REL 5-18
index register instructions: MAC 3-9, B-7	input editing: DRM 2-151
indexing libraries: LINK 1-2, 4-3	input/output: FTN 4-1, 5-1, 8-3, 8-6, 8-7, 8-9
indirection addressing indicator: <i>MAC</i> 2-13, 3-1,	buffer: FTN B-12
J-1	direct access: FTN 8-8
inetd: MAIL A-11	formatted: FTN 4-1 function: FTN 6-10
inetd program: <i>PRNT</i> 2-37 information	instructions: MAC 3-12, B-9
display. See displaying information	list: FTN 3-25
messages: EDIT 3-45, A-1	list-directed: FTN 4-23
information display: SCSI 4-6, 4-10	overflow and halt: MAC B-9
information messages: EDIT 1-15	statements: <i>FTN</i> 3-4, 3-25
See also error messages	unformatted: FTN 4-28
information type identifier: GSA 3-3	inputting a file: EDIT 2-9
initial disk pairing relationship: <i>DATA</i> 3-8	INQUIRE, statement specifiers: FTN 3-57
initial entry: DDM 2-14	inquire control character: <i>EDIT</i> 3-26
initial line: FTN 1-4	INQUIRE statement: FTN 3-56, 5-5, 5-11
initial offset, EXEC 12: <i>PROG</i> 6-2 initial point: <i>FTN</i> 5-2	specifications: FTN 5-12 specifiers: FTN 3-56
initialization, macro call sequences: <i>MAC</i> N-2	INQUIRE-by-file statement: FTN 5-12
initialization phase: SGI 3-1	INQUIRE-by-unit statement: FTN 5-12
Initialize (IN) command: SMM 5-5	inserting
initialize à square matrix (VIS): REL 9-11	a comment: EDIT 4-100
initialize an array in a certain order (VIS): REL	characters: EDIT 2-12
9-12	characters at a specific column: <i>EDIT</i> 5-22
initialize and spare utility (FORMA): <i>BKUP</i> 2-129	lines: EDIT 2-12

text: EDIT 2-12, 2-28, 3-33, 4-33	interactive LINK commands: LINK 3-1
text in line character edit mode: EDIT 3-27	interactive operation: EDIT 1-10, 3-50
inserting MACLIB in source code: MAC E-12	interface
installation: FTN 1-5; HPIB 2-9	card, characters: <i>DDM</i> 2-14
LP spool system software: <i>PRNT</i> 2-38	driver: SDM 1-12
mklp.cmd file: PRNT 2-38	generation tables: SGI E-1
mirrored disk system: DATA 4-10	purpose: DDM 1-3
installation considerations	drivers: DRM 2-1
DS file transparency: <i>MAIL</i> A-1	lock: DDM 3-6
networking: MAIL A-1	table: <i>SDM</i> 1-8, 11-14
RTE configuration: MAIL A-2	table (IFT): SGI 6-1
SMTP: MAIL A-2	type: <i>DDM</i> 2-14
installing	interface card
a disk-based system: SGI 9-1	HP 12009A: <i>HPIB</i> 2-3
a memory-based system: SGI 10-1	address: HPIB 2-3
a system: <i>SMM</i> 1-11, 1-13	select code: HPIB 2-3
bootable systems and diagnostics: <i>USER</i> 6-62	HP 59310B: <i>HPIB</i> 2-1
DS transparency software: SGI 9-25	address: HPIB 2-1
LINDX: LINK 5-1	interface table: DDM 2-13
LINK: LINK 5-1	extension: DDM 2-15
loading RTE-A programs: SGI 8-2	format of: DDM 2-13
localizable programs: SGI K-1	interface table (IFT): DRM 1-2; HPIB 3-1
optional subsystems: SGI 9-23	interface table statement(s): SCSI 3-4
Security/1000: SMM 4-17	interleave factor, calculation: BKUP 1-8
session systems, localizable programs: <i>SGI</i> K-5 system, snapshot, and command files: <i>SGI</i> 9-8	interleaving disk I/O requests: <i>DATA</i> 2-2 internal file: <i>FTN</i> 5-2, 5-14
installing Macro/1000: MAC E-11	internal progams, M1KSS: MAIL 7-14
installing Mail/1000: <i>MAIL</i> 7-1, A-1, A-3	internal programs, SMTP: MAIL 7-14
installing Mail/1000 updates: MAIL A-11	internal routines: <i>REL</i> 10-31
installing Primary System: <i>PRIM</i> 2-1	internal to normal format conversion, .FMUP:
summary: PRIM 2-3	REL 5-32
installmail: MAIL A-4	interrupt and device status
INSTL: <i>SDM</i> 4-1; <i>SGI</i> 9-9; <i>USER</i> 6-86	BSTAT subroutine: HPIB 5-5
error and warning messages: DATA A-8	ENABLE INTR statement: HPIB 5-3
error messages: USER 6-89	GETINTR function: HPIB 5-6
mirrored disk system: DATA 4-10	ON INTR statement: HPIB 5-3
INT: FTN B-5, B-8; REL 3-48	PPOLL CONFIGURE statement: HPIB 5-6
INT command: SGI 6-19	PPOLL subroutine: HPIB 5-4
INT entry (call-by-name), %NT: REL 3-158	PPOLL UNCONFIGURE statement: HPIB 5-6
integer: FTN 2-3, E-2	PPSCH subroutine: HPIB 5-4
comparison: MAC 4-61	PPSN subroutine: HPIB 5-4
constant: FTN 2-6	PSTAT subroutine: HPIB 5-8
data type: FTN 2-6	SPOLL statement: <i>HPIB</i> 5-5
format: FTN D-1	SRQ subroutine: <i>HPIB</i> 5-2
format descriptors: FTN 4-10	SRQSN subroutine: <i>HPIB</i> 5-3
numbers: MAC 4-37	STATS subroutine: <i>HPIB</i> 5-5
statement: FTN 2-6	interrupt priority: SCSI 2-7, 2-11
integer inclusive OR: <i>REL</i> 3-51	interrupt table: <i>DDM</i> 2-1; <i>SDM</i> 1-8, 1-12, 11-20
INTEGER statement: FTN 2-6, 3-83	format of: DDM 2-15
integer to ASCII conversion	trap cells: SDM 11-20
IntToDecimal: REL 7-32	interrupts
IntToDecimalr: REL 7-32	I/O: <i>SDM</i> 9-2
integer to octal conversion	trap cells: SDM 9-2
IntToOctal: REL 7-34	intrinsic function: FTN 2-4, 3-60, 6-1, 6-9, 6-11,
IntToOctalr: REL 7-34	7-12, 8-3, B-1
INTEGER*2 statement: <i>FTN</i> 2-6, 3-83, D-1	in EXTERNAL statement: FTN 3-43
INTEGER*4 statement: <i>FTN</i> 2-6, 3-83, D-2	intrinsic functions, ANSI 77: FTN 2-4
integrated disk drives	INTRINSIC statement: FTN 3-60, 8-3, E-3
248x Microsystems: SGI C-25	introduction to Mail/1000: MAIL 1-1
Model 6: <i>SGI</i> C-22	IntString: REL 7-31

IntToDecimal, integer to ASCII conversion: <i>REL</i> 7-32	KCVT binary to ASCII conversion: <i>PROG</i> 7-11 keeping messages in the inbox: <i>MAIL</i> 3-12
IntToDecimalr, integer to ASCII conversion: REL	KEYNUM
7-32 IntTallow, <i>BEL</i> 7-23	Class I/O rethread request: PROG 4-25
IntToHex: REL 7-33 IntToHexR: REL 7-33	EXEC 17: <i>PROG</i> 4-11 EXEC 18: <i>PROG</i> 4-11
IntToOctal, integer to octal conversion: <i>REL</i> 7-34	EXEC 18: 1 ROG 4-11 EXEC 19: PROG 4-22
IntToOctalr, integer to octal conversion: <i>REL</i> 7-34	EXEC 20: PROG 4-11
invalid disk physical disconnection: <i>DATA</i> B-1	KEYWD parameter: <i>DRM</i> 1-8, 1-15
invalid file name examples: GSA 3-3	keywords: FTN 2-2
inverse tangent, double real: REL 3-63	compiler directive: FTN 2-2
invocation of the compiler: FTN 7-3	statement: FTN 2-2
invoking OLDRE: MAC E-2	KHAR
InvSeconds: REL 7-35	character manipulators: <i>PROG</i> 7-17
IO command: GSA 2-3; USER 1-5, 6-90 IOCNT subroutine: HPIB 4-23	get next character: PROG 7-18 Kill (K) command: FDIT 2-20
IOMOD: SDM 5-6	Kill (K) command: <i>EDIT</i> 2-29 kill lines: <i>EDIT</i> 4-35
IOR: FTN B-2, E-1; MAC 3-2, B-2; REL 3-49	Kill Session (KI) command: SMM 3-16
IORQ: SDM 5-6	kill trailing blanks: <i>EDIT</i> 4-8
IOSTAT: FTN 3-11, 3-14, 3-35, 3-56, 3-61, 3-73,	Kill Variable command: <i>DBUG</i> 5-22
3-78, 3-85, 8-7, A-23	KILLSES utility: SMM 2-5, 3-33
IRANP: FTN B-15	calling KILLSES: SMM 3-33
IS command: USER 6-95	examples: SMM 3-34
ISET: <i>MAC</i> 4-50, B-16	loading: SMM 3-33
ISHFT: FTN B-3, B-9, E-1	protection: SMM 3-33
ISHFTC: FTN B-3, E-1 ISIGN: FTN B-2; REL 3-50	return values: <i>SMM</i> 3-33 KillTimer: <i>PROG</i> 13-27
ISIGN entry (call-by-name), %SIGN: REL 3-163	KTEST command: USER 6-96
ISSR: REL 5-15	Kx command: <i>EDIT</i> 2-23, 4-38
ISSW: FTN B-7, B-9, E-3; REL 5-16	121 Communa 2211 2 20, 1 00
ISSW entry (call-by-name), %SSW: REL 5-43	
ISTAT: FTN B-11	L
ISX: <i>MAC</i> 3-9, B-8	L bit: <i>DDM</i> 2-11, 6-2, 7-5
ISY: MAC 3-9, B-8	L command: <i>EDIT</i> 2-22, 3-6, 3-46, 4-40
ISZ: MAC 3-2, B-2	append (+) option: EDIT 4-41
ITLOG: <i>FTN</i> 4-28, B-11 ITYPE: <i>FTN</i> B-13	LN version: <i>EDIT</i> 4-40
IXGET: REL 5-10	LU version: EDIT 4-40
IXOR: FTN B-2, E-3; REL 3-51	Loption: MAC E-1
, -,	L2 norm: <i>REL</i> 8-17 LABEL: <i>MAC</i> B-17
1	label: FTN 1-5, 3-1, 3-18, 3-23, 3-29, 3-76
J	LABEL command: <i>MAC</i> M-8
J command: EDIT 4-34	label field: <i>MAC</i> 2-1, 2-4, 5-4, 5-7, 5-9
J compiler option: FTN 2-6, B-1, B-11	LABEL statement: MAC M-13
JLA: MAC 3-10, B-8	labeled, common, commands: SGI 7-13
JLB: MAC 3-10, B-8	labeled common block: FTN 6-1
JLY: <i>MAC</i> 3-10, B-8 JMP: <i>MAC</i> 3-2, B-2	labeled common relocatable space: MAC 1-11
joining files: <i>EDIT</i> 2-30, 4-49	labeled DO loop: FTN 3-23, 3-24, 3-30
joining lines	labeled program common: <i>SDM</i> 8-1 labeled system common: <i>SDM</i> 8-1
line mode: EDIT 4-34	LAE: MAC 3-5, B-4
screen mode: <i>EDIT</i> 3-38, 4-62	language, identity codes: DRM 2-15
JPY: <i>MAC</i> 3-10, B-8	language ID numbers, localizable programs: SGI
JRS: <i>MAC</i> 3-15, B-12	K-2
JSB: MAC 3-2, B-2	language instruction set: REL 2-6
JSCOM, substring compare: <i>REL</i> 10-7	language message address table: SDM 11-45
	large EMA/VMA model: PROG 9-14
K	large programs: <i>SDM</i> 1-4 largest value
K command: EDIT 2-23, 2-29, 3-6, 4-35	DVMAX (double precision): <i>REL</i> 8-20
- /	(iii ii i

DWMAX (EMA double precision): REL 8-20	indexing: LINK 1-2
VMAX (single precision): <i>REL</i> 8-20	of relocatables, forming: USER 6-109
WMAX (EMA single precision): <i>REL</i> 8-20	library \$SYSA (dummy): SDM 5-3
largest value (absolute)	library creation: MAC E-1
DVMAB (double precision): REL 8-20	library function: FTN B-1
DWMAB (EMA double precision): REL 8-20	library interface functions: FTN B-11
VMAB (single precision): REL 8-20	library routine names: FTN 7-10
WMAB (EMA single precision): REL 8-20	library subroutine error messages: FTN A-19
LastMatch: REL 7-35	LIF: USER 1-1
LAX: <i>MAC</i> 3-10, B-7	See also HP Computer Systems File Copy
LAY: <i>MAC</i> 3-10, B-7	LIMEM: SDM 2-5
LB command: SGI 7-12	calls: PROG 2-13
LBD: <i>MAC</i> 3-2	details: PROG 2-14
LBE: <i>MAC</i> 3-5, B-4	find memory limits: <i>PROG</i> 2-13
LBF: MAC B-12	limiting criteria: MAIL 4-8, 4-9, 5-1
LBT: MAC 3-4, B-3	LINDX
LBX: MAC 3-10, B-7	installing: LINK 5-1
LBY: MAC 3-10, B-7	runstring: LINK 4-3
LC (labeled system command) command: LINK	line: FTN 1-4
3-11	break: <i>EDIT</i> 3-37, 4-62
LCALL: MAC N-7	character edits: EDIT 3-31
LDA: MAC 3-2, B-2	feed control character: <i>EDIT</i> 3-26
LDB: <i>MAC</i> B-2	
	header: EDIT 4-31
LDX: MAC 3-9, B-7	join: EDIT 3-38, 4-34, 4-62
LDY: <i>MAC</i> 3-9, B-7	length: EDIT 3-3, 3-13, 3-42, 4-43
LE command: EDIT 4-43	length option: EDIT 3-26
LE option: EDIT 3-26	marks: <i>EDIT</i> 2-23, 2-28, 3-15
leading slash, directory identifier: GSA 3-5	number: EDIT 2-21, 2-24, 2-28
LeapYear: REL 7-35	number in file: EDIT 4-44
learning exercises: EDIT 5-25	range: <i>EDIT</i> 2-28, B-3
leaving messages in the inbox: MAIL 5-10	range specification: EDIT 2-28, 2-31, 3-12
LED (Light Emitting Diode) error patterns: SCSI	specification: <i>EDIT</i> 2-22, 3-13, 3-15, B-2
2-10, 4-2, 7-2	specification offset: <i>EDIT</i> 3-15
LEN: <i>FTN</i> B-4, E-3	line count: USER 6-192
length attribute: MAC 4-55	line mode: <i>EDIT</i> 1-10; <i>MAIL</i> 2-4, 4-1, 4-3, 5-1,
LENTRIES command: SGI 4-5	5-5, 5-12
level 1 routines, definition: <i>PROG</i> A-3	breaking lines: EDIT 3-33
level 2 routines, definition: <i>PROG</i> A-3	character editing: <i>EDIT</i> 3-31, 4-11, 4-55, 4-56
level 3: SDM 8-5	command syntax: MAIL 3-1
level 3 routines, definition: <i>PROG</i> A-3	commands: EDIT 2-38
level 4 routines, definition: <i>PROG</i> A-3	commands compared with visual mode: MAIL
LFA: MAC 3-15, B-12	4-3
LFB: MAC 3-15	commands from screen mode: EDIT 2-18, 2-20,
LGBUF: FTN 4-8, 4-28, 5-1, B-12	3-36
LGE: FTN B-4, E-3	control commands: EDIT 3-31
LGT: FTN B-4, E-3	deleting text: EDIT 3-33
LI (library) command: LINK 3-12	editing: <i>EDIT</i> 1-2, 1-10, 3-31
LI command: <i>EDIT</i> 4-44; <i>USER</i> 3-23, 6-98	examples: EDIT 3-33
LIA: <i>MAC</i> 3-13, B-9	extending lines: <i>EDIT</i> 3-33
LIAC: MAC B-9	inserting text: <i>EDIT</i> 3-33
LIB: <i>MAC</i> 3-13	replacing text: EDIT 3-33
LIB command: SGI 7-14	single line screen edit: EDIT 4-57
LIBC: MAC B-9	startup message: MAIL 2-3
libraries: SGI 4-2	switching permanently from visual to: MAIL
LIBRARIES directory: SGI 9-14	4-4, 4-10
libraries searched by LINK: <i>PRIM</i> B-3	switching temporarily from visual to: MAIL 4-4,
library	4-10
command (LIB): SGI 7-14	tabs: EDIT 3-32
description: LÍNK 1-2	truncating lines: <i>EDIT 3-33</i>
file search sequence, default: LINK 4-4	Line Number (N) command: EDIT 2-21

line printer driver DD*12. See DD*12 line printer	OU (Output): LINK 3-16
driver	PA (Page Align EMA Area): LINK 3-17
linear doubly linked lists: SDM 6-5	PC (Set Program Capability): LINK 3-17
linear linked lists: SDM 6-3	PR (Set Priority): LINK 3-18
linespec: EDIT 3-15	PS (Page Align Overlays): LINK 3-18
LINK: <i>FTN</i> 5-3, 7-18; <i>USER</i> 1-1, 4-3, 4-9, 4-11,	RE (Relocate): LINK 3-18
4-12	RM (Relocaté Module): LINK 3-19
command editing: LINK 2-6	RO (Reorder): LINK 3-20
command file search sequence, default: LINK	SC (System Common): LINK 3-20
4-4	SE (Search): LINK 3-20
command files	SH (Shareable EMA): LINK 3-21
examples: LINK 2-7	SN (Snapshot): LINK 3-21
use of: <i>LINK</i> 1-2, 2-7, B-2	SP (Shareable Program): LINK 3-22
description: LINK 1-1	ST (Stack): <i>LINK</i> 3-22
examples: LINK 1-3	SU (System Utility): LINK 3-23
file type extensions: <i>LINK</i> 2-1, 2-3	SZ (Size): <i>LINK</i> 3-23
interactive: LINK 1-2	TR (Transfer): LINK 3-24
runstring	VM (Virtual Memory Size): LINK 3-24
examples: LINK 2-4	VS (Virtual Memory Size): LINK 3-24
from FMGR: LINK B-1	WD (Default Working Directory): LINK 3-25
options: LINK 2-2	WS (Working Set Size of VMA): LINK 3-26
	link words: SDM 9-3
use of: LINK 1-2, 2-1	
specifying commands: LINK 1-2	linked lists: SDM 1-9
summary: LINK 4-17	linker: FTN 3-46, 3-70, 6-17, 7-1, 7-9, 7-13
LINK commands: <i>GSA</i> 5-2, 5-5, 5-6	linking Determin/1000 programs: D4T4.4.0
LINK commands: LINK 3-1	Datapair/1000 programs: DATA 4-9
? (Help): LINK 3-26	for a target system: LINK 4-1
* (Comment): LINK 3-26	MIMON: DATA 4-9
AB (Abort): LINK 3-4	PAIO: DATA 4-10
AL (All Memory Locked): LINK 3-4	PAIR: DATA 4-9
AS (Assign Partition): LINK 3-4	PINIT: DATA 4-9
BP (Report Base Page Usage): LINK 3-5	PREPAIR: DATA 4-10
CD (Code Segment): LINK 3-5	linking a program: GSA 5-5
CR (Specify VMA Backing Store File): LINK	linking programs: DBUG 2-4
3-6	links: SGI 3-2
DB (DBUGR): LINK 3-6	allocation: SDM 9-5
DE (Debug): LINK 3-6	base page: <i>SDM</i> 9-4, 9-5
DI (Display): LINK 3-6	current page: SDM 9-4
DM (Debug Monitor): LINK 3-7	memory (SAM): SDM 2-8
DP (Do Not Purge): LINK 3-7	reducing base page: LINK 4-1
EC (Echo): LINK 3-8	required by modules and drivers: SDM 9-5
EM (Extended Memory Access): LINK 3-8	symbolic: SDM 10-5
EN (End): <i>LINK</i> 3-9	LIST: <i>MAC</i> 4-25, 4-29, B-15
ES (EMA Segment): LINK 3-9	List (L) command: EDIT 2-22
FO (Force): LINK 3-10	List command: DBUG 5-23
HE (Heap Area): LINK 3-10	LIST directive: FTN 3-55, 7-23
IF (Conditional Execution of LINK): <i>LINK</i>	list directory command, DL: GSA 2-1, 3-7, 3-8,
3-11	3-10, 3-12
LC (Labeled System Common): LINK 3-11	list file
LI (Library): LINK 3-12	closing: <i>EDIT</i> 3-7, 4-20
LK (Relink): LINK 3-12	defaults: LINK 4-5
LL (List Option): LINK 3-13	definition: <i>EDIT</i> B-2
LO (List Program Attributes): LINK 3-13	description: EDIT 4-41
MA (Send Load Map to Terminal): LINK 3-13	posting: EDIT 3-7
ML (Memory Locked): LINK 3-14	system generation: SGI 2-2
MS (Multiple Search): LINK 3-14	List Group (LI G) command: SMM 3-16
NA (Name): <i>LINK</i> 3-15	LIST OFF directive: FTN 7-23
NS (New Segment): LINK 3-15	LIST ON directive: FTN 7-23
OR (Order EMA Area): LINK 3-15	list output: <i>FTN</i> 7-2; <i>MAC</i> 1-6, E-1
OS (Operator Suspend): LINK 3-16	List Table (LT) command: SMM 5-5
` .	` /

List User (LI U) command: SMM 3-17 list-directed	LO (list program attributes) command: <i>LINK</i> 3-13 LOAD: <i>SDM</i> 5-6
DECODEing: FTN 8-7	load and complement, real: <i>REL</i> 3-134
formatting: FTN 3-11, 5-3, 5-13, 8-7	load map
input: FTN 4-23	command: LINK 3-13
output: FTN 4-26, 8-9, B-13	discussion: LINK 4-15
READ statement: FTN 8-3	LOAD module: SDM 2-9
listener: HPIB 1-3, 4-2	loader: FTN 7-31
listing: FTN 1-2	and generator control: <i>MAC</i> B-14
data from I/O LU: USER 3-39	control instructions: MAC 4-1, 4-17
directory: USER 3-22, 6-46	loader command: SCSI 6-5
distribution lists: MAIL 5-4	loader ROM: SDM 9-2
EDIT commands: EDIT 2-20	loading
files: <i>USER</i> 3-23, 6-98	errors: DBUG 2-3
folders: MAIL 3-17	overlay programs: LINK 4-9
Mail/1000 users: MAIL 7-4	RTE-A programs: SGI 8-2
memory partition: USER 6-199	loading EDIT
messages: MAIL 3-12	help file: EDIT C-2
mounted disks: USER 6-22	RTE-6/VM: EDIT C-5
program attributes: LINK 3-13	loading new forms, printer, LP spool system:
queued messages: MAIL 3-20	PRNT 2-44
session LU access table: SMM 3-31	loading your system
session LU access tables: SMM 2-5	from 248x integrated disk: SGI H-14
text: EDIT 2-22	from CTD: SĞI H-9
to a printer: <i>EDIT</i> 2-22, 3-9	from disk: SGI H-3
volumes: USER 3-37	from magnetic tape: SGI H-13
window of text: EDIT 2-22	from PROM: SĜI H-10
listing (sample): FTN 7-7	over a DS link: SGI H-11
listing control, instructions: MAC 1-13, 4-1, 4-25,	over a LAN link: SGI H-12
B-15	LOADPARMADD macro: MAC N-5
lists: SDM 6-2	LOADREC: <i>MAC</i> 4-46, B-18
circular doubly linked: SDM 6-5	local assembly time variable: MAC 4-49
circular linked: SDM 6-3	LOCAL LOCKOUT statement: HPIB 4-17
linear doubly linked: SDM 6-5	LOCAL macro: MAC M-10, N-11
linear linked: SDM 6-3	local printers: <i>PRNT</i> 2-2
memory suspend: SDM 2-11	LOCAL statement: HPIB 4-16, 4-17
with offset pointers: SDM 6-4	local variable: FTN 6-13, H-2, H-3
LIT: <i>MAC</i> 2-8, 4-35, 4-38, B-15	localizable
literal edit descriptors: FTN 4-17	program installation: SGI K-1
literal pattern matching: <i>EDIT</i> 2-33, 5-2, 5-4	system and subsystem files: SGI K-9
literal values: MAC 2-8, 4-38	system files: SGI K-8
literals	localizable programs
=A: <i>MAC</i> 2-8	binary message catalogs: SGI K-5
=B: <i>MAC</i> 2-8	error messages: SGI K-11
=D: <i>MAC</i> 2-8	file naming conventions: SGI K-2
=F: <i>MAC</i> 2-8	HELP directory creation: SGI K-6
=J: <i>MAC</i> 2-8	help files: SGI K-6
=L: MAC 2-8	language ID numbers: SGI K-2
=R: MAC 2-8	memory requirements: SGI K-3
=S: MAC 2-8	PROGRAMS directory: SGI K-6
LITF: <i>MAC</i> 2-8, 4-35, 4-39, B-15	session system installation: SGI K-5
LK (relink) command: LINK 3-12	system and subsystem files: SGI K-9
LKEMA subroutine: PROG 9-5, 9-26	system design considerations: SGI K-3
LL (list option) command: LINK 3-13	system generation: SGI K-3
LLE: FTN B-4, E-3	welcome file: SGI K-8
LLO bus command: <i>HPIB</i> 4-8 LLO subroutine: <i>HPIB</i> 4-14	localized programs: SGI K-1 locations
LLO subfoutifie. HFIB 4-14 LLT: FTN B-4, E-3	specifying: DBUG 4-1
LN command: EDIT 4-45	subscripts (arrays): DBUG 4-5
LNS command: <i>USER</i> 3-28, 6-103	variables: DBUG 4-3

LOCC command: SGI 4-4	logical unit table: <i>DDM</i> 1-1, 2-1
LOCF routine: <i>PROG</i> B-9, C-14	format of: DDM 2-3
LOCK: SDM 5-7	logical unit table (LUT): SDM 11-11
lock. See interface lock	LOGICAL*2: FTN D-7
locked LU: REL 7-36	LOGICAL*2 statement: FTN 2-9, 3-83
	LOGICAL*2 statement. FTN 2-9, 5-63 LOGICAL*4: FTN D-7
WhoLockedLu: REL 7-53	
locked resource number, WhoLockedRn: <i>REL</i>	LOGICAL*4 statement: FTN 2-9, 3-83
7-53	LOGIT, send logging message: <i>PROG</i> 7-13
locking	LOGLU, get LU of invoking terminal: <i>PROG</i> 7-9
VMA pages/buffers: <i>PROG</i> 9-24	LOGOF buffer limits: SGI 7-5
WH in memory: USER 6-202	command (LB): SGI 7-12
locking LU during verify: DATA 3-14	logoff/timeout function: USER 2-25
locking memory: LINK 3-4, 3-14	logon
LOCKVMA subroutine: <i>PROG</i> 9-24	errors, unusual: <i>USER</i> 8-3
LOCKVMA2BUF subroutine: <i>PROG</i> 9-24	file
LOCKVMABUF subroutine: <i>PROG</i> 9-24	examples: SMM B-1
LOCL subroutine: HPIB 4-17	global: SMM B-2
LOD: MAC B-14	programmatic: REL 6-4
LOD command: MAC 4-17	LÔGŎN program: <i>SGI</i> 11-7
LOG: FTN B-6	loopback test panel: SCSI 7-7
log: MAIL A-4, A-9	configuration: SCSI 7-7
log file, maintenance: PRNT 2-45	data and control lines: SCSI 7-7
log on error messages: GSA 1-4	lost mail directory, /mail/lost: MAIL 7-3
log on password: GSA 1-4	lowercase: FTN 2-1, 2-3, 2-10, 3-54, E-2
LOG10: FTN B-6	lowercase to uppercase, CaseFold: <i>REL</i> 7-5
logarithms: FTN 2-22	lp program: PRNT 2-14
	LP spool system
logging determining if analysis PROC 7.13	
determining if enabled: <i>PROG</i> 7-13	/etc/hosts file: PRNT 2-37
messages, send: <i>PROG</i> 7-13	/etc/inetd.conf file: PRNT 2-37, 2-40
logging off: GSA 1-5	/etc/services file: PRNT 2-37
logging on: GSA 1-3	/usr/spool/lp/log: PRNT 2-45
RTE-A system: GSA 1-3	/usr/spool/lp/lpd.log: <i>PRNT</i> 2-38, 2-45
logging on/off: USER 5-1	/usr/spool/lp/seqfile: PRNT 2-45
logical: FTN E-2	accept program: PRNT 2-7
assignment statement: FTN 3-9	adding a printer: PRNT 2-41
backup: <i>BKUP</i> 1-2; <i>SMM</i> 1-18	adding a remote printer: PRNT 2-42
constant: FTN 2-9	administration: <i>PRNT</i> 2-37
data type: FTN 2-9	network printing: <i>PRNT</i> 2-37
expression: <i>FTN</i> 2-18, 2-25, 3-29	NS/ARPA configuration: <i>PRNT</i> 2-37
format: FTN D-7	sam program: <i>PRNT</i> 2-42
format descriptor: FTN 4-15	tasks: PRNT 2-41
IF statement: <i>FTN</i> 3-24, 3-50	and Debug/1000: <i>PRNT</i> 2-62
memory: PROG 9-2	cancel program: PRNT 2-8
negation: MAC 4-56	categories of printers: PRNT 2-2
operator: FTN 2-25	creating printer class: PRNT 2-43
operators: MAC 4-51, 4-61, 4-63	destination availability: PRNT 2-4
read: PROG 8-8	disable program: <i>PRNT</i> 2-11
transfer: PROG 8-8	enable program: PRNT 2-13
unit: FTN 3-55, 5-1	Ethernet LAN: PRNT 2-2
logical AND entry (call-by-name), %AND: REL	fence priority: <i>PRNT</i> 2-25
3-148	HP JetDirect card: PRNT 2-2
logical inclusive OR: <i>REL</i> 3-49	HP-supplied printer interfaces: <i>PRNT</i> 2-49
logical operators	passthru interface: PRNT 2-56
truth table for: FTN 2-26	remote interface: PRNT 2-57
	rtestd interface: PRNT 2-50
used in bit masking: FTN 2-27	
logical product, integer: <i>REL</i> 3-44	inetd program: PRNT 2-37
LOGICAL statement: FTN 2-9, 3-83	installation: PRNT 2-38
logical unit: SDM 1-8	mklp.cmd file: PRNT 2-38
See also LU	loading new forms: PRNT 2-44
logical unit number: EDIT B-2: GSA 2-3	lp program: PRNT 2-14

lpadmin program: PRNT 2-18	LU access table: SDM 11-35
lpalt program: PRNT 2-22	LU command: EDIT 4-47
lpfence program: PRNT 2-25	LU list: SCSI 4-6
lpmove program: PRNT 2-26	LU number: EDIT B-2; GSA 2-3
lpsched program: PRNT 2-28	LU number assignments: <i>DATA</i> 4-3
lpshut program: PRNT 2-30	paired disks: DATA 4-22
lpstat program: PRNT 2-31	LU numbers: HPIB 3-1
output destinations: PRNT 2-2	and device addresses: HPIB 3-1
local printers: PRNT 2-2	and EQTs, DVTs, and IFTs: HPIB 3-1
	and hardware: HPIB 3-2
network peripherals: PRNT 2-2	CN command: HPIB 3-9
remote printers: <i>PRNT</i> 2-3 overview: <i>PRNT</i> 2-1	EQ command: HPIB 3-5
	IO command: HPIB 3-6
printer classes: PRNT 2-4	LU command: HPIB 3-4
printer interfaces: PRNT 2-3	
custom: PRNT 2-61	LUPRN utility: HPIB 3-4
local printers: PRNT 2-49	of the bus: HPIB 3-1
modifying sources: <i>PRNT</i> 2-62	RTE-A assignment: HPIB 3-6
network peripherals: <i>PRNT</i> 2-57	RTE-6/VM assignment: HPIB 3-4
remote printers: <i>PRNT</i> 2-57	SL command: HPIB 3-5
printer model files: <i>PRNT</i> 2-3	LU redirection: PRNT 3-3
format: PRNT 2-61	LU table: <i>SDM</i> 1-8, 1-12
generic model: PRNT 2-50	LUCFG: PRIM 2-12
hpnp_passthru model: PRNT 2-60	LuLocked: REL 7-36
hpnp_pcl model: PRNT 2-59	LURQ: <i>PROG</i> 2-8, 5-5
passthru model: PRNT 2-56	and deadly embrace: <i>PROG</i> 2-10
pcl model: PRNT 2-52	parameters: PROG 2-9
rbsd model: PRNT 2-58	LUSES, get user table address: <i>REL</i> 6-13
rhpux model: PRNT 2-58	lusr: MAIL 7-4
rrte model: PRNT 2-57	LUT. See logical unit table
priority: PRNT 2-25	LUTRU: FTN 5-11
setting default for printer: <i>PRNT</i> 2-18	
specifying priority of request: <i>PRNT</i> 2-15	M
program summary: PRNT 2-6	IVI
programming considerations: <i>PRNT</i> 2-62	M command: EDIT 2-30, 3-16, 4-49
reject program: PRNT 2-35	M option: <i>MAC</i> 5-15, E-1
removing a printer: PRNT 2-43	M1KSS: <i>MAIL</i> 7-14; <i>USER</i> 6-127
rlpdaemon program: PRNT 2-37	MA (send load map to terminal) command: LINK
rlpout program: PRNT 2-37	3-13
spooled file formats: PRNT 2-5	MA option: <i>EDIT</i> 4-72
troubleshooting: PRNT 2-46	
user interface: PRNT 2-6	
	MAC disk drives: SGI C-30
	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2
lpadmin program: PRNT 2-18	MAC disk drives: <i>SGI</i> C-30 machine instructions: <i>MAC</i> 1-10, 2-5, 3-1, B-2 MACLIB statement: <i>MAC</i> 4-13, 5-3, 5-15, B-17
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22	MAC disk drives: <i>SGI</i> C-30 machine instructions: <i>MAC</i> 1-10, 2-5, 3-1, B-2 MACLIB statement: <i>MAC</i> 4-13, 5-3, 5-15, B-17 MACLIB.MLB: <i>MAC</i> E-12
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22 lpfence program: <i>PRNT</i> 2-25	MAC disk drives: <i>SGI</i> C-30 machine instructions: <i>MAC</i> 1-10, 2-5, 3-1, B-2 MACLIB statement: <i>MAC</i> 4-13, 5-3, 5-15, B-17 MACLIB.MLB: <i>MAC</i> E-12 MACLIBFILE file: <i>MAC</i> E-11
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22 lpfence program: <i>PRNT</i> 2-25 lpmove program: <i>PRNT</i> 2-26	MAC disk drives: <i>SGI</i> C-30 machine instructions: <i>MAC</i> 1-10, 2-5, 3-1, B-2 MACLIB statement: <i>MAC</i> 4-13, 5-3, 5-15, B-17 MACLIB.MLB: <i>MAC</i> E-12 MACLIBFILE file: <i>MAC</i> E-11 Macro: <i>PROG</i> 8-6
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22 lpfence program: <i>PRNT</i> 2-25 lpmove program: <i>PRNT</i> 2-26 lpsched program: <i>PRNT</i> 2-28	MAC disk drives: <i>SGI</i> C-30 machine instructions: <i>MAC</i> 1-10, 2-5, 3-1, B-2 MACLIB statement: <i>MAC</i> 4-13, 5-3, 5-15, B-17 MACLIB.MLB: <i>MAC</i> E-12 MACLIBFILE file: <i>MAC</i> E-11 Macro: <i>PROG</i> 8-6 macro
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22 lpfence program: <i>PRNT</i> 2-25 lpmove program: <i>PRNT</i> 2-26 lpsched program: <i>PRNT</i> 2-28 lpshut program: <i>PRNT</i> 2-30	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22 lpfence program: <i>PRNT</i> 2-25 lpmove program: <i>PRNT</i> 2-26 lpsched program: <i>PRNT</i> 2-28 lpshut program: <i>PRNT</i> 2-30 lpstat program: <i>PRNT</i> 2-31	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22 lpfence program: <i>PRNT</i> 2-25 lpmove program: <i>PRNT</i> 2-26 lpsched program: <i>PRNT</i> 2-28 lpshut program: <i>PRNT</i> 2-30 lpstat program: <i>PRNT</i> 2-31 LSHIFT (system macro): <i>MAC</i> L-16	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences initialization: MAC N-2
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22 lpfence program: <i>PRNT</i> 2-25 lpmove program: <i>PRNT</i> 2-26 lpsched program: <i>PRNT</i> 2-28 lpshut program: <i>PRNT</i> 2-30 lpstat program: <i>PRNT</i> 2-31 LSHIFT (system macro): <i>MAC</i> L-16 LSL: <i>MAC</i> 3-12, B-11	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences initialization: MAC N-2 NEWSUB: MAC N-3
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22 lpfence program: <i>PRNT</i> 2-25 lpmove program: <i>PRNT</i> 2-26 lpsched program: <i>PRNT</i> 2-28 lpshut program: <i>PRNT</i> 2-30 lpstat program: <i>PRNT</i> 2-31 LSHIFT (system macro): <i>MAC</i> L-16 LSL: <i>MAC</i> 3-12, B-11 LSR: <i>MAC</i> 3-12, B-11	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences initialization: MAC N-2 NEWSUB: MAC N-3 TRACKBACK: MAC N-4
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22 lpfence program: <i>PRNT</i> 2-25 lpmove program: <i>PRNT</i> 2-26 lpsched program: <i>PRNT</i> 2-28 lpshut program: <i>PRNT</i> 2-30 lpstat program: <i>PRNT</i> 2-31 LSHIFT (system macro): <i>MAC</i> L-16 LSL: <i>MAC</i> 3-12, B-11 LSR: <i>MAC</i> 3-12, B-11 LST: <i>MAC</i> B-18, J-10	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences initialization: MAC N-2 NEWSUB: MAC N-3 TRACKBACK: MAC N-4 call statement: MAC 1-1, 1-10, 5-1, 5-2, 5-3
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22 lpfence program: <i>PRNT</i> 2-25 lpmove program: <i>PRNT</i> 2-26 lpsched program: <i>PRNT</i> 2-28 lpshut program: <i>PRNT</i> 2-30 lpstat program: <i>PRNT</i> 2-31 LSHIFT (system macro): <i>MAC</i> L-16 LSL: <i>MAC</i> 3-12, B-11 LSR: <i>MAC</i> 3-12, B-11 LST: <i>MAC</i> B-18, J-10 LU: <i>FTN</i> 3-55, 3-61, 5-1	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences initialization: MAC N-2 NEWSUB: MAC N-3 TRACKBACK: MAC N-4 call statement: MAC 1-1, 1-10, 5-1, 5-2, 5-3 calling: MAC 5-1, 5-3
lpadmin program: <i>PRNT</i> 2-18 lpalt program: <i>PRNT</i> 2-22 lpfence program: <i>PRNT</i> 2-25 lpmove program: <i>PRNT</i> 2-26 lpsched program: <i>PRNT</i> 2-28 lpshut program: <i>PRNT</i> 2-30 lpstat program: <i>PRNT</i> 2-31 LSHIFT (system macro): <i>MAC</i> L-16 LSL: <i>MAC</i> 3-12, B-11 LSR: <i>MAC</i> 3-12, B-11 LST: <i>MAC</i> B-18, J-10 LU: <i>FTN</i> 3-55, 3-61, 5-1 access table: <i>SMM</i> 3-31	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIB.FILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences initialization: MAC N-2 NEWSUB: MAC N-3 TRACKBACK: MAC N-4 call statement: MAC 1-1, 1-10, 5-1, 5-2, 5-3 calling: MAC 5-1, 5-3 definition: MAC 1-1, 1-10, 2-5, 5-1, 5-2, B-17,
lpadmin program: PRNT 2-18 lpalt program: PRNT 2-22 lpfence program: PRNT 2-25 lpmove program: PRNT 2-26 lpsched program: PRNT 2-28 lpshut program: PRNT 2-30 lpstat program: PRNT 2-31 LSHIFT (system macro): MAC L-16 LSL: MAC 3-12, B-11 LSR: MAC 3-12, B-11 LST: MAC B-18, J-10 LU: FTN 3-55, 3-61, 5-1 access table: SMM 3-31 lock, LURQ: PROG 2-8	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences initialization: MAC N-2 NEWSUB: MAC N-3 TRACKBACK: MAC N-4 call statement: MAC 1-1, 1-10, 5-1, 5-2, 5-3 calling: MAC 5-1, 5-3 definition: MAC 1-1, 1-10, 2-5, 5-1, 5-2, B-17, M-9
lpadmin program: PRNT 2-18 lpalt program: PRNT 2-22 lpfence program: PRNT 2-25 lpmove program: PRNT 2-26 lpsched program: PRNT 2-28 lpshut program: PRNT 2-30 lpstat program: PRNT 2-31 LSHIFT (system macro): MAC L-16 LSL: MAC 3-12, B-11 LSR: MAC 3-12, B-11 LST: MAC B-18, J-10 LU: FTN 3-55, 3-61, 5-1 access table: SMM 3-31 lock, LURQ: PROG 2-8 locked, WhoLockedLu: REL 7-53	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences initialization: MAC N-2 NEWSUB: MAC N-3 TRACKBACK: MAC N-4 call statement: MAC 1-1, 1-10, 5-1, 5-2, 5-3 calling: MAC 5-1, 5-3 definition: MAC 1-1, 1-10, 2-5, 5-1, 5-2, B-17, M-9 ENDMAC statement: MAC 5-7
lpadmin program: PRNT 2-18 lpalt program: PRNT 2-22 lpfence program: PRNT 2-25 lpmove program: PRNT 2-26 lpsched program: PRNT 2-28 lpshut program: PRNT 2-30 lpstat program: PRNT 2-31 LSHIFT (system macro): MAC L-16 LSL: MAC 3-12, B-11 LSR: MAC 3-12, B-11 LST: MAC B-18, J-10 LU: FTN 3-55, 3-61, 5-1 access table: SMM 3-31 lock, LURQ: PROG 2-8 locked, WhoLockedLu: REL 7-53 locking: PROG A-7	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences initialization: MAC N-2 NEWSUB: MAC N-3 TRACKBACK: MAC N-4 call statement: MAC 1-1, 1-10, 5-1, 5-2, 5-3 calling: MAC 5-1, 5-3 definition: MAC 1-1, 1-10, 2-5, 5-1, 5-2, B-17, M-9 ENDMAC statement: MAC 5-7 example: MAC 5-2
lpadmin program: PRNT 2-18 lpalt program: PRNT 2-22 lpfence program: PRNT 2-25 lpmove program: PRNT 2-26 lpsched program: PRNT 2-28 lpshut program: PRNT 2-30 lpstat program: PRNT 2-31 LSHIFT (system macro): MAC L-16 LSL: MAC 3-12, B-11 LSR: MAC 3-12, B-11 LST: MAC B-18, J-10 LU: FTN 3-55, 3-61, 5-1 access table: SMM 3-31 lock, LURQ: PROG 2-8 locked, WhoLockedLu: REL 7-53 locking: PROG A-7 output file to: PROG 11-3	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences initialization: MAC N-2 NEWSUB: MAC N-3 TRACKBACK: MAC N-4 call statement: MAC 1-1, 1-10, 5-1, 5-2, 5-3 calling: MAC 5-1, 5-3 definition: MAC 1-1, 1-10, 2-5, 5-1, 5-2, B-17, M-9 ENDMAC statement: MAC 5-7 example: MAC 5-2 libraries
lpadmin program: PRNT 2-18 lpalt program: PRNT 2-22 lpfence program: PRNT 2-25 lpmove program: PRNT 2-26 lpsched program: PRNT 2-28 lpshut program: PRNT 2-30 lpstat program: PRNT 2-31 LSHIFT (system macro): MAC L-16 LSL: MAC 3-12, B-11 LSR: MAC 3-12, B-11 LST: MAC B-18, J-10 LU: FTN 3-55, 3-61, 5-1 access table: SMM 3-31 lock, LURQ: PROG 2-8 locked, WhoLockedLu: REL 7-53 locking: PROG A-7	MAC disk drives: SGI C-30 machine instructions: MAC 1-10, 2-5, 3-1, B-2 MACLIB statement: MAC 4-13, 5-3, 5-15, B-17 MACLIB.MLB: MAC E-12 MACLIBFILE file: MAC E-11 Macro: PROG 8-6 macro body: MAC 5-5 call sequences initialization: MAC N-2 NEWSUB: MAC N-3 TRACKBACK: MAC N-4 call statement: MAC 1-1, 1-10, 5-1, 5-2, 5-3 calling: MAC 5-1, 5-3 definition: MAC 1-1, 1-10, 2-5, 5-1, 5-2, B-17, M-9 ENDMAC statement: MAC 5-7 example: MAC 5-2

description: MAC 5-1, 5-3	files: USER 3-1
extract: MAC 5-16	volumes: USER 3-36
extract and delete: MAC 5-16	mantissa
filedescriptor: MAC E-11	complement, double real unpacked: REL 3-125
old: <i>MAĈ</i> E-11	normalized, rounded, packed (double real):
name statement: MAC 5-2, 5-4	REL 3-129
names list (T option): MAC 5-15	real, extract: <i>REL</i> 3-99
nesting: MAC 5-1	manual conventions: <i>DBUG</i> 1-2; <i>EDIT</i> 1-3
parameters: <i>MAC</i> 4-47, 5-1, 5-4, 5-7	manual program segmentation: LINK 4-11
MACRO statement: <i>MAC</i> 5-2, 5-4, B-17	map, memory (system common partition): SDM
Macro/1000: FTN 7-30	2-13
magnetic tape: FTN 3-35; PRIM 2-5	map registers set up: DDM 7-5
driver	map set table: <i>DDM</i> 2-1; <i>SDM</i> 11-19
DD*23. See DD*23 magnetic tape driver	format of: <i>DDM</i> 2-15; <i>SDM</i> 11-19
DD*24. See DD*24 magnetic tape driver	MAPOS: SDM 5-7
loading system from: <i>SGI</i> H-13 position, PTAPE: <i>REL</i> 5-24	mapping considerations: DDM 7-4
magnetic tape utility functions, MAGTP: <i>REL</i>	mapping segment size (MSEG): <i>PROG</i> 9-2 MAPS: <i>SDM</i> 5-7
5-17	mark: <i>EDIT</i> B-2
MAGTP: REL 5-17	Mark Line (Kx) command: EDIT 2-23
mail.cf: <i>MAIL</i> 5-12, 7-1, 7-3, 7-4, 7-5, A-4, A-8, A-9	marking lines: <i>EDIT</i> 2-23, 2-28, 4-38
mail.rc: <i>MAIL</i> 2-1-2-3, 3-1, 3-9, 4-3, 5-1, 5-4, 5-8	marking messages for deletion: <i>MAIL</i> 3-13, 3-14,
Mail/1000	4-8
administrative commands: <i>MAIL</i> 7-4	mask qualifier: USER 3-15
creating users: MAIL 7-4	mask qualifier field: GSA 3-11
deleting users: MAIL 7-4	MaskDiscLu: PROG 8-83
listing users: MAIL 7-4	masking
modifying user directory names: MAIL 7-4	and FMGR files: USER 3-20
reading message queues: MAIL 7-4	characters: USER 3-15
advanced commands: MAIL 3-19	destination file: USER 3-20
command modifiers: MAIL 3-10, 3-11	file masks: USER 3-14
configuration file: MAIL 7-1	qualifiers: USER 3-15, 3-21
installation: MAIL A-1, A-3	masking files: GSA 3-11
installation considerations: MAIL A-1	MaskIsDS: PROG 8-84
installing updates: MAIL A-11	MaskMatchLevel: PROG 8-84
internal programs: MAIL 7-14	MaskOldFile: PROG 8-85
lost mail directory: MAIL 7-3	MaskOpenId: PROG 8-85
mail queue: MAIL 7-3	MaskOwnerIds: PROG 8-85
message format: MAIL 3-2	MaskSecurity: PROG 8-86
messages: MAIL 1-3, 3-2, 3-8, 3-11, 3-16, 3-21,	master account file: SDM 11-32
6-2	master security code: SGI 9-5; USER B-12
program messages: MAIL B-1	FMGR: USER B-44 MASTED ACCOUNT File: SDM 11 42: SMM 2 11
prompt: MAIL 3-3, 3-21 version number: MAIL 3-20	MASTERACCOUNT file: SDM 11-43; SMM 2-11 MASTERGROUP file: SDM 11-42; SMM 2-12
mailbox I/O: SDM 1-9	match pattern: <i>EDIT</i> 2-34, B-2
definition: <i>PROG</i> 4-1	matrix
mailboxes: <i>MAIL</i> 1-1, 6-1, 7-1, 7-2, B-1, B-2	inversion (VIS): REL 9-30
mailboxes file: MAIL 7-2	multiplication EMA example: <i>REL</i> 9-22
mailing messages: MAIL 3-10	transposition (VIS): REL 9-13
main program: SDM 2-5	MAX: FTN B-2
main program unit: FTN 1-4	MAX (system macro): MAC L-11
maintaining a system	MAX/MIN routines: <i>REL</i> 8-20
accounting system: SMM 1-14	MAX0: FTN B-2; REL 3-7
backing up: SMM 1-15	MAX1: <i>FTN</i> B-2; <i>REL</i> 3-8
fine tuning: SMM 1-14	maximum
increasing usability: SMM 1-15, 1-20	double real value: REL 3-100
overview: SMM 1-13	extended real: REL 3-30
major firmware revision code: SCSI 7-4	integer value: REL 3-7
manipulating	real value: REL 3-8
directories: USER 3-29	MAXREC: FTN E-2

1 CCLT 10	1. 1 36411.0.10
MB command: SGI 7-12	disposal options: MAIL 3-12
MBF: <i>MAC</i> B-12	disposition query: MAIL 5-4
MBI: <i>MAC</i> 3-15, B-12	filtering criteria: MAIL 5-9
MBT: <i>MAC</i> 3-4, B-3	action criterion: MAIL 5-10
MBW: <i>MAC</i> 3-15, B-12	allowed conditions: MAIL 5-9
MC command: SGI 9-3, J-3; USER 3-36, 6-108	autoreply: MAIL 5-11
mdir: MAIL 3-19, 7-4	copy: MAIL 5-11
media: PRIM 1-2, C-1	execute: MAIL 5-10
part numbers: <i>PRIM</i> C-2	folder: MAIL 5-11
media options: SCSI 1-3	forward: MAIL 5-11
1600 BPI Magnetic Tape: SCSI 1-3	leave: MAIL 5-10
CS/80 Cartridge Tape: SCSI 1-3	refuse: <i>MAIL</i> 5-10, 5-11
Member, check if user is in group: <i>REL</i> 6-13	forwarding: MAIL 4-3, 4-7
memory	forwarding and copying: MAIL 5-11
descriptor variables: SDM 11-27	headers: <i>MAIL</i> 3-6–3-8, 7-12
descriptors: SDM 11-27; SGI 7-3	id headers: MAIL 7-13
management: <i>SDM</i> 1-1, 1-6, 2-1, 2-15	logging: MAIL 7-3
mapping: SDM 2-13	service request: HPIB 5-2
partitions: <i>SDM</i> 1-3, 1-6; <i>USER</i> 4-10, 6-199	tagging and untagging: MAIL 4-8
differences: SDM 1-3	tagging by limiting criteria: MAIL 4-8
reference instructions: <i>MAC</i> 3-2, B-2	terminator: MAIL 5-5
relocatability: MAC 4-56	text entry mode: MAIL 5-5
requirements	writing a complete message: MAIL 3-4
changing: USER 4-9	MESSAGE (system macro): MAC L-17
for CDS: USER 4-12	message catalog relocation: SGI 7-13
size: SGI 9-3	message monitor MSG.M: SGI K-1
spaces: MAC 4-2	message queue, /mail/queue: MAIL 7-3
system common partition map: SDM 2-13	messages
usage, displaying: USER 2-8	deleting: MAIL 3-14
memory allocation phase: SGI 7-1	editing: MAIL 3-15
commands: SGI 7-8	log on: GSA 1-4
memory area: FTN H-1	printing: MAIL 3-15
memory descriptor, command (RS): SGI 7-10	remailing: MAIL 3-15
memory image format: USER 6-4	undeleting: MAIL 3-14
converting to, AB2MI: USER 6-4	MESSS, message processor interface: <i>PROG</i> 7-12
memory map, sample: SGI 5-6	metacharacter
memory protect: <i>DDM</i> 1-1	See also Regular Expressions (RE)
memory protect error: FTN 7-24	alphanumeric transition (:): <i>EDIT</i> 5-3, 5-16
memory protect errors: <i>PROG</i> A-2	beginning anchor (^): <i>EDIT</i> 5-3, 5-7, 5-9
memory size, request, EXEC 26: <i>PROG</i> 5-14	break line character (<\$>): EDIT 5-18
memory-based system, ASAVE and ARSTR:	character class [xyz]: EDIT 5-3, 5-10
BKUP 2-12	definition: <i>EDIT</i> 2-33, 3-18, 3-22, 5-2, B-2
memory-image (type 6) file: GSA 5-2, 5-6, 5-7	descriptions: EDIT 5-7
memory-based system	ending anchor (\$): <i>EDIT</i> 5-3, 5-9
installing: SGI 10-1	exchange: EDIT 5-5
required files: SGI 10-1	indefinite (@) character: EDIT 5-3, 5-9, 5-15
MEMRY: SDM 5-7	line break character (<\$>): EDIT 5-3
MERGE: USER 1-1	lowercase tagged string recall (<n): <i="">EDIT 5-3,</n):>
Merge (M) command: <i>EDIT</i> 2-30, 4-49	5-18
MERGE utility: FTN 7-2	match one or more (+): <i>EDIT</i> 5-3, 5-13
merged system file	match pattern n times ($\langle n \rangle$): <i>EDIT</i> 5-3, 5-14
creating using BUILD: SGI 10-2	match zero or more (*): EDIT 5-3, 5-12
installing on bootable medium: SGI 10-7	negated character class [^xyz]: EDIT 5-3, 5-11
merging, libraries: LINK 4-3	single-character wildcard (.): <i>EDIT</i> 5-3, 5-7
merging files: EDIT 2-30, 4-49	tagged string {xyz}: EDIT 5-3, 5-17
message: HPIB 4-1	tagged string recall (&n): EDIT 5-3, 5-17
command: HPIB 4-5	uppercase tagged string recall (>n): EDIT 5-3,
creation: MAIL 3-2, 3-4	5-18
creation format: MAIL 1-1, 1-3, 3-2	METER
data: HPIB 4-11	displaying process information: USER 6-112

1 1' MOED (142	1 1 1 1
loading: USER 6-113	ML (memory locked) command: LINK 3-14
output example: USER 6-113	MLS program: <i>FTN</i> B-12
MFB: <i>MAC</i> 3-15	MMAP subroutine: <i>PROG</i> 9-52
MI command: <i>SGI</i> 9-2, J-2	mnemonic: EDIT 3-13
dismounting disk before pairing: <i>DATA</i> 3-7	MNOTE: <i>MAC</i> 4-63, 4-67, B-17
examples: DATA 3-8	MO command: <i>EDIT</i> 2-23, 2-29, 4-51–4-52; <i>GSA</i>
format: DATA 3-7	3-8, 3-9; <i>USER</i> 3-20, 3-25, 6-116
function: DATA 3-7	MOD: FTN B-2; MAC 4-60; REL 3-52
initial pairing: DATA 3-7	model files. See printer model files
mirroring disks: DATA 3-8	models, EMA/VMA: PROG 9-14; USER 4-13
overriding previous pairings: DATA 3-8	models, EMA/VMA: SDM 11-23
pairing already mounted disk: <i>DATA</i> 3-8	modem: DRM J-61
runstring: DATA 3-7	control: <i>DRM</i> H-2
unmirrored disks: DATA 3-8	serial I/O drivers: <i>DRM</i> 2-177
usage messages: DATA 3-7	MODEM alarm program: DRM J-83
MI2AB: <i>USER</i> 6-114	modification count: PROG 14-3
error messages: USER 6-115	Modify command: <i>DBUG</i> 2-14, 3-7, 5-25
MIA: <i>MAC</i> 3-13, B-9	modifying
MIAC: MAC B-9	printer interface sources: <i>PRNT</i> 2-62
MIB: <i>MAC</i> 3-13, B-9	session LU access table: SMM 3-31
MIBC: MAC B-9	session LU access tables: SMM 2-5
MIC: <i>MAC</i> B-18, J-10	size of the EVB: SMM 3-11
microcode replacements: MAC 1-3, 4-24	user accounts: USER 5-5
microcoded routines (RPLs): REL 2-6	modifying a file. See editing
microcoding capabilities: MAC 1-3	modifying files: GSA 4-1, 4-4
	modifying the value of a variable: <i>DBUG</i> 3-7, 5-25
midnight 24-hour format for EXEC 12: <i>PROG</i> 6-2	
MIL-STD-1753 extensions: <i>FTN</i> E-1	modular jack: SCSI 2-2
MIMON	module
linking: DATA 4-9	\$SYSA: <i>SDM</i> 5-1, 5-13
updating configuration information file: DATA	CDSFH: SDM 5-4
4-22	CLA (dummy): <i>SDM</i> 5-4
MIN: FTN B-2	CLASS: SDM 2-9
MIN (system macro): MAC L-11	ERL: <i>SDM 5-5</i>
MIN0: <i>FTN</i> B-2; <i>REL</i> 3-7	ERLOG (dummy): SDM 5-5
MIN1: FTN B-2; REL 3-8	flags: SDM 5-3
mini-cartridge bootstrap loader: USER 6-114	ID.43: <i>SDM</i> 5-5
minimum	LOA (dummy): <i>SDM</i> 5-6
double real value: REL 3-100	LOAD: SDM 5-6
extended real: REL 3-30	LOC (dummy): <i>SDM</i> 5-7
integer value: <i>REL</i> 3-7	LOCK: SDM 5-7
real value: <i>REL</i> 3-8	MEM: <i>SDM</i> 5-7
minimum system requirements: SDM 5-1	MEMRY: SDM 5-7
minor firmware revision code: SCSI 7-4	OPM (dummy): <i>SDM</i> 5-8
MinStrDsc: REL 12-82	OPMSG: SDM 5-8
minus sign: FTN 2-7, 2-18	PERR: SDM 5-8
mirrored disk access during restore: <i>DATA</i> 3-12	POW (dummy): <i>SDM</i> 5-5
mirrored disk configuration: SGI 9-2	relocatable: GSA 5-2
	SAM: <i>SDM</i> 5-9
mirrored disk system installation: DATA 4-10	
mirrored volumes	SCH (dummy): <i>SDM</i> 5-9
accessed at boot time: DATA 4-5	SCHED: SDM 5-9
not accessed at boot time: DATA 4-4	SPOOL: SDM 5-9
mirroring disks with MI command: DATA 3-8	STA (dummy): <i>SDM</i> 5-10
mixed listing: FTN 7-2, 7-23	STAT: <i>SDM</i> 5-10
mixed-type expression: FTN 8-3	STR (dummy): <i>SDM</i> 5-10
mixed-type operands: FTN 2-21	STRNG: <i>SDM</i> 5-10
conversion of: FTN 2-22	SYC (dummy): <i>SDM</i> 5-10
mixing	SYCOM: <i>SDM</i> 5-10
CDS code: PROG 10-5	TIM (dummy): <i>SDM</i> 5-11
non-CDS code: PROG 10-5	TIME: SDM 5-11
mklp.cmd file: PRNT 2-38	XCM (dummy): SDM 5-12

XCMND: SDM 5-11	multipass compiler: FTN 1-2
module entry: LINK 4-16	multiple addresses: MAIL 5-2
module flag records: SGI D-4	multiple aliases: MAIL 5-2
modules supplied: DATA 1-2	multiple bit error: SCSI 7-6
modulus, of complex (real): REL 3-12	multiple commands per line, entering: USER 2-24
mounting disk volumes: SGI 9-3; USER 3-36, 6-108	multiple devices: <i>SDM</i> 1-12 multiple modules: <i>MAC</i> 1-13, 4-13
mounting mirrored volume by BOOTEX: <i>DATA</i> 4-20	multiplication: FTN 2-18, 2-19 multiply
move: MAIL 3-13, 3-17	by 2 to integer power: <i>REL</i> 3-105
complex to complex: REL 3-69	complex by complex: <i>REL</i> 3-72
extended real to extended real: <i>REL</i> 3-127	double integer: <i>REL</i> 4-10
name of program from ID segment, PNAME:	extended real by extended real: REL 3-128
REL 5-23	hardware: REL 3-102
Move (MO) command: EDIT 2-29	real: REL 3-90
move file command MO: GSA 3-8, 3-9	substrings, SMPY: REL 10-22
MOVE macro: MAC N-10	multiply routines DVMPV (double precision): PEL 8.0
move routines: <i>REL</i> 8-24	DVMPY (double precision): REL 8-9
DVMOV (double precision): <i>REL</i> 8-24	DWMPY (EMA double precision): <i>REL</i> 8-9 VMPY (single precision): <i>REL</i> 8-9
DWMOV (EMA double precision): REL 8-24	WMPY (EMA single precision): <i>REL</i> 8-9
VMOV (single precision): <i>REL</i> 8-24	multipoint environment
WMOV (EMA single precision): <i>REL</i> 8-24 MOVEBYTES macro: <i>MAC</i> N-10	Q and O commands: <i>EDIT</i> D-1
MOVECODETODATA macro: MAC N-10	tab control: EDIT D-3
MoveWords: REL 7-36	use of EDIT in: EDIT D-1
MOVEWORDS macro: MAC N-10	multiuser account structure. See Account structure
moving	multiuser accounting utilities
around the screen: <i>EDIT</i> 2-36	modify or list session bit maps (SESLU): SMM
columns of data: EDIT 5-23	3-31
directories: USER 3-31	reset multiuser accounting information (RIN-
files: <i>USER</i> 3-25, 6-116, 6-124	FO): <i>SMM</i> I-1
screen mode text: EDIT 4-9	show multiuser accounting information (SIN-
text: EDIT 2-29, 4-51	FO): <i>SMM</i> I-3
through the file: <i>EDIT</i> 2-21	terminate a session (KILLSES): SMM 3-33
MP (memory protect): SDM 9-2	multiuser accounts: SGI 11-5
MPACK	multiuser and spooling setup: SGI 11-1
examples: USER 6-123	multiuser remote file access: USER 3-42
logging option: USER 6-122	multiuser session operation (VC+): <i>USER</i> 5-1
options: USER 6-117	capability levels: <i>USER 5-5</i>
visual mode: USER 6-121	creating and modifying accounts: USER 5-5
MPY: <i>MAC</i> 3-11, B-11	group accounts: <i>USER 5-4</i> identifying programs: <i>USER 5-8</i>
MPYD: <i>MAC</i> 3-11, B-11	log on, log off: USER 5-1
MS (memory size) command: SGI 9-3, J-3	running out of SAM: USER 5-8
MS (multiple search) command: LINK 3-14	session handling: USER 5-7
MSALC: DDM 7-9 MSEAPCH command: SGL4.3	superusers: USER 5-5
MSEARCH command: <i>SGI</i> 4-3 MSEG: <i>FTN</i> 7-23; <i>MAC</i> 4-34, B-15	user accounts: USER 5-4
allocation of: LINK 4-2	multiuser table: SDM 11-32
MSEG directive: FTN 7-23	MV command: USER 6-124
MSG.M, message monitor: SGI K-1	MVBITS: <i>FTN</i> B-3, B-10, E-1
msglist: <i>MAIL</i> 3-5, 3-10, 3-11, 3-12, 3-13, 3-14,	MVW: <i>MAC</i> 3-4, B-3
3-15, 3-17, 3-21, 4-4, 4-7	MWF: <i>MAC</i> 3-15, B-12
MSGTB: <i>SDM</i> 5-8	MWI: <i>MAC</i> 3-15, B-12
MSGTB module: SDM 5-8	MWW: <i>MAC</i> 3-15, B-13
MSRTN: DDM 7-9	MyIdAdd, return segment address: <i>REL</i> 7-36
multibuffered request: DDM 6-1	
format of: <i>DDM</i> 6-1	N
multidimensional array: FTN 8-7	
multidimensional arrays, efficiency (VIS): REL	N bit: <i>DDM</i> 2-5
9-19	N command: <i>EDIT</i> 2-2, 2-21, 2-28, 2-39, 4-53

n command: EDIT 2-21, 4-54	LURQ: PROG 2-9
N option: MAC E-2	signal subroutines: PROG 13-5
NA (name) command: LINK 3-15	no-operation instruction: <i>MAC</i> 3-10, B-3
NAM: MÁC B-14	no-suspend bit, signal subroutines: <i>PROG</i> 13-5
NAM record: SDM 9-5	no-wait bit definition: PROG 4-3
NAM statement: <i>MAC</i> 1-4, 4-3, 4-4, 4-13	NODE: FTN E-2
name in EXEC 12: <i>PROG</i> 6-2, 6-4	node: FTN 3-59
named: MAIL A-11	node busy bit: <i>DDM</i> 2-5
named common: SDM 1-6	NODE command: SGI 6-18
named constant: FTN 2-3	node list entries: SCSI 3-4
names. See driver NAM record	node lists: SGI 6-2
NAMF (rename a file): <i>PROG</i> B-11, C-15	configuration: SGI 6-3
namr: EDIT B-2; FTN 3-62; SDM 1-18	NOGROUP group: SMM 2-12
calls: PROG B-2	non-alphanumeric commands: <i>EDIT</i> 4-92
strings: PROG B-2	non-extended relocatable records: MAC 1-2
NAMR routine: <i>PROG</i> C-16; <i>REL</i> 5-18	non-partitioned drivers: SDM 2-14
native language support utilities errors: <i>USER</i>	nonbuffered I/O: PROG 3-1
A-24	non-CDS environment: MAC 4-9
Native/1000: <i>SGI</i> K-1, K-2	non-disk (type 0) files: PROG 8-8
natural logarithm	nonexecutable statements: FTN 3-1
complex: REL 3-14	table of: FTN 3-2
double real: REL 3-97	NOP: <i>MAC</i> 3-10, B-3
extended real: REL 3-28	normal clean-up operations: GSA 2-6
real: REL 3-5	normal EMA/VMA model: <i>PROG</i> 9-14
NDAC handshake line: HPIB 1-6	NOT: FTN B-2, E-1
negate	NOT function (call-by-name), %OT: REL 3-161
double integer: <i>REL</i> 4-11	note list: DATA 4-3
double real: REL 3-136	notify: MAIL 5-12, A-4, A-7
negate operand: MAC 4-55	NOTIFY utility
negative increment (VIS): <i>REL</i> 9-10	and M1KSS monitor program: <i>USER</i> 6-127
nested DO loops example (VIS): <i>REL</i> 9-6	defining aliases for notification: <i>USER</i> 6-126 alias definition format: <i>USER</i> 6-127
nesting	
command files: USER 2-21 level: FTN 3-52	alternate logons for a user: <i>USER</i> 6-126
of DO loops: FTN 3-25, 3-30	group distribution lists: <i>USER</i> 6-126 hosts in a DS network: <i>USER</i> 6-127
of implied DO loops: FTN 3-26	installed by Mail/1000: USER 6-125
nesting of format specifications: FTN 4-22	sending a message: USER 6-125
nesting of normal specifications: 1717 4-22 nesting of macro definitions: MAC 5-1, 5-11	turning notification on or off: USER 6-125
network	using the NOTIFY utility: USER 6-125
peripherals: PRNT 2-2, 2-57	NRFD handshake line: <i>HPIB</i> 1-6
printing	NS (new segment) command: LINK 3-15
administration: <i>PRNT</i> 2-37	NS/ARPA configuration, LP spool system: <i>PRNT</i>
NS/ARPA configuration: PRNT 2-37	2-37
rlpdaemon program: PRNT 2-37	nslookup: MAIL 7-8
rlpout program: PRNT 2-37	null control character: EDIT 3-26
networking: MAIL A-1; SDM 5-13	null device: FTN 7-6
New Group (NE G) command: SMM 3-21	null type extension: MAC E-6
New User (NE U) command: SMM 3-23	number conversion: <i>PROG</i> 7-11
newmail: <i>MAIL</i> 6-1	number of lines in file: EDIT 4-44
NEWSUB: MAC N-3	numeric conversion functions: FTN B-5
next record: FTN 5-2	numeric format descriptors: FTN 4-9
NFIOB: FTN 5-3, 5-9, 7-18, B-11	numeric terms: MAC 2-6
NINT: <i>FTN</i> B-1, B-5	numeric to ASCII conversion, .FMUO: REL 5-32
nitely.cmd file: MAIL 7-3	NumericTime: <i>REL</i> 7-37
No Window (N) option: EDIT 3-24	NW no-wait bit
no-abort bit: PROG A-4	class get: PROG 4-27
clear error return: <i>PROG</i> A-6	Class I/O operation: PROG 4-3
ECODE parameter: PROG 4-13, 4-22	CLRQ: PROG 4-8
errors Group III: <i>PROG</i> A-4	definition: PROG 4-3
in EXEC error returns: <i>PROG</i> A-1	EXEC 17: <i>PROG</i> 4-12

EXEC 18: <i>PROG</i> 4-12 EXEC 19: <i>PROG</i> 4-23 EXEC 20: <i>PROG</i> 4-12	one word read \$ONER: <i>DDM</i> 7-6 \$READ: <i>DDM</i> 7-5
EXEC 21: <i>PROG</i> 4-18	one word write
0	\$ONEW: <i>DDM 7-7</i> \$WRIT: <i>DDM 7-6</i> ONER: <i>DDM 7-6</i>
O command: <i>EDIT</i> 3-31, 4-55	ONEW: <i>DDM</i> 7-7
O option: MAC E-2	online
obtaining efficiency with multidimensional arrays	backup and restore from/to disks: BKUP 1-2
(VIS): <i>REL</i> 9-19	help summary: <i>USER</i> 2-3 online loading of Macro/1000: <i>MAC</i> E-11
OCLAS, definition: PROG 4-25	online reference: <i>EDIT</i> 1-4, 1-6, 2-20, 4-28, 4-94
OCT: MAC 4-35, 4-39, B-15	See also Help command
octal constant: FTN E-1 B-form: FTN 2-12	opcode field: <i>MAC</i> 2-1, 2-2, 2-5
O-form: FTN 2-12	open files, clearing: USER 8-5
octal constants: MAC 4-36, 4-39	open files, cleaning up: <i>PROG</i> F-1
octal format descriptors: FTN 4-16	OPEN routine: <i>PROG</i> B-4, C-18
OctalToDint, ASCII to double integer conversion:	OPEN statement: <i>FTN</i> 3-14, 3-61, 5-1, 5-3, 5-4,
REL 7-37	5-5, 5-7, 5-11, 7-18
OctalToInt, ASCII to single integer conversion:	specifiers: FTN 3-62
REL 7-38	OPENF routine: <i>PROG</i> B-4, C-22
OENTRY macro: MAC N-4	opening folders: MAIL 3-18
OF command: <i>FTN</i> 5-10; <i>GSA</i> 2-5; <i>USER</i> 1-5,	operand: FTN 2-18
2-24, 4-2, 4-7, 6-128	mixed-type: <i>FTN</i> 2-21 operand field: <i>MAC</i> 2-1, 2-2, 2-5, 2-6
offline	operating system: FTN 2-3
restore: BKUP 1-3	disk states: DATA 2-1
system, ASAVE and ARSTR: <i>BKUP</i> 2-12 offline disk formatting and initialization utility	requirements: DATA 1-2
(FORMT): BKUP 2-160	RTE-6/VM: <i>FTN</i> 1-2
calling FORMT: BKUP 2-160	RTE-A: <i>FTN</i> 1-2
ENd command: BKUP 2-161	operating system determination, .OPSY: REL 5-37
error messages: BKUP 2-170	operating system modules: SDM 5-1
FOrmat command: BKUP 2-161	operation undefined (UN) error: FTN 2-22
formatting operation: BKUP 2-164	operator: <i>FTN</i> 2-2, 2-18
formatting process: BKUP 2-165	AND: FTN E-2
FORMT commands: BKUP 2-161	.EOR.: FTN E-2
FORMT functions: BKUP 2-160	.EQ.: <i>FTN</i> 2-24 .EQV.: <i>FTN</i> E-2
generating a FORMT system: <i>BKUP</i> 2-160, 2-163	.EQv.: FTN E-2 .GE.: FTN 2-24, B-9
help command: BKUP 2-162	.GT.: FTN 2-24, B-9
INitialize command: BKUP 2-162	.LE.: <i>FTN</i> 2-24, B-9
initializing operation: BKUP 2-166	.LT.: FTN 2-24, B-9
REformat command: BKUP 2-162	.NE.: FTN 2-24
reformatting operation: BKUP 2-167	.NEQV.: <i>FTN</i> 2-26, E-2
sector interleaving: BKUP 2-165	.NOT.: <i>FTN</i> 2-25, E-2
SPare command: BKUP 2-163	.OR.: <i>FTN</i> 2-25, E-2
sparing operation: BKUP 2-168	XOR.: FTN E-2
VErify command: BKUP 2-163	arithmetic: FTN 2-18
verify operation: BKUP 2-169	character: FTN 2-23 exponentiation: FTN 2-22
often in EXEC 12: <i>PROG</i> 6-3, 6-4 OK? prompt: <i>EDIT</i> 1-13	logical: FTN 2-25, E-2
See also dangerous command confirmation	relational: FTN 2-24
OK? prompt (editor): GSA 4-5	unary: FTN 2-18, 2-25
old literal constructs: MAC J-2	operator precedence: <i>DBUG</i> 4-10; <i>MAC</i> 2-10
old pseudo opcodes: MAC J-2	Operator Suspend command: DBUG 5-26
OLDRE: <i>MAC</i> 1-3	operators, logical: FTN 2-26
OLDRE option: MAC E-2	OPMSG: SDM 5-8
ON INTR statement: HPIB 5-3	OPNVM: PROG 9-42
one dimensional array examples (VIS): REL 9-2	optical disk drive errors

additional sense code: SCSI A-5 sense code: SCSI A-4	override operators: <i>DBUG</i> 4-10 override option: <i>MAC</i> E-5
option errors: <i>PROG</i> A-6	overriding a variable type: <i>DBUG</i> 5-25
optional parameters	overriding display format: DBUG 4-11
EXEC 1 and 2: PROG 3-5	Overview command: DBUG 5-26
EXEC 19: <i>PROG</i> 4-23	overview of RTE-A features: <i>USER</i> 1-1
EXEC 21: <i>PROG</i> 4-20	OVF: <i>REL</i> 5-21
EXEC 3: <i>PROG</i> 3-9	OWNER command: <i>GSA</i> 3-12; <i>USER</i> 3-37, 6-133
EXEC 6: <i>PROG</i> 5-5	ownership
EXEC 8: PROG 5-2	changing: USER 3-31, 6-133
EXEC 9, 10, 23, 24: <i>PROG</i> 5-11	directory, displaying: USER 3-31, 6-133
SEGLD: <i>PROG</i> 5-3	file: <i>USER</i> 3-1, 3-13
optional system modules: <i>SDM</i> 5-13	volume: <i>USER</i> 3-37
	ownership of directory: GSA 3-11
options: EDIT B-2	OwnerToId, return user ID and group ID: <i>REL</i>
OPTPARMS directive: FTN 7-24	6-14
OR integer inclusives, DEL 2.51	0-14
integer inclusive: <i>REL</i> 3-51	
logical inclusive: <i>REL</i> 3-49	P
OR (order EMA area) command: LINK 3-15	
OR entry, inclusive (call-by-name), %OR: <i>REL</i>	P bit: <i>DDM</i> 2-5
3-159	P command: <i>EDIT</i> 3-31, 4-56
ORB: <i>MAC</i> B-18, J-2	P option: MAC E-2, E-5
order of evaluation: FTN 2-19	P-type global parameters: <i>USER</i> B-53
order of precedence RNRQ control word: <i>PROG</i>	PA (page align EMA area) command: LINK 3-17
2-4	PA (partition) command
order of statements: FTN 3-5	BÜILD utility: SGI 10-4, I-4
ORG: MAC 4-3, 4-7, B-14	RTAGN utility: SGI 4-8
Organization of this Manual: BKUP 5	PAA: <i>MAC</i> 3-15, B-12
ORR: <i>MAC</i> 4-3, B-14, B-18, J-3	PAB: <i>MAC</i> 3-15, B-12
ORR command: MAC 4-12	PACK USING statement: HPIB 4-21
OS (operator suspend) command: LINK 3-16	packing, disk
OS module/driver partitioning: SGI 5-1	FPACK: USER 6-57
OS partition: <i>SDM</i> 2-15	MPACK: USER 6-117
OS/Driver partition: SDM 5-14, 5-15	page
OTA: <i>MAC</i> 3-13, B-10	0: SDM 3-3
OTAC: MAC B-10	fault: PROG 9-2, 9-25
OTB: <i>MAC</i> 3-13, B-10	table: <i>PROG</i> 9-2; <i>SDM</i> 9-3
OTBC: MAC B-10	PAGE directive: FTN 7-24
OU (output) command: LINK 3-16	page eject: FTN 7-24, 7-26
output	page layout, PCL: PRNT 2-55
formatted: FTN 4-3	page mode application: <i>DRM</i> F-1
list-directed: FTN 4-26, 8-9	PAIO
unformatted: FTN 4-29	display configuration program: DATA 3-15
output editing routine, SEDIT: REL 10-28	linking: DATA 4-10
output file: GSA 5-4	runstring: DATA 3-15
construction defaults: MAC E-6	PAIR
size defaults: MAC E-6	command file scheduling: DATA 3-1
type defaults: MAC E-6	DI command: DATA 3-2, 3-4
output lines per page, default: MAC E-5	error messages: DATA A-1
output pause message, PAU.E: REL 5-22	general user restrictions: DATA 3-1
overflow: FTN 2-21, E-2	help display: DATA 3-2
overflow bit: <i>MAC</i> 3-12, 3-13, B-9	individual command help display: DATA 3-2
OVF: <i>REL</i> 5-21	interactive scheduling: DATA 3-1
overlay: FTN 1-4	linking: <i>DATA</i> 3-1, 4-9
loaď	MI command: DATA 3-7
EXEC 8: PROG 5-2	queue-suspending calls: DATA 3-1
SEGLD: PROG 5-3	runstring: DATA 3-2
loading: PROG 5-1	scheduling: DATA 3-1
overlay area: SDM 2-5	ST command: DATA 3-10
overlaying files. RTAGN: SGI 2-4	superuser restriction: DATA 3-1

system utility: DATA 3-1	partition
using conditional control structures: DATA 3-1	assigning: USER 4-10, 6-8
utility functions: DATA 3-1	assignment for background programs: SDM 3-2
VE command: DATA 3-14	assignment for real-time programs: SDM 3-1
paired disk driver model: DATA 1-1	code: PROG 10-2
paired disk protection, LU numbering: DATA 4-22	command, RTAGN utility: SGI 4-8
pairing mirrored volumes	data: PROG 10-3
accessed at boot time: DATA 4-5	displaying/modifying
not accessed at boot time: DATA 4-4	code size: USER 6-44
pairing relationships, specified at generation time:	data size: USER 6-50
DATA 4-3	dynamic: USER 4-10
paper source, PCL: PRNT 2-56	memory descriptors: SDM 11-27, 11-32
parallel polling: HPIB 5-10, 5-16	program considerations: <i>PROG</i> 9-6
automatic response: HPIB 5-11	release of: SDM 3-7
BASIC/1000D subroutines: HPIB 5-16	reserved: USER 4-10
disabling: HPIB 5-18	shareable EMA: PROG 9-5; USER 6-186
PPC bus command: HPIB 4-6	states: SDM 3-1
PPOLL function: HPIB 5-6	partitionable, system modules: SGI 5-4
PSTAT subroutine: <i>HPIB</i> 5-8	partitionable modules: <i>SDM</i> 5-13, 5-14
service programs: <i>HPIB</i> 5-9	partitioning: SDM 5-13
parameter	during system generation: SGI 4-6
checking: DDM 3-3	partitions: SCSI 3-3
passing: DDM 6-1	sample configurations: SGI 5-7
passing and conversion: <i>PROG</i> 7-1	Pascal: FTN 6-11, 7-30
PARAMETER statement: FTN 2-5, 3-66	conversion, CDS: PROG 10-6
parameters	routines callable from: <i>REL</i> 2-7
CLRQ: PROG 4-8	value parameters: FTN 7-31
default: REL 2-2	Pascal packed arrays: DBUG 4-6
EXEC 1 and 2: PROG 3-4	pass: FTN 1-2
EXEC 11: PROG 6-1	passing by reference: FTN 6-11
EXEC 12: PROG 6-2	passing by value: FTN 6-11
EXEC 14: <i>PROG</i> 7-3	passthru
EXEC 17: <i>PROG</i> 4-12	interface: PRNT 2-56
EXEC 18: <i>PROG</i> 4-12	model file: PRNT 2-56
EXEC 19: PROG 4-22	password: GSA 1-4; MAIL 2-2-2-3; USER 5-1
EXEC 20: <i>PROG</i> 4-12	logon: SMM 3-10
EXEC 21: PROG 4-18	Password (PA) command: SMM 3-27
EXEC 3: PROG 3-9	PATH command: USER 6-134
EXEC 8: <i>PROG</i> 5-2	Path command: DBUG 5-27
EXEC 9, 10, 23, 24: <i>PROG</i> 5-9	pattern
global area: LINK B-4	definition: EDIT B-2
LURQ: PROG 2-9	delimiter: <i>EDIT</i> 2-31, 3-19, 3-22
status request: PROG 3-12	exchange: EDIT 2-34, 3-19, 4-26, 4-88, 5-17
system: SGI 9-5	exchange substitute: EDIT 2-34
parameters from ID segment, RMPAR: <i>REL</i> 5-25	match: EDIT 3-18
parameters, runstring: MAC E-4	matching
parentheses: <i>FTN</i> 2-8, 2-9, 2-19, 2-20, 2-23, 2-27,	anchoring to beginning of line: <i>EDIT 5-7</i>
6-5, 7-15, 8-9	anchoring to end of line: EDIT 5-9
nested: FTN 2-20	literal: <i>EDIT</i> 2-33, 3-18, 5-2, 5-4
parity, error: <i>PROG</i> A-10; <i>USER</i> 8-6	longest possible sequence: EDIT 5-5
message: USER A-4	regular expressions: EDIT 5-2
parity error: DDM 7-3, 9-7	shortest possible sequence: <i>EDIT 5-5</i>
PARSE	specifying a string: EDIT 5-16
parse a parameter: PROG 7-7	parsing: EDIT 5-20
parse input buffer: <i>PROG</i> 7-7	search: EDIT 4-90
parse string SplitCommand: BEL 7.47	All (A) option: <i>EDIT</i> 2-32, 3-19
SplitCommand: REL 7-47	backward: EDIT 3-15
SplitString: REL 7-48	definition: EDIT 2-31, 3-18
parsing: EDIT 3-21, 5-20	forward: EDIT 3-15
part numbers, software media: <i>PRIM</i> C-2	shortcuts: EDIT 3-23

sets: <i>EDIT</i> 5-10, 5-11	compatibility with others: BKUP 1-3
specification: <i>EDIT</i> 3-18	COPYL: <i>BKUP</i> 1-3, 2-34
strings: EDIT 5-2	DRSTR: <i>BKUP</i> 1-3, 2-36
substitute: EDIT B-3	DSAVE: <i>BKUP</i> 1-3, 2-52
PAU.E: <i>REL</i> 5-22	read: PROG 8-8
pause message	physical disk requirements for pairing: <i>DATA</i> 2-3
PAU.E: <i>REL</i> 5-22	PIC intercomputer comm driver ID*52. See ID*52
print: REL 5-38	PIC intercomputer comm driver
PAUSE statement: FTN 3-68	PINIT
PBA: <i>MAC</i> 3-15 P 12	error messages: DATA A-6
PBB: <i>MAC</i> 3-15, B-12	linking: DATA 4-9
PBS: MAC 3-15 PC (set program capability) commands. LINE 3-17	running: DATA 4-20
PC (set program capability) command: LINK 3-17	pivot routine: <i>REL</i> 8-18
SECTL utility: SMM 5-6	DVPIV (double precision): REL 8-18
PC option: EDIT 3-26	DWPIV (EMA double precision): <i>REL</i> 8-18
PCAL: MAC B-13 PCAL cell sequence (CDS): PEL 2.4	VPIV (single precision): <i>REL</i> 8-18
PCAL call sequence (CDS): REL 2-4	WPIV (EMA single precision): <i>REL</i> 8-18
PCAL pages: MAC M 0 N 8	planning
PCALL macro: MAC M-9, N-8 PCL (Printer Control Language): PPNT 2-52	group accounts: SMM 2-7
PCL (Printer Control Language): PRNT 2-52	user accounts: SMM 2-7
escape sequence: PRNT 2-52	planning the system
font: PRNT 2-53	determining user requirements: SMM 1-4
horizontal pitch: PRNT 2-53	overview: SMM 1-4
language level: <i>PRNT</i> 2-52 page layout: <i>PRNT</i> 2-55	peripheral resource usage: SMM 1-7
paper source: PRNT 2-56	system applications: SMM 1-6
PCL levels of HP printer models: <i>PRNT</i> 2-52	user categories: <i>SMM</i> 1-6 playback file: <i>DBUG</i> 7-1, 7-10
print quality: PRNT 2-53	plotting a histogram: DBUG 5-20
pcl model file: PRNT 2-52	plus sign: FTN 2-7, 2-18
PCOUNT: FTN B-7, E-3	PNAME: <i>PROG</i> 7-14; <i>REL</i> 5-23
PE (parity error): SDM 9-2	pointer set-up: <i>DDM</i> 6-2, 7-1
pending line	pointers, list of, \$SETP: <i>REL</i> 5-42
character exchange: <i>EDIT</i> 4-26	POLL command: USER 6-137
deleting current: EDIT 2-29	polling: DDM 6-3; PROG 4-21
description: EDIT 1-12, 3-31	parallel: <i>HPIB</i> 5-7, 5-10, 5-12, 5-16, 5-17, 5-20,
displaying character edit information: <i>EDIT</i>	5-22
2-39	serial: <i>HPIB</i> 5-1, 5-8, 5-9, 5-10, 5-12, 5-15, 5-18
displaying line number: EDIT 2-21	types: <i>HPIB</i> 5-8
edits: <i>EDIT</i> 2-38, 3-31, 4-11, 4-34, 4-55, 4-56,	polling function: USER 6-137
4-59	polynomial
line mode display: <i>EDIT</i> 1-10	extended real: <i>REL</i> 3-130
line number: EDIT 2-21	quotient double precision: REL 3-32
pointer: EDIT 2-22	port map
return: EDIT 2-20	selection: DDM 7-8
screen mode display: EDIT 1-12	set up: DDM 7-7
setting location: EDIT 2-28	portability: FTN 8-5, B-9
starting screen mode: EDIT 3-34	position edit descriptor: FTN 4-18
pending line edits: EDIT 2-38, 3-31	position magnetic tape, PTATE: <i>REL</i> 5-24
peripheral: FTN 5-1	positional variables: LINK 4-8; USER 2-14
resource usage: SMM 1-7	positive difference, integer: <i>REL</i> 3-45
peripheral device support: PRIM 1-8	POSNT routine: <i>PROG</i> B-9, C-25
peripheral devices tested: SCSI 1-4	POST (post the DCB to a file): PROG C-26
PERR: SDM 5-8	posting: FTN B-13
personal mailbox: MAIL 5-1, 5-4	posting a file: EDIT 3-7
PHI chip: <i>HPIB</i> 2-3, 4-5	postmaster: MAIL 2-2, 3-3, 5-4, 7-1, 7-2, 7-3, A-4,
physical	A-6, B-1, B-2
backup: SMM 1-17	postmaster's administrative files: MAIL 7-1
backup utilities	/mail/admin/addressbook.mail: MAIL 7-2
ARSTR: <i>BKUP</i> 1-3, 2-2	/mail/admin/error.log: MAIL 7-3
ASAVE: <i>BKUP</i> 1-3, 2-19	/mail/admin/mail.cf: MAIL 7-1

/mail/admin/mailhayas, MAH 7.2	% EEL vorighton DDNT 4 11
/mail/admin/mailboxes: MAIL 7-2	&FFL variables: <i>PRNT</i> 4-11
/mail/admin/nitely.cmd: MAIL 7-3	banner
/mail/admin/traffic.log: MAIL 7-3	inhibit printing of: <i>PRNT</i> 4-3
pound sign: FTN F-1	printing: PRNT 4-3
power fail: <i>DDM</i> 3-5, 4-4; <i>SDM</i> 9-2; <i>USER</i> 8-9	carriage control: <i>PRNT</i> 4-4
power fail driver (ID.43): <i>SDM</i> 5-5	examples: PRNT 4-9
power fail storage area: <i>SDM</i> 2-7	form feeds: PRNT 4-4
power requirements: SCSI 1-5	form feeds and serial drivers: PRNT 4-4
power supply load: SCSI 2-2	loading PRINT: PRNT 4-11
powering up the system: GSA 1-2; PRIM 2-1	merging files: PRNT 4-5
PPC bus command	messages: PRNT 4-8
PPD secondary command: HPIB 4-7	operation: PRNT 4-7
PPE secondary command: HPIB 4-7	options: PRNT 4-1
PPOLL CONFIGURE statement: <i>HPIB</i> 5-6	PRINT administration: <i>PRNT</i> 4-11
PPOLL function: HPIB 5-7	printing files: PRNT 4-1
PPOLL subroutine: <i>HPIB</i> 5-4	running PRINT: PRNT 4-1
	suppress header: PRNT 4-4
PPOLL UNCONFIGURE statement: <i>HPIB</i> 5-7,	
5-8	using the PRINT utility: PRNT 4-1
PPSCH subroutine: HPIB 5-4	print variable: MAIL 5-6
PPSN, subroutine: HPIB 5-4	printer
PPU bus commands: HPIB 4-8	adding: PRNT 2-41
PR (set priority) command	classes: PRNT 2-4
BOOTEX: <i>SGI</i> 9-6, J-5	adding: PRNT 2-43
BUILD utility: SGI 10-3, I-4	interfaces: PRNT 2-3
from CI: USER 2-24, 4-9, 6-138	custom: PRNT 2-61
LINK utility: LINK 3-18	HP-supplied: <i>PRNT</i> 2-49
PRAM1 through PRAM4 parameters: <i>DRM</i> 1-14	local: PRNT 2-49
PRAM3 and PRAM4 parameters: <i>DRM</i> 1-8	modifying sources: <i>PRNT</i> 2-62
preamble: BKUP 1-7	passthru interface: PRNT 2-56
precedence: <i>FTN</i> 2-19, 2-26	remote interface: <i>PRNT</i> 2-57
precedence within CI: USER 6-2, 6-6, 6-70	rtestd interface: PRNT 2-50
precision: FTN 3-8	loading new forms: PRNT 2-44
precision of a subexpression: FTN 2-21	model files: PRNT 2-3
preconnected devices: FTN 5-4	format: PRNT 2-61
preconnected file: FTN 5-15	generic model: PRNT 2-50
predefined variables: <i>USER</i> 2-16	hpnp_passthru model: PRNT 2-60
PREPAIR	hpnp_pcl model: PRNT 2-59
error messages: DATA A-4	passthru model: PRNT 2-56
functions: DATA 4-14	pcl model: PRNT 2-52
linking: DATA 4-10	rbsd model: PRNT 2-58
modify system file: DATA 4-14	rhpux model: PRNT 2-58
prompts: DATA 4-14	rrte model: PRNT 2-57
running: DATA 4-14	remote: PRNT 2-57
	removing: PRNT 2-43
warning messages: DATA 4-16	printer configuration, automatic bring-up: <i>DRM</i>
preparation for boot: SGI 9-11	
preserve/delete: MAIL 3-12, 3-13	2-8
preventing program partition deadlock: <i>SDM</i> 3-9	printer/paper position bit: <i>DRM</i> 2-181
previous record: FTN 5-2	printing: EDIT 3-9
primary entry point: <i>PROG</i> 5-5	printing library error messages, ER0.E: <i>REL</i> 5-3
Primary System	printing messages: <i>MAIL</i> 3-1, 3-5, 3-15, 4-9
answer file: PRIM 2-12	priority
configuration: PRIM 2-2, B-1	boundary: SDM 3-1
libraries searched by LINK: <i>PRIM</i> B-3	LP spool system: <i>PRNT</i> 2-25
reserved area: <i>PRIM</i> 2-8	fence priority: <i>PRNT</i> 2-25
system resources: <i>PRIM</i> B-3	setting default for printer: <i>PRNT</i> 2-18
print pause message, .PAUS: REL 5-38	specifying priority of request: <i>PRNT</i> 2-15
print quality selection, PCL: PRNT 2-53	program: <i>USER</i> 4-2, 4-9
PRINT statement: <i>FTN</i> 3-69, 4-3, 4-26, 5-5	ProgramPriority: REL 7-38
PRINT utility: <i>USER</i> 1-1	real-time programs: <i>SDM</i> 3-7
&FFL module: PRNT 4-12	setting program

using BOOTEX: SGI 9-6, J-5	types: PROG E-1
using BUILD: <i>SGI</i> 10-3, I-4	violation, SglVio: <i>PROG</i> 13-2
using LINK: LINK 3-18	program capability, setting
privileged driver	using LINK: LINK 3-17
entry points: DDM 8-1	using SECTL: SMM 5-6
processing: DDM 8-1	program halt statements: <i>FTN</i> 3-4 program link instructions: <i>MAC</i> 4-1, 4-19, B-14
system entry points: <i>DDM</i> 8-1 trap cells: <i>DDM</i> 8-1	program location counter: MAC 1-11, 4-2
privileged interrupt mask: <i>DDM</i> 9-1	program profiler
privileged operation: <i>PROG</i> 12-1	displaying a histogram: DBUG 6-3
guidelines: PROG 12-4	features: DBUG 6-1
nesting: PROG 12-4	sample session: DBUG 6-2
system impact: PROG 12-4	starting profile mode: DBUG 5-26, 6-2
procedure: FTN 6-1	program relocatable
communication: FTN 6-11	counter: MAC 2-7
used as actual argument: FTN 6-11	space: <i>MAC</i> 1-11, 4-3, 4-9, 4-34
Proceed Across Terminations command: DBUG	program relocation: MAC 1-10
5-29	program scheduling, \$XQSB: DDM 7-3
Proceed command: DBUG 2-13, 5-28	PROGRAM statement: FTN 1-4, 3-70
Proceed Uplevel command: DBUG 5-30	alternate: FTN 3-70
processor, Fast FORTRAN (FFP): REL 2-6	program types
processor/interface specific rules: <i>PRIM</i> 1-8	RTE-6/VM: MAC O-1
profiling a program: DBUG 6-1	RTE-A: MAC O-1
ProgIsSuper, check for super program: <i>REL</i> 6-14 PROGRA listing: <i>GSA</i> 5-7	program unit: FTN 1-2, 1-4 program-to-program communication: PROG 4-11,
program: SDM 1-2	4-15
background: SDM 3-1	program(s)
BUILD: SDM 3-8	abort errors: USER A-3
common: SDM 1-6	breaking execution: <i>USER</i> 4-7, 6-13
communication: SDM 1-9	changing priorities: <i>USER</i> 4-9, 6-138
control: PROG 5-1	control command summary: <i>USER</i> 4-1
development: GSA 5-1; SDM 1-5	controlling: USER 4-1
cycle: LINK 1-1	displaying status: <i>USER</i> 2-6, 4-8, 6-141
dispatching: SDM 1-9	executing: USER 4-3
executable: GSA 5-2, 5-6	ID
file search sequence: LINK 4-5	duplicating: USER 4-6
default: LINK 4-5	segment description: USER 4-2
ID segment: PROG 8-65	segments: USER 4-5
interrupt: <i>SDM</i> 1-12 load and swap: <i>SDM</i> 3-8	identification: <i>USER</i> 4-2, 5-8 memory requirements: <i>USER</i> 4-9
management: SDM 1-1, 1-2	priorities: USER 4-2, 4-9
name: GSA 5-2	protection: USER 5-6
name with PNAME: PROG 7-14	protection through, capability levels (VC+):
overlay: <i>SDM</i> 1-4, 3-3	USER 5-6
partition assignment for background: SDM 3-2	removing: <i>USER</i> 4-7, 6-128
partition assignment for real-time: SDM 3-1	restarting: <i>USER</i> 4-8, 6-152
partition deadlock: SDM 3-8	restoring: <i>USER</i> 1-4, 4-5, 6-150
partitions: <i>SDM</i> 1-6	resuming execution: USER 4-8, 6-79
priorities: SDM 1-3	running: <i>USER</i> 4-2, 6-153
priority: GSA 5-3	with wait: USER 4-3
real-time: SDM 3-1	without wait: USER 4-4, 6-207
real-time priority: SDM 3-5	scheduling: DRM G-1; USER 4-2, 4-5
relocatable: GSA 5-2, 5-4	set run time: USER 6-11
restoration: SGI 9-6	shared: USER 4-11
source: GSA 5-2, 5-3	size, display/modify: <i>USER</i> 6-179
suspension: SDM 1-3	stopping: USER 6-128
swapping: <i>SDM</i> 1-3, 1-5 table: <i>SDM</i> 1-6, 1-8	suspending: <i>USER</i> 4-8, 6-176 system, missing: <i>USER</i> 8-7
transportability: SDM 11-9	time scheduling: USER 4-5
type: GSA 5-3	typical RTE-A interactive: USER 1-1
J1	71

unrestored: USER 1-4	pseudo done: DDM 4-6, 6-3
programmatic abort: <i>PROG</i> 3-11	pseudo driver
programmatic environment variable access: <i>PROG</i>	IDP31: DATA 2-1
14-1	relocation during generation: <i>DATA</i> 4-2
A-Register return: <i>PROG</i> 14-4	pseudo operations: MAC 2-5, 4-1, B-14
deleting a variable: <i>PROG</i> 14-3	PSTAT subroutine: <i>HPIB</i> 5-8
getting the value of a variable: <i>PROG</i> 14-2	PSTVM: PROG 9-43
retrieving modification count: <i>PROG</i> 14-3	PT command: <i>SGI</i> 10-3, I-3
setting a variable: <i>PROG</i> 14-2	PTAPE: REL 5-24
programmatic logon: REL 6-4	PTE: <i>SDM</i> 9-3
programmatic scheduling: DBUG 2-9	PTE page: SDM 9-3
programmatic spooling: PROG 11-1	PU command: GSA 3-8, 3-11; USER 3-25, 3-33,
programming aids: MAC 1-10	6-143
programming considerations, LP spool system:	punctuation characters: <i>EDIT</i> 2-23, 2-31, 2-34
PRNT 2-62	purge file command PU: GSA 3-8
programming with VMA and EMA: <i>PROG</i> 9-14	Purge Group (PU G) command: SMM 3-27
ProgramPriority: REL 7-38	PURGE routine: <i>PROG</i> B-11, C-26; <i>USER</i> B-34
programs and partitions: <i>SDM</i> 3-1	Purge User (PU U) command: SMM 3-28
PROGRAMS directory: <i>SGI</i> 9-14	purging
ProgramTerminal: REL 7-39	a file: EDIT 3-11
PROGS: SDM 5-8	a spool file: <i>PROG</i> 11-5
PROM storage module driver ID*36. See ID*36	directories: USER 3-33
PROM storage module driver	files: <i>USER</i> 3-25, 6-143
PROM system loading: SGI H-10	text: EDIT 2-12
prompt	purging directories: GSA 3-4, 3-8
logon: USER 5-1	PURVM: PROG 9-43
RTE: <i>USER</i> 1-6, 8-8	put a character, SPUT: REL 10-13
system: USER 8-8	PutBitMap: REL 12-82
prompt ":": MAIL 2-1, 2-3	PutByte: REL 12-83
prompt "Mail>": <i>MAIL</i> 2-1–2-3, 3-1	PutDibit: REL 12-83
Prompt Character (PC) option: <i>EDIT</i> 3-26	PutInCommas: REL 7-39
PROMT program: SGI 11-5	PutNibble: REL 12-84
properties, file: USER 3-1	PWD command: <i>USER</i> 6-145
PROT command: GSA 3-12; USER 3-27, 3-33,	
6-139	Q
protecting, access to programs: <i>SMM</i> 4-12	G .
protecting paired disks: DATA 4-22	Q bit: <i>DDM</i> 2-4, 2-13
protection: GSA 3-11	Q command: EDIT 4-57
directory: <i>USER</i> 3-33, 6-139	Q option: <i>MAC</i> E-2
file: USER 3-27, 6-139	QU (quantum timeslice) command: SGI 7-11, 9-5,
volume: <i>USER</i> 3-37, 6-139	J-7
protection status command: GSA 3-12	QU option: EDIT 3-26
protocol chart examples: <i>DRM</i> D-1	quantum timeslice command QU: SGI 7-11
protocols, PCL (Printer Control Language): PRNT	QueryTimer: PROG 13-27
2-52	queue suspended (QU): PROG 5-6
escape sequence: PRNT 2-52	queued program scheduling: PROG 5-1
font: PRNT 2-53	quick reference task charts: EDIT 2-36
horizontal pitch: <i>PRNT</i> 2-53	Quiet (Q) option: EDIT 3-24
language level: <i>PRNT</i> 2-52 page layout: <i>PRNT</i> 2-55	quiet mode: <i>EDIT</i> 3-4, 3-26
page layout. 1747 2-33 paper source: PRNT 2-56	quit: MAIL 2-4, 3-13, 3-19, 4-3, 4-11
PCL levels of HP printer models: <i>PRNT</i> 2-52	quiting EDIT: EDIT 3-10
print quality: PRNT 2-53	saving changes: EDIT 2-17
prototype ID segments: <i>PROG</i> 8-65; <i>SDM</i> 2-12;	without saving changes: <i>EDIT</i> 2-17
USER 4-6, 6-199	screen mode: EDIT 1-11, 3-42
PRTM: <i>PROG</i> 7-1	quitting Debug: DBUG 3-7
PRTN: FTN 7-7, A-3; PROG 7-1	quotation mark
PRTN call: <i>SMM</i> 3-31, 3-33, I-2, I-3	double: FTN 3-45
PS (page align overlays) command: LINK 3-18	single: FTN 2-10
PS command: <i>USER</i> 2-24, 4-8, 6-141	quotient, polynomial, double precision: <i>REL</i> 3-32

quoting: USER 2-23	read protection
	directories: GSA 3-12
n.	files: <i>GSA</i> 3-12
R	read request, buffered: DRM 2-179
R command: <i>EDIT</i> 3-32, 4-59	read request, serial I/O drivers: <i>DRM</i> 2-150
	block mode read: <i>DRM</i> 2-153
R option: MAC E-1	AH: auto-home bit: <i>DRM</i> 2-154
race conditions and RNRQ: <i>PROG</i> 2-6	BUFR and BUFLN: <i>DRM</i> 2-150
raise	control word CNTWD: DRM 2-151
complex to integer power: REL 3-78	auto-home bit: DRM 2-151
double real to double real power: <i>REL</i> 3-83	
double real to real power: <i>REL</i> 3-85	binary bit: DRM 2-152
extended real to integer power: <i>REL</i> 3-84	echo bit: <i>DRM</i> 2-151
real to double real power: REL 3-106	pseudo full duplex (A400 only): <i>DRM</i> 2-153
real to real power: <i>REL</i> 3-122	transparency bit: DRM 2-151
RAL: MAC 3-5, B-4	Z: write/read bit: DRM 2-151
RAM: <i>MAC</i> B-18, J-11	special status read: <i>DRM</i> 2-154
RAM disk	READ statement: <i>FTN</i> 3-72, 4-23, 4-28, 5-5, 5-6
configuring: SGI C-11	from file: FTN 3-73
driver IDR37. See IDR27 RAM disk interface	from standard input unit: FTN 3-72
driver	list-directed: FTN 8-3
initialization: SGI I-9	read variable: MAIL 5-7
random file access: SDM 1-16	READ/ENTER/INPUT/WRITE/PRINT state-
random number generator functions: FTN B-15	ments: HPIB 4-22
range of a DO loop: FTN 3-31	read/write parameter definitions: <i>DRM</i> 1-4
range reduction for SIN, .COS, .TAN, .EXP,	BUFLN: DRM 1-8
.TANH; /CMRT: <i>REL</i> 3-168	BUFR: DRM 1-8
RAR: <i>MAC</i> 3-5, B-4	CNTWD: DRM 1-5
RBL: <i>MAC</i> 3-5, B-4	ecode: DRM 1-5
RBR: <i>MAC</i> 3-5, B-4	KEYWD: DRM 1-8
rbsd model file: PRNT 2-58	PRAM3 and PRAM4: DRM 1-8
RBUFR	ZERO: DRM 1-8
in INPRS: PROG 7-8	read/write request conventions: <i>DRM</i> 1-4
in PARSE: PROG 7-7	ReadA990Clock routine: <i>REL</i> 7-40
RCODE EXEC 14: PROG 7-3	READF routine: <i>PROG</i> B-6, C-27
RCPAR: FTN 7-9, B-16	reading
RD bit: <i>DRM</i> 2-180	a message file from CI: MAIL 6-3
rdmsg: MAIL 6-3	current message: MAIL 4-3, 4-5
RE (relocate) command, LINK utility: LINK 3-18	encoded files: MAIL 6-6
RE (relocate) LINK command: GSA 5-5	Mail/1000 version number: <i>MAIL</i> 3-20
RE command	
abnormal termination: <i>DATA</i> 3-13	message queues: MAIL 7-4
format: DATA 3-12	messages: MAIL 3-1, 3-12, 5-8 names of Mail/1000 objects: MAIL 3-20
function: DATA 3-12	
read, write to disk during restore: DATA 3-12	the host mailbox list: MAIL 6-1
restriction on use of BR command: <i>DATA</i> 3-13	reading in a file: EDIT 2-9
runstring: DATA 3-12	reading the screen: EDIT 2-11, 2-24
selecting, "best" paired disk half for restore:	README file: SCSI 1-3, 3-2
DATA 3-13	REAL: FTN B-8
usage message: DATA 3-12	real
RE option: <i>EDIT</i> 3-26, 4-88, 4-90	data type: FTN 2-7
re-executing a command: <i>EDIT</i> 2-35	format: FTN D-2
re-initializing the multiuser account system: SMM	to double real, conversion: <i>REL</i> 3-65
2-14	to integer, conversion: <i>REL</i> 3-47
READ: <i>DDM</i> 7-5	real and double precision format descriptors: FTN
read data word/map selected, \$READ: DDM 7-5	4-10
read input buffer: <i>REL</i> 5-18	REAL function: FTN B-5
read memory address	real remainder: <i>REL</i> 3-9
IGET: <i>REL</i> 5-10	REAL routine: <i>REL</i> 3-53
IXGET: REL 5-10	REAL statement: FTN 2-7, 3-83
read one word without setup, \$ONER: DDM 7-6	real to integer, truncate: <i>REL</i> 3-48

real values in user buffer and buffer length: <i>PROG</i> 4-19	match one or more occurrences (+): <i>EDIT</i> 5-13 match zero or more occurrences (*): <i>EDIT</i> 5-12
REAL*4: FTN D-2	Regular Expressions (RE) option: <i>EDIT</i> 3-26, 4-4,
REAL*4 statement: FTN 2-7, 3-83	4-13
REAL*6: FTN D-3	REIO: <i>FTN</i> B-7, B-9, E-3
REAL*8: FTN D-4	REIO (buffered I/O): PROG 3-10
REAL*8 statement: <i>FTN</i> 2-8, 3-83	reject program: PRNT 2-35
real-time	relational expression: FTN 2-18, 2-24
executive: SDM 1-1	relational operator: FTN 2-24
programs: SDM 1-3	relinking: LINK 4-6
systems: SDM 1-1	LK command: <i>LINK</i> 3-12
real-time, clock, operation: <i>PROG</i> 6-1 reassign file-protection status: <i>USER</i> 3-27	RELOC: <i>MAC</i> 1-11, 4-3, 4-13, 4-23, 4-34, 4-41, B-14
rebooting the Primary System: <i>PRIM</i> 2-12	RELOC command: <i>MAC</i> 4-9, M-8
receiving messages: MAIL 1-1, 2-1, 3-11	RELOC macro: MAC N-12
record: FTN 5-1	relocatable
definition of: FTN 5-1	assembly: MAC E-1
end-of-file: FTN 5-2	code: GSA 5-4; MAC 1-4
formatted: FTN 5-1	expressions: MAC 2-10
unformatted: FTN 5-2	extended records: MAC 1-2, 1-3
record file: DBUG 7-1, 7-10	file: GSA 5-2, 5-4, 5-5
record length: USER 3-12	search sequence, default: LINK 4-4
record length values: GSA 3-1	module: <i>GSA</i> 5-2, 5-4
record lengths: SDM 10-5	name (output file): GSA 5-4
record terminator edit descriptor: FTN 4-19	non-extended records: MAC 1-2, 1-3
record-all file: DBUG 7-10	program: GSA 5-2, 5-4; MAC 4-4
recovering purged files: GSA 3-8	record formats: MAC H-1
recovery mode: <i>EDIT</i> 3-4, 3-47, B-3	space
See also recovery operation	base page: MAC 1-11
recovery mode error messages: <i>EDIT</i> 3-48	common: <i>MAC</i> 1-11 EMA: <i>MAC</i> 1-11
recovery operation: <i>EDIT</i> 1-2, 1-8, 3-4, 3-46 recursion: <i>FTN</i> H-2, H-3; <i>MAC</i> 5-13	labeled common: MAC 1-11
recursive copy: USER 6-29	program: MAC 1-11
redefining new mail notification runstring: MAIL	SAVE: <i>MAC</i> 1-11
5-12	relocatable address: FTN 7-2
redefinition of opcodes: MAC 5-11	relocatable files, restoring: <i>PRIM</i> 2-9
redirection, FGREP/GREP: USER 6-81	RELOCATE command: SGI 4-3
redrawing the screen: MAIL 4-3	relocating modules: SGI 4-1
reduce argument, for SIN, COS, TAN, EXP: REL	relocation
3-73	DPTRP: DATA 4-2
redundant OPEN call: FTN 3-65	IDP31: <i>DATA</i> 4-2
referencing an external procedure: FTN 6-17	sequence: LINK 4-9
refresh: DBUG 5-35	relocation using system common: SDM 8-3
refusing messages: MAIL 5-10, 5-11	remailing messages: MAIL 3-9, 3-15
register	remainder
A-and B-Register return values: <i>PROG</i> 1-4	double real: <i>REL</i> 3-101 extended real: <i>REL</i> 3-31
usage: PROG 1-4 register reference	integer: REL 3-52
alter-skip group: MAC 3-5, 3-8, B-6	real: REL 3-9
shift-rotate group: MAC 3-5, B-4	remote access: SDM 10-8
regular expression, routines: <i>REL</i> 7-41	remote file, access, within LINK: LINK 4-5
Regular Expressions	remote files
See also metacharacter	access limitations: USER 3-44
and RTE user interface: EDIT 5-27	closing: USER 3-43
building CI command file: EDIT 5-27	considerations: USER 3-43
creating patterns: EDIT 5-20	multiuser: USER 3-42
definition: <i>EDIT</i> 3-22, 5-2, B-3	specifying: USER 3-41
exercises: EDIT 5-25	remote mode: HPIB 4-16
gathering data from files: EDIT 5-29	remote printer: PRNT 2-3, 2-57
line length limitations: EDIT 5-5, 5-6	adding: PRNT 2-42

interface: PRNT 2-57	reserved area: PRIM 2-8
model files: PRNT 2-57	reserved partition memory descriptors: SDM
REMOTE statement: <i>HPIB</i> 4-16	11-27, 11-30
remote terminal download: <i>DRM</i> H-1	
	Reset Group (RE G) command: SMM 3-29
Remove (R) option: EDIT 3-24	Reset User (RE U) command: SMM 3-29
remove SCSI card: SCSI 2-11	ResetAcctTotals, reset user and group accounting
remove trailing blanks, TrimLen: <i>REL</i> 7-52	totals: REL 6-15
removing	ResetTimer: <i>REL</i> 7-40
files: <i>USER</i> 6-148	resetting, multiuser accounting information: SMM
printer, LP spool system: <i>PRNT</i> 2-43	I-1
programs: USER 4-7, 6-128	RESN command: SGI 7-9
system utilities: LINK 3-23	RESOLVE (system macro): MAC L-17
working directory: LINK B-1	resouce number, locked, WhoLockedRn: <i>REL</i>
REN bus command: HPIB 4-16	7-53
REN bus management line: HPIB 1-7	resource management: PROG 2-1
Rename Category (RN,C) command: SMM 5-6	resource number: SGI 7-1
Rename Function (RN,F) command: SMM 5-7	command (RESN): SGI 7-9
renaming files: SCSI 3-6; USER 3-24, 6-124, 6-149	considerations: PROG 2-5
renaming files with CO and MO: GSA 3-9	display information on: USER 6-200
renaming folders: MAIL 3-18	resource number table: SDM 1-9, 11-11
reordering modules: LINK 4-1	resource numbers: SDM 1-9
REP: <i>MAC</i> B-18, J-5	resource sharing with RNRQ: <i>PROG</i> 2-1
REPEAT: MAC 4-63, 4-66, B-17	restart: DDM 5-7
repeat (_) command: <i>EDIT</i> 4-92, 4-98	restart a program: USER 4-8, 6-152
repeat specifications: FTN 4-21	restart a spool file: <i>PROG</i> 11-5
repeat-command procedure: GSA 2-4	restarting a program: GSA 2-5
repeating command string: <i>EDIT</i> 4-98	restore mirrored volume command, RE: DATA
replace pending line with text. See R command	3-12
replacement disk formatting: <i>DATA</i> B-3	restoring
replacement formats: MAC 3-18	programs: SGI 9-6; USER 4-5, 6-150
replacing	replacement disk mirrored volumes: DATA B-3
a file: EDIT 4-16	restoring files from media: <i>PRIM</i> D-1
a file without exiting EDIT: EDIT 4-87	CI CO format: PRIM D-4
text: EDIT 3-33	floppies: <i>PRIM</i> D-5, D-6
See also pattern exchange	FST format: <i>PRIM</i> D-2
replied-to message id: MAIL 7-13	HPHPHP file: <i>PRIM</i> D-1
reply to different address headers: MAIL 3-7	TF format: <i>PRIM</i> D-3
replying	VCP bootable format: <i>PRIM</i> D-3
to a group: MAIL 4-7	restoring the Primary System: <i>PRIM</i> 2-8
to messages: <i>MAIL</i> 3-13, 4-7, 5-11	RESTR program: SGI 11-6
to messages automatically: MAIL 5-11	resume program execution: USER 4-8
to the sender: MAIL 4-3	resume suspended program: USER 6-79
request	rethread bit: PROG 4-18, 4-27
advance inhibit: <i>DDM</i> 4-6	rethread request: <i>PROG</i> 4-25
code subfunction: <i>DDM</i> 2-8	format: PROG 4-26
control block: <i>DDM</i> 1-1	parameters: PROG 4-26
delay: <i>DDM</i> 3-6, 4-6	retrieve line length of all files: <i>PROG</i> 11-7
flush: DDM 5-6	retrieve spool file status: <i>PROG</i> 11-6
initiation list: <i>DDM</i> 2-4	retry: MAIL A-4, A-8
interaction: <i>DDM</i> 1-4	retry queue: MAIL 6-3
length: DDM 2-11	return, data on timeout (RD bit): DRM 2-180
linking: DDM 1-1	Return (RT) option: EDIT 3-26, 4-4
parameters: DDM 2-11	return address adjust
types: DDM 5-1	.ENTC: <i>REL</i> 5-28
request ID, sequence number: PRNT 2-45	.ENTN: <i>REL</i> 5-28
required software: FTN 1-5	.ENTP: <i>REL</i> 5-29
Required User Capability (RQ) command: SMM	.ENTR: <i>REL</i> 5-29
5-7	RETURN command: USER 2-24, 6-147
reserved, partition: SGI 9-6, J-6	Return command: DBUG 5-30
changing memory requirements: USER 4-9	return direct address. AddressOf: REL 7-1

, ID	DNDO FENT 11 DDOC 0.1 CDM 11 11
return group ID	RNRQ: FTN 7-11; PROG 2-1; SDM 11-11
GroupToId: REL 6-12	and race conditions: <i>PROG</i> 2-6
OwnerToId: <i>REL</i> 6-14	control word: <i>PROG</i> 2-4
return group name	deadly embrace: PROG 2-7
GPNAM: REL 6-11	order of precedence: PROG 2-4
IdToGroup: REL 6-12	resource number considerations: <i>PROG</i> 2-5
return owner's ID, GetOwnerNum: REL 6-10	sequence: <i>PROG</i> 2-3
return segment address, MyIdAdd: REL 7-36	RO (reorder) command: LINK 3-20
return session number	ROM loader: SDM 9-2
RTNSN: REL 6-16	root directory
USNUM: REL 6-20	entry: <i>SDM</i> 12-4, 12-5
RETURN statement: <i>FTN</i> 3-34, 3-76, 6-2, 6-3, 6-7,	header: SDM 12-4
6-16	trailer: SDM 12-4
return status: USER 2-24	ROTATE (system macro): MAC L-15
return user ID, OwnerToId: REL 6-14	round, real: REL 3-39
return user name	rounding of digit string produced by .FMUO,
IdToOwner: REL 6-13	.FMUR: REL 5-34
SessnToOwnerName: REL 6-16	routines
USNAM: REL 6-19	\$CLWRT: <i>DDM</i> 7-10
return user table address, LUSES: <i>REL</i> 6-13	\$DIOC: <i>DDM</i> 7-1
return variables, CI: FTN 7-7	\$DMPR: <i>DDM</i> 7-3
rev. 4 firmware: <i>SDM</i> 5-13	\$DVLU: <i>DDM</i> 7-2
Reverse (V) option: <i>EDIT</i> 3-24	\$MSALC: DDM 7-9
reverse match: EDIT B-3	\$MSRTN: <i>DDM</i> 7-9
reversing commands: EDIT 2-29	\$ONER: <i>DDM</i> 7-6
reviewing commands entered: <i>EDIT</i> 2-35	\$ONEW: <i>DDM</i> 7-7
REWIND statement: <i>FTN</i> 3-78, 5-5, 5-13	\$READ: <i>DDM</i> 7-5
	\$SELR: <i>DDM</i> 7-8
rewind tape, .TAPE: <i>REL</i> 5-40	
Rex routines: <i>REL</i> 7-41	\$SETM: <i>DDM 7-5</i>
RexBuildPattern: REL 7-42	\$SETR: <i>DDM</i> 7-7
RexBuildSubst: REL 7-42	\$UpIft: <i>DDM</i> 7-2
RexExchange: REL 7-43	\$UPIO: <i>DDM</i> 7-2
RexMatch: REL 7-44	\$WRIT: <i>DDM</i> 7-6
RHPAR: FTN 7-9, B-16	\$XQSB: <i>DDM</i> 7-3
rhpux model file: PRNT 2-58	callable from FORTRAN: REL 2-6
RÍNFO	callable from Pascal: REL 2-7
calling RINFO: SMM I-1	format of: <i>REL</i> 3-1, 4-1, 5-1
loading RINFO: SMM I-1	row-major order: FTN 3-26
protection: SMM I-2	RP command: <i>SGI</i> 9-6, 10-3, I-3, J-5; <i>USER</i> 4-2,
return values: SMM I-2	4-6, 6-150
rlpdaemon program: <i>PRNT</i> 2-37	RPL: MAC 4-19, 4-24, B-14, H-13, H-15; REL 2-6
rlpout program: PRNT 2-37	RPL modules: SDM 5-12
RM (relocate module) command: LINK 3-19	RRL: <i>MAC</i> 3-12, B-11
RM command: USER 6-148	RRR: <i>MAC</i> 3-12, B-11
rmail: <i>MAIL</i> 6-3, 7-3, 7-5, 7-14, A-4, A-10, A-11,	rrte model file: <i>PRNT</i> 2-57
B-1, B-2	RS command: <i>SGI</i> 7-10; <i>USER</i> 1-5, 4-8, 6-152
RMOTE subroutine: HPIB 4-15	RSA: <i>MAC</i> 3-16, B-13
RMPAR: FTN 7-27; REL 5-25	RSB: <i>MAC</i> 3-16, B-13
in EXEC 9, 10, 23, 24: <i>PROG</i> 5-11	RSS: <i>MAC</i> 3-8, B-6
recover parameters: PROG 7-2	RT option: EDIT 3-26
system library routine: <i>PROG</i> 5-2	RT rethread bit: <i>PROG</i> 4-18, 4-27
using to retrieve extended status	RT_ER: REL 5-26
disk drive: SCSI A-4	RTAGN: SCSI 3-5
tape drive: SCSI A-9	RTAGN program
RMPAR call: SCSI A-4, A-9	error messages: SGI A-1
RMPAR subroutine: HPIB 5-9, 5-13, 5-14	overlaying files during execution: SGI 2-4
RMTERM: DRM H-1	runstring: SGI 2-1
RN. See resource number	RTE configuration: MAIL A-2
RN command: <i>USER</i> 3-20, 3-24, 6-149	RTE operating system: <i>EDIT</i> 2-2, 3-12
rnf: <i>MAIL</i> 3-18	and EDIT regular expressions: <i>EDIT 5-27</i>

error/information messages: EDIT A-14	a program on Mail/1000 messages: MAIL 3-21
file system errors: <i>EDIT</i> 3-45	a program with wait: USER 4-3
RTE-6/VM: EDIT 1-1	a program without wait: USER 4-4, 6-207
RTE-A: EDIT 1-1	CI from Mail/1000: <i>MAIL</i> 3-22, 4-10
user interface: <i>EDIT</i> 2-7, 2-17, 2-19, 2-27, 3-11	LINK: LINK 2-1
RTE prompt: USER 1-6, 8-8	interactively: LINK 2-4, B-1
RTE-6/VM Operating System: FTN 1-2	Mail/1000 in line mode: MAIL 3-1
RTE-A Hello program: <i>EDIT</i> 1-4	Mail/1000 in visual mode: MAIL 4-1
RTE-A Operating System: FTN 1-2, 7-14, H-1	programs from Mail/1000: MAIL 3-21
RTE-A signals: <i>PROG</i> 13-1	programs on Mail/1000 messages: MAIL 3-13
available: <i>PROG</i> 13-1	programs on the message file: MAIL 3-9
blocking signals: <i>PROG</i> 13-15	rmail from CI: MAIL 6-3
environment buffer: <i>PROG</i> 13-12	RTAGN: SGI 2-1
introduction to: <i>PROG</i> 13-1	the text editor automatically: MAIL 5-5
sending signals: <i>PROG</i> 13-15	running a program: EDIT 4-60; FTN 7-9; GSA 5-7
SglIO (Class I/O completion): <i>PROG</i> 13-4	running debug: <i>DBUG</i> 2-11
SglVio – program violation: <i>PROG</i> 13-2	running Macro/1000: MAC E-4
timer completed – SglAlrm: <i>PROG</i> 13-3	running out of SAM (VC+): USER 5-8
Timer subroutine calling sequences: <i>PROG</i>	runstring
13-27	defaults: LINK 4-5
user definable (SglUsr1 and SglUsr2): PROG	definition: <i>EDIT</i> 1-2, 1-6, B-3
13-3	description: EDIT 3-3
RTE-A/VC+ operating system: GSA 1-3	examples: LINK 2-5; MAC E-7
RTE_INSTALL.CMD. See loading RTE programs	file recovery: EDIT 3-47
RTE-6/VM program types: MAC O-1	including editing commands in: EDIT 3-49
RTE-A program types: MAC O-1	including S command: EDIT 1-11, 2-10
RTE-A	option, getting: REL 7-26
overview: PROG 1-1	options: <i>EDIT</i> 3-3; <i>LINK</i> 2-2 parameters: <i>MAC</i> E-4
VC+ System Extension Package: <i>PROG</i> 10-1	redirection command, getting: <i>REL</i> 7-28
RTEA1.CMD. See loading RTE programs	screen command in: EDIT 3-34
RTEA2.CMD. See loading RTE programs	variations: EDIT 2-7
RteAllocShema: PROG 9-27, 9-30	RV command: SGI 9-7, J-6
RteDateToYrDoy: REL 7-44	RVA: <i>MAC</i> 3-16, B-13
RteErrLogging: PROG 7-13	RVB: MAC 3-16, B-13
RteExtendedEV: PROG 9-20	RWNDF (rewind a file or device): <i>PROG</i> C-30
RtePrimeShInfo: PROG 9-31 RteRenameShema: PROG 9-31	Territor (Terrina a line of action). The of a so
RteReturnShema: PROG 9-29, 9-30	
RteShellRead: REL 7-45	S
RteTimeToHMSC: REL 7-46	Chit. DDM 20
RTIOA: SDM 5-8	S bit: <i>DDM</i> 2-8 S command: <i>EDIT</i> 1-11, 2-10, 2-19, 2-27, 3-34,
RTIOA module: SDM 5-8	4-61
RTN1 optional parameter EXEC 21: <i>PROG</i> 4-18	S-Register set, ISSR: <i>REL</i> 5-15
RTN2 optional parameter EXEC 21: PROG 4-18	S2 command: <i>SGI</i> 9-2, J-2
RTN3 optional parameter EXEC 21: <i>PROG</i> 4-18	SA command: <i>SGI</i> 9-3, J-3
RTNSN, return session number: <i>REL</i> 6-16	SA2DE, A2 to decimal conversion: <i>REL</i> 10-31
RTRAP: REL 5-6	SADD, substring add: <i>REL</i> 10-17
ru: <i>MAIL</i> 3-21	SAE: <i>MAC</i> 3-5, B-4
RU command: <i>EDIT</i> 3-11, 3-50, 4-60; <i>GSA</i> 2-1;	SAM: <i>SDM</i> 5-9
USER 3-34, 4-2, 6-153	See also System Available Memory (SAM)
rules for forming file names: GSA 3-3	class I/O requirements: SDM 2-9
Run (RU) command: SMM 3-30	displaying status of, SAM utility: USER 6-156
RUN command: FTN 3-70	management: SDM 2-8
Run command: DBUG 5-30	recovery: SMM 1-20
run length encoding: REL 12-4, 12-5	recovery using RESTR: SGI 11-6
run mode: SDM 1-10	running out: SGI 11-6; SMM 1-20
run program command RU: GSA 2-1	running out of: USER 5-8
running	string passage requirements: SDM 2-10
a program: USER 4-2	SAM command: SGI 7-10
RU command: USER 6-153	sam program: PRNT 2-42

SAM utility: USER 6-156	system: EDIT 3-47
loading: USER 6-158	scratch file command: LINK 3-6
returned values: USER 6-157	scratch LU, specifying: LINK 3-6; SGI 9-4, J-3
running SAM with AL: USER 6-157	screen
running SAM without AL: USER 6-156	accessing next: EDIT 2-15, 3-38, 4-62
SamInfo (RTE-A only): REL 7-46	accessing previous: <i>EDIT</i> 2-15, 3-38, 4-62, 4-63
sample, page mode application: <i>DRM</i> F-1	advance: EDIT 2-15
SAVE relocatable space: <i>MAC</i> 1-11, 4-3, 4-9, 4-22	brackets: EDIT 2-11, 2-21, 3-34, 4-66
SAVE statement: <i>FTN</i> 3-79, 6-16, E-3, H-2, H-3	copy: EDIT 4-68
saving	display: <i>EDIT</i> 2-11, 2-16, 3-35
a file: EDIT 2-17, 2-24, 3-5	error message: EDIT 2-12
and exiting EDIT: EDIT 2-17	extended: EDIT 3-35
file after abnormal abort: EDIT 3-46, 3-47	line limit, show: EDIT 3-35
line marks: EDIT 2-24	line overlap: EDIT 2-14, 3-35
screen edits: <i>EDIT</i> 2-15, 3-37, 3-42	overflow protection: EDIT 3-35
without exiting EDIT: <i>EDIT</i> 2-24	read and write: <i>EDIT</i> 2-11
saving a message to another folder: MAIL 4-8	size, show: EDIT 3-35
saving message copies automatically: MAIL 5-7	wrap-around: EDIT 2-12
saving modified file: GSA 4-5	Screen (S) command: EDIT 2-10
SAX: <i>MAC</i> 3-10, B-7	Screen Default (SD) option: <i>EDIT</i> 2-11, 3-27, 3-35
SAY: MAC 3-10, B-7	Screen line Limit (SL) option: <i>EDIT</i> 2-11, 3-27, 3-33
SB save class buffer bit	screen mode
Class Get: PROG 4-27	command: EDIT 1-11
EXEC 17: <i>PROG</i> 4-12	commands: EDIT 4-61
EXEC 18: <i>PROG</i> 4-12	control key combinations: <i>EDIT</i> 2-14, 3-36, 4-61
EXEC 19: <i>PROG</i> 4-23	copy block of text: <i>EDIT</i> 4-6
EXEC 20: <i>PROG</i> 4-12	defaults: EDIT 4-67
EXEC 21: <i>PROG</i> 4-19	definition: EDIT B-3
SBE: <i>MAC</i> 3-5, B-4	description: <i>EDIT</i> B-3 description: <i>EDIT</i> 1-10, 1-11, 2-10, 3-34
SBS: <i>MAC</i> 3-4, B-3	
SBT: <i>MAC</i> 3-4, B-3	double execution of control keys: EDIT 2-15
SBX: <i>MAC</i> 3-10, B-7	editing: <i>EDIT</i> 1-2, 1-11, 2-4, 2-10, 3-34, 4-61
SBY: <i>MAC</i> 3-10, B-7	editing commands: EDIT 2-37
SC (specify scratch LU) command: SGI 9-4, J-3	entering: EDIT 4-61
SC (system common) command: LINK 3-20	error message: EDIT 2-12, 3-42, 4-66
SC command: EDIT 4-68	exiting: <i>EDIT</i> 2-11, 2-17, 2-21, 3-34, 3-42
SC save class number bit: <i>PROG</i> 4-19	line commands: <i>EDIT</i> 2-20, 3-36 line marks: <i>EDIT</i> 2-23, 2-24
scalar-vector arithmetic routines: <i>REL</i> 8-11	maximum lines: EDIT 2-23, 2-24
scale factor: FTN 4-20, E-2	move block of text: EDIT 4-9
SCARY, D2 decimal substring carries: <i>REL</i> 10-33	quit: EDIT 3-38, 4-63
SCHED: SDM 5-9	single execution of control keys: <i>EDIT</i> 2-15
schedule list: SDM 1-2	SCSI
scheduled program: GSA 2-2	boot devices: SCSI 6-1
scheduling, a program: <i>DRM</i> G-1; <i>PROG</i> 5-1;	card address: SCSI 2-6
USER 4-2, 4-5	disk device driver DDQ30. See DDQ30 SCSI
Scheduling a Program without Wait: <i>DBUG</i> 5-17	disk device driver DDQ30. See DDQ30 SCS1
scheduling programs: <i>DDM 7-3</i>	disks
SCOM	configuring: SGI C-4
compare operation: <i>USER</i> 6-162	driver parameters: SGI C-5
error messages: USER 6-170	interface driver IDQ35. See IDQ35 SCSI inter-
examples: USER 6-163	face driver
returned values: USER 6-162	system directory: SCSI 6-2
status interrogation: USER 6-163	tape device driver DDQ24. See DDQ24 SCSI
scoping rules: DBUG 4-3	
scratch cartridge command: LINK 3-6	tape device driver SCSI bus configuration rules: <i>PRIM</i> 1-4
SCRATCH directory: SGI 9-14	SCSI DDS tape: <i>PRIM</i> C-1
scratch directory file: <i>EDIT</i> 3-47 scratch file: <i>FTN</i> 5-5, 5-8, 5-10	loading into drive: <i>PRIM</i> 2-5
definition: EDIT 1-8, B-3, C-2	SCSI-only system: SCSI 6-1
specifying: LINK 3-6	SD option: <i>EDIT</i> 2-11, 3-27

SD1D2, D1 to D2 decimal format conversion: <i>REL</i> 10-37	secondary command PPD—Parallel Poll Disable: <i>HPIB</i> 4-7
SD2D1, D2 to D1 decimal substring conversion:	PPE—Parallel Poll Enable: HPIB 4-7
REL 10-38	secondary SHEMA areas: <i>PROG</i> 9-16
SDC bus command: HPIB 4-6	Secondary STEAMY areas. THOS 3 To
SDCAR, D1 decimal substring carries: <i>REL</i> 10-34	seconds since 12 AM January 1, 1970: <i>REL</i> 7-47
SDEA2, D2 to A2 substring conversion: <i>REL</i>	DayTime: REL 7-21
10-36	SECOS: SDM 5-9
SDIV, divide substrings: <i>REL</i> 10-19	SECTL commands
SE (search) command: LINK 3-20	*: SMM 5-8
SE command: <i>EDIT</i> 2-7, 2-11, 3-25, 3-29, 3-36,	Edit Capability (EC): SMM 5-3
4-69, 5-8	Exit (E \hat{X}): SMM 5-3
search	Generate Table (GT): SMM 5-4
and exchange commands: EDIT 3-24	Help (HE or ?): <i>SMM</i> 5-4
limit: EDIT 2-32	Initialize (IN): SMM 5-5
range: EDIT 2-31	List Table (LT): SMM 5-5
window: <i>EDIT</i> 3-18, 5-8, 5-9	Program Capability (PC): SMM 5-6
search and replace. See pattern exchange, Y com-	Rename Category (RN,C): SMM 5-6
mand	Rename Function (RN,F): SMM 5-7
SEARCH command: SGI 4-3	Required User Capability (RQ): SMM 5-7
search path for files: GSA 3-1, 3-4, 3-6	Switch (SW): SMM 5-8
search sequence: LINK 4-3, 4-9, 4-10; USER 3-34	SECTL utility
specifying a directory: <i>USER</i> 3-34 searching	command summary: SMM 5-2 overview: SMM 5-1
for files: USER 3-34	runstring: SMM 5-1
libraries	security: EDIT 3-48
LI command: LINK 3-12	callback, CALLB program: <i>DRM</i> H-5
MS command: LINK 3-14	security code: EDIT 1-13, A-5; SGI 9-5, J-7
SE command: LINK 3-20	security subroutines. See SEC1000.LIB subroutines
searching for a pattern: EDIT 2-31, 2-41	security tables (Security/1000)
searching for source file: MAC E-9	format: SMM 4-9
SEC1000.LIB subroutines: SMM G-1	generating: SMM 5-4, 5-9
SecChangeCplv: SMM G-3	non-security information: SMM 4-11
SecChkCplvName: SMM G-3	security information example: SMM 4-10
SecChkCplvNum: SMM G-4	SECURITY.TBL source: SMM D-1
SecEditFunction: SMM G-4	categories: SMM D-1
SecGenTables: SMM G-5	format: SMM D-1
SecGetCftNam: SMM G-6	functions: SMM D-3
SecGetCftNum: SMM G-7	special categories: SMM D-1
SecGetCitNam: SMM G-5	specifying: SGI 7-7
SecGetCitNum: SMM G-6	security violations: <i>PROG</i> 1-4, A-4
SecGetCplvs: SMM G-7 SecGetMyCplv: SMM G-7	SECURITY.TBL source: <i>SMM</i> D-1 Security/1000: <i>LINK</i> 4-17; <i>SMM</i> 4-3; <i>USER</i> 5-1
SecGetProgCplv: SMM G-8	categories: SMM 4-8
SecGetRqUsCplv: SMM G-8	code examples: SMM 4-12, H-1
SecInitialize: SMM G-9	error messages: SMM F-1
SecListTables: SMM G-9	forms of implementation: SMM 4-7
SecOnOf: SMM G-9	initializing and turning on: SMM 4-18
SecProgCplv: SMM G-10	interfaces: SMM 4-12
SecPutCftNam: SMM G-11	library routines: SMM G-1
SecPutCftNum: SMM G-12	overview: <i>SMM</i> 4-1, 4-3
SecPutCitNam: SMM G-10	sample answer file: SMM A-1
SecPutCitNum: SMM G-11	SEC1000.LIB. See SEC1000.LIB subroutines
SecPutProgCplv: SMM G-13	security tables: SMM 4-5
SecPutRqusCplv: SMM G-12	CFT: <i>SMM</i> 4-8
SecRenameCat: SMM G-13	CIT: SMM 4-8
SecRenameFnc: SMM G-14	format: SMM 4-9
SecSwitch: SMM G-14	SECURITY.TBL: SMM D-1
SecUserCplv: SMM G-15	system manager responsibilities: SMM 4-4
secondary addressing: HPIB 4-22	utilities with security implemented: SMM 4-7

SECW/SECR/SECWR/SECRR subroutines: HPIB	ID100: <i>DRM</i> 2-145, 2-147
4-22	ID101: DRM 2-145, 2-147
SEDIT, output editing routine: <i>REL</i> 10-28	ID400: <i>DRM</i> 2-145, 2-147
SEGLD PROG 5 2	ID800: <i>DRM</i> 2-145, 2-147
optional parameters: <i>PROG</i> 5-3	ID801: <i>DRM</i> 2-145, 2-147
overlay load: PROG 5-3	IDZ00: DRM 2-145, 2-147
segment address	serial polling: HPIB 5-9, 5-18
MyIdAdd: REL 7-36	automatic: HPIB 5-8
to program name an LU number conversion,	BASIC subroutines: HPIB 5-10, 5-18, 5-19
IdAddToName: REL 7-30	disabling: HPIB 5-15
to segment number, IdAddToNumber: <i>REL</i> 7-30	GETINTR function: HPIB 5-6
segment header: LINK 4-16	service programs: <i>HPIB</i> 5-9, 5-12 SPOLL function: <i>HPIB</i> 5-5
segment number to segment address, IdNumber-	STATS subroutine: <i>HPIB</i> 5-5
ToAdd: REL 7-31	serial port, display status of, SPORT: <i>USER</i> 6-173
SEGRT	service: MAIL A-4, A-7
details: PROG 5-4	service programs: <i>HPIB</i> 5-12
return to main from overlay: <i>PROG</i> 5-4	bus: HPIB 5-12
select code: <i>DDM</i> 2-14, 9-1, 9-2; <i>HPIB</i> 2-3	service request
in I/O instruction: DDM 9-1	from BASIC: HPIB 5-9, 5-12
select code setting: SCSI 2-5, 6-5	from FORTRAN: HPIB 5-21
select port map number, \$SELR: DDM 7-8	SESLU utility: SMM 2-5, 3-31
selecting	calling SESLU: SMM 3-31
a closing option: MAIL 3-10	examples: SMM 3-32
a message by number: MAIL 4-6	loading: SMM 3-31
first message in the list: MAIL 4-6	protection: SMM 3-31
last message in the list: MAIL 4-6	return values: SMM 3-31
messages by selection criteria: MAIL 4-6	session
next message: MAIL 4-6	accounting: SGI J-7
previous message: MAIL 4-6	turning on/off: SGI 9-5
selective assembly options N,Z: MAC E-2	handling: USER 5-7
selective LU pairing capability: DATA 1-1	utilities: SMM 2-5
self-test: SCSI 2-9, 4-1, 4-8, 4-10, 7-2	session environment: FTN 5-1, 5-4; SMM 2-1
selftest: SDM 9-2	CPU usage limit: SMM 3-13
SELR: DDM 7-8	default working directory: SMM 3-12
semicolon (;): DBUG 2-12	logoff process: SMM 2-2, 2-4
sender: MAIL 3-2, 3-7, 3-11, 3-12, 3-13, 3-14, 7-12,	logoff program: SMM 3-12
A-7, A-9	LU access table: SMM 2-4, 3-11
sending	number and depth of UDSPs: SMM 3-11
Mail/1000 messages from CI: MAIL 6-2	session utilities
messages: MAIL 3-1, 3-8	KILLSES: SMM 2-5
messages to folders: MAIL 5-11	SESLU: SMM 2-5
sendmail: MAIL 6-2, 7-5, B-2	startup command: SMM 3-12
sense code: SCSI A-4	UDSPs: SMM 2-3
sense key and additional sense code: SCSI A-9 disk drive: SCSI A-4	session number RTNSN: <i>REL</i> 6-16
tape drive: SCSI A-9	USNUM: <i>REL</i> 6-10
sequence numbers (#) command: EDIT 4-92	SessnToOwnerName, return user name: <i>REL</i> 6-16
sequential access: FTN 5-2, 5-13	set
sequential file: FTN 3-11, 3-35, 3-56, 3-59, 3-78	error return: <i>PROG</i> A-6
serial file access: SDM 1-16	system time, SETTM: PROG 6-8
serial I/O device drivers: <i>DRM</i> 2-148, J-1	SET command: <i>USER</i> 2-15, 2-16, 2-24, 6-171
DDC00: DRM 2-145	Set command: DBUG 5-31
DDC01: <i>DRM</i> 2-145	SET directive: FTN 7-24
slave device support using DDC01: <i>DRM</i> 2-148	set port map, \$SETR: DDM 7-7
serial I/O drivers: <i>DRM</i> 2-145	set up a working directory: USER 3-30
bypass bit (bit 15): <i>DRM</i> 2-149	set up DVT or IFT, \$DIOC: DDM 7-1
prior to Rev. 4010: <i>DRM</i> J-1	set up map registers, \$SETM: DDM 7-5
special characters: <i>DRM</i> 2-146	set user and group accounting limits, SetAc-
serial I/O interface drivers: <i>DRM</i> 2-147	ctLimits: REL 6-17

set variables: MAIL 5-4	setup program, example: SMM H-1
ack: MAIL 5-4	SEXT: <i>MAC</i> 4-19
askdisp: MAIL 5-4	SEZ: <i>MAC</i> 3-8, B-6
edit: MAIL 5-5	SFB: <i>MAC</i> 3-4, B-3
eom: MAIL 5-5	SFC: MAC 3-13, B-10
justedit: MAIL 5-5 prefix: MAIL 5-6	SFILL, substring fill: <i>REL</i> 10-9 SFS: <i>MAC</i> 3-13, B-10
print: MAIL 5-6	SGET, get a character: <i>REL</i> 10-10
prompt: MAIL 5-6	SglAlrm (timer completed): <i>PROG</i> 13-3
quiet: MAIL 5-7	SglIO (Class I/O completion): PROG 13-4
read: MAIL 5-7, 6-4	SglUsr1 and SglUsr2 (user definable): PROG 13-3
record: MAIL 5-7	SglVio (program violation): PROG 13-2
signature: MAIL 5-7	SGMTR: FTN 7-13
skipdel: MAIL 5-5	SH (shareable EMA) command: LINK 3-21
sortby: MAIL 5-7	LINK utility: PROG 9-7
spell: MAIL 5-8	SH ALL command. See SH command
visual: MAIL 5-8	SH command: <i>EDIT</i> 2-11, 2-20, 2-21, 2-23, 3-29,
set visual on: <i>MAIL</i> 2-1–2-3, 3-1, 5-8 SetAcctLimits, set user and group accounting lim-	4-72 shareable EMA: <i>PROG</i> 9-5; <i>USER</i> 6-186, 6-201
its: REL 6-17	allocating secondary: <i>PROG</i> 9-16
SETBIT (system macro): MAC L-2, L-12	declaration: LINK 3-21; PROG 9-6
SetBitMap: REL 12-84	partition
SETDB, set up destination buffer: <i>PROG</i> 7-17	considerations: <i>PROG</i> 9-7
SETM: DDM 7-5	lock—LKEMA subroutine: PROG 9-26
SetPriority: REL 12-84	unlock—ULEMA subroutine: <i>PROG</i> 9-26
SETR: DDM 7-7	program considerations: <i>PROG</i> 9-6
SETSB, set up source buffer: <i>PROG</i> 7-17	using: PROG 9-5
SetTimer: PROG 13-27	shareable EMA table: <i>SDM</i> 11-23
setting A990 Computer clock: <i>USER</i> 6-23	shared CI: SGI 11-7
daylight savings time flag: USER 6-177	files: <i>SDM</i> 1-17
line length: EDIT 3-3	program table: SDM 11-31
lines to minimum length: EDIT 5-24	programs: SDM 3-4; USER 4-11
master security code: SGI 9-5	specifying number of: SGI 7-4, 7-12
new code segment length: LINK 3-15	subroutines
options: EDIT 2-7, 2-40, 3-29, 4-69	hierarchy: SDM 8-5
priority of program	level 1: SDM 8-5
using BOOTEX: SGI 9-6, J-5	level 2: SDM 8-4
using BUILD: SGI 10-3, I-4	level 3: <i>SDM</i> 8-4 shell variable: <i>MAIL</i> 5-5
using LINK: <i>LINK</i> 3-18 program capability level	SHEMA
using LINK: LINK 3-17	See also shareable EMA
using SECTL: SMM 5-6	association blocks: SDM 11-25
program run time: USER 6-11	maximum number of: USER 4-13
stack area size: LINK 3-22	size used by FST: BKUP 2-178
switches for autoboot: SGI 9-23, 10-13	SHEMA (shareable EMA): SDM 11-23
system clock: USER 6-180	shift-rotate group: MAC 3-5, B-4
system parameters: SGI 9-5	Show (SH) command: EDIT 2-11
tabs: EDIT 4-75	show system time command TM: GSA 2-2
time and date: EDIT 4-77 time zone offset: USER 6-177	SIGN: FTN B-2; REL 3-54
virtual memory size: LINK 3-24	entry (call-by-name), %IGN: REL 3-152
setting breakpoints: DBUG 3-4, 5-4	sign bit, S-Register, ISSW: <i>REL</i> 5-16
setting the search path: DBUG 5-27	change, SSIGN: REL 10-40
setting up	real or integer times integer, calculate: <i>REL</i>
startup program: SGI 9-18	3-50
system common: SGI 7-6	real or integer times real, calculate: REL 3-54
the swap file: SGI 9-4	transfer, extended real: REL 3-34
Welcome file: SGI 9-18	signal control block (SCB): SDM 2-11
SETTM, set system time: <i>PROG</i> 6-8	signal lines

bus management: HPIB 1-7	format: SDM A-1
data: HPIB 1-5	header record: SDM A-2
handshake: HPIB 1-6	installation: SGI 9-8
signal service subroutines: <i>PROG</i> 13-5, 13-6	labeled common base page links: SDM A-5
A- and B-Register returns: <i>PROG</i> 13-5	search sequence, default: LINK 4-4
error handling: PROG 13-5	system entries: SDM A-4
no-abort/no-suspend bits: PROG 13-5	system libraries: SDM A-5
signals: SDM 2-11	use of: LINK 1-2
See also RTE-A signals	SNGL: <i>FTN</i> B-5; <i>REL</i> 3-56
SIGNL: SDM 5-9	SNGM: REL 3-57
simple variable: FTN 2-13	SOC: <i>MAC</i> 3-13, B-10
SIN: <i>FTN</i> B-6; <i>REL</i> 3-55	SOCC: MAC B-10
entry (call-by-name), %IN: REL 3-153	software environment: DATA 1-2
range reduction, /CMRT: REL 3-168	software media: PRIM 1-2, C-1
sine	software modules supplied: <i>DATA</i> 1-2
#SIN call: <i>REL</i> 3-140	software numbering file (describes software): SCSI
complex: REL 3-18	3-2
double precision: <i>REL</i> 3-111	software options: SCSI 1-3
double real (no error return), /SIN: REL 3-173	software requirements: DBUG 2-1
extended real: REL 3-35	software, required for installation: FTN 1-5
real: <i>REL</i> 3-17, 3-55	solution of linear systems (VIS): <i>REL</i> 9-27
SINFO: SMM I-3	sophisticated pattern matching: <i>EDIT</i> 3-22
calling SINFO: SMM I-3	sophisticated search and exchange: <i>EDIT</i> 3-22
loading: SMM I-3	sortby variable: MAIL 5-7
return values: SMM I-3	SOS: <i>MAC</i> 3-13, B-10
Single Exchange (S) option: EDIT 3-24	SOSC: MAC B-10
single precision floating point conversion	source
FCHI: REL 11-2	file: MAC 1-4
FCIH: <i>REL</i> 11-3	filedescriptor requirements: <i>MAC</i> E-4
SINH: FTN B-6	statements: MAC 2-1
SJP: <i>MAC</i> 3-16, B-12	source destination parameter delimiters: GSA 3-9
SJS: <i>MAC</i> 3-16, B-12	source file: <i>EDIT</i> 1-2, 1-8, 2-25, 3-6, 3-10, 3-11,
skipdel variable: MAIL 5-4	3-50, 4-21, B-3, C-2; <i>FTN</i> 1-2, 2-28
skipping, versus sparing: BKUP 1-8	source program, name and extension: GSA 5-2
SKP: MAC 4-25, 4-31, B-15	SP (shareable program) command: <i>LINK</i> 3-22
SL (CL) command: <i>SGI</i> 7-4, 7-11	SP (specify number of shared programs) command:
SL command: FTN 5-4	SGI 7-12
SL option: <i>EDIT</i> 2-11, 3-27	SP command: PRNT 3-1; USER 2-24
SLA: <i>MAC</i> 3-5, 3-8, B-4, B-6	SP spool system
SLB: MAC 3-5, 3-8, B-4, B-6	administration: PRNT 3-6
sleep and Class Get: PROG 4-21	initialization: PRNT 3-6
smallest value	LU redirection: <i>PRNT</i> 3-3
DVMIN (double precision): <i>REL</i> 8-20	spooling LU output: PRNT 3-4
DWMIN (EMA double precision): <i>REL</i> 8-20	
VMIN (single precision): <i>REL</i> 8-20	space allocation command usage: <i>LINK</i> 4-2
WMIN (EMA single precision): <i>REL</i> 8-20	allocation considerations: LINK 4-2
smallest value (absolute)	space () command: <i>EDIT</i> 3-32, 4-92, 4-97
DVMIB (double precision): REL 8-20	sparing
DWMIB (EMA double precision): <i>REL</i> 8-20	hard disks: BKUP 1-7
VMIB (single precision): <i>REL</i> 8-20	versus skipping: <i>BKUP</i> 1-8
WMIB (EMA single precision): <i>REL</i> 8-20	SPC: <i>MAC</i> 4-25, 4-32, B-15
SMOVE, substring move: <i>REL</i> 10-11	SPD command: <i>HPIB</i> 4-9
SMPY, multiply substrings: <i>REL</i> 10-22	SPE commands: HPIB 4-9
SMTP: MAIL 7-5, 7-14, A-2, A-11	special characters: FTN 2-1
SN (snapshot file) command	special characters, serial I/O drivers
BOOTEX: SGI 9-2, J-2	backspace: DRM 2-146
LINK utility: LINK 3-21	break: <i>DRM</i> 2-147
snap files: SCSI 3-5	carriage return: DRM 2-146
snapshot file: SGI 2-3	delete: DRM 2-146
definition of: LINK 4-1	EOT: <i>DRM</i> 2-146

line feed, DDM 2.146	programmatics PROC 11 1
line feed: DRM 2-146	programmatic: <i>PROG</i> 11-1
special symbols: FTN 2-1, 2-2	purge: PROG 11-5
Specific Line Number (n) command: <i>EDIT</i> 2-21	restart: PROG 11-5
specific name: FTN B-1	retrieve file status: <i>PROG</i> 11-6
specification statement: <i>FTN</i> 2-15, 3-3, E-3	retrieve line length of all files: <i>PROG</i> 11-7
specifications: HPIB 1-4	returned parameters: <i>PROG</i> 11-8
specified program does not exist: HPIB 6-4	start: PROG 11-2
specifiers	start/stop error logging: PROG 11-7
file control: FTN 5-6, 5-7, 5-10, 5-11	stop: PROG 11-3
format: FTN 8-6	system EXEC calls: <i>PROG</i> 11-1
of INQUIRE statement: FTN 3-57, 3-62	terminate: PROG 11-4
specify null type extension: MAC E-6	spooling limits command SL: SGI 7-4, 7-11
specify selected file attributes: MAC E-6	spooling setup: SGI 11-1
specifying	SPORT: USER 6-173
background priority: SGI 7-4	examples: USER 6-173
bad pages: SGI 9-3	including in a user program: USER 6-174
class buffer limits: SGI 7-4	loading: USER 6-175
directories: USER 3-6, 3-34	SPUT, put a character: <i>REL</i> 10-13
LOGOF buffer limits: SGI 7-5	SQRT: <i>FTN</i> B-6; <i>REL</i> 3-59
memory size: SGI 9-3	entry (call-by-name), %QRT: REL 3-162
number of concurrent users: SGI 7-5	square matrix, initialize (VIS): REL 9-11
remote files: USER 3-41	square root
scratch file: LINK 3-6	complex: <i>REL</i> 3-19
scratch LU: <i>LINK</i> 3-6; <i>SGI</i> 9-4, J-3	double real: <i>REL</i> 3-112
security tables: SGI 7-7	extended real: <i>REL</i> 3-36
shared programs, number of: SGI 7-4, 7-12	real: <i>REL</i> 3-59
subdirectories: <i>USER</i> 3-8	SR error: <i>PROG</i> A-3
system default libraries: SGI 7-7	SRQ bus command: HPIB 4-10, 5-2
system memory block: SGI 7-5	SRQ bus management line: HPIB 1-7
system utility: LINK 3-23	SRQ subroutine: <i>HPIB</i> 5-2
the system file: SGI 9-2	SRQSN subroutine: <i>HPIB</i> 5-3
timeslice quantum: SGI 7-4	SRT (segment replacement table): <i>SDM</i> 11-44
UDSPs in file descriptors: <i>USER</i> 3-35	SS command: <i>GSA</i> 2-5; <i>SGI</i> 9-5, 10-3, I-3, J-7;
specifying locations: <i>DBUG</i> 4-1	USER 4-8, 6-176
spell-checker: MAIL 3-9, 5-8	SSA: <i>MAC</i> 3-8, B-6
SplitCommand, parse string: <i>REL</i> 7-47	SSB: <i>MAC</i> 3-8, B-6
SplitString, parse string: <i>REL</i> 7-48	SSEED: FTN B-16
SPOLL function: <i>HPIB</i> 5-5	SSGA: <i>FTN</i> 3-17, 7-13
SPOLY: REL 3-58	SSIGN, sign change: <i>REL</i> 10-40
SPOOL: SDM 5-9	SSM: <i>MAC</i> 3-16, B-12
spool file: FTN 5-1	SST: <i>FTN</i> 5-1, 5-4
closing and releasing with KILLSES: SMM 3-33	SSUB, subtract substrings: <i>REL</i> 10-26
purge: PROG 11-5	ST (set stack area size) command: <i>LINK</i> 3-22
restart: PROG 11-5	ST command: <i>SGI</i> 9-6, 10-4, I-4, J-5
status retrieve: <i>PROG</i> 11-6	establish or modify paired disk LU states:
spool nodes: SDM 2-10	DATA 3-10
spool system	examples: DATA 3-11
EXEC calls: <i>PROG</i> 11-1	format: DATA 3-10
initialize: <i>PROG</i> 11-4	LU number order: DATA 3-10
terminate: PROG 11-4	runstring: DATA 3-10
spooled file formats: <i>PRNT</i> 2-5	usage message: DATA 3-10
spooler	use in conjunction with
See also LP spool system; SP spool system	DI command: DATA 3-10
administration tasks: <i>PRNT</i> 2-41	MI command: DATA 3-10
available on RTE-A: PRNT 1-1	STA: <i>MAC</i> 3-2, B-2
usage description: PRNT 1-1	stack: EDIT 2-35; FTN H-1, H-2, H-3; REL 2-5
SPOOLINFO record format: <i>PROG</i> 11-9	command: GSA 2-3
spooling	stack and heap area: PROG 10-3
initialize: <i>PROG</i> 11-4	stack area, changing size: LINK 3-22
output: PROG 11-3	standard addressing headers: MAIL 3-6

standard generation file entries: SGI E-2	DECODE: FTN 5-14, 8-6, H-3
standard I/O requests: PROG 3-1	DIMENSION: <i>FTN</i> 3-21, 6-13
standard input unit: FTN 5-15	DO: FTN 3-22
standard output unit: FTN 5-15	DO WHILE: FTN 3-29
standard pattern matching: <i>EDIT</i> 3-18	DOUBLE COMPLEX: FTN 2-9, 3-83
standard RTE-A operating system: GSA 1-3	DOUBLE PRECISION: FTN 2-8
standard subject header: MAIL 3-7	DOUBLEPRECISION: FTN 3-83
Standby state, disk: DATA 2-1	ELSE: <i>FTN</i> 3-51
start/stop error logging: PROG 11-7	ELSE IF: FTN 3-52
start-up program functions: SDM 4-2	EMA: <i>FTN</i> 3-33, E-2
starting	ENABLE INTR: HPIB 5-3, 5-19
EDIT: EDIT 2-7	ENCODE: <i>FTN</i> 5-14, 8-6, H-3
screen bracket: EDIT 2-12	END: <i>FTN</i> 1-4, 3-34, 6-2, 6-16
screen mode: EDIT 2-10	END DO: <i>FTN</i> 3-18, 3-23, 3-24, 3-29, 3-30, 3-31
spooling: PROG 11-2	END IF: <i>FTN</i> 3-51
starting a Debug session: <i>DBUG</i> 3-3	ENDFILE: <i>FTN</i> 3-35, 5-2, 5-5, 5-13
starting Mail/1000: <i>MAIL</i> 2-2–2-4, 5-6	
	ENTRY: <i>FTN</i> 3-36, 6-17, E-3
automatically at logon: MAIL A-11	EQUIVALENCE: FTN 3-38, 6-13, 8-7
in line mode: MAIL 2-3	executable: FTN 3-1
in visual mode: MAIL 2-3, 5-8	EXTERNAL: <i>FTN</i> 3-43, 3-60, 8-8
starting profile mode: <i>DBUG</i> 5-26	FORMAT: FTN 3-6, 3-44, 3-69, 3-72, 3-73, 3-85,
starting the system: GSA 1-2	4-5
startup	FUNCTION: <i>FTN</i> 3-46, 3-54
message: MAIL 2-3, 5-7	GOTO: FTN 3-6, 3-31, 3-47, 7-11
options: MAIL 2-2–2-3	IF: <i>FTN</i> 3-49
startup program: <i>SGI</i> 9-18	IMPLICIT: <i>FTN</i> 2-3, 2-6, 2-7, 3-53, 6-9, E-1
STAT: <i>SDM</i> 5-10	IMPLICIT NONE: FTN 3-54
STAT1: PROG 3-13	INCLUDE: <i>FTN</i> 3-55, E-1
STAT1 and STAT2 parameters: <i>DRM</i> 1-17	input/output: FTN 3-4
STAT2: <i>PROG</i> 3-15	INQUIRE: <i>FTN</i> 3-56, 5-5, 5-11
STAT3 and STAT4 parameters: DRM 1-18; PROG	INTEGER: FTN 2-6, 3-83
3-16	INTEGER*2: <i>FTN</i> 2-6, 3-83
state definition command, ST: DATA 3-10	INTEGER*4: <i>FTN</i> 2-6, 3-83
statement: FTN 1-4, 3-1, 3-3	INTRINSIC: <i>FTN</i> 3-60, E-3
See also control statement	keywords: FTN 2-2
ABORT: HPIB 4-18	LOCAL: HPIB 4-17
alternate return: FTN 6-3	LOCAL LOCKOUT: HPIB 4-17
ASSIGN: <i>FTN</i> 3-48, 8-6	LOGICAL: FTN 2-9, 3-83
assignment: FTN 2-10, 3-7	logical assignment: FTN 3-9
BACKSPACE: <i>FTN</i> 3-11, 5-5, 5-13	logical IF: FTN 3-50
BLOCK DATA: FTN 3-12, 6-18	LOGICAL*2: FTN 2-9, 3-83
block IF: FTN 3-51, 6-17	LOGICAL*4: <i>FTN</i> 2-9, 3-83
CALL: FTN 3-12, 3-76, 6-2, 6-3	nonexecutable: FTN 3-1
CALL EXIT: FTN 3-81	ON INTR: <i>HPIB</i> 5-3, 5-19
categories: FTN 3-2	OPEN: <i>FTN</i> 3-14, 3-61, 5-1, 5-3, 5-4, 5-5, 5-7,
CHARACTER: FTN 2-10	5-11, 7-18
character assignment: FTN 3-10	order: FTN 3-5
CHARACTER[len]: FTN 3-83	PACK USING: HPIB 4-21
classification: FTN 3-3	PARAMETER: <i>FTN</i> 2-5, 3-66
CLEAR: HPIB 4-15	PAUSE: FTN 3-68
CLOSE: FTN 3-14, 5-5, 5-10	PPOLL CONFIGURE: HPIB 5-6
COMMON: FTN 3-21, 3-41, 6-13, 6-15	PPOLL UNCONFIGURE: HPIB 5-7
common: FTN 3-15	PRINT: FTN 3-69, 4-3, 4-26, 5-5
COMPLEX: <i>FTN</i> 2-8, 3-83	PROGRAM: <i>FTN</i> 1-4, 3-70
COMPLEX*16: <i>FTN</i> 2-9, 3-83	program halt: FTN 3-4
COMPLEX*8: <i>FTN</i> 2-8, 3-83	program unit: FTN 3-3
CONTINUE: FTN 3-18	READ: FTN 3-72, 4-23, 4-28, 5-5, 5-6
control: FTN 1-5, 3-4	READ/ENTER/INPUT/WRITE/PRINT: HPIB
DATA: FTN 2-10, 3-19, 3-25, 6-13, 8-5, E-3,	4-22
	REAL: FTN 2-7, 3-83
H-1, H-3	NEAL. 1111 4-1, 5-05

REAL*4: FTN 2-7, 3-83	calling format: DRM 1-16
REAL*8: FTN 2-8, 3-83	conventions: <i>DRM</i> 1-16
REMOTE: HPIB 4-15	STB: <i>MAC</i> 3-2, B-2
RETURN: FTN 3-34, 3-76, 6-2, 6-3, 6-7, 6-16	STC: MAC 3-13, B-10
REWIND: FTN 3-78, 5-5, 5-13	STCC: MAC B-10
SAVE: FTN 3-79, 6-16, E-3, H-2, H-3	Step command: DBUG 3-8, 5-32
specification: FTN 2-15, 3-3, E-3	Step Into (S I) command: <i>DBUG</i> 3-10
statement function: FTN 3-80	stepping
STOP: <i>FTN</i> 3-81	into subroutines: <i>DBUG</i> 3-10
SUBROUTINE: FTN 3-76, 3-82, 6-3	over subroutines: DBUG 3-9
subroutine	single lines: DBUG 3-8
ABRT: HPIB 4-18	STF: <i>MAC</i> 3-13, B-10
BSTAT: HPIB 5-5	STGEN utility: SMM 5-9
call syntax: HPIB 4-12	STO: <i>MAC</i> 3-13, B-10
CLEAR: HPIB 4-15	STOP (system macro): MAC L-18
CMDW/CMDR: HPIB 4-20	STOP statement: FTN 3-81
CNFG: HPIB 7-6	stopping
GTL: <i>HPIB</i> 4-16	a program
IBERR: HPIB 6-1	using BR command: USER 4-7
IOCNT: HPIB 4-23	using EXEC 6: PROG 5-7
LLO: HPIB 4-16	using OF command: USER 6-128
LOCL: HPIB 4-17	using SS command: USER 6-176
PPOLL: HPIB 5-6	spooling: <i>PROG</i> 11-3
PPSCH: HPIB 5-4	storage: FTN 2-5, 2-13, 3-15, 3-33, 3-38, 3-40, 5-1,
PPSN: HPIB 5-4	6-11, 7-18, 8-7, H-1
PSTAT: HPIB 5-8	for common blocks: FTN 3-16
RMOTE: HPIB 4-15	of array elements: FTN 2-16
RMPAR: <i>HPIB</i> 5-9, 5-17	storage allocation: MAC 4-1, 4-34, B-15
SECW/SECR/SECWR/SECRR: HPIB 4-22	StrDsc: REL 7-49
SRQ: HPIB 5-2	streaming mode: BKUP 1-9; USER 6-41
SRQSN: HPIB 5-3	string: <i>EDIT</i> B-3; <i>FTN</i> 2-10, 2-23
STATS: HPIB 5-5	arithmetic routines: <i>REL</i> 10-17
TRIGR: HPIB 4-17	utilities routines: REL 10-7
syntax: HPIB 4-12	string comparison: MAC 4-61
THEN: <i>FTN</i> 3-52	STRING macro: MAC N-9
TRAP: HPIB 5-18, 5-19	string manipulation
TRIGGER: HPIB 4-17	BlankString: REL 7-4
type: FTN 2-3, 3-54, 3-83, 6-13	Concat: REL 7-20
value assignment: FTN 3-3	ConcatSpace: REL 7-20
WRITE: FTN 3-85, 4-3, 4-26, 4-29, 5-5, 5-6	GetRunString: REL 12-10
statement continuation: MAC 2-14	GetString: REL 12-11
statement function: FTN 6-1, 6-8, 8-8	string passage: SDM 1-7
as actual argument: FTN 6-9	EXEC 14: <i>PROG</i> 7-3
in EXTERNAL statement: FTN 6-9	StringCopy, copy one string to another: REL 7-50
statement function statement: FTN 3-80	STRNG: <i>SDM</i> 5-10
statement label: <i>FTN</i> 1-5, 3-1, 3-6	STX: MAC 3-10, B-7
statement length: MAC 2-14	STY: MAC 3-10, B-7
statement order, (figure): FTN 3-5	SU (system utility) command: LINK 3-23
statistical examples (VIS): REL 9-12	subdirectories: SDM 1-16; USER 3-8
status: <i>DDM</i> 1-2, 3-5, 5-4	creating: USER 3-30
extended: DDM 6-1	subdirectory names: GSA 3-4
of interface card: DDM 9-4	subfile marks (FMGR ST command): USER B-47
status byte, format of: DDM 5-5	SUBHEAD: <i>MAC</i> 4-25, 4-27, B-15
Status command: DBUG 5-32	subheading: MAC 4-27
status parameter definitions: <i>DRM</i> 1-17	subprogram: FTN 1-5
CNTWD: DRM 1-17	used as actual argument: FTN 6-11
ecode: DRM 1-17	subprogram unit: FTN 1-4
STAT1 and STAT2: DRM 1-17	subroutine: <i>FTN</i> 3-36, 6-1, 6-2
STAT3 and STAT4: DRM 1-18	alternate return from: FTN 6-3
status request	referencing: FTN 6-2
1	· · · · · · · · · · · · · · · · · · ·

VMA/EMA: PROG 9-14	suspending a program: <i>USER</i> 4-8, 6-176
subroutine calls, CDS/non-CDS: MAC N-1	suspending Debug: <i>DBUG</i> 5-26
subroutine operations	SW command: SGI 9-4, J-6
CALL: MAC L-4	
	swap descriptor table: SDM 11-22
ENTRY: MAC L-4	SWAP file: SGI J-6
EXIT: MAC L-4	swap file: SGI 9-4
SUBROUTINE statement: <i>FTN</i> 3-76, 3-82, 6-2,	swapping: <i>SDM</i> 1-3, 1-5; <i>SGI</i> J-7
6-3	blocking of: <i>PROG</i> 5-13
subroutine subprogram: FTN 6-1	Switch (SW) command: SMM 5-8
subroutines, double integer: <i>REL</i> 4-1	switch settings, for autoboot: SGI 9-23, 10-13
subscript: FTN 2-14, 2-15, 3-20, 3-34	switch SW1: SCSI 2-5
subscript value: FTN 3-27	switch SW2: SCSI 2-6
subscripted variable: FTN 2-13, 2-15	switches
substitute pattern: <i>EDIT</i> 2-34, B-3	CSC: DBUG 5-31
substring	EXIT: DBUG 5-31
add, ŠADD: <i>REL</i> 10-17	LOG: DBUG 5-31
compare, JSCOM: REL 10-7	ML: <i>DBUG</i> 5-31
	PASCAL: DBUG 5-31
fill, SFILL: REL 10-9	
move, SMOVE: REL 10-11	RECORD: DBUG 5-31
substring operator: MAC 4-57	STEPIN: DBUG 5-31
substrings: DBUG 4-14	switching
subsystem installation: SGI 9-23	between line and visual modes: MAIL 2-4
subtract	folders: MAIL 4-8
complex from complex: REL 3-76	switching to profiling mode: DBUG 6-1
double integer: REL 4-3	SWP: MAC B-11
DVSUB (double precision): REL 8-9	SY command: <i>SGI</i> 9-2, J-2
DWSUB (EMA double precision): REL 8-9	SYA: <i>MAC</i> 3-16, B-12
extended real: REL 3-124	SYB: <i>MAC</i> 3-16, B-12
real: <i>REL</i> 3-87	SYCOM: SDM 5-10
substrings, SSUB: <i>REL</i> 10-26	SYCON: <i>PROG</i> 3-7; <i>REL</i> 6-18
VSUB (single precision): <i>REL</i> 8-9	symbol
WSUB (EMA single precision): REL 8-9	definition instructions: MAC 4-1, 4-40, B-16
SUBTRACT (system macro): MAC L-10	ID: <i>MAC</i> 4-58
subtraction: FTN 2-19	listing table: MAC E-2
sum routine: <i>REL</i> 8-14	table: MAC 1-9
DVSUM (double precision): <i>REL</i> 8-14	symbol table: FTN 7-2
DWSUM (EMA double precision): REL 8-14	symbolic
VSUM (single precision): <i>REL</i> 8-14	addressing: MAC 1-10
WSUM (EMA single precision): <i>REL</i> 8-14	terms: MAC 2-6
sum routine (absolute)	symbolic debug: FTN 7-2; USER 1-1
DVNRM (double precision): REL 8-14	symbolic debugging: LINK 3-7
DWNRM (EMA double precision): REL 8-14	symbolic links: SDM 10-5
VNRM (single precision): <i>REL</i> 8-14	copying: USER 6-30
WNRM (EMA single precision): <i>REL</i> 8-14	creating: <i>USER</i> 3-28, 6-103
SUP: MAC 4-25, 4-32, 4-33, B-15	LNS command: <i>USER</i> 3-28, 6-103
super program, check for, ProgIsSuper: REL 6-14	symbolic name: <i>FTN</i> 2-1, 2-3, 2-13
superuser	predefined: FTN 2-2
capabilities: USER 1-3	user-defined: FTN 2-4
check for/if	synchronizing programs: SDM 8-2
SuperUser: REL 6-18	system
UserIsSuper: REL 6-19	backup: SGI 9-19, 10-13; SMM 1-15
with Security/1000: <i>USER</i> 5-1, 5-5	base page format: SDM 9-1
	boot, CCI 0.16, 10.0
supported baud rates: <i>DRM</i> 2-165	boot: <i>SGI</i> 9-16, 10-9
suppressing the Mail/1000 startup message: MAIL	boot-up: <i>SDM</i> 1-10, 4-1
5-7	clock: <i>SDM</i> 1-2; <i>USER</i> 6-180
suspend program execution command SS: GSA	commands: USER 2-1
2-5; USER 4-8	common: LINK 4-1; SDM 1-6
suspended	common changes: SDM 1-7
queue (QU): PROG 5-6	common/shared subroutines: SDM 8-1
wait (WT): PROG 5-6	default libraries: SGI 7-7
` /	

file	GO: <i>SDM</i> 5-12
installing: SGI 9-8	PR: <i>SDM</i> 5-12
specifying: SGI 9-2	SS: <i>SDM</i> 5-12
generation, serial drivers: <i>DRM</i> E-1	SZ: <i>SDM</i> 5-12
I/O configuration, worksheet: SGI 6-3	UL: SDM 5-12
information: USER 1-5	VS: <i>SDM</i> 5-12
initialization flag: SDM 9-2	WS: <i>SDM</i> 5-12
memory block: SGI 7-5	system common
command (MB): SGI 7-12	and SHEMA examples: <i>PROG</i> 9-8
message block: SDM 2-12; SGI 7-6	setting up: SGI 7-6
message catalog, relocation: SGI 7-13	system configuration: <i>PRIM</i> 1-2
minimum requirements: SDM 5-1	system console, write to, SYCON: <i>REL</i> 6-18
modules: <i>SDM</i> 2-14, 2-15	system crash: EDIT 1-8
relocating during system generation: SGI 4-1	SYSTEM directory: SGI 9-14
overview: SDM 1-1	system directory: SCSI 6-2
parameters, setting: SGI 9-5	system file: SGI 2-3
partition: SDM 2-14	system files: SCSI 3-5
partitioning, during system generation: SGI 4-6	system flags: <i>DDM</i> 2-14, 3-5, 3-6, 4-5
partitioning records: SGI D-4	system generation
format: SGI D-5	answer file: DATA 4-2; SGI G-1
programs, missing: USER 8-7	answer file examples: DATA 4-5
prompt: USER 8-8	bootable LUs: DATA 4-5
recovery: SMM 1-20	
	creating/modifying, WELCOME file: <i>DATA</i> 4-8,
security: LINK 5-1	4-11, 4-13 DVT formato: D 4T4 4 4
shutdown: SMM 1-20	DVT formats: DATA 4-4
snapshot file, definition of: LINK 4-1	DVT specification: DATA 4-3
status obtaining: <i>USER</i> 2-5, 6-195, 6-202	IFT specification: DATA 4-3
symbols and list structures: SDM 6-1	initialization phase: SGI 3-1
table \$LMAT: SDM 11-45	localizable programs: SGI K-3
tables: <i>SDM</i> 1-8, 2-7, 2-13, 11-1	LU number assignments: DATA 4-4
time, displaying: <i>USER</i> 2-13	modifying answer file: DATA 4-2, 4-11
utility, declaring program to be system utility:	node list specification: <i>DATA</i> 4-3
LINK 3-23	OS module/driver partition phase: SGI 5-1
system administration, LP spool system: PRNT	relocating IDP31: DATA 4-2
2-37	required steps: DATA 4-1
administration tasks: PRNT 2-41	RP DSKER error-handling program: DATA
log file maintenance: PRNT 2-45	4-12
network printing: PRNT 2-37	running the generator: SGI 2-1
NS/ARPA configuration: PRNT 2-37	specifying pairing relationships: DATA 4-3
resetting request ID sequence number: <i>PRNT</i>	system relocation phase: SGI 4-1
2-45	table generation phase: <i>DATA</i> 4-3; <i>SGI</i> 6-1
rlpdaemon program: <i>PRNT</i> 2-37	using DVT driver parameters: <i>DATA</i> 4-3
rlpout program: PRNT 2-37	VCP: DATA 4-11
system assembly time variables: MAC K-1	system library: FTN 6-1; PROG 1-3
System Available Memory (SAM): PROG 5-5;	call formats: PROG 1-3
SDM 1-7, 2-7	system macros
See also SAM	
	descriptions: MAC L-4
allocating: SGI 7-3	library: MAC L-1
command (SAM): SGI 7-10	system mail.rc file: MAIL 5-4
overhead: SDM 2-8	system maintenance: SMM 1-13
purposes: <i>SDM</i> 2-7, 2-10	system management: GSA A-1
size: SDM 2-7	design and planning: SMM 1-4
system backup: PRIM 2-12	disk management: SMM 1-8
system boot with mirrored disks: <i>DATA</i> 4-11	maintenance: SMM 1-13
system commands	process: SMM 1-1
AS: <i>SDM</i> 5-12	recovery: SMM 1-20
BR: <i>SDM</i> 5-12	shutdown: SMM 1-20
CD: <i>SDM</i> 5-12	system manager responsibilities: SMM 4-4
DN: <i>SDM</i> 5-12	system relocation phase: SGI 4-1
DT: SDM 5-12	commands: SGI 4-2

system resources: PRIM B-3	memory descriptor: SDM 11-29, 11-30
system scratch file: EDIT 3-47	multiuser: SDM 11-32
system setup utilities: <i>USER</i> 2-27	pointers: <i>DDM</i> 2-16
Absolute Binary to Memory Image (AB2MI):	reference by driver: <i>DDM</i> 6-2
USER 6-4	resource number: SDM 11-11
bootable system installation (FPUT): <i>USER</i>	segment replacement: SDM 11-44
6-62	shareable EMA: SDM 11-23
Copy System (CSYS): USER 6-40	shared program: SDM 11-31
initialize BOOTEX (INSTL): USER 6-86 Memory Image to Absolute Binary (MI2AB):	swap descriptor: SDM 11-22
USER 6-114	UDSP: <i>SDM</i> 11-35 use of ID table: <i>SDM</i> 11-36
system status command WH: GSA 2-2	user ID: SDM 11-30
system status utilities	table generation: SCSI 3-3
display CPU usage (METER): USER 6-111	table generation phase: SGI 6-1
Serial Port Analyzer (SPORT): USER 6-173	commands: SGI 6-10
System Available Memory utility (SAM): USER	system generation: DATA 4-3
6-156	tabs
system time: PROG 6-8	delete: EDIT 4-78
system time-zone offset: <i>PROG</i> 6-7	description: EDIT 4-75
system unit: FTN 5-1	in line mode: EDIT 3-32
system-dependent extensions: FTN E-2	in line mode character edits: <i>EDIT</i> 3-32
system-labeled common: FTN 3-17	tagging and untagging messages: MAIL 4-8
SystemProcess, check for/if system process: <i>REL</i>	tagging messages by limiting criteria: MAIL 4-8
6-19	tags: SDM 5-15; SGI 4-6
SYSTZ command: USER 6-177	talker: <i>HPIB</i> 1-3, 4-1
SZ (size) command	talking to system, backspace: GSA 1-1
BOOTEX: <i>SGI</i> 9-6, J-5 BUILD utility: <i>SGI</i> 10-3, I-4	talking to the system: GSA 1-1
LINK utility: <i>LINK</i> 3-23	TAN: FTN B-6; REL 3-60
SZ command: <i>EDIT</i> 4-74; <i>USER</i> 2-24, 4-10, 4-12,	TAN entry (call-by-name), %AN: REL 3-147
6-179	tangent double real: <i>REL</i> 3-114
SZ system command: <i>FTN</i> 5-3, 5-9, 7-18	extended real: <i>REL</i> 3-37
SZA: <i>MAC</i> 3-8, B-6	real: REL 3-60
SZB: <i>MAC</i> 3-8, B-6	TANH: FTN B-6; REL 3-61
SZONE, zone punch: REL 10-14	TANH entry (call-by-name), %ANH: REL 3-149
•	tape drive errors, sense key and additional sense
Т	code: SCSI A-9
1	Tape Filer (TF): <i>BKUP</i> 1-4, 2-230
T command: EDIT 4-75	access time for tape files: BKUP 2-261
T compiler option: FTN H-3	alternatives to standard incremental backup:
T option: <i>MAC</i> 5-15, E-2	BKUP 2-266
T-bit: <i>SDM</i> 11-2	B qualifier in incremental backup: <i>BKUP</i> 2-262
TA command: EDIT 4-75	backup bits: <i>BKUP</i> 2-262, 2-264, 2-265
Tab Character (TC) option: EDIT 3-27	C option used in incremental backup: BKUP
tab edit descriptors: FTN 4-19	2-262
Tab Kill (TK) command: EDIT 4-78	calling TF: BKUP 2-231
table	CO command: BKUP 2-232
class: SDM 11-21	CO command options: BKUP 2-234
code segment: SDM 11-44	append to tape (A): BKUP 2-235
device: SGI 6-1	brief logging mode (B): <i>BKUP</i> 2-235 clear backup bit (C): <i>BKUP</i> 2-235
device (DVT): <i>DRM</i> 1-2; <i>SDM</i> 11-12 FMP tables: <i>SDM</i> 12-1	ignore errors and file masks (I): BKUP 2-236
I/O control block: SDM 11-17	inhibit UNIX to FMP text file conversion (N)
interface: SDM 11-14; SGI 6-1	BKUP 2-236
interface (IFT): DRM 1-2	keep tape online (K): BKUP 2-236
interrupt: SDM 11-20	replace duplicate files (D): BKUP 2-236
language message address: SDM 11-45	Unix compatibility (X): BKUP 2-236
logical unit: SDM 11-11	update (U): <i>BKUP</i> 2-236
LU access: SDM 11-35	verify files copied (V): BKUP 2-236
map set: <i>SDM</i> 11-19	yes option (Y): BKUP 2-237

	CO command source and destination parameters: <i>BKUP</i> 2-233	task charts: EDIT 2-36
	copy example without subdirectories: <i>BKUP</i>	task priority: <i>SDM</i> 1-1 TBG (time base generator): <i>SDM</i> 9-2
	2-237	TBS: MAC 3-4, B-3
	copy examples using DS: BKUP 2-250	TC option: EDIT 3-27
	copy examples with subdirectories: <i>BKUP</i> 2-243 copying files between FMP/UNIX: <i>BKUP</i> 2-274	TELNET pseudo terminal LU: <i>DRM</i> 2-149 temporary files: <i>USER</i> 3-2
	create time (tape): BKUP 2-261	backing up: BKUP 2-233
	DEfault command: BKUP 2-253	definition of: <i>PROG</i> F-1
	delta backups: BKUP 2-262	temporary storage of VCP/loader programs: SDM
	directory creation and restore: BKUP 2-267	9-2
	directory file names (FMP/UNIX): <i>BKUP</i> 2-278 disk full errors: <i>BKUP</i> 2-270	backspace key: <i>EDIT</i> 3-31, 3-46
	DL Directory List command: <i>BKUP</i> 2-254	display capacity: EDIT 2-16
	duplicate files during restoring incremental	displaying maximum lines: EDIT 3-35
	backups: <i>BKUP</i> 2-264, 2-266	driver: DDM 6-3
	EXit command: BKUP 2-257	language ID: SGI K-7
	file access during backup/restore: BKUP 2-271	line limit: EDIT 2-11
	file extents: <i>BKUP</i> 2-233 file formats on FMP and UNIX: <i>BKUP</i> 2-273	local editing keys: <i>EDIT</i> 2-12, 3-34 ProgramTerminal: <i>REL</i> 7-39
	file properties, saving and restoring: BKUP	terminal memory: GSA 1-1
	2-268	terminal point: FTN 5-2
	file/tape compatibility, FMP/UNIX: BKUP	terminating
	2-273, 2-282	a session
	full backup: <i>BKUP</i> 2-262 GRoup copy commands: <i>BKUP</i> 2-257	using GRUMP: SMM 3-16 using KILLSES: SMM 2-5, 3-33
	HElp command: BKUP 2-258	CI: <i>USER</i> 1-5, 6-52
	incremental backup: BKUP 2-262	input: SGI 9-7
	standard procedure: BKUP 2-263	LINK: LINK 3-4
	installing TF: <i>BKUP</i> 2-282 keep tape online: <i>BKUP</i> 2-254, 2-257, 2-258,	spool system: <i>PROG</i> 11-4 terminating a program: <i>GSA</i> 2-5
	2-260	termination, abnormal: <i>PROG</i> 5-9
	LH List Header file: BKUP 2-258	termination power (TERMPWR): SCSI 1-5, 2-5,
	LL list device command: BKUP 2-258	B-1, C-1
	maintaining the system time: <i>BKUP</i> 2-261 missing extents: <i>BKUP</i> 2-272	termination power status: SCSI 7-3 terminator: SCSI 2-8
	missing time stamps: BKUP 2-261	terms: <i>MAC</i> 2-5, 2-6
	multi-tape backup/restore: BKUP 2-273	test hood: SCSI 4-8, 4-12
	multiple copies of the same backup: BKUP	Test_PutByte: REL 12-85
	2-264	Test_SetBitMap: REL 12-86
	relation of DL command to CO command: <i>BKUP</i> 2-256	TESTBIT (system macro): <i>MAC</i> L-2, L-13 TestBitMap: <i>REL</i> 12-85
	restoring incremental backups: <i>BKUP</i> 2-264	testing
	restoring older versions from incremental back-	memory-based system: SGI 10-12
	up: BKUP 2-265	SCSI card: <i>SCSI</i> 2-9, 4-1
	sparse files: <i>BKUP</i> 2-233, 2-272 system backup and restore: <i>BKUP</i> 2-269	text copying: EDIT 4-12
	tape protection and the K (keep) option: BKUP	display formats: <i>EDIT</i> 3-12
	2-260	inserting: EDIT 4-33
	temporary files: BKUP 2-233	moving: EDIT 2-29
	TF commands: BKUP 2-231	wrap-around: EDIT 2-12, 3-42
	TF tape format: <i>BKUP</i> 2-281 time stamps: <i>BKUP</i> 2-261	TEXT (system macro): MAC L-17 text and message, text definition: MAC L-17
	TItle command: BKUP 2-259	text and message, text definition. MAC L-17 text editor: SDM 1-5
	TRansfer command: BKUP 2-260	text parameter: SCSI 6-5
	UNIX compatibility: BKUP 2-273	TF command: EDIT 4-75
	update time (tape): BKUP 2-261	TF use in disk backup: DATA C-1
	using TF with FC tapes: <i>BKUP</i> 2-272 using TF with FMGR files: <i>BKUP</i> 2-271	TF utility: <i>USER</i> 1-1 TG command: <i>SGI</i> 4-6
ta	pe operations, .TAPE: <i>REL</i> 5-40	THEN statement: FTN 3-52

throwaway: MAIL 3-9	trailing blanks: EDIT 4-8
TI command: <i>EDIT</i> 3-8, 4-77	remove, TrimLen: REL 7-52
TIME: <i>SDM</i> 5-11	transfer
time	control, computed GOTO, .GOTO: REL 5-35
operation requests: <i>PROG</i> 6-1	extended real: REL 3-80
return to calling program, FTIME: <i>PROG</i> 6-7	sign
system: <i>USER</i> 2-13, 6-180	double real to double real: <i>REL</i> 3-110
time and space considerations: LINK 4-18	extended real: REL 3-34
time base generator (TBG): DDM 1-5	Transfer (TR) command: EDIT 4-79; SMM 3-30
time command TM: GSA 2-2	transfer file #MACRO: MAC E-11
time scheduling programs, AT command: USER	transfer files: LINK B-4
4-5	* (comment): USER 6-3
Time Stamp (TS) option: EDIT 3-27	G-type global parameters: USER B-51
time stamping files: EDIT 3-8	in FMGR: <i>USER</i> B-51
time stamps: USER 3-14	calculating global parameters: USER B-56
time zone offset: PROG 6-7; USER 6-177	displaying parameters: USER B-58
TIMEF: REL 7-51	IF conditional skip: USER B-59
TIMEI, TIMEO: REL 5-27	PA: USER B-61
TimeNow: REL 7-52	setting global parameters: USER B-61
timeout: DDM 2-13, 4-4, 4-6; USER 2-12	transfer control: USER B-62
displaying/modifying: <i>USER</i> 6-181	P-type global parameters: <i>USER</i> B-53
during logoff: <i>USER</i> 2-25	transfer to command file: USER 6-184
IDQ35 warning message: SCSI A-4	transferring
of device: DDM 3-4	data to/from devices: USER 3-39
parameter, Class Get: PROG 4-18	data to/from files: PROG 8-8
return data on: DRM 2-180	transformation, graphics coordinate (VIS): REL
timeout for transmission error: HPIB 6-2	9-15
timeout/logoff function, \$AUTO_LOGOFF:	translating extended relocatable record formats:
USER 2-25	USER 6-129, 6-130
timer	transmission log: <i>DDM</i> 5-4, 6-1
completed (SglAlrm): PROG 13-3	definition: DDM 5-4
reset, ResetTimer: REL 7-40	EXEC 21: <i>PROG</i> 4-19
signals: PROG 13-26	transparency bit, read request: DRM 2-151
See also EXEC 38	trap cells: <i>SDM</i> 1-12, 11-20
subroutine, calling sequences: <i>PROG</i> 13-27	TRAP statement: HPIB 5-18
timeslice quantum: SGI 7-4	tree structure: GSA 3-1, 3-5
timeslicing: SDM 3-2; SGI J-7; USER 4-9	TRIGGER statement: HPIB 4-17
timezone: MAIL A-4, A-6	TRIGR subroutine: HPIB 4-17
TITLE directive: FTN 7-26	TrimLen, remove trailing blanks: <i>REL</i> 7-52
TK command: EDIT 4-78	trouble, in case of: GSA 2-5
TL command: EDIT 4-75	troubleshooting: SCSI 4-1
TM command: <i>EDIT</i> 4-75; <i>GSA</i> 2-2; <i>USER</i> 1-5,	LP spool system: <i>PRNT</i> 2-46
6-180	true address of parameter, .PCAD: REL 5-39
TO command: USER 6-181	true address transfer
TOUCH command: USER 6-182	.ENTC: <i>REL</i> 5-28
TP command: EDIT 4-75	.ENTN: <i>REL</i> 5-28
TR (transfer) command, LINK utility: LINK 3-24	.ENTP: <i>REL</i> 5-29
TR command: <i>EDIT</i> 4-79; <i>USER</i> 1-5, 2-14, 3-34,	.ENTR: <i>REL</i> 5-29
6-184	truncate
Trace command: <i>DBUG</i> 5-34	extended real to integer: <i>REL</i> 3-25, 3-46
TRACE directive: FTN 7-27	fractional part of double real: <i>REL</i> 3-131
TRACEBACK: MAC N-4	real: REL 3-4
tracing: FTN 7-27	real to integer: <i>REL</i> 3-48
track, sector, to double integer block number con-	truncation: <i>EDIT</i> 1-13, 3-3, 3-13, 3-14, 3-32, 3-33
version: <i>REL</i> 7-24	4-8
track size of disks: BKUP 1-3	truth table
tracks, sparing and skipping: BKUP 1-8	for masking operators: FTN 2-27
tracks and sectors per track, DiscSize: REL 7-25	for the logical operators: FTN 2-26
traffic.log: MAIL 7-1, 7-3, A-9	TS command: EDIT 4-75
traffic.old: MAIL 7-3	TS option: EDIT 3-27

TU command: EDIT 4-75	unary plus: FTN 2-18
turning on Security/1000: SMM 4-18	unconditional exchange: EDIT 4-81
turning on/off session accounting: SGI 9-5	unconditional GOTO statement: FTN 3-47
tutorial: EDIT 2-1	undefined external reference search sequence:
two dimensional array examples (VIS): <i>REL</i> 9-4	<i>LINK</i> 4-9
TYPE (system macro): MAC L-18	undelete messages: MAIL 2-4, 4-3, 4-9
type 1 files, copying: USER 6-27, 6-30	undelete messages by limiting criteria: MAIL 4-4
type 12 file support: <i>PROG</i> G-1	4-9
type 12 files, DCB definitions: SDM 12-11	undeleting messages: MAIL 3-14
type 2 files, copying: USER 6-27, 6-30	underscore (_): FTN E-2
type 6	underscore in symbolic names: FTN E-2
(memory-image) file: GSA 5-2	Undo (UN) command: <i>EDIT</i> 1-11, 1-15, 2-29
program file: GSA 5-6	undo list: <i>EDIT</i> 3-46, 4-83, 4-84
TYPE and STOP, communication with RTE: MAC	undo list yank: EDIT 4-84
L-18	undoing commands: EDIT 1-2, 4-83
type conversion rules	unformatted input: FTN 4-28
examples for arithmetic assignments: FTN 3-9	unformatted input/output: FTN 4-28
table for arithmetic assignments: FTN 3-8	unformatted output: FTN 4-29
type extensions: <i>PROG</i> B-13	unformatted record: FTN 5-2
type msglist: MAIL 3-12	unimplemented instruction: SDM 9-2
type operator: MAC 4-58	unique user information: SMM 2-10, 3-10, 3-24
type statement: <i>FTN</i> 2-3, 3-54, 3-83, 6-13 type-ahead, IDM00: <i>DRM</i> J-58	capability level: SMM 3-11
typical SAM requirement: SDM 2-10	logon name: SMM 3-10
typing in text: EDIT 2-12	password: SMM 3-10
typing of intrinsic functions: FTN B-11	real name: SMM 3-10 unit: FTN 3-65
typing of intrinsic functions. The bill	
	unit number: <i>FTN</i> 3-14, 3-35, 3-56, 3-61, 5-1 units in EXEC 12: <i>PROG</i> 6-2, 6-5
U	universal commands: HPIB 4-8
II command, EDIT 2 10 2 20 4 01	UNL: <i>MAC</i> B-18, J-10
U command: EDIT 3-18, 3-20, 4-81	unlabeled (blank) common command COM: SGI
UART (Universal Asynchronous Receiver/Transmitter): DPM C.5	7-13
mitter): DRM C-5 UCALL: MAC N-8	unlock
UDSP	memory: LINK 3-14
default: USER 3-10	shareable EMA partition: USER 6-186
defining: USER 3-34	unmark messages: MAIL 2-4
display/modify: USER 6-134	unmirroring disks with MI command: DATA 3-8
numbers: USER 3-10	unpack, real: REL 3-89
searching for files: USER 3-34	UNPRV: PROG 12-1
specifying in file descriptors: USER 3-35	UNPU command: GSA 3-8, 3-11; USER 3-26,
used in restoring a program file: USER 4-3	6-188
UDSP table: <i>SDM</i> 11-35, 11-37	unpurge: GSA 3-8
UDSP/LU bit maps: SDM 2-11	unpurging files: USER 3-26, 6-188
UIT (unimplemented instruction): SDM 9-2	UNS: <i>MAC</i> 4-25, 4-32, 4-33, B-15
UJP: <i>MAC</i> 3-16, B-12	UNSET command: <i>USER</i> 2-15, 2-16, 6-70, 6-189
UJS: <i>MAC</i> 3-16, B-12	UP
UL command: USER 6-186	command: GSA 2-3
ULEMA: PROG 9-5	state: GSA 2-3
unlock a shareable EMA partition: <i>PROG</i> 9-26	up a device: USER 6-190
UN command: <i>EDIT</i> 1-2, 1-11, 2-29, 3-31, 3-46,	up all LUs referring to this IFT, UpIft: DDM 7-2
4-83	UP command: SCSI 4-7; USER 1-5, 6-190
UN option: EDIT 4-72	using to update RTE-A disk state: DATA 2-2
UNALIAS command: USER 6-187	up device, \$UPIO: DDM 7-2
unary minus: FTN 2-18	Up state, paired disk: DATA 2-1
unary operator: <i>FTN</i> 2-18, 2-25	updating disk state, for RTE-A Operating System
:ICH:: <i>MAC</i> 2-10	DATA 2-1
:MR:: <i>MAC</i> 2-10	updating repaired disk: <i>DATA</i> 3-12
:SY:: MAC 2-10 - pegate: MAC 2-10	updating system file configuration status: <i>DATA</i> 4-19
- negate: MAC 2-10	
description: MAC 4-51, 4-63	updating the current folder: <i>MAIL</i> 4-7

upgrading A990 firmware: <i>SGI</i> 9-20 UpIft: <i>DDM</i> 7-2 UPIO: <i>DDM</i> 7-2	USNUM, return the session number: <i>REL</i> 6-20 UTIL: <i>SDM</i> 5-11 utilities
upper/lower case: EDIT 1-3, 5-20	restrictions on use: <i>DATA</i> D-1
See also Case Folding (CF) option	use with Datapair/1000: DATA D-1
uppercase: FTN 2-1, 2-3, 2-10, 3-54, 3-65	with security implemented: SMM 4-7
uppercase operator: MAC 4-58	utility, system: LINK 3-23
URAN: FTN B-15	utility functions, magnetic tape, MAGTP: REL
US command: SGI 7-12	5-17
USA: <i>MAC</i> 3-16, B-12	uudecode: MAIL 6-6
	uuencode: MAIL 6-5
USB: <i>MAC</i> 3-16, B-12	UV user variable
USE: FTN E-2	EXEC 17: PROG 4-11
use	
of LU Access Table: SDM 11-37	EXEC 18: <i>PROG</i> 4-11
of UDSP table: SDM 11-37	EXEC 20: <i>PROG</i> 4-11
use applications (VIS): <i>REL</i> 9-11	EXEC 21: <i>PROG</i> 4-18
user	UY command: <i>EDIT</i> 4-83, 4-84
account: USER 5-4	
creating/modifying: USER 5-5	V
definition: SMM 2-5	V
buffer: PROG 8-8	VABS, absolute value routine (single precision):
configuration file: SDM 11-37; SMM 2-9, 3-31,	REL 8-13
I-1, I-3	VADD, vector add (single precision): <i>REL</i> 8-9
ID table: <i>SDM</i> 11-32, 11-36	
ID table modification: SDM 11-37	valid file name examples: GSA 3-3
interaction: SDM 1-9	value assignment statements: FTN 3-3
partitions: SDM 2-3	variable: <i>FTN</i> 2-3, 2-5, 2-13
	in dimension declarator: FTN 2-14
managing: SDM 3-5	simple: FTN 2-13
user ID, OwnerToId: REL 6-14	subscripted: FTN 2-13, 2-15
user name	variable-length file, copying to: USER 6-27, 6-30
SessnToOwnerName: REL 6-16	variables
USNAM: REL 6-19	\$AUTO_LOGOFF: <i>USER</i> 2-16
verify, VFNAM: REL 6-20	\$CMNDO: USER 2-17
user request: DDM 6-1	\$COLUMNS: USER 2-17
user table address, LUSES: REL 6-13	\$DATC: <i>USER</i> 2-17
user.group identification: GSA 1-3; USER 5-1	\$EVB SIZE: USER 2-17
USER.GROUP information: SMM 2-5, 2-10, 3-12,	\$FRAME_SIZE: USER 2-17
3-25	\$HOME: USER 2-17
user-defined symbolic name: FTN 2-4	\$IFDVR: USER 2-17
user-defined variables: USER 2-15, 6-189	\$KILLCHAR: USER 2-17
User-definable Directory Search Path (UDSP):	\$LINES: <i>USER</i> 2-18
SDM 2-11	\$LOG: <i>USER</i> 2-18
User-definable Directory Search Path (USDP)	\$LOGON: <i>USER</i> 2-18
table: SDM 11-37	\$MY NAME: <i>USER</i> 2-18
UserIsSuper, check for/if superuser: <i>REL</i> 6-19	\$OLDPWD: USER 2-18
users directory: SMM 2-8	\$OPSY: <i>USER</i> 2-18
using	\$POLL: <i>USER</i> 2-18
CDS system libraries: <i>LINK</i> 4-10	\$POLLINT: USER 2-18
EMA and libraries: LINK 4-10	1
	\$PROMPT: USER 2-18
FMGR transfer files to run LINK: LINK B-4	\$QUIET_CMD: USER 2-19
LINK with FMGR: LINK B-1	\$RETURN S: USER 2-19
RTE-A LINK on RTE-6/VM: LINK 5-2	\$RETURNI – \$RETURN5: USER 2-19
RTE-A: USER 1-1	\$RU_FIRST: USER 2-19
the system: USER 2-1	\$SAVE_STACK: USER 2-20
using AIF and AELSEIF: MAC 4-64	\$SESSION: USER 2-20
using breakpoints: <i>DBUG</i> 3-4	\$VISUAL: USER 2-20
using expressions: DBUG 4-7	\$WD: <i>USER</i> 2-20
using macro libraries: MAC 5-3	ack: MAIL 5-4
using the editor: GSA 4-1	askdisp: MAIL 5-4
USNAM, return user name: REL 6-19	edit: <i>MAIL</i> , 5-5, 5-7

environment: USER 2-16	VDIV (single precision): <i>REL</i> 8-9
environment variable block: SMM 2-3	WDIV (EMA single precision): REL 8-9
eom: MAIL 5-5	vector dot product routine
exported: <i>USER</i> 6-6, 6-171	DVDOT (double precision): <i>REL</i> 8-17
imported: <i>USER</i> 6-6, 6-171	DWDOT (EMA double precision): <i>REL</i> 8-17
justedit: MAIL 5-5	VDOT (single precision): <i>REL</i> 8-17
positional: USER 2-14	WDOT (EMA single precision): <i>REL</i> 8-17
predefined: USER 2-16	vector EMA copy routine, DVWMV (double preci-
prefix: MAIL 5-6	sion): REL 8-26
print: MAIL 5-6	vector EMA/non-EMA, move routine
•	
prompt: MAIL 5-6	DVWMV (double precision): REL 8-26
quiet: MAIL 5-7	VWMOV (single precision): <i>REL</i> 8-26
read: <i>MAIL</i> 5-7, 6-4	WVMOV (single precision): <i>REL</i> 8-26
record: MAIL 5-7	vector EMA/non-EMA move routine, DWVMV
shell: MAIL 5-5	(double precision): REL 8-26
signature: MAIL 5-7	Vector Instruction Set: FTN 7-23
skipdel: MAIL 5-4	vector instructions, combinations: <i>REL</i> 9-7
sortby: MAIL 5-7	vector largest value
spell: MAIL 5-8	DVMAX (double precision): <i>REL</i> 8-20
user-defined: USER 2-15, 6-189	DWMAX (EMA double precision): <i>REL</i> 8-20
visual: MAIL 5-8	VMAX (single precision): REL 8-20
VC+ System Extension Package: FTN 7-14, H-1;	WMAX (EMA single precision): REL 8-20
PROG 10-1; USER 1-1, 1-2, 2-1, 3-6, 5-1	vector largest value (absolute)
VCP: USER 6-40	DVMAB (double precision): <i>REL</i> 8-20
See also virtual control panel	DWMAB (EMA double precision): <i>REL</i> 8-20
and BOOTEX: USER 6-87	VMAB (single precision): <i>REL</i> 8-20
boot information: <i>SGI</i> H-1	WMAB (EMA single precision): <i>REL</i> 8-20
bootstring for SCSI or CS/80 disk: USER 6-62	vector move routine
default parameters for boot: SGI H-3	DVMOV (double precision): REL 8-24
errors: SGI H-1	DWMOV (EMA double precision): REL 8-24
halt: USER 8-6	VMOV (single precision): <i>REL</i> 8-24
VCP (virtual control panel): SDM 9-2	WMOV (EMA single precision): <i>REL</i> 8-24
VCP mode: SDM 1-9	vector multiply
VCP PROMs: SCSI 6-3	DVMPY (double precision): <i>REL</i> 8-9
VCP> prompt: GSA 1-2	DWMPY (EMA double precision): <i>REL</i> 8-9
VCTR: SDM 5-11	VMPY (single precision): <i>REL</i> 8-9
VDIV, vector device (single precision): <i>REL</i> 8-9	WMPY (EMA single precision): REL 8-9
VDOT, vector dot product routine (single preci-	vector pivot routine
sion): REL 8-17	DVPIV (double precision): <i>REL</i> 8-18
VE command	DWPIV (EMA double precision): <i>REL</i> 8-18
format: DATA 3-14	VPIV (single precision): REL 8-18
LU locking during verify: <i>DATA</i> 3-14	WPIV (EMA single precision): REL 8-18
quiet system requirements: DATA 3-14	vector smallest value
runstring: DATA 3-14	DVMIN (double precision): <i>REL</i> 8-20
unsuccessful verification: DATA 3-14	DWMIN (EMA double precision): REL 8-20
usage message: DATA 3-14	VMIN (single precision): REL 8-20
vector add	WMIN (EMA single precision): <i>REL</i> 8-20
DVADD (double precision): REL 8-9	vector smallest value (absolute)
DWADD (EMA double precision): <i>REL</i> 8-9	DVMIB (double precision): REL 8-20
VADD (single precision): <i>REL</i> 8-9	DWMIB (EMA double precision): <i>REL</i> 8-20
WADD (EMA single precision): <i>REL</i> 8-9	VMIB (single precision): <i>REL</i> 8-20
vector arithmetic routines: <i>REL</i> 8-9	WMIB (EMA single precision): <i>REL</i> 8-20
vector copy routine	vector subtract
DVSWP (double precision): REL 8-24	DVSUB (double precision): REL 8-9
DWSWP (EMA double precision): REL 8-24	DWSUB (EMA double precision): <i>REL</i> 8-9
VSWP (single precision): REL 8-24	VSUB (single precision): REL 8-9
WSWP (EMA single precision): <i>REL</i> 8-24	WSUB (EMA single precision): REL 8-9
vector divide	vector sum routine
DVDIV (double precision): <i>REL</i> 8-9	DVSUM (double precision): <i>REL</i> 8-14
DWDIV (EMA double precision): <i>REL</i> 8-9	DWSUM (EMA double precision): <i>REL</i> 8-14

VSUM (single precision): <i>REL</i> 8-14	verify hardware installation: SCSI 2-9
WSUM (EMA single precision): <i>REL</i> 8-14	verify user name, VFNAM: <i>REL</i> 6-20
vector sum routine (absolute)	version: <i>MAIL</i> 3-20, 5-7
DVNRM (double precision): REL 8-14	Vertical Window (VW) option: EDIT 3-27, 4-85,
DWNRM (EMA double precision): REL 8-14	B-3
VNRM (single precision): <i>REL</i> 8-14	
	VFNAM, verify user name: <i>REL</i> 6-20
WNRM (EMA single precision): <i>REL</i> 8-14	VI visual editing mode: <i>USER</i> 7-13
vector-scalar add	View command: <i>DBUG</i> 5-35
DVSAD (double precision): <i>REL</i> 8-11	viewing, options: <i>EDIT</i> 3-29
DWSAD (EMA double precision): <i>REL</i> 8-11	See also SH command
VSAD (single precision): <i>REL</i> 8-11	viewing information: <i>EDIT</i> 2-20
WSAD (EMA single precision): <i>REL</i> 8-11	virtual control panel: <i>DDM</i> 9-3; <i>SDM</i> 1-9, 9-2
vector-scalar divide	impact upon drivers: DDM 9-3
DVSDV (double precision): REL 8-11	virtual control panel (VCP). See VCP
DWSDV (EMA double precision): <i>REL</i> 8-11	
VSDV (single precision): <i>REL</i> 8-11	Virtual Control Panel (VCP) program: GSA 1-2
WSDV (EMA single precision): REL 8-11	virtual memory
	I/O transfers: <i>PROG</i> 9-21
vector-scalar multiply	initialized: <i>PROG</i> 9-32
DVSMY (double precision): <i>REL</i> 8-11	mapping segments (MSEG,VSEG): PROG 9-2
DWSMY (EMA double precision): <i>REL</i> 8-11	page fault: PROG 9-2
VSMY (single precision): <i>REL</i> 8-11	page table: <i>PROG</i> 9-2
WSMY (EMA single precision): <i>REL</i> 8-11	working set: <i>PROG</i> 9-2
vector-scalar subtract	virtual memory area: FTN 3-33, 7-15
DVSSB (double precision): <i>REL</i> 8-11	See also VMA
DWSSB (EMA double precision): REL 8-11	
VSSB (single precision): <i>REL</i> 8-11	VIS programs, examples: <i>REL</i> 9-24
WSSB (EMA single precision): <i>REL</i> 8-11	visual mode: <i>MAIL</i> 2-1, 2-3, 3-11, 4-1, 5-1, 5-4
VEMA: SDM 5-11	command set: MAIL 4-1
	commands compared with line mode: MAIL 4-3
verification program: SCSI 4-3	commands listed by task: MAIL 4-5
error code returned in CI variable: SCSI 4-13	bouncing a message: MAIL 4-7
ignore errors: SCSI 4-4	creating and mailing a message: MAIL 4-5
interactive interface: SCSI 4-4	displaying header fields: MAIL 4-9
commands: SCSI 4-4	displaying online help messages: MAIL 4-10
display information: SCSI 4-6	
FMP test: SCSI 4-8	displaying the next page of the message list:
help: SCSI 4-4	MAIL 4-5
LOOPBACK test: SCSI 4-8	displaying the previous page of the message
repeat command(s): SCSI 4-7	list: MAIL 4-5
self-test: SCSI 4-8	editing a message: MAIL 4-5
termination power on or off: SCSI 4-8	exiting Mail/1000 deleting marked messages:
verbose mode: SCSI 4-7	MAIL 4-11
	exiting Mail/1000 undeleting marked mes-
non-interactive interface	sages: MAIL 4-11
display information: SCSI 4-10	forwarding a message: MAIL 4-7
FMP test: SCSI 4-11	marking a message for deletion: MAIL 4-8
LOOPBACK test: SCSI 4-12	
RAM test: SCSI 4-12	marking messages for deletion by limiting cri-
repeat command(s): SCSI 4-10	teria: MAIL 4-9
run all tests: SCSI 4-12	printing a message: MAIL 4-9
runstring parameters: SCSI 4-9	reading the current message: MAIL 4-5
self-test: SCSI 4-10	refreshing the screen: MAIL 4-9
termination power on or off: SCSI 4-12	replying to a group: MAIL 4-7
nontest parameters: SCSI 4-4	replying to a message: MAIL 4-7
	running a program on mail messages: MAIL
record test results in log file: SCSI 4-4	4-10
run all tests (-all): SCSI 4-12	
terminal not HP: SCSI 4-4	running CI from: MAIL 4-10
usage message: SCSI 4-3	saving a message to a file: MAIL 4-8
verbose mode: SCSI 4-4	saving a message to another folder: MAIL 4-8
ZLPBK.HEX: SCSI 4-8	selecting a message by number: MAIL 4-6
verify disk LU, contents command VE: DATA 3-3,	selecting messages by selection criteria:
3-14	MAIL 4-6

selecting the first message in the list: <i>MAIL</i> 4-6	VMAX, vector largest value (single precision): <i>REL</i> 8-20
selecting the last message in the list: <i>MAIL</i> 4-6	VMIB, vector smallest value (absolute) (single precision): <i>REL</i> 8-20
selecting the next message: MAIL 4-6	VMIN, vector smallest value (single precision): <i>REL</i> 8-20
selecting the previous message: MAIL 4-6 switching permanently from visual to line	VMOV, vector move routine (single precision): <i>REL</i> 8-24
mode: <i>MAIL</i> 4-10 switching temporarily from visual to line	VMPY, vector multiply (single precision): REL 8-9
mode: MAIL 4-10	VNRM, vector sum routine (absolute) (single precision): <i>REL</i> 8-14
switching to a different folder: MAIL 4-8	volume header: SDM 12-1
tagging messages by limiting criteria: MAIL 4-8	volumes
tagging or untagging messages: MAIL 4-8	initializing: USER 3-38, 6-85
undeleting a message: MAIL 4-9	listing: USER 3-37
undeleting messages by limiting criteria:	manipulating: USER 3-36
MAIL 4-9	mounting and dismounting: <i>USER</i> 3-36, 6-108 ownership and protection: <i>USER</i> 3-37, 6-139
updating the current folder: MAIL 4-7	user of: <i>USER</i> 6-204
convenience commands: MAIL 4-2	volumes accessed at system boot: <i>DATA</i> 4-5
customizing the menu order: <i>MAIL</i> 5-7 MPACK: <i>USER</i> 6-121	volumes not accessed at system boot: DATA 4-4
user interface: MAIL 2-3, 4-1	VPIV, vector pivot routine (single precision): REL
VM (virtual memory size) command: <i>LINK</i> 3-24	8-18
VMÀ: FTN 3-33, 7-15; ŚDM 3-3	VREAD subroutine: <i>PROG</i> 9-44 VS (virtual memory size) command: <i>LINK</i> 3-24
allocation of: LINK 4-2	VS command: <i>USER</i> 2-24, 4-11, 6-191
change VMA size: USER 4-11	VSAD, vector-scalar add (single precision): <i>REL</i>
changing size: USER 6-191	8-11
changing working set size: <i>USER</i> 6-206 displaying size: <i>USER</i> 6-191	VSCSI: PRIM A-2
displaying working set size: USER 6-206	VSDV, vector-scalar divide (single precision): <i>REL</i>
maximum size in pages: USER 4-13	8-11 VSMY, vector-scalar multiply (single precision):
models: USER 4-13	REL 8-11
VMA file subroutines: <i>PROG</i> 9-32	VSSB, vector-scalar subtract (single precision):
examples: PROG 9-40	REL 8-11
VMACLOSE: PROG 9-36	VSUB, vector subtract (single precision): <i>REL</i> 8-9
VMAOPEN: <i>PROG</i> 9-33 VMAPOST: <i>PROG</i> 9-35	VSUM, vector sum routine (single precision):
VMAPURGE: <i>PROG</i> 9-35	REL 8-14 VSWP, vector copy routine (single precision): REL
VMAREAD: PROG 9-36	8-24
VMAWRITE: PROG 9-38	VW option: EDIT 3-27
VMA routines, FMGR VMA file routines: <i>PROG</i>	VWMOV, vector non-EMA to EMA move routine
9-41	(single precision): REL 8-26
VMA/EMA firmwara A000 upgrada: PROC 0 14	VWRIT subroutine: <i>PROG</i> 9-45
firmware, A990 upgrade: <i>PROG</i> 9-14 models: <i>PROG</i> 9-14	
programming: PROG 9-1	W
VMA/EMA mapping area: SDM 2-5	**
VMA/EMA mapping mgmt. subroutines: <i>PROG</i>	W command: EDIT 2-2, 2-22, 2-28, 2-39, 4-85
9-46, 9-51, 9-52, 9-53	WABS, absolute value routine (EMA single preci-
.EMIO: PROG 9-55	sion): <i>REL</i> 8-13
.IMAP: <i>PROG</i> 9-48 .IRES: <i>PROG</i> 9-49	WADD, vector subtract (EMA single precision):
JMAP: <i>PROG</i> 9-49	REL 8-9
.JMA1 : 7 ROG 9-50 .LBP, .LBPR: <i>PROG</i> 9-54	wait, WT suspended: <i>PROG</i> 5-6, 5-9 wait list: <i>SDM</i> 1-3
LPX, .LPXR: <i>PROG</i> 9-54	warning message, IDQ35: SCSI A-4
VMAB, vector largest value (absolute) (single pre-	wastebasket: MAIL 3-14, 3-16
cision): REL 8-20	cleanup filtering: MAIL 5-12
VMAIO subroutine: PROG 9-21	filtering actions
VMAST subroutine: <i>PROG</i> 9-19	delete: MAIL 5-12

dispose: MAIL 5-12	WMPY, vector multiply (EMA single precision):
from: MAIL 5-12	REL 8-9
hold: MAIL 5-12	WN command: EDIT 4-85
leave: MAIL 5-12	WNRM, vector sum routine (absolute) (EMA
wastefilter.mail file: MAIL 5-12	single precision): REL 8-14
WC command: <i>EDIT</i> 2-9, 2-24, 3-6, 4-86; <i>USER</i>	word
6-192	byte and bit processing: MAC B-3
WC option: <i>EDIT</i> 3-27, 5-8	processing: MAC 3-3, B-3
WD (working directory) command, LINK utility:	word count: USER 6-192
LINK 3-25	work area: EDIT 1-8
WD command: GSA 3-6, 3-7; USER 3-30, 6-194	work file: <i>EDIT</i> 1-2, 1-7, 1-12, 2-17, 3-4, 3-6, 3-46,
WDIV, vector divide (EMA single precision): <i>REL</i>	3-50, B-3, C-2
8-9	work file defaults: MAC E-6
WDOT, vector dot product routine (EMA single	work file format
precision): REL 8-17	RTE-6/VM: EDIT C-4
weak external: FTN 7-11	RTE-A: EDIT C-3
WELCOM file: HPIB 3-6	WORK=work file specification: <i>MAC</i> E-5
WELCOME file	working directory: USER 3-6, 3-30, 3-34
creation/modification: DATA 4-8, 4-13	changing, CD command: USER 6-20
sample: DATA 4-13	creation, CRDIR: GSA 3-6
Welcome file: SCSI 3-5; SGI 9-18	definition, WD: GSA 3-6
WEXT: <i>MAC</i> 4-19	display/change: USER 6-194
wf: MAIL 3-18, 4-3, 4-8	setting default for LINK: LINK 3-25
WH	working set: <i>PROG</i> 9-2
command: <i>USER</i> 1-5, 2-6, 2-8, 6-195	changing size: <i>USER</i> 4-11
CL: USER 6-198	changing size of: USER 6-206
D: USER 6-199	displaying size of: USER 6-206
PA: <i>USER</i> 6-199	size, specifying: LINK 3-26
RN: <i>USER</i> 6-200	worksheets
SC: USER 6-199	IFT/DVT: SGI 6-5, B-7
SH: <i>USER</i> 6-201	IFT/DVT for SCSI card: SGI 6-7
ST: USER 6-202	initialization and system relocation: SGI B-2
locking in memory: USER 6-202	memory allocation: SGI B-9, B-10
WH command: GSA 2-2	system I/O configuration: SGI 6-3, B-6
what the system macros do: MAC L-1	table generation: SGI B-8
Where command: <i>DBUG</i> 3-11, 5-35	WPIV, vector pivot routine (EMA single preci-
WHILE-DO-DONE: <i>USER</i> 1-5, 2-24, 6-203	sion): REL 8-18
WhoLockedLu: REL 7-53	WR command: <i>EDIT</i> 2-9, 2-24, 4-87
WhoLockedRn: REL 7-53 WHOSD command: USER 6-204	wrap-around: <i>EDIT</i> 2-12 WRIT: <i>DDM</i> 7-6
wildcard (@) character: EDIT 2-33	Write and Create (WC) command: <i>EDIT</i> 2-9
See also indefinite (@) character	Write and Replace (WR) command: EDIT 2-9
wildcard characters: GSA 3-8, 3-11	write and Replace (WR) command. EDIT 2-9 write data word/map selected, \$WRIT: DDM 7-6
WildCardMask: PROG 8-86	write one word without setup, \$ONEW: DDM 7-7
window	write protection
definition: <i>EDIT</i> B-3	directories: GSA 3-12
horizontal search: <i>EDIT</i> 3-18	files: <i>GSA</i> 3-12
Window (W) command: EDIT 2-22	write request, serial I/O drivers: <i>DRM</i> 2-156
Window Columns (WC) option: <i>EDIT</i> 3-27	BUFR and BUFLN: DRM 2-156
WMAB, vector largest value (absolute) (EMA	CNTWD: <i>DRM</i> 2-156
single precision): <i>REL</i> 8-20	WRITE statement: <i>FTN</i> 3-85, 4-3, 4-26, 4-29, 5-5,
WMAX, vector largest value (EMA single preci-	5-6
sion): REL 8-20	write to system console, SYCON: REL 6-18
WMIB, vector smallest value (absolute) (EMA	Write A990Clock routine: <i>REL</i> 7-54
single precision): <i>REL</i> 8-20	WRITF (write a record to a file or device): <i>PROG</i>
WMIN, vector smallest value (EMA single preci-	C-30
sion): REL 8-20	WRITF routine: <i>PROG</i> B-6
WMOV, vector move routine (EMA single preci-	writing a complete message: MAIL 3-4
sion): REL 8-24	writing macro definitions: MAC 5-1, 5-4

writing source file: GSA 5-2	runstring options: DBUG 7-1
writing to a file: <i>EDIT</i> 3-7, 4-86, 4-87	-d: <i>DBUG</i> 7-2
WS (working set size of VMA) command: LINK	-р: <i>DBUG</i> 7-2
3-26	-r: DBUG 7-2
WS AD vector scalar add (EMA single precision):	XDBL: MAC H-11 YDESC \$DTCLP library, DPM 2 82 2 87
WSAD, vector-scalar add (EMA single precision): <i>REL</i> 8-11	XDESC, \$DTCLB library: <i>DRM</i> 2-83, 2-87 XDIAG, \$DTCLB library: <i>DRM</i> 2-83
WSDV, vector-scalar divide (EMA single preci-	XEXT: MAC H-7
sion): REL 8-11	XFMRK, \$DTCLB library: DRM 2-83
WSMY, vector-scalar multiply (EMA single preci-	XIF: <i>MAC</i> B-18, J-3
sion): <i>REL</i> 8-11	XINMD, \$DTCLB library: DRM 2-83, 2-87
WSSB, vector-scalar subtract (EMA single preci-	xit: MAIL 3-19, 4-3
sion): <i>REL</i> 8-11	XLA: MAC 3-16, B-13
WSUB, vector subtract (EMA single precision):	XLB: <i>MAC</i> 3-16, B-13
REL 8-9 WSUM vector sum reutine (EMA single presi	XLCRD, \$DTCLB library: DRM 2-83
WSUM, vector sum routine (EMA single precision): <i>REL</i> 8-14	XLCVF, \$DTCLB library: <i>DRM</i> 2-83 XLCWR, \$DTCLB library: <i>DRM</i> 2-83
WSWP, vector copy routine (EMA single preci-	XLUEX (I/O extended logical unit EXEC):
sion): REL 8-24	PROG 3-10
WU command: EDIT 4-85	XLUEX*: FTN E-3
WVMOV, vector EMA to non-EMA move routine	XMA: <i>MAC</i> 3-16, B-13
(single precision): REL 8-26	XMB: <i>MAC</i> 3-16, B-13
	XMM: MAC B-13
X	XMS: <i>MAC</i> 3-16, B-13
Α	Xon/Xoff handshake protocol: <i>EDIT</i> 2-16, 2-17,
X command: <i>EDIT</i> 2-34, 3-18, 4-88	3-38, 4-63 YOD: MAC 3.2 P.2
X compiler option: FTN 8-4, B-1, B-11	XOR: <i>MAC</i> 3-2, B-2 XPOLY: <i>REL</i> 3-130
X option: MAC E-2	xq: MAIL 3-21, A-10, A-11, B-2
XAX: MAC 3-9, B-8	XQ command: <i>USER</i> 4-3, 4-4, 6-207
XAY: <i>MAC</i> 3-9, B-8 XBX: <i>MAC</i> 3-9, B-8	XQPRG (load and execute a program): PROG
XBY: MAC 3-9, B-8	C-32
XCA: <i>MAC</i> 3-16, B-13	XQSB: DDM 7-3
XCB: <i>MAC</i> 3-16, B-13	XQTIM (time schedule a program): <i>PROG</i> C-34
XCICL, \$DTCLB library: DRM 2-83	XREIO (extended REIO): PROG 3-11
XCMND: SDM 5-11	XREIO*: FTN E-3
XCNCL, \$DTCLB library: DRM 2-83	XRELD, \$DTCLB library: <i>DRM</i> 2-83, 2-87 XRELS, \$DTCLB library: <i>DRM</i> 2-83, 2-87
XCOLD, \$DTCLB library: DRM 2-83	XRLPB, \$DTCLB library: DRM 2-83
XCOMP, \$DTCLB library: DRM 2-83, 2-89	XRQST, \$DTCLB library: DRM 2-83, 2-87
XCOPY, \$DTCLB library: DRM 2-83, 2-88 Xdb	XSA: <i>MAC</i> 3-16, B-13
C language expressions: <i>DBUG</i> 7-12	XSAM: <i>SDM</i> 1-7, 2-10; <i>USER</i> 6-156
command stacking: DBUG 7-3	See also extended system available memory
command summary: DBUG 7-6	XSB: <i>MAC</i> 3-16, B-13
commands: DBUĞ 7-3	XSDCL, \$DTCLB library: DRM 2-83
breakpoint commands: <i>DBUG</i> 7-5	XSPRE, \$DTCLB library: <i>DRM</i> 2-83 XUNLD, \$DTCLB library: <i>DRM</i> 2-83
command arguments: DBUG 7-3	XUTIL, \$DTCLB library: DRM 2-83
data display commands: DBUG 7-9	XWLPB, \$DTCLB library: DRM 2-83
execution control commands: DBUG 7-8	11 (21 2 , ¢2 1 022 notwijt 2 1 w 2 00
file viewing commands: <i>DBUG</i> 7-9 miscellaneous commands: <i>DBUG</i> 7-11	Υ
record/playback commands: DBUG 7-11	T
stack tracing commands: DBUG 7-9	Y command: <i>EDIT</i> 3-18, 4-90
window control commands: DBUG 7-10	Y compiler option: FTN B-1, B-11
compatibility mode: DBUG 1-1, 7-1	YrDoyToMonDom: REL 7-54
loading with Debug: DBUG 2-2	YrDoyToRteDate: REL 7-55
playback file: DBUG 7-1, 7-10	
record file: DBUG 7-1, 7-10	Z
record-all file: DBUG 7-10	7 Liv. DDM 2 11 5 2 7 2
runstring: DBUG 7-1	Z bit: <i>DDM</i> 2-11, 5-2, 6-2

Z option: *MAC* E-2 Z-buffer: *FTN* 3-74

Z: write/read bit, serial I/O drivers: DRM 2-151

Z\$CDS symbol: FTN 7-14 Z\$LPP: FTN 7-4 Z-Buffer: DRM 2-151

ZBUF: FTN 3-74, 3-75, 3-85, 3-86, 5-6, E-2 zero a passed buffer, ClearBuffer: REL 7-6

zero increment (VIS): REL 9-9 zero length records: *DDM* 5-3 ZERO parameter: *DRM* 1-8, 1-15

zeroing memory locations, %C command: GSA

1-2

ZLEN: FTN 3-75, 3-86, 5-6, E-2 zone punch, SZONE: REL 10-14

ZPUT, store a character string: *PROG* 7-18