Table 8. Data and Control Lines (Continued)

1311 Terminals

Cable Number 2178583 (C Suffix)

1441 Terminals

Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
DO4 - A B C D E F G H	491349	22	+Q Set TAR 2 +Q Set TAR 4 +Q Set TAR 8 +Q Set TAR 10 +Q Set TAR 20 +Q Set TAR 40 +Q Set TAR 80 +Q Set TAR 100 -Q Seld Stop	C18 - B(A) C18 - D(C) C18 - F(E) C18 - H(G) C18 - K(J) C18 - M(L) C18 - P(N) C18 - R(Q) C21 - B(A)	
K L (R)			+Q Seek Addr Xfer —Q Begin Op Reset Ground for TW Groups Above Designated By ()	C21 - D(C) C21 - F (E)	i 1

IBM 1311 DISK STORAGE DRIVE, MODEL 2

GENERAL INFORMATION

The 1311 Model 2 (Figure 4) is an additional Disk Storage Drive for any system which uses 1311s. The Model 2 is a satellite unit that is powered and controlled from a master unit. Up to four Model 2 units can be added to each master 1311 Model 1, 4, or 5. Up to three Model 2 units may be added to the 1311 Model 3.

The Model 2 contains a disk drive mechanism, accessing assembly, and basic electronic components. Stored programs within the processor determine the commands for the 1311 Disk Storage Drive.

Power Requirements

The external system must supply the 1311 Model 2 with the voltages and current specifications listed in Table 9. The relay power supply is generated and used within the Model 2 (Table 10).

Cables

The power and signal cables that connect the Model 2 and the master unit or another satellite are listed in Table 11. Note that multiple cables are listed as they apply to a particular suffix level of the Model 2.

Cable lengths between 1311 units are mostly of a fixed length that conforms to the physical placement requirements illustrated in Figure 1. Additional information about cable lengths and routing can be obtained from physical planning and installation manuals for the particular system using 1311 Disk Storage Drives.

Data and Control Lines

Tables 12 through 19 provide interface information for each inter-unit cable between a 1311 Model 2 and



Figure 4. 1311 Disk Storage Drive, Model 2

other 1311 Disk Storage Drives. Refer to the <u>Cable Connectors and Terminals</u> section of this manual for information about the connectors and terminals used with a specific cable.

Table 9. Power Requirements - 1311 Model 2 (Supplied by external system)

Line Function	Voltage	Maximum Current	Terminal Location	System Diagram Page
Line Voltage	208 or 230 vac ±10% Single or Three Phase	0.7 amp 3.7 amp 4.4 amp	TS4-7 & 8 TS3-1 & 2 TS4-5 & 7 *	C2.06.03.1 C2.06.03.1
SMS Power Supply	— 12 vdc ±4%	1.0 amp	TS5-9 TS5-6 *	C2.06.03.3 C2.06.03.3
SMS Power Supply	- 6 vdc ±4%	0.6 amp	TS5-13 TS5-9 *	C2.06.03.3 C2.06.03.3
SMS Bias Power Supply	+12 vdc ±2%	0.4 amp	TS5-11 TS5-8 *	C2.06.03.3 C2.06.03.3
Sequence Voltage	— 36 vdc	0.1 amp	TS5-20 TS6-6 *	C2.06.03.3 C2.06.03.3
Read/Write Power Supply	36 vdc <u>+</u> 2%	0.13 amp	TS5-5 TS5-5	C2.06.03.3 C2.06.03.3

^{*} D suffix and later. For suffix level refer to system diagram index.

23037

Table 10. 1311 Model 2 Internal Power Supply (Generated and used within the 1311)

Line Function	Vo Itage	Maximum Current	Terminal Location	System Diagram Page
Relay Power Supply	- 36 vdc <u>+</u> 8%	1.8 amp	B1D14F PSTB1-7 *	C2.12.02.1

 $[\]mbox{\scriptsize *}$ D suffix and later. For suffix level refer to system diagram index.

Table 11. Inter-Unit Cables 1311 Model 2 and 1311 Satellite or Master

Special	Ref. Table	Cable	1311	Length (Approx.	Cable O.D. Maximum	Number	Cable	Cable Cover
Key	No.	Function	Suffix	Feet)	(Inches)	Conductors	Number	Color-Material-Shield
02	12	Signal (1)	В-С	5.5	0.578	32	2154877	Black PVC None
02	13	Signal (2)	B-C	5.5	0.578	32	2154877	Black PVC None
	14	Signal SOV *	в-с	5.5	0.578	32	2154877	Black PVC None
02	15	Signal	D	3.5	0.690	64	2178580	Gray PVC None
	14 -	Signal SOV *	D	3.5	0.578	32	2178496	Black PVC None
Φ@	16	Pre-amp Signal	B-C	10.5	.456X.300	2	2154901	Gray PVC 94%
	16	Pre –amp Signal	D	10.0	.456X.300	2	2178585	Gray PVC 94%
	18	MAC Power	в-с	5.5	0.410	2	2154936	Gray PVC 94%
	18	MAC-FAC Power	D	5.5	0.410	2	2178579	Gray PVC 94%
	18	FAC Power	в-с	5.5	0.410	2	2157519	Gray PVC 94%
	19	DC Power	B-C	4.5	0.970	20	2154686	Gray PVC None
	19	DC Power	D	4.5	0.970	20	2178578	Gray PVC None
1	18	Grounding Bond	B-C-D	5.0	1.0 flat	1	2160822	Tinned Copper Strap

Key: 1 Furnished with assembly.

² Length as stated. No X length.

^{*} SOV (Seek Overlap) Optional Feature.

Table 12. Data and Control Lines

1311 Satellite

(1) Cable Number 2154877 (B and C Suffix)

Satellite or Master Terminals

Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
C01 - A	595978	24	-Y Select Head Y0	Pin - 01	546013
В	}	111	-Y Select Head Y1	02	*
С			—Y Select Head Y2	03	
D	[1 1 1	-Y Select Head Y3	04	
E		111	-Y Select Head Y4	05	
F		111	-Y Select Head Y5	06	
G]] [-Y Select Head Y6	07	
н			-Y Select Head Y7	08	
ا ر	1	111	-Y Select Head Y8	09	
K	1		-Y Select Head Y9	10	
L	ļ		Spare	11	
M		1 1	Spare	12	ĺ
7			TW Intermediate Switch	13	Ì
P	ļ	1 1	+Y Intermediate Switch	14	
Q	}		TW CPU Meter On	15	
R	•		–Q CPU Meter On	16	
C02 - A	595978		TW Erase Safety	17	
В		111	Erase Safety	18	
С		111	TW Write Safety	19	
D		111	Write Safety	20	
E			TW Sel Safety	21	
F		111	Sel Safety	22	
G		111	TW Selected and Ready	23	
н		1 1	+Y Selected and Ready	24	
J			TW Busy	25	
К			+Y Busy	26	
L			TW Satellite A Selected	27	,
M			+Y Satellite A Selected	28	
N		111	TW Satellite B Selected	29	
Р			+Y Satellite B Selected	30	
Q		111	TW Deselect	31	
R	†		-Y Deselect	32	†

Table 13. Data and Control Lines

1311 Satellite

(2) Cable Number 2154877 (B and C Suffix)

Satellite or Master Terminals

1311 Sate	ellite		(2) Cable Number 2154877 (B and C Suffix)	Satellite	or Master Terminals
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
E01 - A	595978	24	Spare	Pin - 01	546013
В] []	Spare	02	
С	ŀ	111	TW Write Data	03	
D	ļ		-Q Write Data	04	
E			TW Satellite A Select	05	
F			–Q Satellite A Select	06	
G			TW Satellite B Select	07	
н	ļ		-Q Satellite B Select	08	
J		111	Spare	09	
κ	į .		Spare	10	
L	ļ		TW Direct Seek	11	
M		1 1	–Q Direct Seek	12	
И	l		TW Reverse	13	
Р		111	-Q Reverse	14	
Q	İ		TW Seek	15	
R	*	1 1 1	–Q Seek	16	
E02 - A	595978		TW Slow	1 <i>7</i>	
В		1 1 1	-Q Slow	18	
С			TW Ready to Stop	19	
D		1 1 1	−Q Ready to Stop	20	
E			TW Gated Track Pulses	21	
F	İ	111	–Q Gated Track Pulses	22	
G			TW Sel On Line	23	
н	1	111	-Q Sel On Line	24	
J			TW Presector Pulse	25	
κ		1 1 1	-Q Presector Pulse	26	
L			TW Sector Pulse	27	
м			-Q Sector Pulse	28	
N			TW Write Gate	29	
Р	1		–Q Write Gate	30	
Q			TW Signal Gate	31	
R	•	- [-Q Signal Gate	32	

Table 14. Data and Control Lines

1311 Satellite

SOV Cable Number 2154877 (B and C Suffix)

Satellite or Master Terminals

Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
D03 - A	5959 <i>7</i> 8	24	TW Set TAR 2	Pin - 01	546013
В		111	+Q Set TAR 2	02	
С		1 1 1	TW Set TAR 4	03	
D		111	+Q Set TAR 4	04	ļ ļ
E		111	TW Set TAR 8	05	}
F		111	+Q Set TAR 8	06	
G	Ì	111	TW Set TAR 10	07	, j
н	S	111	+Q Set TAR 10	08	
J	1	111	TW Set TAR 20	09	1 1
κ		1 1	+Q Set TAR 20	10	
L	1	111	TW Set TAR 40	11	1 1
M		111	+Q Set TAR 40	12]
2		111	TW Set TAR 80	13	
P		1 1 1	+Q Set TAR 80	14	1
Q		111	TW Set TAR 100	15	
R		111	+Q Set TAR 100	16	}
D04 - A	5959 <i>7</i> 8	1 1 1	TW Begin Op Reset	17	
В		11:	–Q Begin Op Reset	18	
С		111	TW Seld Stop	19	
D		111	–Q Seld Stop	20	
E		111	Spare	21	[[
F		111	Spare	22	
G			TW Seek Addr Xfer	23	
н			+Q Seek Addr Xfer	24	
ر <u>ا</u>			TW Seek Comp Satellite A	25	
K		111	+Y Seek Comp Satellite A	26	
L			TW Seek Comp Satellite B	27	
M			+Y Seek Comp Satellite B	28	
N			TW R-W or Test	29	
P			−Y R−W or Test	30	
Q			TW Comp Reset	31	
R	†		+Y Comp Reset	32	♦

SOV Cable Number 2178496 (D Suffix)

C04 - A	491349	24	+Q Set TAR 2	Pins 01 - 02	546013
В			+Q Set TAR 4	03 - 04	1
C	i i		+Q Set TAR 8	05 - 06	
D			+Q Set TAR 10	07 - 08	Ì
E			+Q Set TAR 20	09 - 10	
F			+Q Set TAR 40	11 - 12	
G			+Q Set TAR 80	13 - 14	į
н			+Q Set TAR 100	15 - 16	
J			–Q Seld Stop	19 - 20	
K			+Q Seek Addr Xfer	23 - 24	1
j L 1	1		–Q Begin Op Reset	17 - 18	!
м	ĺ		+Y Comp Reset	31 - 32	
7			-Y R-W or Test	29 - 30	1
Р			+Y Seek Comp Satellite A	25 - 26	
Q	•	•	+Y Seek Comp Satellite B	27 - 28	†

Table 15. Data and Control Lines

1311 Satellite Cable Number 2178580 (D Suffix) Satellite or Master Terminals Wire Machine Connector Connector Connector Line Name Size Part No. Part No. Location Location AWG Pin - 01 B03 - A 491349 22 -Y Select Head Y0 546013 В -Y Select Head Y1 02 c -Y Select Head Y2 03 -Y Select Head Y3 D 04 Ε -Y Select Head Y4 05 -Y Select Head Y5 F 06 G -Y Select Head Y6 07 Н -Y Select Head Y7 80 J -Y Select Head Y8 09 -Y Select Head Y9 K 10 Pins 05 - 06 L -Q Satellite A Select 546013 -Q Satellite B Select 07 - 08M B04 - A 491349 22 Write Safety Pins 19 - 20 546013 17 - 18 В **Erase Safety** c Sel Safety 21 - 22 +Y Satellite A Selected 27 - 28 D Ε +Y Satellite B Selected 29 - 30 23 - 24 F +Y Selected and Ready G +Y Busy 25 - 26 -Y Deselect 31 - 32Н +Y Intermediate Switch 13 - 14 11 - 12 Κ Spare D04 - A 49 1349 -Q Direct Seek Pins 11 - 12 546013 22 -Q Reverse 13 - 14В C -Q Seek 15 - 1617 - 18 D -Q Slow E -Q Ready to Stop 19 - 20 F -Q Write Data 03 - 04 G -Q Write Gate 29 - 30 31 - 32 -Q Signal Gate Н -Q Gated Track Pulses 21 - 22Κ -Q Sel On Line 23 - 24-Q Presector Pulse L 25 - 26 -Q Sector Pulse 27 - 28 М N -Q CPU Meter On Pins 15 - 16 546013

Spare

Spare

23043

546013

Pins 01 - 02

09 - 10

Ρ

Q

Table 16. Data and Control Lines, Pre-Amp

1311 Sat	ellite		Cable Number 2154901 (B and C Suffix)	Master	Terminals
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
(B Gate)				(B Gate)	
A06C	596255	26	Pre-Amp Output (1)	Refer	596255
A06J	i [22	Shield (X 1)	to	
A06R		26	Pre-Amp Output (2)	Table 17	l l
A06U	•	22	Shield (X2)		•
R/W Gnd	334910	Shield	R/W Ground	ł	334910

			Cable Number 2178585 (D Suff	ix)	
(B Gate)				(B Gate)	
A04	5959 <i>7</i> 8	26	Pre-Amp Output (1)	Refer	596255
A04	Į	22	Shield (X 1)	to	
A04	[26	Pre-Amp Output (2)	Table 17	1
A04	▼	22	Shield (X2)	ł	V
]		Shield	R/W Ground		334910

23044

Table 17. Pre-Amp Master Pin Connections

Cable From		Master Location							
Satellite	Lea	d l	Leads X1 and X2		Lead 2				
No. 1	A07D	A10D	L80A	A10J	A07A	A10A			
2	A07E	A10E	A09J	LIIA	A07H	A10H			
3	A07F	A10F	L01A	A13J	A07Q	A10Q			
4	A07G	A10G	AllJ	A14J	A07R	A10R			
	×	Υ	×	Υ	х	Υ			

1311 Model 2; Suffix B, C, D.

- Use column "X" for Model I Master suffix C.
- 2. Use column "Y" for connections to all other level Masters:

 Model 1 (B), Model 3 (B and C),

 Models 4 and 5 (A and B).

Table 18. Motor AC (MAC) and Filtered AC (FAC) Cables

1311 Satellite			MAC Cable Number 2154936 (B and C Suffix)	Satellite or Master Termina	
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
TS 3 - 1	360370	16	208 vac Motor	Pin A	2160792
TS 3 - 2	3603 <i>7</i> 0	16	208 vac Motor	Pin B	2160792
Frame	2101326	1 1	Shield	Frame	253740

(MAC and FAC Combined) Cable Number 2178579 (D Suffix)

TS 4 - 5	368222	16	208 vac	Pin A	2160792
TS 4 - 7		16	208 vac	Pin B	2160792
Frame	*		Shield	Frame	253740

FAC Cable Number 2157519 (B and C Suffix)

TS 4 - 7	334910	16	208 vac Filtered	Pin A	2157516
TS 4 - 8	334910	16	208 vac Filtered	Pin B	2157516
Panel	186968		Shield	Frame	253740

Grounding Cable Cable Number 2160822

				Cubie 110ilibei 2100022		
	Seq Panel	4 Holes	1.00"	Ground Strap	Seq Panel	4 Holes
	Gnd	0.219 Dia.	Flat		Gnd	0.219 Dia.
į	[!	Braid			

Table 19. DC Power Cables

1311 Satellite			Cable Number 2154686 (B and C Suffix)	Satellite or	Master Terminals
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
TS 5 - 3	334910	16	DC Ground	DC - A	2122255
3	İ	1 1 1	DC Ground	В	
4	ł	1 1	DC Ground	С	j
4	į	1 1	DC Ground	D	
5	1	111	-36 vdc R/W	E	
6	•] 7]	TW -36 vdc R/W	F	
7	334921	20	-W Sequence Hold Loop	(н	
8	334921	20	-W Sequence Pick Loop	J	
9	334910	16	-12 vdc	K	
10		111	TW -12 vdc	L	
11		111	+12 vdc	M	
12		111	TW +12 vdc	N	
13		1 1	-6 vdc	Р	
14		111	TW -6 vdc	R	
16		111	Spare	Т	
1 <i>7</i>	•		Spare	[υ	
18	334921	20	+W Heads Extended Ground	V	
TS 6 - 5		1 1	–W Sequence Hold	W	
TS 6 - 6	. ♦		–W Sequence Pick	×	*

		_	Cable Number 2178578 (D Suffix)		
TS 5 - 2	255994	16	DC Ground	DC - A	2122255
2			DC Ground	В	
3	}	111	DC Ground	С	
3	}		DC Ground	D	
5	.)	1 1	−36 vdc R/W	E	
7		1	-12 vdc	κ	1
8			+12 vdc *	м	1
9	•		-6 vdc	P	1
TS 6 - 4	186967	20	+W Heads Extended Ground	٧	
5	1	111	–W Sequence Hold	w	
6	İ	11	–W Sequence Pick	×	
7	l	1 1	–W Sequence Hold Loop	н	
8	*		–W Sequence Pick Loop	J	
DC Isol Buss	186965	16	TW -36 vdc R/W	F	
	1		TW -12 vdc	L	İ
			TW +12 vdc	N	
•	*	1	TW -6 vdc	R	•

GENERAL INFORMATION

A 1311 Model 3 (Figure 5) is the first Disk Storage Drive on an IBM 1620/1710 Data Processing System. The Model 3 is a master unit and contains a disk drive mechanism, and the electronic circuitry for controlling the accessing assembly and read/write functions.

The stored program within the 1620/1710 System determines the commands for the 1311 Disk Storage Drive.

One Model 3 and three Model 2 satellites can be attached to the 1620/1710 System. A special feature known as the Disk Storage Drive Adapter (#3339) on the 1620 Model 1 (serial number 10701 or higher, or serial number 11550 or higher when connected to a 1710), or a Disk Storage Drive Adapter #3340 on the 1620 Model 2 is a prerequisite for attaching the 1311 Model 3.

Figure 5. 1311 Disk Storage Drive, Model 3


Power Requirements

Voltage and current requirements of the 1311 Model 3 that must be supplied by the external system are found in Table 20. Specifications, terminal points, and system diagram pages are listed for each line function. Similar information for the internal power supply of the Model 3 is found in Table 21.

Cables

Inter-unit cables used between the 1311 Model 3 and the 1620 System are listed in Table 22. The quantity and type of cable used for a particular function differs with the model and/or suffix level of the 1620 System and suffix level of the 1311 Model 3. Table 22 also contains the necessary information to determine the cables needed for attachment to a particular system. The Special Information Key column and the associated Key explanations at the bottom of Table 22 define supplied cables and special cable ordering information.

Cable orientation for the Model 3 is shown in Figure 6.

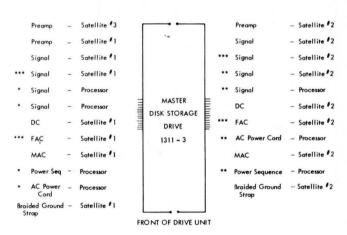

23023

- * These cables present only if processor is oriented to left of Drive Unit.
- ** These cables present only if processor is oriented to right of Drive Unit.
- *** Not present from "D" suffix satellites.

 Note: If raised floor is used, * and ** cables may be oriented as required.

 MAC Motor AC

Figure 6. Cable Orientation for Model 3

FAC Filtered AC

Data and Control Lines

Tables 23 through 25 provide interface information for each inter-unit cable listed in Table 22. Table 26 is a cross-reference for cable sections that apply to connectors for a particular system attachment. Refer to the <u>Cable Connectors and Terminals</u> section of this manual for information about the connectors and terminals used with a specific cable.

Table 20. Power Requirements - 1311 Model 3 (Supplied by external system)

Line Function	Voltage	Maximum Current	Terminal Location	System Diagram Page
Line Voltage	208 or 230 vac ±10%, single phase	6.5 amp	Switch L1 & L2	05.40.01.1

23048

Table 21. 1311 Model 3 Internal Power Supply (Generated and used within the 1311)

Line Function	Voltage	Maximum Current	Terminal Location	System Diagram Page
SMS Power Supply	- 12 vdc ±4%	6.5 amp	PSTB1-7	05.40.03.1
SMS Power Supply	— 6 vdc ±4%	2,7 amp	PSTB1 <i>-</i> 7	05.40.03.1
SMS Bias Power Supply	+12 vdc ±2%	2.0 amp	TS7-5	05.40.04.1
Read/Write Power Supply	- 36 vdc ±2%	0.25 amp	TS7-3	05.40.04.1
Relay Power Supply	— 36 vdc ±8%	2.0 amp	TS7-1	05.40.04.1
Sequence Voltage	24 vac	0.1 amp	TS6-24	05.40.01.1
SMS Supply	133 vac ±10%	2.0 amp	T3 <i>-</i> 8	05.40.01.1

Table 22. Inter-Unit Cables 1311 Model 3 and System

Special	Ref.	Cable	1311	Length	Cable O.D.	Number of	Cable	Cal	ole Cove	r
Info. Key	Table No.	Function	Suffix	(Approx. Feet)	Maximum (Inches)	Conductors	Number	Color-	Material	-Shield
		1620 Modei 1								
00	23	AC Power	В	25	0.800	3	2162604	Gray	PVC	90%
	23	AC Power	С	25	0.800	3	2162604	Gray	PVC	90%
	24	DC Power Seq.	В-С	25	0.760	10	2154890	Gray	PVC	None
	2 5	Signal (1620 G-H)	в-с	20	1.090	150	2161838	Gray	PVC	90%
	25	Signal (1620 F)	в-с	20	1.090	150	2161845	Gray	PVC	90%
	25	Signal (1620 G–H–F)	в-с	20	1.090	150	2161837	Gray	PVC	90%
	25	Signal (1623 only)	в-с	20	0.830	40	2125563	Gray	PVC	None
+ +	25	Signal (1623 only)	в-с	20	0.830	40	2125563	Gray	PVC	None
		1620 Model 2		:			!			
Φ@	23	AC Power	В	25	0.800	3	2162604	Gray	PVC	90%
	23	AC Power	С	25	0.800	3	2162604	Gray	PVC	90%
	24	Power Sequence	в-С	20	0.760	- 10	2158847	Gray	PVC	None
	25	Signal	в-С	20	1.240	182	2158841	Gray	PVC	90%
+ +	25	Signal	в-С	40	1.090	150	2158843	Gray	PVC	90%

Key: 1 Furnished in 1620 File Attachment.

2 Length as stated. No X length.

3 Specify X length cable.

Table 23. AC Power Cables

1311 T	1311 Terminals		Cable Number 2162604 or 2162605 (B Suffix)	1620 Te	1620 Terminals		
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.		
CB - 1	2101326	10	208 - 230 vac (BIk)	Pin C	2162628		
CB - 3	2101326	10	208 - 230 vac (Wht)	Pin B	Quick		
Gnd Buss	2101326	10	AC Ground (Green)	Pin A	Disconnect		
Gnd		1 1	Shield				

Cable Number 2162604 or 2162605 (C Suffix)

Pwr Sw 1L	2101326	10	208 - 230 vac (Blk)	Pin C	2162628
Pwr Sw 2L	2101326	10	208 – 230 vac (Wht)	Pin B	Quick
Gnd Buss	2101326	10	AC Gnd (Grn)	Pin A	Disconnect
Gnd			Shield		

23051

Table 24. DC Power Sequence Cable, Model 3 (Suffix B and C)

Cable Number 2154890 (1620 Model 1) Cable Number 2158847 (1620 Model 2) 1620 Terminals

1311 Terminals			Cable Number 2158847 (1620 Model 1)	1ó20 Tei	minals
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
DC Gnd	186968	10	DC Gnd	Pin 1	2157381
TS 6 - 7	334921	20	Thermal Chain	Pin 2	Quick
Seq Pnl Stud	186968	10	AC Gnd	Pin 3	Disconnect
TS 6 - 23	334921	20	DC On	Pin 4	
TS 6 - 24	334921	20	DC On	Pin 5	
TS 6 - 18	334921	16	+12 Marginal DC	Pin 6	
TS 6 - 7	334921	20	Thermal Chain	Pin 7	
K1 - A	334921	20	24 vac	Pin 8	
K1 - B	334921	20	24 vac	Pin 9	
Frame	334932	18	Shield 24 vac		
Seq Pnl Stud	92784	18	Shield DC On		
Seq Pnl Stud	92784	18	Shield +12 M DC		
TS 6 - 9	334921	18	Shield Thermal Chain		

Table 25. Data and Control Lines

1311 Terminals

1620 Terminals

1311 Terminals				T	erminals I
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
AXA - 01	546013	22	+Y Cycle Reset	Connector	group AXA
02	. [1 1	+Y Switch Thousands	represents	lines within
03		1 1	+Y Op 34 C	cables nun	nbered 2161838,
04			+Y Op 36 RN	8	and 2158841.
05		1 1	+Y Manual Reset	1	26 for system-
06	,	1 1	+Y Op 38 WN		and connector
07		1 1 1	TW MBR 8 Bit Odd	informatio	n.
08			-C MBR 8 Bit Odd		
09		1 1 1	+S TR 30		
10			+Y M/Q 4 Bit		
11		1 1 1	TW File Op E Entry Advance		
12		1 1	-C File Op E Entry Advance		
13		1 1 1	TW Not C9P	1	
14		1 1	-C Not C9P		
15		1 1 1	TW MBR 4 Bit Odd]	
16		1 1 1	-C MBR 4 Bit Odd		
17		1 1 1	TW W2D3 - T14D3 (1620-2)		
18		1 1	-C W2D3 - T14D3 (1620-2)		
19			TW C7P - T14D10 (1620-2)	1	
20		1 1	-C C7P - T14D10 (1620-2)		
21		1 1	TW C3P/FC Cycle, T9D10 (1620-2)		
22		1	-C C3P/FC Cycle, T910 (1620-2)	1	
23)	1 1 1	TW FCU Clock Control		
24			-C FCU Clock Control		
25	1	111	TW B Advance W6D2/RAM AA T0D2	1	
26] [-C B Advance W6D2/RAM AA T0D2	Į	
27		111	TW E Cycle Advance		
28			-C E Cycle Advance		
29)		TW MBR 2 Bit Odd		
30			-C MBR 2 Bit Odd	1	
31	<u> </u>		TW MBR 1 Bit Odd		
32	1			1	
	▼ 546013		-C MBR 1 Bit Odd TW MAR C Bit Units		4.48
AXB - 01	340013	22			group AXB
02			-C MAR C Bit Units	1	lines within
03			TW MAR C Bit Tens	1	bered 2161838,
04			-C MAR C Bit Tens	1	and 2158843.
05		111	TW MAR C Bit Hundreds	See Table	20 . I
06			-C MAR C Bit Hundreds	1	
07		1 1	TW MAR C Bit Thousands	1	
08			-C MAR C Bit Thousands	1	
09		1	TW MAR C Bit 10 Thousands		
10			-C MAR C Bit 10 Thousands		
11			TW MAR 4 Bit 10 Thousands		
12			-C MAR 4 Bit 10 Thousands		*
13		1 1	TW MAR 2 Bit 10 Thousands		
14			-C MAR 2 Bit 10 Thousands		
15	. ↓	1 1	TW MAR 1 Bit Units	1	
16	▼	'	-C MAR 1 Bit Units		

Table 25. Data and Control Lines (Continued)

1311 Terminals 1620 Termin						
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.	
AXB - 17	546013	22	TW MBR F Bit Even			
18		+	-C MBR F Bit Even			
19			TW MBR C Bit Even	ļ	i	
20		111	-C MBR C Bit Even	ł		
21)		TW MBR 8 Bit Even	ļ		
22			-C MBR 8 Bit Even			
23	Ì	111	TW MBR 4 Bit Even	ł		
24			-C MBR 4 Bit Even			
25			TW MBR 2 Bit Even	[
26			-C MBR 2 Bit Even	l		
27			TW MBR 1 Bit Even			
28			-C MBR 1 Bit Even	•		
29		1 1 1	TW MBR F Bit Odd	1		
30		1	-C MBR F Bit Odd	ļ		
31			TW MBR C Bit Odd	ì		
32	. ↓		-C MBR C Bit Odd	1	ļ	
AXC -01	546013	22	+S Access Ready	Connector	group AXC	
02			+Y 1620-2 Intlk	represents	lines within	
03			TW RD OR-1 File	cables nur	nbered 2161838,	
04			-C RD OR-1 File	2161845,	and 2158841.	
05		111	+Y M/Q 8 Bit	See Table	26.	
06			+Y M/Q 2 Bit	1	I	
07			+Y M/Q 1 Bit			
08		111	+S File Op	ł		
09		111	+S WLR/RBC OFF File Extender			
10			+S Addr Ck OFF File Extender		1	
11		111	+S Cycle Overflow OFF File Ext	i	ļ	
12			–S File Units			
13		111	Not Used	j	Ì	
14		1 1	+S File Load File Extender	1		
15			TW File Ctrl Cycle			
16		111	-C File Ctrl Cycle	ı		
17		111	TW File MAR 8 Bit 10 Thousand		-	
18			-C File MAR 8 Bit 10 Thousand			
19	ļ	1 1	TW File Sector Cycle	ł		
20	Į.	111	-C File Sector Cycle]		
21			TW File Read Reset			
22			–C File Read Reset	İ		
23	}		TW RD OR-2 File			
24	1		-C RD OR-2 File			
25			TW RD PR-3 File			
26		j	-C RD PR-3 File			
27			+S A Trig	[
28	-		File OR-1 Lamp 049			
29			File PR-3 Lamp 087			
30	ĺ		File OR-2 Lamp 125			
31	1		File Hund Lamp 162	Į.		
32	†					
32	4	_ _ '	File Units Lamp 163			

Table 25. Data and Control Lines (Continued)

1311 Terminals

1311	1311 Terminals 1620 Terminals					
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location Connector Part No.		
AXD - 01	546013	22	TW MAR 4 Bit Thousands	Connector group AXD		
02	}	111	-C MAR 4 Bit Thousands	represents lines within		
03			TW MAR 8 Bit Thousands	cables numbered 2161837		
04		1 1 1	-C MAR 8 Bit Thousands	and 2158843. See Table 26.		
05		1 1 1	TW MAR 1 Bit 10 Thousands	1		
06		1 1	-C MAR 1 Bit 10 Thousands			
07		1 1 1	TW MAR 2 Bit Units	1 [
08		1 1 1	-C MAR 2 Bit Units	1 1		
09		111	TW MAR 4 Bit Units			
10		111	-C MAR 4 Bit Units			
11		111	TW MAR 8 Bit Units			
12		1 1 1	-C MAR 8 Bit Units			
13		111	TW MAR I Bit Tens			
14	1	111	-C MAR 1 Bit Tens			
15			TW MAR 2 Bit Tens			
16		111	-C MAR 2 Bit Tens			
17		111	TW MAR 4 Bit Tens			
18		111	-C MAR 4 Bit Tens			
19		111	TW MAR 8 Bit Tens			
20	Ì		-C MAR 8 Bit Tens			
21	}		TW MAR 1 Bit Hundreds	.		
22			-C MAR 1 Bit Hundreds			
23]	111	TW MAR 2 Bit Hundreds	1 1		
24]		-C MAR 2 Bit Hundreds			
25		111	TW MAR 4 Bit Hundreds	1		
26			-C MAR 4 Bit Hundreds			
27		111	TW MAR 8 Bit Hundreds	1		
28			-C MAR 8 Bit Hundreds	}		
29			TW MAR 1 Bit Thousands			
30		[-C MAR 1 Bit Thousands	}		
31		1 1	TW MAR 2 Bit Thousands	1 1		
32			-C MAR 2 Bit Thousands	1		
AXE - 01	546013	22	TW Not FBR C Bit Odd	Connector group AXE		
02	1		-C Not FBR C Bit Odd	represents lines within		
03		1 1	TW not FBR F Bit Odd	cables numbered 2161837		
04			-C Not FBR F Bit Odd	and 2158843. NOTE:		
05			TW Not FBR 8 Bit Odd	This portion of cable		
06		111	-C Not FBR 8 Bit Odd	2161837 is not used with		
07		111	TW Not FBR 4 Bit Odd	1623 (AXE-01-32).		
08		11	-C Not FBR 4 Bit Odd			
09		1 1 1	TW Not FBR 2 Bit Odd	1 1		
10			-C Not FBR 2 Bit Odd			
11			TW Not FBR 1 Bit Odd			
12			-C Not FBR 1 Bit Odd			
13		1 1 1	TW Not FBR C Bit Even			
14		1 1	-C Not FBR C Bit Even			
15			TW Not FBR F Bit Even	1 1		
16		1 1	-C Not FBR F Bit Even			
	l					

Table 25. Data and Control Lines (Continued)

1311 Te	rminals	-T T	1620 Terminals		
Machine ocation	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
XE - 17	546013	22	TW Not FBR 8 Bit Even	See NOTE	on preceeding
18			-C Not FBR 8 Bit Even	page oppos	ite AXE - 01.
19			TW Not FBR 4 Bit Even	1 1	
20		1 1	-C Not FBR 4 Bit Even		
21			TW Not FBR 2 Bit Even		
22			-C Not FBR 2 Bit Even		
23		111	TW Not FBR 1 Bit Even	l i	
24	1		-C Not FBR 1 Bit Even		
25 - 32	2 ▼	'	Not Used		
XE - 01	546013	20	TW Not FBR C Bit Odd	This AXE co	onnector group
02			-C Not FBR C Bit Odd	represents o	able number
03	Ì	111	TW Not FBR F Bit Odd	2125563 the	at is used with
04			-C Not FBR F Bit Odd	1623.	
05	ļ		TW Not FBR 8 Bit Odd]]	
06			-C Not FBR 8 Bit Odd		
07	ļ		TW Not FBR 4 Bit Odd		
08			-C Not FBR 4 Bit Odd	1	
09		1 1	TW Not FBR 2 Bit Odd		
10			-C Not FBR 2 Bit Odd		
11			TW Not FBR 1 Bit Odd	[[
12			-C Not FBR 1 Bit Odd		
13	Ì		TW Not FBR C Bit Even		
14			-C Not FBR C Bit Even		
15			TW Not FBR F Bit Even	1	
16		111	-C Not FBR F Bit Even	ì	
17	ì		TW Not FBR 8 Bit Even		
18			-C Not FBR 8 Bit Even] :	
19		1 1	TW Not FBR 4 Bit Even		
20			-C Not FBR 4 Bit Even	1	
21		111	TW Not FBR 2 Bit Even		
22			-C Not FBR 2 Bit Even		
23			TW Not FBR 1 Bit Even		
24			-C Not FBR 1 Bit Even		
25			Not Used		
26	ł	\perp	Not Used		
27			Not Used		
28			-S Ctl Power		
29 - 32	2 ♦	1 1	Not Used		

Table 25. Data and Control Lines (Continued)

Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
AXF - 01	546013	22	+S Bypass File Extender	Connector	group AXF
02			+S WR OR-1 File Extender	represents	lines within
03			+S WR OR-2 File Extender	cables num	bered 2161837
04			+S WR PR-3 File Extender	and 21588	41. See Table
05			+S File W Cycle Extender	26.	
06			+S File Sync Extender		
07			+S WR Units File Extender		
80			+S TR 30 File Extender		
09			+S WR Tens File Extender		
10			-S File Z Cycle Extender		
11			+S Incr -2 File Extender		
12		1 1 1	+S Blk MBR/MDR Reset File Ext		
13			+S Read Check File Extender		
14			+S Write Check File Extender		
15		111	+S I Cycle Entry		
16			+S WR Hundred File Extender		
17			+S WR Thousand File Extender		
18			+S WR 10 Thousand File Extender	•	
19			TW Bit Ring S2		
20		111	-C Bit Ring S2	Ì	
21			Not Used		
22			+S Decrement File Extender	ļ	
23			+S Increment File Extender	İ	
24			+S Set DBT Odd File Extender		
25			+S Set DBT Even File Extender		
26			+S Freeze A-B File Extender		
27			+S File Hold Extender		
28			+S Set 00XXX File Extender	1	
29			+S Clock Stop File Extender	1	
30			+Y CPU Meter On	<u> </u>	
31			Not Used		
32			Not Used		
AXG -01	546013	20	TW MAR 4 Bit Thousands	NOTE T	
02	340010	2	-C MAR 4 Bit Thousands		his is the second 2125563 that is
03		111	TW MAR 8 Bit Thousands		
04			-C MAR 8 Bit Thousands	1	1623 (AXG-01-
05			TW MAR 1 Bit 10 Thousands	32).	•
06					
07			-C MAR 1 Bit 10 Thousands	1	•
08			TW MAR 2 Bit Units		
		1 1 1	-C MAR 2 Bit Units]	
09			TW MAR 4 Bit Units		
10			-C MAR 4 Bit Units		
11			TW MAR 8 Bit Units		
12			-C MAR 8 Bit Units		
13			TW MAR 1 Bit Tens		
14			-C MAR 1 Bit Tens		
15]		TW MAR 2 Bit Tens		
16	, v	V	-C MAR 2 Bit Tens]	

Table 25. Data and Control Lines (Continued)

1311 Terminals 1620 Terminals

			1020 Tel IIIIIIIII		
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
AXG - 17	546013	20	TW MAR 4 Bit Tens	See NOTE	opposite AXG - 01
18			-C MAR 4 Bit Tens	ļ	
19	ļ		TW MAR 8 Bit Tens		
20			-C MAR 8 Bit Tens		
21			TW MAR 1 Bit Hundreds		
22			-C MAR 1 Bit Hundreds	j	
23			TW MAR 2 Bit Hundreds		
24			-C MAR 2 Bit Hundreds	1	
25			TW MAR 4 Bit Hundreds		
26			-C MAR 4 Bit Hundreds	ļ	
27			TW MAR 8 Bit Hundreds		
28			-C MAR 8 Bit Hundreds	ì	
29			TW MAR 1 Bit Thousands		
30		1 1 1	-C MAR 1 Bit Thousands		
31			TW MAR 2 Bit Thousands		
32	₹.		-C MAR 2 Bit Thousands		
				1	

23053.6

Table 26. Signal Cable and Connector Designation

Cable Number	32-Term. Connectors No. 546013 using 1311 Positions	Connector Part No.	Connects To
2161838	AXA-01-32	(3) 546013	1620-1 (Suffix G,H)
l	AXB -01-32		AVJ, BVJ, and BVB
ł	AXC-01-32		
2161845	AXA-01-32	(6) 491349	1620-1 (Suffix F)
İ	AXB-01-32	ĺ	(D2) A-05 and B-05
	AXC-01-32		(D3) A-04, A-05,
			B-04 and B-05
2161837	AXD-01-32	(3) 546013	1620-1 (Suffix F,G,H)
Ì	AXE-01-32*		AXD, AXJ, BVK
	AXF-01-32		
2125563	AXE-01-32	(1) 546013	1623
2125563	AXG-01-32	(1) 546013	1623
2158841	AXA-01-32	(5) 491349	1620-2 11DS-35,36
	AXC-01-32	(1) 595978	37, 38, 39,
ļ	AXF-01-32]	40.
2158843	AXB-01-32	(6) 595978	1625 12DS-29, 30, 31
	AXD-01-32		32, 33, 34.
	AXE-01-32		·

^{*} Not used with 1623.

GENERAL INFORMATION

A 1311 Model 4 (Figure 7) is the first Disk Storage Drive on an IBM 1401 Data Processing System. The Model 4 is a master unit and contains a disk drive mechanism and the electronic circuitry for controlling the accessing assembly and read/write functions.

The stored program within the 1401 System determines the commands for the 1311 Disk Storage Drive.

One Model 4 and four Model 2 satellites can be attached to the 1401 System. A Disk Storage Drive Adapter, Special Feature #3339, is a prerequisite for attaching the 1311 Model 4 to the 1401 Processing Unit.

Power Requirements

Specifications for voltage and current supplied to the 1311 Model 4 are found in Table 27. The internal



Figure 7. 1311 Disk Storage Drive, Model 4

power supplies of the Model 4 are listed in Table 28. The internal power supplies are generated for use within the Model 4.


Cables

Table 29 provides inter-unit cable information for the 1311 Model 4 and the 1401. Cable orientation for the Model 4 is shown in Figure 8.

Data and Control Lines

Power cord connection information is provided in Table 30.

Connector and machine location information for the signal and interlock cable is shown in Table 31. Refer to the <u>Cable Connectors</u> and <u>Terminals</u> section of this manual for information about the connectors and terminals used with a specific cable.

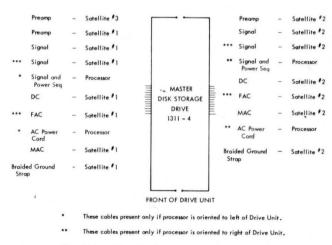

*** Not present from "D" suffix satellites.

Note: If raised floor is used, * and ** cables may be oriented as required.

23025

MAC Motor AC

FAC Filtered AC

Figure 8. Cable Orientation for Model 4

Table 27. Power Requirements - 1311 Model 4 (Supplied by external system)

Line Function	Voltage	Maximum Current	Terminal Location	System Diagram Page
Line Voltage	208 or 230 vac ±10%, single phase	6.5 amp	Switch L1 & L2	75.80.01.1

23055

Table 28. 1311 Model 4 Internal Power Supply (Generated and used within the 1311)

Line Function	Voltage	Maximum Current	Terminal Location	System Diagram Page
SMS Power Supply	— 12 vdc ±4%	7.0 amp	PSTB1-7	75.80.03.1
SMS Power Supply	— 6 vdc <u>+</u> 4%	3.5 amp	PSTB1-7	75.80.03.1
SMS Bias Power Supply	+12 vdc ±2%	2.0 amp	TS7-5	75.80.04.1
Read/Write Power Supply	— 36 vdc ±2%	0.25 amp	TS7 - 3	75.80.04.1
Relay Power Supply	- 36 vdc ±8%	2.0 amp	TS7-1	75,80,04,1
Sequence Voltage	24 vac	0.1 amp	TS6-24	75.80.01.1
SMS Supply	133 vac ±10%	2.0 amp	, T3-8	75.80.01.1

Table 29. Inter-Unit Cables 1311 Model 4 and System

Special Info.	Ref. Table	Cable	1311	Length (Approx.	Cable O.D. Maximum	Number	Cable	Cable Cover	
Key	No.	Function	Suffix	Feet)	(Inches)	Conductors	Number	Color-Material-Shield	
Φ@	30	AC Power	Α	40	0.800	. 3	2162605	Gray PV	C 90%
	30	AC Power	В	40	0.800	3	2162605	Gray PV	C 90%
↓ ↓	31	Signal & Intlk.	A-B	25	1.350	15 <i>7</i>	2157514	Gray PV	C 90%

Key: 1 Furnished with assembly.

2 Specify X length.

23057

Table 30. AC Power Cables

1311 Terminals			Cable Number 2162605 (A Suffix)	1401 T	erminals
Machine Connector Location Part No.		Wire Size Line Name AWG		Connector Location	Connector Part No.
CB - 1	2101326	10	208 – 230 vac (Black)	Pin C	2162628
CB - 3	2101326	10	208 – 230 vac (White)	В	Quick
Gnd Buss	2101326	10	AC Ground (Green)	A	Disconnect
Gnd		1	Shield	1	

Cable Number 2162605 (B Suffix) Pwr Sw 1L 2101326 10 208 - 230 vac (Black) Pin C 2162628 Pwr Sw 2L 2101326 10 208 - 230 vac (White) Quick Disconnect В Gnd Buss 2101326 10 AC Ground (Green) Α Shield

Table 31. Data and Control Lines

1311 Tern	ninals		Cable Number 2157514 (A and B suffix)	1401 Terminals			
Machine Location	Location Part No.		l Size I		Line Name	Connector Location	Connector Part No.
13A1XA-01	546013	22	-C Time 045 - 105, Input	C1 - 16	2127854		
13A1XA-02		1 1	TW Time 045 - 105	C1 - 20			
13A 1XA-03		1	-C Time 015 - 075, Input	C1 - 23			
13A 1XA-04	1	1	TW Time 015 - 075	C1 - 26			
13A 1XA-05			–C File On–Line Interlock Output	C1 - 46			
13A 1XA-06	[Spare	C1 - 73	.		
13A 1XA-07	i	{ }	–C File Transfer Star, Output	C2 - 40	2127854		
13A 1XA-08		1]	–C A Register WM	C2 - 46			
13A 1XA-09		1 1	Spare	C2 - 65			
13A1XA-10		1 1	TW File On-Line Interlock	C1 - 49	2127854		
13A1XA-11	1	1)]	TW Spare	C1 - 76	1		
13A 1XA-12		1 1	TW File Transfer Star	C2 - 43	2127854		
13A1XA-13		1 1	TW A Reg WM	C2 - 49			
13A 1XA-14		1	TW Spare	C2 - 70	, ,		
13A1XA-15]	1 1	Spare	C2 - 73			
13A1XA-17		1 1	TW Spare	C2 - 76	1 1		
13A 1XB -01	▼ 546013	1 1	-C B Register 1, Input	C1 - 03	2127854		
J .	346013	1		C1 - 07	2127634		
13A 1XB -02			TW B Register 1	C1 - 48			
13A 1XB -03		11	-C B Register WM, Input	i	1		
13A 1XB -04	Ì	1	TW B Register WM	C1 - 51			
13A 1XB -05	}		-C Load OPR, Input	C1 - 34			
13A 1XB -06	.		+C Start Reset, Input	C1 - 74	1		
13A 1XB -07		1 1	–C B Cycle, Input	C1 - 01	!		
13A 1XB -08			-C I Cycle, Input	C1 - 15			
13A 1XB -09	ľ		–C Delta I Cycle Latch, Input	C1 - 75			
13A 1XB - 10		1	TW Load OPR	C1 - 37	}		
13A1XB-11		1 1	TW Start Reset	C1 - 77]		
13A 1XB -12		1	TW B Cycle	C1 - 04			
13A 1XB -13		1 1	TW I Cycle	C1 - 18	1 1		
13A 1XB - 14			TW Delta I Cycle Latch	C1 - 78	, I		
13A 1XB - 15		1 1	–C File Op, Input	C1 - 28			
13A 1XB - 16			–C Delta B Cycle, Input	C1 - 29			
13A 1XB - 17			TW File Op	C1 - 31			
13A 1XB - 18			TW Delta B Cycle	C1 - 32			
13A 1XB - 19	ļ		–C I Ring Op, Input	C1 - 66			
13A 1XB -20			-C I Ring 3, Input	C1 - 41			
13A 1XB -21			–C B less than A, Input	C1 - 54			
13A 1XB -22			–C A Cycle, Input	C1 - 08			
13A 1XB -23			-C I Ring 7, Input	C1 - 59	1		
13A 1XB -24			TW I Ring Op	C1 - 71	1		
13A 1XB -25			TW I Ring 3	C1 - 44]]		
13A 1XB -26			TW B less than A	C1 - 57			
13A 1XB -27			TW A Cycle	C1 - 12			
13A 1XB -28			TW I Ring 7	C1 - 63			
13A 1XB -29			-C Time 000 - 060, Input	C1 - 02			
13A 1XB -30			TW Time 000 - 060	C1 - 05			
13A 1XB -31			-C Time 030 - 090, Input	C1 - 10			
13 A 1XB -32	1		TW Time 030 - 090]		
	▼		•	C1 - 13	2127854		
13A IXC-01	546013 	[-C Wrong-Length Record, Output	C2 - 08	212/034 1		
13A1XC-02	V	l '	TW Wrong-Length Record	C2 - 12	▼		

Table 31. Data and Control Lines (Continued)

1311 Terminals 1401 Terminals Cable Number 2157514 (A and B suffix) Wire Machine Connector Connector Connector Line Name Location Part No. Part No. Location AWG 13A 1XC-03 546013 C2 - 41 2127854 22 -C Not Start Gate, Output 13A 1XC-04 C2 - 44 TW Not Start Gate 13A 1XC-05 C1 - 67 2127854 -C Process, Input 13A 1XC-06 -C Equal Character, Input C1 - 35 13A 1XC-07 -C B greater than A, Input C1 - 60 13A 1XC-08 -C Write Normal, Input C1 - 65 13A1XC-09 C2 - 60 -C Write, Input 2127854 13A1XC-10 C1 - 72 2127854 TW Process 13A1XC-11 TW Equal Character C1 - 38 13A1XC-12 TW B Greater than A C1 - 6413A 1XC-13 TW Write Normal C1 - 70 2127854 13A1XC-14 TW Write C2 - 64 13A 1XC-15 -C Adder Carry, Input C1 - 47 2127854 13A 1XC-16 -C B0 Q0, Input C1 - 40 13A 1XC-17 TW Adder Carry C1 - 50TW B0 Q0 13A1XC-18 C1 - 43 13A1XC-19 -C Gated WM, Input C1 - 53 13A 1XC-20 -C B Register C, Input C1 - 42 13A1XC-21 C1 - 36 -C B Register B, Input 13A1XC-22 -C B Register A, Input C1 - 3013A1XC-23 -C B Register 8, Input C1 - 24 13A 1XC-24 TW Gated WM C1 - 56 13A1XC-25 TW B Register C C1 - 45 13A 1XC-26 TW B Register B C1 - 39 13A 1XC-27 TW B Register A C1 - 33 13A1XC-28 C1 - 27 TW B Register 8 13A1XC-29 -C B Register 4, Input C1 - 17 13A 1XC-30 TW B Register 4 C1 - 21 13A1XC-31 -C B Register 2, Input C1 - 11 13A 1XC-32 C1 - 14 TW B Register 2 13A 1XD-01 546013 2127854 -C Set A Register 4, Output C2 -, 17 13A1XD-02 C2 - 21 TW Set A Register 4 13A1XD-03 C2 - 11 -C Set A Register 2, Output 13A 1XD-04 TW Set A Register 2 C2 - 14 13A 1X D-05 -C Set A Register 1, Output C2 - 03 13A 1X D-06 -C Set A Register WM, Output C2 - 48 13A 1X D-07 C2 - 10 -C Set A Register 0, Output 13A1XD-08 -C File High, Output C2 - 23 13A 1X D-09 -C A for B Sub, Output C2 - 35 13A1XD-10 TW Set A Register 1 C2 - 07 13A1XD-11 TW Set A Register WM C2 - 51 13A1XD-12 TW Set A Register 0 C2 - 13 13A 1XD-13 TW File High C2 - 26 13A 1XD-14 C2 - 38 TW A for B Sub 13A 1XD-15 -C Busy, Output C2 - 53 13A IXD-16 C2 - 34 -C Hold Delta A, Output 13A 1XD-17 C2 - 56TW Busy 13A 1XD-18 TW Hold Delta A C2 - 37C1 - 52 2127854 13A 1XD-19 -C A Cycle Eliminate Output 2127854 C2 - 67 13A 1XD-20 -C Transfer B Register, Output

Table 31. Data and Control Lines (Continued)

1311 Te	rminals		Cable Number 2157514 (A and B Suffix)	1401 Terminals		
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.	
13A1XD-21	546013	22	+C File Allow A Register Check, Output	C2 - 16	2127854	
13A IXD-22	1	1 1	-C File Op + 1 Mod, Output	C1 - 22	2127854	
13A1XD-23			+C Clock Control File, Output	C2 - 52	2127854	
13A 1XD-24		1	TW A Cycle Eliminate	C1 - 55	2127854	
13A IXD-25	ł	1 1	TW Transfer B Register	C2 - 72	2127854	
13A 1XD-26			TW File Allow A Register Check	C2 - 20	1 ↓	
13A 1X D-27		1 1	TW File Op + 1 Mod	C1 - 25	2127854	
13A 1X D-28			TW Clock Control File	C2 - 55	2127854	
13A 1X D-29	1	1	-C Store A Register, Output	C2 - 28		
13A 1XD-30		1	TW Store A Register	C2 - 31		
13A1XD-31			-C Any File Check, Output	C2 - 15	1	
13A 1XD-32		1	TW Any File Check	C2 - 18		
13A1XE-01	546013	11	–C Validity Check, Output	C2 - 01	1 1	
13A 1X E-02	1	1 1	TW Validity Check	C2 - 04		
13A 1XE-03			-C No Address CMR, Output	C2 - 54	1 1	
13A 1XE-04			TW No Address CMR	C2 - 57]	
13A 1XE-05			-C Set Equal, Output	C2 - 47]	
13A 1XE-06	ļ		-C Ready, Output	C2 - 59		
13A 1XE-07			-C Delta Process ON Output	C2 - 75]	
1			·	C2 - 75		
13A 1XE-08		1	-C IE Change, Output	C2 - 02		
13A 1XE-09			-C Change Delta A to Delta I, Output	1		
13A 1XE-10)]]	TW Set Equal	C2 - 50		
13A 1XE-11			TW Ready	C2 - 63		
13A 1XE-12			TW Delta Process ON	C2 - 78		
13A 1XE-13			TW IE Change	C2 - 62		
13A 1XE-14			TW Change Delta A to Delta I	C2 - 05		
13A 1XE-15			-C Arithmetic Digit Inh, Output	C2 - 74		
13A 1XE-16			-C Unequal CMR, Output	C2 - 66]	
13A 1XE-17			TW Arithmetic Digit Inh	C2 - 77	1 1	
13A 1XE-18]]]	TW Unequal CMR	C2 - 71		
13A 1XE-19	·		-C Reset Adder Carry, Output	C2 - 29		
13A 1XE-20			-C File Compare Gate, Output	C2 - 22	†	
13A 1XE-21			–C Set Adder Carry, Output	C1 - 58	2127854	
13A 1XE-22			–C Set A Register C, Output	C2 - 42	2127854	
13A 1XE-23			-C Set A Register B, Output	C2 - 36	1	
13A 1XE-24			TW Reset Adder Carry	C2 - 32		
13A 1XE-25			TW File Compare Gate	C2 - 25		
13A 1XE-26			TW Set Adder Carry	C1 - 62	2127854	
13A 1XE-27			TW Set A Register C	C2 - 45		
13A 1XE-28			TW Set A Register B	C2 - 39		
13A 1XE-29			–C Set A Register A, Output	C2 - 30		
13A 1XE-30			TW Set A Register A	C2 - 33		
13A1XE-31		[[–C Set A Register 8, Output	C2 - 24		
13A 1XE-32	▼	1	TW Set A Register 8	C2 - 27	▼	
Frame Gnd	360370	14	Frame Bond	Frame	359695	
K1 - A	334921	18	24-vac Emergency Power OFF	C2 - 80	2127854	
K1 - B	334921	18	24-vac Emergency Power OFF	C2 - 82	2127854	
K1 - Gnd	186968		Frame bond	Frame	2101326	
Frame Gnd	186968		Shield	Frame	2101326	
TS 6 - 23	334921	18	24-vac System Ready Interlock	C1 - 82	2127854	
	L	L	L		<u></u>	

Table 31. Data and Control Lines (Continued)

Cable Number 2157514 (A and B Suffix) 1401 Terminals 1311 Terminals Wire Size AWG Connector Part No. Connector Part No. Machine Machine Line Name Location Location TS 6 - 24 334921 18 24-vac System Ready Interlock C1 - 80 2127854 SMS TUB Shield Gnd

GENERAL INFORMATION

A 1311 Model 5 (Figure 9) is the first Disk Storage Drive on each channel of a 1410/7010 System. The Model 5 is a master unit and contains a disk drive mechanism, electronic circuitry for controlling the accessing assembly and for controlling reading or writing on the disk.

The stored program within the 1410/7010 Data Processing System determines the commands for the 1311 Disk Storage Drive.

One Model 5 and four Model 2 satellites can be attached to each channel of the 1410/7010 System.

A Disk Storage Adapter, Special Feature #3341 for channel 1 and #3343 for channel 2, are pre-requisites on the 1411 Processing Unit for attaching the 1311 Model 5.

A Disk Storage Adapter, Special Feature #3301 for channel 1 and #3302 for channel 2, is a prerequisite on the 7114 Processing Unit for attaching the 1311 Model 5.

Power Requirements

Specifications for the power requirements of the 1311 Model 5 are located in Table 32.



Figure 9. 1311 Disk Storage Drive Model 5


Table 33 lists the power supplies located within and for use by the Model 5.

Cables

There are four cables plus the a-c power cord between the 1311 and the 1411/7114 Processing Unit. Table 34 lists the power cord and inter-unit cables between the Model 5 and the 1411/7114 Processing Unit. Cable Orientation for the Model 5 is shown in Figure 10.

Data and Control Lines

Tables 35 through 39 provide the necessary interface information for the interlock cable, three signal cables, and the a-c power cord as used between the 1311 Model 5 and the 1411/7114. Refer to the <u>Cable Connectors and Terminals</u> section of this manual for information about the connectors and terminals used with a specific cable.

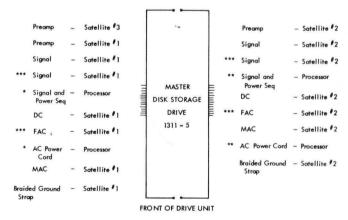

- * These cables present only if processor is oriented to left of Drive Unit.
- ** These cables present only if processor is oriented to right of Drive Unit.
- *** Not present from "D" suffix satellites.

 Note: If raised floor is used, * and ** cables may be oriented as required.

 MAC Motor AC

 FAC Filtered AC

Figure 10. Cable Orientation for Model 5

Table 32. Power Requirements - 1311 Model 5 (Supplied by external system)

Line Function	Voltage Maximum Terminal Location			System Diagram Page	
Line Voltage	208 or 230 vac ±10%, single phase	6.5 amp	Switch L1 & L2	75.80.01.1	

23060

Table 33. 1311 Model 5 Internal Power Supply (Generated and used within the 1311)

Line Function	Voltage	Maximum Current	Terminal Location	System Diagram Page
SMS Power Supply	— 12 vdc ±4%	7.0 amp	PSTB1-7	75.80.03.1
SMS Power Supply	— 6 vdc ±4%	3.5 amp	PSTB1-7	75.80.03.1
SMS Bias Power Supply	+12 vdc ±2%	2.0 amp	TS7-5	75.80.04.1
Read/Write Power Supply	— 36 vdc ±2%	0.25 amp	TS7-3	75.80.04.1
Relay Power Supply	- 36 vdc ±8%	2.0 amp	TS7-1	75.80.04.1
Sequence Voltage	24 vac	0.1 amp	TS6-24	75.80.01.1
SMS Supply	133 vac ±10%	2.0 amp	T3-8	75.80.01.1

Table 34. Inter-Unit Cables 1311 Model 5 and System

Special Info.	o. Table Fun	Cable Function	1311 Suffix	Length (Approx. Feet)	Cable O.D. Maximum (Inches)	Number of Conductors	Cable Number	Cable Cover		
Key								Color-	Material	-Shield
00	35	Interlock	A-B	55	0.550	4	2157542	Gray	PVC	85%
1 1 1	36	Signal	A-B	35	0.682	32	553343	Gray	PVC	None
	37	Signal	A-B	35	0.682	32	553343	Gray	PVC	None
}	38	Signal	A-B	35	0.682	32	553343	Gray	PVC	None
	39	AC Power	Α	40	0.800	3	2162605	Gray	PVC	90%
1 1	39	AC Power	В	40	0.800	3	2162605	Gray	PVC	90%

Key: 1 Furnished with assembly.

2 Specify X length cable.

23062

Table 35. Interlock cable

1311 Terminals			Cable Number 2157542 (A and B Suffix)	1411 Ter	1411 Terminals		
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.		
TS 6 - 23	334932	18	24-vac Sequence	Housing 6	523268		
TS 6 - 24	334932	18	System Ready Point	Housing 1	523268		
TS 6 - Shield	359695	Shield	Shield Ground	Not Conn.	323230		
K1 - 3	334932	18	Emergency Power OFF - Requires 24 vac from System Emergency OFF to energize	Housing 3	523268		
K1 - 4	334932	18	Emergency Power OFF	Housing 5	523268		
K1 - Shield	359695	Shield	Shield Ground	Not Conn.	320200		

Table 36. Data and Control Lines

1311 Terminals (1) Cable Number 553343 (A and B Suffix) 1411 Terminals Wire Machine Connector Connector Connector Size Line Name Location Part No. Part No. Location AWG XB - 01 546013 **2**0 TW UNR C Α 491349 XB - 02-C UNR C-Bit, Input, from Op Code Register В XB - 03TW UNR 8 C XB - 04 -C UNR 8-Bit, Input, from Op Code Register D XB - 05 TW UNR 4 Ε XB - 06 -C UNR 4-Bit, Input, from Op Code Register F XB - 07 TW UNR 2 G XB - 08-C UNR 2-Bit, Input, from Op Code Register н XB - 09 TW UNR 1 XB - 10-C UNR 1-Bit, Input, from Op Code Register Κ XB - 11 TW Read XB - 12 -C Read, Input Controlled by CPU Read Op М XB - 13TW Write Ν XB - 14 -C Write, Input Controlled by CPU Write Op Р XB - 15 TW Load Q XB - 16 -C Load, Input Controlled by "Load Mode" in CPU R XB - 17 TW File Op Α 491349 XB - 18 -C File Op, Input Generated by CPU В XB - 19 TW End Addr C XB - 20-C End of Addr Transfer, Output, Signal at end of D Address Transfer XB - 21 TW End Op E XB - 22 -C End Op, Output, Signal at end of Operation F XB - 23 G XB - 24 -C Disc, Input, Answer Back to End Op Н XB - 25 TW Ready XB - 26 -C Ready, Output, File Ready Κ XB - 27 TW Busy L XB - 28-C Busy, Output, File Busy М XB - 29 TW Data Check Ν -C Data Check Output, Parity Error XB - 30Ρ XB - 31TW Condition Q XB - 32-C Condition, Output, No Record Found Error R

Table 37. Data and Control Lines

1311 Terminals			(2) Cable Number 553343 (A and B Suffix)		rminals
Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
XC - 01	546013	20	TW Seek Test	Α	49 1349
XC - 02	- 1		-C Seek Test, Input, Seek Test from CPU for Busy File	В	1
XC - 03		1 1 1	TW Data Strobe	С	
XC - 04	1		-C Data Strobe, Output, Request to CPU to Send Data	D	1
XC - 05		111	TW Seek Complete	E	
XC - 06			 C Seek, Complete Output, Access Arm is at Seek Address and Ready 	F	
XC - 07]	111	TW File Start	G	
XC - 08			-C File Start, Input, Start of File Op	н	
XC - 09			Not Used	ן נ]
XC - 10			Not Used	κ	
XC - 11	İ		TW Computer Reset	<u> </u>	
XC - 12			-C Computer Reset, Input, Computer Reset	м	
XC - 13			Not Used	N	
XC - 14			+Y Write Inhibit, Output, Signal Returned to CPU when write inhibit is ON at CPU Console	Р	
XC - 15			TW Process	Q	
XC - 16			-C Process	R	
XC - 17			TW 1401 Mode	A	491349
XC - 18		111	-C 1401 Mode, Input, Controlled by System Console Switch	В	1
XC - 19	ļ	1 1 1	TW Addr to CPU	С	
XC - 20			-C Addr to CPU, Output, Signal Up during address transfer	D	
XC - 21			TW Sim GM-WM	E	
XC - 22			 C Sim GM-WM, Output, required at end of address transfer to prevent Wrong Length Address Condition 	F	
XC - 23			TW Scan Repeat	G	
XC - 24			 C Scan Repeat, Output, Scan requirements not satisfied, continue scanning 	н	
XC - 25			TW 1311 to CPU Scan RST Eq	ן נ	
XC - 26			 C 1311 to CPU Scan RST Eq, Output, during scan signal present except when an Equal Cond is detected 	К	
XC - 27			TW 1311 to CPU Scan RST Lo	L	
XC - 28			 C 1311 to CPU Scan RST Lo, Output, During scan, signal present except when a Low Cond is detected 	м	
XC - 29			TW 1311 to CPU Scan RST High	N	
XC - 30			 —C 1311 to CPU Scan RST High, Output, during scan signal present except when a High condition is detected. 	Р	
XC - 31			Not Used	Q	
XC - 32	•	†	-C Write Normal Switch	R	•

Table 38. Data and Control Lines

1311 Terminals (3) Cable Number 553343 (A and B Suffix) 1411 Terminals Wire Connector Machine Connector Connector Line Name Size Location Part No. Location Part No. AWG XD - 01 546013 20 TW CPU WM Bit Α 49 1349 XD - 02 -C CPU WM Bit, Input, Write data from CPU В XD - 03 TW CPU C Bit C XD - 04 -C CPU C Bit, Input, Write data from CPU D XD - 05 TW CPU B Bit Ε XD - 06 -C CPU B Bit, Input, Write data from CPU F XD - 07 TW CPU A Bit G XD - 08 -C CPU A Bit, Input, Write data from CPU Н XD - 09 TW CPU 8 Bit J XD - 10 -C CPU 8 Bit, Input, Write data from CPU Κ XD - 11 TW CPU 4 Bit L XD - 12 -C CPU 4 Bit, Input, Write data from CPU Μ XD - 13 TW CPU 2 Bit Ν XD - 14 -C CPU 2 Bit, Input, Write data from CPU Ρ XD - 15 TW CPU 1 Bit Q XD - 16 -C CPU 1 Bit, Input, Write data from CPU R XD - 17 TW 1311 to CPU WM Bit Α 491349 XD - 18 -C 1311 to CPU WM Bit, Output, Read data bits R XD - 19 TW 1311 to CPU C Bit C XD - 20 -C 1311 to CPU C Bit, Output, Read data bits D XD - 21 TW 1311 to CPU B Bit Ε XD - 22 -C 1311 to CPU B Bit, Output, Read data bits F XD - 23 TW 1311 to CPU A Bit G XD - 24 -C 1311 to CPU A Bit, Output, Read data bits Н XD - 25 TW 1311 to CPU 8 Bit XD - 26 -C 1311 to CPU 8 Bit, Output, Read data bits Κ XD - 27 TW 1311 to CPU 4 bit L XD - 28 -C 1311 to CPU 4 bit, Output, Read data bits М XD - 29 TW 1311 to CPU 2 bit Ν XD - 30 -C 1311 to CPU 2 bit, Output, Read data bits Ρ XD - 31 TW 1311 to CPU 1 bit Q XD - 32 -C 1311 to CPU 1 bit, Output, Read data bits R

Table 39. AC Power Cables

1311 Terminals

Cable Number 2162605 (A Suffix)

1441 Terminals

Machine Location	Connector Part No.	Wire Size AWG	Line Name	Connector Location	Connector Part No.
CB - 1	2101326	10	208 – 230 vac (Black)	Pin C	2162628
CB - 3	2101326	10	208 – 230 vac (White)	В	Quick
Gnd Buss	2101326	10	AC Ground (Green)	A	Disconnect
Gnd			Shield		

Cable Number 2162605 (B Suffix)

Pwr Sw 1L	2101326	10	208 – 230 vac (Black)	Pin C	2162628
Pwr Sw 2L	2101326	10	208 – 230 vac (White)	В	Quick
Gnd Buss	2101326	10	AC Ground (Green)	Α	Disconnect
			Shield		

CABLE CONNECTORS AND TERMINALS

Cable connectors and terminals used with the 1311 Disk Storage Drives are included in this section. The index number in the following list refers to the associated illustration in Figure 11.

Information pertaining to matching receptacles or plugs can be obtained from the IBM Parts Catalogs for the 1311 and its associated system.

Index No.	Part Number	Description
1	546013	Block, 32 position
2	2127854	Block, 75 position, male
3	2122255	Connector, 20 position, male
4	523268	Housing, Tab
5	334910	Terminal, Lug - 16-14 AWG
5	334921	Terminal, Lug - 16-22 AWG, No. 6 Mtg. Hole
5	186968	Terminal, Lug - 10-12 AWG
5	334932	Terminal, Lug - 16-22 AWG, No. 10 Mtg. Hole
5	360370	Terminal, Lug - 14-16 AWG, No. 8 Mtg. Hole
6	2101326	Terminal, Lug — 10-12 AWG, No. 10 Mtg. Hole
6	92784	Terminal, Lug - 18-20 AWG, No. 8 Mtg. Hole
7	253740	Terminal, Lug $-10-12$ AWG, (Stranded)
8	504879	Terminal, Lug — 6-8 AWG, No. 10 Mtg. Hole
9	359695	Terminal, Lug — 14-16 (Stranded) No. 10 Mtg. Hole
10	2157381	Plug, 10 Wire, 2 #10 AWG, 8 #16 AWG
11	59597 8	Card, Cable Entry Terminator
12	491349	Card, Cable Entry Terminator
13	2160792	Plug, MS Connector, #16 AWG
14	591649	Terminal, Coaxial Splice
15	186967	Terminal, Lug — 20-26 AWG, No. 6 Mtg. Hole
16	323596	Terminal, Lug
17	596255	Terminal, Slip on
18	2162628	Plug
19	2157516	Plug, MS Connector
20	2162820	Connector, 17 position, male
21	2162819	Connector, 5 position, male
22	368222	Terminal, Lug — 12-14 AWG, No. 5 Stud
23	2162818	Connector, 6 position, male
24	1119009	Terminal, Lug - 16-22 AWG
25	186965	Terminal, Spade, No. 8 Stud
25	255994	Terminal, Spade, #18 AWG

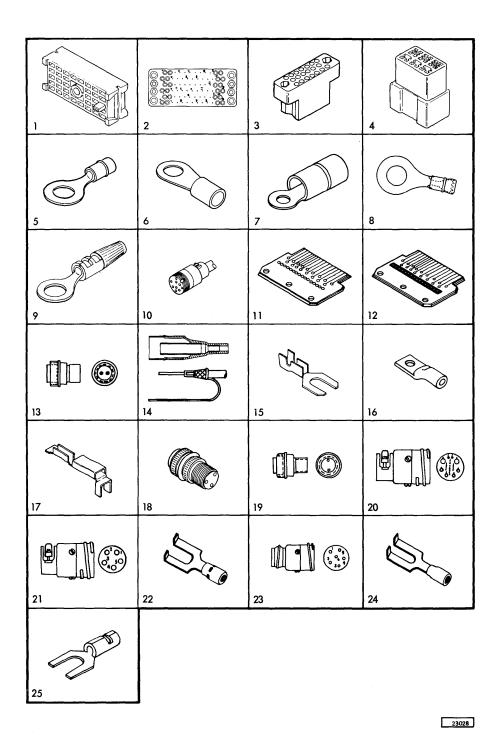


Figure 11. Cable Connector and Terminal Illustrations

SHIPPING GROUPS

A Bill of Material (B/M) is included in the shipment of any 1311 Disk Storage Drive. Each B/M contains cable diagrams, parts catalogs, system diagrams, and reference literature pertaining to the particular model of IBM 1311. In addition to the above, the B/M for Models 1, 3, 4, and 5

contain the following items:
Paddle, Head Cleaning
Tool, Track Pulse Adjusting
Key, Head Assembly Adjusting
Alcohol, Isopropyl
Wipers, Disk

This section lists and describes manuals, diagrams, and other reference material related to individual or multiple models of the IBM 1311 Disk Storage Drives. Copies can be ordered through the nearest IBM Branch office.

IBM CUSTOMER ENGINEERING MANUALS OF INSTRUCTION

The following manuals of instruction explain the detailed theory of operation of the feature.

1311 Disk Storage Drive (Form 227-5703).

1311 Disk Storage Drive, Model 3 Controls (Form 227-5705).

1311 Disk Storage Drive Operation with 1620 Models 1 and 2 (Form 227-5820).

1311 Disk Storage Drive, Model 4 (Form 225-3061).

1311 Disk Storage Drive, Model 5 (Form 225-3137).

IBM CUSTOMER ENGINEERING REFERENCE MANUALS

1311 Disk Storage Drive (Form 227-5649). This manual contains information regarding maintenance and servicing procedures, service aids, and a special tool and supply list.

IBM INTERMEDIATE LEVEL DIAGRAM PACKAGES AND ILLUSTRATED PARTS CATALOGS

The Intermediate Level Diagrams (ILD) packages contain functional diagrams, timing charts, flow charts, interface descriptions, and installation procedures.

IBM 1311 Model 1 ILD Package (Part No. 2108761).

IBM 1311 Model 2, ILD Package (Part No. 2108762).

IBM 1311 Model 3, ILD Package (Part No. 2108772).

IBM 1311 Model 4, ILD Package (Part No. 2108764).

IBM 1311 Model 5, ILD Package (Part No. 2108765).

Parts Catalog, IBM 1311 Disk Storage Drive Models 1 and 2 (Form 127-0765).

Parts Catalog, IBM 1311 Disk Storage Drive Models 3, 4, and 5 (Form 127-0766).

SYSTEM REFERENCE LIBRARY BIBLIOGRAPHY

The SRL Bibliographies contain listings of reference literature applicable to the installation and operation of a particular system. The listings contain the form number and a brief abstract about the publication. From the bibliography a system user can pick the applicable publication that will best serve his needs. The following Bibliographies contain abstracts for publications that apply to 1311 Disk Storage Drives.

IBM 1401/1460 Bibliography (Form A24-1495).

IBM 1410 Bibliography (Form A22-0523).

IBM 1440 Bibliography (Form A24-3005).

IBM 1620/1710 Bibliography (Form A26-5970).

IBM 7010 Bibliography (Form A22-6720).

ALTERATIONS AND ATTACHMENTS

If lessees are considering the special application of IBM leased machines in conjunction with associated equipment, they should review the Alterations and Attachments clause of the Agreement for IBM Machine Service. Under this clause, IBM must receive written notice prior to any alterations or attachments to the machines or units. If the alteration or attachment interferes with the normal operation or maintenance of any of the IBM machines or units and substantially increases the cost of maintenance, the customer must remove the alteration or attachment and restore the machines and units to their normal condition upon notice from IBM.

The customer is responsible for the design, procurement, installation, repair, and service of the alteration or attachment. In the event that an alteration or attachment causes interference with the installation of an engineering change which is considered necessary to effect an improvement in the operation or maintenance of an IBM machine, the customer will be required to eliminate such interference.

When a lease is terminated the customer is required to remove all alterations or attachments and restore the machine to its normal condition before its return to IBM.

Any liability, personal or otherwise, arising from the alteration or attachment or its effect on IBM equipment, rests with the customer.

IBM cannot treat information pertaining to alterations and attachments as secret or confidential.

The rights arising out of the alterations or attachments are to be measured and defined by the patent protection that may be given under the applicable patent laws or under valid patents issued upon such alterations or attachments. IBM is to have all the rights that the public would have with respect to the alterations or attachments.

IBM service or maintenance of alterations or attachments does not constitute an approval of the alteration or attachment, or a waiver of the right of IBM to discontinue such service.