

01234567890123456789
01234567890123456789
01234567890123456789

** RSX-11M V3.2 **
** RSX-11M V3.2 **
** RSX-11M V3.2 **

DK3:[140,6]CUTSHEET.487:1
COPY 1 OF 1
DELETION NOT SPECIFIED

14-JUL-83 17:34:53
14-JUL-83 17:34:53
14-JUL-83 17:34:53

01234567890123456789
01234567890123456789
01234567890123456789

CCCCCCCC	UU	UU	TTTTTTTTTT	SSSSSSSS	HH	HH	EEEEEEEEEE	EEEEEEEEEE	TTTTTTTTTT	
CCCCCCCC	UU	UU	TTTTTTTTTT	SSSSSSSS	HH	HH	EEEEEEEEEE	EEEEEEEEEE	TTTTTTTTTT	
CC	UU	UU	TT	SS	HH	HH	EE	EE	TT	
CC	UU	UU	TT	SS	HH	HH	EE	EE	TT	
CC	UU	UU	TT	SS	HH	HH	EE	EE	TT	
CC	UU	UU	TT	SS	HH	HH	EE	EE	TT	
CC	UU	UU	TT	SSSSSS	HHHHHHHHHH	HH	EEEEEEEE	EEEEEEEE	TT	
CC	UU	UU	TT	SSSSSS	HHHHHHHHHH	HH	EEEEEEEE	EEEEEEEE	TT	
CC	UU	UU	TT	SS	HH	HH	EE	EE	TT	
CC	UU	UU	TT	SS	HH	HH	EE	EE	TT	
CC	UU	UU	TT	SS	HH	HH	EE	EE	TT
CC	UU	UU	TT	SS	HH	HH	EE	EE	TT
CCCCCCCC	UUUUUUUUUU		TT	SSSSSSSS	HH	HH	EEEEEEEEEE	EEEEEEEEEE	TT
CCCCCCCC	UUUUUUUUUU		TT	SSSSSSSS	HH	HH	EEEEEEEEEE	EEEEEEEEEE	TT

44	44	888888	77777777	;;;;	11
44	44	888888	77777777	;;;;	11
44	44	88 88	77	;;;;	1111
44	44	88 88	77	;;;;	1111
44	44	88 88	77		11
44	44	88 88	77		11
4444444444		888888	77	;;;;	11
4444444444		888888	77	;;;;	11
44	88	88	77	;;;;	11
44	88	88	77	;;;;	11
44	88	88	77	;;	11
44	88	88	77	;;	11
44	888888		77	;;	111111
44	888888		77	;;	111111

01234567890123456789
01234567890123456789
01234567890123456789

** RSX-11M V3.2 **
** RSX-11M V3.2 **
** RSX-11M V3.2 **

DK3:[140,6]CUTSHEET.487:1
COPY 1 OF 1
DELETION NOT SPECIFIED

14-JUL-83 17:34:53
14-JUL-83 17:34:53
14-JUL-83 17:34:53

01234567890123456789
01234567890123456789
01234567890123456789

487 MANUAL CUT SHEET INSERTION MODE

This document describes the procedures for using single cut sheet forms in the Interface Systems, Inc. Model 487 IBM compatible printer. It assumes that the printer does not have any manner of automatic sheet inserter.

CUT SHEET mode is selected by pressing CHANGE MODE while the printer is in HOLD PRINT. The CUT SHEET indicator will light when Cut Sheet mode is selected. Cut Sheet mode can be made the default, power-up mode by pressing CONFIG while Cut Sheet mode is selected.

FORM LENGTH used by the 487 to control insertion and ejection of the form is the product of the number of lines specified by SET FL and the inches per line specified by the SINGLE/DOUBLE spacing and 6/8LPI controls.

POWER-UP

If Cut Sheet mode is selected when the printer is powered up, the printer will (after completing its other power-on checks) advance the platen sufficient distance to eject a form of the then selected size. The printer will then sound the alarm and light the CHECK indicator. The operator must enter Hold Print and load paper before the printer will "go online".

If Cut Sheet mode is selected but continuous form is present the printer will not advance the form, but it will sound the alarm and light the CHECK LED. The operator must enter Hold Print and make the condition match the selection. (This condition could occur if a power failure occurred while Cut Sheet mode was selected in the NVM, and that selection was overridden by the front panel with continuous forms loaded.)

(See the Centronics 353 operator's manual pg. 3.3 for instructions for manipulating the various levers on the 487 which are involved in loading forms.)

DURING OPERATION

When a Form Feed code is encountered in the data or when the data overflows the form while in Cut Sheet mode, the printer will eject the form, sound the alarm, light the CHECK LED, and wait for the operator to insert a new sheet.

OPERATOR ACTION

While in Hold Print, the operator can eject a sheet by pressing Form Feed. The printer will sound the alarm and light the CHECK LED.

PAPER INSERTION

See the instructions referred to above for preparing the mechanism to accept a new sheet. Press Form Feed once: the form will be drawn down into the printer. Using the /\ (up) and \/ (down) keys, move the form to the precise position desired. Press Enable Print to allow printing to proceed.