Combelia

INTERPRETED INSTRUCTION CODE OF THE MIT CS II COMPUTER (See definition of symbols in Table I)

		(see definition of s)	moors in labre 1)	
Instr.##	Decimal	Meaning	<u>Definition</u>	Alarn,#
	0	(undefined instruction)		E
its al+c		(cycle) transfer N(MRA) into (al+2i,al+2i+1)	$N(MRA) \longrightarrow N(al+2i)$	В
iex al+c	2	(cycle) exchange	$N(MRA) \longleftrightarrow N(al+2i)$	В
ica al+c		(cycle) clear MRA; add N(al+2i)	$N(al+2i) \longrightarrow N(MRA)$	
ics al+c		(cycle) clear MRA; subtract N(al+2i)	$-N(al+2i) \longrightarrow N(MRA)$	•
iad al+c	5	(cycle) add	$N(MRA)+N(al+2i)\longrightarrow N(MRA)$	D'
isu al+c		(cycle) subtract	$N(MRA)-N(al+2i)\longrightarrow N(MRA)$	D'
imr al+c	7	(cycle) multiply and roundoff	$N(MRA)xN(al+2i) \longrightarrow N(MRA)$	D',K
idv al+c	8	(cycle) divide	$N(MRA)$: $N(a1+2i) \longrightarrow N(MRA)$	C',D',E
isp al+c	9	(cycle) transfer of control	take the next instruction from	
		•	reg.(al+i) and continue from	
			there	E
isc j**	10	select counter	select cycle count line j	A
icr m**	11	cycle reset	set i=+0, n=m	4 - 4 - 4 - 1
ict al	12	cycle count	increase i by 1; if i	
			i=+0 and take next instruction	
			in sequence; if ik n take next	
			instruction from register al	E,J
iat al	13	add and transfer	add C(index reg.) to the C(al)	
			and store the result in index	
			register and register al	I
iti al	14	transfer index digits	transfer the right 11 digits	
			of the index reg. into the right	;
			ll digits of register al	I
sp al	15	transfer of control	take the next instr. from reg.al	
			and continue from there in unin-	
	- /		terpretive mode(sp0 stops comput	er) E
ici m**	16	<u>cycle increase</u>	increase contents of index	
			register by m	G
icd m**	17	cycle decrease	decrease contents of index	
	- 0		register by m	H
icx al	18	<u>c</u> ycle exchange	exchange C(index reg.) with	
			C(al) and exchange C(criterion	
			register) with C(al+1)	
ita al	19	transfer address	replace the address section of t	
			instruction in register al with	
			address that is one more than the	
			address of the register containi	
ion ol	20	conditionally twomator control	the last isp(or icp with N(MRA)n	
icp al	20	conditionally transfer control (conditional program)	take the next instruction from r al and continue from there, if N	
		(Conditional program)		
			is neg.; if N(MRA) is pos. take instruction in sequence	E
*its al	21	transfer N(MRA) into (al,al+1)	N(MRA) → N(al)	В
*iex al	22	exchange N(MRA) with N(al)	$N(MRA) \longleftrightarrow N(al)$	В
*ica al	23	clear MRA; add N(al)	$N(al) \longrightarrow N(MRA)$	بد
*ics al	24	clear MRA; subtract N(al)	$-N(a1) \longrightarrow N(MRA)$	
*iad al	25	add	$N(MRA)+N(a1) \longrightarrow N(MRA)$	D,L
*isu al	26 26	subtract	N(MRA)-N(al)-→N(MRA)	D,L
*imr al	27	multiply and roundoff	$N(MRA)xN(a1) \longrightarrow N(MRA)$	D,K
*idv al	28	divide	N(MRA); N(al) → N(MRA)	C,D,K
isp al	29	transfer control	take the next instr. from reg.	
	-		al and continue from there	E
	30 - 3:	l (undefined instructions)	The second section was an an area of the photo the period of the second section of the section of the second section of the section of the second section of the sectio	E

- * The ouffer letter "b" may be used with these instructions only.
- **m and j are positive integers less than 2,043.
- # Consult Alarm Table in this memo.
- ##For Output Instructions see Table III.

Table I - DEFINITION OF SYMBOLS

Symbol	<u>Meaning</u>
MRA	multiple register accumulator
al	let al represent any floating address, absolute address or buffer address
N(MRA)	the number in the MRA before the instruction is obeyed
N(al)	the number stored in registers al and al+1 before the instruction is obeyed
C()	contents of
i	C(index register)
i _k	new C(index register)
n	C(criterion register)
N(al+2i)	the number stored in registers al+2i and al+2i+1 before
•	the instruction is obeyed
>	replaces
clear	set the contents of to zero
Buffer	plock of three registers containing numbers in same form as in MRA

Table II - ALARMS (C',D' are same as C, D except that altc replaces al)

Check Order Alarms

- (A) Counter not provided for by the PA is selected (this can occur only if the "j" in isc j has been modified by the program).
- (B) Exponent of $M(MRA) \ge 2^j$ where j refers to the (30-j,j) notation (provided all is not a buffer). See * above.
- (C) C(al) = 0
- (D) 0 (C(al) | (\frac{1}{2})
- (E) When control is transferred to an undefined instruction, an alarm occurs on the undefined instruction.

Arithmetic Overflow Alarms

- (G) C(index register) + m > 32,767
- (H) C(index register) m < -32,767
- (I) |C(index register) + C(al)|> 32,767
- (J) |i| = 32,767 before the ict is executed
- (K) [Result]> 7.0 x 10^{9363} or [Result] $\langle 7.1 \times 10^{-9364}$
- (L) If al is a buffer, then alarm K could occur

Table III - OUTPUT INSTRUCTIONS

A. Specifications using either iTOA, iMOA or iSOA iTOA abcdefg Record N(MRA) on direct printer iMOA abcdefg Record N(MRA) on delayed printer iSOA abcdefg Record N(MRA) on scope(film)

See below for description of a, b, c, d, e, f, g

Ex: iTOA + i 12.345 x 2^{-3} x 10^2 c (a)(c)(c)(f) (g)

(a) Sign Meaning

i

n

all numbers will be preceded by sign

only negative numbers will be preceded by sign

nothing numbers will not be preceded by sign

(by "nothing" we do not mean that the word "nothing" is written out)

(b) Initial Zeros Meaning

initial zeros will be skipped (except for the one just to the left of the decimal point) and the first significant digit of the number will be printed at the extreme left of the column. (Thus the left-most digit of all numbers in a column will be lined up.)

p initial zeros will be replaced by spaces. (Thus numbers in a column are arranged so that the decimal points fall in a line.)

all numbers will be printed in a normalized form, i.e., all numbers are multiplied by a power of 10 such that the first non-zero significant digit always falls in the same relative position with respect to the decimal point. The number printed is followed by a vertical par followed by the signed power of 10 that the number is to be multiplied by.

nothing initial zeros will be printed as zeros.

(c) Digits Left

The programmer indicates the number of digits he wishes to have printed to the left of the decimal point by actually writing a sample number containing the same number of digits to the left of the decimal point as he wishes printed. Thus

iTOA + 123.4567

specifies that the programmer wishes to have his numbers printed with 3 digits to the left of the decimal point. (The magnitude of the digits one writes in the sample number has no effect whatsoever on the program.) If the number actually contains more than three digits to the left of the decimal point, all these digits will automatically be printed out.

(d) Decimal Point Meaning

A decimal point will appear in all numbers

nothing No decimal point will be printed. (Used when programmer desires only integral part of number.)

No decimal point will be printed. (Used when programmer expects all results to be less than one; if the number in the MRA should unexpectedly exceed unity, then the integral part of the number will also be printed out but no decimal point will separate the integral from the fractional part of the number.

(e) Digits Right

If a programmer were to use the sample number illustrated in (c), he would get four digits printed out to the right of the decimal point (or to the right of where the decimal point should be).

(f) Scale Factors

Powers of 2 and 10 may be used as a scale factor which will be applied to a number before the number is printed out:

(1) Every factor must be preceded by a lower case x.

 $(2)|\alpha|, |\beta| \leq 99$

(g) Terminal Characters Meaning (character used to terminate a number) space SS 2 spaces 3 spaces SSS 4 spaces SSSS C carriage return t nothing carriage of typewriter will remain exactly where it was after the last number was typed. f format (see section B)

EXAMPLES

	· · · · · · · · · · · · · · · · · · ·	
N(HRA)	OUTPUT REQUEST	PRINTED RESULT
(1) -7.953261	iTOA + 123.1234s	-007.9532 space
	iTOA + i123.1234	- 7.9532
	iTOA pl23.1234c	7.9532 car. ret.
	iTOA - n123.1234t	-795.3261 -02 tab
(2) +795.3261	iTOA 123.123ss	795.326 space space
	iTOA-i1234.5x10 ² c	79532.6 car. ret.
	iTOA+pl2r34	+79532
	iTOA nl.234t	7.953 +02 tab

B. Format specification (By using this facility the programmer avails himself of an automatic device for obtaining a suitable layout of his output data.)

If "f" is used as a terminal character in an output request (see Table IIIsection (A)-g) then the instruction and 3 program parameters if if OR must precede

the output instruction containing the "f". (This will furnism the CS output section with the necessary layout information before a number is printed out.)

represents the number of words/line (maximum number of characters per line is 155) B

represents the number of spaces between words (maximum is 5) (A tab is obtained by setting $\beta \ge 5$)

represents the number of words per block (The maximum 7 is 32,767. Since the block counter is automatically reset after each block is completed, the upper limit, 32,767, for is not a significant limitation.)

Supposing the programmer wishes to have 2500 words typed out and uses iFOR with the output request iTOA+12.345f. This will give 12 words per +12

+2

line, 2 spaces between words and 400 words per block. The blocks are separated by 2 carriage returns. In this example there will, be six blocks of 400 words and one block of 100 words. (The programmer should provide carriage returns at the end of his print-out

if that doesn't coincide with the end of a block. This carriage return order is described in the Special Characters Section of E-516-2.)

Table IV - AUXILIARY EQUIPMENT INSTRUCTIONS

Magnetic Drum

The drum may be used with the instructions iDIB, iDOB where D designates Drum, I designates Input (drum to MCM), O designates Qutput (MCM to drum), and B designates Binary. Each of these forms must be followed by 3 program parameters as described below and in the order listed:

- (1) Initial address of Magnetic Core Memory (MCM)
- (2) Initial address of Magnetic Drum Storage (MDS) (Drum registers available are 2.043-20.479)
- (3) Length of block being transferred to or from MCM.

Example:

iDIB [This will transfer the contents of registers 12230-12321 of MDS to registers +900 900-941 of MCM (interpreted return control). If registers 900-941 are

+12280 double-length numbers, then 21 of them will be transferred.

+42

TABLE V - OPERATING TIME, IN USEC., OF CS II INSTRUCTIONS

	Neither "C" nor "b" blocks used	"C" block used	F CS II INSTR "b" block used	nbn & ncn blocks used	Neither "C" nor "b" blocks used minimum*
ica	654	694	718	758	<u>.</u>
ics	678	718	742	782	
iad	2007 [#]	2047#	2 0 89#	2129#	850
isu	2030 [#]	2070#	2110#	2150#	880
imr	1441#	1481 [#]	1521#	1561#	
idv	2203 [#]	2227#	2267 [#]	2307 [#]	
isp	465	505	529	569	
iex	1275	1315	1339	1379	
its	901	941	965	1005	
icp	281 472	321 512	345 572	385 612	9
ita	360	384	408	448	
icx	x**	554	x	618	
icd	x	384	x	448	
ici	x	361	x	425	
iti	x .	385	x	449	
iat	x	440	, (°, x	504	
icr	x	360	x	424	
isp c	x	673	x	673	
idv c	x	2331 [#]	×	2331 [#]	
imr c	x	1580 [#]	x	1580 [#]	
isu c	x	2183 [#]	x	2183 [#]	1016
iad c	x	2159#	x	2159 [#]	990
ics c	x	815	x	815	
ica c	x	791	x	791	
iex c	x	1411	×	1411	
its c	361 , 4 white	1045	x	1045	111 = 56
IN-OUT	361 '"	401	425	465	
IN-SPX	361	401	425	465	
ict	x	434	x	498	
isc	x	851	x	915	
ica b	x	x	974	1014	
	1	1	1		

TABLE V - (Cont.	TABLE	٧ -	(Cont.	. 1
------------------	-------	-----	--------	-----

	Neither "C" nor "b" blocks used	"C" block used	"b" block used	"b" & "C" blocks used	Neither "C" nor "b" blocks used minimum*
ics b	x .	X	1017	1057	
its b	x	x	983	1023	
iex b	x	x	1001	1041	
iad b	x	x	2 0 68 [#]	2108#	
isu b	x	x	2184 [#]	2224#	
imr b	x	x	1716#	1756#	
idv b	x	x	2464 [#]	2504 [#]	
		. 7 .		~,0	• •

[#] average for operating on positive and negative numbers

^{*} in addition the addend and augend, and in subtraction the minuend and subtrahend do not affect each other because of the great disparity in magnitude (minimum col.)

^{**} x indicates that the instruction doesn't have any meaning in that column