PM-1150/2 Expansion Chassis Manual



The information he	reon is the property of PLE	MEM YES	ORIES INC	ORPORATI	10								251/	1CION	-							
Transmirtal, receipt, or possession of the information does not comply, license, or imply any rights to use, self, or mean/acture from this information and no repre- duction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.				<u> </u>	TR DESCRIPTION				ISION	DATE		—т	APE	ROVE	: D							
	APPLICATION			+		RE	I FO	۱P I	PROD			500)41:	<u> </u>		+	UNE	74	13	11011		
NEXT	ASSY		SED (ON											<i>-</i>		1			<u> </u>	·	
			1150		╁		//	COR	7	EO	101	3	-				130	AN	/2	10		
	—— <u>—</u>			<u> </u>	1																	
					7																	
					7																	
					1																	
					1																	
•	L				\dashv																	
Ì																						
														٠								1
																				-		
									•		PR	20	DI	IC.	TIC	7/	1	RF	i F	Δ:	SF	
																		1/2				4
			•	,	•		(·		سلطين			· 6.2	ساعددن	الشيرسان						
	REV LTR								–	- -	A	_										
	SHEET								6-	16-2	6-3	6-4	6-5	6-6								
	REV LTR.							_	_	· A	_	_		_	_	_	_		_		_	
	SHEET	 				 		E 1		5-3	E 1	5-5	- 6	F 7	r c	E 0	5- 10.	5-	5-2	5. 13	5	
	REV LTR	A		Α	_	_	-	A	0-2	1 3-3	3-4	J-3	0-0	5-7	2-6	0-3	_	A	A	_	Ţ	
	SHEET	3-3	3-4	3-5	3-6	3-7	3-8	3-9		1							4-1	4-2	4-3	4-4		
	REV LTR							A	A	A	A	A									-	_
REV	SHEET							2-1	2-	22-3	2-4	+								ļ	3-1	3-2
STATUS OF SHEETS	REV LTR	A	A	A	A	A	A									A	A	A	A	_		
SHEETS	SHEET	I	II	III	IV	V	VI		\vdash		<u> </u>	<u> </u>		<u> </u>		1-1	1-2	1-3	1 1	1 6		
DO N	OT SCALE DRAWING	1.		TRACT	<u> </u>	<u> </u>	1	<u> </u>	+	\Rightarrow	D	 6 a a		M					-			4
DO NOT SCALE DRAWING SCREW THREADS PER HANDBOOK H-28 DRAWN T							_](,,,,,	P	less	ey	IVI	em(OFI	es I				ale Califo			
COUNTERBORE AND SPOTFACE FILLET RADII TO BE .010 MAXIMUM CHECK			18	Gith Le	ens	6/6/7 LK/7	3	OWG	TITL	E						<u> </u>	Santa	Alla,	Canno	Jilla		
REMOVE ALL BURRS AND BREAK SHARP EDGES EQUIVALENT TO .010R DESIGN						7-/-						:	21 July 1994	MANI	JAL							
ROUGHNESS OF MACHINED SURFACES 125 PROJ. ENGR			A. B	mk	A	619	79					MEMO	RY E	1-115 XTEN	OU/2 ISION	i BOX	(
TOLERANCES	STANDARD HOLE TOLERANCE PER AND 10387 TOLERANCES ON: .XX = ± .03 .XXX = ± .010				,,	\dashv		+	SIZE	CO	DE ID				G NO							
INTERPRET DIN	MENSIONS AND TOLER/ PER USAS Y14.5	ANCES							7	Δ			64 8					1025	^			
HEAT	E IN INCHES AND APPL' TREAT AND FINISH	-	1	HER].	<u> </u>	<u> </u>		.		<u> </u>	1	MA 70	JU35				
UNLESS OTHERWISE SPECIFIED APPROVALS								CALE:						DISTR		- E I	I	OF				

PM-1150/2 EXTENSION BOX FOR PDP 11 COMPUTERS

DESCRIPTION OF THE MANUAL

This manual presents the description, installation, theory of operation, maintenance, troubleshooting procedure and drawings for the PM-1105/2 system manufactured by:

PLESSEY MEMORIES, INCORPORATED 1674 Mc Gaw Avenue Santa Ana, California 92705 USA

The Manual is arranged as follows:

Section 1 - GENERAL DESCRIPTION. Scope: Brief electrical and physical description of PM-1150/2.

Section 2 - INSTALLATION AND OPERATION. Provides information for installation and operation of the PM-1150/2.

Section 3 - INTERFACE INFORMATION. Interface information are provided in this section.

Section 4 - MAINTENANCE AND TROUBLESHOOTING. Recommended general maintenance procedure and troubleshooting information are described.

Section 5 - POWER SUPPLY. Specifications, schematics and trouble-shooting information on Power Supply are provided in this section.

Section 6 - Schematics and Drawings.

The information hereon is the property of PLESSEY MEMORIES INCORPORATED. Transmittal, receipt, or possession of the information
does not comply, license, or imply any rights to use, sell, or manufacture
from this information and no reproduction or publication of it, in whole
or part, shall be made without written authorization from PLESSEY
MEMORIES, INC.

SIZE CODE IDENT NO.

MA 700350

SCALE

REV A

SHEET

II

LIST OF CONTENTS

		SHEET
SECTION 1	- GENERAL DESCRIPTION	1-1
1.0	Introduction	1-1
1.1	Description	1-1
1.1.1	Configuration I for Non-Parity Memories	1-1
1.1.2	Configuration II for Parity Memories	1-4
1.1.3	Additional Components	1-4
1.2	Description Mechanical	1-5
SECTION 2	- INSTALLATION AND OPERATION	2-1
2.0	Introduction	2-1
2.1	Unpacking and Inspection	2-1
2.2	Part Numbers	2-1
2.2.1		2-1
2.2.2	PM-1150/2 Parity Configuration II	2-1
2.2.3	I/O Cable	2-1
2.2.4	Terminator Card PM-930.	2-2
2.2.5	Memory Cards (Non-Parity)	2-2
2.2.6	Memory Cards (Parity)	2-2
2.2.7	Address Strapping Plug	2-2
2.3	Rack Mounting Instructions	2-2
2.4	Access to Sub Units	2-3
2.4.1	Memory Card Cage	2-3
2.4.2	Power Supply	2-3
2.5	Control and Adjustment of the Power Supply	2-3
2.6	Installation of the Memories	2-4
2.6.1	Non-Parity Memories	2-4
2.6.2	Parity Memories	2-4
2.7	Installation of the I/O Cable and Termination	2-4
2.8	PM-1150/2 Operational	2-5
SECTION 3	- INTERFACE INFORMATION	3-1
3.0	Introduction	3-1
3.1	Mode of Operation and Interface Timing	3-1
3.2	Logic Level Definitions	3-1
3.3	I/O Cable	3-3
3.4	Terminations	3-3
3.5	Interface Pin Assignments	3-4
3.6	Memory System Interface Signals	3-6
3.7	Power Supply	3-8
3.8	Memory Card Power Requirements	3-9

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE CODE IDENT NO. DWG NO.

52648 MA 700350

SCALE REV A SHEET III

		SHEET
SECTION 4 -	MAINTENANCE AND TROUBLESHOOTING	4-1
4.0	Introduction	4-1
4.1	Air Filter Cleaning	4-1
4.2	Printed Circuit Board Cleaning	4-1
4.3	Repairs on Power Supply	4-2
4.4	Repairs on the System	4-2
4.5	Fault Isolation Procedure	4-2
SECTION 5 -	POWER SUPPLY	5-1
5.0	Introduction	5-1
5.1	Maintenance Procedures	5-1
5.2	Troubleshooting	5-1
5.3	Controls	5-1
5.4	Power Supply Input Voltage Conversion Procedure	5-2
5.4.1	To Convert From 115VAC to 230VAC	5-2
5.4.2	To Convert From 230VAC to 115VAC	5 - 2
5.5	-	5 – 3
5.6	Power Supply Type 96799 Specifications	5 – 6
5.7	Component Parts List	5-12
SECTION 6 -	SCHEMATICS AND DRAWINGS	6-1
	PM-1150/2 Signal Flow Diagram	6-2
	PM-1150/2 Mechanical Outline	6-3
	Installation Control Drawing	6-4
	Pin Assignment PMF-11 Backplane Non Parity	
	Configuration 1	6-5
	Pin Assignment PMF llP Backplane Parity	
	Configuration II	6-6

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE COI

CODE IDENT NO.

DWG NO.

52648

MA 700350

SCALE

REV A

SHEET

IV

LIST OF FIGURES AND DRAWINGS

FIGURE		SHEET
1.1	PM-1150/2 Front View	1-2
1.2	PM-1150/2 Rear View	1-3
5.1	Power Supply Input Voltage Conversion	5-2
5.2	AC Power Supply Schematic Diagram	5-4
5.3	AC Power Supply	5-5
5.4	Power Supply Schematics - Type 96799	5-9
5.5	Printed Circuit Boards Power Supply Schematics	5-10
5.6	Printed Circuits Board Power Supply Layout	5-11
6.1	PM-1150/2 Signal Flow Diagram	6-2
6.2	PM-1150/2 Mechanical Outline	6-3
6.3	Installation Control	6-4
6.4	Pin Assignment PMF-ll Backplane for Non Parity Configuration I	6-5
6.5	Pin Assignment PMF-11P Backplane for Parity Configuration II	6-6

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE

CODE IDENT NO. DWG NO.

A

52648

MA 700350

SCALE

REV

SHEET

LIST OF TABLES

TABLE		SHEET
3.1	Receivers and Transmitters Characteristics	3-2
3.2	Terminations for the Unidirectional Bus Lines	3-2
3.3	Unibus Terminations	3-3
3.4	Interface Pin Assignments	3-4/5
3.5	Memory System Interface Signals	3-6/7
3.6	Power Supply Output Plug	3-8
3.7	Memory Card Power Requirements	3-9
3.8	Memory Card Power Supply Connections	3-9
4.1	Address Conversion Decimal to Octal	4-4

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE

CODE IDENT NO. DWG NO.

52648

MA 700350

SCALE

REV

SHEET

VI

SECTION I

GENERAL DESCRIPTION

1.0 INTRODUCTION

This section contains a brief electrical and physical description of the PM-1150/2.

1.1 DESCRIPTION

The PM-1150/2 is a memory extension box for PDP 11 computers (see Fig. 1.1 and 1.2).

The PM-1150/2 consists of a card cage containing 9 Hex card slots, a power supply for +5 and -15V and a cooling system. The PM-1150/2 is available in two (2) different configurations with different backplanes. The PM-1150/2 can be mounted in a standard 19 inch rack.

1.1.1 Configuration I for non-parity memories.

	MEMORY	CARD	MAX. NO.	MAX.SYS.
	CARDS	CAPACITY	OF CARDS	CAPACITY
Configuration I 700350	PM-1105	8K x 16	5	40Kx16
Using PM-F]]	PM-1116	16K x 16	5	80Kx16
Backplane	DEC MM11-L	8K x 16	3	24Kx16

VERSION	INPUT POWER	AIRFLOW
VERSION I - 100	115V A C	Rear intake - Rear exhaust.Solid Front Pand
VERSION II - 101	115VAC	Front intake - Rear exhaust. Filter front panel.
VERSION III - 102	230VAC	Rear intake - Rear exhaust. Solid front panel.
VERSION IV - 103	230VAC	Front intake - Rear exhaust.Filter front panel.
I and the second		

The information					
CORPORATED.					
does not comply,					
from this inform					
or part, shall be		written aut	thorization	from PLESS	EY
MEMORIES, INC	:				

SIZE	CODE IDENT NO.	DWG NO.
A	52648	MA 700350
SCALE	REV	A SHEET 1-1

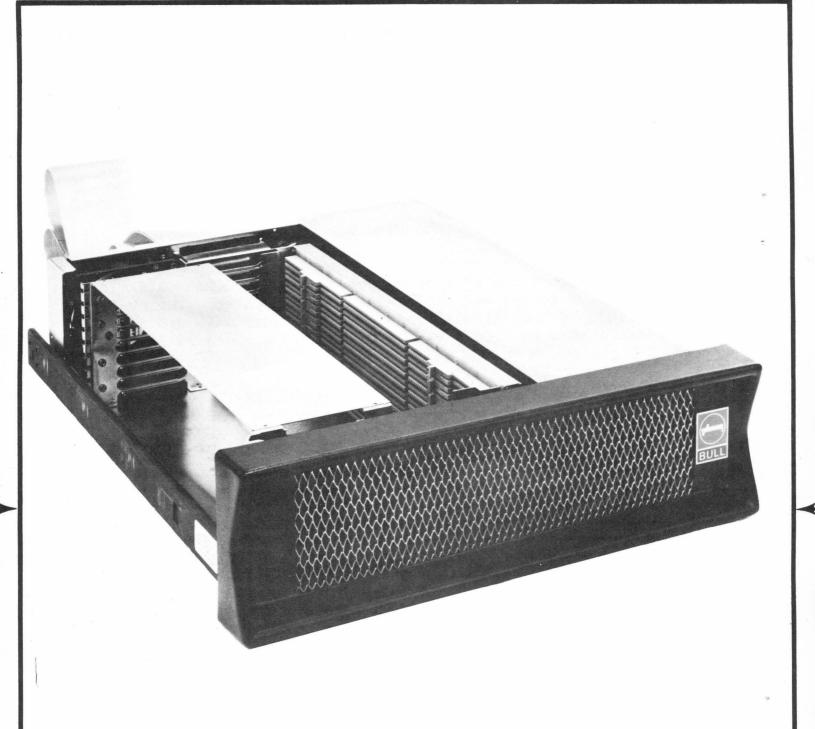


FIG. 1.1

PM1150/2 EXPANSION BOX FRONT VIEW SHOWING CARD CHASSIS AND BACKPLANE

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

CODE IDENT NO. SIZE

DWG NO.

52648

MA 700350

SCALE

REV

SHEET 1-2

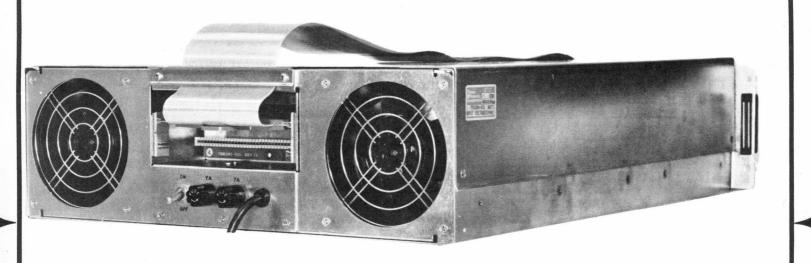


FIG. 1.2

PM 1150/2 REAR VIEW SHOWING

UNIBUS CABLE CONNECTION TO INTERCONNECTION MODULE

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC. SIZE CODE IDENT NO. 52648

MA 700350

SCALE

REV ___

DWG NO.

SHEET 1-3

1.1.2 Configuration II for parity memories

	MEMORY CARDS	CARD CAPACITY	MAX.NO. OF CARDS	MAX.SYS. CAPACITY
Configuration II 700450	PM-1105/P	8K x 18	4	32K x 18
Using PM-F11P Backplane	DEC MM11- LP	8K x 18	3	24K x 18

The parity controller card PM-7259 or DEC Parity Controller plugs in slot 7A and B of the PM-1150/2.

If non-parity memories have to be used in configuration II the Bus Continuation Card PM-G7271 can be plugged in slot 7A and B of the PM-1150/2 instead of the PM-7259.

VERSION	INPUT POWER	AIRFLOW
VERSION I -100	115 VAC	Rear intake - Rear exhaust. Solid front panel.
VERSION II - 101	115 VAC	Front intake - Rear exhaust. Filter front panel.
VERSION III - 102	230 VAC	Rear intake - Rear exhaust. Solid front Panel.
VERSION IV - 103	230 VAC	Front intake - Rear exhaust. Filter front panel.

1.1.3 Additional Components

To connect the PM-1150/2 to the DEC Unibus it is necessary to use an I/O cable, P/N: 700144-XXX.

If the PM-1150/2 is not the last device on the Unibus, it has to be terminated. Use PM-930 (P/N: 700430-100) or DEC M930 terminator card.

If the PM -1150/2 is not the last device on the Unibus,

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittel, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE SCALE

CODE IDENT NO. DWG NO.

52648

MA 700350

REV

SHEET 1 - 4 another Unibus cable is required to connect it to the next device.

1.2 DESCRIPTION MECHANICAL

The system contains two fans for forced air cooling, a card chassis to provide mechanical support, a prewired backplane containing 9 Hex connector slots, top and bottom covers to provide part of the air plenum and to prevent debris from falling onto the modules, +5V supply at 12.5A maximum, -15V supply at 13A maximum and -5V supply at 1.5A maximum. There is also an interconnection plug that allows the Unibus to be terminated if the system is at the end of the Unibus lines or to be continued if the system is not at the end of the Unibus lines.

The system box is fabricated from gold colored cadmium plated steel to resist corrosion.

The internal routing of PDP-11 Unibus signals are performed by the I/O Internal cable . DC power is routed from the power supply plug into the backplane board.

The memory module is 15.69" long with edge fingers on one edge of the board to mate with the back plane module. The memory width will extend approximately .35" from both sides of the printed circuit board. All major heat dissipating elements and the stack are away from the back plane to allow for a maximum air flow over these elements.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE CODE IDENT NO. DWG NO.

52648

MA 700350

SCALE

REV

SHEET

SECTION 2

INSTALLATION AND OPERATION

2.0 INTRODUCTION

This section provides information for installation and operation of the PM-1150/2.

2.1 UNPACKING AND INSPECTION

Remove any packaging material and visually inspect for physical damage. The PM-1150/2 shipment consist of four (4) items:

- PM-1150/2 box
- Front panel
- Mounting equipment
- I/O cable

2.2 PART NUMBERS

2.2.1 PM-1150/2 non-parity Configuration I

P/N:	700350	- 100	115VAC	Solid front
				panel
		- 101	115VAC	Filter front
				panel
		- 102	230VAC	Solid front
				panel
	*	- 103	230VAC	Filter front
				panel

2.2.2 PM-1150/2 parity Configuration II

P/N:	700450	- 100	115VAC	Solid front
				panel
		- 101	115VAC	Filter front
				panel
		- 102	230VAC	Solid front
				panel
		- 103	230VAC	Filter front
4.				panel

2.2.3 I/O Cable

Defines a DEC compatible cable which is available in following lengths:

The information hereon is the property of PLESSEY MEMORIES IN-	ı
CORPORATED. Transmittal, receipt, or possession of the information	ŀ
does not comply, license, or imply any rights to use, sell, or manufacture	
from this information and no reproduction or publication of it, in whole	
or part, shall be made without written authorization from PLESSEY MEMORIES, INC.	S

SIZE	CODE ID	ENT NO.	DWG	NO.
_			l	

52648

MA 700350

SCALE RE

REV A

SHEET 2-1

P/N: 700144 - 100 9 Ft. 6" Standard Cable - 101 2 Ft. 0" - 102 5 Ft. 0" - 103 8 Ft. 6" - 104 10 Ft. 0" - 105 13 Ft. 6"

25 Ft. 0"

2.2.4 Terminator Card PM-930

Part Number 700430-100

2.2.5 Memory Cards (Non-parity)

> PM-1105 P/N: 700096-100

- 106

PM-1116 P/N: 700290-100

2.2.6 Memory Cards (Parity)

PM-1105/P P/N: 700400-100

Parity Controller

Card PM-7259, P/N: 700385-100

Bus Continuation

PM-G7271 , P/N: 700420-100Card

2.2.7 Address Strapping Plug

P/N: 700066-XXX

(XXX for the different configurations see memory manual)

2.3 RACK MOUNTING INSTRUCTIONS

The PM-1150/2 can be mounted in a standard 19 inch rack, each unit is shipped with rack slides attached and all necessary mounting hardware.

- 1. Remove the left and the right slide brackets from the system box. Pull slide bracket all the way out, then push on the spring bar to release the slide bracket.
- 2. Mount rear mounting brackets on to the back end of the slide brackets. Use Pan head 10-32 screws.

SIZE he information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittel, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC. SCALE

CODE IDENT NO. DWG NO.

52648

MA 700350

REV

SHEET

2-2

- 3. Mount right and left slide brackets, both front and back on to the standard 19 inch rack.
- 4. Lift the PM-1150/2 and align it with the mounted slide brackets, then slide it into the rack until the spring bars lock-in. The magnets (one on each side of the box) will keep the box from sliding out.

2.4 ACCESS TO SUB UNITS

2.4.1 Memory card cage

Remove the six (6) screws on the L shaped top/left side cover.

Screws: 100° flat head, countersunk, 6-32 x ¼ Long.

2.4.2 Power Supply

Remove the seven (7) screws on the approx.6" width right side top cover.

Screws: 100° Flat head, countersunk, 6-32 x ¼ Long.

2.5 CONTROL AND ADJUSTMENT OF THE POWER SUPPLY

- Check if the PM-1150/2 is properly fused. Two (2) main fuses on the back of PM-1150/2. One (1) fuse on the front of the power supply.

For 115VAC, 3 fuses at 10A 250V Slow Blow For 230VAC, 3 fuses at 5A 250V Slow Blow

- Connect the AC power supply. (AC line frequency 47 HZ to 440 HZ). For input Power Supply voltage conversion 115VAC/230VAC or 230VAC/115VAC. See sheet 5-2
- Switch the power switch on the back of the PM-1150/2 to "ON".
- Check the DC Voltage on the terminal points on the front side of the power supply.

+5V + 1% Adjustment with R122

See Sheet 5-11

-15V \pm 1% Adjustment with R222

(For ACLO Adjustment Procedure see sheet 5-3.)

- Switch the power switch to "OFF".

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE | CODE IDENT NO. DWG NO.

A | 52648

SCALE

MA 700350

REV

SHEET 2-3

FORM 000021

2.6 INSTALLATION OF THE MEMORIES

2.6.1 Non-Parity Memories (See Sheet 6-3)

> PM-1105 8K x 16 Bits PM-1116 16K x 16 Bits (DEC MM11-L 8K \times 16 Bits)

Address memories with proper address strapping plug, P/N: 700066-XXX.

> PM-1105 and/or PM-1116 can be installed in any slot J1 through J9 of the card cage of the PM-1150/2, however, one empty slot is needed between two memories due to the width of the memory cards (up to 5 memories can be installed in a PM-1150/2.)

- The connectors are keyed, all memory cards are always plugged in with the components side up.
- 2.6.2 Parity Memories (See Sheet 6-4)

PM-1105/P 8K x 18 Bits (DEC MM11LP) 8K x 18 Bits

- Address memories with proper address strapping plug, P/N: 700066-XXX.
- PM-1105/P can be installed in any slot J2 through J6 and J8 $\,$ of the card cage of the PM-1150/2, however- one empty slot is needed between two Memoreis due to the width of the memory cards. No PM-1105/P can be plugged in J6, if J7 is used for the Parity controller card PM-7259 (up to 4 PM-1105/P can be installed in a PM-1150/2). Slots Jl-A, B and J9-A, B are Unibus slots.
- The connectors are keyed, all memory cards are always plugged in with the components side up.
- The parity controller card PM-7259 plugs into slot 7A and B of the PM-1150/2.

2.7 INSTALLATION OF THE I/O CABLE AND TERMINATION

The Unibus cable (P/N 700144) is used to connect the PM-1150/2 to and from the processor. The Unibus cable is a one to one cable and therefore either end could be used. Both cable plugs are keyed and extra care must be taken to make sure that they are properly aligned when installed. Failure to align keys will not cause damage but will cause the system to malfunction.

information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC. SIZE CODE IDENT NO. DWG NO.

52648

MA 700350

SCALE

REV A

SHEET 2-4 On the back side of the PM-1150/2 are two parallel I/O connectors.

- Install a I/O cable in the keyed I/O connector of the PM-1150/2 and connect the other end of the I/O cable to the PDP 11 Unibus (A and B).
- In general, the Unibus cable from the PM-1150/2 may be plugged in any slot at the processor where a Unibus connection exists.
- If the PM-1150/2 is the last device on the Unibus, it has to be terminated. Use PM-930 (P/N 700430-100) or DEC M930 terminator card. Put the termination card in the second slot on the rear of the PM-1150/2.
- If the PM-1150/2 is not the last device on the Unibus, another Unibus cable is required to connect it to the next device.
- The I/O cable can be fixed with the bracket on the back of the PM-1150/2.

2.8 PM-1150/2 OPERATIONAL

- Fasten the cover on the right top side of the PM-1150/2 with 7 screws.
- Fasten the L shaped cover (top left side) with 6 screws.
- Fasten the front panel with 4 screws.
- Put switch on back side of PM-1150/2 to "ON".

The PM-1150/2 is now ready for operation.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE CODE IDENT NO. DWG NO.

SCALE

52648

MA 700350

REV A

SHEET

2-5

SECTION 3

INTERFACE INFORMATION

3.0 INTRODUCTION

This section provides interface information.

3.1 MODE OF OPERATION AND INTERFACE TIMING

See Memories Manual and Processor Manual.

3.2 LOGIC LEVEL DEFINITIONS

Logic levels are defined as follows:

High (logic "0") +2.5V to 5.0V Low (logic 1) ØV to 0.8V

The last letter in the logic symbols indicates the active state of the signal, the letter L indicates that it is active when in low state, The letter H indicates that it is active when in the high state.

RECEIVER	CHARACTERISTICS	
SP380	Input High Threshold	1.7V Typ.
	Input Low Threshold	1.0V Typ.
	Input Current at 2.7V	180 µ a Max.
		•
TRANSMITTER	CHARACTERISTICS	
SN7438	Input High Voltage	2.0V Min.
	Input Low Voltage	0.8V Max.

The	information	hereon is the	he property	of PLESSEY	MEMORIES IN-
					the information
					l, or manufacture
					on of it, in whole
					from PLESSEY
			iout written	authorization	ITOM PLESSET
MEN	ORIES. INC				

SIZE

CODE IDENT NO. DWG NO.

52648

MA 700350

SCALE

REV

SHEET 3 - 1

Transmitter	Characte	ristics
	Input "l" Current	40 ∧a ma max.
·	Input "O" Current	-1.0 ma max.
	Output Low Voltage (at 48 ma sink)	+0.4 V max.
·	Output High Current Propagation Delay	250/wa max.
	(low to high level)	14 ns typ.
	Propagation Delay	
	(high to low level)	11 ns typ.

TABLE 3.1

RECEIVERS AND TRANSMITTERS CHARACTERISTICS SPECIFICATIONS

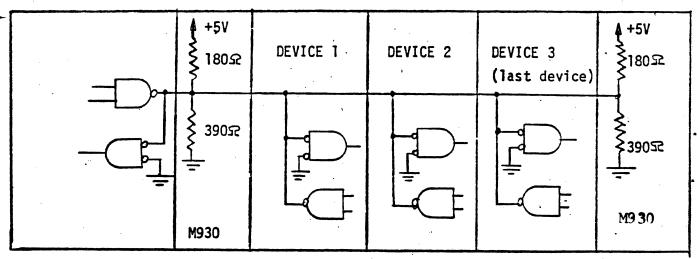


TABLE 3.2

TERMINATIONS FOR THE UNIDIRECTIONAL BUS LINES

The information hereon is the property of PLESSEY MEMORIES IN- CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole	Δ	CODE IDENT NO 52648	MA 700350
or part, shall be made without written authorization from PLESSEY MEMORIES, INC.	SCALE	REV	 SHEET 3-2

3.3 I/O CABLE

All signals between the memory cards and the Unibus are carried via a flat transmission cable. The flat transmission cable offers improved predictability of performance to increase reliability. This is due to the uniformity of the distance between each conductor.

The characteristics of the I/O cables are:

Characteristic impedence : 150 ohms @ 1 MHZ

DC Resistance

.05 ohm per Foot

TERMINATIONS 3.4

A optional PM-930 card is available to terminate the Unibus in the memory enclosure, if required.* All lines are terminated with 180 ohms $\frac{1}{2}$ 5% to +5V and 390 ohms $\frac{1}{2}$ 5% to ground except for the following:

PIN ASSIGNMENT	NAME OF LINE	TYPE OF TERMINATION
BF1 BF2	ACLOL DCLOL	390 ohms In Parallel with
AVI	BG7H	
AU1	Ñ₽GĦЭ	
BA1 .	B G 6H≟	180 ohms to +5V
BB1	BG5H	
BE2	BG4H	

UNIBUS TERMINATIONS

TABLE 3..3

Not all the Unibus control lines are used in the memory system. * NOTE ·: Termination of the lines are required only at the last device on the Unibus

The information hereon is the property of PLESSEY MEMORIES IN-	SIZE	CODE IDENT NO	DWG NO.	
CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole	Δ	52648	M	IA 700350
or part, shall be made without written authorization from PLESSEY MEMORIES, INC.	SCALE	REV	A	SHEET 3-3

INTERFACE FIN ASSIGNMENT 3.5

ERFACE F	III ASSIGIII	[7]
PIN NO. I/O INTERFACE	SIGNAL NAME	
AA1	INITL	
AB1	INTRL	
ACI	DOOL	
AD1	D02L -	ŀ
AE1	DO4L	
AF1	D06L	
AH1	D08L [*]	
AJI	DIOL	
AK1	D12L	
· AL1	D14L	
AM1	PAL	
ANI	GND	
AP1	GND	
AR1	GND	
AS1	GND	
AT1	GND .	
AUI	NPGH	
FVA	BG7H	
BAI	BG6H	
BB1	BG5H	
	* .	

.,	
PIN NO.	SIGNAL
INTERFACE	NAME
AA2	+5V
AB2	GND
AC2	GND
-AD2	DO1L
AE2	DO3L
AF2	DO5L
AH2	DO7L
AJ2	D09L
AK2	DIIL
AL2	D13L
AM2	D15L
AN2	PBL
AP2	BBSYL
AR2	SACKL
AS2	NPRL
AT2	BR7L
AU2	BR6L
AV2	GND
BA2	+5V
BB2	GND

TABLE 3.4

DWG NO.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE
Λ
A

CODE IDENT NO 52648

MA 700350

SCALE.

REV

SHEET 3-4

INTERFACE PIN ASSIGNMENTS (Continued)

PIN NO. I/O INTERFACE	SIGNAL NAME
вст	BR5L
BDI	GND
BE1	GND
BF1	ACLOL
вн1	A01L
вл	A03L
вкі	A05L
BL1	A07L
вмі	AO9L
BN1	AllL
ВР1	A13L
BR1	A15L
BS1	A17L
BT1	GND
BU1	SSYNL
BV1	MSYNL

PIN NO.	SIGNAL
I/O INTERFACE	NAME
BC2	GND
BD2	BR4L
BE2	BG4H
BF2	DCLOL
BH2	AOOL
BJ2	A02L
BK2	A04L
BL2	A06L
BM2	A08Ĺ
BN2	A10L ·
BP2	A12L
BR2	A14L
BS2	A16L
BT2	C1L
BU2	COL
BV2	GND

Connector for Unibus on the rear of the PM-1150/2 J1-A/J1-B and J2-A/J2-B.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE	CODE IDENT NO	DWG	NO.			
Α	52648		MA	70035	50	
SCALE	REV	A	SI	HEET	3-5	

NAME	SYMBOL	INPUT/OUTPUT LINES	FUNCTION
MASTER SYNC (Memory initiate)	MSYNL	INPUT	Initiates all memory cycles provided the memory is available (memory not busy)
MASTER SYNC A (PM1116 only)	MSYNA L	INPUT	Enables the processor to internally initiate a memory cycle. This is NOT a Unibus line.
SLAVE SYNC	SSYNL	OUTPUT	An acknowledgement PULSE from the memory to the processor (usually a response to MSYNL)
INITILIZATION (Memory Reset)	INITL	INPUT	This signal is asserted by the processor when the START key on the console is depressed, when a RESET instruction is executed, or when the power fail sequence occurs. In the latter case, INIT is asserted following the power fail service routine while power is going down, and again when power comes up. INIT may also be used to clear and initialize peripheral devices by means of the RESET instruction.
CONTROL LINES	CØL, C1L	INPUT	Select the various mode of operation

TABLE 3.5

The information hereon is the property of PLESSEY MEMORIES IN-	SIZE	CODE IDENT NO	DWG NO.	
CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole	Δ	5264 8	N	MA 700350
or part, shall be made without written authorization from PLESSEY MEMORIES, INC.	SCALE	REV		SHEET 3-6

NAME	SYMBOL	INPUT/OUTPUT LINES	FUNCTION
DATA LINES	DØØ1L	INPUT/OUTPUT	The 16 data lines are used to transfer information between the memory and the master device. Data input to the memory and data output from the memory are transferred on the same lines.
ADDRESS LINES	AØØL- A17L	INPUT	The address lines are used by the master device to select a memory with which it will communicate.
DC LINE	DCLOL	INPUT/OUTPUT	Input to the memory and output from the power supply. This signal, which emanates from the power supply, is wired from the power connector card slot to the UNIBUS on all system units. This signal remains cleared as long as all dc voltages are within specified limits. If an out of tolerance voltage condition occurs, DC LO is asserted by the power supply. Devices such as core memories use the DCLO signal to inhibit further operations.
PARITY ERROR FLAG	PBL	OUTPUT	Generated by parity controller to indicate parity error has occurred

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE

CODE IDENT NO

DWG NO.

52648

MA 700350

SCALE

REV _

SHEET

3-7

3.7 POWER SUPPLY

See Section 5

Power Supply Output Plug on the back of the Power Supply.

PIN NO.	FUNCTION
Α. Α	AC
В	AC Neutral
C	Spare
D	Chassis Gnd
E	Fan return
F	Fan (AC switched)
Н	-15V return
J	-5V
К	-15V
L	-15V return
М	ACLO
N	-15V
Р	+5V return
R	DCLO
S	+5V
T	+5V return
U	-15V parallel
V .	+5V
W	-5V and logic return
Х	+5V parallel

TABLE 3.6

The information hereon is the property of PLESSEY MEMORIES IN- CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole	SIZE	CODE IDENT NO	O DWG NO.	
		52648	M	A 700350
or part, shall be made without written authorization from PLESSEY MEMORIES, INC.	SCALE	REV		SHEET 3-8

FORM 000021

3.8 MEMORY CARD POWER REQUIREMENTS:

The power requirement for the various memory cards are shown below:

MEMORY	POWER SUPPLY VOLTAGE	STAND-BY CURRENT	OPERATING WORSE CASE	TERMINATOR CARD CURRENT STAND-BY	TERMINATOR CARD CURRENT WORSE CASE
PM-1105 AND PM-1105/	+5V	1.9A	3. 2A	. 4A	.7A
11-1103/1	- 15V	.25A	5.3A	-	_
	+5V	2.1A	3.4A	.4A	.7A
PM-1116	-15V	.3A	5.3A	-	and the state of t

TABLE 3.7

MEMORY CARD POWER SUPPLY CONNECTIONS ARE AS FOLLOWS:

ø۷	PINS:	C-C, D-C, E-C, F-C
+5V	PINS:	C-A, D-A, E-A, F-A,
-15V	PINS:	C-B, D-B, E-B, F-B

TABLE 3.8

CODE IDENT NO The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC. SIZE DWG NO. 52648 SCALE REV

MA 700350

SECTION 4

MAINTENANCE AND TROUBLESHOOTING

4.0 INTRODUCTION

This section provides maintenance and troubleshooting instructions for periodic maintenance and for efficiently locating faults.

*4.1 AIR FILTER CLEANING

The air filter is located on the cabinet front panel and should be removed at least once every 300 operating hours for cleaning.

After the air filter is removed, tap the filter (dirty side down) to loosen accumulated particles. Then reverse flush under running water. After cleaning, shake out excess water and reinstall when dry.

4.2 PRINTED CIRCUIT BOARD CLEANING

The printed circuit contacts should be cleaned when dust or dirt has built up on the surfaces. LPS Instant Contact Cleaner, alcohol, and Freon TMC have been approved for cleaning contacts. When printed circuit contacts must be cleaned, hold the card so the contacts are pointed down. Thoroughly saturate contact area. While the contacts are still wet, scrub with a soft natural bristle brush.

CAUTION: Under no circumstances should an eraser or other abrasive be used on gold plated contacts.

To remove dust from printed circuit boards, a soft brush should be used. Clear, oil-free, pressurized air (5 psi max) can then be sprayed over the board.

CAUTION: Do not spray pressurized air directly inside the core matrices.

When baseplate connector contacts require cleaning, remove printed circuit board, then clean and rewet the contact area. Insert and withdraw the board several times or until contacts seem clean. Rewet the contacts and the connector and using a soft cloth, wipe any residue from the board contacts. Repeat this sequence if necessary. Use only alcohol on baseplate connectors.

CAUTION: Insertion of objects other than printed circuit boards may destroy contact surface or pressure characteristics.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC. SIZE

SCALE

CODE IDENT NO. DWG NO.

52648

MA 700350

REV

DEV/

SHEET 4-1

4.3 REPAIR ON POWER SUPPLY

See Section 5

4.4 REPAIRS ON THE SYSTEM

If a failure in the PM-1150/2 system occurs, steps should be taken to locate the source of failure. The failure might be caused by the electro-mechanical portion of the system, cables, power supply, backplane connections etc., or it may be caused by a malfunction in one of the memory modules itself. Memory type failures may be further defined as follows:

- A. Operation failures, which are caused by faulty reference control, input logic, or timing.
- B. Partial data word failures which are caused by faulty drive and sink switches, drive control, memory register, inhibit driver, stack decoding logic or line driver circuits of the memory card.

It is very strongly recommended that all assemblies requiring repair be returned to the factory for rework. All return units should be accompanied with as much detail as possible describing the failure mode.

4.5 PROCEDURE TO LOCATE A FAULTY MEMORY

The information contained in this section is designed to help locate a malfunction in a specific memory card. It is strongly recommended that the memory card be sent back to the factory for repair. This will ensure that the unit is tested to meet its specifications before being used again.

NOTE: After isolating the malfunction card, enclosed as much data as possible describing the specific condition of the failure.

The most common and useful method to locate a failure, providing there is more than one memory card in the system, is to "walk" the error. This is accomplished by inter-exchanging the memory cards and observing the error mode again.

The information hereon is the property of PLESSEY MEMORIES IN- CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole	Λ	CODE IDENT NO 52648	DWG NO.		700350
or part, shall be made without written authorization from PLESSEY MEMORIES, INC.	SCALE	REV	4	SHEE	T 4-2
FORM 000021	1				

Address strapping plug must be swapped when memory cards NOTE: are swapped. If the error moved when the cards were swapped, it is very likely that the memory card is faulty. If the error did not move, the malfunction is not very likely to be in the memory card. The recommended procedure is as follows:

- 1. Check all cables in and out of the PM-1150/2, make sure all lines are not cut, broken or shorted to each other.
- 2. Check all DC voltages to the memory card.
- 3. Check all terminations (for the last device on the Unibus).
- 4. Inspect visually to ensure no physical damage to the PM-1150/2 or the memory cards themselves.
- 5. Inspect all plugs for misaligned pins, dirty contacts Make sure all memory card plug connecor broken wires. tors align properly when mating.

CAUTION: IT IS VERY IMPORTANT TO MAKE SURE THAT ALL CONNECTORS, MALE AND FEMALE PLUGS, ARE PROPERLY ALIGNED.

ADDRESS DECODE

Address decoding should be employed in order to isolate a malfunction to a specific memory card.

The lower order address (bits 1 through 13) define a specific location within the 8K address block of each card.

Address bit 0 selects one of two Bytes. (A byte is defined as 8 data bits).

NOTE: For further information on troubleshooting on Memory Cards see Memory Card Manual.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE

SCALE

CODE IDENT NO. DWG NO.

52648

MA 700350

REV A

SHEET 4-3

ADDRESS CONVERSION DECIMAL TO OCTAL

DECIMAL (approximation)	OCTAL EQUIVALENT
32K	200000
31K	174000
28K	160000
24K	140000
20K	120000
16K	100000
12K	060000
8K .	040000
4K	020000

TABLE 4.1

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.	SIZE	CODE IDENT NO	DWG NO.	
		52648	M	A 700350
	SCALE	REV		SHEET 4-4

SECTION 5

POWER SUPPLY

5.0 INTRODUCTION

This section contains all information about the Power Supply.

5.1 MAINTENANCE PROCEDURES

Periodic maintenance should consist only of careful visual inspections accompanied by cleaning. Particular attention should be devoted to cleaning the heat sink area around the semi-conductors so that accumulations of dust and dust retaining films are removed.

The visual inspection should include checking for loose connections and for discolored parts and wires. If the supply is operating properly, the visual inspection should be performed without the use of tools for prying and moving parts and harnesses for inspection. The safest procedure is to clean with compressed air and soft brushes.

5.2 TROUBLESHOOTING

Troubleshooting, if required, should be attempted only by technically qualified persons. Generally, if replacement of a plug-in part will not correct the problem, returning the supply to the factory for repair will prove to be the least expensive and most expedient procedure.

5.3 CONTROLS

The Controls and indicators are mounted on the front of the Power Supply.

Four test points are provided for DC output TEST POINTS: voltage monitoring purposes.

LED INDICATOR: One LED indicator for DC output OK.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE CODE IDENT NO. DWG NO. 52648

SCALE

MA 700350

REV

5-1

SHEET

5.4 POWER SUPPLY INPUT VOLTAGE CONVERSION PROCEDURE


5.4.1 To Convert From 115VAC to 230VAC

- 1. Locate power transformer primary pins. They are marked 1,3,2,4 in that order from top to bottom. These pins are located next to the 10A (5A) fuse housing and the LED indicator.
- 2. Remove jumper between pins 1-3 and 2-4.
- 3. Install jumper between 2-3.
- 4. Change the 3 fuses to 5A (2 fuses on the rear and 1 fuse on the front of the Power Supply).
- 5. Change the writing on the rear to 230VAC and 5A.

5.4.2 To Convert From 230VAC to 115VAC

Analog to 5.4.1 item 1 change to:

- 1. Remove jumper between 2-3.
- 2. Install jumper between 1-3 and 2-4.

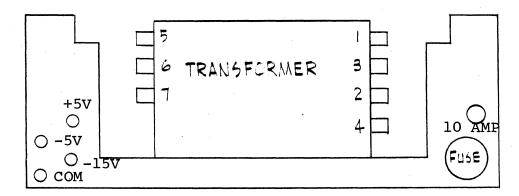

Power Supply Transformer

FIG. 5.1

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE	CODE IDE	NT NO.	DWG	NO.
A	52648			MA 700350
SCALE		REV		SHEET 5_2

5.5 ACLO ADJUSTMENT PROCEDURE

ACLO signal is factory adjusted. It is asserted (\emptyset V) when the input AC voltage drops below 105V AC on the 115VAC version, and below 210 VAC on the 230VAC version.

Should the ACLO signal need adjustment, use the following procedure.

- 1. Remove the seven bottom screws that fastens the power supply in the PM-1150/2.
- 2. Set the power supply on its back with the heat sink on the bottom.
- 3. Plug the PM-1150/2 through an AC variac to the AC input.
- 4. Under full load condition, vary the AC input voltage and monitor ACLO on the system backplane.
- 5. Adjust ACLO pot (R402) so that ACLO signal drops from +5V to ØV when AC input is approximately 105VAC. (Adjust always when AC voltage is nominal and then decrease AC Voltage.

ACLO pot (R402) is located on the component side of top assembly board. Third pot from the power transformer. See sheet 5-11

Control: Set AC voltage to 115 VAC, ACLO has to be +5V. decrease AC voltage, ACLO should drop to ØV when AC voltage is 105VAC.

.5.6 DC VOLTAGES ADJUSTMENT

+5V supply voltage adjustment is achieved with potentiometer R122.

-15V supply voltage adjustment is achieved with potentiometer R222.

See sheet 5-11 for locations of above pots.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE CODE IDENT NO.

MA 700350


MA 700350


SCALE

REV A

SHEET 5-3

FORM 000021

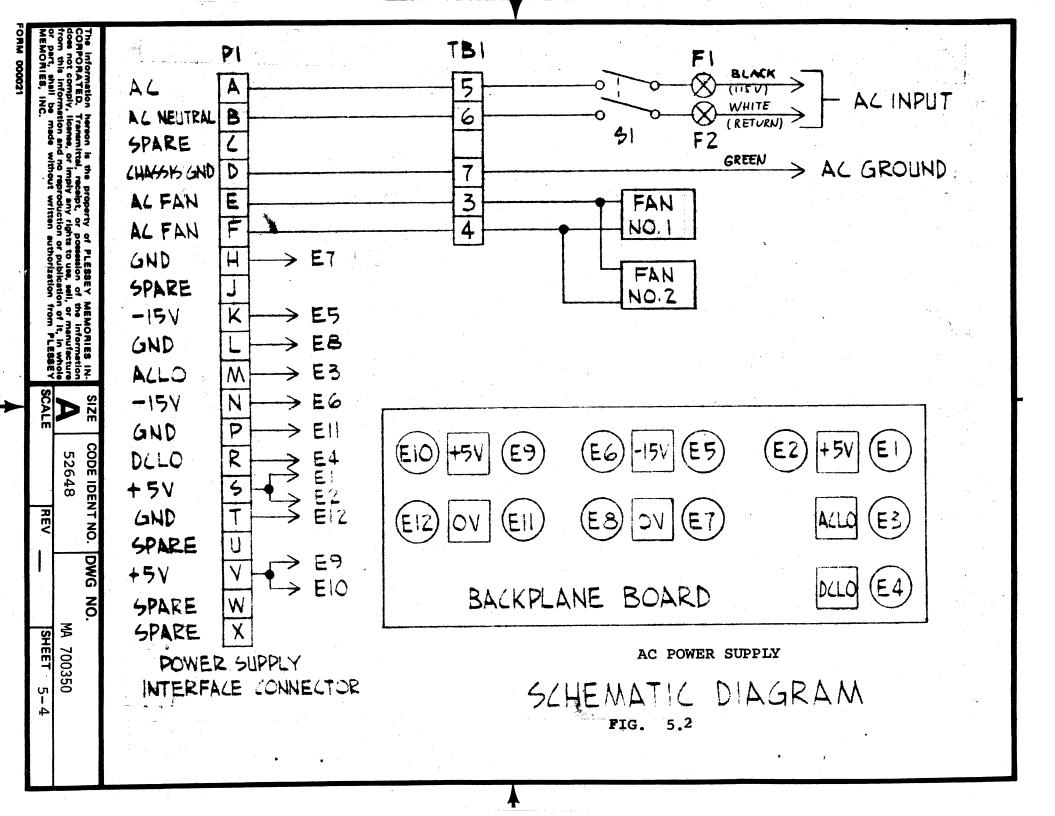

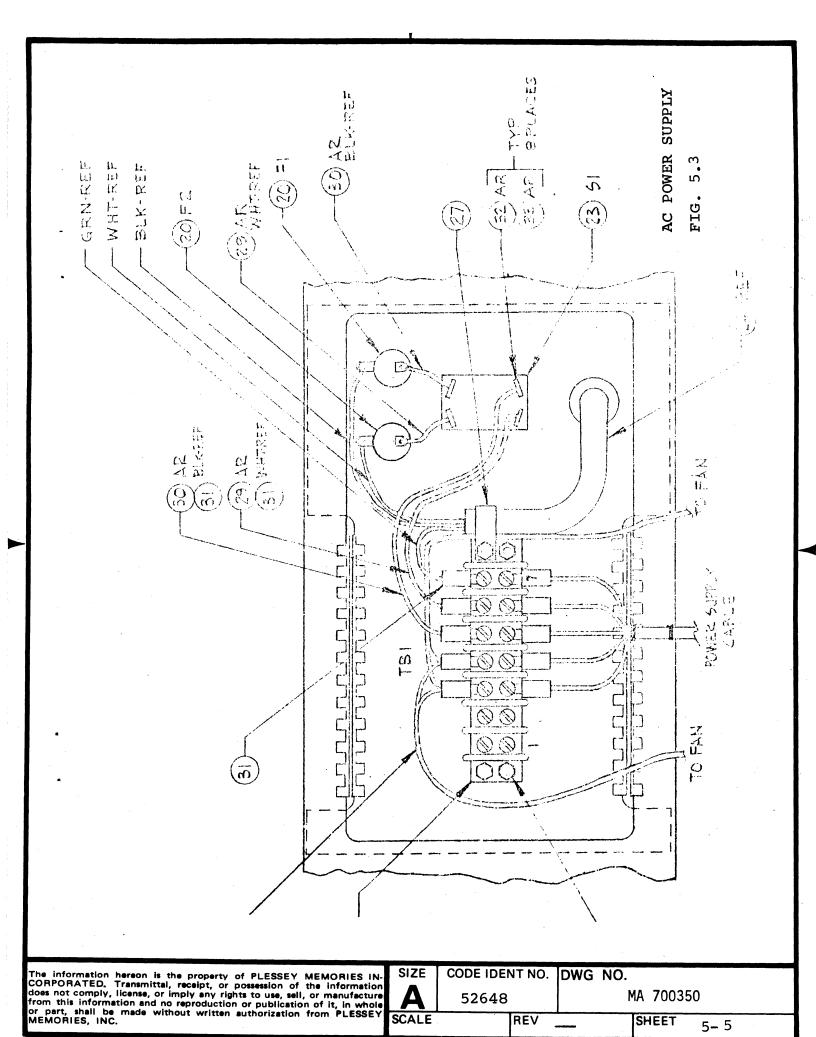

FORM 000021

POWER SUPPLY - TYPE 96799 SPECIFICATIONS

1.0 INPUT

105 - 129 VAC OR 210 - 258 VAC, 47-440 HZ, 10.

2.0 OUTPUTS

+ 5 VDC @ 12.5A -15 VDC @ 13.0A - 5 VDC @ 1.5A

3.0 ADJUSTMENT ALL CUTPUTS

±5% MINIMUM

4.0 REGULATION

LINE AND LOAD +1%

5.0 RIPPLE

5 mV RMS MAXIMUM

6.0 TEMPERATURE COEFFICIENT

0.02%/°C MAXIMUM

7.0 TRANSIENT RESPONSE

OUTPUT WILL RETURN TO REGULATION LIMITS WITHIN 50 MICROSECONDS FOR A 50% LOAD CHANGE. THE LOAD CURRENT CHANGE VERSUS TIME SHOULD BE LESS THAN ONE AMPERE PER MICROSECOND.

8.0 OUTPUT IMPEDANCE

DC - IKHZ: 0.001 RL OR 0.005 OHMS IKHZ - 100KHZ: 0.005 RL OR 0.5 OHMS (RL 1S THE RATED LOAD)

9.0 PARALLEL OPERATION

THE OUTPUTS CAN BE CONNECTED IN PARALLEL WITH AN IDENTICAL SUPPLY TO SHARE A LOAD OF DOUBLE THE PATED CUTPUT. THE SUPPLIES SHOULD SHARE WITHIN ±10% ASSUMING EQUAL CONNECTIONS.

10.0 OVERVOLTAGE PROTECTION

OVERVOLTAGE PROTECTION IS PROVIDED ON ALL CUTPUTS. THE VOLTAGE SET FOINTS ARE:

+ 5V OUTPUT; +6V MIN., +7V MAX. -15V OUTPUT; -16.5V MIN., -18.5V MAX. - 5V OUTPUT; -6V MIN., -7V MAX.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufactura from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE

CODE IDENT NO

DWG NO.

52648

MA 700350

SCALE

REV

SHEET 5-6

11.0 OVERLOAD AND SHORT CIRCUIT PROTECTION

THE OVERLOAD CUPRENT LIMIT IS 120 - 130% AT NOMINAL RATED OUTPUT VOLTAGE. ALL OUTPUTS WILL TOLERATE A CONTINUOUS SHORT CIRCUIT.

12.0 AC POWER FAILURE DETECTOR

THRESHOLD RANGE 100-110 VAC, 200-220 VAC RMS (ADJUSTABLE). A 3 VAC RMS HYSTERESIS IS INCORPORATED IN THE DETECTOR.

13.0 DC UNDERVOLTAGE DETECTORS

- A. 5V UNDERVOLTAGE DETECTORS SET AT 4.75V ±0.25%.
- B. 15V UNDERVOLTAGE DETECTOR SET AT 13.5V + 1%.

BEFORE ANY OF THE OUTPUT VOLTAGES GO OUT OF TOLERANCE, THE DCLO SIGNAL WILL GO TO LOGIC "O" AND REMAIN AT LOGIC "O" UNTIL THE -15V OUTPUT REACHES 3.0V.

14.0 POWER ON SEQUENCE

DURING POWER TURN-ON DCLO SIGNAL SHALL BE MAINTAINED AT LOGIC "O" (AFTER THE -15V REACHES 3V) UNTIL ALL OUTPUT VOLTAGES HAVE STABILIZED WITHIN THEIR SPECIFIED TOLERANCE.

15.0 POWER DOWN SEQUENCE

DURING POWER TURN-OFF (UNDER MAXIMUM LOAD) THE ACLO SIGNAL SHALL GO TO LOGIC "O" AT LEAST ONE MILLISECOND BEFORE THE DCLO SIGNAL GOES TO LOGIC "O".

16/0 TEMPERATURE .

OPERATING 0 TO 60°C NON-OPERATING -55 TO +85°C

17.0 HUMIDITY

95% MAXIMUM WITHOUT CONDENSATION

18.0 ALTITUDE

OPERATING 0 TO 10,000 FEET NON-OPERATING 0 TO 50,000 FEET

19.0 SHOCK AND VIBRATION

DESIGNED TO MEET NORMAL SHIPPING AND BENCH HANDLING.

20.0 AC OVERLOAD PROTECTION

A TEN AMPERE FUSE (LOCATED ON THE FRONT PANEL) PROVIDES PRIMARY OVERLOAD PROTECTION.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE

CODE IDENT NO 52648

DWG NO.

MA 700350

SCALE

REV

SHEET 5- 7

21.0 THERMAL PROTECTION

TEMPERATURE SENSING IS TO BE PROVIDED IN ORDER TO TURN OFF THE POWER SUPPLY IF THE AMBIENT TEMPERATURE EXCEEDS 60°C.

22.0 SAFETY STANDARDS

THE POWER SUPPLY WILL BE DESIGNED TO MEET UL STANDARD 478.

23.0 COOLING

THE POWER SUPPLY PACKAGE IS DESIGNED FOR CONDUCTION AND FORCED AIR COOLING. THE FAN SHOULD BE A PAMOTOR 4500 OR EQUIVALENT AND LOCATED AS SHOWN ON THE SPECIFICATION CONTROL DRAWING.

24.0 TERMINATION

WINCHESTER ELECTRONICS "MRA" SERIES

MRA 20P-J6

THE TERMINATIONS ARE AS FOLLOWS:

PIN NUMBER	FUNCTION
A B C D	AC AC NEUTRAL SPARE CHASSIS GND FAN RETURN
F H	FAN (AC SWITCHED) - 15V RETURN
K L	-5V -15V -15V RETURN
M N P	Aelo -15v
R S	+5V RETURN DCLO +5V
T	+5V RETURN -15V PARALLEL +5V
W X	-5V AND LOGIC RETURN +5V PARALLEL
	÷

25.0 Finish

CHEMICAL FILM PER MIL-C-5541

26.0 WEIGHT

20 LBS.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC. SIZE CODE IDENT NO 52648


MA 700350

SCALE REV

SHEET

DWG NO.

5- 8

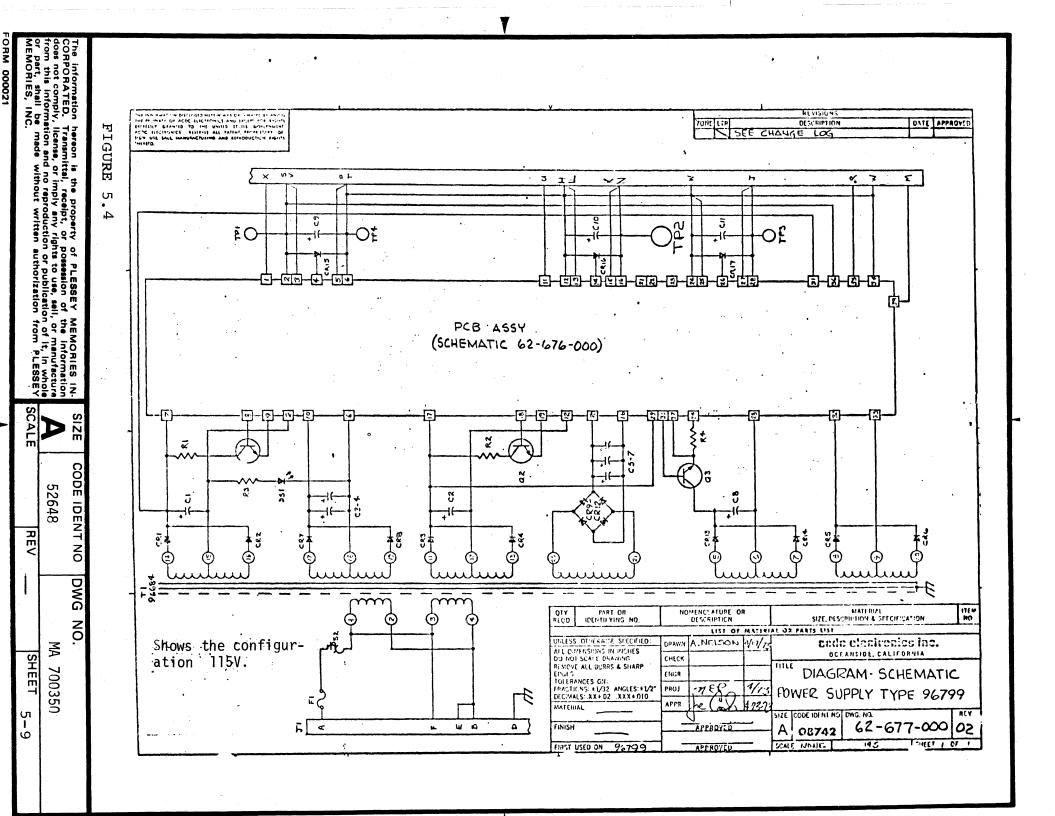

SECTION V POWER SUPPLY

OMPONENT PARTS LIST.

MODEL 96799	so	HEMATIC 62-676-000 62-677-000
0.5		
CKT. SYMBOL	DESCRIPTION	MFR. TYPE**
C1,2 C3,4 C5-7 C8 C9 C10 C11 C101 C102,201,202,302 C103,203,303 C301	CAPACITOR 1200MFD/15V CAPACITOR 28,000MFD/15V CAPACITOR 10,000MFD/40V CAPACITOR 16,000MFD/15V CAPACITOR 4800MFD/6V CAPACITOR 1500MFD/25V CAPACITOR 250MFD/12V CAPACITOR 0.022MFD/500V CAPACITOR 0.005MFD/500V CAPACITOR 0.1MFD/10V CAPACITOR 0.0015MFD/500V CAPACITOR 3.9MFD/50V	SPRAGUE 39D STM 91S STM 91S STM 91C STM 33C STM 33C SPRAGUE 500D RMC TA-122 RMC SM-250 SPRAGUE HY-320 RMC SM-215 CSI3BG395K
CRI-6,106,206,306,409 CR7-12 CRI3,14 CRI5,16 CRI7 CRI01,201,301 CRI02,202,302 CRI03,203,303 CRI04,204,304 CRI05,205,305,403-406 CR401,402	DIODE IN4004 DIODE IN1200 DIODE IN4720 SCR 2N682 SCR 2N4441 ZENER IN748A DIODE IN5624 ZENER IN823A ZENER IN753A DIODE IN4454 ZENER IN758A	MOTOROLA WESTINGHOUSE SEMTECH G.E. MOTOROLA MOTOROLA SEMTECH MOTOROLA T.1. T.1. MOTOROLA
RI,2	RESISTOR IOD 3% IOW	DALE RHIO
R3	RESISTOR 330Ω 5% 1/2W	RC20
R4 R101,102	RESISTOR 0.3Ω WW 2W NOT USED	IRC BWH
RIO3(A,B),104(A,B),	•	
201-204	RESISTOR 0.150 WW 3W	RW69
R105,119 R106,206	RESISTOR 100Ω 5% 1/4W RESISTOR 560Ω 5% 1/4W	RC07 RC07
R107	RESISTOR # 5% 1/4W	RC07
R108,208	RESISTOR 27K 5% 1/4W	RC07
R109,146,209,219,246,309,		-
319,346 RI10	RESISTOR 470Ω 5\$ 1/4W NOT USED	RC07
RIII,123,211,223,311,323,		
402	POTENTIOMETER 5K	BOURNS 3389T
R112,132,232,332	RESISTOR 1.5K 5% 1/4W	RC07
R113,213 R114,214,314	RESISTOR 470Ω 5% IW RESISTOR 330Ω 5% 1/4W	RC32 RC07
RI 15,215,312,315,410	RESISTOR 2K 5% 1/4W	RC07

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE

CODE IDENT NO 52648

MA 700350

DWG NO.

SCALE

REV

CKT. SYMBOL	DESCRI	PTION			MFR. TYPE**
RI16,118,131,134,142,143,	•				•
145,231,234,316,318,326,	•				*
327,331,334,342,343,345,				,	
403	RESISTOR	2.49K	13	1/8W	RN60C
R117 .	RESISTOR	. *	5%	1/4W	RC07
R120,128,228,320,328	RESISTOR	820ภ	5%	1/4W	RC07
R121	RESISTOR	*	5%	1/4W .	RC07
R122,222,322	POTENTIOMET				BOURNS 3389W
RI24,324	RESISTOR	1.00K	1%	1/8W	RN60C
R126,127,227,242	RESISTOR	5.62K	1%	1/8W	RN60C
RI 29, I 30, 229-230, 329, 330	RESISTOR	3K	5%	1/4W	RC07
RI33,233,333	RESISTOR	56K	5%	1/4W	RC07
RI35, I36, I39, 339	RESISTOR	6.2K	5%	1/4W	RC07
RI37, 138, 237, 238, 337, 338,		47.4	- 4		2007
404,405,412-416,423	RESISTOR	47K	5%	1/4W	RC07
RI 40, 340	RESISTOR		1%	1/8W	RN60C
RI41	RESISTOR	*	5%	1/4W	RC07
R144,344	RESISTOR	430Ω	5%	1/4W	RC07
RI 47, 247, 347	RESISTOR	220Ω	5%	1/4W	RC07
RI48,248,348	RESISTOR	1000	5%	1/2W	RC20
R149,249,349	RESISTOR	68Ω	5%	1/4W	RC07
RI50,216,244,245,406,411,	25012722	• • •	- 1		
417-420	RESISTOR	IK	5%	1/4W	RC07
R205	RESISTOR	47Ω	5%	[/4W	RC07
R207	RES ISTOR	*	5%	1/4W	RC07
R210	RESISTOR	5.6K	5%	1/4W	RC07
R212	RESISTOR	3.3K *	5%	1/4W	RC07
R217	RESISTOR	, m.	5%	1/4W	RC07
R218	NOT USED	1 04	5%	1/4W	RC07
R220,350	RESISTOR	1.8K	5% ·	- · ·	RC07
R221	RESISTOR		1%	1/4W 1/8W	RN60C
R224	RESISTOR	2.15K	1%	1/8W	RN60C
R225	RESISTOR	18.2K 1.78K	18	1/8W	RN60C
R226	RESISTOR	IOK	5%	1/4W	RC07
R235,236,239	RESISTOR RESISTOR	IOK	1%	1/8W	RN60C
R240	RESISTOR	*	5%	1/4W	RC07
R241 R243	NOT USED		٦٦	17 711	11007
R250	NOT USED				
R301-305	NOT USED			· •	•
R306	RESISTOR	2000	5%	1/4W	RC07
R307	RESISTOR	*	5%	1/4W	RC07
R308	RESISTOR	4.7K	5%	1/4W	RC07
R310	NOT USED			• • • • • • • • • • • • • • • • • • • •	
R313	RESISTOR	200Ω	WW	2W	IRC BWH
R317	RESISTOR	*	5%	1/4W	RC07
R321	RESISTOR	*	5%	1/4W	RC07
R325	NOT USED			••	•
R335,336		8.2K	5%	1/4W	RC07
R341	RESISTOR	*	5%	1/4W	RC07
R401	RESISTOR	1000	1%	1/8W	BN60C
R407	RESISTOR	1.5K	5%	1/2W	RC20
R408	RESISTOR	3900	5%	1/2W	RC20 .

The information CORPORATED. does not comply, from this information.	license, or imply	ipt, or pos	ssession of	the informa	tion
	BUON BING NO FEDE	oauction o	r Dublicatio	n of it in w	hole
or part, shall be MEMORIES, INC	made without	written au	thorization	from PLES	SEY
MEMORITES, 1140	••				

	SI	Z	E	
	L	1		
_	_	_	À	

CODE IDENT NO 52648

DWG NO.

MA 700350

SCALE

REV

SHEET5-13

CKT. SYMBOL	DESCRIPTION .	MFR. TYPE**
R421,422	RESISTOR 560 5% IW	RC32
01,2	TRANSISTOR 40250	RCA
Q3	TRANSISTOR 2N3055	RCA
Q101,102,301-304	NOT USED	<u>.</u>
Q103,104	TRANSISTOR 2N3771	RCA
0105,205,305	TRANSISTOR 2N22!9	MOTOROLA
Q106-109,206-209,306-309,		
407	TRANSISTOR 2N2907A	MOTOROLA
Q110-118,210-218,310-318, 401-406		
0201-204	TRANSISTOR 2N2222A	MOTOROLA
Q408.409	TRANSISTOR 2N3772 TRANSISTOR 2N2219A	RCA
Q410	TRANS ISTOR 2N2219A SUS 2N4985	MOTOROLA
7	303 2114903	G.E.
	••	
TI i	TRANSFORMER 96684	ACDC
DS1 .	DIODE-LIGHT EMITTING .	MONSANTO MV5024
FI	FUSE 10A	LITTLEFUSE 314010
JI .	CONNECTOR - MRA20P-J-FM	WINCHESTER
K401	RELAY 1C 5A	ELECTRONICS
		APPLICATIONS CO.
S2	SWITCH, THERMAL	ELMWOOD 3450
•		**

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC. SIZE

E CODE IDENT NO

52648

DWG NO.

MA 700350

SCALE

REV

SHEET 5-14

YALUES SELECTED IN TEST OR MAY BE OMITTED.

^{**} SUGGESTED SOURCE. ACDC ELECTRONICS, INC. RESERVES THE RIGHT TO SUBSTITUTE EQUIVALENT VALUE COMPONENTS FROM OTHER APPROVED SOURCES WITHOUT FURTHER NOTICE.

SECTION 6
SCHEMATICS AND DRAWINGS

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE

CODE IDENT NO

DWG NO.

52648


MA 700350


SCALE

REV

SHEET 6-1

FORM 000021

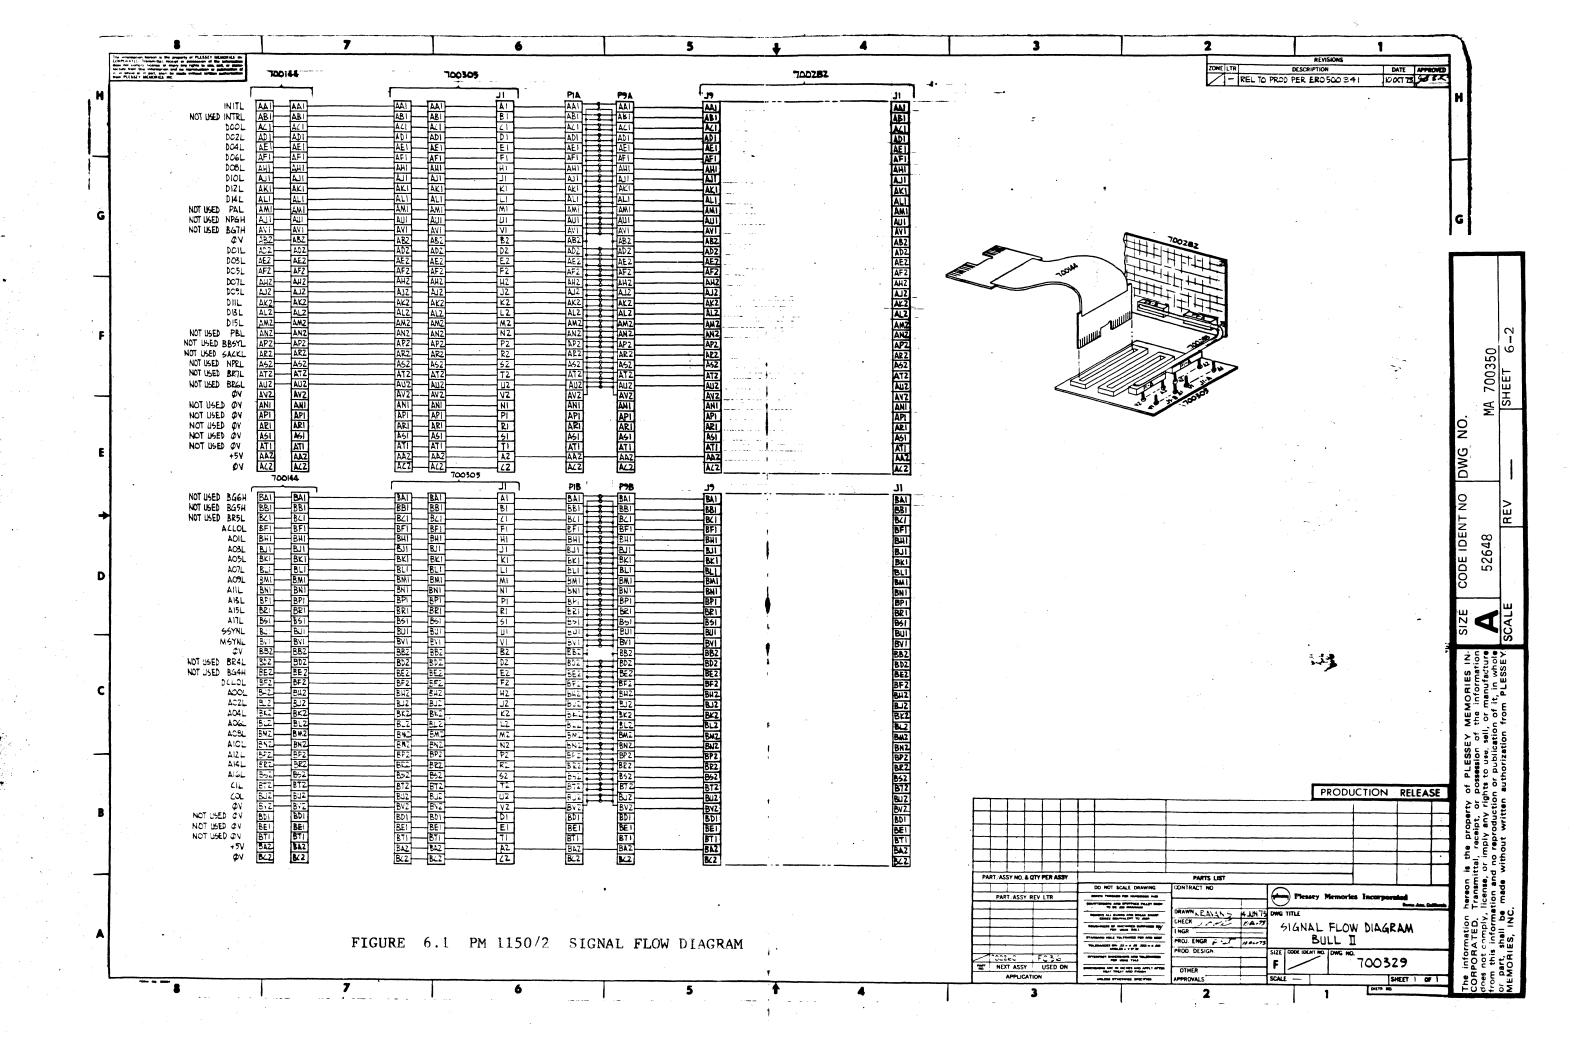

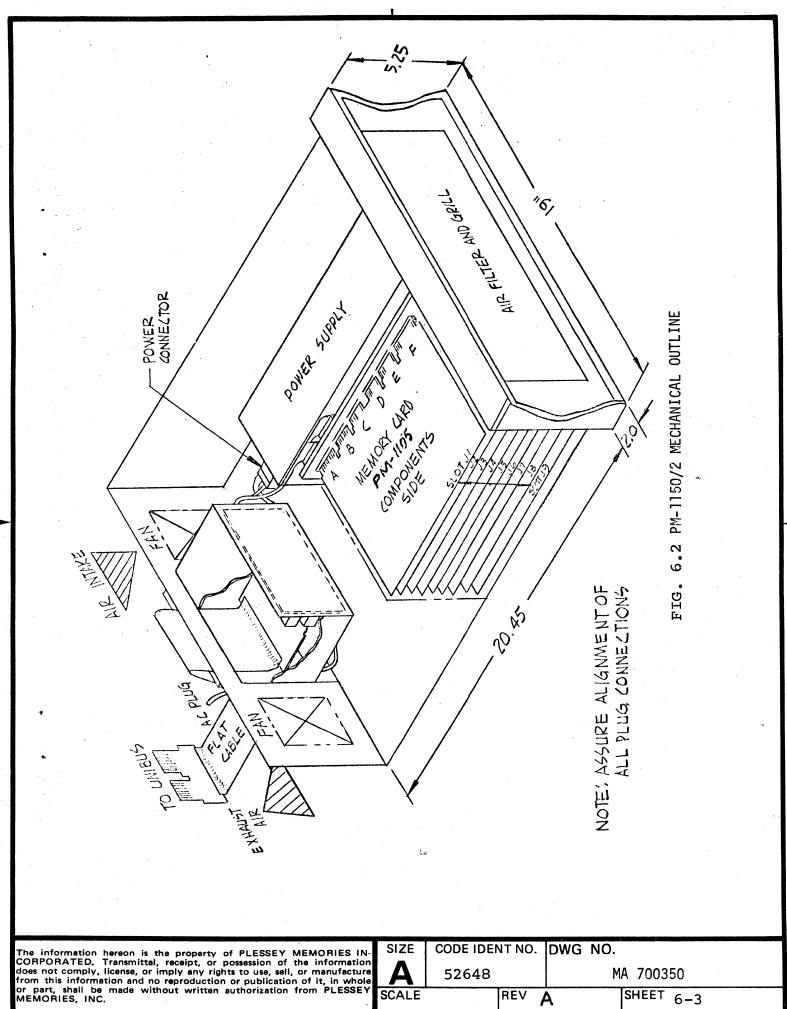

FORM 000021

52648


SCALE

MA 700350


REV


SHEET 6-3

A

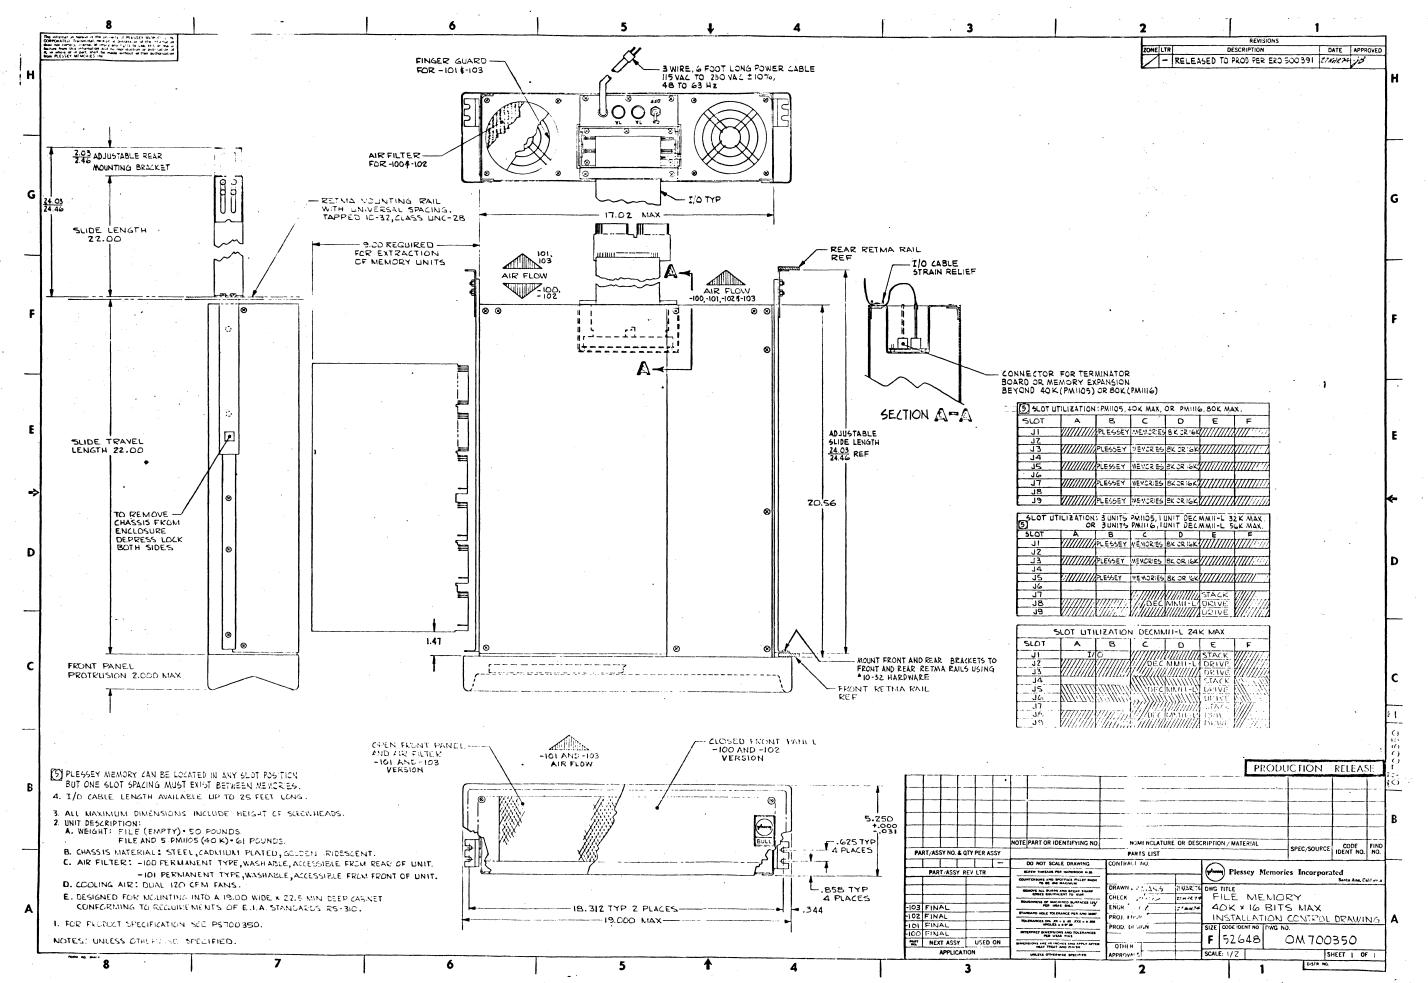

MA 700350 sht. 6-4

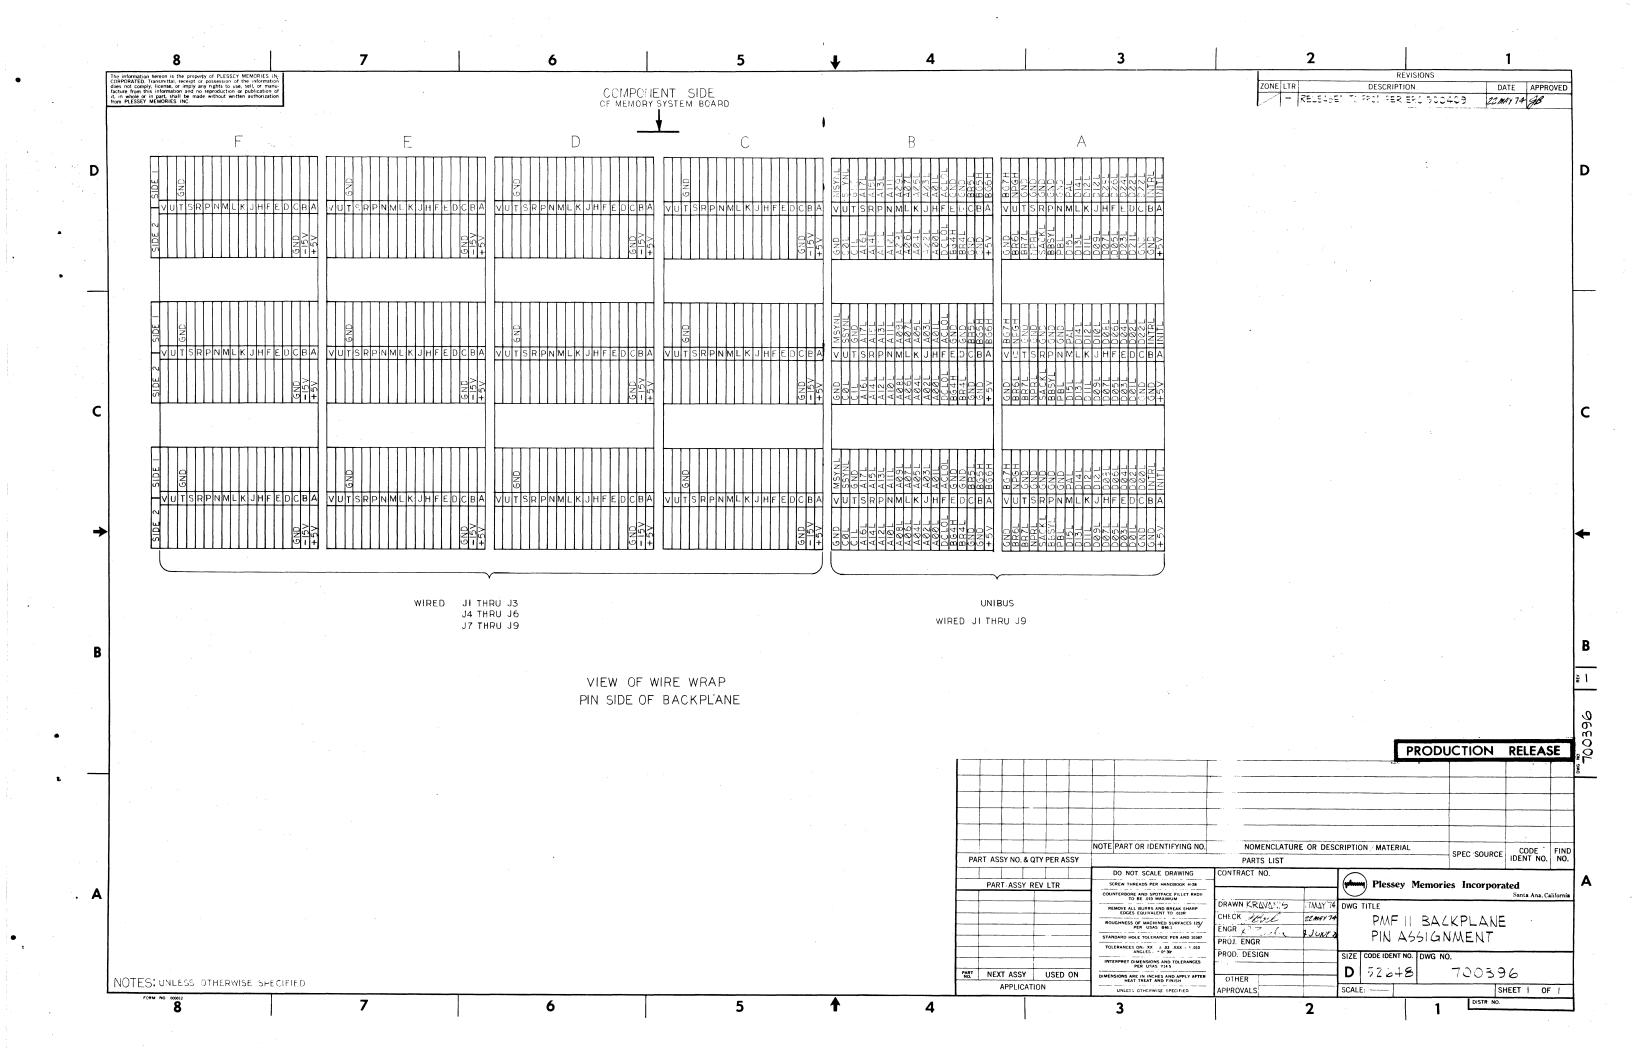

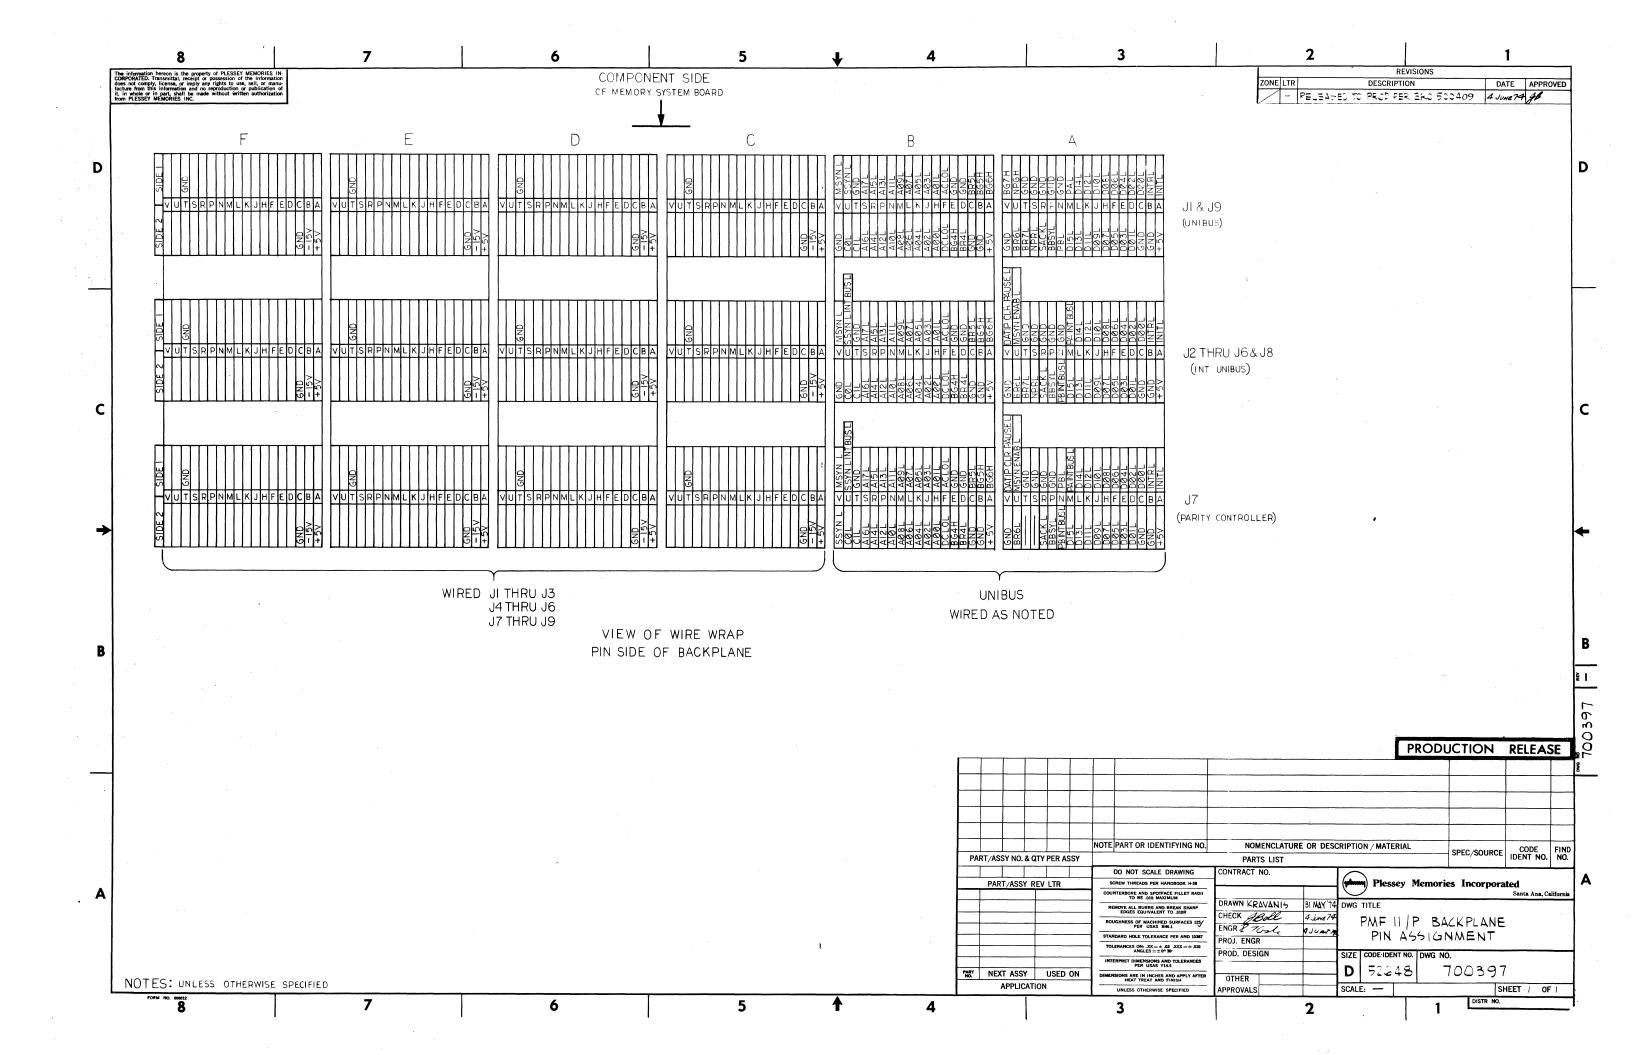

										_			-									Å,
Transmittal receip	erean is the property of PLES it, or passession of the infer io use, sell, or manufacture ' action of it, in whole or p PLESSEY MEMORIES, IN	emetion do	nes not som	antv. licence.	<u></u>							REVISIONS										
authorization from					4	TR				DE	SCRI	PTION			-			DATE	_	APP	ROVE	D
NEVE	APPLICA				_		REI	J TO	PRC	D PE	ER E	RO 50	1003	3			21	14/	77		Je C	-
NEXI	ASSY	U	SED (ON	\dashv									1.								
<u> </u>					\dashv																	
<u> </u>					4																	*
					_																	
<u> </u>																						ļ
_																						
•				***************************************	7														,			
•																						
ĺ																						
																			,			. !
ĺ																				.*		I
ĺ																						I
																						ŀ
																						-
i																			٠			ı
																						1
i																						
İ																						
i																						
																						J
											21		<u> </u>							A (7
* .											44	ROI	DU		IIC) <u>N</u>		RE	LE	A:	jE_	
	REV LTR	_	Т	T		1	1	1	1		1											
4	KEV LIN	<u> </u>	<u> </u>	<u> </u>					<u> </u>					<u> </u>								
REV STATUS	SHEET																					
OF SHEETS	REV LTR				_				†	†	1	1										
SHEETS		├	↓	 					-	 	<u> </u>	+	ļ									
	SHEET	1	2	3	4	5																
DO N	OT SCALE DRAWING		CON	TRACT	NO.				1/		P	less	ev	M	m	rie	l 2	nco)rn	or	ate	4
SCREW THR	EADS PER HANDBOOK H	1-28	DRAV	wn M.	Po	- - -		УB	46	dam)	. =	ICG		747		<i>J</i> 1 1 \	.U I		Santa.			
то	AND SPOTFACE FILLET BE .010 MAXIMUM		CHEC	CK .T.	Acc			$\frac{18}{2a}$	i b	WG	TIT	ĹE										
EDGES	BURRS AND BREAK SHA EQUIVALENT TO .010R		DESI	GNZ	70	Alexander .		3- B	-			ZA ST	JPPL	EMEN	T TC	PM-	1150)/2 1	MANU	ΑL		
P	F MACHINED SURFACES PER USAS 846.1.	125/	PROJ	J. ENG	R. Fo	x		2/14/														
TOLERANCES	E TOLERANCE PER AND										·											
INTERPRET DIN	MENSIONS AND TOLERAP		-						- '	SIZE	CC	DE ID	ENT I	NO.	DW	3 NC).		*			
DIMENSIONS ARI	E IN INCHES AND APPLY		OT	HER					\dashv	A	52	2648			SM	7012	220					
HEAT	TREAT AND FINISH		j	OVALS					S	CALE:	ــــــــــــــــــــــــــــــــــــــ		T		1			EET	1	OF	5	
FORM 0000:					<u> </u>											ISTR	<u></u>		سخد	<u> </u>		_

PM-1150/2A SUPPLEMENT TO PM-1150/2 MANUAL

The PM-1150/2 Expansion Chassis has been modified to improve its performance. The modified expansion chassis is defined as the PM-1150/2A. It has a new power supply with a different power cable from the power supply to the backplane assembly and a new backplane assembly.

The PM-1150/2A uses the same backplane assembly for parity or non-parity configurations. It can support either configuration as desired.

The PM-1150/2A can support the following memories:

PM-1132/100 PM-1132/102 PM-S1132 PM-S1132P PM-1116B PM-1105B PM-1105BP MM11-C MM11-D	32K non-parity core memory 32K parity core memory 32K non-parity MOS memory 32K parity MOS memory 16K non-parity core memory 8K non-parity core memory 8K parity core memory DEC 8K parity or non-parity core memory DEC 16K parity or non-parity core memory
MS11-JP	DEC 16K parity or non-parity MOS memory

All of the above listed memories are modified Unibus memories. They can be installed in slots 1 through 8. They cannot be installed in slot 9 as it is wired for standard Unibus

CAUTION

Do not attempt to install any standard Unibus memory in slots 1 through 8 as it might cause damage to the backplane assembly.

NOTE: PM-S1132 MOS memory cannot be installed in slot 1.

When using parity memories, the Plessey PM-7850 or DEC M7850 parity controller must be used. The controller is installed in the A and B connectors of any available slot 1 through 8 on the backplane assembly.

The information hereon is the property of PLESSEY MEMORIES IN-		CODE IDE	NT NO.	DWG	NO.			
CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole	A	52648		SM	70122	20		
or part, shall be made without written authorization from PLESSEY MEMORIES, INC.	SCALE		REV			SHEET	2	

PM-1150/2A POWER SUPPLY

Power to the backplane is carried from the power supply unit via a 9-pin mate-n-lock connector as shown below:

PIN	FUNCTION	WIRE COLOR
P2-1	DCLO	VIOLET
P2-2	ACLO	YELLOW
P2-3	15V	BLUE
P2-4	0Λ	BLACK
P2-5	0 V	BLACK
P2-8	+15V	GREY
P2-9	+5 v	RED

AC power to the power supply unit is routed via a 3-pin mate-n-lock connector. Green wire is ground and the black and the white wires are AC input.

The PM-1150/2A power supply provides continuous voltages and currents as shown below:

VOLTAGE	CURRENT
+5∨	16A
-15V	13A
+15V	2.2A

DC output voltages, DCLO and ACLO adjustments are set in the factory and need not be changed. However, if the need arises, they are identified as shown:

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC. SIZE | CODE IDENT NO. | DWG NO.

REV


SCALE 52648

SM 701220

SHEET

3

FORM 000021

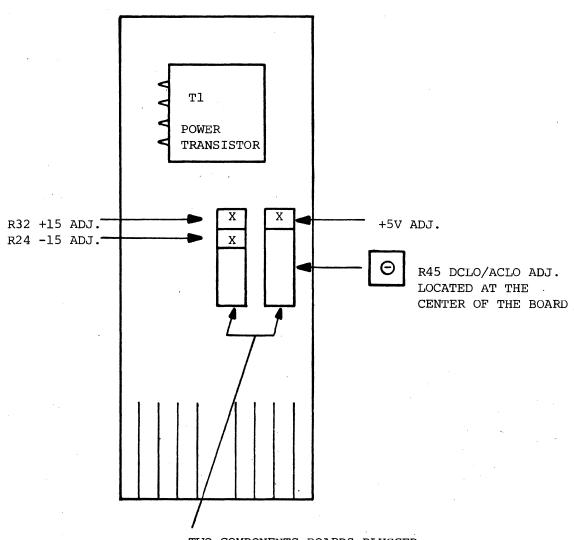

TWO COMPONENTS BOARDS PLUGGED INTO A CONNECTOR AT THE BOTTOM OF THE UNIT.

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE CODE IDENT NO.

DWG NO.

52648

SM 701220


SCALE


REV __

SHEET 4

To convert the PM-1150/2A expansion chassis from 115VAC input operation to 230 VAC input operation, the following instructions should be followed:

  1. Change jumper wires on the power supply power transformer as shown:





	JUMPERS					
115VAC	1-3	2-4				
230	2-3	***************************************				

2. Jumper the TB-1 terminal as shown:

1 2 3 4 5 6 7


GREEN

BLACK

115 VAC INPUT

WHITE

TBl

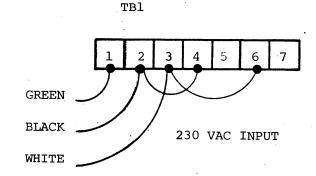

115VAC input version uses 10A-250V fuses for F1, F2, and F3. 230VAC input version uses 5A-250V fuses for F1, F2, and F3. F1 and F2 are located at the rear of the chassis. F3 is located on the front of the power supply

The information hereon is the property of PLESSEY MEMORIES IN-CORPORATED. Transmittal, receipt, or possession of the information does not comply, license, or imply any rights to use, sell, or manufacture from this information and no reproduction or publication of it, in whole or part, shall be made without written authorization from PLESSEY MEMORIES, INC.

SIZE CODE IDENT NO. DWG NO.

A | 52648

SCALE

SM 701220

REV —

SHEET

FORM 000021