



DATA OUTPUT 8CALLING SEQUENCE

	RAU	Number	
	RAL	Exit	]0112
Exit	any		

RAU is not necessary -- any command which leaves the number to be printed in the Upper Accumulator is acceptable.

]0112 is the symbolic entry to the subject program.

]0112 is equal to L<sub>0</sub> in the relocatable hexadecimal version.

OUTPUT

The decimal point is not printed. No format characters are supplied.