SA-H156 **Power Controller Installation Guide** - **\(\Sigma\)** Sigma Information Systems

Power Controller Installation Guide

Copyright © Sigma Information Systems

3407 E. La Palma Ave.

Anaheim, California 92806

MA401080 - REV A - April 1988

Table of Contents

1.	General Description1		
	1.1	Features	2
2.	Insta	ıllation	2
3.	Speci	ifications	3

List of Figures

Figure 1:	SA-H156 Example Configuration1
	Controller Installation

General Description


1. General Description


The SA-H156 power controller provides a 15 amp branch circuit for a system chassis and four peripheral devices. The ON/OFF status of the system chassis controls AC power to peripheral equipment.

In most applications, the sytem chassis is plugged into the unswitched sense output and peripheral equipment, such as terminals, printers, and expansion units are plugged into the switched outputs.

The controller senses the current from the unswitched sense output; if there is a current flow, the controller switches the other outputs on. When the device connected to the unswitched sense output is turned off, the controller senses the current loss and turns the other outputs off.¹

Figure 1 shows the SA-H156 example configuration.

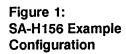

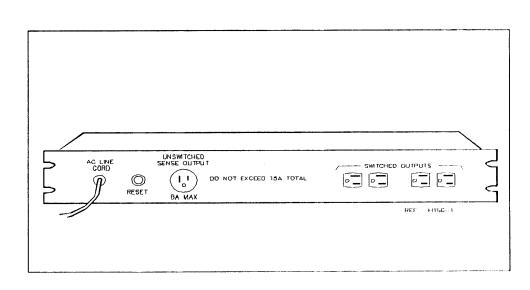

1 REF: \WORK\H156.WS

1.1 Features


- Permits system unit to control AC power to peripheral equipment.
- •Includes 15 amp circuit breaker for power protection.
- Current sensing circuit eliminates need for AC power switch wiring.
- •Installs in standard 19" RETMA rack.
- Includes 7 foot power cord for convenient connection to power source.
- •Available in 115VAC (P/N 501036-100) or 230VAC (P/N 501036-200) versions.

2. Installation

Use Figure 2 and the following procedure to install the SA-H156 power controller into a standard 19" RETMA rack and to connect devices to the power controller.

- 1. Mark the intended positions of the mounting holes on the rear of the chassis.
- 2. Bolt the power controller in the rack using four #10-32 x 1/2" screws. Use flat washers with locking washers next to the hex nut.
- 3. Plug the line cord from the power controller into an AC outlet.
- 4. Plug the device that controls the on/off status of the system (usually the host computer) into the unswitched sense output.
- 5. Plug peripheral devices such as printers and terminals into the switched outputs. Turn AC power on at each peripheral device.
- 6. Power ON/OFF status on the device plugged into the unswitched sense output automatically controls the ON/OFF status at the switched outputs.

Figure 2: Controller Installation

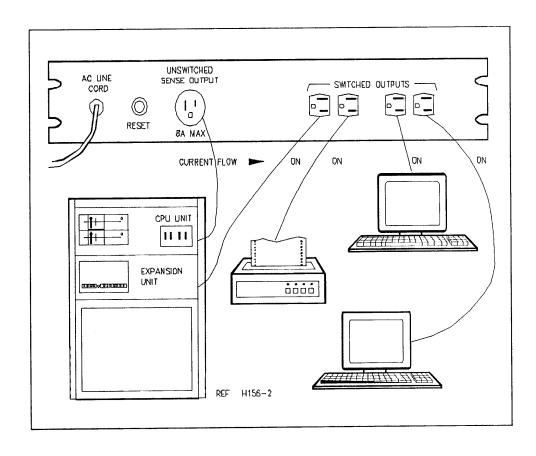

3. Specifications

Dimensions:

19" wide x 3" high x 3" deep

Power Protection:

15 amp circuit breaker

AC Input Power:

88VAC-128VAC or 176VAC-256VAC

47-63Hz

AC Outputs:

Unswitched sense output 8 amps MAX

Four switched outputs

All outputs not to exceed 15 amps MAX