### THE TARBELL CASSETTE INTERFACE

Plugs directly into ALTAIR\* 8800 or IMSAI 8080 Computer. Serial-Parallel and Parallel-Serial Conversion performed on board.

It's fast — Up to 540 bytes per second (2200 bits per inch) with high-quality cassette recorder. 187 bytes per second (800 bits per inch) suggested standard with medium quality (\$39.95) recorder. 27 bytes per second (with modification) for Kansas City format. 1000 bytes per second @ 10 inches per second with PHI-DECK.

Encoding method — Phase encoded self-clocking method requires only one channel, and withstands large amounts of wow and flutter. Has been used in the computer industry for many years. Can also be used to generate and detect Kansas City format tapes with small modification.

Will work with most audio cassette recorders. Has been used with reel-reel tape recorders. Can easily be adapted to automatically (software) controlled digital cassette units. The J. C. Penny #6536 is presently being recommended (\$39.95). Suggested tape is Scotch Low-Noise, High-Density audio tape.

The device code (address) to which the interface responds is selectable in increments of 4 by an on-board dip-switch.

Four extra status lines are available to read external conditions.

Four extra control lines are available, which may be used to drive relays for extra cassette units, startstop control, or controlled cassette drives, such as the PHI-DECK.

Two spare IC slots are provided on the board to do your own thing.

Software provided includes input/output driver routines, bootstrap, read-only memory program, and a BASIC program for saving and loading data. A Processor-Technology Software Package #1, which is an editor and assembler combined, and which has been extensively modified for saving and loading files to and from cassette, is available separately.

The 37-page owner's manual includes assembly instructions and drawings, parts and pin-function lists, soldering, cleaning, and installation notes, operating instructions, initial adjustment procedures, notes about using the PHI-DECK, start-stop control, interrupts, and writing programs for the cassette interface, the software mentioned above, and information about all the integrated circuits on the board.

The parts provided include all resistors, capacitors, integrated circuits, cassette cables, ribbon cables, dip connector, low-noise cassette with test stream, and a high-quality double-sided board with plated-through holes and gold-plated edge-connector fingers.

The first deliveries were made in September, 1975. Delivery time is from one to three weeks after receiving order. If you are not completely satisfied with the operation of the cassette interface, for whatever reason, the unit may be returned for refund or free repair within 90 days after you purchased it.

Kit price: \$120. Assembled & Checked out: \$175. Manual (incl): \$4. California residents please add 6% sales tax.

\*ALTAIR is a trademark/tradename of MITS, Inc.

I HAVE BEEN USING AN INEXPENSIVE AUDIO CASSETTE RECORDER IN MY HOME-DESIGNED COMPUTER SYSTEM SINCE 1972. I HAVE OVER 600 FILES ON CASSETTES, MOSTLY ABOUT 4 KBYTES EACH.

MY ESTIMATE IS THAT THE ERROR RATE IS LESS THAN 1 ERROR IN 1,000,000 BITS. I SAY THIS BECAUSE I CAN USUALLY RECORD 30 4 KBYTE FILES ON ONE SIDE OF A C-60 CASSETTE WITHOUT ANY ERRORS. THIS INTERFACE GAVE ME VERY GOOD SERVICE WHILE I WAS WRITING THE DISK OPERATING SYSTEM FOR MY 500 KBYTE DISK. SINCE I STARTED USING MY DISK SYSTEM A FEW YEARS AGO, THE CASSETTE HAS SERVED AS BACKUP STORAGE - A RELIABLE PLACE TO STORE DATA AND PROGRAMS AFTER THEY ARE DEBUGGED.

THE ENCODING METHOD I USE IS VERY SIMPLE, AND HAS BEEN IN USE IN INDUSTRY FOR QUITE SOME TIME. PICTURE A SHIFT REGISTER WHICH IS LOADED WITH THE DATA TO BE RECORDED. THE REGISTER IS THEN CLOCKED WITH A SQUARE WAVE. THE OUTPUT OF THE SHIFT REGISTER IS EXCLUSIVE-ORED WITH THE CLOCK, PRODUCING THE BI-PHASE DATA. THIS DATA GOES DIRECTLY TO THE CASSETTE RECORDER'S INPUT. THE MOST DIFFICULT PART OF THE PROCESS IS RECOVERING THE DATA. MANY LONG HOURS WERE SPENT STUDYING THIS PROBLEM AND TRYING DIFFERENT METHODS. IN THE ORIGINAL INTERFACE THIS WAS ACCOMPLISHED WITH A 760 HIGH-SPEED COMPARATOR, A 74121 NON-RETRIGGERABLE ONE-SHOT, AND A DOUBLE-GLITCH GENERATOR MADE WITH AN EXCLUSIVE-OR GATE. SINCE THEN, THE 8720 HAS BEEN DEVELOPED, WHICH COMBINES THESE THREE FUNCTIONS ON A SINGLE CHIP, AND IS THE UNIT USED IN THE ALTAIR INTERFACE.

THE PRESENT DESIGN IS EVEN MORE RELIABLE THAN THE PREVIOUS ONE, AND IS CAPABLE OF RECORDING AND RECOVERING ERROR-FREE DATA AT A RATE OF 540 BYTES PER SECOND ON A STANDARD AUDIO CASSETTE RECORDER. (YES, THAT IS OVER 2200 BITS PER INCH!) I AM STILL, HOWEVER, ENCOURAGING USERS TO EXCHANGE DATA RECORDED AT 187 BYTES PER SECOND (1500 BITS PER SECOND, 800 BITS PER INCH). THE MAIN ADVANTAGE OF THIS METHOD OVER OTHERS IS IT'S ABILITY TO VITHSTAND A LARGE AMOUNT OF VOV AND FLUTTER, WHICH MAY BE INTRODUCED BY CHEAP RECORDERS, AND STILL RECOVER THE DATA RELIABLY. THIS FEATURE STEMS FROM THE SELF-CLOCKING NATURE OF THE RECORDED SIGNAL: THE RECOVERED CLOCK VARIES RIGHT ALONG WITH THE DATA, SO THAT THE SPEED VARIATIONS ARE ESSENTIALLY IGNORED. THE MAIN DISADVANTAGE OF THIS METHOD IS THAT IT REQUIRES GOOD LOW-NOISE TAPE, AND A DECENT FREQUENCY RESPONSE ON THE CASSETTE UNIT. THE CASSETTE UNIT I'VE BEEN USING LATELY (J.C. PENNY #6536) HAS A FREQUENCY RESPONSE OF 80-8,000 Hz. THE MØST IMPØRTANT PART IS THE HIGH END. THESE REQUIREMENTS ARE DUE TO THE HIGH SPEED OF THE INTERFACE, AND WOULD BE THE SAME FOR ANY HIGH SPEED DEVICE.

THE SPEED MAY NOT SEEM VERY IMPORTANT TO YOU NOW. BUT A GOOD PORTION OF YOUR TIME IS GOING TO BE SPENT SAVING AND LOADING DATA, PROGRAMS, AND OTHER TEXT. THERE IS A WORLD OF DIFFERENCE BETWEEN LOADING BASIC AT SAY, 30 BYTES/SEC (4 MINUTES), AND AT 187 BYTES/SEC (40 SEC). IT DOESN'T SEEM LIKE MUCH, BUT WHEN YOU HAVE TO DO IT OVER, AND OVER, AND OVER.... IT GETS TO BE A BIT MUCH. ESPECIALLY WHEN YOU'RE DEVELOPING YOUR OWN PROGRAMS, AND THEY TEND TO RUN AMUCK AND WIPE OUT CORE. THINK ABOUT IT, THEN BUY THE TARBELL CASSETTE INTERFACE. THE ONLY METHOD PROVEN WITH TIME. ASK YOUR FRIEND WHO HAS ONE.

SELECTING A CASSETTE UNIT FOR DIGITAL RECORDING

FIRST OF ALL, THE MOST EXPENSIVE CASSETTE RECORDERS ARE NOT NECESSARILY THE BEST FOR RECORDING DIGITAL DATA. THERE ARE SEVERAL FACTORS THAT COMBINE TO MAKE A GOOD UNIT FOR THE HOBBYIST:

- 1. IT SHOULD HAVE A GOOD HIGH-FREQUENCY RESPONSE, PREFERABLY UP TO AT LEAST 8,000 HZ.
- 2. IT SHOULD HAVE A TONE CONTROL, SO THAT THE INHERENT FREQUENCY RESPONSE MAY BE REALIZED.
- 3. ALTHOUGH AUTOMATIC VOLUME CONTROL IS MORE CONVENIENT FROM AN OPERATIONAL POINT OF VIEW, IT ALSO REQUIRES A FEW SECONDS OF SETTLING TIME BEFORE STARTING TO RECORD.
- 4. IF IT DOES NOT HAVE AUTOMATIC VOLUME CONTROL, IT IS GOOD TO HAVE A RECORDING LEVEL METER. THIS ALLOWS EASIER ADJUSTMENT FOR THE CORRECT RECORDING LEVEL.
- 5. IT IS VERY IMPORTANT TO HAVE A DIGITAL COUNTER. THIS MAKES IT POSSIBLE TO QUICKLY LOCATE THE DESIRED PROGRAM AMONG SEVERAL.
- 6. IT SHOULD BE CAPABLE OF RUNNING DIRECTLY ON THE AC LINE.
  BATTERIES TEND TO MAKE THE MOTOR GET SLOWER AS THEY WEAR.
- 7. IT IS HANDY TO HAVE AN AUXILLIARY INPUT, SO THAT A FAIRLY HIGH LEVEL MAY BE FED TO THE RECORDER, AND NOISE KEPT TO A MINIMUM.
- 8. A REMOTE INPUT JACK IS VALUABLE TO CONTROL START-STOP DURING ASSEMBLER AND COMPILER OPERATIONS.
- 9. JACKS FOR MIC, AUX, REMOTE, AND EARPHONE ARE USUALLY INCLUDED, BUT YOU SHOULD CHECK TO MAKE SURE THEY ARE THERE, ANYWAY.
- 10. LOW WOW AND FLUTTER CHARACTERISTICS ARE IMPORTANT, BUT ARE MUCH MORE IMPORTANT WHEN USING AN ASYNCRONOUS INTERFACE, WHICH IS NOT SELF-CLOCKING.
- 11. IF IT IS DESIRED TO DO AUTOMATIC REWIND, FAST-FORWARD, AND RECORD/PLAYBACK SWITCHING UNDER PROGRAM CONTROL, YOU MUST PURCHASE A RECORDER THAT HAS THESE FACILITIES. ANOTHER FEATURE TO LOOK FOR ON THIS TYPE OF UNIT IS A WAY TO KEEP TRACK OF WHERE YOU ARE ON THE CASSETTE TAPE.
- 12. PEOPLE HAVE EXPERIENCED PROBLEMS WITH PANASONIC RECORDERS.

  I AM PRESENTLY RECOMMENDING THE J.C. PENNEY MODEL 6536

  AT \$39.95 AS THE BEST BUY I KNOW, AND SEVERAL PEOPLE ARE
  USING THEM WITH MY INTERFACE WITH GOOD RESULTS. OTHER

  BRANDS THAT I KNOW HAVE BEEN SUCCESSFUL ARE SONY AND REALISTIC.

OF COURSE, NONE OF THE ABOVE ITEMS IS ABSOLUTELY NECESSARY FOR RECORDING DIGITAL DATA ON AN AUDIO CASSETTE. BUT THE MORE OF THESE REQUIREMENTS THAT ARE FILLED, THE MORE CAFABLE YOUR UNIT WILL BE, AND THE EASIER IT WILL BE TO USE.

### IDEAS FOR USING THE CASSETTE INTERFACE

### SAVING AND LOADING PROGRAMS

PROGRAMS MAY BE TOGGLED INTO MEMORY, LOADED FROM PAPER TAPE, OR LOADED BY SOME OTHER MEANS. THEY MAY THEN BE DUMPED ONTO CASSETTE USING THE CASSETTE OUTPUT ROUTINE. THE OUTPUT ROUTINE ITSELF MAY BE DUMPED ALONG WITH THE OTHER PROGRAM, SO THAT IT WILL BE AVAILABLE LATER FOR FURTHER DUMPS. ROUTINES MAY THEN BE LOADED FROM CASSETTE, MODIFIED, AND DUMPED BACK OUT TO CASSETTE IN A CONTINUOUS PROCESS OF DEVELOPMENT.

### USING A BACKUP

A BACKUP IS A METHOD OF MAKING SURE THAT VALUABLE PROGRAMS OR DATA IS NOT LOST. ONE SIMPLE WAY OF PROVIDING A BACKUP IS TO RECORD A PARTICULAR PROGRAM IN TWO DIFFERENT PLACES ON THE SAME TAPE, OR ON TWO DIFFERENT TAPES. YOU MAY WANT TO GO BACK AND FORTH BETWEEN THE TWO COPIES, EACH TIME THE PROGRAM IS CHANGED. IN THIS WAY, YOU ALWAYS HAVE A COPY OF THE LAST PROGRAM, AND ONLY THE MOST RECENT CHANGES ARE LOST IF A POWER FAILURE OR OTHER EQUIPMENT TROUBLE DEVELOPS DURING THE PROCESS OF SAVING.

### STARTING AND STOPPING AUTOMATICALLY

MOST AUDIO CASSETTE RECORDERS HAVE AN INPUT LABELED "REMOTE".
THIS IS NORMALLY OPERATED FROM A SWITCH ON THE MICROPHONE, SO
THAT THE RECORDER CAN BE STARTED AND STOPPED WHILE DICTATING.
THIS INPUT CAN BE USED TO START AND STOP THE RECORDER UNDER
PROGRAM CONTROL FROM THE COMPUTER. ONE OF THE 4 EXTRA CONTROL
LINES COMING FROM THE CASSETTE INTERFACE (DIP-SOCKET PINS 5, 6,
7, OR 8) CAN BE USED TO DRIVE A RELAY WHICH WOULD HAVE ITS
CONTACTS CONNECTED TO THE RECORDER REMOTE JACK. THE MAIN
REQUIREMENTS ARE THAT THE 40 MA AVAILABLE FROM THE CONTROL LINE
BE ABLE TO DRIVE THE RELAY, AND THAT THE RELAY CONTACTS ARE ABLE
TO HANDLE THE CURRENT INTO THE REMOTE JACK, WHICH CAN BE AS HIGH
AS ONE AMPERE.

### OPERATING WITH MORE THAN ONE CASSETTE RECORDER

SOMETIMES IT IS DESIREABLE TO OPERATE WITH TWO OR MORE CASSETTE UNITS. WITH THE TARBELL CASSETTE INTERFACE, IT IS ALREADY POSSIBLE TO READ FROM ONE CASSETTE RECORDER, WHILE WRITING ONTO ANOTHER. THIS IS BECAUSE THE INPUT AND OUTPUT SECTIONS ARE ENTIRELY INDEPENDENT, AND MAY BE PROGRAMMED SEPERATELY. IF IT IS DESIRED TO READ FROM ONE OF TWO UNITS, AND WRITE ONTO ANOTHER, SUCH AS DURING A MERGING OPERATION, RÉLAYS MAY BE USED TO SWITCH BACK AND FORTH BETWEEN THE TWO INPUT UNITS, UNDER CONTROL OF ONE OF THE 4 CONTROL LINES. IF, HOWEVER, IT IS NECESSARY TO READ SIMULTANEOUSLY FROM TWO DIFFERENT UNITS, OR WRITE DIFFERENT INFORMATION ONTO TWO UNITS AT THE SAME TIME, IT WILL BE NECESSARY TO HAVE TWO CASSETTE INTERFACES.

## TARBELL ELECTRONICS 20620 S. Leapwood Ave., Suite P Carson, California 90746 (213) 538-4251

### RANDY MILLER'S CHESS PROGRAM

THIS PROGRAM RUNS UNDER ALTAIR 8K BASIC 3.2, AND WILL PLAY A GAME OF CHESS AGAINST THE USER. IT REQUIRES A MEMORY OF ABOUT 20 KBYTES TOTAL FOR THE PROGRAM, THE BASIC INTERPRETER, AND THE VARIABLES. YOUR VERSION OF 8K BASIC 3.2 SHOULD BE MODIFIED TO DO A CLOAD FROM THE TARBELL CASSETTE INTERFACE.

MOVE THE TAPE TO THE MIDDLE OF THE LEADER (HIGH-PITCHED SOUND), THEN TYPE IN CLOAD C , THEN START THE TAPE PLAYING, THEN HIT RETURN. THE CONSOLE WILL COME BACK WITH "OK" WHEN THE COMPUTER HAS LOADED THE CHESS PROGRAM. THEN TYPE RUN.

WHEN THE CHESS PROGRAM ASKS FOR YOUR MOVE, TYPE TWO DIGITS FROM ONE TO EIGHT, THEN A COMMA, THEN TWO MORE DIGITS. THIS TELLS THE PROGRAM WHERE THE PIECE IS THAT YOU WANT TO MOVE, AND WHERE YOU WANT TO MOVE IT TO. THE CHESS BOARD IS SET UP WITH THE SQUARES NUMBERED AS SHOWN IN FIGURE A.

### FIGURE A

### FIGURE B

	1	2	3	4	5	6	7	8			
1	11	21	31	41	51	61	71	81	1	=	PAWN
2	12	22	32	42	52	62	72	82	2	=	KNIGHT
3	13	23	33	43	53	63	73	83	3	=	BISHOP
4	14	24	34	44	54	64	74	84	4	=	ROOK
5	15	25	35	45	55	65	75	85	5	=	QUEEN
6	16	26	36	46	56	66	76	86	6	=	KING
7	17	27	37	47	57	67	77	87			
- 8	18	28	38	48	58	68	78	88			

SO, FOR EXAMPLE, TO MOVE YOUR PAWN FROM SQUARE 17 TO SQUARE 15 YOU WOULD TYPE 17,15 WHEN IT ASKS FOR YOUR MOVE. IF YOU WOULD LIKE TO SEE THE POSITION OF ALL THE PIECES ON THE BOARD, YOU MAY TYPE 0.0 WHEN IT IS YOUR MOVE. THE PIECES ARE IDENTIFIED BY THE NUMBERS 1 THROUGH 6 AS SHOWN IN FIGURE B.

TO HAVE THE COMPUTER GIVE A RUNNING ACCOUNT OF THE MOVES IT IS CONSIDERING AND THE EVALUATION EACH MOVE RECEIVES, TYPE IN THE FOLLOWING LINES:

681 PRINT PS(D,1);PS(D,2); 722 PRINT EV

DON'T EXPECT THE PROGRAM TO COME BACK WITH IT'S MOVE REAL QUICK. IT GENERALLY TAKES A FEW MINUTES TO MAKE UP IT'S MIND. THIS SHOULDN'T BOTHER YOU, SINCE MOST HUMAN PLAYERS TAKE AS LONG. DON'T BE SURPRISED IF YOU BEAT THE COMPUTER. SINCE THE PROGRAM IS FAIRLY SMALL, COMPARED TO THE BIG CHESS-PLAYING PROGRAMS, IT ISN'T HARD TO BEAT. IN FACT, I'VE BEAT IT 3 TIMES OUT OF 3, AND I DON'T CONSIDER MYSELF A VERY GOOD PLAYER.

TARBELL ELECTRONICS DOES NOT PROVIDE SUPPORT FOR THIS PROGRAM.
ALL WE CLAIM IS THAT IT DOES PLAY CHESS, AND THAT WE WILL PROBABLY
UPDATE FROM TIME TO TIME AS PEOPLE FIND BUGS OR MAKE IMPROVEMENTS.
WE WILL NOT AUTOMATICALLY SEND OUT THESE IMPROVEMENTS, AND IF A
NEW TAPE OR DOCUMENTATION IS REQUIRED, THE CUSTOMER IS EXPECTED
TO PAY THE USUAL PRICE OF \$6. CALFIFORNIA RESIDENTS PLEASE ADD 6%.

### PROCESSOR TECHNOLOGY SOFTWARE PACKAGE #1

Modified for Low Memory and Cassette by Fred Clark, Modified for Tarbell Cassette by Don Tarbell.

The main purpose of this software is to allow development of assembly-language programs. Programs may be entered from the keyboard in standard assembly-language format, edited, assembled, and saved on cassette in either source or machine format. These programs may be then loaded back into memory at some future time for listing, editing or running. Following is a summary of the commands. All address and byte information is in hex.

-Creates a file of name NAME at address AAAA (hex). FILE /NAME/ AAAA Up to six text files can be in memory at the same The file just created is the current file. FILE /NAME/ O -This command deletes the file named NAME. FILE /NAME/ -Makes the named file the current file. -Prints the starting and ending addresses of the FILE current file, and it's name. FILES -Lists the name, starting & ending address for each of the files in the system. Current file at top. -Dumps the contents of memory from SSSS to EEEE. DUMP SSSS EEEE -Executes the machine-language program at address AAAA. EXEC AAAA -Searches the cassette for named file, loads and exec. EXEC /NAME/ ENTR AAAA -Enter data into memory: B1 B2 B3 B4/ LIST NNNN -Lists the current file starting at line NNNN. DELT NNNN MMMM -Deletes lines NNNN through MMM from current file. NNNN (text entered) -Enter a line of text into the current file. Always use 4 decimal digits. It works similar to BASIC, in that the numbered lines are ordered automatically. ASSM AAAA -Assembles current file into address AAAA. ASSM AAAA BBBB -Assembles at address AAAA, but puts code at BBBB. -Execute a customer (user) routine at address E000.
-Save the current file on cassette. CUST SFIL LFIL -Load the current file from cassette. The name of the file on tape must match the name of the current file. Be sure there is enough room in memory. CFIL -Check a cassette file written with the SFIL command above, for errors, without overwriting current file. AFIL -Append a file from cassette to the current file. SAVE SSSS EEEE -Save a block of memory from SSSS to EEEE on cassette. -Load a block of memory from cassette starting at SSSS. LOAD SSSS. CHEK SSSS -Check a cassette file written with SAVE command. NAME /NAME/ -Rename the current file to NAME. RNUM N -Renumber the current file by increment N.
-Lists the current file at NNNN without line numbers. NLIS NNNN This software is useful, but may not be completely free of bugs. loads into the first 4096 bytes of memory, and uses about 2048 bytes following, for tables and scratch pad. Ctl-C escapes from any printing. Ctl-W freezes printing until another character is typed. The package is available from Tarbell Electronics for the prices listed below:

Cassette Tape with software and instructions: \$5.00 A reassembled and patched (updated) listing: \$5.00

TARBELL ELECTRONICS 20620 S. Leapwood Ave., Suite P Carson, California 90746 (213) 538-4251

# TARBELL ELECTRONICS 20620 S. Leapwood Ave., Suite P Carson, California 90746 (213) 538-4251

INSTRUCTIONS FOR CASSETTE READ-ONLY MEMORY PROGRAM 1 (ROMP1) AUG 12, 1976

THIS PROGRAM, WHICH WILL RUN IN EITHER READ-ONLY OR READ-WRITE MEMORY, ALLOWS THE USER TO PERFORM THE 6 FUNCTIONS LISTED BELOW:

LETTER	EXAMPLE	DESCRIPTION
E	E3000	EXECUTE PROGRAM AT 3000 (HEX).
C	C100020E7	CHECK CHECKSUM OF CASSETTE RECORD.
S	S	GENERATE SYNC STREAM.
0	02000000	OUTPUT RECORD OF LENGTH 2000. STARTING AT 0000.
I	110003000	INPUT RECORD OF LENGTH 1000, STARTING AT 3000.
L	L47DF1257	LOAD AND EXECUTE, LENGTH 47DF, STARTING AT 1257.

HAVE THE CASSETTE RECORDER RUNNING BEFORE TYPING THE LAST CHARACTER OF THE C, O, I, OR L COMMANDS, SINCE THE LAST CHARACTER IS WHAT STARTS THE TRANSFER GOING. IF AN É IS PRINTED AFTER THE TRANSFER IS MADE ON A C, I, OR L COMMAND, THIS INDICATES AN ERROR HAS BEEN DETECTED. OTHERWISE, THE C, OR I WILL BE PRINTED AFTER THE TRANSFER. IN THE CASE OF THE L COMMAND, IF THERE ARE NO ERRORS, THE PROGRAM WILL AUTOMATICALLY START EXECUTING AT THE STARTING ADDRESS SPECIFIED IN THE COMMAND.

THE SECOND AND THIRD BYTES OF THIS PROGRAM SPECIFY WHERE THE STACK IS LOCATED, AND SHOULD BE THE TOP OF SOME RANDOM-ACCESS MEMORY (NOT READ-ONLY MEMORY) WHICH IS NOT USED FOR OTHER THINGS. THE STACK WILL THEN EXPAND DOWN FOR ABOUT 8 OR 10 BYTES FROM THIS ADDRESS.

```
FF00
                        0005 *
                        0010 *** READ-ONLY MEMORY PROGRAM ***
FF00
FF00
                        0015 *
FF00 31 00 EC
                       0020 START LXI SP,0EC00H
                                                    SET STACK PTR.
FF03 3E 0D
                       0034
                                   MVI A.ODH
                                                    PRINT CR. LF.
FF05 CD 58 FF
                                   CALL PTCN
                        0036
FF08 3E OA
                        0038
                                   MVI A.OAH
                                   CALL PTCN
                                                    ON CONSOLE.
FFOA CD 58 FF
                        0040
                                   MVI A.'?'
                                                   PRINT "?"
FFOD 3E 3F
                        0042
                                   CALL PTCN
FFOF CD 58 FF
                        0043
                                                    ON CONSOLE.
FF12 CD 64 FF
                        0050
                                   CALL RDCN
                                                    READ KEYBOARD.
                                   CPI 'E'
FF15 FE 45
                       0060
                                                    IF E,
FF17 CC 36 FF
                        0070
                                CZ
                                        EXÉC
                                                EXECUTE A PRØGRAM.
FFIA FE 43
                                   CPI 'C'
                        0800
                                                    IF C.
FF1C CC BO FF
                        0090
                                   CZ
                                        CIÑR
                                                 GØ TØ INPUT RØUTINE.
FF1F FE 53
                                   CPI 'S'
                        0100
                                                   IF S.
FF21 CC 73 FF
                                   CZ
                                        CSYNC
                                                GØ TØ SYNC GEN.
                        0110
                                   CPI 'Ø'
FF24 FE 4F
                        0120
                                                    IF 0.
FF26 CA 7B FF
                                        COUTR
                                                    GØ TØ CASS ØUT.
                       0130
                                   JZ
FF29 FE 49
                       0140
                                   CPI
                                        1 I 1
                                                   IF I,
FF2B CC BO FF
                                         CINR
                                                 GØ TØ CASS IN.
                        0150
                                   CZ
                                   CPI
                       0160
FF2E FE 4C
                                        * L *
                                                    IF L.
FF30 CC BO FF
                        0170
                                   CZ
                                         Ĉ I ÑR
                                                 DØ A LØAD & GØ.
FF33 C3 OO FF
                        0200
                                    JMP START
                                                    START ØVER.
FF36
                        6000 *
FF36
                        6010 *** EXECUTE THE PRØGRAM AT THE ADDRESS ***
FF36
                        6020 *
FF36 CD 3A FF
                       6030 EXEC CALL AHEX
                                                 READ ADDRESS FROM KB.
FF39 E9
                                                  JUMP TØ IT.
                        6040
                                   PCHL
FF3A
                        7000 *
FF3A
                        7002 *** CONVERT UP TO 4 HEX DIGITS TO BINARY *
FF3A
                        7004 *
                      7005 AHEX LXI H,0
FF3A 21 00 00
                                                GET A 16-BIT ZERØ.
FF3D OE 04
                         7008
                                   MV I
                                         C • 4
                                                COUNT OF 4 DIGITS.
FF3F CD 64 FF
                        7009 AEE1
                                   CALL RDCN
                                               READ A BYTE.
FF42 29
                        7010
                                   DAD H
                                                SHIFT 4 LEFT.
FF43 29
                         7012
                                   DAD H
FF44 29
                                   DAD H
                        7014
FF45 29
                        7016
                                   DAD H
                                                CONVERT TO BINARY.
FF46 CD 50 FF
                        7018
                                   CALL AHSI
FF49 85
                        7020
                                   ADD L
FF4A 6F
                        7022
                                   MØV LA
FF4B OD
                        7024
                                   DCR C
                                               4 DIGITS?
FF4C C2 3F FF
                        7026
                                                KEEP READING .
                                   JNZ AHE!
FF4F C9
                        7028
                                   RET
                                               RETURN FROM AHEX.
FF50
                        7100 *
FF50
                        7102 *** CONVERT AN ASCII DIGIT TO HEX ***
FF50
                        7104 *
                        7106 AES1
FF50 D6 30
                                   SUI 48
                                                ASCII BIAS.
FF52 FE OA
                        7108
                                    CPI 10
                                                DIGIT 0-10
                        7110
FF54 D8
                                   RC
FF55 D6 07
                         7112
                                    SUI
                                               ALPHA BIAS.
FF57 C9
                         7114
                                    RET
                                               RETURN FROM AHSI.
FF58
                         8000 *
FF58
                         8002 *** PRINT REGISTER A ØN CONSØLE ***
```

```
8102 *** READ FROM CONSOLE TO REGISTER A ***
 FF64
                             9102 *** SYNC CEDE GENERATER PREGRAM ***
 FF73
9202 *** CASSETTE INTERFACE @UTPUT R@UTINE ***
 FF7B

      FFB0
      9302 *** CASSELLE ....

      FFB0
      9304 *

      FFB0 F5
      9310 CINR PUSH PSW SAVE CØNTRØL CHAR.

      FFB1 3E 10
      9320 MVI A.10H USE BIT 4 IN REG A

      FFB3 D3 6E
      9330 ØUT CASC TØ RESET CASS INT.

      FFB5 CD 3A FF
      9340 CALL AHEX READ BLØCK LENGTH.

      FFB8 EB
      9350 MCHG PUT INTØ D.E.

      CALL AHEX READ STARTING ADDR

                                         CALL AHEX READ STARTING ADDRESS.
```

FFBC FFBD FFBE FFBF	E5 F5 06			9365 9370 9375 9380		PUSH PUSH MVI	H PSW B.O	GET CONTROL CHAR.  SAVE STARTING ADDRESS  UNDER CONTROL CHAR.  SET CHECKSUM = 0.
FFC1		F2	FF		CILUP		CIN	READ A BYTE FRØM CASS.
FFC4				9400 9410		MØV PØP	C.A PSW	SAVE IT IN REG C. GET CONTROL CHAR.
FFC6				9410		PUSH		SAVE IT BACK.
FFC7		43		9430		CPI	*C*	IS IT A C?
FFC9		43		9440		MØV	A,C	GET BACK DATA BYTE.
FFCA		(E)		9450		JZ	CINØ	IF C, DØN'T STØRE IT.
FFCD		4		9460			M.A	IF NØT, DØ STØRE IT.
FFCE					CINØ	ADD	В	ADD TØ CHECKSUM.
FFCF				9480		MØV	В,А	
FFDO				9490			H	INCREMENT PØINTER.
FFD1	13			9500		DCX	D	DECREMENT COUNTER.
FFD2	97			9510		SUB	A	CLEAR A.
FFD3	BA			9520		CMP	D	IF D NØT = $0$ .
FFD4	C2	C 1	FF	9530		JNZ	CILØP	READ MORE.
FFD7	BB			9540		CMP	E	IF E NØT = $0$ ,
FFDE				9550		JNZ	CILØP	
FFDB		F2	FF	9560		CALL	CIN	READ LAST BYTE.
FFDE				9570		CMP		C@MPARE T@ CHECKSUM.
FFDF				9580		I VM	A, 'E'	
FFE1		ΞC		9590		JNZ		PRINT NOW IF ERROR.
FFE4				9600			PSW	RECEVER CTL CHAR.
FFE5				9610			'L'	IF IT'S NOT L.
FFE7		ΞC		9620		JNZ	CERR	DØN'T EXECUTE.
FFEA				9630		PØP	H	ØTHĒRWISE, EXECUTE
FFEB				9640		PCHL		AT STARTING ADDRESS.
FFEC					CERR		PTCN	PRINT C.E. ØR I.
FFEF				9690			START	
FFF2					CIN		CASC	READ STATUS.
FFF4				9710			10H	LØØK AT BIT 4.
FFF6				9720		JNZ	CIN	WAIT UNTIL LOW.
FFF9 FFFB		or		9730		IN	CASD	READ DATA FROM CASS.
FFFC	U 5			9740	CACD	RET	CEU	RETURN FRØM CIN.
FFFC								CASSETTE DATA PØRT. CASSETTE STATUS PØRT.
FFFC					PSW	EQU EQU		CHOSELLE SIALUS PORI.
FFFC					SP	EQU	6 6	
?				フフブブ	35	正ない	Q	
•								

5F00	0010	44 1/AN	ובאב ר	יודע מוודו	PUT RØUTINE **
5F00	0020				E IN REGISTER A. **
5F00	0030	* NØTE			OF OUTPUT OSCILLATOR
5F00	0040				TØ 4800 HZ FØR
5F00	0050				ES ØF 2400 AND 1200
5F00	0060				SPECTIVELY.
5F00	0070	* 1		ER 27, 19	
5F00 C5	0080		PUSH		SAVE REGISTERS B.C.
5F01 0E 08	0090		MVI	C,8	GET BIT COUNT.
5F03 CD 1B 5F	0100			ZERØ	DØ START BIT.
5F06 OF		LØØP	RRC		LOOK AT LSB.
5F07 DC 15 5F	0120		CC	ØNE	IF 1, DØ A 1.
5F0A D4 1B 5F	0130		CNC	ZERØ	IF 0, DØ A 0.
5FOD OD	0140		DCR	С	DECREMENT COUNTER.
5F0E C2 06 5F	0150		JNZ	LØØP	DØ ALL 8 BITS.
5F11 CD 15 5F	0160		CALL	ØNE	DØ TWØ STØP BITS.
5F14 C1	0165		PØP	В	RESTØRE B.C.
5F15 F5	0170	ØNE	PUSH	PSW	SAVE REGISTER A.
5F16 3E 00	0180		MUI	A • 0	GET 00000000 PATTERN.
5F18 C3 1E 5F	0190		JMP	REST	DØ REST ØF IT.
5F1B F5	0200	ZERØ	PUSH	PSW	SAVE REGISTER A.
5F1C 3E 55	0210		MUI	A,55H	GET 01010101 PATTERN.
5F1E CD 23 5F	0220	REST	CALL	CØUT	<b>ØUTPUT TØ CASSETTE.</b>
5F21 F1	0230		PØP	PSW	RESTØRE REGISTER A.
5F22 C9	0240		RET		RETURN.
5F23 F5	0250	CØUT	PUSH	PSW	SAVE REGISTER A.
5F24 DB 6E	0260	ØLØØP	IN	CASC	READ CASS. STATUS.
5F26 E6 20	0270		ANI	20H	LOOK AT OUT RDY BIT.
5F28 C2 24 5F	0280		JNZ	ØLØØP	WAIT TILL READY.
5F2B F1	0290	**	PØP	PSW	RESTØRE REGISTER A.
5F2C D3 6F	0300		ØUT	CASD	OUTPUT TO CASSETTE.
5F2E C9	0310		RET		RETURN FRØM CØUT.
5F2F		CASC	EQU	6EH	CASS STATUS PORT.
5F2F		CASD	EQU	6FH	CASS DATA PORT.
5F2F	0340		EQU	6	Unid Dain Pull
5F2F	0350		EQU	6	
?	0330	S.F	11 W U	9	

The frequency of the output oscillator may be changed from it's normal value of 3000 hz to 4800 hz by putting a resistor of about 14 kohms in parallel with R6 (27 kohm).

```
0010 ** KANSAS CITY INPUT ROUTINE **
5F40
                            0020 ** READS ONE BYTE INTO REGISTER A. **
5F40
                            0022 * NØTE: IN ØRDER TØ USE THIS RØUTINE,
5F40
                            0025 * MAKE THE CHANGES ON YOUR BOARD
5F40
                            0026 * AS SHOWN IN THE DIAGRAM BELOW.
5F40
5F40
                            0030 *
                                         PUSH B
                                                       SAVE B.C.
5F40 C5
                            0034
                            0035 BLIN
                                         MVI C.8
                                                       SET COUNT=8 BITS.
5F41 OE 08
                                         MV I
                                               A,10H
                                                      RESET RECEIVER.
5F43 3E 10
                            0038
                                               CASC
                                         ØUT
5F45 D3 6E
                            0039
                                         CALL CASIN
                                                      READ A BYTE (BIT).
5F47 CD 73 5F
                            0040 BL00P
                                               3CH
                                                       LOOK AT MIDDLE 4 BITS.
5F4A E6 3C
                            0050
                                         ANI
5F4C CA 65 5F
                                         JΖ
                                               ØNE
                                                       IF XX0000XX, BIT=1.
                            0060
                                                       IF XX11111XX, BIT=1.
5F4F FE 3C
                            0070
                                         CPI
                                               3CH
5F51 CA 65 5F
                            0080
                                         JZ
                                               ØNE
5F54 FE 14
                            0090
                                         CPI
                                               14H
                                                       IF XX0101XX, BIT=0.
5F56 CA 61 5F
                            0100
                                         JZ
                                               ZERE
5F59 FE 28
                                         CPI
                                               28H
                                                       IF XX1010XX, BIT=0.
                            0110
                                               ZERØ
5F5B CA 61 5F
                            0120
                                         JΖ
                                                       MUST BE NEISE .
                                               BLIN
                                         JMP
5F5E C3 41 5F
                            0130
5F61 BF
                                         CMP
                                                       CLEAR CARRY.
                            0140 ZER0
                                               Α
5F62 C3 66 5F
                            0150
                                         JMP
                                               REST
                                                       DØ REST LIKE ØNE.
                                         STC
                                                       SET CARRY=1.
5F65 37
                            0170 ØNE
                                                       GET RESULT.
5F66 78
                            0180 REST
                                         MEV
                                               A \cdot B
5F67 1F
                                                       SHIFT CARRY INTO MSB.
                            0190
                                         RAR
                                         MØV
5F68 47
                            0200
                                               B,A
                                                       PUT RESULT BACK.
                                               С
                                                       DONE WITH BYTE?
5F69 OD
                            0210
                                         DCR
5F6A C2 47 5F
                                               BL@@P
                                                       IF NØT, KEEP READING.
                            0220
                                         JNZ
                                                       READ AN EXTRA BYTE.
5F6D CD 73 5F
                            0230
                                         CALL CASIN
                                               A.B
5F70 78
                            0240
                                         MØV
                                                       GET RESULT.
5F71 C1
                                                       RESTORE B.C.
                            0250
                                         PØP
                                               В
5F72 C9
                            0260
                                         RET
                                                       RETURN.
5F73 DB 6E
                                               CASC
                            0270 CASIN
                                         IN
                                                       READ CASS STATUS.
                                               10H
                                                       LOOK AT INPUT BIT.
5F75 E6 10
                            0280
                                         ANI
5F77 C2 73 5F
                            0290
                                         JNZ
                                               CASIN
                                                       WAIT TILL READY.
5F7A DB 6F
                                                       READ DATA BYTE.
                            0300
                                         IN
                                               CASD
5F7C C9
                            0310
                                         RET
                                                       RETURN FROM CASIN.
5 F 7 D
                                                       STATUS/CENTREL PERT.
                            0400 CASC
                                         EQU
                                               6Eh
5F7D
                            0410 CASD
                                         EQU
                                               6FH
                                                       DATA PØRT.
                                     1 1
                                              Cut the traces going to pins
                       IC 9 10
                                     2
                                               1 and 2 of IC 9, install a 74L30 in one of the spare
                                     3
               9
                                                 slots, and make the circuit
                                     5
                                        IC 10
                                                  look like this.
                                     6
                                        74L30
                                     11
                IC 9
                                     12
                       IC 9
                                     4
                                                      IC 25
                                                                   TO IC 35 Pin 13
                                     1
                                     5
                                                   This change will not
                                     2
                                                   affect the normal operation
                                     3
                                                   at 187 bytes/sec.
                       IC 9
                                        New
                                               8
                                     4
                                        74L30
                              1 K
```

~~~

```
0005 *
5E00
                           0010 *** READ-GNLY MEMORY PROGRAM ***
5E00
                           0015 * M@DIFIED F@R KANSAS-CITY *
5E00
                           0016 *
5E00
                           0020 START LXI
                                                         SET STACK PTR.
5E00 31 00 60
                                            SP,6000H
5E03 3E 0D
                           0034
                                       I VM
                                            AJODH
                                                         PRINT CR, LF.
5E05 CD 58 5E
                                       CALL PTCN
                           0036
5E08 3E 0A
                           0038
                                       MV I
                                            AAO.A
5E0A CD 58 5E
                           0040
                                       CALL PTCN
                                                         en consele.
5E0D 3E 3F
                                       I VM
                                            A,'?'
                                                         PRINT "?"
                           0042
5EOF CD 58 5E
                           0043
                                       CALL PTCN
                                                         ON CONSOLE.
5E12 CD 64 5E
                           0050
                                       CALL RDCN
                                                         READ KEYBOARD.
5E15 FE 45
                           0060
                                       CPI
                                            'E'
                                                        IF E.
5E17 CC 36 5E
                                       CZ
                                                     EXECUTE A PRØGRAM.
                           0070
                                            EXEC
                                                        IF C,
5E1A FE 43
                                       CPI
                                           . * C *
                           0800
5EIC CC 9F 5E
                                                      GØ TØ INPUT RØUTINE.
                           0090
                                            CINR
                                       CZ
                                                        IF S.
5EIF FE 53
                           0100
                                       CPI
                                            'S'
                                            CSÝNC
5E21 CC 73 5E
                                       CZ
                                                     GØ TØ SYNC GEN.
                           0110
5E24 FE 4F
                           0120
                                       CPI
                                            • Ø •
                                                        IF Ø,
5E26 CA 7B 5E
                                            COUTR
                                                         GØ TØ CASS ØUT.
                           0130
                                       JΖ
                                            • I •
5E29 FE 49
                           0140
                                       CPI
                                                        IF I,
5 E2B CC 9F 5E
                                            CINR
                           0150
                                       CZ
                                                     GØ TØ CASS IN.
5E2E FE 4C
                           0160
                                       CPI
                                            ·L.
                                                        IF L,
5E30 CC 9F 5E
                           0170
                                       CZ
                                            CIŃR
                                                     DØ A LEAD & GO.
5E33 C3 00 5E
                                            START
                                                         START ØVER.
                           0200
                                       JMP
5E36
                          -6000 *
5 E 3 6
                           6010 *** EXECUTE THE PROGRAM AT THE ADDRESS ***
5 E 3 6
                           6020 *
5E36 CD 3A 5E
                           6030 EXEC CALL AHEX
                                                      READ ADDRESS FRØM KB.
5E39 E9
                                       PCHL
                                                      JUMP TØ IT.
                           6040
5E3A
                           7000 *
                           7002 *** CONVERT UP TO 4 HEX DIGITS TO BINARY *
5E3A
5 E 3 A
                           7004 *
5E3A 21 00 00
                           7005 AHEX
                                       LXI
                                            H 
ildot 0
                                                    GET A 16-BIT ZERØ.
5E3D OE 04
                           7008
                                       MVI
                                            C • 4
                                                    COUNT OF 4 DIGITS.
5E3F CD 64 5E
                                       CALL RDCN
                                                    READ A BYTE.
                           7009 AHE1
5E42 29
                           7010
                                       DAD
                                            H
                                                    SHIFT 4 LEFT.
5E43 29
                                       DAD
                           7012
                                            H
5E44 29
                           7014
                                       DAD
                                            Η
5E45 29
                           7016
                                       DAD
                                            H
5E46 CD 50 5E
                                                    CONVERT TO BINARY.
                           7018
                                       CALL AHSI
5E49 85
                           7020
                                       ADD
5E4A 6F
                           7022
                                       MØV
                                            L,A
5E4B 0D
                           7024
                                                    4 DIGITS?
                                       DCR
                                            C
5E4C C2 3F 5E
                           7026
                                       JNZ
                                                    KEEP READING.
                                            AHEI
5E4F C9
                           7028
                                       RET
                                                    RETURN FROM AHEX.
5E50
                           7100 *
5E50
                           7102 *** CONVERT AN ASCII DIGIT TO HEX ***
5E50
                           7104 *
5E50 D6 30
                           7106 AHS1
                                       SUI
                                                    ASCII BIAS.
                                            48
5E52 FE 0A
                           7108
                                       CPI
                                            10
                                                    DIGIT 0-10
5E54 D8
                           7110
                                       RC
5E55 D6 07
                           7112
                                       SUI
                                                    ALPHA BIAS.
5E57 C9
                           7114
                                       RET
                                                    RETURN FROM AHSI.
5 E 5 8
                           8000 *
5 E 5 8
                           8002 *** PRINT REGISTER A ON CONSOLE ***
5 E 5 8
                           8004 *
```

2,

```
5E58 F5
                                                                                       8006 PTCN PUSH PSW SAVE REG A.
8008 PTLØP IN CØNC READ PRINTER STATUS.
8010 ANI 80H IF BIT 7 NØT 0,
8012 JNZ PTLØP WAIT TILL IT IS.
  5E5B E6 80
5F5D CO
   5E5D C2 59 5E
                                                                                                                         PØP PSW
ØUT CØND
                                                                                       8014
                                                                                                                                                                                   THEN RECOVER A.
   5E60 F1
                                                                                                                                                                           AND PRINT IT.
                                       8016 ØUT CØND AND PRINT IT.
8018 RET RETURN FRØM PTCN.
8100 *
8102 *** READ FRØM CØNSØLE TØ REGISTER A ***
8104 *
8106 RDCN IN CØNC READ KEYBØARD STÆ
8108 ANI 1 IF BIT 1 NØT O.
   5E61 D3 01
                                                                                                                                                                                  RETURN FROM PTCN.
   5E63 C9
   5E64
   5E64
   5E64
   5E64 DB 00
                                                                                                                                                                                  READ KEYBØARD STATE

        5E66
        E6
        O1
        8108
        ANI
        1
        IF BIT 1 NØT

        5E68
        C2
        64
        5E
        8110
        JNZ RDCN
        REPEAT UNTIL

        5E6B
        DB
        O1
        8112
        IN CØND
        READ FRØM KEN

        5E6D
        E6
        7F
        8114
        ANI 7FH
        STRIP ØFF MSE

        5E6F
        CD
        58
        5E
        8115
        CALL PTCN
        ECHØ ØNTØ PR

        5E72
        C9
        8116
        RET
        RETURN FRØM F

        5E73
        8120
        CØNC EQU O
        CØNSØLE STATU

        5E73
        9100 *
        **** SYNC CØDE GENERATØR PRØGRAM ***

        5E73
        9103 *

        5E73
        9103 *

        5E75
        CD
        9C
        5E

        5E75
        CD
        9C
        5E
        9106
        CALL CØUT
        ØNTØ CASSETTE

        5E78
        C3
        73
        5E
        9108
        JMP CSYNC
        KEEP DØING IT

        5E7B
        PRØF
        PRØF
        PRØF
        PRØF
        PRØF
        PRØF

                                                                                                                                                                         REPEAT UNTIL IT IS.
READ FROM KEYBOARD.
STRIP OFF MSB.
ECHO ONTO PRINTER.
                                                                                                                                                                                  RETURN FRØM RDCN.
                                                                                                                                                                                  CONSOLE STATUS PORT
                                                                                                                                                                                  CONSOLE DATA PORT.
                                                                                                                                                                                      WRITE SYNC BYTE
                                                                                                                                                                                   ONTO CASSETTE.
KEEP DØING IT.
                                                                                                                                                                                   GET DATA FROM MEMON
                                                                                                                                                                                  GET ANOTHER COMMAND
. CASS INT.

READ BLOCK LENGTH.

PUT INTO D.E.

CALL AHEX READ STARTING ADDRE

9365 POP PSW GET CONTROL CHAR.

9370 PUSH H SAVE STARTING ADDRE

9375 PUSH PSW UNDER CONTROL CHAR.

5EAE 06 00 9380 MVI B.O SET CHECKSUM = 0.

5EBO CD E1 5E 9390 CILOP CALL CIN READ A BYTE FROM CAS

5EB3 4F 9400 MOV C.A SAVE IT IN REG G-

5EB4 F1 9410 POP PSW GET CONTROL CHAR.

5EB5 F5 9420 PUSH

5EB6 FE 43

5EB6 FE 43

5EB6 79
                                                                                                                                                                      READ A BYTE FRØM CASS.
```

| 5 EB 9 | CA         | BD  | 5E  |    | 9450 |      | JZ   | CINO   | IF C. DON'T STORE IT. |
|--------|------------|-----|-----|----|------|------|------|--------|-----------------------|
| 5 EBC  | 77         |     |     |    | 9460 |      | MØV  | M.A    | IF NOT, DØ STØRE IT.  |
| 5EBD   | 80         |     |     | 3) | 9470 | CINØ | ADD  | В      | ADD TØ CHECKSUM.      |
| 5EBE   | 47         |     |     |    | 9480 |      | MØV  | B.A    |                       |
| 5EBF   | 23         |     |     |    | 9490 |      | INX  | H      | INCREMENT POINTER.    |
| 5EC0   | <b>1</b> B |     |     |    | 9500 |      | DCX  | D      | DECREMENT COUNTER.    |
| 5EC1   | 97         |     |     |    | 9510 |      | SUB  | A      | CLEAR A.              |
| 5EC2   | BA         |     |     |    | 9520 |      | CMP  | D      | IF D NØT = $0$ .      |
| 5EC3   | C2         | B0  | 5 E |    | 9530 |      | JNZ  | CILØP  | READ MØRE.            |
| 5EC6   | BB         |     |     |    | 9540 |      | CMP  | E      | IF E NØT = $0$ ,      |
| 5EC7   | C2         | B0  | 5 E |    | 9550 |      | JNZ  | CILOP  | READ MØRE.            |
| 5ECA   | CD         | E 1 | 5E  |    | 9560 |      | CALL | CIN    | READ LAST BYTE.       |
| 5ECD   | B8         |     |     |    | 9570 |      | CMP  | В      | COMPARE TO CHECKSUM.  |
| 5 ECE  | 3E         | 45  |     |    | 9580 |      | MVI  | A, 'E' | PRINT E FØR ERRØR.    |
| 5EDO   | C2         | DB  | 5E  |    | 9590 |      | JNZ  | CERR   | PRINT NOW IF ERROR.   |
| 5 ED 3 | F 1        |     |     |    | 9600 |      | PØP  | PSW    | RECOVER CTL CHAR.     |
| 5ED4   | FE         | 4 C |     |    | 9610 |      | CPI  | 'L'    | IF IT'S NOT L.        |
| 5 ED6  | C2         | DB  | 5E  |    | 9620 |      | JNZ  | CERR   | DØN'T EXECUTE.        |
| 5 ED 9 | E 1        |     |     |    | 9630 |      | PØP  | H      | OTHERWISE, EXECUTE    |
| 5 EDA  | E9         |     |     |    | 9640 |      | PCHL |        | AT STARTING ADDRESS.  |
| 5 EDB  | CD         | 58  | 5E  |    | 9660 | CERR | CALL | PTCN   | PRINT C.E. ØR I.      |
| 5 EDE  | СЗ         | 00  | 5E  |    | 9690 |      | JMP  | START  |                       |
| 5 EE 1 | СЗ         | 40  | 5F  |    | 9700 | CIN  | JMP  | 5F40H  | GØ TØ BLIN.           |
| 5EE4   |            |     |     |    | 9996 | CASD | EQU  | 6FH    | CASSETTE DATA PORT.   |
| 5EE4   |            |     |     |    | 9997 | CASC | EQU  | 6EH    | CASSETTE STATUS PØRT. |
| 5EE4   |            |     |     |    | 9998 | PSW  | EQU  | 6      |                       |
| 5 EE 4 |            |     |     |    | 9999 | SP   | EQU  | 6      |                       |
| ?      |            |     |     |    |      |      |      |        |                       |
|        |            |     |     |    |      |      |      |        |                       |

# THE TARBELL CASSETTE INTERFACE

TARBELL ELECTRONICS 20620 S. Leapwood Ave., Suite P Carson, California 90746 (213) 538-4251

### TABLE OF CONTENTS

### PAGE

- 1. Specifications
- Interface History and Sales Pitch
- Selecting a Cassette Unit for Digital Recording
- The Kansas City (Byte/Lancaster/CUTS) Format
- Parts List
- 6. Assembly Instructions
- Assembly Drawings
- 8. Modifications
- 9. Soldering, Cleaning, and Installation Notes
- 10. Initial Adjustment Instructions
- 11. Operating Instructions
- 12. Bootstrap and Sync Code Generator Programs
- 13. Output Routine With Checksum
- 14. Input Routine With Checksum
- 15. How to Save and Load Data From a BASIC Program
- 16. Controlling the Start-Stop Function
- 17. Theory of Operation Output Section
- 18. Theory of Operation Input Section
- 19. Schematic Output Section
- 20. Schematic Input Section
- 21. Timing Diagram
- 22. Pin Function List
- 23. If You Have Problems
- 24. Ideas For Using the Cassette Interface
- 25. Modifications on Cassette BASIC CSAVE and CLOAD
- 26. Processor Technology Software Package #1 Modified
- 27. Writing Programs For the Cassette Interface
- 28. Interrupt Control
- 29. PHI-DECK Adapter Information
- 30. 74L00, 7403, 74L11, 7404, 74L04, 7406, 7425, 7408, 74L30 31. 74L73, 7473, 74L74 32. 74L75, 74L86 33. 7496, DM8131 34. 74L164, NE555

- 35.8T20
- 36. Customer Evaluation and Registration

# TARBELL ELECTRONICS 20620 S. Leapwood Ave., Stito P Carson, California 90746 (213) 538-4251

THE TARBELL CASSETTE INTERFACE (FOR ALTAIR 8800 USERS)

SPEED: UP TO 540 BYTES PER SECOND (2200 BITS PER INCH).

187 BYTES PER SECOND FOR TARBELL STANDARD 800 BITS/INCH.
30 BYTES PER SECOND FOR "BYTE/LANCASTER" STANDARD.

ENCODING METHOD: PHASE-ENCODED (EXCLUSIVE-OR OF CLOCK AND DATA).

SELF-CLOCKING (CLOCK VARIES ALONG WITH TAPE SPEED).

USED ON MY OWN SYSTEM FOR THE LAST 4 YEARS.

CAN BE USED TO GENERATE "BYTE/LANCASTER" TAPES.

CASSETTE: WILL WORK WITH MOST AUDIO CASSETTE UNITS. MAY BE ADAPTED TO AUTOMATIC DIGITAL CASSETTE UNITS. WILL ALSO WORK WITH REGULAR REEL-REEL TAPE RECORDERS. I HAVE BEEN USING A REALISTIC (RADIO SHACK) CTR-19 AND A J.C. PENNY 6536 (\$39.95). TAPE SHOULD BE OF LOW-NOISE TYPE.

8192 BYTE LOAD TIME: 15 SEC • 540 BYTES PER SECOND.

43 SEC • 187 BYTES PER SECOND.

4 MINUTES • 30 BYTES PER SECOND.

DEVICE-CODE EASILY SELECTED WITH ON-BOARD DIP-SWITCH.

STATUS: 4 EXTRA STATUS LINES AVAILABLE FOR INPUT.

CONTROL: 4 EXTRA CONTROL LINES AVAILABLE FOR OUTPUT, WHICH MAY BE USED TO DRIVE RELAYS FOR EXTRA CASSETTE UNITS.

2 SPARE IC SLOTS TO LET YOU DO YOUR OWN THING.

COMPATIBILITY: PLUGS DIRECTLY INTO ALTAIR 8800 OR IMSAI 8080.

HAS SERIAL-PARALLEL AND PARALLEL-SERIAL CONVERSION
ON BOARD. PATCHES PROVIDED FOR POPULAR SOFTWARE.

SOFTWARE: COMES WITH COMPLETE SET OF INPUT/OUTPUT SUBROUTINES, BOOTSTRAP, AND "BYTE STANDARD" (LANGASTER) SOFTWARE.

COST: \$120 FOR COMPLETE KIT, \$175 ASSEMBLED AND CHECKED-OUT.

### MANUAL:

ASSEMBLY INSTRUCTIONS AND DRAWING, PARTS AND PIN FUNCTION LISTS SOLDERING, CLEANING, AND INSTALLATION NOTES; OPERATING INSTRUCTIONS INITIAL ADJUSTMENT PROCEDURES, INPUT/OUTPUT ROUTINES WITH CHECKSUM BOOTSTRAP PROGRAM AND TEST-STREAM GENERATOR PROGRAM

### PARTS:

ALL RESISTORS, CAPACITORS, AND INTEGRATED CIRCUITS
CASSETTE CABLE, RIBBON CABLE, AND DIP CONNECTOR
LOW-NOISE CASSETTE WITH TEST STREAM
DOUBLE-SIDED BOARD WITH PLATED-THRU HOLES AND GOLD EDGE CONNECTOR

WARRANTY: IF NOT COMPLETELY SATISFIED, RETURN BOARD FOR REFUND OR FREE REPAIR WITHIN 90 DAYS AFTER PURCHASE.

FIRST DELIVERIES WERE MADE IN SEPTEMBER, 1975. DELIVERY IS 1 TO 3 WEEKS AFTER RECEIVING ORDER. THE 25-PAGE MANUAL IS AVAILABLE AT \$4. CALIFORNIA RESIDENTS PLEASE ADD 6% SALES TAX. MAKE CHECK OR MONEY ORDER PAYABLE TO TARBELL ELECTRONICS.

### HISTORY AND SALES PITCH

I HAVE BEEN USING AN INEXPENSIVE AUDIO CASSETTE RECORDER IN MY HOME-DESIGNED COMPUTER SYSTEM SINCE 1972. I HAVE OVER 600 FILES ON CASSETTES, MOSTLY ABOUT 4 KBYTES EACH. MY ESTIMATE IS THAT THE ERROR RATE IS LESS THAN 1 ERROR IN 1,000,000 BITS. I SAY THIS BECAUSE I CAN USUALLY RECORD 30 4 KBYTE FILES ON ONE SIDE OF A C-60 CASSETTE WITHOUT ANY ERRORS. THIS INTERFACE GAVE ME VERY GOOD SERVICE WHILE I WAS WRITING THE DISK OPERATING SYSTEM FOR MY 500 KBYTE DISK. SINCE I STARTED USING MY DISK SYSTEM A FEW YEARS AGO, THE CASSETTE HAS SERVED AS BACKUP STORAGE - A RELIABLE PLACE TO STORE DATA AND PROGRAMS AFTER THEY ARE DEBUGGED.

THE ENCODING METHOD I USE IS VERY SIMPLE, AND HAS BEEN IN USE IN INDUSTRY FOR QUITE SOME TIME. PICTURE A SHIFT REGISTER WHICH IS LOADED WITH THE DATA TO BE RECORDED. THE REGISTER IS THEN CLOCKED WITH A SQUARE WAVE. THE OUTPUT OF THE SHIFT REGISTER IS EXCLUSIVE-ORED WITH THE CLOCK, PRODUCING THE BI-PHASE DATA. THIS DATA GOES DIRECTLY TO THE CASSETTE RECORDER'S INPUT. THE MOST DIFFICULT PART OF THE PROCESS IS RECOVERING THE DATA. MANY LONG HOURS WERE SPENT STUDYING THIS PROBLEM AND TRYING DIFFERENT METHODS. IN THE ORIGINAL INTERFACE THIS WAS ACCOMPLISHED WITH A 760 HIGH-SPEED COMPARATOR, A 74121 NON-RETRIGGERABLE ONE-SHOT, AND A DOUBLE-GLITCH GENERATOR MADE WITH AN EXCLUSIVE-OR GATE. SINCE THEN, THE 8T20 HAS BEEN DEVELOPED, WHICH COMBINES THESE THREE FUNCTIONS ON A SINGLE CHIP, AND IS THE UNIT USED IN THE ALTAIR INTERFACE.

THE PRESENT DESIGN IS EVEN MORE RELIABLE THAN THE PREVIOUS ONE. AND IS CAPABLE OF RECORDING AND RECOVERING ERROR-FREE DATA AT A RATE OF 540 BYTES PER SECOND ON A STANDARD AUDIO CASSETTE (YES, THAT IS OVER 2200 BITS PER INCH!) I AM STILL, HOWEVER, ENCOURAGING USERS TO EXCHANGE DATA RECORDED AT 187 BYTES PER SECOND (1500 BITS PER SECOND, 800 BITS PER INCH). THE MAIN ADVANTAGE OF THIS METHOD OVER OTHERS IS IT'S ABILITY TO WITHSTAND A LARGE AMOUNT OF WOW AND FLUTTER, WHICH MAY BE INTRODUCED BY CHEAP RECORDERS, AND STILL RECOVER THE DATA RELIABLY. THIS FEATURE STEMS FROM THE SELF-CLOCKING NATURE OF THE RECORDED SIGNAL: THE RECOVERED CLOCK VARIES RIGHT ALONG WITH THE DATA, SO THAT THE SPEED VARIATIONS ARE ESSENTIALLY IGNORED. THE MAIN DISADVANTAGE OF THIS METHOD IS THAT IT REQUIRES GOOD LOW-NOISE TAPE, AND A DECENT FREQUENCY RESPONSE ON THE CASSETTE UNIT. THE CASSETTE UNIT I'VE BEEN USING LATELY (J.C. PENNY #6536) HAS A FREQUENCY RESPONSE OF THE MOST IMPORTANT PART IS THE HIGH END. THESE 80-8,000 HZ. REQUIREMENTS ARE DUE TO THE HIGH SPEED OF THE INTERFACE, AND WOULD BE THE SAME FOR ANY HIGH SPEED DEVICE.

THE SPEED MAY NOT SEEM VERY IMPORTANT TO YOU NOW. BUT A GOOD PORTION OF YOUR TIME IS GOING TO BE SPENT SAVING AND LOADING DATA, PROGRAMS, AND OTHER TEXT. THERE IS A WORLD OF DIFFERENCE BETWEEN LOADING BASIC AT SAY, 30 BYTES/SEC (4 MINUTES), AND AT 187 BYTES/SEC (40 SEC). IT DOESN'T SEEM LIKE MUCH, BUT WHEN YOU HAVE TO DO IT OVER, AND OVER, AND OVER.... IT GETS TO BE A BIT MUCH. ESPECIALLY WHEN YOU'RE DEVELOPING YOUR OWN PROGRAMS, AND THEY TEND TO RUN AMUCK AND WIPE OUT CORE. THINK ABOUT IT, THEN BUY THE TARBELL CASSETTE INTERFACE. THE ONLY METHOD PROVEN WITH TIME. ASK YOUR FRIEND WHO HAS ONE.

SELECTING A CASSETTE UNIT FOR DIGITAL RECORDING

FIRST OF ALL, THE MOST EXPENSIVE CASSETTE RECORDERS ARE NOT NECESSARILY THE BEST FOR RECORDING DIGITAL DATA. THERE ARE SEVERAL FACTORS THAT COMBINE TO MAKE A GOOD UNIT FOR THE HOBBYIST:

- 1. IT SHOULD HAVE A GOOD HIGH-FREQUENCY RESPONSE, PREFERABLY UP TO AT LEAST 8,000 HZ.
- 2. IT SHOULD HAVE A TONE CONTROL, SO THAT THE INHERENT FREQUENCY RESPONSE MAY BE REALIZED.
- 3. ALTHOUGH AUTOMATIC VOLUME CONTROL IS MORE CONVENIENT FROM AN OPERATIONAL POINT OF VIEW, IT ALSO REQUIRES A FEW SECONDS OF SETTLING TIME BEFORE STARTING TO RECORD.
- 4. IF IT DOES NOT HAVE AUTOMATIC VOLUME CONTROL, IT IS GOOD TO HAVE A RECORDING LEVEL METER. THIS ALLOWS EASIER ADJUSTMENT FOR THE CORRECT RECORDING LEVEL.
- 5. IT IS VERY IMPORTANT TO HAVE A DIGITAL COUNTER. THIS MAKES IT POSSIBLE TO QUICKLY LOCATE THE DESIRED PROGRAM AMONG SEVERAL.
- 6. IT SHOULD BE CAPABLE OF RUNNING DIRECTLY ON THE AC LINE. BATTERIES TEND TO MAKE THE MOTOR GET SLOWER AS THEY WEAR.
- 7. IT IS HANDY TO HAVE AN AUXILLIARY INPUT, SO THAT A FAIRLY HIGH LEVEL MAY BE FED TO THE RECORDER, AND NOISE KEPT TO A MINIMUM.
- 8. A REMOTE INPUT JACK IS VALUABLE TO CONTROL START-STOP DURING ASSEMBLER AND COMPILER OPERATIONS.
- 9. JACKS FOR MIC, AUX, REMOTE, AND EARPHONE ARE USUALLY INCLUDED, BUT YOU SHOULD CHECK TO MAKE SURE THEY ARE THERE, ANYWAY.
- 10. LOW WOW AND FLUTTER CHARACTERISTICS ARE IMPORTANT, BUT ARE MUCH MORE IMPORTANT WHEN USING AN ASYNCRONOUS INTERFACE, WHICH IS NOT SELF-CLOCKING.
- 11. IF IT IS DESIRED TO DO AUTOMATIC REWIND, FAST-FORWARD, AND RECORD/PLAYBACK SWITCHING UNDER PROGRAM CONTROL, YOU MUST PURCHASE A RECORDER THAT HAS THESE FACILITIES. ANOTHER FEATURE TO LOOK FOR ON THIS TYPE OF UNIT IS A WAY TO KEEP TRACK OF WHERE YOU ARE ON THE CASSETTE TAPE.
- 12. PEOPLE HAVE EXPERIENCED PROBLEMS WITH PANASONIC RECORDERS.

  I AM PRESENTLY RECOMMENDING THE J.C. PENNEY MODEL 6536
  AT \$39.95 AS THE BEST BUY I KNOW, AND SEVERAL PEOPLE ARE
  USING THEM WITH MY INTERFACE WITH GOOD RESULTS. OTHER
  BRANDS THAT I KNOW HAVE BEEN SUCCESSFUL ARE SONY AND REALISTIC.

OF COURSE, NONE OF THE ABOVE ITEMS IS ABSOLUTELY NECESSARY FOR RECORDING DIGITAL DATA ON AN AUDIO CASSETTE. BUT THE MORE OF THESE REQUIREMENTS THAT ARE FILLED, THE MORE CAPABLE YOUR UNIT WILL BE, AND THE EASIER IT WILL BE TO USE.

Some time ago, there was a meeting of various cassette interface manufacturers to determine a standard for exchange of programs and data on cassettes among computer hobbyists. The format that was proposed as a result of the meeting is a modified version of the coding technique described by Don Lancaster in the first issue of "BYTE" Magazine. In this format, each 8-bit byte is written on tape in an asyncronous format, with one start bit (zero), 8 data bits (zero or one), and two stop bits (ones). A one is defined as 8 cycles at 2400 bits per second, and a zero is defined as 4 cycles at 1200 bits per second. This provides a data transfer speed of 300 band, or a little less than 30 bytes per second, and may be generated and decoded using a variety of techniques.

Since the standard is fairly slow, it suggests that many people may want to have two methods available. One that provides for the Kansas City (BYTE/Lancaster) format, and another that is much faster, to speed program loading and development. The Tarbell Cassette Interface may easily be modified for both methods.

First, the output oscillator frequency will have to be raised from 3000 hz to 4800 hz. This is because a higher bit density is required of the tape, although the actual data transfer rate is much slower. A one may be generated by writing a word of all zeroes (00000000), and a zero may be generated by writing a word of alternating ones and zeroes (01010101). An output subroutine converts each byte to be written in this format from parallel to serial form (required only for this format).

On the input side, the adjustment of the potentiometer (R8) will have to be changed for the higher frequency. The sync detector circuit(IC's 9 and 10) will have to be changed so that it recognizes the alternating bit pattern as a sync byte in addition to the normal sync byte of E6 (hex). An input subroutine converts each byte from it's serial form to it's parallel form (required only for this format).

Using the method outlined above, the Tarbell Cassette Interface can be modified so that a double-pole, single-throw switch will determine which frequency will be used. The software determines the format. Another alternative is to change to the higher frequency permanently, so that no switch is necessary. The disadvantage of this is that you would have to readjust the potentiometer to read tapes made with the standard 3000 hz oscillator (187 bytes per second), and that a slightly higher frequency response is required on the part of your recorder.

A description of the hardware modifications, and listings of the subroutines for the operations described above are available upon request. Please include a self-addressed stamped envelope.


### CASSETTE INTERFACE PARTS LIST

```
INTEGRATED CIRCUITS
REF NOS
             DESCRIPTION
                                   QTY PT NO +5 GND -5
 1
             QUAD 2-INPUT AND
                                     1
                                       7408-
                                                14
                                                    7
 2
             DUAL J-K FLIP-FLOP
                                     1 7473
                                                4 11
 3
             8-BIT SHIFT REGISTER
                                     1 741164 - 14
                                                    7
             DUAL TYPE-D FLIP-FLOP
                                     2 74L74 + 14
 4,23
             5-VOLT REGULATOR
                                     1 LM309K -
                                    4 7403 + 14
 7,13,19,25
             QUAD 2-INPUT NAND 0/C
                                                    7
             DUAL J-K FLIP-FLOP 2 74L73
 8.29
                                                4 11
             BI-DIRECTIONAL ONE-SHOT 1 8T20 -
 5
                                                16
                                                    8
                                2 74L04 14
                                                    7
 9.31
            HEX INVERTER
 10
             8-INPUT NAMD
                                     1 74L30
                                                14
                                                    7
             TRIPLE 3-INPUT AND
 14
                                     1
                                       74L11 - 14
                                                    7
 20
                                      1 7404 - 14
            HEX INVERTER
            5-BIT SHIFT REGISTER
                                     2 7496 4
 21,27
                                                    12
                                       NE555 - 8
- 55
            *TIMER
                                                    1 .
                                       74L00 - 14
 26
             QUAD 2-INPUT NAND
                                                    7
 28
            DUAL 4-INPUT NOR
                                       7425 - 14
                                                    7
 30
             QUAD EXCLUSIVE-OR
                                     1 74186 - 14
                                                    7
 32
                                     1 DM8131 16
             6-BIT COMPARATORS
                                                    8
                                     1 74L75 - 5
 34
             QUAD LATCH
                                                    12
 35
             HEX INVERTER BUFFER O/C 1 7406 - 14 7
-C1-C5,C10-C15 .1 MFD CAPACITOR
-C6
             .02 MFD CAPACITOR
-C7
             .033 OR .039 MFD CAPACITOR
~C8
            *.O1 MFD CAPACITOR
C9
             22 OR 25 MFD CAPACITOR
-C16
             2200 PF CAPACITOR
~C17
             •01 MFD CAPACITOR
-R1
             2.4 KORM RESISTOR (RED, YELLOW, RED)
             4.7 KOHN RESISTOR
- R2
                                (YELLOW, VIOLET, RED)
≟R3
             1.5 KOHM RESISTOR (BROWN, GREEN, RED)
-R4
             330 OHM RESISTOR (ORANGE, ORANGE, BROWN)
~ R5
            220. OHM RESISTOR IV (RED. RED. BROWN)
            *27 KOHM RESISTOR
- R6
                                 (RED, VIOLET, ORANGE)
~R7
            *APPROX 10 KOHM RESISTOR (BROWN, BLACK, ORANGE)
-R8
             50 KOHM POTENTIOMETER
- R9
             100 OHM RESISTOR (BROWN, BLACK, BROWN)
-R10-R17
             1 KOHM RESISTOR
                                (BROWN, BLACK, RED)
~CRI
             1N914 SIGNAL DIODE
CR2
             1N750 4.7 VOLT ZENER DIODE
- CR3
             LIGHT-EMITTING DIODE
 SI -
             DIP-SWITCH
 J1 -
             DIP-SOCKET
             DIP-PLUG
           2 CASSETTE COAX CABLES
           - FLAT RIBBON CABLE
PC1
             PRINTED CIRCUIT BOARD
 CS1
             SCOTCH LOW-NOISE CASSETTE

→ TO-3 INSULATING WAFER

           ~2 SETS OF 4-40 NUTS, SCREWS, AND WASHERS
```


<sup>\*</sup> THE ITEMS MARKED WITH AN ASTERISK ARE MATCHED AND BAGGED SEPARATELY. 74LS MAY BE SUBSTITUTED FOR 74L SERIES IC'S IN MOST CASES.

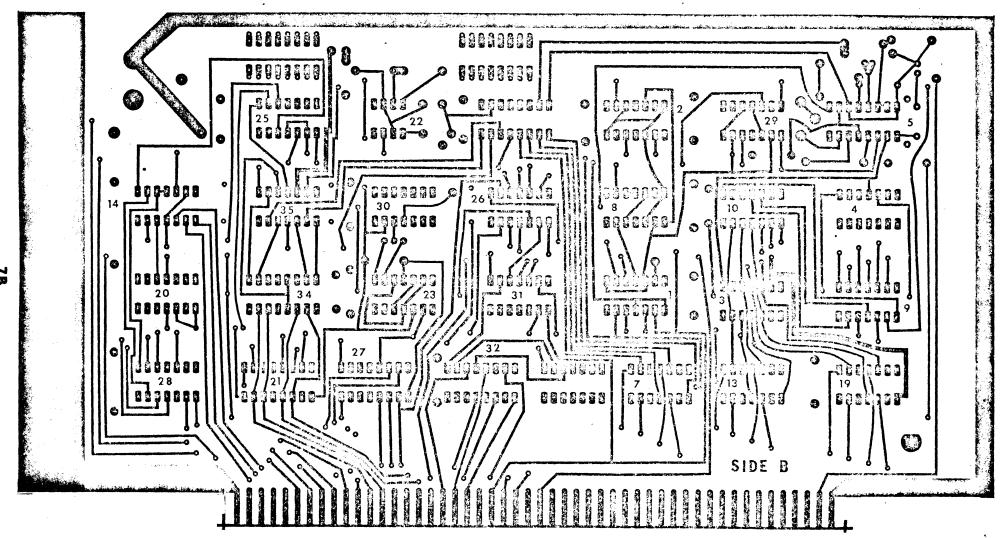

SOLDER SIDE

# ASSEMBLY DRAWING

NOTE: IC5 HAS PIN 1 IN UPPER RIGHT, REST IN LOWER LEFT.

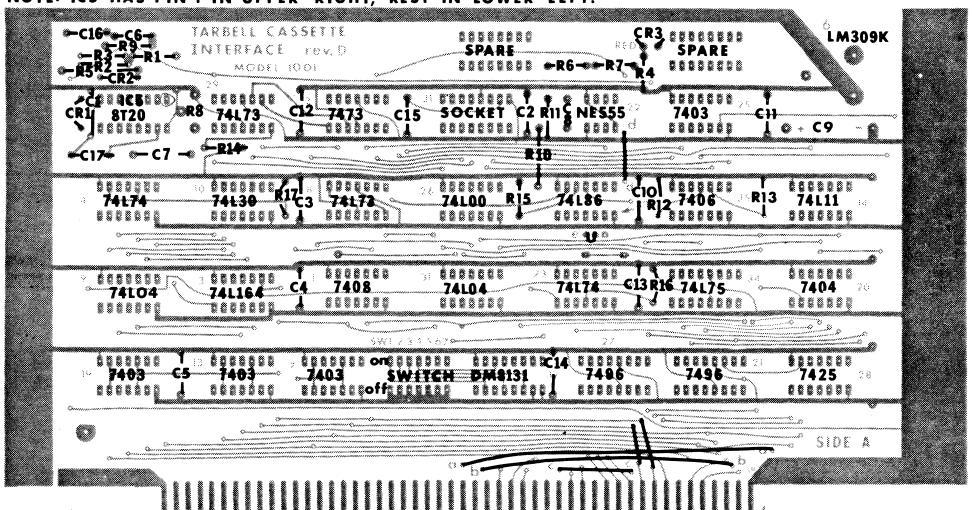

COMPONENT SIDE

### ASSEMBLY INSTRUCTIONS

- I. TAKE OUT ALL THE PARTS AND CHECK THEM AGAINST THE PARTS LIST.

  IF THERE ARE ANY PARTS MISSING, DROP US A NOTE, AND WE WILL

  SEND THEM TO YOU. NOTE THAT THE NESSS, IOK (APPROX.) RESISTOR,

  27K RESISTOR, AND .01 MFD CAPACITOR WHICH ARE PACKAGED IN THE

  SEPERATE BAG ARE MATCHED FOR 1500 HZ AND ARE MARKED WITH

  ASTERISKS ON THE PARTS LIST. OTHER COMPONENTS USED FOR THESE

  WILL CAUSE THE OUTPUT TO RUN AT A DIFFERENT FREQUENCY.
- 2. USING THE ASSEMBLY DRAWING ON PAGE 7, INSERT THE DISCRETE COMPONENTS (BAG WITH CAPACITORS, RESISTORS, LED, DIP-SWITCH) INTO THEIR PROPER LOCATIONS. ON THE LIGHT-EMITTIDE DODE (LED), THE RED LEAD GOES TO THE RESISTOR. IF THE RED HAS BEEN RUBBED OFF THE LEAD, USE AN OHMETER TO DETERMINE WHICH LEAD GOES TO THE RESISTOR. THE IN750 ZENER DIODE (SMALL GLASS DEVICE) SHOULD BE MOUNTED WITH THE LINE SIDE TOWARD THE LEFT. THE IN914 DIODE (OTHER SMALL GLASS DEVICE) SHOULD BE MOUNTED WITH THE LINE SIDE TOWARD THE BOTTOM. THE ONLY CAPACITOR WHICH SHOULD BE ORIENTED IN A PARTICULAR DIRECTION IS THE FILTER CAPACITOR C9, WHICH SHOULD BE MOUNTED WITH THE PLUS SIDE TOWARD THE LEFT. AS MARKED ON THE BOARD. THE DIP-SOCKET SHOULD BE MOUNTED IN THE JI POSITION. AS IS SHOWN ON THE ASSEMBLY DRAWING.
- AND ONE LARGE METAL DEVICE) INTO THEIR PROPER LOCATIONS AS INDICATED BY THE ASSEMBLY DRAWING AND THE PARTS LIST. NOTE THAT IC \$5 (8720) IS ORIENTED WITH PIN 1 AT UPPER RIGHT, WHEREAS ALL THE OTHERS ARE ORIENTED WITH PINI AT LOWER LEFT. THERE ARE 2 WAYS TO TELL WHICH IS PIN 1 ON AN IC. ON SOME, THERE IS A SMALL DOT BY PIN 1. ON OTHERS, THERE IS A NOTCH AT ONE END OF THE IC. AND PIN 1 IS ON THE LOWER LEFT WHEN THE NOTCH IS AT THE LEFT. BE SURE TO PUT THE MICA INSULATOR UNDER THE REGULATOR (IC 6) BEFORE MOUNTING IT. BE SURE TO FUT IC 6 IN SO THAT THE SCREW HOLES LINE UP, AND THEN INSTALL THE SCREWS, WITH THE WASHERS UNDER THE NUTS. BE SURE THAT THE WASHERS DON'T TOUCH THE TRACE ON SIDE B OF THE PC BOARD, AND THAT CAPACITOR C9 IS NOT TOUCHING ANY PART OF IC 6.
- 4. INSTALL THE SEVEN JUMPER WIRES, PREFERABLY USING SMALL INSULATED SINGLE-STRAND COPPER WIRE. THE JUMPER WIRES ARE MARKED ON THE ASSEMBLY DRAWING IN HEAVY BLACK LINES. FIVE OF THEM ARE ALSO MARKED ON THE BOARD WITH MATCHING LETTERS (A,B,C,D,E) BESIDE THEIR HOLES. NOTICE THAT THE BOTTOM OF JUMPER D GOES TO THE HOLE ABOVE THE "D". THERE ARE TWO MORE VERTICAL JUMPERS DOWN NEXT TO THE CONNECTOR. THE LAST IS A SHORT ONE (E), BELOW IC 30, TO SELECT THE OUTPUT PHASE. MINE IS CONNECTED BETWEEN THE CENTER AND LEFT HOLES, AS SHOWN IN THE SCHEMATIC. THIS MAY HAVE TO BE CHANGED LATER, AS NOTED IN THE ADJUSTMENT PROCEDURE.
- 5. CONSULT THE INSTALLATION NOTES FOR INSTRUCTIONS ABOUT THE CASSETTE CABLES.
- 6. SEE THE MODIFICATION SHEET (PAGE 8) FOR ANY LATE MODIFICATIONS. REVISION C HAS ALL MODIFICATIONS THROUGH MOD. #6. BE SURE THAT ALL MODIFICATIONS WHICH ARE NOT ON YOUR REVISION ARE INSTALLED.

MODIFICATIONS ON THE TARBELL CASSETTE INTERFACE AS OF SEPT 1, 1976.

### INCLUDED ON REVISION B:

- 1. RESISTOR RI HAS BEEN CHANGED TO A 2.4 KOHM RESISTOR.
- 2. ON THE OUTPUT VOLTAGE DIVIDER, RIO IS RECOMMENDED TO BE 1 KOHM FOR AUXILLIARY CASSETTE INPUTS, INSTEAD OF 10 KOHM.

### INCLUDED ON REVISION C:

- 3. A .1 MFD CAPACITOR HAS BEEN ADDED IN PARALLEL WITH R11.
  THIS IMPROVES RELIABILITY WITH SOME TYPES OF RECORDERS.
- 4. A 1 KOHM RESISTOR HAS BEEN ADDED BETWEEN PINS 10 AND 14 OF IC 35. THIS PROVIDES PULL-UP TO DRIVE THE 7475 LATCH.
- 5. THE TRACE TO PIN 8 OF IC 5 (GROUND) HAS BEEN CUT AND A LINE RUN DIRECTLY TO THE GROUND BUS ON THE BOTTOM. THIS ELIMINATES CROSS-TALK FROM THE NE555 OSCILLATOR.
- 6. A 2200 PF CAPCITOR SHOULD BE ADDED BETWEEN PINS 6 AND 8 ON IC 5. THIS REDUCES THE EFFECTS OF HIGH-FREQUENCY NOISE GENERATED IN SOME COMPUTERS.

### INCLUDED ON REVISION D:

- 7. ADD A .01 MFD CAPACITOR BETWEEN PINS 15 AND 8 OF IC 5.
- 8. ADD A 1K RESISTOR BETWEEN PINS 12 AND 14 OF 1C 30.
- 9. CONNECT ONE SIDE OF A 1K RESISTOR TO 5 VOLTS, THE OTHER TO IC29-7&10, IC2-14&3&7&10, IC8-14&3&7.
- 10. CONNECT ONE SIDE OF A 1K RESISTOR TO 5 VOLTS, THE OTHER TO IC23-4&10&13.
- 11. CONNECT ONE SIDE OF A 1K RESISTOR TO 5 VOLTS, THE OTHER TO IC4-13&10, IC3-9.
- 12. CONNECT PIN 1 TO PIN 2 ON IC3.

THERE HAVE BEEN SEVERAL QUESTIONS REGARDING THE USE OF RATES HIGHER THAN THE STANDARD 187 BYTES PER SECOND. CHANGES ARE REQUIRED ON BOTH THE INPUT AND OUTPUT SECTIONS. ON THE INPUT SECTION, THE POTENTIOMETER THAT IS PROVIDED ON THE BOARD MAY BE ADJUSTED TO CHANGE THE FREQUENCY. ON THE OUTPUT SECTION, ANY OF THREE COMPONENTS MAY BE CHANGED TO CHANGE THE FREQUENCY: R6, R7, OR C8. IF YOU WANT TO OPERATE AT TWO FREQUENCIES, FOR EXAMPLE A HIGHER ONE, AND THE STANDARD, IT IS FEASIBLE TO INSTALL A SWITCH FOR THE ABOVE MENTIONED COMPONENTS. FOLLOWING WOULD BE A REASONABLE PROCEDURE FOR EXPERIMENTING WITH THE HIGHER RATES:

- 1. REDUCE THE VALUE OF R6, R7, OR C8 BY ABOUT THE AMOUNT YOU WANT TO INCREASE THE FREQUENCY.
- 2. USE THE CASSETTE OUTPUT ROUTINE AND A STOP WATCH TO VERIFY THAT THE INCREASE IN OUTPUT SPEED HAS BEEN ATTAINED.
- 3. USE THE SYNC GENERATOR PROGRAM TO MAKE A TAPE WITH A LONG STREAM OF SYNC BYTES AT THE NEW FREQUENCY.
- 4. PLAY IT BACK, ADJUSTING THE POT FOR THE LED TO COME ON. CLOSER ADJUSTMENT OF THE CASSETTE VOLUME CONTROL MAY ALSO BE NECESSARY.
- 5. THE .1 CAPACITOR MODIFICATION MENTIONED IN ITEM 3 ABOVE WILL ALSO HAVE TO BE REDUCED ACCORDINGLY.

SOLDERING, CLEANING, AND INSTALLATION NOTES

### SOLDERING:

Be sure to use good resin-core solder. Acid-core solder will corrode. Use a small soldering element, preferably about 27 watts. Keep your tip clean by wiping on a sponge. Apply heat to the joint first, then solder, then remove solder, then remove the heat (soldering iron). Don't leave the heat applied to the connection more than a few seconds at a time. Some of the components can be destroyed by too much heat, especially the integrated circuits (IC's). Be sure there is a smooth flow of solder over the complete connection, and that the joint looks shiny.

### CLEANING:

After you finish soldering, there will be many small conductive particles on the board which you cannot always see. Take a small pointed instrument of some sort, such as a jeweler's screwdriver, and scrape between all printed wiring which is close together, such as those leading to the IC pins. This may take some time, but it is well worth it. Then scrub the bottom (side B) of the board with alcohol. Then visually inspect the board under a strong light, and again remove any dangerous looking particles.

### INSTALLATION:

First set the dip-switches to the following positions:

- 6 E

1-off, 2-off, 3-on, 4-off, 5-off, 6-on, 7-off (input phase inversion)

Switches 1 through 6 correspond to address bits 2 through 7 respectively, and off is a one, on is a zero. Address bit 1 can be either way, as it is ignored by the present interface. Address bit 0 is zero for status/control, and one for data. Therefore, the switch settings above correspond to device address 011011XX (most significant bit first), where X indicates bits that can be either way. This is the device select code that is used in all software for the cassette interface that is supplied by Tarbell Electronics.

Then insert the board into the 100-pin socket, being sure that the component side of the board is to the right (Altair) or front (IMSAI) as viewed from the front of the computer. Then install the ribbon cable between the dipconnector on the interface board and the 25-pin connector slot in the rear. Then install the coax cables between the 25-pin connector and the cassette recorder. The coax cables may also be connected directly between the interface board and the recorder. See the pin function list page for the proper connections.

### INITIAL ADJUSTMENT INSTRUCTIONS

THIS INTERFACE WAS DESIGNED TO BE AS EASY AS POSSIBLE TO GET UP AND GOING. THERE ARE, HOWEVER, SOME INITIAL ADJUSTMENTS TO BE MADE, AFTER WHICH THERE NEED NEVER BE ANY MORE.

- 1. PUT THE TEST CASSETTE INTO YOUR CASSETTE RECORDER.
- 2. IF YOUR RECORDER HAS A TONE CONTROL, TURN IT TO THE MAXIMUM (BEST HIGH-FREQUENCY RESPONSE) POSITION.
- 3. TURN YOUR VOLUME CONTROL TO A MIDDLE POSITION.
- 4. TURN THE POTENTIOMETER ON THE INTERFACE TO A MIDDLE POSITION.
- 5. PRESS THE "PLAY" BUTTON ON YOUR RECORDER.
- 6. IF THE LED (RED LIGHT) ON THE INTERFACE DOES NOT COME ON AFTER A FEW SECONDS. ADJUST YOUR VOLUME AND THE INTERFACE POTENTIOMETER UNTIL THE LIGHT COMES ON.
- 7. IF THE LED STILL DOESN'T COME ON, CHANGE SWITCH #7 (INPUT PHASE REVERSAL) ON THE DIP-SWITCH TO THE OPPOSITE POSITION, THEN REPEAT STEP 6.
- 8. IF THE LED STILL DOESN'T COME ON AFTER ADJUSTING YOUR VOLUME AND THE INTERFACE POT, SOMETHING IS WRONG WITH YOUR RECEIVER SECTION.
- 9. WHEN THE LED COMES ONE, THIS INDICATES THAT THE RECEIVER IS OPERATING PROPERLY, AND IS DETECTING THE CONTINUOUS STREAM OF SYNC BYTES WHICH IS ON THE TEST TAPE. FURTHER ADJUST BOTH THE VOLUME CONTROL AND THE INTERFACE POT SO THAT YOU CAN TURN EACH OF THEM FROM SIDE TO SIDE A LITTLE WITHOUT THE LIGHT GOING OUT. THE LIGHT SHOULD BE VERY STABLE, WITH NO FLICKER.
- NOTE: SINCE THE LED ONLY STAYS ON WHEN IT IS DETECTING CONTINUOUS SYNC BYTES. IN NORMAL OPERATION (WITH REAL DATA) IT WILL JUST FLICKER ONCE IN A WHILE.
- 1. RUN THE SYNC CODE GENERATOR PROGRAM WITH YOUR RECORDER IN RECORD MODE, ONTO A BLANK TAPE.
- 2. TRY THE PROCEDURE ABOVE. IF THE LIGHT DOES NOT COME ON CONTINUOUSLY, YOU MAY BE RECORDING AT TOO HIGH OR TOO LOW A LEVEL. TRY DIFFERENT LEVELS UNTIL YOU FIND THE BEST PLACE. YOU ALSO MAY BE RECORDING IN THE OPPOSITE PHASE. IF SO, CHANGE THE JUMPER FROM PIN 9 TO PIN 8 ON IC 23.
- NOTE: IF YOU HAVE AN OSCILLOSCOPE, IC 4 PIN 11 SHOULD SHOW A NICE CLEAN WAVE FORM, WITH ABOUT 25% DUTY CYCLE. ALTHOUGH THERE MAY BE LONG-TERM JITTER, BECAUSE OF THE FLUTTER AND WOW ON THE CASSETTE RECORDER, FAST JITTER ON THE EDGES OF THE WAVE-FORM SHOULD BE FAIRLY SMALL. THE LESS THIS HIGH-SPEED JITTER IS, THE MORE TOLERANCE YOUR INTERFACE WILL HAVE TO TAPE SPEED VARIATIONS.

### CASSETTE INTERFACE OPERATING INSTRUCTIONS

THESE INSTRUCTIONS PERTAIN TO OPERATING THE INTERFACE WITH AN ORDINARY AUDIO CASSETTE RECORDER, AND ASSUME THAT THE PROPER SOFTWARE (PROGRAMS, SUBROUTINES) IS IN THE COMPUTER TO COMMUNICATE WITH THE INTERFACE.

### TO PERFORM AN OUTPUT (SAVE, WRITE) OPERATION:

- 1. IF YOUR VOLUME CONTROL HAS AN EFFECT ON THE RECORDING FUNCTION, FIRST TURN IT ALL THE WAY DOWN.
- 2. GET TO THE POINT IN YOUR PROGRAM WHERE ALL IT TAKES IS A PUSH OF A BUTTON TO START INTO THE CASSETTE OUTPUT ROUTINE.
- 3. USE FAST-FORWARD OR REWIND TO MOVE TO THE DESIRED LOCATION ON THE CASSETTE TAPE.
- 4. START YOUR CASSETTE RECORDING.
- 5. IF YOUR VOLUME CONTROL HAS AN EFFECT DURING RECORD, SLOWLY INCREASE THE VOLUME UNTIL YOUR INDICATOR SHOWS A CORRECT RECORDING LEVEL.
- 6. WAIT FOR ABOUT 5 SECONDS TO RECORD LEADER.
- 7. PUSH THE BUTTON THAT STARTS THE OUTPUT ROUTINE ON THE RECORDER. (THIS MIGHT BE THE CARRIAGE-RETURN AFTER "CSAVE" IN BASIC, OR THE FRONT-PANEL "RUN" BUTTON FOR STAND-ALONE PROGRAMS.)
- 8. WHEN THE PROGRAM INDICATES THAT THE DATA TRANSFER IS COMPLETE, STOP YOUR CASSETTE RECORDER.

### TO PERFORM AN INPUT (LOAD, READ) OPERATION:

- 1. BE SURE YOUR VOLUME CONTROL IS AT THE POSITION THAT YOU LEFT IT IN THE ADJUSTMENT PROCEDURE.
- 2. GET TO THE POINT IN YOUR PROGRAM WHERE ALL IT TAKES IS A PUSH OF A BUTTON TO START INTO THE CASSETTE INPUT ROUTINE.
- 3. USE FAST-FORWARD OR REWIND TO MOVE TO THE DESIRED LOCATION ON THE CASSETTE TAPE. THIS SHOULD BE A FEW SECONDS INTO THE LEADER OF A PREVIOUS RECORDING.
- 4. START YOUR CASSETTE IN THE PLAYBACK MODE.
- 5. PRESS THE BUTTON WHICH CAUSES THE INPUT ROUTINE TO START RUNNING. (IN BASIC, THIS MIGHT BE THE CARRIAGE-RETURN AFTER A CLOAD, OR THE FRONT-PANEL "RUN" BUTTON FOR STAND-ALONE PROGRAMS, SUCH AS BOOTSTRAPS.)
- 6. WHEN THE PROGRAM INDICATES THAT THE DATA TRANSFER IS COMPLETE, STOP YOUR CASSETTE RECORDER.
- NOTE: ALWAYS BE SURE THAT ALL MEMORY INTO WHICH PROGRAMS OR DATA IS TO BE READ. IS UNPROTECTED FIRST.

### CASSETTE BOOTSTRAP PROGRAM

THIS PROGRAM LOADS DATA STARTING AT ZERO AND KEEPS ON GOING. THERE IS NO COUNT OF BYTES, AND NO CHECKSUM. IT IS ASSEMBLED TO RUN AT 2FOO (HEX), BUT MAY BE ASSEMBLED TO RUN ANYWHERE, PROVIDED THAT IT DOES NOT LOAD DATA OVER ITSELF. USE THE SECOND HAND ON YOUR WATCH TO DETERMINE HOW LONG TO WAIT UNTIL STOPPING THIS PROGRAM. ALLOW ABOUT 45 SECONDS TO LOAD AN 8 KBYTE BLOCK.

| 2F00<br>2F02 | 3E<br>D3 | 10 |    |      | MVI        | A,10H<br>CASC    | SET BIT 4 OF A = 1.<br>RESET INTERFACE. |
|--------------|----------|----|----|------|------------|------------------|-----------------------------------------|
| 2F04         |          |    | 00 |      | LXI        | H <sub>2</sub> O | PUT STARTING ADDRESS IN H.L.            |
| 2F07         | DB       | 6E |    | LOOP | IN         | CASC             | READ STATUS.                            |
| 2F09         | E6       | 10 |    |      | ANI        | 10H              | CLEAR ALL BUT BIT 4.                    |
| 2F0B         | C2       | 07 | 2F |      | JNZ        | LOOP             | WAIT IN LOOP UNTIL READY.               |
| 2F0E         | DB       | 6F |    |      | IN         | CASD             | READ A DATA BYTE.                       |
| 2F10         | FB       |    |    |      | EI         |                  | SIGNAL OPERATOR.                        |
| 2F11         | 77       |    |    |      | MOV        | M.A              | PUT DATA INTO MEMORY.                   |
| 2F12         | 23       |    |    |      | INX        | . Н              | INCREMENT MEMORY POINTER.               |
| 2F13         | C3       | 07 | 2F |      | JMP        | LOOP             | REPEAT THE ABOVE OPERATION.             |
|              |          |    |    | CASC | EQU        | 6EH              | CASSETTE STATUS PORT.                   |
|              |          |    |    | CASD | EQU<br>END | 6FH              | CASSETTE DATA PORT.                     |

NOTE: IF YOU HAVE AN IMSAI OR ALTAIR WITH AN OUTPUT PORT ON THE FRONT PANEL (8 LED'S), YOU CAN USE THE BOOTSTRAP PROGRAM FOR TROUBLESHOOTING THE INPUT SECTION WITH THE FOLLOWING

MODIFICATION: AT INSTEAD OF SUBSTITUTE 2F10 EI (FB) CMA (2F) 2F11 MOV M.A (77) OUT (D3) 2F12 INX H (23) LEDS (FF)

### SYNC CODE GENERATOR PROGRAM

THIS PROGRAM MAY BE USED TO GENERATE A CONTINUOUS STREAM OF E6 (HEX), THE SAME AS IS ON THE SUPPLIED CASSETTE. IF YOU FIND THAT THE RECEIVED STREAM IS INVERTED FROM THE ONE SUPPLIED, YOU MAY CHANGE THE CIRCUIT SO THAT IC23-8 IS HOOKED TO THE 74L86 INSTEAD OF IC23-9. THIS WILL MAKE YOUR RECORDINGS THE SAME PHASE AS MINE.

| 0000 | DB 6E |    | LOOP | IN   | CASC   | READ STATUS.            |
|------|-------|----|------|------|--------|-------------------------|
| OOOO | DD OF | •  | LUUP | T 7A | CHSC   | VEWD SIMIOS.            |
| 0002 | E6 20 | )  |      | ANI  | 20H    | LOOK AT BIT 5.          |
| 0004 | C2 00 | 00 |      | JNZ  | LOOP   | WAIT UNTIL READY.       |
| 0007 | 3E E6 | )  |      | MV I | A,OE6H | GET SYNC BYTE.          |
| 0009 | D3 6F | •  |      | OUT  | CASD   | WRITE IT ONTO CASSETTE. |
| 000B | C3 00 | 00 |      | JMP  | LOOP   | REPEAT.                 |
|      |       |    | CASC | EQU  | 6EH    | STATUS PORT.            |
|      |       |    | CASD | EQU  | 6FH    | DATA PORT.              |
|      |       |    |      | END  |        | •                       |

INPUT ADDA FROM CAS
OUTPOT ADDA TO CAS
SYNC BYTT

### CASSETTE INTERFACE OUTPUT ROUTINE

THIS PROGRAM WRITES A BLOCK OF MEMORY OUT ONTO CASSETTE TAPE.
THE PROGRAM IS ASSEMBLED TO START AT 3100 (HEX). BUT MAY BE
REASSEMBLED TO START ANYWHERE. THE BLOCK STARTING ADDRESS IS
LOCATED AT ADDRESS 3104 (HEX). THE BLOCK LENGTH (2 BYTES) IS
LOCATED AT ADDRESS 3107 (HEX). THE PROGRAM WILL WRITE A "W" ON
THE COMMENT DEVICE WHEN IT IS THROUGH WITH IT'S DATA TRANSFER.

| 3100         | 31 43 31 | LXI       | SPJSTAK       | SET STACK POINTER.             |
|--------------|----------|-----------|---------------|--------------------------------|
| 3103         | 21 00 00 | LXI       | H,0           | GET BLOCK ADDRESS.             |
| 3106         | 01 00 20 | LXI       | B,2000H       | SET BLOCK LENGTH = 8192.       |
| 3109         | 1E 00    | MVI       | E,0           | SET E=0.                       |
| 310B         | 3E 3C    | MVI       | A.3CH         | GET START BYTE.                |
| 310D         | CD 32 31 | CALL      |               | OUTPUT START BYTE TO CASSETTE. |
| 3110         | 3E E6    | MVI       | A,0E6H        | GET SYNC BYTE.                 |
| 3112         | CD 32 31 | CALL      |               | OUTPUT SYNC BYTE TO CASSETTE.  |
| 3115         | 7E       | LOOP MOV  | A, M          | GET A DATA BYTE FROM MEMORY.   |
| 3116         | CD 32 31 | CALL      | COUT          | OUTPUT DATA BYTE TO CASSETTE.  |
| 3119         | 83       | ADD       | E             | ADD E (CHECKSUM) TO A.         |
| 3119<br>311A | 5F       | MOV       |               | PUT NEW CHECKSUM INTO E.       |
| 311A<br>311B | 23       | INX       | E • A<br>H    | INCREMENT MEMORY POINTER.      |
| 311C         | 0B       | DCX       | В             | DECREMENT COUNTER.             |
| 311D         | 3E 00    | MVI       | A • 0         | MAKE A=0.                      |
| 311F         | B8       | CMP       | B             | IF B NOT = 0,                  |
| 3117         | C2 15 31 | JN Z      | LOOP          | REPEAT LOOP.                   |
| 3123         | B9       | CMP       | C             | IF C NOT = 0,                  |
|              | C2 15 31 | JNZ       | LOOP          | REPEAT LOOP.                   |
| 3124         |          | MOV       | A,E           |                                |
| 3127         | 7B       |           |               | OTHERWISE, GET CHECKSUM        |
| 3128         | CD 32 31 | CALL      | COUT<br>A,"W" | AND OUTPUT IT.                 |
| 312B         | 3E 57    | IVM       |               | WRITE "W" (END OF WRITE).      |
| 312D         | D3 01    | OUT       | 1             | PRINT ON CONSOLE.              |
| 312F         | C3 2F 31 | WAIT JMP  | WAIT          | WAIT HERE WHEN DONE.           |
| 3132         | F5       | COUT PUSH |               | SAVE A AND FLAGS.              |
| 3133         | DB 6E    | CLOP IN   | CASC          | READ CASSETTE STATUS.          |
| 3135         | E6 20    | ANI       | 20H           | CLEAR ALL BUT BIT 5.           |
| 3137         | C2 33 31 | JN Z      | CLOP          | TRY AGAIN IF NOT READY.        |
| 313A         | F1       |           | PSW           | RESTORE A AND FLAGS.           |
| 313B         | D3 6F    | OUT       | CASD          | OUTPUT DATA TO CASSETTE.       |
| 313D         | C 9      | RET       |               | RETURN FROM COUT.              |
| 313E         | 00       | 0         |               |                                |
| 313F         | 00       | 0         |               |                                |
| 3140         | 00       | 0         |               |                                |
| 3141         | 00       | 0         |               |                                |
| 3142         | 00       | 0         |               |                                |
| 3143         | 00       | STAK 0    |               |                                |
|              |          | CASD EQU  | 6FH           |                                |

### CASSETTE INTERFACE INPUT ROUTINE

THIS PROGRAM READS A BLOCK OF BYTES FROM CASSETTE INTO MEMORY. THE PROGRAM IS ASSEMBLED TO START AT 3100 (HEX), BUT MAY BE REASSEMBLED TO START ANYWHERE, ALTHOUGH CARE SHOULD BE TAKEN TO INSURE THAT THE DATA IT IS READING DOES NOT WRITE OVER THE PROGRAM ITSELF. THIS MAY BE ACCOMPLISHED BY LOCATING THE PROGRAM IMMEDIATELY BELOW OR A BLOCK LENGTH ABOVE THE DATA TO BE READ IN. THE STARTING ADDRESS FOR THE BLOCK IS LOCATED IN ADDRESS 3185 (HEX). THE BLOCK LENGTH IS LOCATED IN ADDRESS 3188 (HEX) (TWO BYTES).

| 3182<br>3184<br>3187<br>318A<br>318C<br>318E<br>3190<br>3193<br>3195<br>3196<br>3197<br>3198<br>3199<br>3194 |    | 6E<br>00<br>00<br>6E<br>10<br>6F | 00 20 31 |      | ANI<br>JNZ<br>IN<br>MOV<br>ADD<br>MOV<br>INX<br>DCX | CASC H, 0 D, 2000H B, 0 CASC IOH LOOP CASD M, A B B, A H | GET BLOCK LENGTH.  SET CHECKSUM = 0.  READ CASSETTE STATUS.  LOOK AT BIT 4.  WAIT IF NOT READY. |
|--------------------------------------------------------------------------------------------------------------|----|----------------------------------|----------|------|-----------------------------------------------------|----------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| 319A<br>319C                                                                                                 | BA | 00                               | 7        |      | MV I<br>CMP                                         | A,U<br>D                                                 | IF D NOT = 0,                                                                                   |
| 319D                                                                                                         |    | 8C                               | 31       |      |                                                     | LOOP                                                     | READ MORE.                                                                                      |
| 31A0                                                                                                         | BB | •                                | •        |      | CMP                                                 | E                                                        | IF E NOT = 0.                                                                                   |
| 31A1                                                                                                         | C2 | 80                               | 31       |      |                                                     | LOOP                                                     | READ MORE.                                                                                      |
| 31A4                                                                                                         | DB | 6E                               |          | CHEK | IN                                                  | CASC                                                     | READ STATUS.                                                                                    |
| 31A6                                                                                                         | E6 | 10                               |          |      | ANI                                                 | 10H                                                      | LOOK AT BIT 4.                                                                                  |
| 31A8                                                                                                         |    |                                  | 31       |      | JNZ                                                 | CHEK                                                     | WAIT IF NOT READY.                                                                              |
| 31AB                                                                                                         | DB | 6F                               |          |      | IN                                                  | CASD                                                     | READ CHECKSUM.                                                                                  |
| 31AD                                                                                                         | B8 |                                  |          |      | CMP                                                 | В                                                        | COMPARE TO B.                                                                                   |
| 31AE                                                                                                         | ЗE |                                  |          |      |                                                     | A,''E''                                                  | PUT CODE FOR "E" IN A.                                                                          |
| 31B0                                                                                                         |    |                                  | 31       |      | JNZ                                                 | ERR                                                      | IF CHECKSUMS NOT EQUAL, ERROR.                                                                  |
| 31B3                                                                                                         | С6 |                                  |          |      | AD I                                                | 2                                                        | ADD A 2 TO MAKE "G" IF EQUAL.                                                                   |
| 31B5                                                                                                         |    |                                  |          |      | OUT                                                 | CRTD                                                     | PRINT "E" FOR "G".                                                                              |
| 31B7                                                                                                         | C3 | B <b>7</b>                       | 31       | END  | JMP                                                 | END                                                      | WAIT HERE WHEN DONE.                                                                            |
|                                                                                                              |    |                                  |          | CASC |                                                     | 6EH                                                      | CASSETTE STATUS/CONTROL PORT.                                                                   |
|                                                                                                              |    |                                  |          | CASD |                                                     | 6FH                                                      | CASSETTE DATA PORT.                                                                             |
|                                                                                                              |    |                                  |          | CRTD | EQU                                                 | 01H                                                      | CONSOLE DATA PORT.                                                                              |

# BASIC STORE & LOAD

```
1 REM THIS PROGRAM SHOWS HOW TO SAVE DATA ONTO A CASSETTE
2 REM AND LØAD IT BACK INTØ MEMØRY FRØM A PRØGRAM RUNNING
3 REM
        UNDER 8K BASIC 3.1. IT ALLØWS YØU TØ ENTER LINES ØF
4 REM
       TEXT FROM THE CONSOLE KEYBOARD, SAVE THEM ON CASSETTE,
5 REM LØAD THEM BACK INTØ MEMØRY, AND PRINT THEM.
10 CLEAR 3000:L=50:DIM A$ (50):REM RESERVE FOR UP TO 50 LINES.
20 CC=110:CD=111:REM CASSETTE CONTROL AND DATA PORT NUMBERS.
30 TS="%" : REM END-0F-FILE CHARACTER.
40 D=100
100 INPUT "COMMAND";C$
110 IF Cs = "ENTER" THEN 1000
120 IF CS="PRINT" THEN 2000
130 IF Cs="SAVE" THEN 3000
140 IF CS="GET" THEN 4000
900 PRINT "INVALID COMMAND.":GOTO 100
1000 REM ENTER TEXT FROM THE CONSOLE KEYBOARD
1020 FØR N=1 TØ L:REM ENTER A MAXIMUM ØF L LINES.
1030 INPUT BS : REM READ A LINE FROM KEYBOARD.
1040 IF BS="%" THEN 1070:REM A % TERMINATES THE INPUT.
1050 A$(N)=B$:NEXT N:REM PUT LINE INTØ BUFFER.
1070 N=N-1:GØTØ 100:REM N=THE NUMBER ØF LINES ENTERED.
2000 REM PRINT THE BUFFER AREA ON THE CONSOLE.
2010 FØR I=1 TØ N:PRINT A$(1):NEXT 1:GØTØ 100
3000 REM SAVE THE BUFFER ONTO CASSETTE TAPE.
3010 S$ = CHR$ (195) + CHR$ (230) : REM S$ = START & SYNC BYTES .
3019 REM CHANGE THE CONSOLE OUTPUT ROUTINE FOR CASSETTE.
3020 PØKE 1230,CC:PØKE 1232,32:PØKE 1238,CD
3030 FØR I=1 TØ N
3040 FØR K=1 TØ D:NEXT K:REM DELAY FØR CØUNT ØF D.
3050 B$=S$+A$(I):REM HØØK START & SYNC BYTES TØ LINE.
3060 PRINT BS:REM WRITE LINE ØNTØ CASSETTE.
3070 NEXT I
3080 B$=S$+T$ :REM HØØK START & SYNC BYTES TØ TERMINATØR.
3085 FØR K=1 TØ D:NEXT K:REM DELAY FØR COUNT ØF D.
3090 PRINT BS:REM WRITE THE END-0F-FILE MARK.
3099 REM CHANGE CONSOLE ROUTINE BACK TO NORMAL.
3100 PØKE 1230,0:PØKE 1232,128:PØKE 1238,1
3110 GØTØ 100
4000 REM GET TEXT FRØM CASSETTE AND PUT INTØ BUFFER.
4010 REM CHANGE CONSOLE INPUT ROUTINE FOR CASSETTE.
4011 PØKE 1241,CC:PØKE 1243,16:PØKE 1248,CD:PØKE 1232,0
4012 PØKE 1238,255
4020 FØR I=1 TØ L
4030 ØUT CC.16:REM RESET CASSETTE INPUT SECTION.
4040 INPUT BS:REM READ A LINE OF TEXT FROM CASSETTE.
4050 IF BS=TS THEN 4080
4060 AS(I)=BS
4070 NEXT I
4080 N=I-1
4090 REM CHANGE CONSOLE ROUTINE BACK TO NORMAL.
4091 PØKE 1241,0:PØKE 1243,1:PØKE 1248,1:PØKE 1232,128
4092 PØKE 1238,1
4100 GØTØ 100
ØK
```

SAVING AND LOADING DATA TO AND FROM CASSETTE FROM BASIC PROGRAMS

It is quite often desireable to save and load data to and from cassette, while running a BASIC program. For example, you might have a nice inventory program running in BASIC, but it's of limited utility if there is no way to save the inventory on cassette for overnight storage. You can leave the computer running, but if there is an interruption in power, or a computer failure, your inventory is lost. Other applications include accounts receivable, mailing lists, and payroll.

There are several ways of handling this function, depending on the version of BASIC you use. Some versions of BASIC have a command which can save and load a numerical array to and from cassette. ALTAIR\* DISK BASIC is one of these. The only problem with this way, is that DISK BASIC is fairly large, and that strings have to be converted to numerical arrays. Another way is described explicitly by a program on page 15 of the Tarbell Cassette Interface Manual. In this method, the console (TTY, CRT) routines are modified by POKE commands, so that they are temporarily cassette I/O routines. Then the PRINT and INPUT statements may be used to transfer the data. After the data is transferred, POKE statements restore the console routines to their original form. The disadvantage here is that different versions of BASIC have their console I/O routines in different places, so the program has to be adapted when changing from one version to another.

Another possibility is to POKE the data into an unused area of memory. The USR function then is used to transfer to your own output routine (possibly an adaptation from one in the manual). This routine only needs to transfer a block of memory onto tape. The USR function can be used with a different argument to run an input routine, then the BASIC program can retrieve the data with the PEEK function. The main problem with this method is that the I/O routines generally have to be loaded seperately, and are not yet written and tested.

Still another way is to use a general purpose monitor program. This program would also be loaded seperately, but might reside in read-only-memory (ROM). The monitor would handle all input/output functions including console and cassette I/O. One of the commands in the monitor is to assign different functions to different I/O devices than normally handle these functions. For example, the console function could be assigned to the cassette interface instead of the TTY. Then PRINT and INPUT statements could be used for I/O to and from cassette.

The monitor described above is presently under development by Tarbell Electronics. In addition to the Assign command, it has commands for dumping and loading memory, checking records for errors, and moving data from one area in memory to another. MOST CASSETTE RECORDERS HAVE A REMOTE CONTROL INPUT, MEANT FOR CONTROL FROM A MICROPHONE SWITCH. THIS FACILITY CAN BE OPERATED BY A COMPUTER PROGRAM TO START AND STOP THE TAPE AUTOMATICALLY, ACCORDING TO THE NEEDS OF THE PROGRAM. THIS IS PARTICULARLY IMPORTANT IF THE AMOUNT OF DATA ON TAPE IS MORE THAN WILL FIT INTO MAIN MEMORY ALL AT ONCE. IN THIS CASE, THE DATA MAY BE "BLOCKED"; THAT IS, GAPS MAY BE INSERTED BETWEEN BLOCKS OF DATA, WHICH ALLOW TIME FOR THE TAPE TO START AND STOP. THE PROGRAM MAY THEN START THE TAPE, READ SOME DATA, STOP THE TAPE, WORK ON THE DATA, START ANOTHER TAPE, WRITE SOME DATA, AND STOP THE TAPE. THIS PROCESS MAY BE REPEATED UNTIL ALL THE DATA SOME EXAMPLES WHERE THIS OPERATION MIGHT BE IS PROCESSED. NECESSARY ARE AS FOLLOWS:

- 1) AN ASSEMBLER, WHERE THE SOURCE IS LARGER THAN MEMORY, MAY READ SOURCE FROM ONE TAPE AND WRITE MACHINE CODE TO ANOTHER.
- 2) A COMPILER, IN THE SAME SITUATION.


CASC

EQU

6EH

3) A MERGING PROGRAM, WHERE AN OLD FILE IS UPDATED WITH CHANGES TO FORM A NEW FILE.

THE CIRCUIT FOR CONTROLLING ONE TAPE UNIT IS SHOWN BELOW:

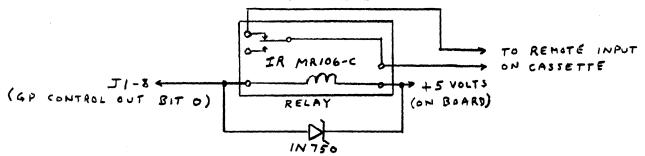

THESE ROUTINES MAY BE USED FOR STARTING AND STOPPING THE CASSETTE BEFORE AND AFTER INPUT AND OUTPUT OPERATIONS:

LDA CTLS GET CONTROL STATUS BYTE. START SET BIT 0 = ONE. ORI 01 STA CTLS UPDATE CONTROL STATUS BYTE. OUT CASC START THE TAPE. CALL DELAY WAIT FOR TAPE TO GET UP TO SPEED. RET RETURN (NEXT DO YOUR I/O). STOP LDA CTLS GET CONTROL STATUS BYTE. AND OFEH SET BIT 0 TO ZERO. CTLS STA UPDATE CONTROL STATUS BYTE. OUT CASC STOP THE TAPE. RET RETURN FROM I/O ROUTINE. CTLS DB CONTROL STATUS BYTE. ٥

THE START-UP DELAY IS DETERMINED BY YOUR RECORDER, AND SHOULD BE LONGER BEFORE A WRITE THAN BEFORE A READ OPERATION.

NOTE: A MODULE WHICH ALLOWS THE CONTROL OF UP TO FOUR CASSETTE RECORDERS WITH A TARBELL CASSETTE INTERFACE IS AVAILABLE FROM: RO-CHE SYSTEMS, 7101 MAMMOTH AVE, VAN NUYS, CA 91405.

CASSETTE CONTROL PORT.

### THEORY OF CASSETTE INTERFACE OPERATION

### OUTPUT SECTION

THE PURPOSE OF THIS SECTION IS TO CONVERT 8-BIT PARALLEL BYTES FROM THE COMPUTER TO A SERIAL BI-PHASE ENCODED DATA STREAM FOR THE RECORDER. THE NESSS (IC 22) IS CONNECTED AS AN OSCILLATOR TO OSCILLATE AT TWICE THE FREQUENCY OF THE REQUIRED CLOCK RATE. FOR 800 BITS PER INCH, THE CLOCK RATE NEEDS TO BE 1500 HZ FOR A RECORDER RUNNING AT I 7/8 INCHES PER SECOND. SO IC 22 RUNS AT 3000 HZ, DETERMINED BY THE MATCHED SET OF COMPONENTS (IC 22, C8, R6, AND R7). THE OUTPUT ON PIN 3 IS FED TO A J-K FLIP-FLOP, WHICH DIVIDES THE FREQUENCY BY TWO. THE MAIN FUNCTION OF THIS FLIP-FLOP IS TO MAKE THE WAVE-FORM PERFECTLY SYMMETRICAL. THIS SQUARE-WAVE IS THEN FED TO AN INPUT OF THE EXCLUSIVE-OR GATE AT IC 30 PIN 6.

IC 32, THE DM8131, IS A 6-BIT DIGITAL COMPARATOR. IT'S PURPOSE IS TO COMPARE THE ADDRESS ON BITS 2 THROUGH 7 OF THE ADDRESS BUS WITH THE SETTING ON THE DIP SWITCH. WHEN THEY MATCH, THE OUTPUT AT PIN 9 GOES LOW, INDICATING THAT THIS DEVICE IS BEING SELECTED. THIS SIGNAL IS INVERTED AND ANDED WITH THE WRITE SIGNAL AND THE STATUS OUTPUT SIGNAL ON THE BUS. THIS PRODUCES A HIGH OUTPUT AT IC 14 PIN 6 WHEN THIS DEVICE IS BEING WRITTEN TO.

THIS SIGNAL IS IN TURN ANDED WITH ADDRESS BIT O TO STROBE DATA INTO THE SHIFT REGISTER (IC 26 PIN 6 AND IC 20 PINS 4 AND 2). THE DATA IS SHIFTED OUT OF THE SHIFT REGISTER BY THE CLOCK PREVIOUSLY MENTIONED. THE SHIFT REGISTER IS MADE UP OF IC'S 21, 27, AND 23. DATA ENTERS AT THE BOTTOM AND IS SHIFTED OUT TOWARD THE RIGHT, WHERE IT IS COMBINED WITH THE CLOCK TO FORM THE BI-PHASE SIGNAL FOR THE RECORDER.

THE FIRST EIGHT OUTPUTS OF THE SHIFT REGISTER ARE FED INTO IC 28. SINCE A ZERO IS BEING FED INTO THE LEFT END OF THE SHIFT REGISTER FOR EACH SHIFT (IC 21 PIN 9), THESE LEFT EIGHT BITS WILL ALL BECOME ZERO AFTER 8 SHIFTS. AT THIS TIME THE OUTPUTS AT IC 28 PINS 6 AND 8 WILL BOTH BE HIGH, CAUSING THE OUTPUT AT IC 14 PIN 8 TO GO HIGH. THIS SIGNAL WILL BE USED BY THE COMPUTER TO DETERMINE WHEN THE INTERFACE NEEDS MORE OUTPUT DATA.

WHEN ADDRESS BIT 0 IS LOW, THE OUTPUT AT IC 14 PIN 6 ANDED WITH IC 31 PIN 2 CAUSES A HIGH OUTPUT AT IC 35 PIN 10. THIS STROBES BITS 0, 1, 2, AND 3 ON THE DATA BUS INTO THE LATCH OF IC 34. THE OUTPUTS OF THIS LATCH ARE BUFFERED WITH IC 35, AND APPEAR AT PINS 2, 4, 6, AND 8. THESE ARE THEN FED TO THE DIP-SOCKET. IF DATA BUS BIT 4 IS HIGH, A PULSE APPEARS AT PIN 8 OF IC 26. THIS IS USED TO RESET THE COUNTER IN THE INPUT SECTION.

#### THEORY OF OPERATION

#### INPUT SECTION


THE PURPOSE OF THIS SECTION IS TO CONVERT THE BI-PHASE AUDIO SIGNAL COMING FROM THE CASSETTE RECORDER TO 8-BIT PARALLEL BYTES FOR THE COMPUTER. THE AUDIO SIGNAL COMING DIRECTLY FROM THE CASSETTE EARPHONE OR SPEAKER OUTPUT IS TERMINATD BY THE 100 OHM RESISTOR AND FED THROUGH THE .02 CAPACITOR TO THE INPUT OF THE 8T20 (IC 5 PINS 6 AND 7). THIS INPUT HAS A BUILT-IN VOLTAGE-DIVIDER, WHICH BIASES THE DC LEVEL TO A GOOD MIDWAY TIL REFERENCE VOLTAGE BETWEEN ONE AND ZERO. THIS IS ONE INPUT OF A HIGH-SPEED COMPARATOR. THE OTHER INPUT (IC 5 PIN 5) IS CONNECTED THROUGH A RESISTOR DIVIDER AND A 1N914 DIODE TO ONE OF THE COMPARATOR OUTPUTS (IC 5 PIN 9). THIS PROVIDES A SMALL AMOUNT OF HYSTERESIS TO COMBAT NOISE THE OTHER OUTPUT OF THE COMPARITOR (IC 5 PIN 1) PROBLEMS. IS EXCLUSIVE-ORED WITH SWITCH 7 ON THE DIP-SWITCH TO PROVIDE A WAY TO INVERT THE INPUT DATA STREAM. THIS IS THEN FED TO A D-TYPE FLIP-FLOP (IC 4 PIN 12).

MEANWHILE, INSIDE IC 5, THE OUTPUTS OF THE COMPARITOR SECTION ARE FED TO AN EDGE-DETECTOR, WHICH DETECTS BOTH POSITIVE AND NEGATIVE-GOING TRANSITIONS. THE OUTPUT OF THIS DETECTOR IS THEN USED TO TRIGGER A STABLE NON-RETRIGGERABLE ONE-SHOT. THE CAPACITOR FOR THIS ONE-SHOT IS BETWEEN PINS 12 AND 14 OF IC 5, AND THE RESISTOR IS THE 50 KOHM POTENTIOMETER. THE OUTPUT OF THE ONE-SHOT IS THE RECOVERED CLOCK (IC 5 PINS 10 AND 11). THIS IS FED TO THREE DIFFERENT PLACES: 1) IC 4 PIN 11, WHERE IT TRIGGERS THE FLIP-FLOP TO RECOVER THE SERIAL DATA STREAM, 2) IC 3 PIN 8 WHERE IT IS USED TO SHIFT THE SERIAL-PARALLEL SHIFT-REGISTER, 3) IC 29 PIN 1 AND IC 26 PIN 13, WHERE IT IS USED TO STEP THE 8 COUNTER.

IN A START-UP POSITION, IC 29 PIN 12 IS ZERO, HAVING BEEN RESET EITHER BY THE RESET SWITCH OR BY A RESET COMMAND FROM THE PROGRAM. THIS STOPS THE CLOCK FROM TRIGGERING THE 8 COUNTER, WHICH HAS ALSO BEEN RESET. AS THE SERIAL STREAM FLOWS THROUGH THE SHIFT-REGISTER (IC 3), IT IS CONTINUALLY INSPECTED BY THE SYNC DECODER MADE UP OF IC'S 9 AND 10. WHENEVER A SYNC CODE APPEARS IN THE SHIFT REGISTER, IC 10 PIN 8 GOES LOW. THIS LIGHTS THE SYNC LED AND ALSO ALLOWS THE FLIP-FLOP AT IC 29 PIN 12 TO GO HIGH. THIS ALLOWS THE CLOCK TO APPEAR AT IC 26 PIN 11. AND TRIGGER THE 8 WHEN THE COUNTER HAS COUNTED TO 8, IC 8 PIN 12 GOES COUNTER. HIGH, TRIGGERING THE READY FLIP-FLOP AT IC 8 PIN 9. CONDITION INDICATES TO THE COMPUTER THAT THERE IS A BYTE IN THE SHIFT REGISTER READY TO READ. THE COMPUTER MAY THEN READ THIS BYTE THROUGH GATES OF IC'S 13 AND 19.


IN ORDER TO READ DATA THE SIGNAL AT POINT B, WHICH COMES FROM THE OUTPUT SECTION IS ANDED WITH THE TWO INPUT GATE SIGNALS PDBIN AND SINP (IC 14 PINS 13, I AND 2). WHEN ADDRESS BIT O IS HIGH, THIS SIGNAL IS ANDED WITH IT TO GATE DATA FROM THE SHIFT REGISTER ONTO THE INPUT DATA BUS (IC 1 PIN 3). WHEN ADDRESS BIT O IS LOW, THIS SIGNAL IS ANDED WITH IT TO GATE VARIOUS STATUS BITS ONTO THE INPUT DATA BUS. FOUR OF THESE INPUTS ARE GENERAL-PURPOSE, AND COME FROM THE DIP-SOCKET. THE OTHERS ARE PICKED UP AT IC 25 PIN 3 (INPUT STATUS), AND IC 25 PIN 6 (OUTPUT STATUS).




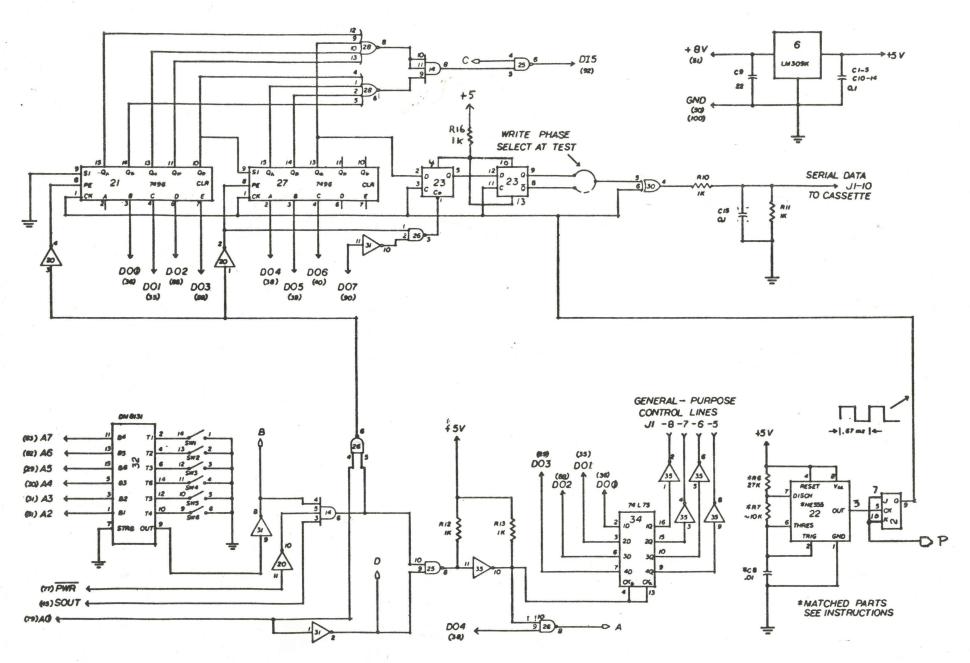

CASSETTE INTERFACE

OUTPUT SECTION

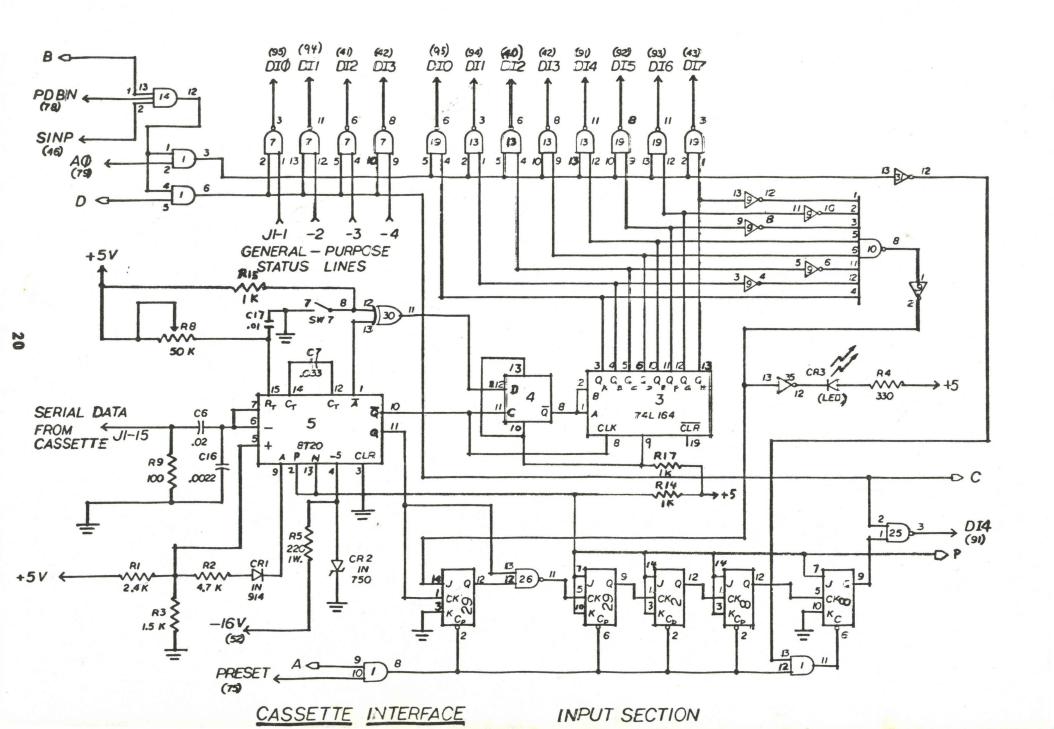

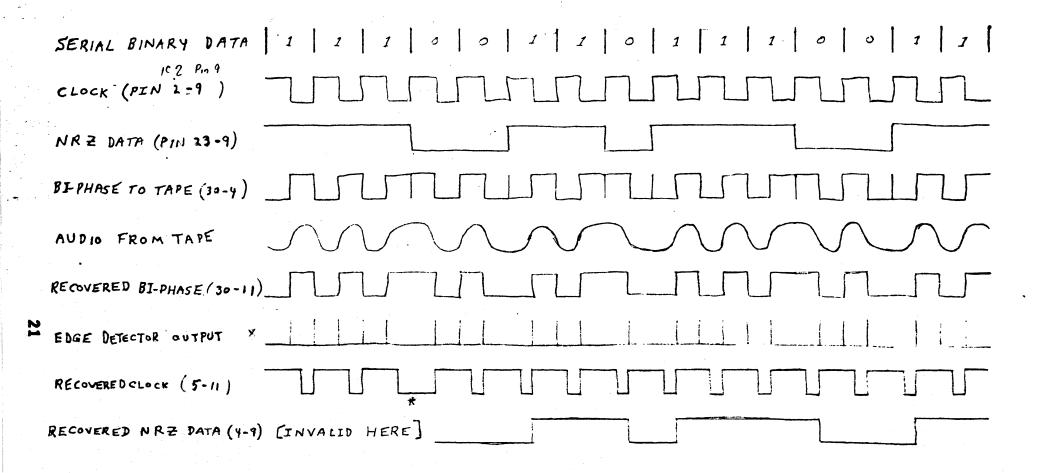

<sup>\*</sup> CLOCK IS IN PROPER PHASE AFTER FIRST DATA CHANGE.

#### CASSETTE INTERFACE PIN FUNCTIONS

## JI (DIP SOCKET)

| 1 | GP | STATUS IN BIT  | 0   | 16 | GROUND             |
|---|----|----------------|-----|----|--------------------|
| 2 | GP | STATUS IN BIT  | 1   | 15 | DATA FROM CASSETTE |
| 3 | GP | STATUS IN BIT  | 2   | 14 | SPARE              |
| 4 | GP | STATUS IN BIT  | 3   | 13 | SPARE              |
| 5 | GP | CONTROL OUT BI | T 3 | 12 | +5 VOLTS           |
| 6 | GP | CONTROL OUT BI | T 2 | 11 | SPARE              |
| 7 | GP | CONTROL OUT BI | T 1 | 10 | DATA TO CASSETTE   |
| 8 | GP | CONTROL OUT BI | T 0 | 9  | GROUND             |

## NOTES: GP STANDS FOR GENERAL-PURPOSE

DATA FROM CASSETTE SHOULD BE CONNECTED TO EARPHONE JACK DATA TO CASSETTE SHOULD BE CONNECTED TO AUXILLIARY JACK. IF MIKE JACK IS USED, OR IF THE RECORDER ONLY OPERATES WITH AUTOMATIC VOLUME CONTROL ON RECORD, THEN DIVIDER RESISTORS MAY HAVE TO BE CHANGED FOR THE PROPER RECORDING LEVEL. THE DIVIDER RESISTORS ARE RIO AND RII.

## P2 (8800 BUS PINS)

1 +8V 29 ADDRESS LINE #5 ADDRESS LINE #4 31 ADDRESS LINE #3 DATA OUT LINE #1 35 36 DATA OUT LINE #0 38 DATA OUT LINE #4 39 DATA OUT LINE #5 DATA OUT LINE #6 40 41 DATA IN LINE #2 42 DATA IN LINE #3 43 DATA IN LINE #7 45 OUT 46 INP 50 GROUND 51 **48V** 52 -16V 75 RESET-NOT 77 WRITE-NOT 78 DATA BUS IN 79 ADDRESS LINE #0 81 ADDRESS LINE #2 82 ADDRESS LINE #6 83 ADDRESS LINE #7 88 DATA OUT LINE #2 DATA OUT LINE #3 89 DATA OUT LINE #7 90 91 DATA IN LINE #4 92 DATA IN LINE #5 DATA IN LINE #6 94 DATA IN LINE #1 95 DATA IN LINE #0 100 GROUND

IF YOU CANNOT MAKE AT LEAST TEN 8K-BYTE TRANSFERS WITH NO ERRORS, YOU HAVE A PROBLEM, AND THE ITEMS BELOW MAY BE OF SOME HELP:

- 1. CHECK TO MAKE SURE THAT ALL THE COMPONENTS AND JUMPERS ARE IN THEIR PROPER LOCATIONS, AND THAT THEY ARE ORIENTED AS SHOWN IN THE ASSEMBLY DRAWING.
- 2. MAKE SURE THAT THE BOARD IS CLEAN, ESPECIALLY THAT THERE IS NO FLUX RESIDUE BETWEEN IC PINS OR OTHER CLOSE LINES.
- 3. DEMAGNETIZE AND CLEAN THE RECORD/PLAYBACK HEAD ON YOUR RECORDER.
- 4. WHEN YOU PLUG IN THE BOARD, BE SURE THAT THE PINS ON THE BOARD EDGE CONNECTOR LINE UP WITH THE PINS IN THE MOTHERBOARD CONNECTOR.
- 5. HAVE YOU TRIED BOTH PHASES WITH THE PHASE SWITCH, AND ARE THE OTHER SETTINGS ON THE DIP-SWITCH CORRECT?
- 6. YOU SHOULD BE ABLE TO ADJUST THE VOLUME ON YOUR RECORDER BY ABOUT 50% DURING PLAYBACK, AND STILL HAVE THE SYNC LIGHT LIT WHEN READING THE SYNC STREAM. IF IT DOESN'T LIGHT AT ALL, THERE IS PROBABLY SOME GROSS PROBLEM ON THE BOARD, SUCH AS A BAD PLATED THROUGH HOLE, A SOLDER BRIDGE, OR A BAD INTEGRATED CIRCUIT. IF YOU ARE USING A TAPE DECK THAT HAS ONLY A PREAMP, YOU MAY NEED TO ADD AN EXTRA STAGE OF AMPLIFICATION IN ONE OF THE EXTRA IC SLOTS.
- 7. IF YOU HAVE AN OSCILLOSCOPE, THE BEST PLACE TO LOOK
  TO SEE HOW THE RECEIVER INPUT SECTION IS OPERATING IS AT
  IC 4. PIN 11. THIS SIGNAL SHOULD BE FAIRLY CLEAN, WITH
  SOME OVERALL JITTER, DUE TO THE TAPE WOW AND FLUTTER, AND
  SOME HIGH-SPEED JITTER ON THE EDGE OF THE WAVEFORM. IT IS
  THIS HIGH-SPEED JITTER THAT YOU SHOULD TRY TO MAKE A MINIMUM.
- 8. IF YOU HAVE A VIDEO INTERFACE, OR OTHER SOURCE OF HIGH-FREQUENCY NOISE, TRY LOCATING IT FURTHER AWAY FROM THE CASSETTE INTERFACE.
- 9. ARE YOU SURE THAT YOUR RECORDER HAS A FREQUENCY RESPONSE TO 8KHZ?
- 10. HAVE YOU USED THE PROPER VOLTAGE DIVIDER (R10, R11) FOR YOUR PARTICULAR RECORDER? IF YOU ARE ABLE TO RECOVER THE SYNC STREAM I WROTE SATISFACTORILY, BUT ARE HAVING TROUBLE WITH RECORDINGS YOU MAKE YOURSELF, THE LEVEL GOING FROM THE INTERFACE TO THE RECORDER MAY BE TOO HIGH OR TOO LOW, ESPECIALLY IF YOU HAVE AUTOMATIC LEVEL CONTROL. YOU MAY ALSO WANT TO TRY OPERATING WITHOUT C15.
- 11. HAVE YOU CHECKED YOUR +5 VOLT POWER? TOO MANY BOARDS IN YOUR COMPUTER COULD INTRODUCE RIPPLE ON THIS SUPPLY.
- 12. DON'T USE DIGITALLY CERTIFIED TAPE, ONLY AUDIO LOW-NOISE TAPE.
- 13. IF YOUR RECORDER HAS AN INTERNAL MICROPHONE. BE SURE IT IS NOT ACTIVE WHILE YOU ARE MAKING A RECORDING (THE J.C. PENNY HAS A SWITCH ON THE TONE CONTROL WHICH CUTS OFF THE INTERNAL MIC).
- 14. IF YOU STILL HAVE PROBLEMS, PLEASE RETURN THE UNIT, PREFERABLY WITH YOUR CASSETTE RECORDER, AND I WILL GET IT OPERATING PERFECTLY WITHOUT CHARGE. THE REPAIR TURNAROUND TIME IS 1 TO 3 WEEKS.
- 15. IF YOU ARE COMPLETELY DISSATISFIED, YOU MAY RETURN THE INTERFACE FOR A COMPLETE REFUND WITHIN 90 DAYS AFTER YOU ACCEPTED DELIVERY.

#### IDEAS FOR USING THE CASSETTE INTERFACE

## SAVING AND LOADING PROGRAMS

PROGRAMS MAY BE TOGGLED INTO MEMORY, LOADED FROM PAPER TAPE, OR LOADED BY SOME OTHER MEANS. THEY MAY THEN BE DUMPED ONTO CASSETTE USING THE CASSETTE OUTPUT ROUTINE. THE OUTPUT ROUTINE ITSELF MAY BE DUMPED ALONG WITH THE OTHER PROGRAM, SO THAT IT WILL BE AVAILABLE LATER FOR FURTHER DUMPS. ROUTINES MAY THEN BE LOADED FROM CASSETTE, MODIFIED, AND DUMPED BACK OUT TO CASSETTE IN A CONTINUOUS PROCESS OF DEVELOPMENT.

#### USING A BACKUP

A BACKUP IS A METHOD OF MAKING SURE THAT VALUABLE PROGRAMS OR DATA IS NOT LOST. ONE SIMPLE WAY OF PROVIDING A BACKUP IS TO RECORD A PARTICULAR PROGRAM IN TWO DIFFERENT PLACES ON THE SAME TAPE, OR ON TWO DIFFERENT TAPES. YOU MAY WANT TO GO BACK AND FORTH BETWEEN THE TWO COPIES, EACH TIME THE PROGRAM IS CHANGED. IN THIS WAY, YOU ALWAYS HAVE A COPY OF THE LAST PROGRAM, AND ONLY THE MOST RECENT CHANGES ARE LOST IF A POWER FAILURE OR OTHER EQUIPMENT TROUBLE DEVELOPS DURING THE PROCESS OF SAVING.

#### STARTING AND STOPPING AUTOMATICALLY

MOST AUDIO CASSETTE RECORDERS HAVE AN INPUT LABELED "REMOTE".
THIS IS NORMALLY OPERATED FROM A SWITCH ON THE MICROPHONE, SO
THAT THE RECORDER CAN BE STARTED AND STOPPED WHILE DICTATING.
THIS INPUT CAN BE USED TO START AND STOP THE RECORDER UNDER
PROGRAM CONTROL FROM THE COMPUTER. ONE OF THE 4 EXTRA CONTROL
LINES COMING FROM THE CASSETTE INTERFACE (DIP-SOCKET PINS 5, 6,
7, OR 8) CAN BE USED TO DRIVE A RELAY WHICH WOULD HAVE ITS
CONTACTS CONNECTED TO THE RECORDER REMOTE JACK. THE MAIN
REQUIREMENTS ARE THAT THE 40 MA AVAILABLE FROM THE CONTROL LINE
BE ABLE TO DRIVE THE RELAY, AND THAT THE RELAY CONTACTS ARE ABLE
TO HANDLE THE CURRENT INTO THE REMOTE JACK, WHICH CAN BE AS HIGH
AS ONE AMPERE.

# OPERATING WITH MORE THAN ONE CASSETTE RECORDER

SOMETIMES IT IS DESIREABLE TO OPERATE WITH TWO OR MORE CASSETTE UNITS. WITH THE TARBELL CASSETTE INTERFACE, IT IS ALREADY POSSIBLE TO READ FROM ONE CASSETTE RECORDER, WHILE WRITING ONTO ANOTHER. THIS IS BECAUSE THE INPUT AND OUTPUT SECTIONS ARE ENTIRELY INDEPENDENT, AND MAY BE PROGRAMMED SEPERATELY. IF IT IS DESIRED TO READ FROM ONE OF TWO UNITS, AND WRITE ONTO ANOTHER, SUCH AS DURING A MERGING OPERATION, RELAYS MAY BE USED TO SWITCH BACK AND FORTH BETWEEN THE TWO INPUT UNITS, UNDER CONTROL OF ONE OF THE 4 CONTROL LINES. IF, HOWEVER, IT IS NECESSARY TO READ SIMULTANEOUSLY FROM TWO DIFFERENT UNITS, OR WRITE DIFFERENT INFORMATION ONTO TWO UNITS AT THE SAME TIME, IT WILL BE NECESSARY TO HAVE TWO CASSETTE INTERFACES.

# MODIFICATIONS ON CASSETTE BASIC FOR CSAVE AND CLOAD USING TARBELL CASSETTE INTERFACE

| 8K B/ | AS IC | 3 • 2 | 12K E        | AS I | 3.2 |   |              |          | DI  | SK BA | SIC          |          |          |
|-------|-------|-------|--------------|------|-----|---|--------------|----------|-----|-------|--------------|----------|----------|
| ADDR  | OLD   | NEW   | ADDR         | OLD  | NEW |   | ADDR         | OLD      | NEW |       | ADDR         | OLD      | NEW      |
| 1008  | 06    | 6E    | 155A         | 06   | 6E  |   | 0E58         | 06       | FA  |       | 1DFE         | DB       | DB       |
| 1009  | E6    | E6    | 155B         | E6   | E6  |   | 0E59         | D2       | 67  |       | 1DFF         | 06       | 6E       |
| 100A  | 01    | 10    | 155C         | 01   | 10  |   | 0E5A         | FA       | 0E  |       | 1E00         | E6       | E6       |
| 100B  | C2    | C2    | 155D         | C2   | CS  |   | 0E5B         | 67       | 3E  |       | 1E01         | 80       | 20       |
| 100C  | 07    | 07    | 155E         | 59   | 59  |   | 0E5C         | 0E       | 19  |       | 1E02         | C2       | C2       |
| 100D  | 10    | 10    | 155F         | 15   | 15  |   | 0E5D         | 78       | CD  |       | 1E03         | FE       | FE       |
| 100E  | DB    | DB    | 1560         | DB   | DB  |   | 0E5E         | CD       | FD  |       | 1E04         | 1 D      | 1 D      |
| 100F  | 07    | 6F    | 1561         | 07   | 6F  |   | 0E5F         | FA       | 1 D |       | 1E05         | F 1      | FI       |
|       |       |       |              |      |     |   | 0E60         | 1 D      | 2F  |       | 1E06         | DЗ       | D3       |
| 1016  | 06    | 6E    | 1568         | 06   | 6E  |   | 0E61         | CD       | CD  |       | 1E07         | 07       | 6F       |
| 1017  | E6    | E6    | 1569         | E6   | E6  |   | 0E62         | FA       | FD  |       | 1E08         | C 9      | C 9      |
| 1018  | 80    | 20    | 156A         | 80   | 20  |   | 0E63         | 1 D      | 1 D |       | 1E09         | 06       | 06       |
| 1019  | CS    | CS    | 156B         | C2   | C2  |   | 0E64         | C3       | C3  |       | 1E0A         | 01       | 01       |
| 101A  | 15    | 15    | 156C         | 67   | 67  |   | 0E65         | 74       | 74  |       | 1E0B         | FE       | FE       |
| 101B  | 10    | 10    | 156D         | 15   | 15  |   | 0E66         | ΟE       | ΟE  |       | 1EOC         | 2E       | 2 E      |
| 1010  | F1    | F1    | 156E         | F1   | F 1 |   | 0E67         | 0E       | 3E  |       | 1EOD         | CA       | CA       |
| 101D  | D3    | D3    | 156F         | D3   | D3  |   | 0E68         | 04       | 10  |       | 1E0E         | 12       | 12       |
| 101E  | 07    | 6F    | 1570         | 07   | 6F  |   | 0E69         | CD       | D3  |       | 1EOF         | ΟE       | 0E       |
| 101F  | C9    | C 9   | 1571         | C 9  | C 9 |   | 0E6A         | FO       | 6E  |       | 1E10         | E5       | E5       |
| 1020  | E5    | E5    | 1572         | E5   | E5  |   | 0E6B         | 1 D      | 00  |       | 1E11         | 3E       | CD       |
| 1021  | 3E    | CD    | 1573         | 3E   | CD  |   | 0E6C         | B8       | 00  |       | 1E12         | DЗ       | FD       |
| 1022  | D3    | 14    | 1574         | D3   | 66  |   | OE6D         | Ç2       | 00  |       | 1E13         | CD       | 1 D      |
| 1023  | CD    | 10    | 1575         | CD   | 15  |   | OE6E         | 67       | 00  |       | 1E14         | FD       | 3E       |
| 1024  | 14    | 3E    | 1576         | 66   | 3E  |   | 0E6F         | ΟE       | 00  |       | 1E15         | 1 D      | E6       |
| 1025  | 10    | E6    | 1577         | 15   | E6  |   | 0E70         | OD       | 00  |       | 1E16         | CD       | CD       |
| 1053  | 06    | 3E    | 15A5         | 06   | 3E  |   | 0E71         | C2       | 00  |       | 1E17         | FA       | FD       |
| 1053  | 03    | 10    | 15A5<br>15A6 | 03   | 10  |   | 0E72         | 69       | 00  |       | 1E18         | 1 D      | 1 D      |
| 1054  | CD    | D3    | 15A0         | CD   | D3  |   | 0E73         | 0E       | 00  |       |              |          |          |
| 1056  | 07    | 6E    | 15A8         | 59   | 6E  | • | 0E74         | F7       | F7  |       | 1E48         | 06       | 3E       |
| 1057  | 10    | 00    | 15A0         | 15   | 00  | * |              |          |     |       | 1E49         | 03       | 10       |
| 1058  | D6    | 00    | 15AA         | D6   | 00  |   | 1DF0         | DB       | DB  |       | 1E4A         | CD       | D3       |
| 1059  | D3    | 00    | 15AB         | D3   | 00  |   | 1DF1         | 06       | 6E  |       | 1E4B         | FO       | 6E       |
| 105A  | C2    | 00    | 15AC         | C2   | 00  |   | IDF2         | E6       | E6  |       | 1E4C         | 1 D      | 00       |
| 105B  | A3    | 00    | 15AD         | A5   | 00  |   | 1DF3         | 01       | 10  |       | 1E4D         | D6       | 00       |
| 105C  | 10    | 00    | 15AE         | 15   | 00  |   | IDF4         | C5       | C5  |       | 1E4E         | D3       | 00       |
| 105D  | 05    | 00    | 15AE         | 05   | 00  |   | IDF5<br>IDF6 | FO       | FO  |       | 1E4F         | C2       | 00       |
| 105E  | C2    | 00    | 15B0         | Ç2   | 00  |   | IDF 6        | 1D       | 1D  |       | 1E50         | 48       | 00       |
| 105F  | A5    | 00    | 15B1         | A7   | 00  |   | IDF 8        | DB<br>07 | DB  |       | 1E51         | 1E       | 00       |
| 1060  | 19    | 00    | 15B2         | 15   | 00  |   | 1010         | 0 /      | 6F  |       | 1E52         | 05       | 00       |
|       |       |       |              |      |     |   |              |          |     |       | 1E53<br>1E54 | C2<br>4A | 00<br>00 |
|       |       |       |              |      |     |   |              |          |     |       | 1E54         | 1E       | 00       |

# PROCESSOR TECHNOLOGY SOFTWARE PACKAGE #1

Modified for Low Memory and Cassette by Fred Clark, Modified for Tarbell Cassette by Don Tarbell.

The main purpose of this software is to allow development of assembly-language programs. Programs may be entered from the keyboard in standard assembly-language format, edited, assembled, and saved on cassette in either source or machine format. These programs may be then loaded back into memory at some future time for listing, editing or running. Following is a summary of the commands. All address and byte information is in hex.

| FILE /NAME/ AAAA            | -Creates a file of name NAME at address AAAA (hex). Up to six text files can be in memory at the same |
|-----------------------------|-------------------------------------------------------------------------------------------------------|
|                             | time. The file just created is the current file.                                                      |
| FILE /NAME/ O               | -This command deletes the file named NAME.                                                            |
| FILE /NAME/                 | -Makes the named file the current file.                                                               |
| FILE                        |                                                                                                       |
| FILE                        | -Prints the starting and ending addresses of the current file, and it's name.                         |
| FILES                       |                                                                                                       |
| P III EiO                   | -Lists the name, starting & ending address for each                                                   |
| DUMP SSSS EEEE              | of the files in the system. Current file at top.                                                      |
| EXEC AAAA                   | -Dumps the contents of memory from SSSS to EEEE.                                                      |
|                             | -Executes the machine-language program at address AAAA.                                               |
| EXEC /NAME/<br>ENTR AAAA    | -Searches the cassette for named file, loads and exec.                                                |
| LIST NNNN                   | -Enter data into memory: B1 B2 B3 B4/                                                                 |
| DELT NNNN MMMM              | -Lists the current file starting at line NNNN.                                                        |
|                             | -Deletes lines NNNN through MMMM from current file.                                                   |
| MMMM (text entered)         | -Enter a line of text into the current file. Always                                                   |
|                             | use 4 decimal digits. It works similar to BASIC,                                                      |
| A C'C'IM A A A A            | in that the numbered lines are ordered automatically.                                                 |
| ASSM AAAA<br>ASSM AAAA BBBB | -Assembles current file into address AAAA.                                                            |
|                             | -Assembles at address AAAA, but puts code at BBBB.                                                    |
| CUST                        | -Execute a customer (user) routine at address E000.                                                   |
| SFIL                        | -Save the current file on cassette.                                                                   |
| LFIL                        | -Load the current file from cassette. The name of                                                     |
|                             | the file on tape must match the name of the current                                                   |
| ATT.                        | file. Be sure there is enough room in memory.                                                         |
| CFIL                        | -Check a cassette file written with the SFIL command                                                  |
| A T3 TT                     | above, for errors, without overwriting current file.                                                  |
| AFIL                        | -Append a file from cassette to the current file.                                                     |
| SAVE SSSS EEEE              | -Save a block of memory from SSSS to EEEE on cassette.                                                |
| LOAD SSSS                   | -Load a block of memory from cassette starting at SSSS.                                               |
| CHEK SSSS                   | -Check a cassette file written with SAVE command.                                                     |
| NAME /NAME/                 | -Rename the current file to NAME.                                                                     |
| RNUM N<br>NLIS NNNN         | -Renumber the current file by increment NLists the current file at NNNN without line numbers.         |
|                             |                                                                                                       |
|                             | eful, but may not be completely free of bugs. It                                                      |
|                             | t 4096 bytes of memory, and uses about 2048 bytes                                                     |
| Ctl V france                | es and scratch pad. Ctl-C escapes from any printing.                                                  |
| out-wireezes print:         | ing until another character is typed. The package                                                     |
| TR SASTIBLIE ILOW IS        | arbell Electronics for the prices listed below:                                                       |
|                             |                                                                                                       |

Cassette Tape with software and instructions: \$5.00 A reassembled and patched (updated) listing: \$5.00

SOMETIMES IT IS NECESSARY TO WRITE ASSEMBLY OR MACHINE LANGUAGE PROGRAMS FOR A PARTICULAR INTERFACE. THE CLASS OF PROGRAMS WE ARE TALKING ABOUT HERE ARE CALLED "DRIVERS". THESE WOULD BE REQUIRED FOR LINKAGE TO A PIECE OF SOFTWARE FOR WHICH PATCHES ARE NOT PROVIDED IN THE MANUAL.

THIS INTERFACE IS A SYNCRONOUS DEVICE. ONE OF THE IMPLICATIONS OF THIS IS THAT DATA OR PROGRAMS ARE MOST EFFICIENTLY WRITTEN AS A CONTIGUOUS BLOCK, RATHER THAN AS SEPERATE BYTES. THERE ARE A FEW RULES THAT MUST BE FOLLOWED WHEN WRITING SOFTWARE FOR THIS DEVICE:

1. THE FIRST BYTE MUST BE A "START BYTE" WHICH MAY BE ANY BYTE

- 1. THE FIRST BYTE MUST BE A "START BYTE" WHICH MAY BE ANY BYTE EXCEPT 00, FF, OR E6 (HEXADECIMAL).
- 2. THE SECOND BYTE MUST BE A "SYNC BYTE" WHICH MUST BE E6 (HEX).
- 3. THE SOFTWARE MUST BE ABLE TO DELIVER BYTES TO THE INTERFACE AS FAST AS IT CAN ACCEPT THEM, WHICH AT THE STANDARD SPEED, IS 187 BYTES PER SECOND. THIS MEANS THAT ANY LOOP THAT THE PROGRAM GOES THROUGH WHICH IS BETWEEN BYTES, MUST LAST LESS THAN 5.3 MILLISECONDS. AN AVERAGE INSTRUCTION TIME ON THE 8080 WITH NO WAIT STATES IS 2 CYCLES, OR 1 MICROSECOND. THUS, THERE SHOULD BE NO MORE THAN ABOUT 5300 INSTRUCTION EXECUTIONS BETWEEN BYTES BEING SENT OUT. THIS IS NORMALLY NOT A PROBLEM.
- 4. A SIMILAR CONSTRAINT MUST BE OBSERVED WITH RESPECT TO THE INPUT SOFTWARE, WHICH SHOULD BE ABLE TO ACCEPT DATA AS FAST AS IT IS BEING MADE READY BY THE INTERFACE.


THERE ARE SITUATIONS IN WHICH THE DATA CANNOT BE PROVIDED OR ACCEPTED FAST ENOUGH BY THE SOFTWARE. ONE EXAMPLE OF THIS IS DATA WHICH IS BEING GENERATED BY A PROGRAM RUNNING IN BASIC. THIS PROBLEM IS SOLVED BY SENDING THE DATA OUT AND READING IT IN A LINE AT A TIME, WITH NULLS IN BETWEEN. THE PAGE ENTITLED "HOW TO SAVE AND LOAD DATA FROM A BASIC PROGRAM" IS A SAMPLE PROGRAM THAT SHOWS HOW TO DO THIS. THERE ARE AT LEAST TWO OTHER WAYS TO HANDLE THIS PROBLEM: 1) SEND EACH BYTE AS A SEPERATE BLOCK WITH IT'S OWN START AND SYNC BYTES. 2) ACCUMULATE BYTES IN A BUFFER AREA OF MEMORY, AND START AND STOP THE CASSETTE RECORDER UNDER CONTROL OF THE COMPUTER WHEN IT IS TIME TO DUMP AND REFILL THE BUFFER.

OTHER ITEMS TO BE CONSIDERED WHEN WRITING SOFTWARE:

- 1. SINCE TAPE IS AN IMPERFECT MEDIUM, IT IS GENERALLY USEFUL TO INCORPORATE AN ERROR-CHECKING SCHEME, SUCH AS THE CHECKSUM SYSTEM THAT IS DEMONSTRATED ON THE PAGES ENTITLED "OUTPUT ROUTINE WITH CHECKSUM" AND "INPUT ROUTINE WITH CHECKSUM". THERE ARE MANY SYSTEMS POSSIBLE, EACH PROVIDING DIFFERENT KINDS AND LEVELS OF PROTECTION, AND BOOKS HAVE BEEN WRITTEN ABOUT THESE.
- 2. IT IS SOMETIMES HANDY TO HAVE AN IDENTIFIER, SUCH AS A NAME, WRITTEN ALONG WITH THE FILE ONTO CASSETTE. AN EXAMPLE IS THE ONE-LETTER NAME GIVEN TO ALTAIR BASIC PROGRAMS WHEN WRITING TO CASSETTE.
- 3. ANOTHER ITEM THAT IS USEFUL IS A WAY FOR THE PROGRAM TO TELL HOW LONG THE FILE IS. A ONE OR TWO-BYTE HEADER TO INDICATE LENGTH OF A FILE OR BLOCK IS SOMETIMES USED. IN THE MODIFIED PROCESSOR TECHNOLOGY SOFTWARE PACKAGE #1 THAT I SUPPORT, BLOCKS ARE PRECEDED BY ONE LENGTH BYTE THAT MAY BE FROM 1 TO 255. A LENGTH OF ZERO INDICATES THE END OF THE FILE.
- 4. A "TYPE BYTE" IS A UNIQUE BYTE FOR A PARTICULAR FORMAT OF FILE, SO THAT A SOPHISTICATED LOADER MAY DISTINGUISH BETWEEN DIFFERENT TYPES, AND LOAD THEM APPROPRIATELY. I USE A 90 (HEX) TYPE BYTE IMMEDIATELY FOLLOWING THE SYNC BYTE ON THE PROC. TECH. SOFTWARE.

USING THE TARBELL CASSETTE INTERFACE UNDER INTERRUPT CONTROL

There is no built-in provision for interrupts in the design. However, it is not too difficult to make a modification to the board to provide for interrupts. Two bits in the control line register are used as interrupt-enable flip-flops. It is necessary to install another 7403 quad 2-input open-collector NAND gate in one of the spare IC positions at the top of the board. The circuit diagram below shows how to connect the 7403:

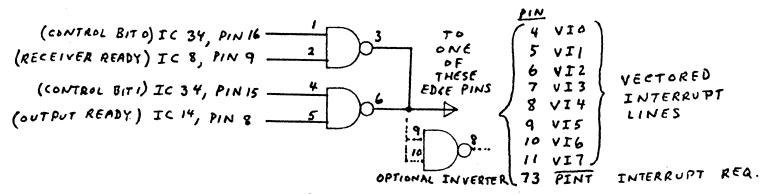


If you do not have a vectored interrupt card, connect the output pins 3 and 6 to the edge connector pin 73. An interrupt will then be caused when the following conditions are true: 1) Interrupts are enabled with an EI instruction.
2) Control bit 0 is high and the receiver is ready with an input byte; or control bit 1 is high and the transmitter is ready for an output byte. Both conditions 1 and 2 must be true for an interrupt to be caused.

If you do have a vectored interrupt card, connect the output pins 3 and 6 to one of the edge connector pins 4,5,6,7,8,9, 10, or 11, depending on what level you want the cassette interface. Be sure that you have the correct polarity to cause an interrupt. The output at pins 3 and 6 goes low to cause an interrupt. If you have a vectored interrupt card that requires a high-going signal to cause an interrupt, you may use the extra gate shown above to invert the line. Read your manual on your interrput board to make sure.

There is not enough room here to explain how to use the interrupt system, but the following lines show how to enable and disable the two interrput bits on this board.

| enable receiver interrupt:    | IVM<br>TUO | A , 1<br>6EH |
|-------------------------------|------------|--------------|
| enable transmitter interrupt: |            | A,2<br>6EH   |
| enable both interrupts:       | MVI<br>OUT | A,3<br>6EH   |
| disable both interrupts:      | MVI        | A,0          |


We have purchased the introductory variable-speed PHI-DECK package, which includes the deck, control electronics, power supply, and control box. We have been experimenting with an adapter which connects between the Tarbell Cassette Interface. This the read-write heads, and the control electronics. adapter provides start-stop, forward, rewind, and fast-forward control for the PHI-DECK from the Tarbell Cassette Interface. It also includes read-write electronics for one channel. is still in the experimental stage, but speeds of 1000 bytes per second have been attained. The information is being provided here for those who would like to experiment further along these lines. The circuit is not guaranteed to work for your application, and will probably not be exactly what we end up with for our use. As progress is made, further refinements will be published, including more supporting

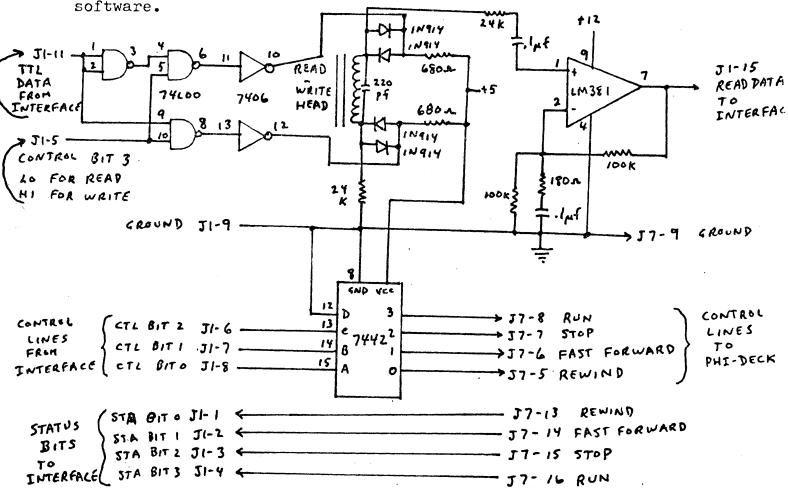


The simple program below is handy for experimenting. Flip sense switch 2 up momentarily to pulse the control line.

|         |         |       |                          | Co | ntro       | ol Table |
|---------|---------|-------|--------------------------|----|------------|----------|
| LOOP IN | FFH DB  | FF    | Read Sense Switches.     | s1 | <b>s</b> 0 | function |
| OUT     | 6EH D3  | 6E    | Write to Control Port.   | 0  | 0          | RUN      |
| IN      | 6EH DB  | 6E    | Read Status Lines.       | 0  | 1          | STOP     |
| OUT     | FFH D3  | FF    | Write To Display Lights. | 1  | 0          | FF       |
| JMP     | LOOP C3 | 00 00 | Do it all over again.    | 1  | 1          | REW      |

 Sense switch 3 should be up for read, down for write.

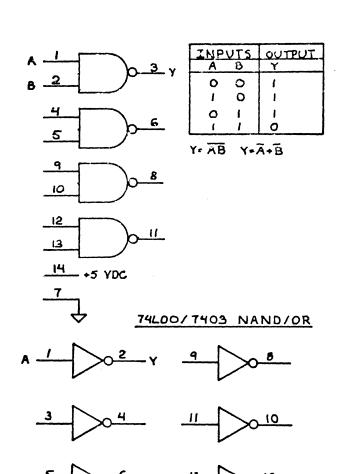




INPUT OUTPUT


0


0


ı


14 +5 VDC

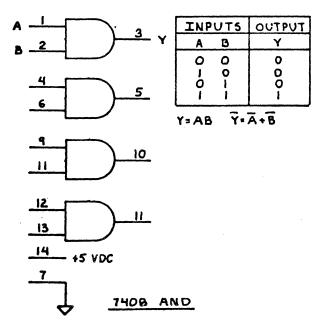

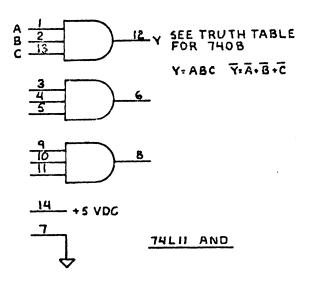

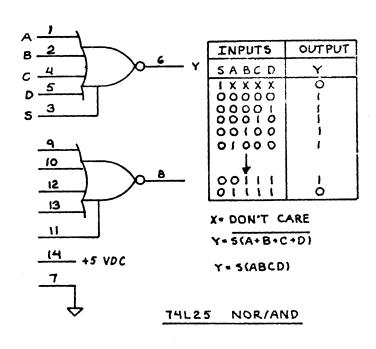

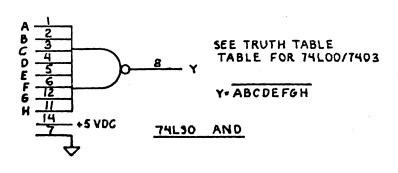

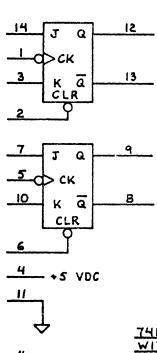


|     | NFU"    | OUTPU'S |   |      |       |
|-----|---------|---------|---|------|-------|
| CLR | CK.     | J       | K | α    | G     |
| 0   | x       | X       | X | 0    | ١     |
| 1   | Л       | 0       | 0 | NO C | HANGE |
| i   | Л       | ì       | 0 | 1    | 0     |
| ,   | <u></u> | 0       | ł | 0    | ١     |
| 1   | J       | 1       | i | ia   | a     |

NO CHANGE IN OUTPUT UNTIL FALLING EDGE OF CLOCK

X = DON'T CARE

74L73/7473 J-K FLIP-FLOP WITH CLEAR

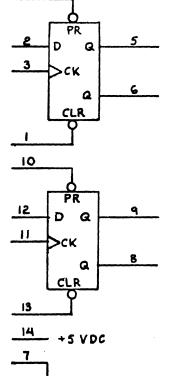



| I   | NPU | OUTF | PUTS  |          |              |
|-----|-----|------|-------|----------|--------------|
| CLR | PR  | CK   | D     | a        | Q.           |
| -00 | 0-0 | XXX  | XXXVO | ILL<br>O | O-AL<br>EGAL |


NO CHANGE IN OUTPUT UNTIL RISING EDGE OF CLOCK

X- DON'T CARE

74L74 D-TYPE FLIP- FLOP WITH PRESET AND CLEAR

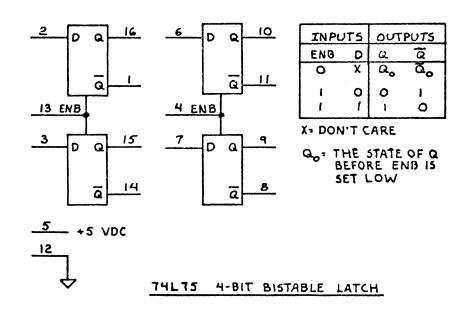


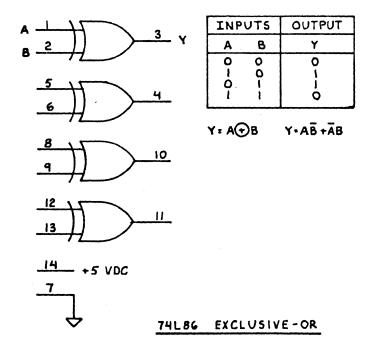

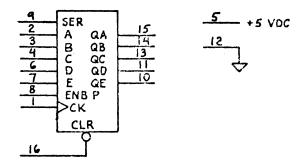

- SER. SERIAL DATA INPUT. DATA IS MOVED FROM SERIAL INPUT TO QA AFTER THE FIRST CLOCK.
- A-B- PARALLEL DATA INPUT. DATA IS PRESENT ON ASSOCIATED OUTPUT (A→QA) AFTER CLOCK. IF MODE IS SHIFTED FROM PARALLEL, DATA WILL MOVE TOWARDS QE ON EACH FOLLOWING CLOCK.
- ENB P. ENABLE PARALLEL MODE. WHEN SET, REGISTER IS IN PARALLEL MODE. WHEN RESET, REGISTER IS IN SERIAL MODE.
- CK. CLOCK. NO CHANGE IN OUTPUT UNTIL RISING EDGE OF CLOCK.
- CLR= CLEAR. WHEN RESET ALL GUTPUTS ARE FORCED TO TO RESET WITHOUT REGARDS TO ANY OTHER INPUT.
- QA-QE + OUTPUTS. ALL OUTPUTS USED FOR PARALLEL OUTPUT. FOR SERIAL OUTPUT, ONE OF THE OUTPUTS 15 USED DEPENDING ON THE LENGTH DESIRED.


# 7496 5-BIT SHIFT REGISTER

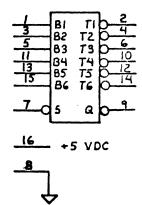

IF BI THROUG BG ARE BIT-FOR-BIT EQUAL TO THE BITS RESET ON TI THROUGH TG, Q IS RESET. FOR ALL OTHER CONDITIONS Q IS SET


S = STROBE. WHEN SET Q IS DISABLED


DMB131 6-BIT COMPARITOR

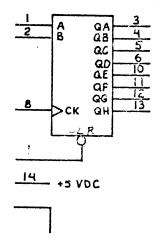



- A,B. SERIAL DATA INPUTS. ONE OF THE TWO MUST BE SET TO ENABLE THE OTHER. DATA IS PRESENT AT QA AFTER ONE CLOCK AND MOVES TOWARD QH ON EACH FOLLOWING CLOCK.
- CK= CLOCK. NO CHANGE IN OUTPUT UNTIL RISING EDGE OF CLOCK
- CLR\*CLEAR. WHEN RESET, ALL OUTPUTS ARE RESET WITHOUT REGARDS TO TO OTHER INPUTS.
- QA- QH= OUTPUTS. DATA IS MOVED FROM A AND B TO QA ON EACH CLOCK AND THE DATA AT QA IS MOVED TOWARDS QH.

# 74LIGH 8-BIT FARALLEL-OUT SHIFT REGISTER

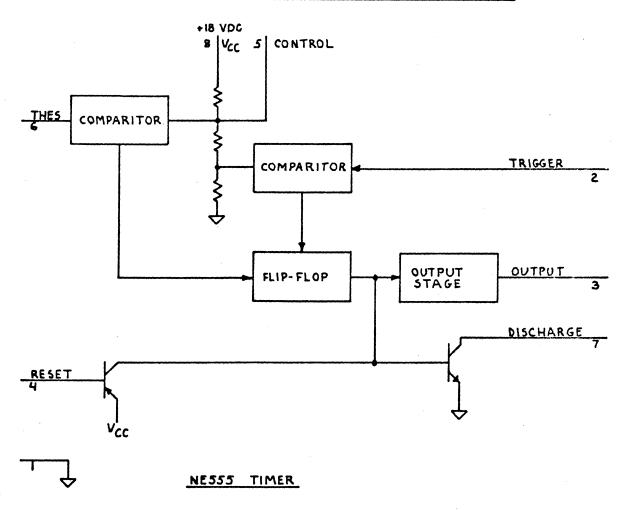

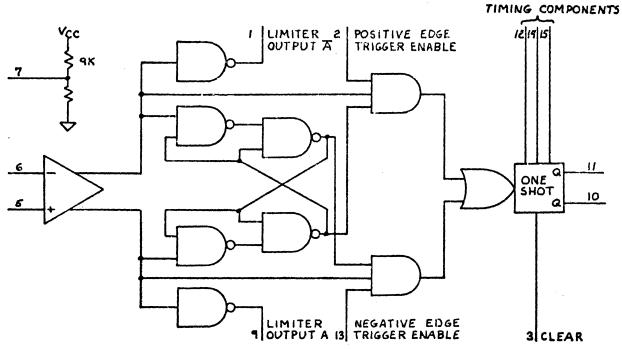

 

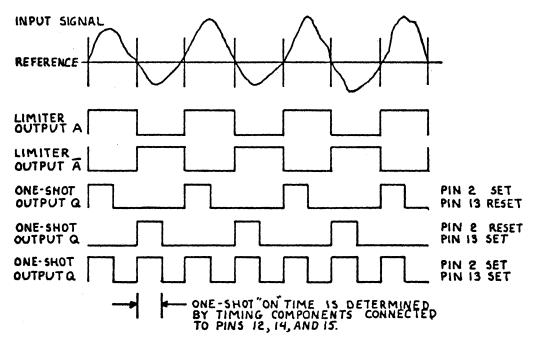

AND OUTPUT WAVEFORMS

#### DEAR CUSTOMER.

THANK YOU VERY MUCH FOR PURCHASING A CASSETTE INTERFACE.

I AM INTERESTED TO KNOW WHAT KIND OF PROGRESS YOU HAVE MADE
WITH YOUR TARBELL CASSETTE INTERFACE. I WOULD REALLY APPRECIATE
IT IF YOU WOULD TAKE TIME TO FILL THIS QUESTIONAIRE OUT. THIS
WILL HELP ME TO PROVIDE YOU WITH BETTER SERVICE IN THE FUTURE.

| DID YOUR INTERFACE ARRIVE IN A REASONABLE LENGTH OF TIME?        | YES | NO |
|------------------------------------------------------------------|-----|----|
| WERE ANY OF THE ITEMS DAMAGED IN SHIPMENT?                       | YES | NO |
| WERE ANY OF THE ITEMS MISSING? IF SO, WHAT?                      | YES | NO |
| WAS THE QUALITY OF WORKMANSHIP ON THE BOARD REASONABLE?          | YES | NO |
| HAVE YOU STARTED CONSTRUCTION YET?                               | YES | NO |
| HAVE YOU HAD ANY PROBLEM UNDERSTANDING THE MANUAL? WHERE?        | YES | NO |
| WERE THE COMPONENTS OF REASONABLE QUALITY? WHAT WASN'T?          | YES | NO |
| HAVE YOU COMPLETED THE CONSTRUCTION YET?                         | YES | NO |
| HAVE YOU TESTED THE INTERFACE YET?                               | YES | NO |
| WHAT IS THE MAKE AND MODEL OF YOUR RECORDER?                     |     |    |
| HAVE YOU ENCOUNTERED ANY PROBLEMS? WHAT?                         | YES | NO |
| IF THERE WERE PROBLEMS, ARE THEY FIXED? IN WHAT WAY?             | YES | NO |
| HAVE YOU FOUND ANY OF THE ADJUSTMENTS CRITICAL? WHICH?           | YES | NO |
| ARE YOU DISATISFIED IN ANY WAY WITH THE UNIT? HOW?               | YES | NO |
| DO YOU HAVE ANY SUGGESTIONS FOR IMPROVEMENT OF THE DESIGN        | YES | NO |
| WHAT DO YOU FEEL IS THE MAJOR DISADVANTAGE OF THIS UNIT?         |     |    |
| TIATE WATER THE AND AND CAPBULANT OF TARRUADE OF AN ANTHE MA STI | 6   |    |

HAVE YOU DEVELOPED ANY SOFTWARE OR HARDWARE RELATIVE TO THE INTERFACE THAT MIGHT BE OF USE TO OTHER PEOPLE? WHAT?

HAVE YOU TRIED PACKING DENSITIES HIGHER THAN THE STANDARD 800 BITS/INCH? WHAT DENSITY? WITH WHAT RESULTS?

WHAT IS YOUR NAME, ADDRESS, AND PHONE NUMBER?

DO YOU MIND IF I GIVE OUT YOUR NAME TO OTHER CASSETTE USERS?

PLEASE USE THIS SPACE, AND THE REVERSE SIDE, IF NECESSARY, TO MAKE ANY COMMENTS ON THE INTERFACE THAT MAY BE HELPFUL.

SINCERELY.

Donald E. TARBELL 144 MIRALESTE DRIVE #106 MIRALESTE, CALIF. 90732