

# ILLUSTRATED PARTS BREAKDOWN

## RX33 FLEXIBLE DISK DRIVE

#### **HOW TO USE THE IPB**

#### **GENERAL**

This IPB is compiled following the organization and nomenclature of the engineering drawing structure.

#### MAJOR ASSEMBLY LOCATOR (When Applicable)

The Major Assembly Locator (first illustration) is an index that provides a description and a figure reference for all illustrations used in this manual.

#### **INDENTED PARTS LIST**

This manual identifies each assembly being broken down (figure reference callout), and all parts of that assembly. Further breakdown of an assembly is shown by an asterisk (\*) preceding the item callouts in the Description Column. The number of asterisks preceding an item is used to denote the subordination of that item with respect to the Major Assembly. A single asterisk preceding an item description indicates that the item is part of the major assembly being illustrated. Items that are subordinate to single asterisks items, are denoted by two asterisks (\*\*) and immediately follow the related single asterisk item. Additional asterisks are used, as required, to denote further subordination. This system of part identification, provides a means for the user to identify the next higher assembly item and make alternate selections for parts when the required replacement part of assembly is not immediately available.

#### **COLUMN CALLOUT DESCRIPTION**

Figure and Item - Indicates the figure number and item number of each part.

**Description** – Lists the name of the part and pertinent specifications (when required). Asterisks preceding the description denote the subordination of the part to the next higher assembly.

**DEC Part No.** – Lists the Digital part ordering number. A blank in this column indicates a Digital part number was not assigned at the time of publication.

**ECO Cut-In** – The notation at the top of this column indicates the ECO level of the system (option), at which the IPB was initially prepared. Subsequent ECO level designations, that modify existing parts or add new parts to the device, are inserted in the ECO Cut-In column next to the part that is added or modified.

**Used On Code** – Letters in this column correspond to the variation codes assigned in Figure 1. Parts with an Alpha notation(s) are used only in those option variations. A blank indicates that the part is used on all option variations.

**Ref Fig No.** – A cross reference between illustrations. For each Major Assembly, the number in this column denotes the figure of the next higher assembly. For all subassemblies, the number in this column denotes the figure showing additional detailed breakdown.

#### PART NUMBER/PART DESCRIPTION SORT SECTION

Parts are sorted both numerically and alphabetically by description, referenced to a location within the IPB, by figure number and item number.

	REVISION HISTORY		OTHER IPB MANUALS REQUIRED
PRINTING	ECO LEVEL	DATE	TO SUPPORT THIS OPTION
1st Printing	RX33 00000-00000	2-Jun-86	N/A
		i i	


Copyright <sup>©</sup> 1986 by Digital Equipment Corporation. All rights reserved.

Digital Equipment Corporation reserves the right, without notice, to make substitutions and modifications in the specifications of products documented in this manual and further reserves the right to withdraw any of these products from the market without notice.

Digital Equipment Corporation is not responsible for errors which may appear in the technical description (including illustrations and photographs) of the products covered by this manual.

None of the descriptions contained in this manual imply the granting of any license whatsoever to make, use or sell equipment constructed in accordance therewith.



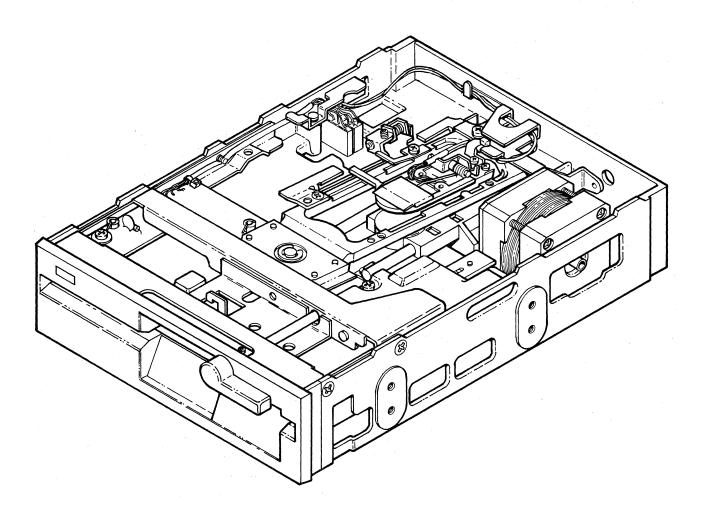

RX33-01A

Figure 1. RX33 Flexible Disk Drive Assembly (Sheet 1 of 2)

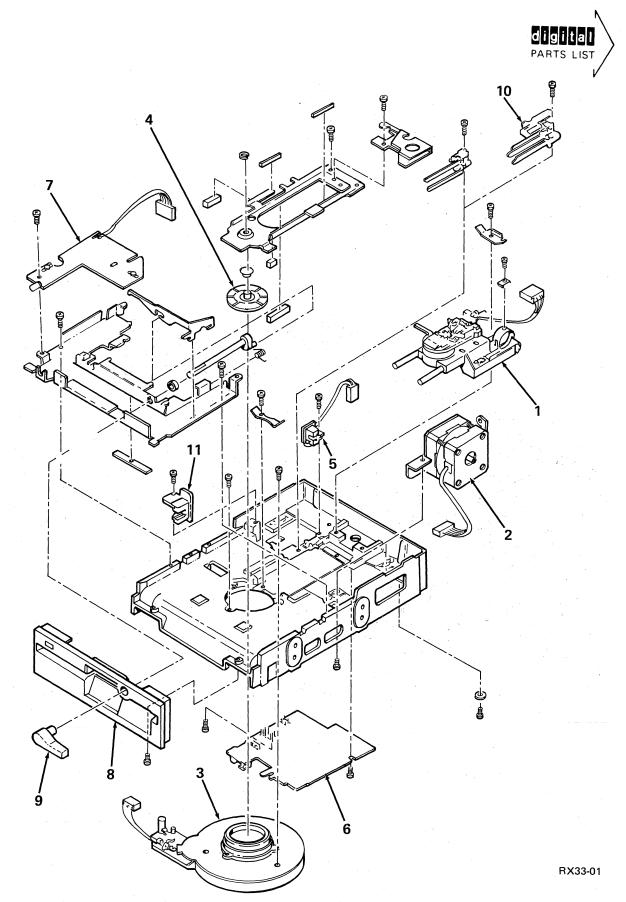


Figure 1. RX33 Flexible Disk Drive Assembly (Sheet 2 of 2)

FIG. & ITEM NO.	DESCRIPTION	DEC PART NO.	ECO CUT-IN RX33 00000	USED ON CODE	REF FIG NO.
1- 1 2 3	*Head Carriage Assembly  *Stepping Motor Assembly  *DD Motor Assembly	RX33-00  29-25987-00 29-25988-00 29-25989-00			
4 5 6 7 8 9	*Collet Assembly *Too Sensor Module *MFD Control Module *Front OPT Module *Front Bezel Assembly *Front Lever Assembly	29-25990-00 29-25982-00 29-25983-00 29-25984-00 29-25985-00 29-25986-00			
10 11	*CSS Assembly *Disk Sensor Module	29-25980-00 29-25981-00			

### ILLUSTRATED PARTS BREAKDOWN COMMENT SHEET

Any and all comments and suggestions for correcting errors and/or additional information to improve this manual will be reviewed and researched for possible use when this manual is revised and/or reprinted. Enter your comments and suggestions in the form provided below and return to Technical Documentation.

FIGURE NO	MODEL RX33 FLE	XIBLE DISK DRIVE	_ PUBLICATION NO	EK-ORX33-IP-001
CHANGE FROM CHANGE TO CHANGE TO CHANGE TO CHANGE TO CHANGE TO CHANGE FROM CHANGE FROM CHANGE FROM CHANGE FROM CHANGE TO CHANGE TO CHANGE FROM CHANGE FROM CHANGE FROM CHANGE FROM CHANGE FROM CHANGE FROM CHANGE TO CHAN				
CHANGE FROM CHANGE TO CHANGE TO CHANGE TO CHANGE TO CHANGE TO CHANGE FROM CHANGE FROM CHANGE FROM CHANGE FROM CHANGE TO CHANGE TO CHANGE TO CHANGE FROM CHANGE FROM CHANGE FROM CHANGE FROM CHANGE FROM CHANGE TO CHANGE				
CHANGE TO CHANGE TO ITEM NO. FIGURE NO. ITEM NO. CHANGE FROM CHANGE FROM CHANGE FROM CHANGE TO CHANGE TO CHANGE FROM CHANGE FROM CHANGE FROM CHANGE FROM CHANGE FROM CHANGE TO C	IGURE NO	ITEM NO	FIGURE NO	ITEM NO
FIGURE NO ITEM NO FIGURE NO ITEM NO CHANGE FROM CHANGE FROM CHANGE TO ITEM NO CHANGE FROM CHANGE FROM CHANGE TO CHANGE TO CHANGE TO ITEM NO CHANGE TO	CHANGE FROM		CHANGE FROM	
CHANGE FROM CHANGE FROM CHANGE TO ITEM NO ITEM NO ITEM NO ITEM NO ITEM NO CHANGE FROM CHANGE FROM CHANGE TO	HANGE TO		CHANGE TO	
HANGE FROM CHANGE FROM  HANGE TO ITEM NO FIGURE NO ITEM NO  HANGE FROM CHANGE FROM  HANGE TO CHANGE TO  DDITIONAL COMMENT(S)    lease describe your position   lease describe your position    lame Organization    treet Department				
IGURE NO ITEM NO FIGURE NO ITEM NO HANGE FROM CHANGE FROM HANGE TO CHANGE TO  DDITIONAL COMMENT(S)    lease describe your position Organization   treet Department	IGURE NO.	ITEM NO	FIGURE NO	ITEM NO
IGURE NOITEM NOFIGURE NOITEM NO  HANGE FROMCHANGE FROM  CHANGE TOCHANGE TO  DDITIONAL COMMENT(S)    lease describe your position   ameOrganization  DepartmentDepartment	HANGE FROM	·	CHANGE FROM	
CHANGE FROM CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO  CHANGE TO	HANGE TO		CHANGE TO	
CHANGE FROM CHANGE TO CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO CHANGE TO  CHANGE TO  CHANGE TO				
CHANGE TO	IGURE NO	ITEM NO	FIGURE NO	ITEM NO
ADDITIONAL COMMENT(S)  Please describe your position.  Jame Organization  Careet Department	HANGE FROM		CHANGE FROM	
Please describe your position.  Jame Organization  Street Department	HANGE TO		CHANGE TO	
NameOrganization  Street Department				
Street Department	Please describe your p	osition		
	lame		Organization	
	Street		Department	
	Dity			

Fold Here		
Do Not Tear - Fold Here and S	taple	
digital		
digital		No Postage Necessary
digital		Necessary if Mailed in the
digital		Necessary
BUSINESS REPLY MAIL FIRST CLASS PERMIT NO.33 MAYNARD, MA		Necessary if Mailed in the
BUSINESS REPLY MAIL		Necessary if Mailed in the
BUSINESS REPLY MAIL FIRST CLASS PERMIT NO.33 MAYNARD, MA. POSTAGE WILL BE PAID BY ADDRESSEE  Digital Equipment Corporation		Necessary if Mailed in the
BUSINESS REPLY MAIL FIRST CLASS PERMIT NO 33 MAYNARD, MA. POSTAGE WILL BE PAID BY ADDRESSEE		Necessary if Mailed in the