

user guide

hp StorageWorks MSL5000 and MSL6000 series tape libraries

Fifth Edition (June 2003)

Part Number: 231910-005

Product Regulatory Series ID Number: 1005 and 1005A

This guide describes procedures for installing, configuring, operating, maintaining, and troubleshooting the HP StorageWorks MSL5000 and MSL6000 Series tape libraries.



© Hewlett-Packard Company, 2003. All rights reserved.

Hewlett-Packard Company makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard. The information contained in this document is subject to change without notice.

Compaq Computer Corporation is a wholly-owned subsidiary of Hewlett-Packard Company.

All other product names mentioned herein may be trademarks of their respective companies.

Hewlett-Packard Company shall not be liable for technical or editorial errors or omissions contained herein. The information is provided "as is" without warranty of any kind and is subject to change without notice. The warranties for Hewlett-Packard Company products are set forth in the express limited warranty statements accompanying such products. Nothing herein should be construed as constituting an additional warranty.

Printed in the U.S.A.

HP StorageWorks MSL5000 and MSL6000 Series Tape Libraries User Guide
Fifth Edition (June 2003)
Part Number: 231910-005



contents

About this Guide	13
Related Documentation	14
Conventions	14
Document Conventions	14
Text Symbols	14
Equipment Symbols	15
Rack Stability	16
Getting Help	17
HP Technical Support	17
HP Storage Website	17
HP Authorized Reseller	17
1 Introduction	19
Models	20
Accessories	20
Tape Drives	21
Ultrium Tape Drives	22
Ultrium Tape Cartridges	22
DLT and SDLT Tape Drives	24
DLT Tape Cartridges	25
SDLT Tape Cartridges	26
Magazines	27
Power Supplies	28
Robotics	30
Library Controller Board	31
Factory-Defined Accessory PCI Slots	33
Embedded Network Storage Router (Optional)	34
Front Panel Indicators	35
Multi Unit Library Systems	36

2	Installation	39
	Setting Up the Tabletop Model	40
	Converting a Tabletop Model to a Rackmount Model	41
	Setting Up the Rackmount Model	42
	Applying Power to the Library	47
	Cabling for SCSI Configurations	49
	Supported SCSI Cables	49
	Two Tape Drives, Dual Host System	50
	Four Tape Drives, Dual Host System	51
3	Library Configuration	53
	Changing Default Configuration Settings	54
	Setting a SCSI ID	55
	Setting Up a Reserved Slot	58
	Reserved Slot Numbering	58
	Configuring the Network Settings	64
4	Operation	67
	Front Panel	68
	Magazine Doors	68
	Indicators	70
	Front Panel and Media Security Locks	71
	GUI Touch Screen	71
	Host System	72
	Library Display Screens and Options	73
	Initialization Screen	73
	Library Status Screen	74
	Technical Support Information	75
	Mail Slot Access (Left-hand Magazines Only)	76
	Magazine Access	77
	Move Media	78
	GUI Contrast Controls	78
	Power	79
	Status	80
	Online	80
	Menu	81
	Menu Selections	82
	View System Data Area	82
	Library Options	82

SCSI Options	85
Network Options	90
Library Info	91
Cartridge Map	91
Edit Options Area	93
Library	93
SCSI	94
Network	95
Passwords	95
Utilities Area	96
Maintenance	96
Diagnostics	97
Factory	97
Security Level	98
Inserting and Removing Tape Cartridges	99
Removing Magazines	99
Inserting Cartridges into a Magazine	101
Using Mail Slots (Left-hand Magazines Only)	102
Labeling Tape Cartridges	103
Ultrium Labels	103
SDLT and DLT Labels	105
Media Label Identifiers	106
.	106
5 Remote Management Interface	107
Overview	108
Accessing the Remote Management Interface	109
Using Menu Buttons	112
Status	112
Move Media	113
Setup	114
Library Configuration	115
SCSI Configuration	116
Drive Configuration	117
Functions	118
History	119
6 Maintenance	121
Using the Library Maintenance Menu	122

Maintaining Tape Cartridges	123
Ultrium Cartridges	124
DLT and SDLT Cartridges.	124
Running a Cleaning Cartridge	127
Automatically Running a Cleaning Cartridge	128
Manually Running a Cleaning Cartridge	128
Running a Cleaning Cartridge from a Mail Slot	128
Running a Cleaning Cartridge from a Tape Cartridge Slot.	129
Running a Cleaning Cartridge from a Cleaning Slot.	129
Replacing a Cleaning Cartridge in a Reserved Slot	131
Replacing a Cleaning Cartridge in a Right Magazine	131
Replacing a Cleaning Cartridge in a Mail Slot	131
Updating Firmware.	133
Checking the Firmware Revision.	133
Using the Remote Management Interface	133
Using HP StorageWorks Library & Tape Tools	134
Using a Serial Connection	135
Firmware Flashing Procedure	135
7 Troubleshooting	137
Identifying Platform Problems	138
Performing Error Recovery	139
Fault Symptom Codes (FSCs)	140
Troubleshooting General Problems	169
Using Diagnostic Support Tools.	175
HP StorageWorks Library and Tape Tools	175
MSLUtil	175
Running Library Diagnostic Tests	176
A Regulatory Compliance Notices	179
Federal Communications Commission Notice	180
Class A Equipment.	180
Class B Equipment.	180
Modifications	181
Cables.	181
Declaration of Conformity for products marked with the FCC logo - United States only	181
Canadian Notice (Avis Canadien)	182
Class A Equipment.	182
Class B Equipment.	182

European Union Notice	182
BSMI Class A Notice	183
Japanese Notice	183
Laser Device	183
Laser Safety Warnings	184
Compliance with CDRH Regulations	184
Compliance with International Regulations	184
Laser Specifications	184
Laser Regulation Labels	185
Product Conformation Label	185
Laser Caution Label	185
Exposure Caution Label	185
B Specifications	187
Power	188
Mechanical	189
Environmental (All Models)	190
Acoustics	192
Safety and Regulatory	193
C Electrostatic Discharge	195
Grounding Methods	196
D Configuration Examples	197
SCSI Cable Configurations	198
Configuration Examples	199
E Optional Fibre Channel Card	203
Host Prerequisites	204
Connectors and Indicators	205
Power Indicator	205
Serial Port	206
Ethernet Port	206
Fibre Channel Port	206
SCSI VHDCI Connectors	206
Configuration	207
Default Ethernet Settings	207
Configuration Examples	208
Resetting the Fibre Channel Card	209

Index211

Figures

1	Library tape drive locations	21
2	HP Ultrium 460 format trademark	23
3	Library magazines	27
4	Library power supplies	29
5	Library robotics (top cover removed)	30
6	Library controller board	32
7	Library card cages	33
8	Library front panel	35
9	Library PTM mounting location	37
10	Tabletop model clearances (two-drive model shown)	40
11	Converting a tabletop model (four-drive model shown)	41
12	Library template (9000 rack enclosure shown)	42
13	Installing the rails	44
14	Installing the library (two-drive model shown)	45
15	Securing the library	46
16	Applying power to the library (four-drive rackmounted library shown)	48
17	MSL6030/MSL5030/MSL5026 library SCSI cable configuration (two tape drives, dual host system)	50
18	MSL6060/MSL5060/MSL5052 library SCSI cable configuration (four tape drives, dual host system)	51
19	SCSI option selection screen (two-drive model shown)	55
20	Drive 0 bus ID screen	56
21	SCSI ID confirmation screen	56
22	Drive 0 bus ID data field screen (two-drive model shown)	57
23	Reserved slot locations, SDLT/DLT (MSL5026)	58
24	Reserved slot locations, Ultrium (MSL6030/MSL5030)	59
25	Reserved slot locations, lower module, SDLT/DLT (MSL5052)	60
26	Reserved slot locations, lower module, Ultrium (MSL6060/MSL5060)	61
27	Total reserved slots screen	62
28	Reserved slots numeric keypad screen	62
29	Total reserved slots confirmation screen	63
30	IP address determination screen	64
31	User-specified IP address screen	64
32	Fixed IP address screen	65
33	Library front panel	68

34	Magazine door mechanical releases (emergency access)	69
35	Library indicators	70
36	Password levels	71
37	Initialization screen	73
38	Library status screen (two-drive model shown)	74
39	Technical support information screen	75
40	Mail slot access screen (four-drive model shown)	76
41	Magazine access screen (two-drive model shown)	77
42	Move media screen (two-drive model shown)	78
43	Power-down confirmation message screen	79
44	Status screen (four-drive model shown)	80
45	Menu screen	81
46	View library options screen	83
47	View SCSI options screen (two-drive model shown)	86
48	Default view network options screen	90
49	View library info screen	91
50	Cartridge map screen (two-drive model shown)	92
51	Edit library options screen	93
52	Edit SCSI options screen	94
53	Edit network options screen	95
54	Edit passwords options screen	95
55	Maintenance screen	96
56	Diagnostics screen (four-drive model shown)	97
57	Security level screen	98
58	Removing tape cartridge magazines	100
59	Inserting a tape cartridge (left-hand magazine, DLT shown)	101
60	Left-hand magazine mail slot (two-drive model shown)	102
61	Attaching a bar code label to an Ultrium tape cartridge	104
62	Proper Ultrium bar code label placement	104
63	Attaching a bar code label to an SDLT/DLT tape cartridge	105
64	Remote Management Interface login screen	109
65	Remote Management Interface main screen	110
66	Status screen	111
67	Move media screen	113
68	Setup screen	114
69	Library configuration screen	115
70	SCSI configuration screen	116
71	Drive configuration screen	117

72	Functions screen	118
73	History screen	119
74	DLT leader in correct position, hub, and door lock tab	125
75	Faulty DLT leaders	125
76	SDLT buckle leaders	126
77	Updating firmware using the Remote Management Interface	134
78	Troubleshooting flow chart	139
79	Product conformation label	185
80	Laser light caution label	185
81	Exposure caution label	185
82	MSL6030/MSL5030/MSL5026, 2 hosts/2 drives	199
83	Single MSL6060/MSL5060/MSL5052, 4 hosts/4 drives.	200
84	Single MSL6030/MSL5030/MSL5026, 1 host/2 drives	201
85	MSL6060/MSL5060/MSL5052, 2 hosts/4 drives	202
86	Connectors and indicators	205
87	MSL6030/MSL5030/MSL5026 standalone.	208
88	MSL6060/MSL5060/MSL5052 standalone.	208
89	Reset switch	209

Tables

1	Document Conventions	14
2	Ultrium Tape Drive Capacity and Data Transfer Rate.	22
3	DLT Tape Drive Capacity and Data Transfer Rate	24
4	SDLT Tape Drive Capacity and Data Transfer Rate	25
5	Library Status LED	70
6	View Library Options	83
7	View SCSI Options	86
8	View Network Options	91
9	Media Label Identifiers	106
10	Maintenance Menu.	122
11	Fault Symptom Codes	140
12	Troubleshooting General Problems	169
13	Library Diagnostic Tests	176
14	Laser Specifications	184
15	Power Specifications	188
16	Tabletop Model Mechanical Specifications.	189
17	Rackmount Model Mechanical Specifications.	189
18	Packed or Unpacked Environmental Specifications	190

19	Operating Environmental Specifications	190
20	Transit -- Short Term Environmental Specifications	190
21	Acoustic Noise Declared per ISO 9296 and ISO 7779	192
22	Schallemissionswerte - Werteangaben nach ISO 9296 und ISO 7779/ DIN 27779	192
23	Regulatory and Product Safety Certifications	193



about this guide

This user guide provides information to help you:

- Become familiar with library components.
- Install the library.
- Configure the library.
- Operate the front panel.
- Use the remote management interface.
- Perform maintenance procedures.
- Troubleshoot the library.

“About this Guide” topics include:

- [Related Documentation](#), page 14
- [Conventions](#), page 14
- [Rack Stability](#), page 16
- [Getting Help](#), page 17

Related Documentation

In addition to this guide, HP provides corresponding user information:

- *HP StorageWorks MSL Series Pass-Through Mechanism Reference Guide*
- *HP StorageWorks Network Storage Router User Guide*

Conventions

Conventions consist of the following:

- [Document Conventions](#)
- [Text Symbols](#)
- [Equipment Symbols](#)

Document Conventions

The document conventions included in [Table 1](#) apply.

Table 1: Document Conventions

Element	Convention
Cross-reference links	Blue text: Figure 1
Key and field names, menu items, buttons, and dialogue box titles	Bold
File names, application names, and text emphasis	<i>Italics</i>
User input, command and directory names, and system responses (output and messages)	Monospace font COMMAND NAMES are uppercase monospace font unless they are case sensitive
Variables	<monospace, italic font>
Website addresses	Blue, underlined sans serif font text: http://www.hp.com

Text Symbols

The following symbols may be found in the text of this guide. They have the following meanings.



WARNING: Text set off in this manner indicates that failure to follow directions in the warning could result in bodily harm or death.



Caution: Text set off in this manner indicates that failure to follow directions could result in damage to equipment or data.

Note: Text set off in this manner presents commentary, sidelights, or interesting points of information.

Equipment Symbols

The following equipment symbols may be found on hardware for which this guide pertains. They have the following meanings.



Any enclosed surface or area of the equipment marked with these symbols indicates the presence of electrical shock hazards. Enclosed area contains no operator serviceable parts.

WARNING: To reduce the risk of personal injury from electrical shock hazards, do not open this enclosure.




Any RJ-45 receptacle marked with these symbols indicates a network interface connection.

WARNING: To reduce the risk of electrical shock, fire, or damage to the equipment, do not plug telephone or telecommunications connectors into this receptacle.



Any surface or area of the equipment marked with these symbols indicates the presence of a hot surface or hot component. Contact with this surface could result in injury.

WARNING: To reduce the risk of personal injury from a hot component, allow the surface to cool before touching.

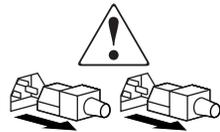

Power supplies or systems marked with these symbols indicate the presence of multiple sources of power.

WARNING: To reduce the risk of personal injury from electrical shock, remove all power cords to completely disconnect power from the power supplies and systems.



Any product or assembly marked with these symbols indicates that the component exceeds the recommended weight for one individual to handle safely.

WARNING: To reduce the risk of personal injury or damage to the equipment, observe local occupational health and safety requirements and guidelines for manually handling material.

Rack Stability

Rack stability protects personnel and equipment.



WARNING: To reduce the risk of personal injury or damage to the equipment, be sure that:

- The leveling jacks are extended to the floor.
 - The full weight of the rack rests on the leveling jacks.
 - In single rack installations, the stabilizing feet are attached to the rack.
 - In multiple rack installations, the racks are coupled.
 - Only one rack component is extended at any time. A rack may become unstable if more than one rack component is extended for any reason.
-

Getting Help

If you still have a question after reading this guide, contact an HP authorized service provider or access our website: <http://www.hp.com/support>.

HP Technical Support

Note: For continuous quality improvement, calls may be recorded or monitored.

Call technical support at the nearest location. Telephone numbers for worldwide technical support are listed on the HP website under support: <http://www.hp.com/support>.

Be sure to have the following information available before calling:

- Technical support registration number (if applicable)
- Product serial numbers
- Product model names and numbers
- Applicable error messages
- Operating system type and revision level
- Name and revision of application software

HP Storage Website

The HP website has the latest information on this product, as well as the latest drivers. Access storage at: <http://www.hp.com/products/tapestorage>. From this website, select the appropriate product or solution.

HP Authorized Reseller

For the name of your nearest HP authorized reseller:

- In the United States, call 1-800-345-1518.
- In Canada, call 1-800-263-5868.
- Elsewhere, see the HP website for locations and telephone numbers: <http://www.hp.com/support>.

Introduction

1

Designed for backup operations with high-end networks and high-performance servers, the HP StorageWorks MSL5000 and 6000 Series tape libraries are the next generation performers in high-volume backup and archival service. The libraries also feature high availability, maximum storage density, and easy serviceability.

The library SCSI interface-to-host system supports Low Voltage Differential (LVD). The tape drives and the robotics control functions each use separate SCSI connections and SCSI ID addresses. Library SCSI I/O is provided through two VHDCI-series, 68-pin, Micro-D SCSI connectors located at the rear of the unit directly under each tape drive. Robotics SCSI I/O is provided through two VHDCI-series, 68-pin, Micro-D SCSI connectors located on the library controller board.

The remainder of this chapter describes the major components of the library, including:

- [Models](#), page 20
- [Accessories](#), page 20
- [Tape Drives](#), page 21
- [Magazines](#), page 27
- [Power Supplies](#), page 28
- [Robotics](#), page 30
- [Library Controller Board](#), page 31
- [Factory-Defined Accessory PCI Slots](#), page 33
- [Front Panel Indicators](#), page 35
- [Multi Unit Library Systems](#), page 36

Models

The MSL Series tape library family includes the following models:

- Two-drive models:
 - MSL6030
 - MSL5030
 - MSL5026
- Four-drive models:
 - MSL6060
 - MSL5060
 - MSL5052

Note: Two-drive models are 8.75 in (22.23 cm) in height, sometimes referred to as 5U. Four-drive models are 17.50 in (44.45 cm) in height, sometimes referred to as 10U.

Any MSL Series tape library can operate as a standalone unit or can be installed in a rack to form a larger integrated multi unit library configuration. MSL6030/MSL5030/MSL5026 libraries contain up to two tape drives, two removable tape cartridge magazines, and robotics capable of random or sequential tape cartridge operation. MSL6060/MSL5060/MSL5052 libraries contain up to four tape drives, four removable tape cartridge magazines, and robotics capable of random tape cartridge operation.

Note: Throughout this manual, MSL6030/MSL5030/MSL5026 libraries will be referred to as two-drive models. MSL6060/MSL5060/MSL5052 libraries will be referred to as four-drive models.

Accessories

Contact your authorized service provider or visit the HP website at <http://www.hp.com/products/tapestorage> for the most current list of accessories that are available for an MSL Series library.

Tape Drives

MSL Series tape libraries support up to four tape drives (see [Figure 1](#)). SCSI I/O is accomplished through two VHDCI-series, 68-pin, Micro-D SCSI connectors located at the rear of the library directly beneath each tape drive. The drives are numbered beginning with 0: the first tape drive is Drive 0, the second is Drive 1, etc.

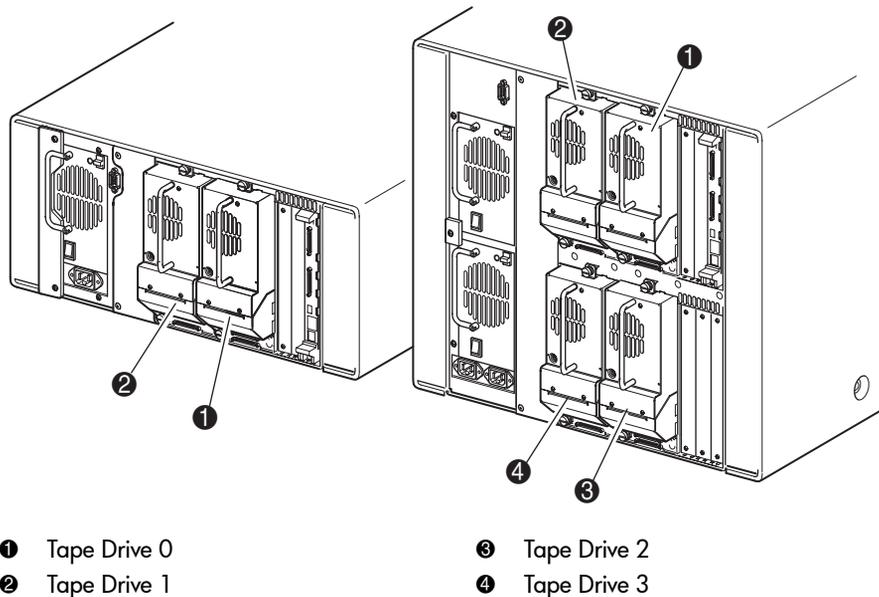


Figure 1: Library tape drive locations



Caution: It is critical to ensure that the media you use matches the format of your tape drive. Cleaning cartridges and formatted data cartridges are unique for each drive technology. Damage may occur if inappropriate media is used in tape drives.

Note: If using mixed media, ensure your software application supports it.

Ultrium Tape Drives

The Ultrium tape drive is a high-performance streaming tape drive that uses Linear Tape-Open (LTO) technology. An Ultrium 230 tape drive is capable of storing up to 100 GB (native) or 200 GB (2:1 compression) of data per cartridge. An Ultrium 460 tape drive is capable of storing up to 200 GB (native) or 400 GB (2:1 compression) of data per cartridge. Access the *HP StorageWorks Ultrium Tape Drive User's Guide* from <http://www.hp.com/support> for more information about its features and capabilities.

Table 2: Ultrium Tape Drive Capacity and Data Transfer Rate

Drive Model	Data Capacity	Sustained Data Transfer Rate
Ultrium 230	100 GB (native)	15 MB/sec (54 GB/hour)
	200 GB (compressed)	30 MB/sec (108 GB/hour)
Ultrium 460	200 GB (native)	30 MB/sec (108 GB/hour)
	400 GB (compressed)	60 MB/sec (216 GB/hour)

Note: Compressed capacity assumes a 2:1 compression ratio.

Ultrium Tape Cartridges

Note: In addition to the information provided in this manual, refer to the documentation provided with your media for more information. Also see [Maintaining Tape Cartridges](#) on page 123.



Caution: HP Ultrium tape drives require special cleaning cartridges and data cartridges formatted specifically for HP Ultrium. To avoid damage to your tape drive, it is critical to use appropriate cleaning cartridges, and properly formatted data cartridges.

Approved media will have the Ultrium format trademark which indicates that the media has passed Ultrium format compliance testing (see [Figure 2](#)).



Figure 2: HP Ultrium 460 format trademark

For best results, always use HP branded media. The following tape cartridges are approved for the library's Ultrium tape drives:

- HP Ultrium Data Cartridge
 - C7972A (400 GB)
 - C7971A (200 GB)
- HP Ultrium Universal Cleaning Cartridge
 - C7978A

Note: Ultrium generation 2 cartridges (C7972A) can read and write to Ultrium generation 1 cartridges (C7971A). However, Ultrium generation 1 cartridges can only read and write to other Ultrium generation 1 cartridges.



Caution: Do not bulk erase Ultrium formatted cartridges. This will destroy pre-recorded servo information and make the cartridge unusable.

Make it a practice to visually inspect your tape cartridges when loading or removing them from your tape library. Taking a few minutes to check the condition of your cartridges will lower the risk of repeated failures and help ensure uninterrupted backup.



Caution: Always discard damaged tape cartridges. If a defective tape cartridge is loaded into a tape drive, it may in turn damage the drive, potentially requiring drive replacement.

Note: For information on labeling tape cartridges, see [Labeling Tape Cartridges](#) on page 103.

DLT and SDLT Tape Drives

Note: In addition to the information provided in this manual, refer to the documentation provided with your media for more information. Also see [Maintaining Tape Cartridges](#) on page 123.

Access the *HP StorageWorks DLT Tape Drive Reference Guide* from <http://www.hp.com/support> for more information about the DLT tape drive features and capabilities.

Table 3: DLT Tape Drive Capacity and Data Transfer Rate

Drive Model	Data Capacity	Sustained Data Transfer Rate
DLT8000	40 GB (native)	3 MB/sec (21.6 GB/hour)
	80 GB (compressed)	6 MB/sec (43.2 GB/hour)

Note: Compressed capacity assumes a 2:1 compression ratio.

The SDLT tape drive is a high-capacity, high-performance streaming tape drive that uses Laser Guided Magnetic Recording (LGMR) technology to maximize the amount of data that can be stored on a tape. An SDLT 320 tape drive is capable of storing up to 160 GB (native) or 320 GB (2:1 compression) of data per cartridge. Access the *HP StorageWorks SDLT Tape Drive Reference Guide* from <http://www.hp.com/support> for more information about its features and capabilities.

Table 4: SDLT Tape Drive Capacity and Data Transfer Rate

Drive Model	Data Capacity	Sustained Data Transfer Rate
SDLT 110/220	110 GB (native)	11 MB/sec (39.6 GB/hour)
	220 GB (compressed)	22 MB/sec (79.2 GB/hour)
SDLT 160/320	160 GB (native)	16 MB/sec (57.6 GB/hour)
	320 GB (compressed)	32 MB/sec (11.5 GB/hour)

Note: Compressed capacity assumes a 2:1 compression ratio.

DLT Tape Cartridges

Note: In addition to the information provided in this manual, refer to the documentation provided with your media for more information.

The following tape cartridges are approved for the library's DLT tape drives:

- HP DLT IV Data Cartridge
 - C5141F
- HP DLT Cleaning Cartridge
 - C5142A

SDLT Tape Cartridges

Note: In addition to the information provided in this manual, refer to the documentation provided with your media for more information.

The following tape cartridges are approved for the library's SDLT tape drives:

- HP SDLT Data Cartridge
 - C7980A (220-320 GB)
- HP SDLT Cleaning Cartridge
 - C7982A



Caution: SDLT tape drives require special cleaning cartridges and data cartridges formatted specifically for SDLT. To avoid damage to your tape drive, it is critical to use appropriate cleaning cartridges, and properly formatted data cartridges. Do not use DLT Tape I, DLT Tape II, DLT Tape III, or DLT Tape IIIXT data cartridges, or DLT cleaning cartridges with SDLT tape drives.

Make it a practice to visually inspect your tape cartridges when loading or removing them from your tape library. Taking a few minutes to check the condition of your cartridges will lower the risk of repeated failures and help ensure uninterrupted backup.




Caution: Always discard damaged tape cartridges. If a defective tape cartridge is loaded into a tape drive, it may in turn damage the drive, potentially requiring drive replacement.

Note: For information on labeling tape cartridges, see [Labeling Tape Cartridges](#) on page 103.

Magazines

MSL Series tape libraries contain two or four removable tape cartridge magazines that are accessible through the front doors (see [Figure 3](#)).

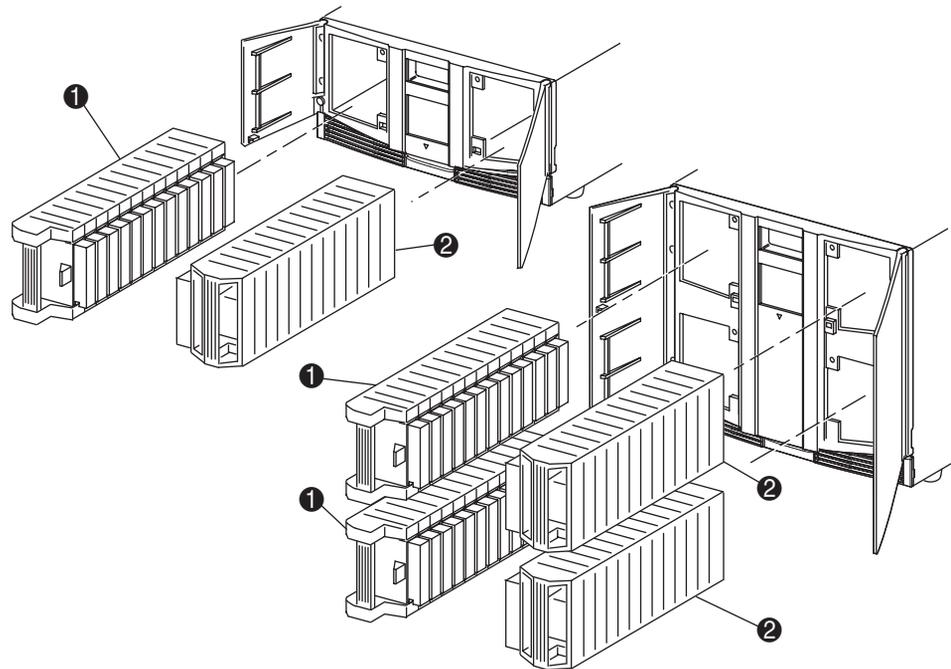

- ❶ Left Magazine(s), with integrated mail slot
- ❷ Right Magazine(s)

Figure 3: Library magazines

Looking from the front of the library, each left tape magazine includes a mail slot, which is accessible when that magazine door is open. When this mail slot pivots forward, you can insert or remove a single tape without having to unlock, remove, and reinventory the magazine. If a full tape cartridge magazine is required, the library can be reconfigured to recognize each mail slot as a standard data slot. The right tape magazine contains fixed cartridge slots (no mail slot feature), so it retains its full capacity at all times.

Note: The slots and mail slots are numbered beginning with 0: the first slot is Slot 0, the second is Slot 1, etc.

Power Supplies


MSL Series tape libraries support one or two power supplies that are accessible from the rear of the unit (see [Figure 4](#)). These auto-ranging power supplies are capable of using any nominal AC voltage between 100 VAC and 240 VAC power, at 50 Hz or 60 Hz, and are easily removed without requiring special tools.

Power to the library is supplied through AC connectors at the rear panel of each power supply receiver. Library power is normally controlled from the graphical user interface (GUI) touch screen; however, a manual power disconnect switch is located at the rear of each power supply.



Caution: The power supply is generally not to be removed by the operator. Hazardous voltage is present in the cavity if the power cord is not removed. If a faulty power supply exists, contact your authorized service provider.

For the four-drive models, two power supplies are supported to provide redundancy for mission critical operations. Both power supplies share the load under normal operating conditions, but if one of the power supplies fails, the remaining power supply assumes the full load (see [Figure 4](#) on page 29).

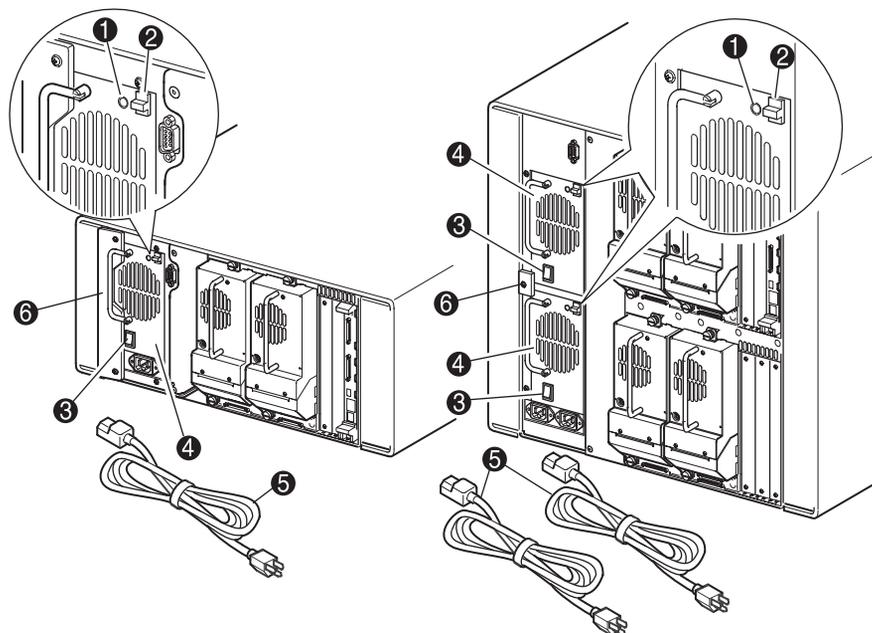

- ❶ Power On LED (lights up after touching the front panel display)
- ❷ Power Supply Release Latch
- ❸ Power Switch
- ❹ Power Supply
- ❺ AC Power Cord(s)
- ❻ Power supply bracket

Figure 4: Library power supplies

Note: For the four-drive models, the left AC power receptacle is for the bottom power supply. The right AC power receptacle is for the top power supply.

Robotics

MSL Series tape library robotics consist of a cartridge shuttle, motor hardware, motor drives, and other support electronics (see [Figure 5](#)). The four-drive models also contain a vertical axis mechanism that enables the robotics to travel between the upper and lower tape cartridge magazines. These robotics are capable of picking and placing tapes throughout a 180-degree arc that consists of the tape drives, tape cartridge magazines, and an optional Pass-Through Mechanism (PTM).

The cartridge shuttle assembly includes a mounted bar code reader for scanning labeled tape cartridges installed in the magazines and tape drives.

Note: Both full bar code reader scan and physical scan are conducted each time the library is initially powered up, or each time a tape magazine is accessed using normal operational modes.

In four-drive models, the robotic-PTM interface is at the lower vertical axis PTM elevator position only.

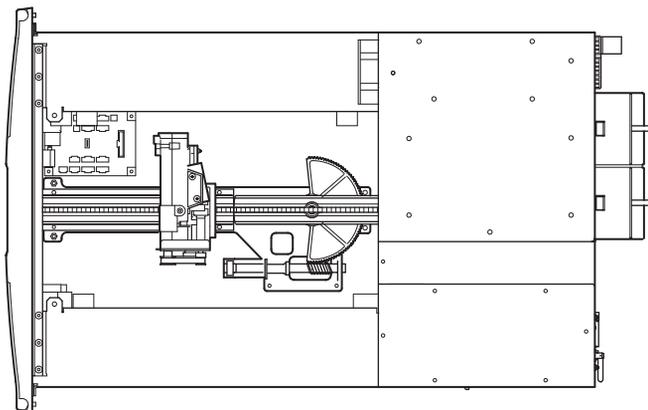


Figure 5: Library robotics (top cover removed)


Library Controller Board

The library controller board contains a single microprocessor and associated logic devices to control all robotics operations and manage overall library functions. The microprocessor enables the SCSI interface between the library and the host system.

Note: The SCSI terminator must always be connected to the library controller board for proper operation when configured as standalone or master.

The library controller board is installed in a card cage at the rear of the library and can be serviced with a #1 Phillips screwdriver (see [Figure 6](#)). If a replacement controller board is needed, contact your authorized service provider. Step-by-step procedures will be included with the replacement.

Note: For MSL Series libraries, the library controller board must be installed in the right-hand slot of the card cage area (upper card cage area for the four-drive models). The remaining slots on the library do not support the connections that are required for the library controller board to operate correctly.

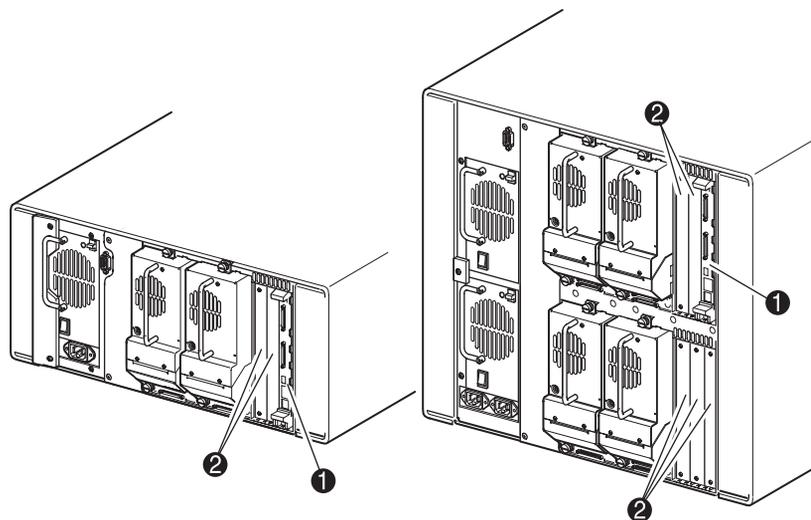

- ❶ Library Controller Board
- ❷ Factory-Defined Accessory PCI Slots (up to 5)

Figure 6: Library controller board

Factory-Defined Accessory PCI Slots

MSL Series tape libraries contain one or two rear-access card cages, and one or two 32-bit, 33-MHz Compact PCI backplanes (see [Figure 7](#)). These backplanes contain the plug-in connectors for a library controller board, and up to five optional HP-defined PCI add-in cards.



Caution: Use of non-HP qualified PCI option cards can damage your MSL Series library and will void product warranty. Follow all installation, configuration, and operating instructions shipped with the option card upgrade kit.

Note: The library controller board must be installed in the right slot of the card cage area (upper card cage area for the four-drive models).

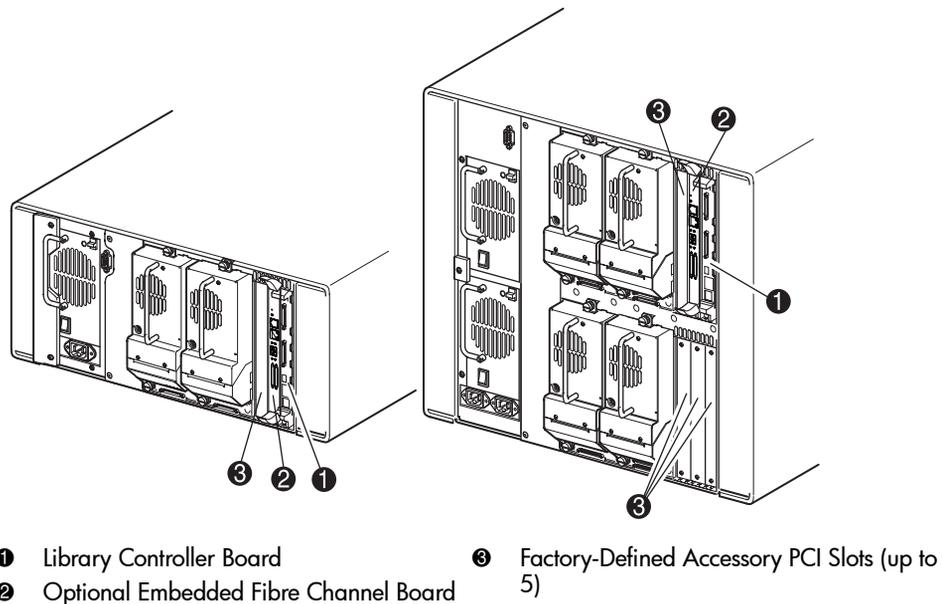


Figure 7: Library card cages

Embedded Network Storage Router (Optional)

Some library models ship with an optional embedded Network Storage Router in the slot next to the library controller board.

This board provides bidirectional connectivity in a Fibre Channel Switched Fabric supporting Fibre Channel and SCSI devices. See [Optional Fibre Channel Card](#) on page 203 for additional information on configuring and using the optional Fibre Channel board.

Front Panel Indicators

The library front panel indicators consist of the following:

- Viewing window—Lets you visually check the internal operations of the library.
- GUI touch screen—Manually operated to set up and configure the library.
- Library status LED—Displays the library operational status of the library.

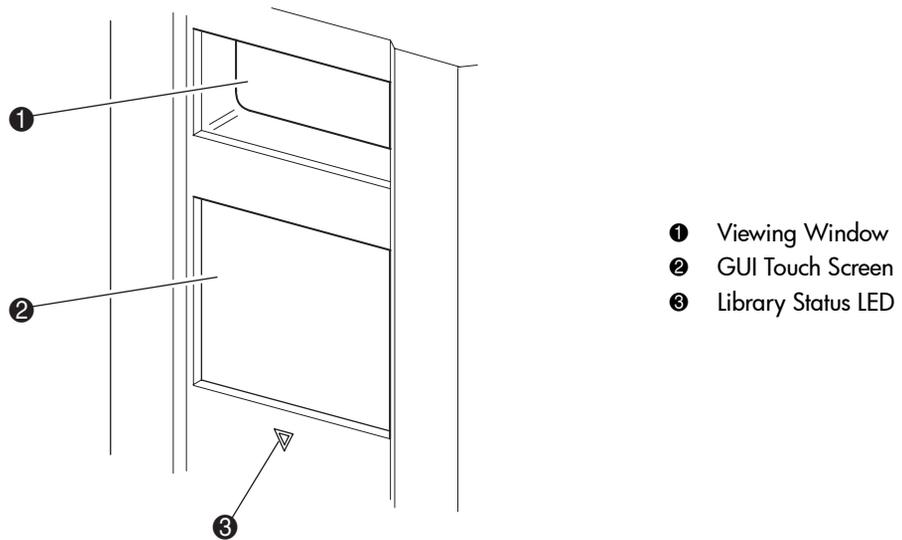


Figure 8: Library front panel

Multi Unit Library Systems


MSL Series tape libraries can be stacked in a scalable combination with additional two-drive and four-drive models to form a multi unit library configuration. Through use of a rear-mounted Pass-Through Mechanism (PTM), all libraries in a multi unit library configuration can operate together as a single virtual library system. Stacked libraries are interconnected through their rear panel Ethernet connections to a supplied LAN hub that mounts to the rack enclosure. The LAN hub also provides a wide area network (WAN) connector when libraries are combined in their maximum stacked height.

A maximum of four four-drive models or eight two-drive models can be connected together in this manner. Any combination of eight libraries, not exceeding 40 Units (40U) in total stacked height, can also be used. A multi unit library configuration appears as a single library to the host computer system and application software. For multi unit applications, the top library becomes the master unit and all other libraries are slave units.



WARNING: The PTM continues to function each time a slave library is physically removed from the rack enclosure configuration during normal library operation. Refer to the *HP StorageWorks MSL Series Pass-Through Mechanism Reference Guide* for detailed installation, configuration, and operation information.

The library robotics can pick and place tape cartridges into a movable elevator that encompasses the full length of the PTM. In this manner, individual tapes can be passed up or down between the libraries contained in the multi unit library configuration under the master library control. Robotics access to the PTM is located at the rear of the library beneath the PTM cover (see [Figure 9](#) on page 37).

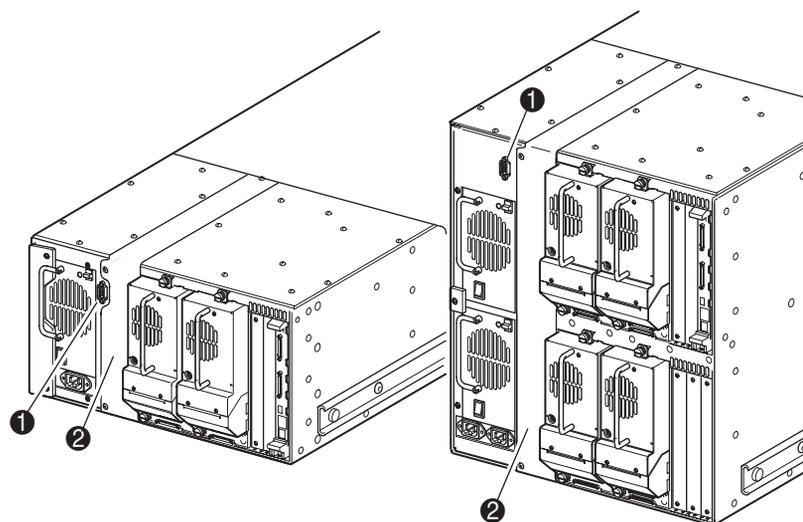

- ❶ PTM Interface Connector
- ❷ PTM Mounting Cover (removal required for PTM installation)

Figure 9: Library PTM mounting location

Installation

2

This chapter explains how to install an HP StorageWorks MSL Series tape library. Sections in this chapter include:

- [Setting Up the Tabletop Model](#), page 40
- [Converting a Tabletop Model to a Rackmount Model](#), page 41
- [Setting Up the Rackmount Model](#), page 42
- [Applying Power to the Library](#), page 47
- [Cabling for SCSI Configurations](#), page 49

Note: Be sure to keep and store all shipping materials from your MSL Series tape library for potential future use.

Setting Up the Tabletop Model

Library tabletop models require no mechanical assembly for mounting (see [Figure 10](#)). Place the library on a desk, table, or other stable, horizontal surface. Make sure the cooling grills at the front and the fans at the rear of the library are not obstructed. Allow 18 inches (50 cm) of clearance at the front and rear for magazine and hot-plug tape drive access without the need to reposition the library.

Note: To reduce tabletop clearance requirements, temporarily move the library forward or rearward to access the hot-plug drive shoes and magazines, respectively.

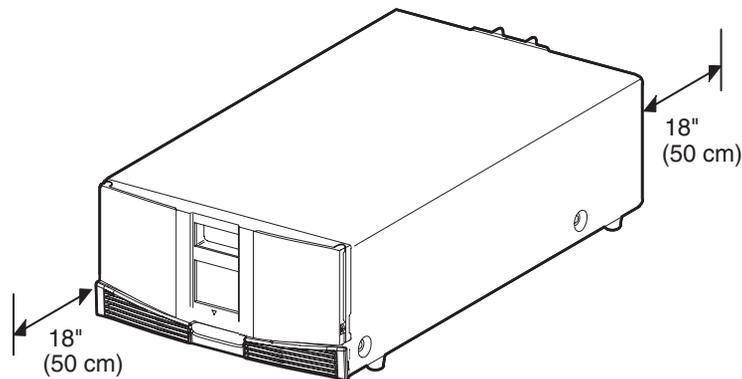


Figure 10: Tabletop model clearances (two-drive model shown)

Converting a Tabletop Model to a Rackmount Model

To make a tabletop library ready for rack enclosure installation:

1. Remove the rubber feet.
2. Remove the cover.
3. Attach the inner rails to the library using the supplied Allen wrench and screws. Tighten the screws until snug.
4. Proceed to [“Setting Up the Tabletop Model.”](#)

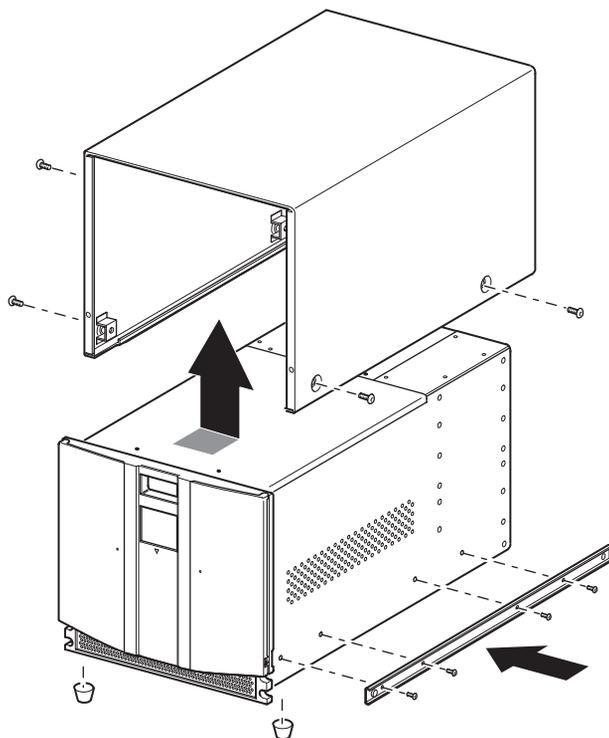


Figure 11: Converting a tabletop model (four-drive model shown)

Setting Up the Rackmount Model



WARNING: To reduce the risk of personal injury or damage to the equipment, be sure that:

- The leveling jacks are extended to the floor.
- The full weight of the rack rests on the leveling jacks.
- In single rack installations, the stabilizing feet are attached to the rack.
- In multiple rack installations, the racks are coupled.
- Only one rack component is extended at any time. A rack may become unstable if more than one rack component is extended for any reason.

Setting up the rackmount model requires a template, rack enclosure slide rails, and two people or a mechanical lift to physically install the library in a rack enclosure.

To set up the rackmount model:

1. Use the template that shipped with the library to mark the location of the mounting hardware on the mounting rails of the rack enclosure (see [Figure 11](#)). The black dots along the sides of the template indicate the top of a U.

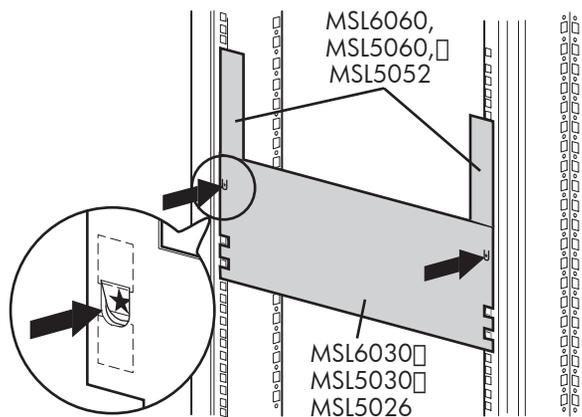


Figure 12: Library template (9000 rack enclosure shown)

Note: For HP rack system/e and AlphaServer H9A rack enclosures, refer to the appropriate rack rail adapter kit.

2. Remove the template and then attach the rails using the supplied fasteners (see [Figure 12](#)). The front rail brackets are threaded to directly accept screws. The rear brackets are not threaded and require cage/clip nuts in the rack enclosure rear vertical rails.

Note: Refer to the *Compaq Rack Products Reference Guide* for detailed cage nut installation instructions on 7000/9000/10000 racks.

Note: Fully tighten the front rail screws. Leave the rear rail screws “finger tight” to prevent binding when mounting the library.

- a. Fully extend the slide rails ❶ on both sides of the rack enclosure until they lock.
- b. Slide the inner guide rail ❷ as far as possible to the front of the rail assembly.

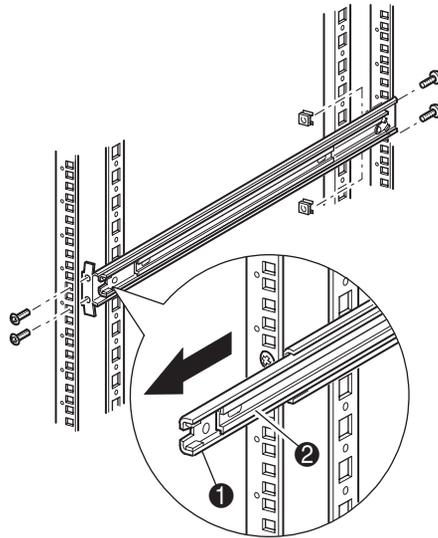


Figure 13: Installing the rails

3. Install the two slide-on clip nuts (previously marked using the template, two holes above the top bracket screw holes) on each of the front rack enclosure vertical rails (Figure 13).



WARNING: Two people should perform the next step. Make certain, when the library is fully extended, that a force of 20% of the rack enclosure's weight, but not more than 57 pounds (26 kg), applied in any direction other than upwards, does not cause the rack enclosure to overbalance.



Caution: The library is heavier toward the tape drive end (rear).

4. Using two people, lift the library and visually align the inner and intermediate slide rails.
5. Carefully insert the library's inner slide rails ③ into the extended intermediate slide rails ② (see Figure 14).
6. Slide the library into the rack enclosure until the rail locks are engaged.



WARNING: A rack enclosure might become unstable if more than one library is extended for any reason. Extend only one library at a time.

7. Push in on the rail locks to release the library and slide the library completely into the rack enclosure.
8. Fully tighten the rear rail screws.

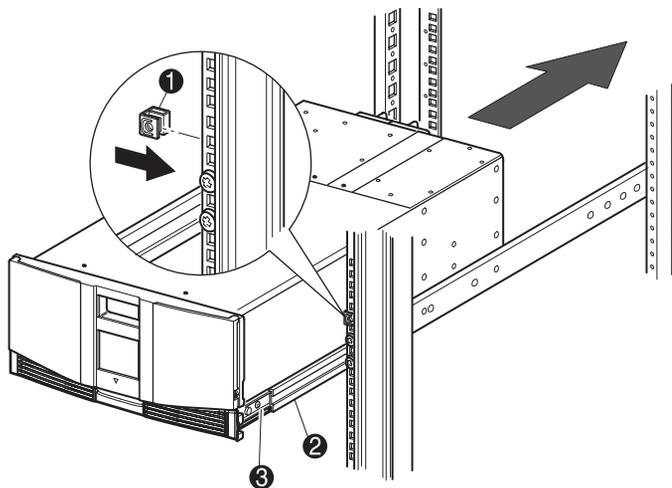



Figure 14: Installing the library (two-drive model shown)

9. Remove the tape to open the doors for installation.
10. Remove and discard the pull-tabs used to block the latch mechanism.

Note: Do not close the doors. You must have access to the two retaining screws to complete the installation. (If necessary, see Chapter 4, “[Operation](#),” for information on how to manually open the library doors.)

11. With the doors open, secure the front panel to the rack enclosure using the two retaining screws (see [Figure 15](#)). Close the doors.

You can now cable the library.

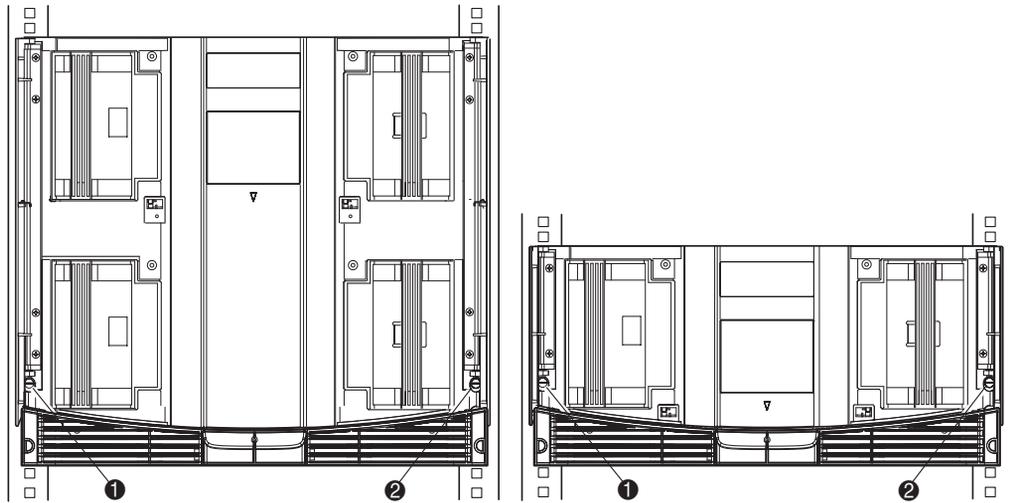

- ❶ Left Retaining Screw
- ❷ Right Retaining Screw

Figure 15: Securing the library

Applying Power to the Library

To apply power to the library (see [Figure 16](#)):

1. Connect each supplied power cord ❶ to each power supply receptacle.

Note: The left-hand AC power receptacle is for the bottom power supply. The right-hand AC receptacle is for the top power supply. (four-drive models only).

2. Toggle each power switch ❷ on.

Note: You can remove the appliqué from the GUI touch screen by catching one corner and carefully lifting it.

3. Press anywhere on the graphical user interface (GUI) touch screen ❸ to activate the display and turn the library on.

Note: The SCSI terminator must always be connected to the library controller board for proper operation if the library is configured as a master or standalone.

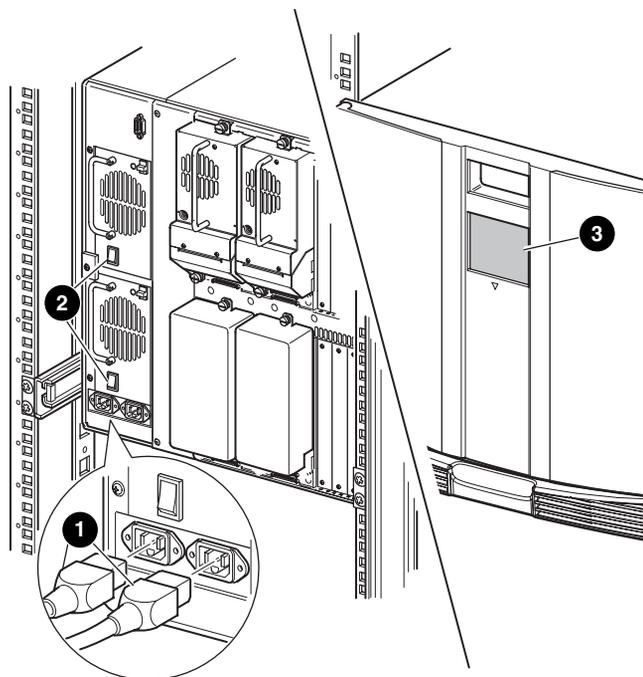


Figure 16: Applying power to the library (four-drive rackmounted library shown)

Cabling for SCSI Configurations

This section describes supported SCSI cable configurations for the library.

Note: MSL Series libraries support SCSI cable configuration for one to four hosts and one to four tape drives. Contact your authorized reseller for a list of supported configurations.

The following SCSI configurations are detailed in this section:

- Two tape drives, dual host system (MSL6030/MSL5030/MSL5026).
- Four tape drives, dual host system (MSL6060/MSL5060/MSL5052).

Note: Host cables are not supplied with the MSL Series library.

See Appendix D, “[Configuration Examples](#)” beginning on page 197 for a complete listing of potential configurations.

Supported SCSI Cables

Note: For optimum performance, a maximum of one tape drive per SCSI bus is recommended for Ultrium 460 tape drives.


Each of the tape drives and the library controller constitute an independent SCSI target. When any two or more devices are connected to the same SCSI bus, each separate SCSI device must be assigned a unique SCSI ID. For information on assigning SCSI IDs, see “[Library Configuration](#),” on page 53.

Note: SCSI IDs are set at the factory. If you want to change any of the firmware defaults, you can do so using the GUI touch screen.

To connect a library to a host system, the host system must have at least one Wide LVD controller and the appropriate driver software.

Two Tape Drives, Dual Host System

Figure 17 shows a typical SCSI cable configuration for a library with two tape drives installed using a dual host system.

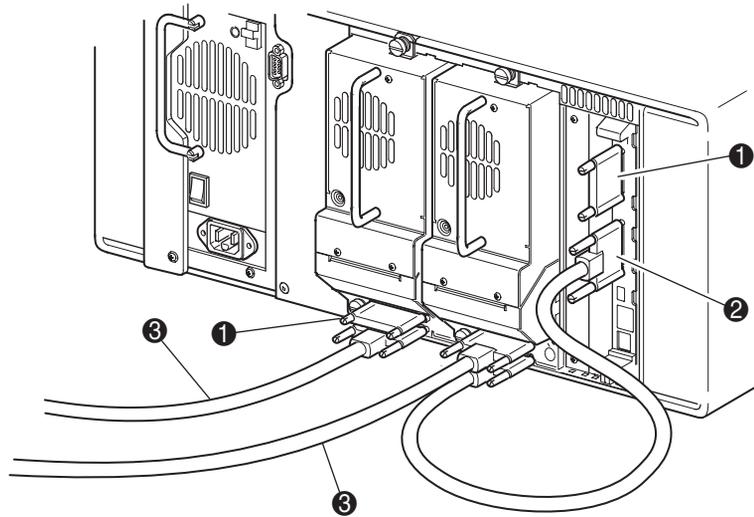


- ❶ SCSI Terminator
- ❷ To Library Controller Board
- ❸ To Host System

Figure 17: MSL6030/MSL5030/MSL5026 library SCSI cable configuration (two tape drives, dual host system)

Four Tape Drives, Dual Host System

Figure 18 shows a typical SCSI cable configuration for a library with four tape drives installed using a dual host system.

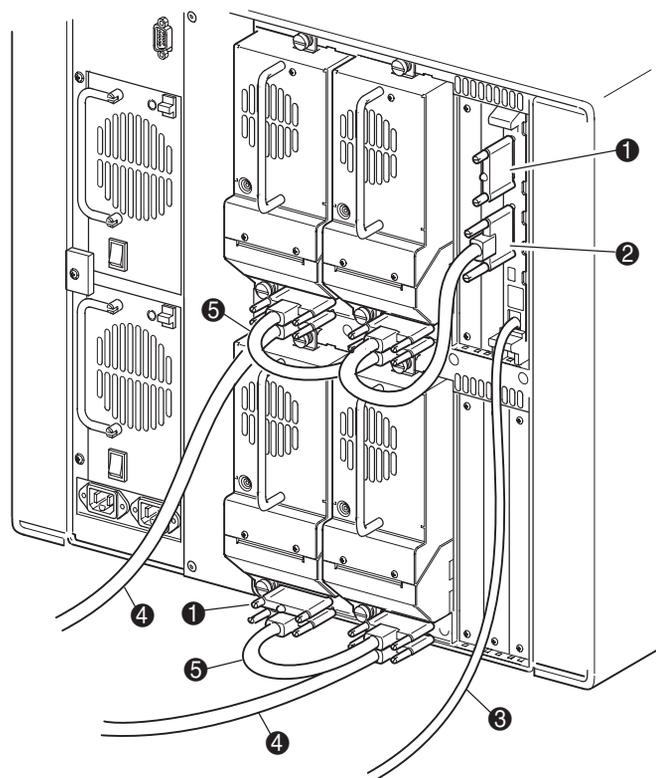

- | | |
|--|--------------------------------|
| ❶ SCSI Terminator | ❷ To Host System |
| ❸ 0.5 m jumper cables | ❹ 0.25 m or 0.5 m jumper cable |
| ❺ RS-232 diagnostic cable (for service only) | |

Figure 18: MSL6060/MSL5060/MSL5052 library SCSI cable configuration (four tape drives, dual host system)

Note: Daisy-chaining Ultrium 460 drives is not recommended due to degraded performance.



Caution: The short, 9.8-inch (0.25m) jumper cables ⑤ are designed for this use only. Stretching either one to reach the library controller board can damage the cable. Use the longer 19.8-inch (0.5m) cable ② to connect the tape drive and the library controller board.

Library Configuration

3

This chapter explains how to configure an HP StorageWorks MSL Series tape library for normal operation. Sections in this chapter include:

- [Changing Default Configuration Settings](#), page 54
- [Setting a SCSI ID](#), page 55
- [Setting Up a Reserved Slot](#), page 58
- [Configuring the Network Settings](#), page 64

Changing Default Configuration Settings

For most applications, you do not have to change the default settings; however, if you do need to change a configuration setting, use the procedures provided in the following sections. If you are uncertain whether you need to change a setting, contact your authorized service provider.

Configuration settings that might need to be changed include:

- [Setting a SCSI ID](#)
- [Setting Up a Reserved Slott](#)
- [Configuring the Network Settings](#)

Change configuration settings using the graphical user interface (GUI) touch screen. For a complete description of how the GUI touch screen works, see Chapter 4, “[Operation](#),” on page 67.

Setting a SCSI ID

Each tape drive installed in the library requires a unique SCSI ID. The information provided in this section shows you how to set a SCSI ID.

To set a SCSI ID:

1. Turn the library on and wait until the Power-On Self Test (POST) concludes and the **Status** screen is displayed.
2. Select the **Menu** option.
3. If necessary, enter the appropriate password. See the section on “[Front Panel and Media Security Locks](#)” on page 71 for instructions on how to set passwords.
4. Select **SCSI** in the **Edit Options** area to display the following screen.

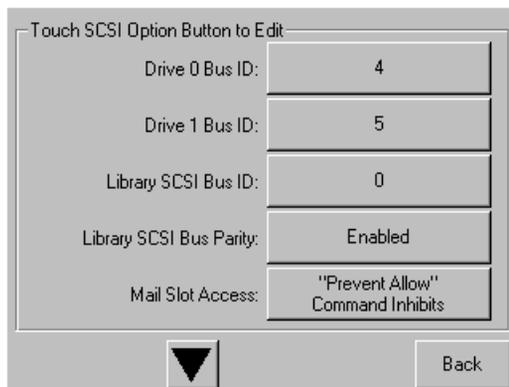


Figure 19: SCSI option selection screen (two-drive model shown)

Note: You can move to the next sequential SCSI options screen by touching the ▼.

For example, to set the Drive 0 Bus ID to 3:

- a. Select the box next to the text “Drive 0 Bus ID:.” The resulting screen (see [Figure 20](#)) displays the current Drive 0 Bus ID along with the new value that you request.

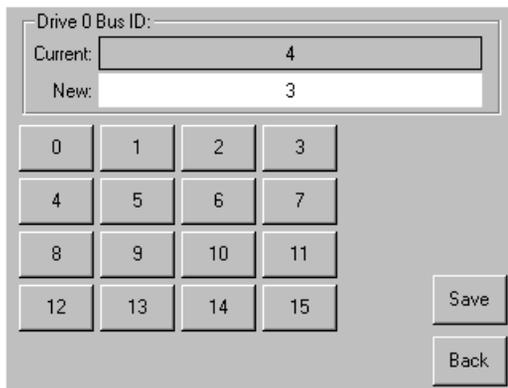


Figure 20: Drive 0 bus ID screen

- b. Touch the block that contains the number 3. This places your request into the **New** data field.
- c. Touch the **Save** option to confirm your request. A confirmation screen is displayed (see [Figure 21](#)).

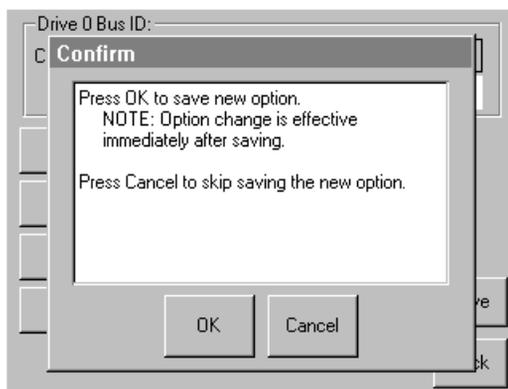


Figure 21: SCSI ID confirmation screen

- d. Touch **OK** to confirm. A new SCSI ID now appears in the Drive 0 Bus ID data field (see [Figure 22](#)).

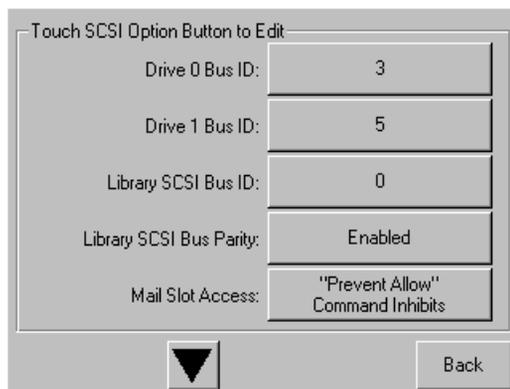


Figure 22: Drive 0 bus ID data field screen (two-drive model shown)

5. Repeat this procedure to set any remaining SCSI IDs.
6. Touch the **Back** button repeatedly to return to the **Main** menu screen.

Setting Up a Reserved Slot

Use this option to designate one or more tape cartridge data storage slots as a cleaning slot, or to reduce the number of storage elements visible to the application software (for licensing reasons).

Note: Reserved slots may be incompatible with some application software.

Reserved Slot Numbering

Standard tape cartridge slots are numbered from the front of the magazine to the rear (see [Figure 23](#) through [Figure 26](#)). If you reserve one slot, it becomes Cleaning Slot #0 in the last slot of the last magazine. Additional reserved slots continue in this front-to-rear pattern.

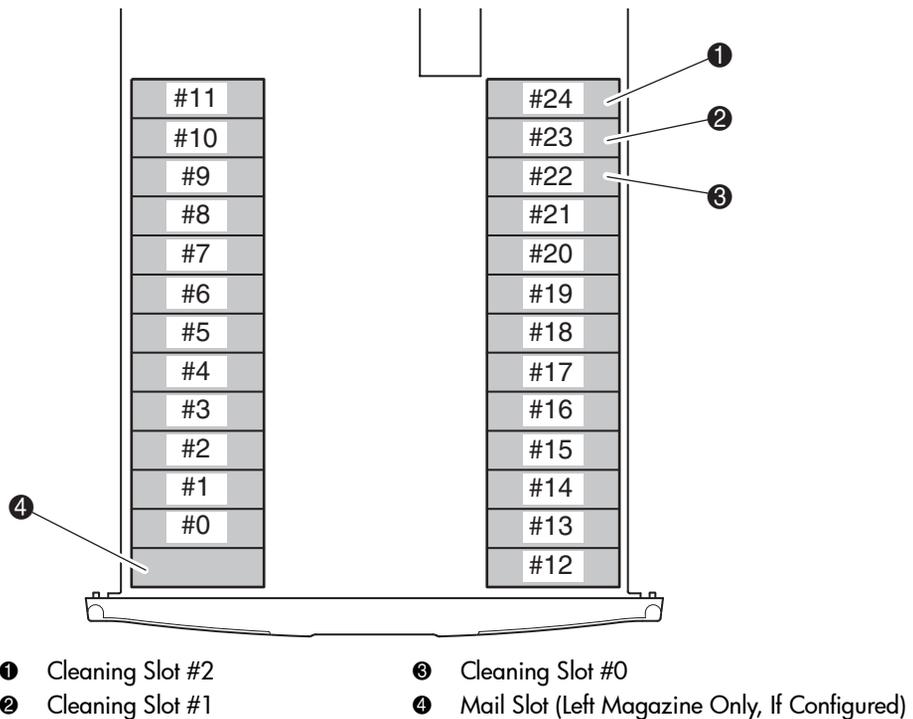


Figure 23: Reserved slot locations, SDLT/DLT (MSL5026)

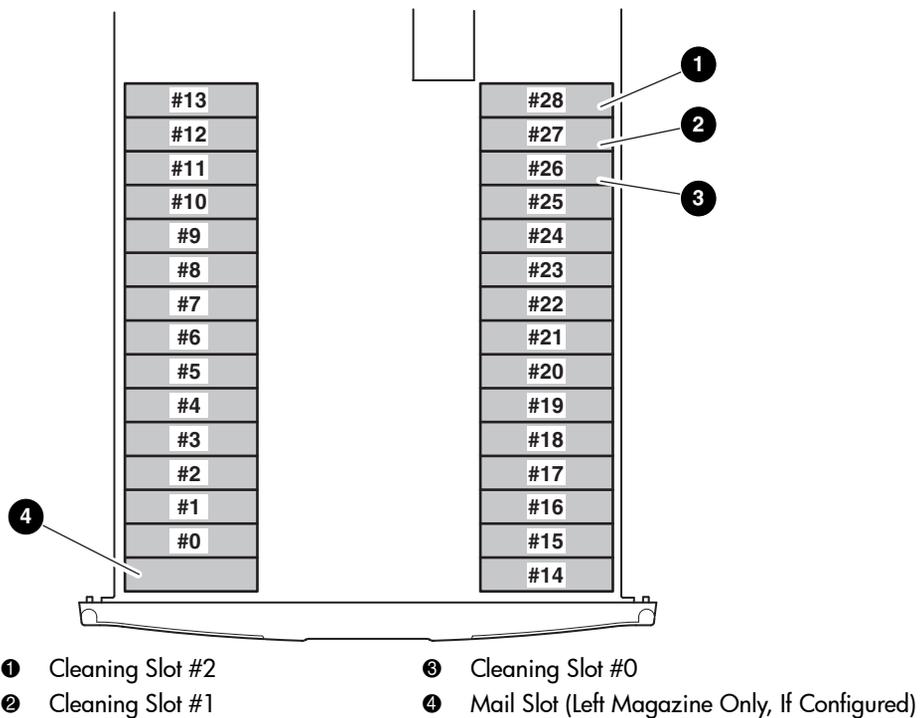


Figure 24: Reserved slot locations, Ultrium (MSL6030/MSL5030)


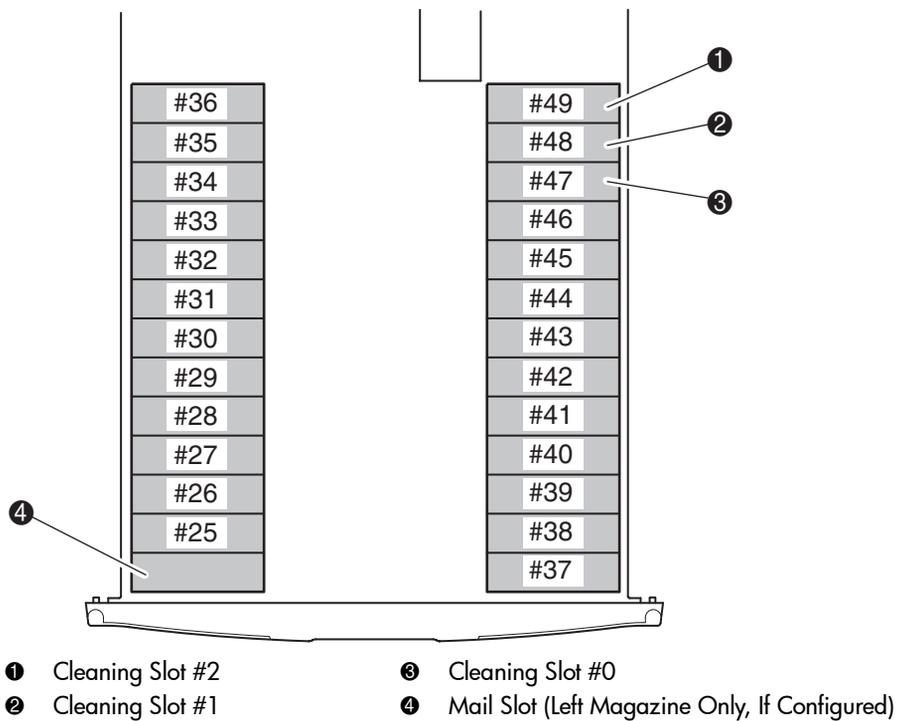


Figure 25: Reserved slot locations, lower module, SDLT/DLT (MSL5052)

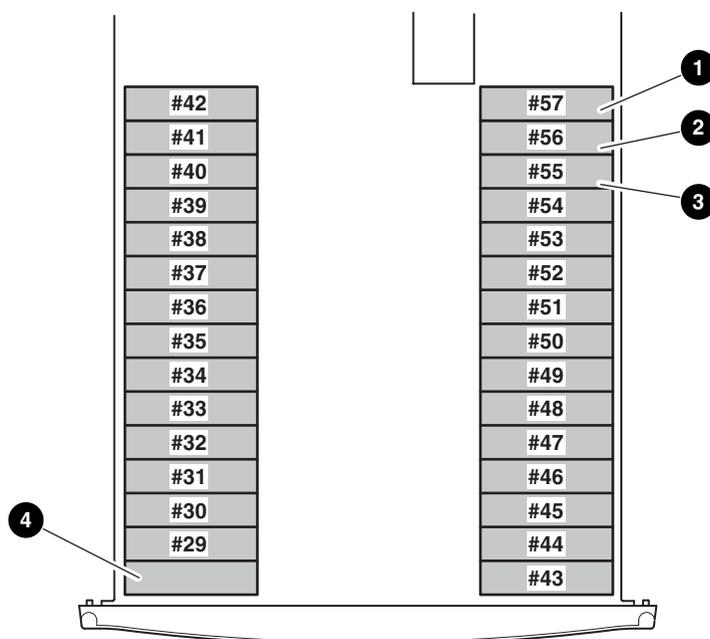

- | | |
|--------------------|---|
| ❶ Cleaning Slot #2 | ❸ Cleaning Slot #0 |
| ❷ Cleaning Slot #1 | ❹ Mail Slot (Left Magazine Only, If Configured) |

Figure 26: Reserved slot locations, lower module, Ultrium (MSL6060/MSL5060)

To reserve a slot:

1. On the **Menu** screen, touch the **Library** option in the **Edit Options** area.
2. On the **Library** options screen, press the ▼ to scroll to the screen that contains the **Total Reserved Slots** option (see [Figure 27](#)).

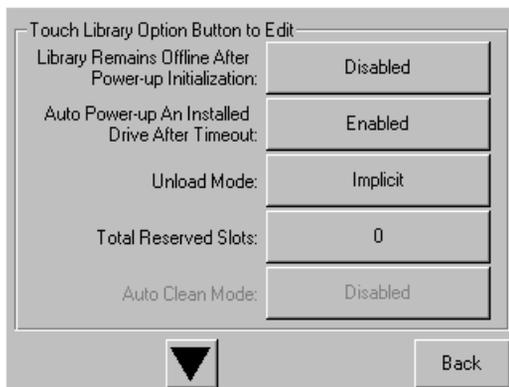


Figure 27: Total reserved slots screen

3. Press the associated box next to the **Total Reserved Slots** option. A numeric keypad is displayed (see [Figure 28](#)).

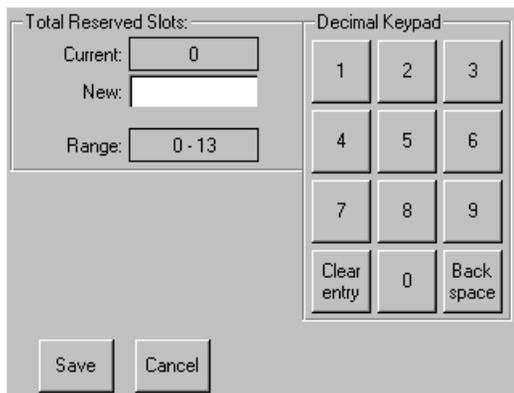


Figure 28: Reserved slots numeric keypad screen

4. Enter the number of slots to reserve and then press **Save** to confirm your change. On the resulting confirmation screen (see [Figure 29](#)), press **OK** to save.



Figure 29: Total reserved slots confirmation screen

5. Press the **Back** button repeatedly to return to the **Main** menu screen.

Note: Your choice takes effect the next time you boot the library.

Note: Changes to this option may require reconfiguring the software application in order to accommodate the change in storage slots.

Configuring the Network Settings

The library automatically obtains an IP address from a DHCP server when the library is powered up. The library also supports user-specified fixed addresses through the front panel. To set a fixed address:

1. On the **Menu** screen, touch **Network** in the **Edit Options** area. The **IP Address Determination** screen appears (see [Figure 30](#)).

Touch Network Option Button to Edit	
IP Address Determination:	User Specified IP Address
IP Address:	10.1.10.98
IP Mask:	255.255.0.0
IP Gateway:	10.1.8.99
DNS Server:	10.1.8.14

Save Cancel

Figure 30: IP address determination screen

2. Touch the **IP Address Determination** option (see [Figure 30](#)) and then the **User Specified IP Address** option (see [Figure 31](#)).

IP Address Determination:

Current: User Specified IP Address

New: User Specified IP Address

Obtain IP Addresses From a DHCP Server


User Specified IP Address

OK

Back

Figure 31: User-specified IP address screen

3. Touch **OK** to confirm your selection.
4. Touch each **IP Address** option and then use the keypad to enter each IP address (see [Figure 32](#)).
5. Save and confirm your selections.

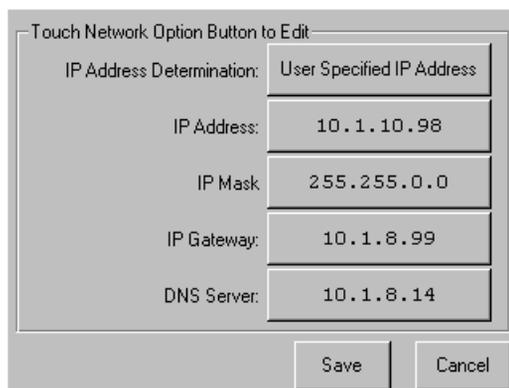

The screenshot shows a configuration window titled "Touch Network: Option Button to Edit". It contains five input fields for network settings, each with a corresponding label on the left and a text box on the right. At the bottom of the window are two buttons: "Save" and "Cancel".

Field Label	Value
IP Address Determination:	User Specified IP Address
IP Address:	10.1.10.98
IP Mask:	255.255.0.0
IP Gateway:	10.1.8.99
DNS Server:	10.1.8.14

Figure 32: Fixed IP address screen

6. Press the **Back** button repeatedly to return to the **Main** menu screen.

Operation

4

This chapter describes how to operate an HP StorageWorks MSL Series tape library. Sections in this chapter include the following:

- [Front Panel](#), page 68
- [Library Display Screens and Options](#), page 73
- [Menu Selections](#), page 82
- [Inserting and Removing Tape Cartridges](#), page 99

Front Panel

The front panel of the library includes the following (see [Figure 33](#)):

- Magazine doors (left- and right-hand)
- Graphical user interface (GUI) touch screen
- Library status LED
- Viewing window

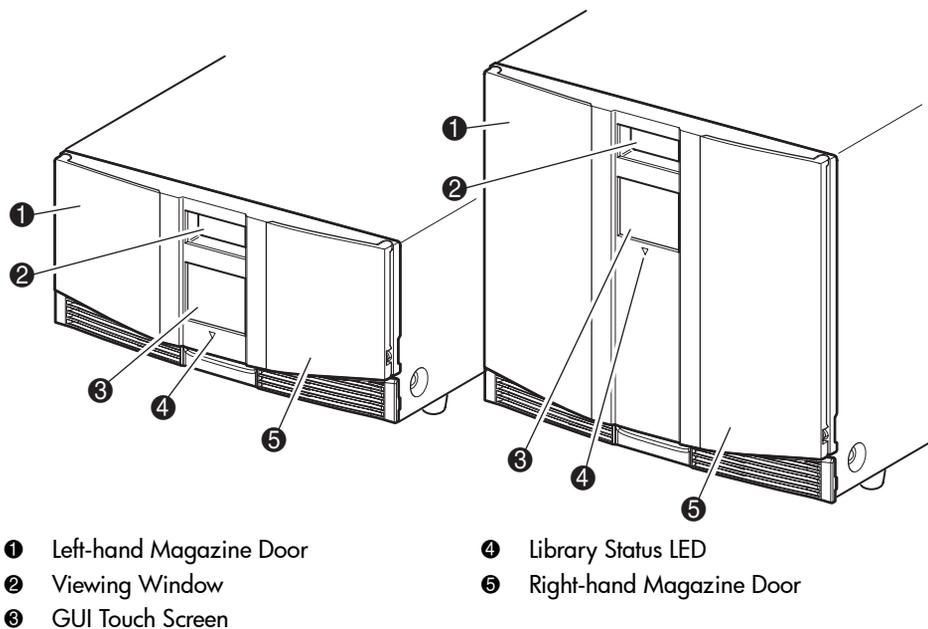


Figure 33: Library front panel

Magazine Doors

The magazine doors have both an electrical release (via the GUI touch screen) and a manual release. It is always recommended that you open the magazine doors using the GUI touch screen. However, if the GUI touch screen fails, or if the magazines need to be accessed when power is off, you can manually open the magazine doors by pushing a small metal pin or paper clip into the mechanical releases (see [Figure 34](#)).



Caution: The magazine doors must *only* be opened manually in an emergency. Failure to follow normal procedures can cause data loss and equipment damage.

Note: The library may not perform a complete inventory each time a magazine is manually removed and then replaced using the emergency release.

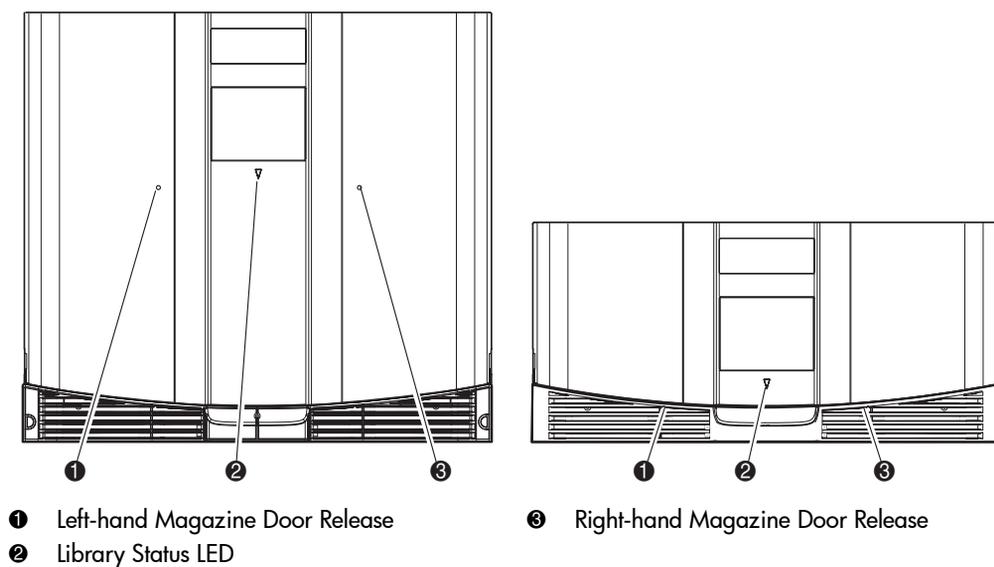


Figure 34: Magazine door mechanical releases (emergency access)

Indicators

The library front panel indicators consist of a GUI touch screen and a library status LED (see [Figure 35](#) and [Table 5](#)).

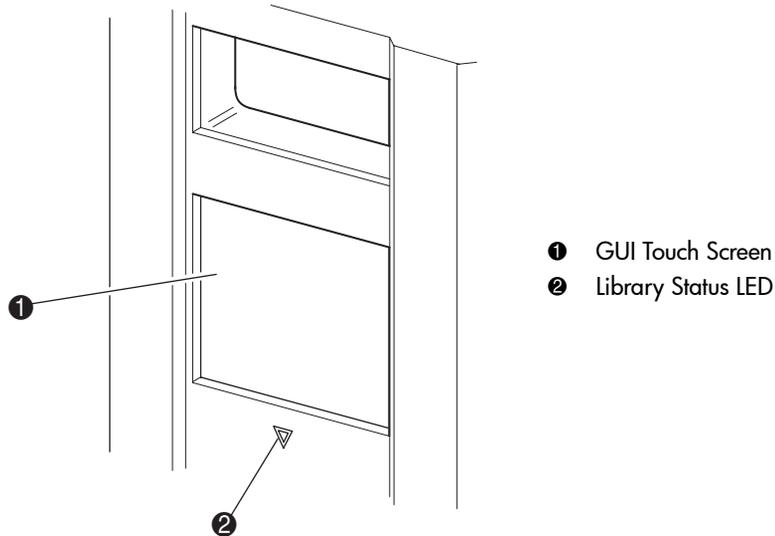


Figure 35: Library indicators

Table 5: Library Status LED

Indicator	Description
Solid green	The library is operating correctly under normal conditions.
Flashing green	The library is operating correctly; however, a change is being made on the GUI touch screen that interrupts the current library operation (off-line).
Solid amber	The library is in a fault state as detailed by the error message on the GUI touch screen.

Front Panel and Media Security Locks

The following security features are available to help you avoid accidental interruption of library operation.

GUI Touch Screen

The GUI touch screen offers three levels of security (see [Figure 36](#)):

- User Level 1—allows access to the mail slot(s).
- User Level 2—allows magazine access, mail slot access, SCSI options, diagnostics, and lets you move media.
- Service—allows access to the administrative menu that lets you view/edit library and SCSI options.

Note: The library ships with a default service password of 5566.

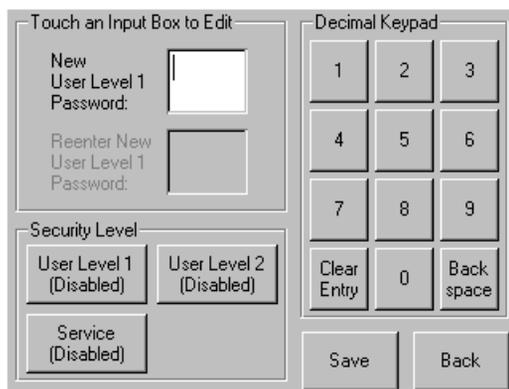


Figure 36: Password levels

Each password is represented by four decimal digits that are stored in NVRAM in a range of 0001 to 9999.

Note: 0000 is used to disable password verification for each level.

Enabling a password at a lower level re-enables disabled higher levels to that value. As a result, prior to accessing any higher level operation, you are prompted first to enter the new higher level password.

You can also use a higher level password to gain access to a lower level operation. For example, use the Service password to access the Move Media operation. Using the Service password to access the Menu option also gives full access (without validating) to the Service operations.

Note: To restore passwords if forgotten, use Set User Defaults using the MSL Utility and diagnostic cable. Note that any configuration that was previously set will be lost. If necessary, record all configuration settings before resetting the password.



Caution: Do not use **Set Factory Defaults** or library damage may occur.

Host System

Media can also be reserved by software running on the host. The library provides no GUI touch screen override for this command. Usually, exiting the host software restores media access. In the event of host failure, you can restore media access by cycling the library power.

Library Display Screens and Options

The library GUI touch screen displays graphics and text characters in the form of easy-to-understand messages. Graphics and text messages, along with their functions, are described in this section.

Initialization Screen

When power is first applied to the library, a series of Power-On Self Test (POST) diagnostics are performed. After the POST completes, the following initialization screen appears during the library inventory and scalability configuration.



Figure 37: Initialization screen

Library Status Screen

After the POST executes successfully and the library initialization completes (approximately 45 seconds), the following library **Status** screen appears:

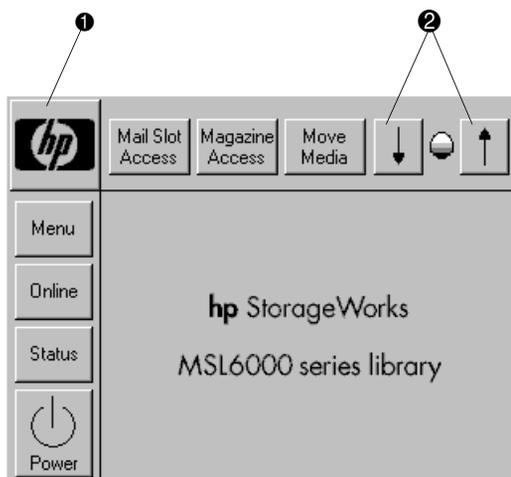


Figure 38: Library status screen (two-drive model shown)

- ❶ Technical Support Information Option
- ❷ LCD Contrast Controls (reset on power-up)

The library **Status** screen lets you select the following options:

- Technical Support Information (HP logo)
- Mail Slot Access
- Magazine Access
- Move Media
- LCD Contrast Controls
- Power
- Status
- Online/Offline
- Menu

Technical Support Information

Selecting this option via the HP logo displays HP-specific technical support assistance information, including the HP StorageWorks and the HP technical support websites (see [Figure 39](#)).



Figure 39: Technical support information screen

Mail Slot Access (Left-hand Magazines Only)

Select this option to display the **Mail Slot Access** screen (Figure 40). This option provides access to a mail slot while the library remains powered up. Note that a mail slot is reserved for the first tape cartridge slot in a left-hand magazine, and can be password protected or fully disabled. If the mail slot is disabled, this menu button is absent. On four-drive models, solenoids restrict access to the selected mail slots.

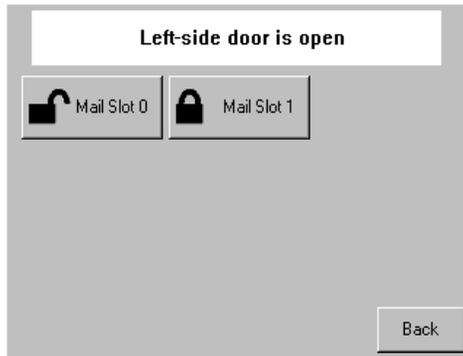


Figure 40: Mail slot access screen (four-drive model shown)

Magazine Access

Select this option to display the **Magazine Access** screen (Figure 41). For two-drive models, this option lets you gain access to the left or right-hand magazine doors separately, or both magazine doors for tape cartridge placement or removal. For four-drive models, this option provides access to the upper-left, lower-left, or right-hand magazines separately, or both magazine doors for tape cartridge placement or removal.

Note: The **Magazine Access** option can be password protected.



Figure 41: Magazine access screen (two-drive model shown)

Move Media

Select this option to display the **Move Media** screen (see [Figure 42](#)). The **Move Media** option lets you remove a cartridge from a tape drive, a data slot in any magazine, or a mail slot in a left-hand magazine. This option also lets you load and unload tape cartridges from the installed tape drives.

See the section on “[Replacing a Cleaning Cartridge in a Reserved Slot](#)” on page 131 for detailed removal information.



Caution: To reduce the risk of drive damage, use DLT, SDLT, and Ultrium cleaning cartridges only in their respective drive types.



Caution: Remove media from all drives and slots prior to library transport.

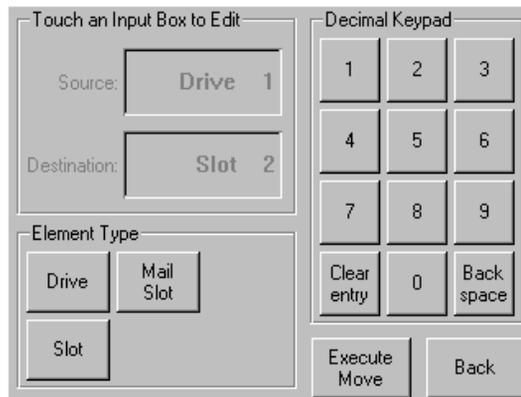


Figure 42: Move media screen (two-drive model shown)

GUI Contrast Controls

Select these options to increase or decrease the contrast of the GUI display (see [Figure 38](#)). Incremental steps are set by adjusting the GUI contrast controls from the library **Status** screen. Incremental steps can range from 0 to 31 depending on your preference. These settings are volatile and are restored to default values upon reboot or power cycling.

Power

Select this option to initiate a library power-down operation. After a successful power-down, a confirmation message appears (see [Figure 43](#)).

Note: The library moves the shuttle assembly to the parked position before powering down. This position is a prerequisite for any library transport.

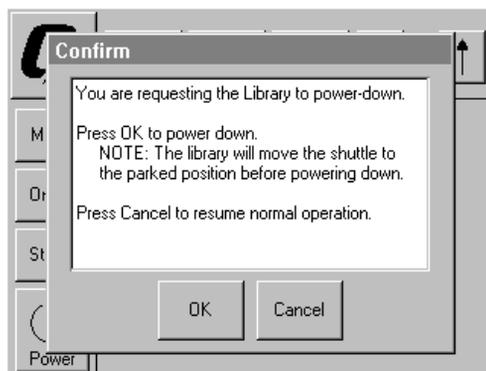


Figure 43: Power-down confirmation message screen

Status

Select this option to display an information **Status** screen (Figure 44). From this screen, touch a magazine icon to display detailed information about the cartridges in that magazine. Touch a drive icon to view drive ID information, cleaning information, tape cartridge information, and drive status.

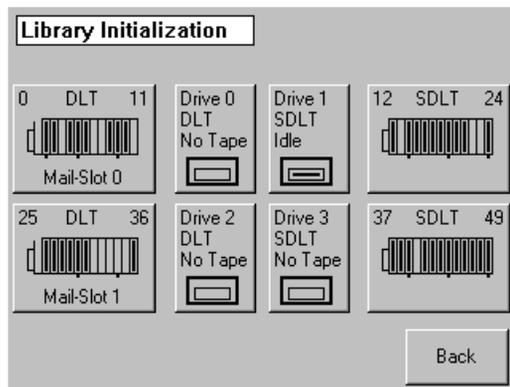


Figure 44: Status screen (four-drive model shown)

Online

Selecting this option places the library online or offline.

Note: The library automatically comes online after a power-up initialization. You can use this option to place the library offline.

Menu

Selecting this option lets you view, configure, and use the library (Figure 45). The **Menu** option displays three distinct areas:

- View System Data
- Utilities
- Edit Options

For a complete description of these areas, see the section on “Menu Selections” on page 82.

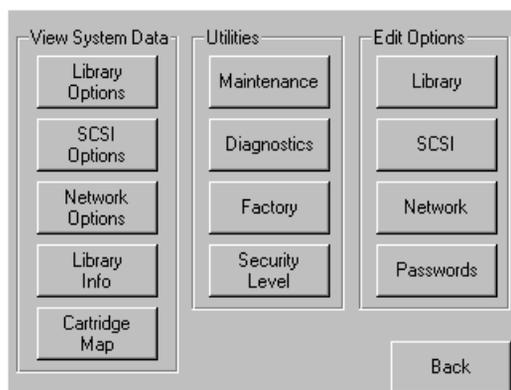


Figure 45: Menu screen

Menu Selections

This section describes the three **Menu** areas:

- View System Data
- Edit Options
- Utilities

View System Data Area

The **View System Data** area lets you select the following screens:

- Library Options
- SCSI Options
- Network Options
- Library Info
- Cartridge Map

Library Options

Selecting this option lets you view the library settings. These settings are defined from the **Library** option in the **Edit Options** area (see [Figure 46](#) on page 83).

Note: You can move to the next subsequent **Library Options** screen by selecting the ▼ button.

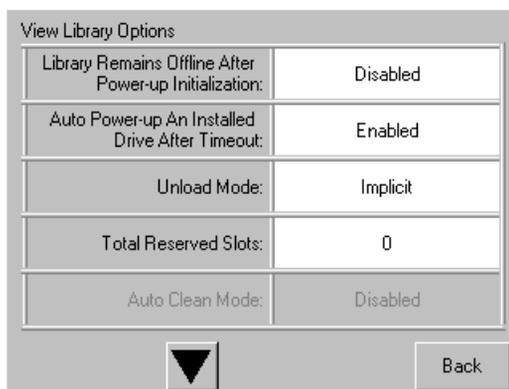


Figure 46: View library options screen

Table 6 lists and describes the available **Library** options.

Table 6: View Library Options

Option	Description
Library Remains Offline After Power-up Initialization	Library does not go online after power-up initialization. You must select the Online option from the Menu screen on the GUI touch screen. The default is Disabled .
Auto Power-Up An Installed Drive After Timeout	Enables a tape drive to be automatically powered up (after a delay), after replacing a tape drive if you do not explicitly power up the tape drive from the GUI touch screen. The default is Enabled .
Unload Mode	Lets you determine whether a <code>SCSI MOVE MEDIUM</code> command is interpreted as Implicit or Explicit . If Implicit , the library unloads a tape drive before attempting to move a cartridge from that tape drive. If Explicit , the host must issue a <code>SCSI UNLOAD</code> command to a tape drive before each <code>MOVE MEDIUM</code> command that removes a cartridge from that tape drive. The default is Implicit .
Total Reserved Slots	Lets you reduce a specified number of slots at the rear of a magazine. Some host software imposes size limits on library magazines for licensing purposes, and does not operate with a library that exceeds the licensed size. The default is 0 .

Table 6: View Library Options (Continued)

Option	Description
Auto Clean Mode	Lets you enable an automatic tape drive cleaning cycle. To use this option, you must have reserved a slot for a cleaning cartridge using the Total Reserved Slots option. The default is Disabled .
Drive and Slot Numbering	Lets you specify whether SCSI elements in the library displays with either zero based or one based. Note that this only affects the GUI touch screen, not the actual SCSI element addresses. The default is Zero Based .
Library Mode	Lets you set the robotics operating mode to Random , Sequential Drv0 , Sequential Drv n (two or more drives), or Sequential Split . Sequential Drive n and Sequential Split require two or more drives in the library. Sequential mode is not available with multi-module configurations. The default is Random .
Sequential Mode	Sequential Mode is locally controlled. Sequential operations begin with any cartridge loaded into Drive 0. The library monitors the drive status, and when the host unloads a cartridge from the drive, it returns the cartridge to the magazine, and then loads the next cartridge in magazine numerical order. This operation continues until all cartridges have been loaded, or until an empty slot is encountered. Two options are available: Normal (same as Library Mode above) and Recirculate . Instead of stopping after the cartridge in the last slot for the drive has been unloaded by the host, Recirculate mode continues the operation by loading the first cartridge for the drive. Recirculation will continue until an empty slot is encountered, or the operator unloads the tape using the GUI touch screen.
LCD Contrast Adjust	The LCD contrast controls let you increase or decrease the contrast of the LCD display. The incremental steps are set by adjusting the LCD Contrast Adjust option from the Library option. Incremental steps can range from 0 to 31 depending on your preference. The default is 16 .
Mail-Slot Mode	Lets you enable or disable the mail slot(s) in a library. For the two-drive models, the default is Mail Slot Enabled . For the four-drive models, the default is Both Mail Slots Enabled .
Barcode Label Size	Lets you limit the length of the bar code label. Possible settings are 1 through 8. The default is 8 .

Table 6: View Library Options (Continued)

Option	Description
Barcode Label Assignment	Lets you specify the alignment of a bar code label. The options are Left or Right . When used in conjunction with the Barcode Label Size option, this option strips unwanted trailing characters (left alignment) or leading characters (right alignment). The default is Left Align .
Barcode Label Check Digit	Lets you specify whether to enable or disable the verification of a check digit character in the bar code label. The default is Disabled .
Barcode Reader	Lets you enable or disable the bar code reader retries option. The default is Retries Enabled .
Module Configuration	Lets you configure a library for Standalone , Master , or Slave operation. The default is Standalone .
Library Auto Power-On Mode	Lets you enable or disable an automatic library power-on after a power loss without the need to touch the GUI screen. The default is Enabled .

SCSI Options

Selecting this option lets you view the settings defined from the **SCSI** option in the **Edit Options** area (see [Figure 47](#)).

Note: You can move to the next sequential **SCSI Options** screen by selecting the ▼. To return to the previous **SCSI Options** screen, select the ▲ or **Back** button to return to the **Menu** screen.

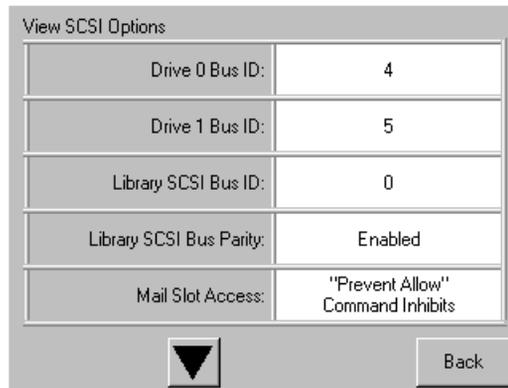


Figure 47: View SCSI options screen (two-drive model shown)

Table 7 lists and describes the available **SCSI Options** selections. (See [Library tape drive locations](#) on page 21 for an illustration of the drive numbering scheme.)

Table 7: View SCSI Options

Option	Description
Drive 0 Bus ID	Lets you set the SCSI addresses of drive 0. The designators Drive 0 (outer tape drive) through Drive <i>n</i> refer to the first through <i>n</i> th drives, counting from right to left starting with the master unit in a scaled Library system. Default is 1.
Drive 1 Bus ID	Lets you set the SCSI addresses of drive 1. The designators Drive 1 (inner tape drive) through Drive <i>n</i> refer to the second through <i>n</i> th drives, counting from right to left starting with the master unit in a scaled Library system. Default is 2.
Drive 2 Bus ID <i>(four-drive models only)</i>	Lets you set the SCSI addresses of drive 2. The designators Drive 2 (lower, outer tape drive) through Drive <i>n</i> refer to the third through <i>n</i> th drives, counting from right to left starting with the master unit in a scaled Library system. Default is 3.
Drive 3 Bus ID <i>(four-drive models only)</i>	Lets you set the SCSI addresses of drive 3. The designators Drive 3 (lower, inner tape drive) through Drive <i>n</i> refer to the fourth through <i>n</i> th drives, counting from right to left starting with the master unit in a scaled Library system. Default is 4.

Table 7: View SCSI Options (Continued)

Option	Description
Library SCSI Bus ID	Lets you set the SCSI addresses for the library robotics. The default is 0.
Library SCSI Bus Parity	Lets you enable or disable the library robotics SCSI bus parity checking. The default is Enabled .
Mail Slot Access	This option controls access to the mail slot and media removal. "Prevent Allow" Command Inhibits allows access to the mail slot via the GUI control panel and allows media removal. "Prevent Allow" Command Ignored prevents access to the mail slot and removal of media. This option is used for some backup applications. The default is "Prevent Allow" Command Inhibits .
SCSI Mode	Defines the loader as SCSI-2 or SCSI-3. The default is SCSI-3.
Unit Attention Reporting	Lets you select reporting of all or only one stacked-unit attention conditions. If set to Report All , the unit reports all unit attention conditions in sequence; if set to Report One , the unit reports only the highest priority condition. The default is Report All .
Init Element Status	Lets you specify the library's response to the SCSI INITIALIZE ELEMENT STATUS command. The possible settings are No Inventory , Force Inventory , and Force Label Scan . The default is Force Inventory .
Test Unit Ready Reporting	Lets you specify the response to a TEST UNIT READY command if the library is in Sequential Mode . The possible settings are Standard or Custom . The default is Custom .
Device Capability Page Length	Lets you choose between two lengths of the mode sense/select device capabilities page (SCSI page 1Fh), which are Short (14 bytes) and Long (18 bytes) , to accommodate different SCSI device implementations of this page. The default is Short (14 bytes) .
Transport Element Base Address	Lets you set the base address for the robotics mechanism. The default is 0x0 .
Storage Element Base Address	Lets you set the base address for the magazine slots. The default is 0x20 .

Table 7: View SCSI Options (Continued)

Option	Description
Transfer Element Base Address	Lets you set the base address for the tape drives. The default is 0x1E0 .
Import/Export Element Base Address	Lets you set the base address for the mail slot. The default is 0x1C0 .
Product Identification (PID)	Lets you specify the response of the library's robotics to the SCSI INQUIRY command in the Product Identification field. The default is MSL5000 Series or MSL6000 Series , depending on the model.
Vendor Identification (VID)	Lets you specify the response of the library's robotics to the SCSI INQUIRY command in the Vendor Identification field. The default is HP .
Post Recovered Errors	Lets you specify whether or not recovered errors are posted. The default is Disabled .

Table 7: View SCSI Options (Continued)

Option	Description
TapeAlert Mode	<p>Specifies conditions for logging and reporting the following Tape Alert data options. The default is Unconditionally Generate Recovered Error.</p> <ul style="list-style-type: none"> — Logging Disabled: Inhibits the logging feature. — No Exceptions: The library must not report information exceptions. — Generate Unit Attention: Reports information exceptions with a Unit Attention sense key and an ASC/ASCQ of 5D/00. — Conditionally Generate Recovered Error: Reports information exceptions with a Recovered Error sense key and an ASC/ASCQ of 5D/00, if Recovered Error Reporting is enabled. — Unconditionally Generate Recovered Error: Unconditionally reports information exceptions with a Recovered Error sense key and an ASC/ASCQ of 5D/00. — Generate No Sense: Reports information exceptions with a No Sense sense key and an ASC/ASCQ of 5D/00. — Report on Unsolicited Request Sense: Reports information exceptions with a No Sense sense key and an ASC/ASCQ of 5D/00, only in response to an unsolicited <code>REQUEST SENSE</code> command.
Abort Move Status	<p>Lets you specify the SCSI response while aborting a SCSI command. The possible settings are Busy or Not Ready. The default is Not Ready.</p>
Door Open Response	<p>Lets you specify the SCSI response when a library door is open. The settings are Ready or Not Ready. The default is Not Ready.</p>
Initiate Wide Data Transfer Negotiation	<p>Lets you enable the library to initiate a SCSI synchronous and wide data transfer negotiation with the host. The settings are Do Not Initiate or Initiate. The default is Do Not Initiate.</p>

Table 7: View SCSI Options (Continued)

Option	Description
Data Transfer Speed	Lets you set the robot or library SCSI data transfer rate to Synchronous, 10 MB/sec, Synchronous, 5 MB/sec, or Asynchronous Only . The default is Synchronous, 10 MB/sec .
Report Element Type	The default is Disabled .
Fast Terminate Sequence	The default is Disabled .

Network Options

Selecting this option lets you view the settings defined from the **Network** option in the **Edit Options** area (see [Figure 48](#)). [Table 8](#) on page 91 lists and describes the available options.

Note: There are no firmware default settings for networks. Contact your network administrator for specific information on connecting the library to your network.

View Network Options	
IP Address Determination:	User Specified IP Address
IP Address:	0.0.0.0
IP Mask:	0.0.0.0
IP Gateway:	0.0.0.0
DNS Server:	0.0.0.0
<input type="button" value="▼"/> <input type="button" value="Back"/>	

Figure 48: Default view network options screen

Note: The IP Address, IP Mask, IP Gateway, and DNS Server become available after selecting **User Specified IP Address** from the **Network** screen under **Edit Options**.

Table 8: View Network Options

Option	Description
IP Address Determination	Lets you obtain an IP address from a DHCP server or set a user specified IP address.
IP Address	Lets you select an IP Address.
IP Mask	Lets you select an IP Mask.
IP Gateway	Lets you select an IP Gateway.
DNS Server	Lets you select a DNS server address.

Library Info

Selecting this option lets you display the **Miscellaneous Library Info** screen (Figure 49). This screen displays the library's firmware revision, the local IP and Ethernet address that is currently in use, the unit serial number, and the library's power-on hours.

Miscellaneous Library Info	
Firmware Revision:	99.229
Local IP Address:	10.1.25.78
Ethernet Address:	00900D112233
Serial Number:	ABCD123456789XYZ
Power-On Hours:	2568

Back

Figure 49: View library info screen

Cartridge Map

Selecting this option provides you with a layout of the slots and cartridges that are currently being used in the library. Bar code labels are displayed if enabled and in use.

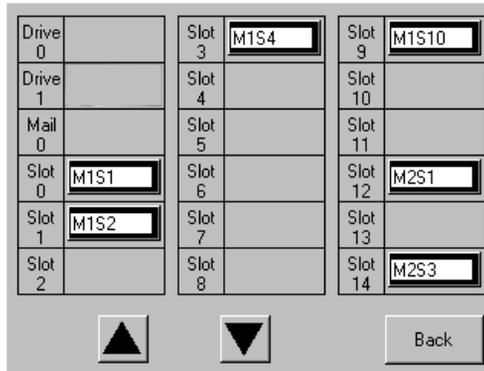


Figure 50: Cartridge map screen (two-drive model shown)

Edit Options Area

The **Edit Options** area lets you select the following screens:

- **Library**
- **SCSI**
- **Network**
- **Passwords**

Library

Selecting this option lets you define the **Library** options used to configure the library for your specific needs (see [Figure 51](#)). [Table 6](#) on page 83 lists and describes the available options.

Note: You can move to the subsequent **Library** screen by selecting the ▼.

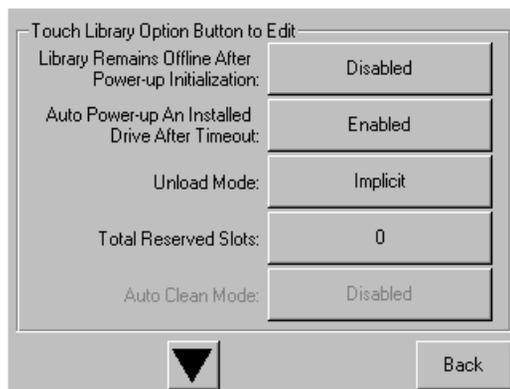


Figure 51: Edit library options screen

SCSI

Selecting this option lets you define the **SCSI** options used to configure the library for your specific needs (see [Figure 52](#)). [Table 7](#) on page page 86 lists and describes the available options.

Note: You can move to the subsequent **SCSI** screen by selecting the ▼.

Touch SCSI Option Button to Edit

Drive 0 Bus ID:	4
Drive 1 Bus ID:	5
Library SCSI Bus ID:	0
Library SCSI Bus Parity:	Enabled
Mail Slot Access:	"Prevent Allow" Command Inhibits

▼ Back

Figure 52: Edit SCSI options screen

Network

Selecting this option lets you define the **Network** options used to configure the library for your specific needs (see [Figure 53](#)). [Table 8](#) on page 91 lists and describes the available options.

The screenshot shows a dialog box titled "Touch Network: Option Button to Edit". It contains the following fields and values:

IP Address Determination:	User Specified IP Address
IP Address:	10.1.10.98
IP Mask:	255.255.0.0
IP Gateway:	10.1.8.99
DNS Server:	10.1.8.14

At the bottom of the dialog are two buttons: "Save" and "Cancel".

Figure 53: Edit network options screen

Passwords

Selecting this option lets you define the **Password** options used to configure the library for your specific needs (see [Figure 54](#)). For information on library security features and password levels, see “Front Panel and Media Security Locks” on page 71.

The screenshot shows a dialog box titled "Touch an Input Box to Edit". It contains the following fields and options:

- New User Level 1 Password:** An input field with a cursor.
- Reenter New User Level 1 Password:** An input field.
- Security Level:**
 - User Level 1 (Disabled)
 - User Level 2 (Disabled)
 - Service (Disabled)
- Decimal Keypad:** A numeric keypad with buttons for 1-9, 0, Clear Entry, and Backspace.

At the bottom of the dialog are two buttons: "Save" and "Back".

Figure 54: Edit passwords options screen

Utilities Area

The **Utilities** area lets you select the following screens:

- **Maintenance**
- **Diagnostics**
- **Factory**
- **Security Level**

Maintenance

Selecting this option lets you perform system maintenance on the library (see [Figure 55](#)):

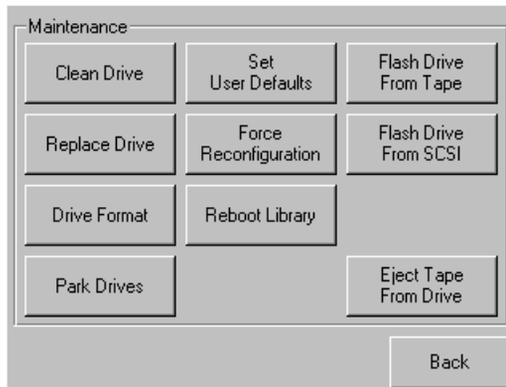


Figure 55: Maintenance screen

The **Maintenance** menu options are described in Chapter 6, “[Maintenance](#)”, beginning on page 121.

Diagnostics

Selecting this option lets you perform a system calibration on available components (see [Figure 56](#)). Available options are dependent on the specified user level.

The **Diagnostics** menu options are described in Chapter 7, “Troubleshooting” beginning on page 137.

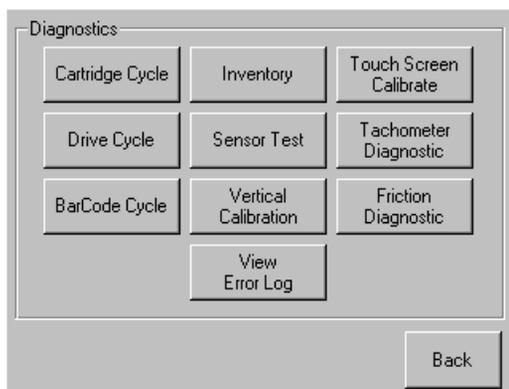


Figure 56: Diagnostics screen (four-drive model shown)

Note: The Vertical Calibration button is only available on four-drive models.

Factory

The **Factory** menu options are intended for use by factory personnel only.



Caution: Unauthorized use of the **Factory** option could render the library inoperable.

Security Level

Selecting this option lets you select passwords for a security level (see [Figure 57](#)).

Note: The library ships with a default Service password of **5566**.

Note: Setting a value **0000** for a given level disables that level.

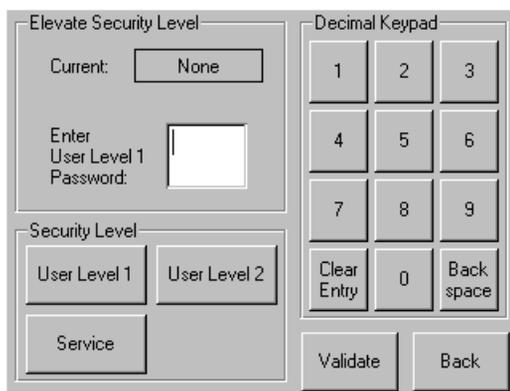


Figure 57: Security level screen

Inserting and Removing Tape Cartridges

Unless you are using the mail slot(s), a tape magazine must be removed from the library to remove or insert tape cartridges. Make sure the slot you want to use is not already reserved for a tape cartridge that is now in a tape drive. The safest way to do this is to unload all tape drives before removing a magazine. You can unload all the tape drives either through your host system software or by using the LOAD/UNLOAD command from the **Library Option** menu.


Note: Do not add more tape cartridges to the library than its rated slot capacity.



Caution: Ultrium and SDLT/DLT tape drives require special cleaning cartridges and data cartridges formatted specifically for the drive technology. To avoid damage to your tape drive, it is critical to use appropriate cleaning cartridges and properly formatted data cartridges. Contact an HP authorized dealer or sales representative for current compatibility and availability.

Removing Magazines

Library magazine removal is a manual operation. Access the magazines using the **Magazine Access** option from the library **Status** screen. This option lets you open the left- or right-hand magazine doors separately, or all magazine doors at the same time. After opening the appropriate magazine door, pull the magazine out from the library chassis (see [Figure 58](#)).

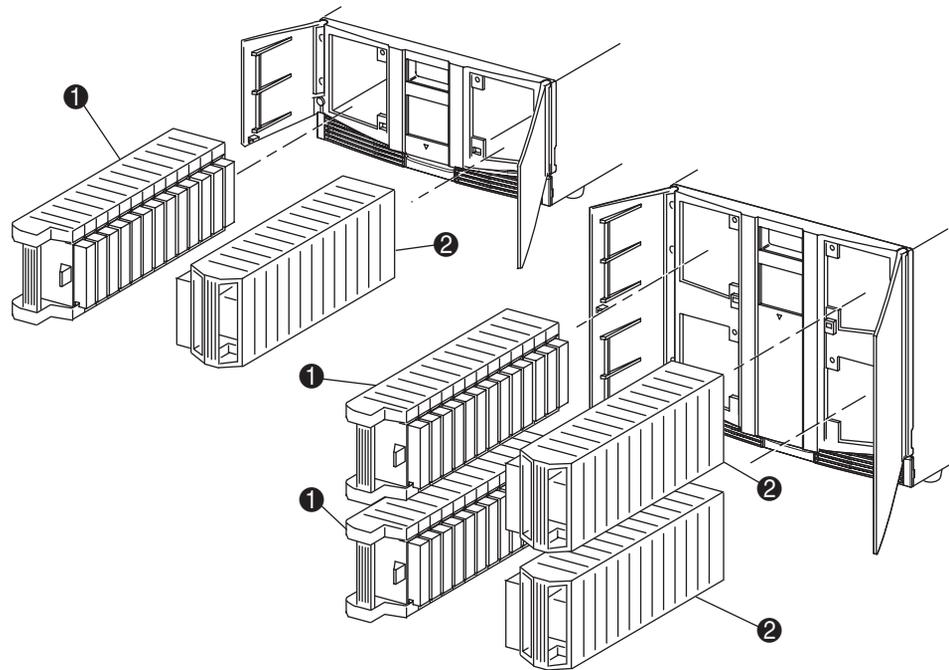

- ❶ Left-hand Magazine(s)
- ❷ Right-hand Magazine(s)

Figure 58: Removing tape cartridge magazines

Inserting Cartridges into a Magazine

A full left-hand magazine is shown in [Figure 59](#). For two-drive models, the lowest numbered tape cartridge slot ❷ is the one closest to the front of the left-hand magazine. For four-drive models, the lowest numbered tape cartridge slot ❷ is the one closest to the front of the upper-left magazine.

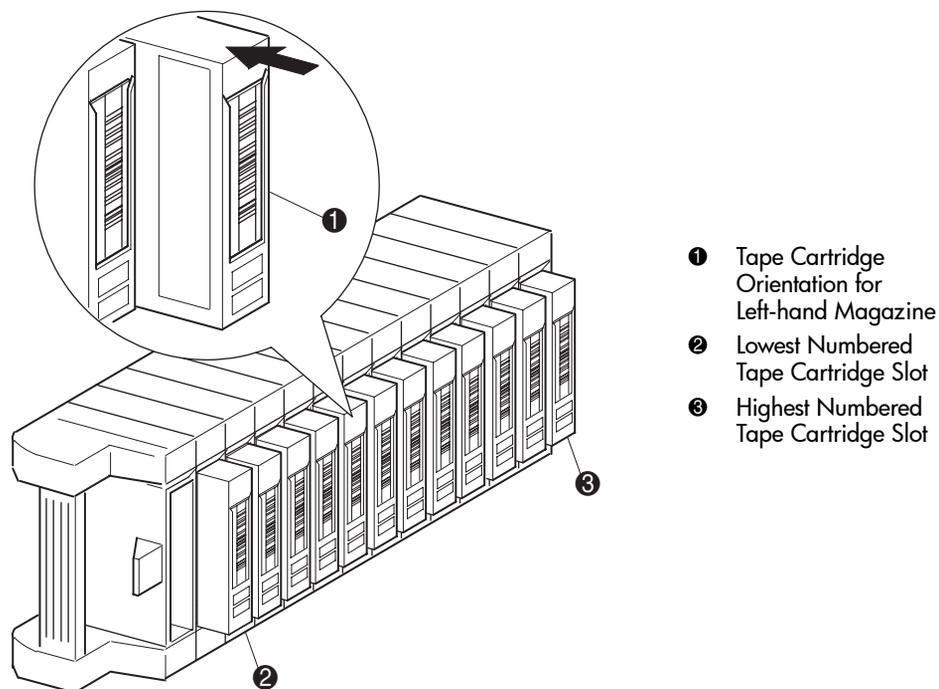


Figure 59: Inserting a tape cartridge (left-hand magazine, DLT shown)

Insert tape cartridges so that the bar code labels are facing outward (see [Figure 59](#)).

Note: Handle and store tape cartridges in a clean, dust-free environment. Refer to the documentation provided with your tape cartridges for additional information.

Using Mail Slots (Left-hand Magazines Only)

Mail slots are used only with host system software that supports this feature. The mail slot feature lets you insert or remove a single tape without removing the entire magazine. The benefit of using a mail slot is that the magazine does not need to be inventoried. Access the mail slots using the **Mail Slot Access** option from the library **Status** screen. This option lets you open a left-hand magazine door for mail slot access. After opening a left-hand magazine door, pivot the mail slot forward to insert a tape cartridge (see [Figure 60](#)).

Note: Mail slots must be enabled (firmware default) using the **Mail Slot Mode** option from the **Edit Library Options** menu. See [Table 6](#) for more information.

Note: Disabling a mail slot allows it to be used for an additional data slot, but this may be incompatible with some host software applications.

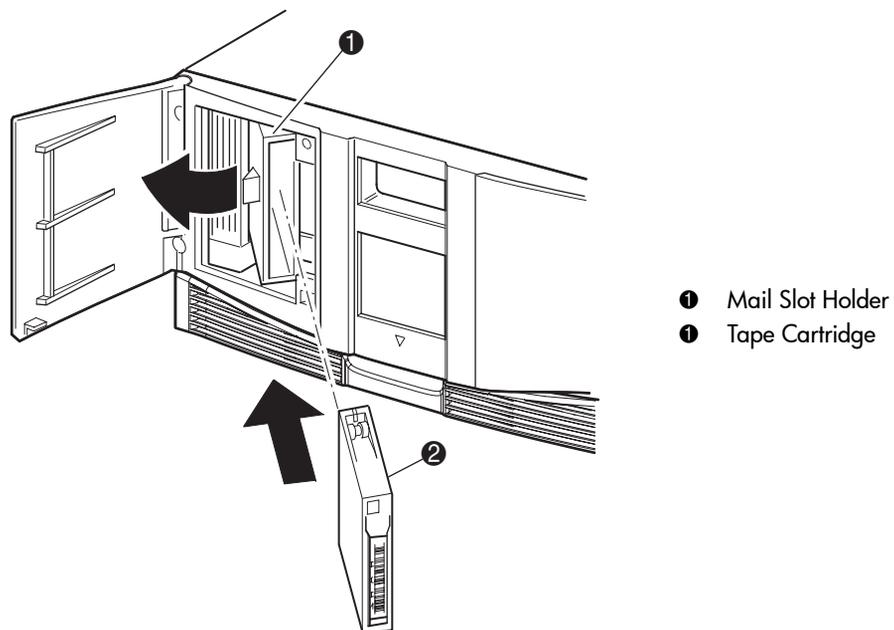


Figure 60: Left-hand magazine mail slot (two-drive model shown)

Labeling Tape Cartridges



Caution: The misuse and misunderstanding of bar code technology can result in backup and restore failures. To ensure that your bar codes meet HP's quality standards, always purchase them from an approved supplier and never print bar code labels yourself. For more information, refer to the order form provided with the library, as well as the *Bar Code Label Requirements, Compatibility and Usage* white paper available from <http://www.hp.com/support>.

Attaching a bar code label to each tape cartridge enables the library and application software to identify the cartridge quickly, thereby speeding up inventory time. Make it a practice to use bar code labels on your tape cartridges. Your host software may need to keep track of the following information and the associated bar code:

- Date of format or initialization
- Tape's media pool
- Data residing on the tape
- Age of the backup
- Errors encountered while using the tape (to determine if the tape is faulty)

Ultrium Labels

Ultrium tape cartridges have a recessed area located on the face of the cartridge next to the write-protect switch. Use this area for attaching the adhesive-backed bar code label (see [Figure 61](#)). Do not apply labels onto the cartridge except in this designated area.



Caution: The bar code label should be applied as shown in [Figure 61](#) with the alphanumeric portion facing the hub side of the tape cartridge. Never apply multiple labels onto a cartridge, as extra labels can cause the cartridge to jam in a tape drive.

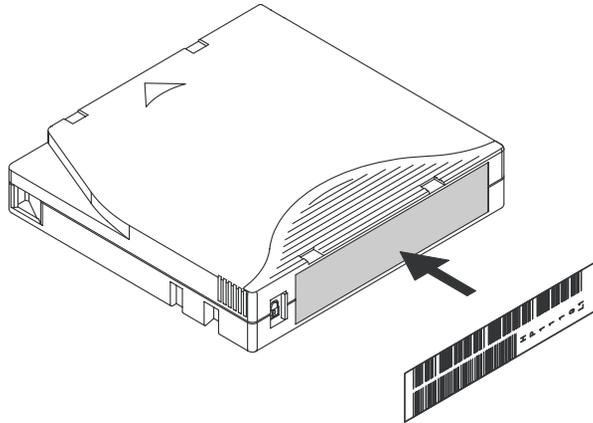


Figure 61: Attaching a bar code label to an Ultrium tape cartridge

To ensure successful operation of your tape library, place the bar code label *entirely* within the recessed area, ensuring that no part of the label is outside of it (see [Figure 62](#)).

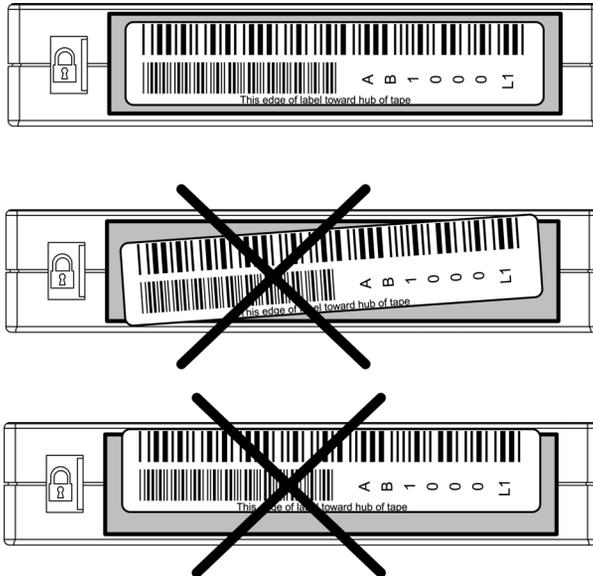


Figure 62: Proper Ultrium bar code label placement

SDLT and DLT Labels

SDLT and DLT tape cartridges have a front slide slot located on the face of the cartridge next to the write-protect switch (see [Figure 63](#) shows) Use this slot for inserting the bar code label by sliding it into the slot.



Caution: Do not apply labels onto the top, bottom, sides, or back of the cartridge as this may cause damage to the tape drive, or interfere with reliable operation.

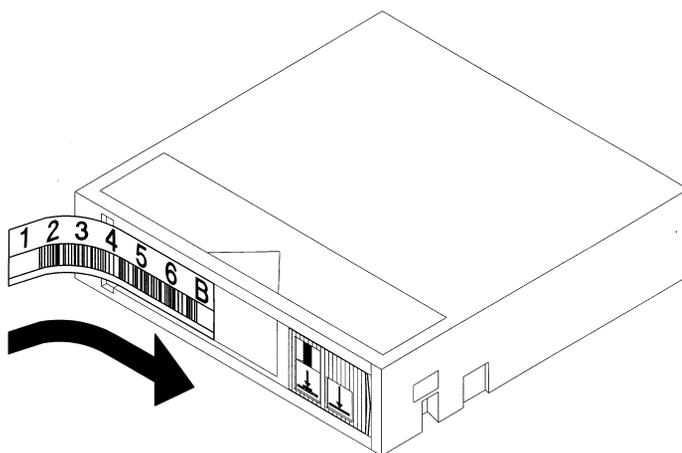


Figure 63: Attaching a bar code label to an SDLT/DLT tape cartridge

Media Label Identifiers

Be sure to use the proper bar code labels for your drive technology. [Table 9](#) lists the identifier that is found at the end of 7- or 8-character SDLT and Ultrium bar code labels.



Caution: To ensure that your bar codes meet HP's quality standards, always purchase them from an approved supplier and never print bar code labels yourself. For more information, refer to the order form provided with the library, as well as the *Bar Code Label Requirements, Compatibility and Usage* white paper available from <http://www.hp.com/support>.

Table 9: Media Label Identifiers

Cartridge Type	Density	Label Identifier
DLT	40/80 GB	Either nonexistent, D, C, or E
SDLT	110/220 GB	S or S1
SDLT	160/320 GB	S or S2
Ultrium 230	100/200 GB	L1
Ultrium 460	200/400GB	L2

Remote Management Interface

5

Many of the same operations performed from the front panel can also be performed remotely using the Remote Management Interface. Sections in this chapter include:

- [Overview](#), page 108
- [Accessing the Remote Management Interface](#), page 109
- [Using Menu Buttons](#), page 112

Overview

The Remote Management Interface lets you monitor and control your automated tape library from any terminal connected to your network or via the World Wide Web. The Remote Management Interface hosts a dedicated, protected Internet site that displays a graphical representation of your library.

After establishing a connection to the library, open any Web browser and enter the IP address of the library.

Note: Be sure that proxy server settings in your browser are disabled.

This internet site can be accessed using either Microsoft Internet Explorer (3.0 or higher) or Netscape (3.0 or higher). The Remote Management Interface shows the overall status of the library at a glance, and presents a control panel for making adjustments and viewing details down to the cartridge level.

To use the Remote Management Interface, you must have the following available:

- A 10 BaseT Ethernet Network
- An available IP address (either Internet or local)
- A host computer with COM port (initial setup and alternative maintenance procedures only)
- A computer with a Web browser installed that has access to your network

Two configurations for the Remote Management Interface are available:

- World Wide Accessible
- Local Area Network

To configure the Remote Management Interface you must set the IP addresses. (For information on setting IP addresses, see “[Configuring the Network Settings](#)” on page 64.)




Caution: Some options of the Remote Management Interface take the library offline. This active mode can interfere with host-based application software, causing data loss. Ensure that the library is idle before attempting to perform any remote operations that will take the library offline.

Accessing the Remote Management Interface

To access your library remotely, the library must be in the ready mode to establish communications with the Remote Management Interface. If you are unable to access the unit with your browser, verify the library is not being operated locally.

1. Type the IP address in the **Location** field of your Web browser, and press **Enter**.

The browser connects to the Remote Management Interface and displays a login prompt.

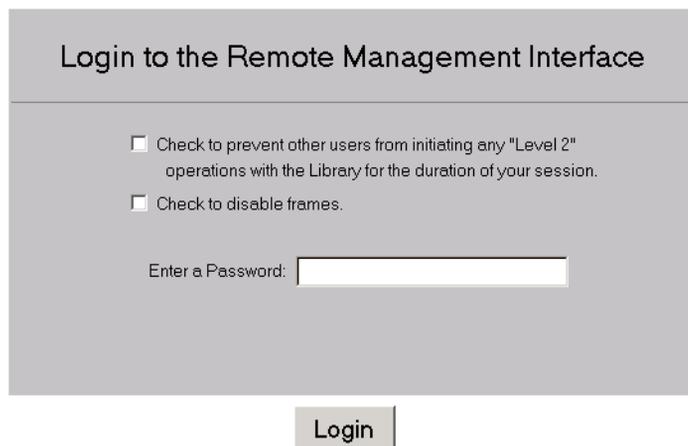

Login to the Remote Management Interface

Check to prevent other users from initiating any "Level 2" operations with the Library for the duration of your session.

Check to disable frames.

Enter a Password:

Login

Figure 64: Remote Management Interface login screen

2. Enter your level 1 or level 2 password in the appropriate field and click **Login**.

Note: The default level 1 password is 1. The default level 2 password is 2. The level 1 password only allows use of passive features, such as viewing library status. Use the *MSLUtil.exe* diagnostic utility and the serial interface to change the default passwords.

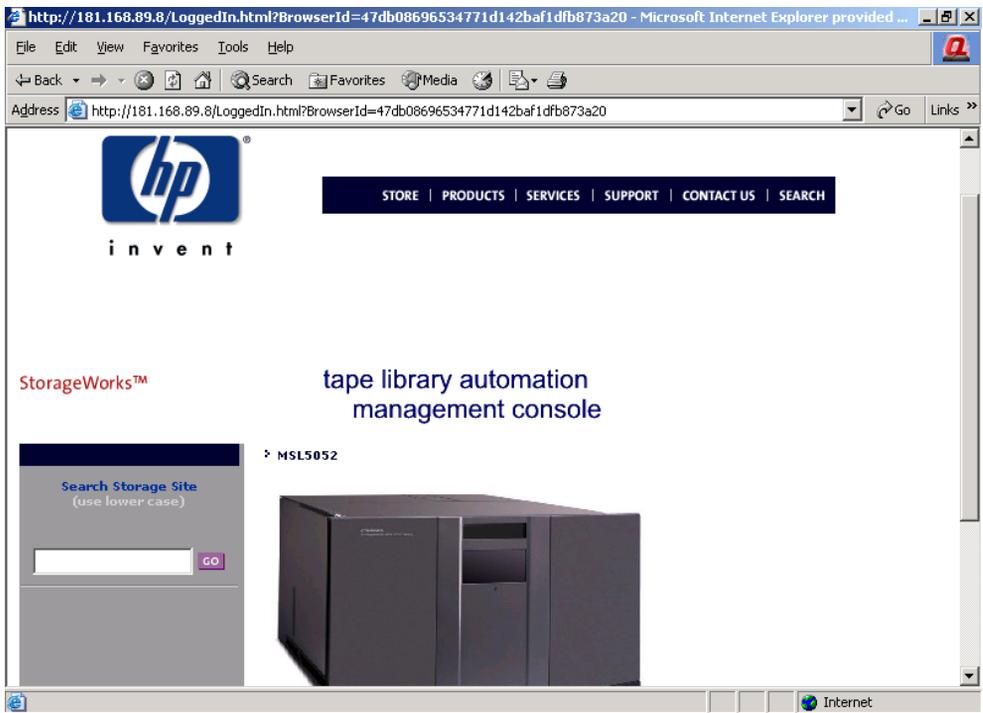


Figure 65: Remote Management Interface main screen

3. Click on the library to access the **Status** screen (see [Figure 66](#)).

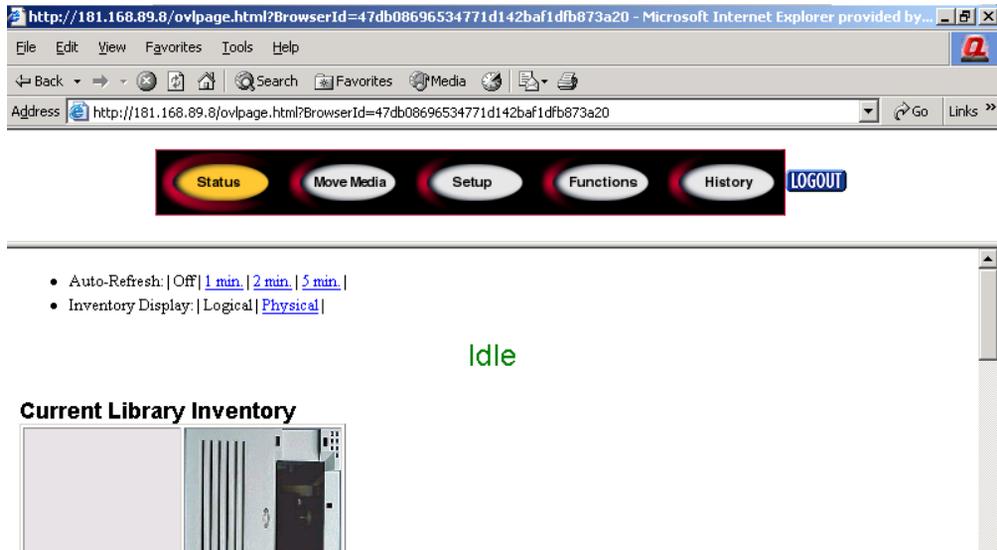


Figure 66: Status screen

Using Menu Buttons

The Remote Management Interface menu buttons include:

- [Status](#)
- [Move Media](#)
- [Setup](#)
- [Functions](#)
- [History](#)

Status

Click the **Status** button to view a display of itemized status information for the library in general, and for each drive. Scroll down to view additional information. You can configure two browser settings from this screen:

- **Auto refresh: off / 1 min / 2 min / 5 min**

This setting ensures that the status of your library displayed on the browser remains current.

- **Inventory Display: Logical / Physical**

This setting enables you to display your library either logically (drives and slots are grouped separately) or physically (drives and slots are grouped by library module), depending on your preference.

Information available from this screen:

- **Library Status**
- **Drive Status** (Summary)
- **Full Drive Status** is available through the **Full Drive Status** button

Move Media



Caution: Do not move tapes while library application software is running. Fatal software faults may occur.

This button allows you to move a selected cartridge to a target drive or cartridge slot.

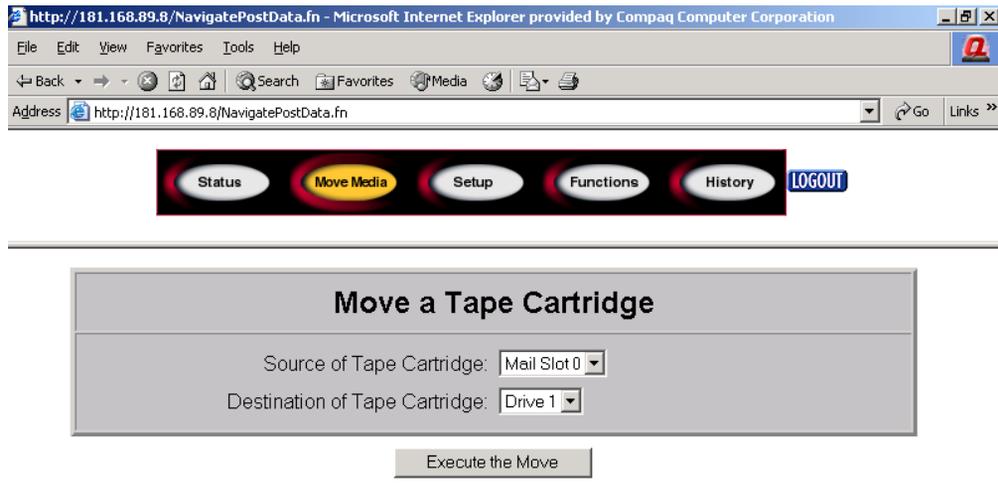


Figure 67: Move media screen

1. Specify the source slot and destination.
2. Click **Execute the Move**.

A screen appears warning you that selecting **Confirm** causes the library to go offline during the move media operation. After the move media operation completes, a completion message appears.

Setup

Click **Setup** for button-and-browser controls that let you set library, SCSI, and drive configuration options, also available on the **Menu > Edit Options** area of the tape library GUI.

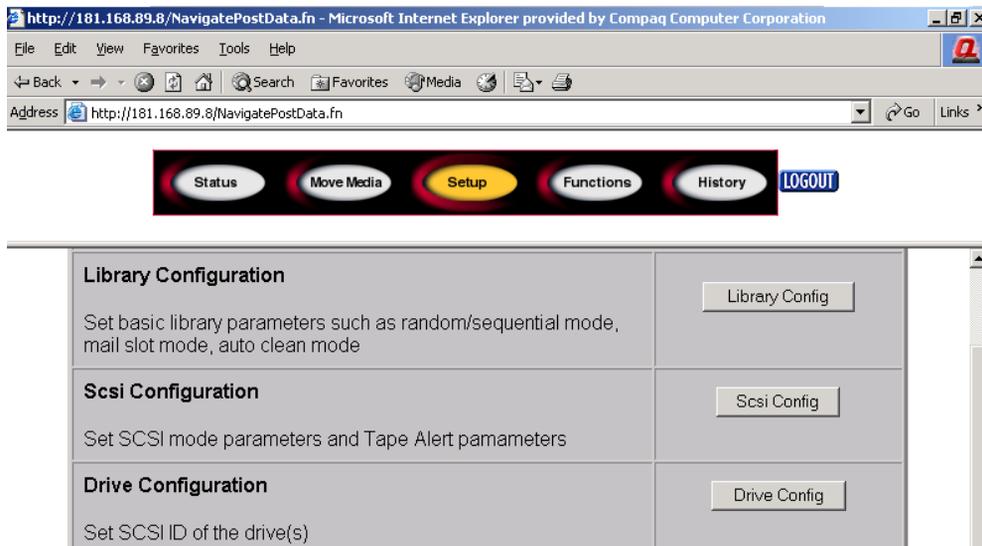


Figure 68: Setup screen

Library Configuration

Click **Library Config** to set basic library parameters.

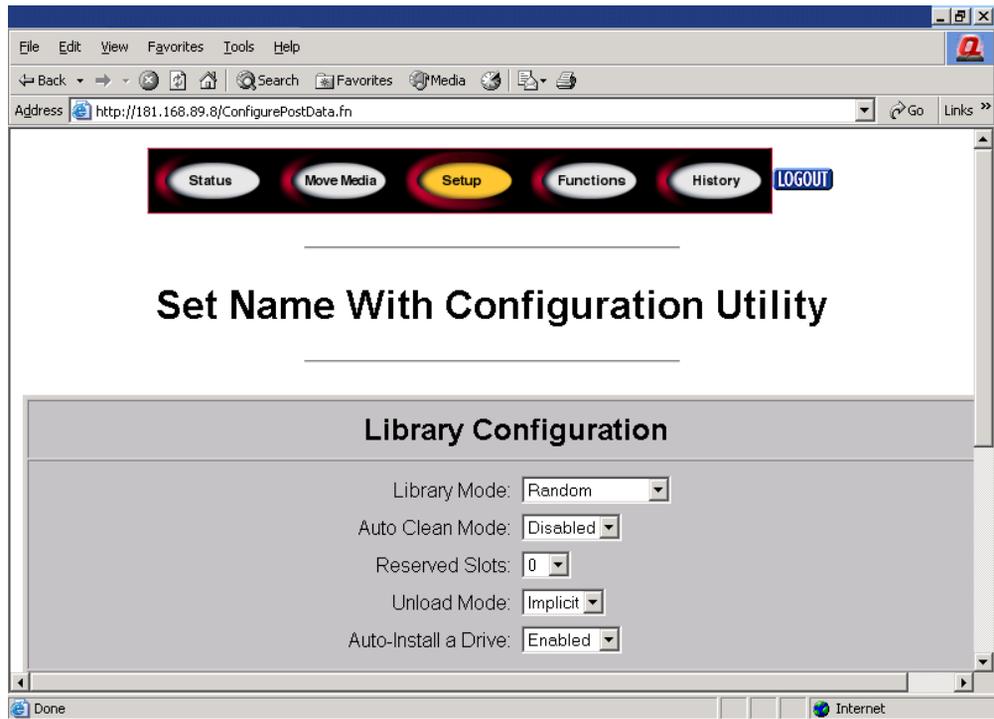


Figure 69: Library configuration screen

SCSI Configuration

Click **SCSI Config** to SCSI mode and Tape Alert parameters.

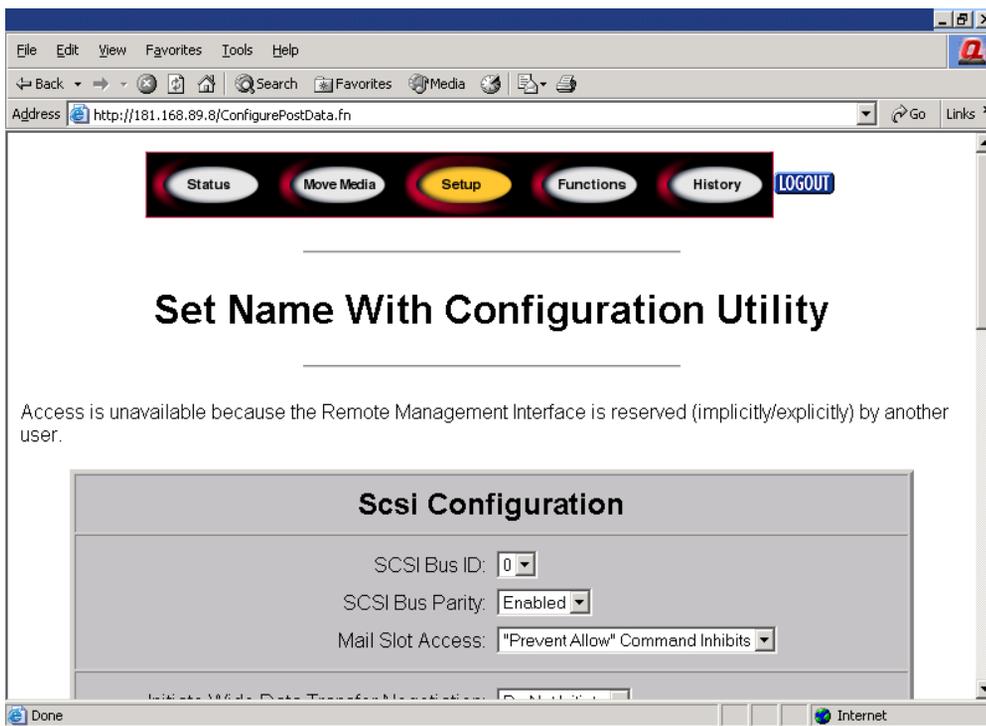


Figure 70: SCSI configuration screen

Drive Configuration

Click **Drive Config** to set the SCSI IDs of the drives.

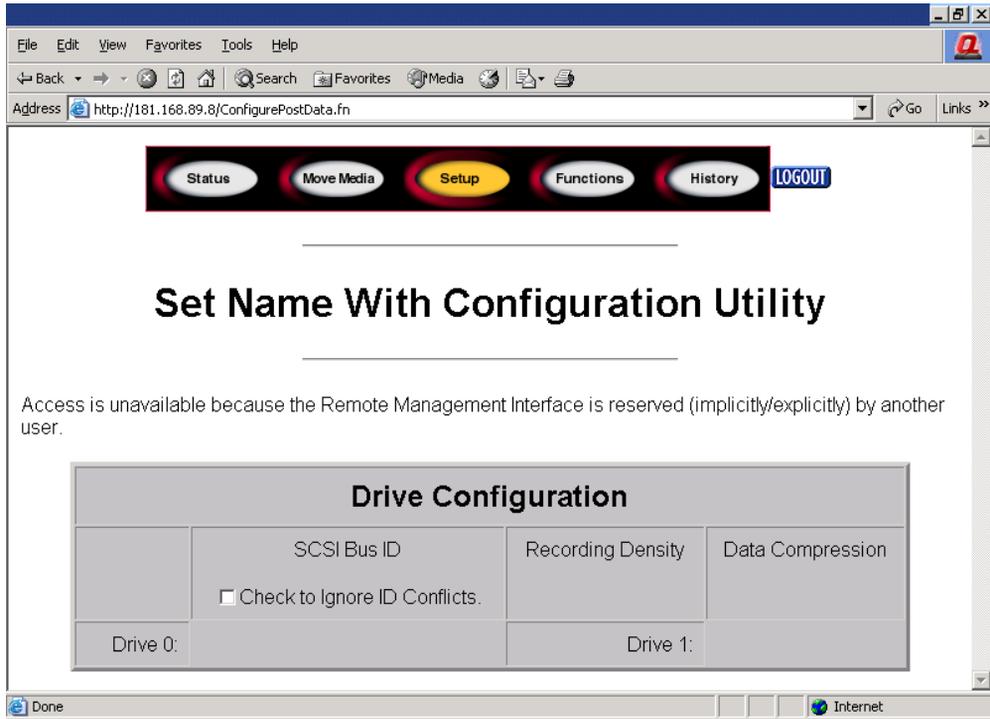


Figure 71: Drive configuration screen

Functions

The **Functions** pages present button-and-browser controls of selectable files.

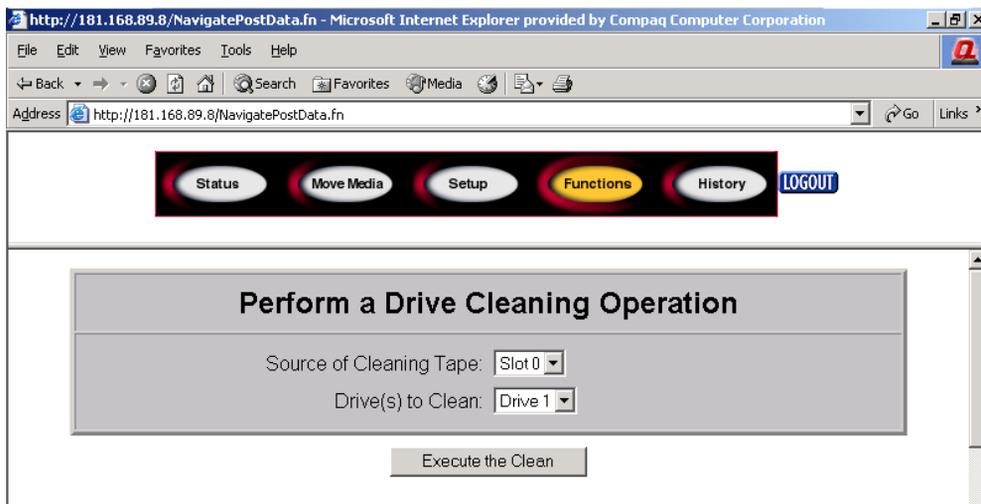


Figure 72: Functions screen

Scroll down for additional dialogue boxes corresponding to the following functions:

- **Drive cleaning operation**
- **Timed or Free running library diagnostic**
- **Library flash operation**
- **Reset the Library**

History

Click **History** to list files that you can display or download. Scroll down for additional menus.

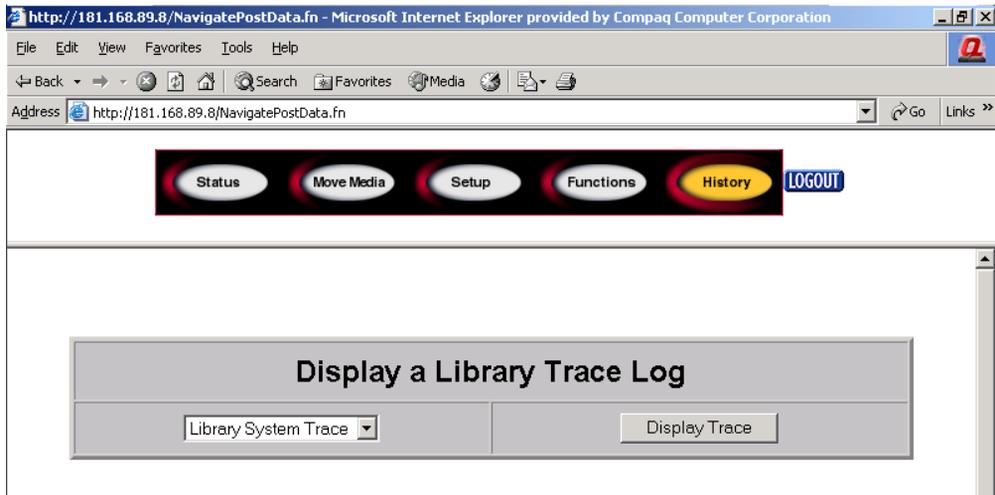


Figure 73: History screen

When you select a file, a **Save As** window appears, letting you select a network destination for the download. When you select **Display Trace**, the log will display through the browser.

Maintenance



This chapter includes procedures for:

- [Using the Library Maintenance Menu](#), page 122
- [Maintaining Tape Cartridges](#), page 123
- [Running a Cleaning Cartridge](#), page 127
- [Replacing a Cleaning Cartridge in a Reserved Slot](#), page 131
- [Updating Firmware](#), page 133

Using the Library Maintenance Menu

You can use the library Maintenance menu to perform system maintenance. Access this menu from the GUI touch screen by selecting **Menu > Utilities > Maintenance**. [Table 10](#) lists the available options.

Table 10: Maintenance Menu

Option	Description
Clean Drive	Cleans a drive by selecting the drive to be cleaned, and the slot or mailslot where the cleaning cartridge is located.
Replace Drive	Deactivates a drive prior to its removal.
Drive Format	Formats a tape once the density and compression settings have been selected.
Park Drives	Parks all drives prior to transporting the library.
Set User Defaults	Restores the library to its firmware default settings.
Force Reconfiguration	Forces library to reconfigure based on current or new SCSI elements.
Reboot Library	Reboots the library.
Flash Drive From Tape	Downloads firmware from a selected tape to a selected drive.
Flash Drive From SCSI	Prepares DLT drives for a SCSI firmware upgrade.
Eject Tape From Drive	<p>Terminates any on-going operations in the selected drive, and attempts to eject the cartridge.</p> <hr/> <p>Note: This function should be used as a last resort to retrieve a cartridge from a drive.</p> <hr/>

Maintaining Tape Cartridges

Note: In addition to the information provided in this section, refer to the documentation provided with your media for more information.

Make it a practice to visually inspect your tape cartridges when loading or removing them from your library. Taking a few minutes to check the condition of your cartridges will lower the risk of operation and drive failures and help ensure uninterrupted backup.

Repeated drive failures may indicate defective tapes. Tapes need to be inspected and replaced if they have been dropped, damaged, or used with a failed drive. To determine if the tapes have been damaged:

- Gently shake the tape cartridge to verify that no internal parts are rattling, indicating that they may be loose.
- Look at the tape cartridge to check for any obvious cracks or other physical damage. Look for broken or missing parts.



Caution: Always discard damaged tape cartridges. If a defective tape cartridge is loaded into a tape drive, it may in turn damage the drive potentially requiring drive replacement.

Do *not* use cartridges with:

- Tape or leaders that have been touched with bare fingers, as this may transfer oils to the tape head.
- Labels used on the top, bottom, sides, or back of the cartridge. Use the label slot or recess only.
- More than one label applied, as extra labels can cause the cartridges to jam in the tape drive.

Ultrium Cartridges



Caution: Do not bulk erase Ultrium formatted cartridges. This will destroy pre-recorded servo information, and make the cartridges unusable.

DLT and SDLT Cartridges

In addition to the general inspection listed on page 123, you can further determine if DLT or SDLT tapes have been damaged by doing the following:

- Verify that the spring-loaded hub (② in [Figure 74](#) on page 125) is centered within the circular opening on the bottom of the tape cartridge.
- Gently press the hub and make sure that it springs back into place.
- Visually inspect the tape for a broken, unseated, or misaligned tape leader (① in [Figure 74](#) on page 125 and [Figure 76](#) on page 126). If the loop at the end of the leader is not presented correctly, the drive can fail to engage, or drop, the leader. If used, a dropped leader cartridge can damage the drive.

Also check for these faulty leaders (see [Figure 75](#) on page 125):

- Swallowed leaders - the leader is completely wound around into the cartridge, leaving no loop for the buckling link to catch.
- Torn leader loops - the loop is torn creating an opening, and the buckling link fails to grab the loop, failing to transport the tape into the drive.
- Creased leader loops - the loop is stuck and the cartridge leader cannot unwind into the drive. As the drive leader's buckling link engages the cartridge leader loop, it can detach the loop, and drag it into the drive causing damage.

To check the leader position:

Press in the door lock (③ in [Figure 74](#) on page 125) to release the cartridge door. While pressing in the door lock, push the tab down to open the door. Be careful not to touch the tape after opening the door. Ensure that the leader is in the correct position (① in [Figure 74](#) on page 125 and [Figure 76](#) on page 126).

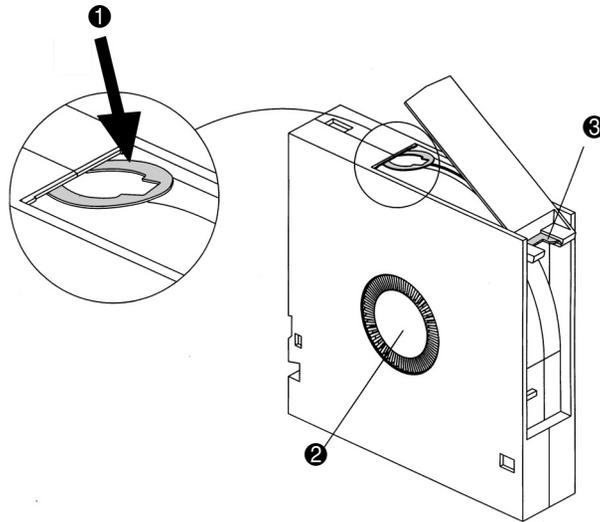


Figure 74: DLT leader in correct position, hub, and door lock tab

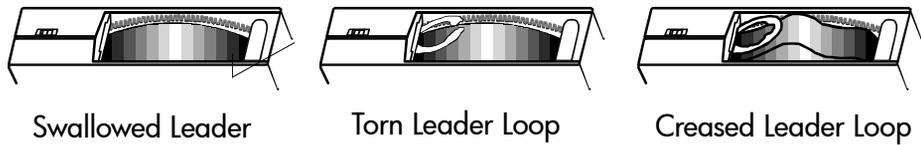


Figure 75: Faulty DLT leaders

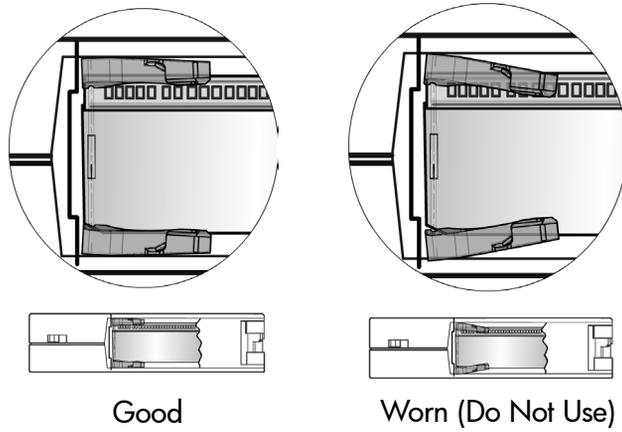


Figure 76: SDLT buckle leaders

Running a Cleaning Cartridge

Use the **Clean Drive** menu option contained in the **Maintenance** submenu of the **Utilities** area on the front panel display to clean tape drives installed in HP StorageWorks MSL Series tape library.



Caution: Only perform the **Clean Drive** menu option when the library displays a message informing you that a tape drive needs cleaning. Excessive, unrequested cleaning can damage the tape drives.



Caution: Ultrium and SDLT/DLT tape drives require special cleaning cartridges and data cartridges formatted specifically for the drive technology. To avoid damage to your tape drive, it is critical to use appropriate cleaning cartridges and properly formatted data cartridges. Contact an HP authorized dealer or sales representative for current compatibility and availability.

Note: Backup application software must be compatible with the library autoclean feature to avoid robot command conflicts.

Note: HP does not support preventive autocleaning operation.

Because the cleaning cartridge is abrasive, you should not use it unless the message “**Use Cleaner**” appears on the front panel display. There are three ways to manage the cleaning of the installed tape drives:

- Automatically, by application software.
- Automatically, by enabling **Auto Clean Mode**.
- Manually, by selecting the **Clean Drive** menu option from the **Maintenance** submenu on the front panel display.

Automatically Running a Cleaning Cartridge

You can configure the library so that it automatically runs the cleaning cartridge mode. After a tape drive that needs cleaning completes an unload operation, it sends a cleaning needed message to the library. This activates an automatic cleaning cycle if the cleaning cartridge slot has been reserved, **Auto Clean Mode** has been selected from the **Library Options** menu, and the appropriate cartridge technology is loaded.

To configure the library to use **Auto Clean Mode**, do the following:

1. Reserve a cleaning cartridge slot. (See “[Setting Up a Reserved Slot](#)” on page 58 for more information.)
2. Enable **Auto Clean Mode**. (See “[Library Display Screens and Options](#)” on page 73 for more information.)

Manually Running a Cleaning Cartridge

A cleaning cartridge can be installed and run from one of three locations:

- **The Mail Slot**—This location has the advantage of not needing to remove a magazine to use a data cartridge slot, or to reserve a cleaning cartridge slot.
- **A Tape Cartridge Slot**—This location requires removing a magazine to insert a cleaning cartridge in a tape cartridge slot, and then removing it after cleaning.
- **The Cleaning Slot**—This location requires reserving the last tape cartridge slot for exclusive use as a cleaning cartridge slot. The advantage with this method is that the cleaning cartridge is stored in the library and is always available for use. It needs to be handled only when it expires and needs to be replaced. (See “[Setting Up a Reserved Slot](#)” on page 58 for more information.)

Running a Cleaning Cartridge from a Mail Slot

1. Insert a cleaning cartridge into a Mail Slot (see [Using Mail Slots \(Left-hand Magazines Only\)](#) on page 102).
2. Select the **Clean Drive** menu option from the **Maintenance** submenu on the front panel display.
3. Select **Source** and then **Mail Slot** in the **Source Element Type** box.

4. Select **Cleaning**. If the default entry is not the tape drive to be cleaned, press **Drive** in the **Destination Element Type** box to sequence through the available tape drive choices. You can also use the **Decimal Keypad** to enter the tape drive number directly.
5. When the source and destination entries are correct, select **Execute Clean**.
6. When the cleaning cycle completes, the library returns the cleaning cartridge back to a Mail Slot. To remove the cleaning cartridge, select **Mail Slot Access** from the library **Status** screen.

Running a Cleaning Cartridge from a Tape Cartridge Slot

1. Insert a cleaning cartridge into an appropriate tape cartridge slot (Slot 0, for example). See [Using Mail Slots \(Left-hand Magazines Only\)](#) on page 102.
2. Select the **Clean Drive** menu option from the **Maintenance** submenu on the front panel display.
3. Select **Source**. If the default entry is not the slot with the cleaning cartridge, press **Slot** in the **Source Element Type** box to sequence through the available cartridge slots. You can also use the **Decimal Keypad** to enter the slot number directly.
4. Select **Cleaning**. If the default entry is not the tape drive to be cleaned, press **Drive** in the **Destination Element Type** box to sequence through the available tape drive choices. You can also use the **Decimal Keypad** to enter the tape drive number directly.
5. When the source and destination entries are correct, select **Execute Clean**.
6. When the cleaning cycle completes, the library returns the cleaning cartridge back to the tape cartridge slot. To remove the cleaning cartridge, select **Magazine Access** from the library **Status** screen.

Running a Cleaning Cartridge from a Cleaning Slot

1. Reserve a cleaning tape cartridge slot. (See [“Setting Up a Reserved Slot”](#) on page 58 for more information.)
2. Install a cleaning cartridge in a reserved slot.
3. Select the **Clean Drive** menu option from the **Maintenance** submenu on the front panel display. Note that the **Source** window defaults to the cleaning slot (**Cln’g Slot 0**).

4. Select **Cleaning**. If the default entry is not the tape drive to be cleaned, press **Drive** in the **Destination Element Type** box to sequence through the available tape drive choices. You can also use the **Decimal Keypad** to enter the tape drive number directly.
5. When the destination entry is correct, select **Execute Clean**.
6. When the cleaning cycle completes, the library returns the cleaning cartridge back to the cleaning cartridge slot (**Cln'g Slot 0**). To remove the cleaning cartridge, select **Magazine Access** from the library **Status** screen.

Replacing a Cleaning Cartridge in a Reserved Slot

A message will appear on the front panel display when the cleaning cartridge has expired. Examine the library **Status** screen to make sure that the cleaning cartridge has been unloaded from the tape drive to the reserved slot. If not, then unload it to the mail slot using the **Move Media** menu option from the library **Status** screen.

Note: A cleaning cartridge can be removed and replaced by removing a right magazine, or by using a mail slot in a left magazine.

Replacing a Cleaning Cartridge in a Right Magazine

1. Select **Magazine Access** from the library **Status** screen.
2. Remove the appropriate right magazine from the library.
3. Remove the expired cleaning cartridge from the last tape cartridge slot. Mark it as **EXPIRED**, and properly dispose of it.
4. Place a new cleaning cartridge in the last tape cartridge slot of a right magazine.
5. Replace the appropriate right magazine.

Replacing a Cleaning Cartridge in a Mail Slot

1. Select the **Move Media** menu option from the library **Status** screen.
2. Select **Source** and then press **Cleaning Slot** in the **Source Element Type** box.
3. Select **Destination** and then press **Mail Slot** in the **Destination Element Type** box.
4. Select **Execute Move** to place the cleaning cartridge in a Mail Slot.
5. When the move completes, press the **Back** button to access the default front panel display.
6. Select **Mail Slot Access** from the library **Status** screen, and then remove the expired cleaning cartridge. Mark it as **EXPIRED**, and properly dispose of it.
7. Place a new cleaning cartridge in a Mail Slot.
8. Select the **Move Media** option from the library **Status** screen.

9. Select **Source** and then press **Mail Slot** in the **Source Element Type** box.
10. Select **Destination** and then press **Cleaning Slot** in the **Destination Element Type** box.
11. Select **Execute Move** to put the new cleaning cartridge in a mail slot.

Updating Firmware

Note: Before upgrading firmware, be sure to generate a support ticket using HP StorageWorks Library & Tape Tools (see page 175). The resulting information may be helpful to your service provider in resolving potential issues that may have prompted the firmware upgrade.

MSL Series tape libraries can be flashed using HP StorageWorks Library and Tape Tools (L&TT), the Remote Management Interface, or the MSLUtil.exe diagnostic utility and diagnostic cable.

Checking the Firmware Revision

Before downloading new firmware, check your current firmware revisions, and compare them to the latest available revisions at <http://www.hp.com/support>, or through L&TT. You can check your current firmware revisions from the GUI touch screen. Select **Menu > View System Data > Library Info**.

Using the Remote Management Interface

To update the firmware using the Remote Management Interface, you need a LAN connection to the library, or an Ethernet connection to the World Wide Web.

1. Login to the Remote Management Interface.

Note: See “[Remote Management Interface](#)” on page 107 for additional information on setting up and using the Remote Management Interface.

2. Click on **Functions**.
3. Scroll down to **Library Flash Operation**.



Figure 77: Updating firmware using the Remote Management Interface

4. Select **Flash Library from Remote File** or **Flash Library from Local File**.

Note: If you select **Flash Library from Local File**, the *.bin file must be copied to the /upload directory, which is located on the library at the IP Address/upload.

5. Click **Start the Flash**. The library firmware automatically updates.
6. The library will reboot. Verify that the firmware level has been updated successfully by selecting the **Library Info** button from the **View System Data** area of the GUI to view the **Firmware Revision**.

Using HP StorageWorks Library & Tape Tools

HP StorageWorks Library & Tape Tools may already be installed on your host. If not, you can download it from <http://www.hp.com/support/tapetools>.

Online help and instructions are included with the utility.

Using a Serial Connection

To update the firmware using the *MSLUtil.exe* you will need:

- *MSLUtil.exe* and the proper version of firmware, available for download from the HP website at <http://www.hp.com/support>.
- Cable assembly, serial RJ11 to DB9
- PC with available serial port

Firmware Flashing Procedure

1. Install the *MSLUtil.exe* on the PC.
2. Copy the firmware image (*.bin) into the same directory that the *MSLUtil.exe* was installed.
3. Connect the library diagnostic port to the PC using the supplied cable assembly.
4. Start the *MSLUtil.exe*.
5. Click **Connect**, select the PC serial port that the cable assembly is connected to, and then click **OK**.
6. Click **Download > Browse**. Navigate to the directory with the firmware image *.bin.
7. Click **OK**. The library firmware automatically updates.

Note: If the flash process does not complete, select a lower baud rate option, available under the **Connect** window, and try again.

8. The library will reboot. Verify that the firmware level has been updated successfully by selecting the **Library Info** button from the **View System Data** area of the GUI to view the **Firmware Revision**.

Troubleshooting



This chapter describes how to identify and resolve the problems that can cause an HP StorageWorks MSL Series tape library to malfunction. Sections in this chapter include:

- [Identifying Platform Problems](#), page 138
- [Performing Error Recovery](#), page 139
- [Troubleshooting General Problems](#), page 169
- [Using Diagnostic Support Tools](#), page 175
- [Running Library Diagnostic Tests](#), page 176

Identifying Platform Problems

An incorrect installation or configuration can cause platform problems. In this case, the library appears to be operating normally, but no data can be interchanged, or performance is poor. You also might or might not get an error code on the graphical user interface (GUI) touch screen. To identify an error caused by this type of problem, check your installation and configuration setup. See Chapter 7, “[Installation](#)”, beginning on page 39 for information on how to correctly install and configure the library.

General drive errors usually result from a miscommunication between a library processor and a tape drive processor, drive and tape interaction issues, or a mechanical malfunction within the library. Both platform problems and general tape drive errors display an error message and a Fault Symptom Code (FSC) on the GUI touch screen. Use an FSC to report errors to your authorized service provider, or in some cases, to determine a recovery procedure.

The library depends on several other components to operate correctly. Errors that seem to be caused by the library often are a result of issues on the host, the network cabling, or with the application software. When troubleshooting the library, begin ruling out these components.

Your application software may need to be reconfigured or, in some cases, reinstalled after you have installed additional drives or slots into the library. Changing the number of magazines, number of reserved slots, or changing between DLT and Ultrium magazines will also require changes to the software. Some application software may require the purchase of additional add-on components and/or licenses when increasing the number of storage slots or drives. Contact your application software provider for more information, or if newly installed storage slots or drives are not recognized by your application software.

Note: The library numbers drives and slots beginning with 0. Your software application may number these items beginning with 1. Be aware of this difference in numbering when troubleshooting the library.

Performing Error Recovery

Figure 78 outlines the recommended steps for error recovery. You should follow this chart in all cases.

FSCs are listed in Table 11 on page 140. For general library problems, see [Troubleshooting General Problems](#) on page 169.

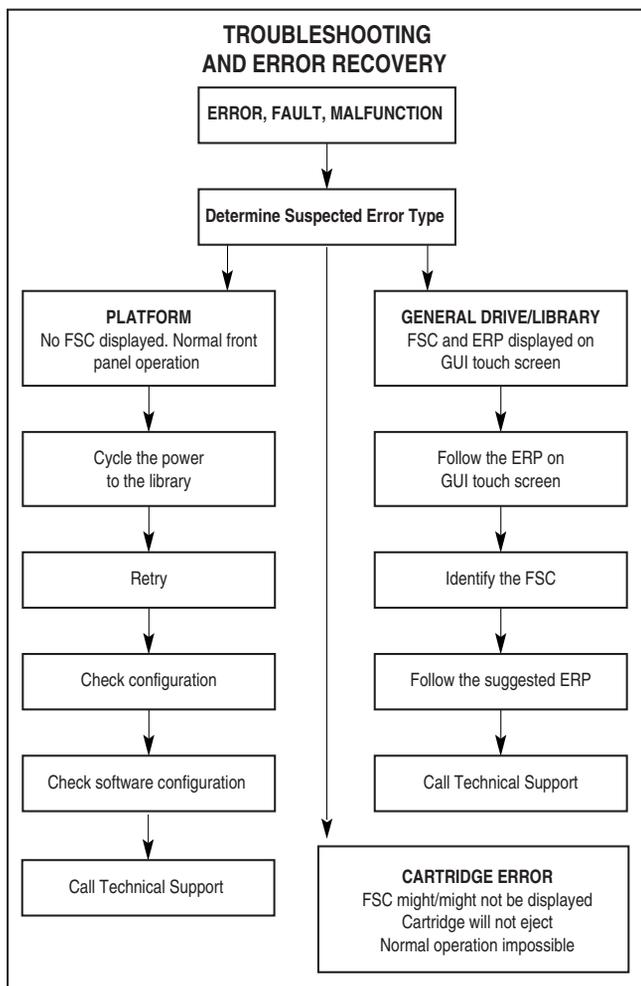


Figure 78: Troubleshooting flow chart

Fault Symptom Codes (FSCs)

An FSC is accompanied by a descriptive message and instructions for clearing the fault.

Note: If an error message appears that is not included in [Table 11](#), write down the fault code number and follow the recovery procedure. If the same error occurs again, contact your authorized service provider. If you did not write down the fault code number, you can retrieve it from the error log.

Table 11: Fault Symptom Codes

FSC	Message	ERP
0306	Novram Update Error (The firmware update failed.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Attempt firmware upgrade.
0501	Barcode Not Active Error (The hardware could not detect a bar code reader.)	<ul style="list-style-type: none"> ■ Turn off power to the library and inspect connectors and cables.
0901	OS Catastrophic Error	<ul style="list-style-type: none"> ■ Press the Enter button to reboot.
0902	OS Task Exit Error (TCP/IP data error)	<ul style="list-style-type: none"> ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again. ■ Check the ethernet connections on the router for the master to slave(s) communication.
0A01	Invalid Ethernet (MAC) Address (The library's ethernet (MAC) address stored in the non-volatile configuration is not valid. The last three octets are either 0:0:0, or 255:255:255.)	<ul style="list-style-type: none"> ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again.
0A02	Invalid IP subnet Mask (255.255.255.255) (The ethernet subnet mask stored in the nonvolatile configuration is not valid - 255.255.255)	<ul style="list-style-type: none"> ■ Invalid user initiated operation. Set parameters correctly and try again. ■ Ensure configuration options are set correctly.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
1001	SCSI Firmware Error (Internal SCSI task processing error. Unexpected state or hardware status.)	<ul style="list-style-type: none"> ■ Turn off power to the library and inspect connectors and cables. ■ Check the SCSI cable connections to make sure they are secured. ■ Make sure the library controller board has SCSI termination.
1002	SCSI FIFO Empty (The SCSI controller data FIFO is empty but should contain more data bytes.)	<ul style="list-style-type: none"> ■ Turn off power to the library and inspect connectors and cables. ■ Check the SCSI cable connections to make sure they are secured. ■ Make sure the library controller board has SCSI termination.
1003	SCSI FIFO Error (The SCSI controller data FIFO should be empty but still contains data bytes.)	<ul style="list-style-type: none"> ■ Turn off power to the library and inspect connectors and cables. ■ Check the SCSI cable connections to make sure they are secured. ■ Make sure the library controller board has SCSI termination.
1004	SCSI Gross Error (The SCSI controller detected a gross error condition. Invalid SCSI bus phase or DMA error.)	<ul style="list-style-type: none"> ■ Turn off power to the library and inspect connectors and cables. ■ Ensure SCSI options are set correctly. ■ Check the SCSI cable connections to make sure they are secured. ■ Make sure the library controller board has SCSI termination. ■ Check host SCSI cable and connections.
1005	Illegal SCSI Cnt Cmd (Either an invalid command was sent to the SCSI controller, or the controller was not in the correct mode.)	<ul style="list-style-type: none"> ■ Turn off power to the library and inspect connectors and cables. ■ Check that application is certified to work with your library and has up-to-date patches. ■ Ensure SCSI options are set correctly. ■ Check the SCSI cable connections to make sure they are secured. ■ Make sure the library controller board has SCSI termination. ■ Check host SCSI cable and connections.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
1007	SCSI Invalid Element (Internal SCSI task processing error. Invalid element type was detected.)	<ul style="list-style-type: none"> ■ Turn off power to the library and inspect connectors and cables. ■ Check host SCSI cable and connections.
1008	SCSI No Pending Int.	<ul style="list-style-type: none"> ■ Turn off power to the library and inspect connectors and cables.
1009	SCSI Invalid Int. (The SCSI controller posted an invalid interrupt status.)	<ul style="list-style-type: none"> ■ Turn off power to the library and inspect connectors and cables. ■ Check host SCSI cable and connections.
2004	Loader Not Ready (Failed to fetch, stow, scan, move, pass through, or loader detected invalid command and aborted.)	<ul style="list-style-type: none"> ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power back on.
2009	Door Open (status only) (Door is forced open or door sensor failed.)	<ul style="list-style-type: none"> ■ Invalid user initiated operation. Select parameters correctly and try again. ■ Make sure door(s) are closed. ■ Press the Enter button to clear the message.
200C	Cart Inaccessible (For a DLT drive, failed to operate drive handle in unloaded state. For an SDLT drive, indicates the tape is not in the unloaded state. For an Ultrium drive, indicates the tape is not ejected. Cartridge in drive is not accessible from changer.)	<ul style="list-style-type: none"> ■ Invalid user initiated operation. Select parameters correctly and try again. ■ Ensure drive is powered on. ■ Ensure the drive shows good status through the drive status window. ■ Check the tape cartridge used in the last operation for damage. ■ Reactivate drive using control panel maintenance menu and reseat drive.
200D	Drive In Error (A general drive error detected by control task)	<ul style="list-style-type: none"> ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power back on. ■ Ensure the drive shows good status through the drive status window. ■ Reseat drive.
200E	No Magazine (Cannot move from changer. Element not installed.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Select parameters correctly and try again. ■ Replace magazine.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
200F	Removal Prevented (Receive medium prevent removal from drive for a fetch.)	<ul style="list-style-type: none"> ■ Attempt to unload drive from software. If fails, power off unit, disconnect from SCSI bus, and retry operation. ■ Invalid host initiated operation. Check that application is certified to work with your library and has up-to-date patches. ■ Invalid user initiated operation. Select parameters correctly and try again. ■ Check for firmware tape in drive. ■ Check for cleaning tape in drive. ■ Press the Enter button to clear the message.
2010	Ctl. Firmware Error (Internal task processing error. Unexpected event. SMX send or receive error.)	<ul style="list-style-type: none"> ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power back on. ■ Upgrade firmware if a newer revision exists.
2030	Drive Timeout Error (Cannot communicate with DLT drive.)	<ul style="list-style-type: none"> ■ Check if the drive shows good status through the drive status window. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 20 seconds to power back on. ■ Reseat drive.
2080	Drive Code Update Command Error (Update code from SCSI or from tape failed.)	<ul style="list-style-type: none"> ■ Make sure that the firmware is the correct file for this product. ■ Check if the drive shows good status through the drive status window. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power back on. ■ Attempt firmware upgrade again.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
2081	Move Command Failure (Move command from or to drive slot failed. Detected by control task.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again. ■ Load/unload a cartridge to the drive to verify.
2090	Open Mail Slot Fault (Door open sensor time-out detected when open door.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again. ■ Make sure door(s) are closed.
2091	Open Left Door Fault (Door open sensor time-out detected when open door.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again. ■ Make sure door(s) are closed.
2092	Open Right Door Fault (Door open sensor time-out detected when open door.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again. ■ Make sure door(s) are closed.
2093	Open Doors Fault (Door open sensor time-out detected when open door.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again. ■ Make sure door(s) are closed.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
2094	Open DLT Handle Fault (Failed to open DLT handle.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again. ■ Ensure the drive shows good status through the drive status window.
20a0	No IP Address Found (SMC router failed to get an IP address.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Ensure network configuration options are set correctly. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again.
20a1	No IP Address Mode Fault (SMC router failed to detect static or IP address mode.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Ensure network configuration options are set correctly. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again.
20b0	Unknown Exchange For The Async message (Unexpected exchange detected when process messages.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again.
20c0	Drive In Error (Control failed to set SCSI ID.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Ensure the drive shows good status through the drive status window. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again.
20c1	Drive In Error (Control failed on installed drive.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Ensure the drive shows good status through the drive status window. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
3000	Motor Fault Condition (One of the robot motors has been disabled and could not be re-enabled.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again.
3002	Picker Tach Errors (Picker tachometer errors were detected when checking slots.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again.
3011	Bin Fetch Failure (Loader failed to fetch a cartridge from a bin.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure cartridges are fully inserted in the magazine(s). ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Run the cartridge cycle diagnostic to verify. ■ Check the tape cartridge used in the last operation for damage.
3013	Drive Fetch Failure (Loader failed to fetch a cartridge from a drive.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat the drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
3015	Drive Timeout Failure (Loader detects unload command time-out.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat the drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.
3016	Drive Status Failure (Detected drive error from fetch, stow and wait for handle okay DLT drive operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat the drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.
3017	Drive In Flux Timeout (Time-out waiting for drive to clear the full status.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat the drive. ■ Load/unload a cartridge to the drive to verify. ■ Run the cartridge cycle diagnostic to verify.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
3018	Drive Load Retry Failed (SLTO drive fail to load, detected in drive task.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat the drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.
3019	Drive Open Door Failed (Failed open DLT drive door.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat the drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.
301A	Drive Close Door Failed (Failed close DLT drive door.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat the drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
301B	Drive Communication Error (Intertask send, receive failed.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat the drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.
301C	Drive Get General Status Fail (Drive communication failed.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat the drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.
301D	Drive Get Status 3 Fail	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Contact support.
3020	Undefined Config (In loader, unexpected configuration, not a 5U or 10U model. In diagnostics, invalid source or destination.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Contact support.
3030	Orphan Cartridge not stowed (The loader could not successfully stow an orphan cartridge to a bin.)	<ul style="list-style-type: none"> ■ Unload magazine, remove a tape, replace the magazine, and retry the operation.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
3031	Chassis S/N Mismatch. Previous S/N retained (The serial number scanned from the bar code label does not match the value stored in non-volatile memory.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ No action is required. This error is expected when replacing the controller board. If controller board was not replace, then contact support.
3032	Chassis S/N Character count is not correct (A valid serial number bar code label could not b read.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Contact support.
3033	Chassis S/N did not scan (A valid serial number bar code label could not be read.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Contact support.
3034	Chassis S/N save operation failed (The serial number scanned from the bar code label could not be saved to non-volatile memory.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Contact support.
3040	Motor Firmware Error (The loader task detected an unexpected status and could not recover.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Turn off power to the library and inspect connectors and cables.
3041	Loader Received Invalid Command (The loader task received an unexpected command and could not recover.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Turn off power to the library and inspect connectors and cables.
3042	Motor Firmware Error (The loader task detected an unexpected status and could not recover.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Turn off power to the library and inspect connectors and cables.
3050	Missing Magazine (In diag, no magazine installed for diag to run.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Insert magazine. ■ Invalid user initiated operation. Set parameters correctly and try again.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
3051	No Cartridges In Library (No cartridge available for diag to run.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Insert cartridge. ■ Invalid user initiated operation. Set parameters correctly and try again.
3052	Too Many Cartridges (Unable to run cartridge or drive cycle because loader is full with cartridges.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Remove a tape from the library. ■ Invalid user initiated operation. Set parameters correctly and try again.
3054	Need 1 Drive Minimum (No available drive to run diag.)	<ul style="list-style-type: none"> ■ Install or activate a drive. ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again.
3057	Invalid Magazine Type (Unsupported magazine type detected.)	<ul style="list-style-type: none"> ■ Upgrade firmware if a newer revision exists. ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again.
3058	Magazine Type Change Not Handled (Unsupported magazine type detected.)	<ul style="list-style-type: none"> ■ Upgrade firmware if a newer revision exists. ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again.
3059	Drive Type Not Supported (Unsupported magazine type detected.)	<ul style="list-style-type: none"> ■ Upgrade firmware if a newer revision exists. ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
305B	Diag Fetch, Drive not loaded (Diag: no cartridge present for fetch.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Load a cartridge in the drive and retry the operation. ■ Invalid user initiated operation. Set parameters correctly and try again.
305D	Diag Timeout waiting for drive empty, ready (Fetch, time-out waiting for drive unload.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Invalid user initiated operation. Set parameters correctly and try again. ■ Ensure the drive shows good status through the drive status window. ■ Check the tape cartridge used in the last operation for damage.
305F	Invalid bin number (Invalid bin number detected in diag.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again.
3060	Zone Sequence Error (Robot did not find sensor on power-up.)	<ul style="list-style-type: none"> ■ Cycle power to the library or reboot using the GUI touch screen. Wait 30 seconds to power up again.
3074	Drive 0 Eject Failed (Eject command time-out.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
3075	Drive 1 Eject Failed (Eject command time-out.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.
3076	Drive 2 Eject Failed (Eject command time-out.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.
3077	Drive 3 Eject Fail (Eject command time-out.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
3078	Diag get drive 0 status failed (Failed to get drive status, communication error.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.
3079	Diag get drive 1 status failed (Failed to get drive status, communication error.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.
307A	Diag get drive 2 status failed (Failed to get drive status, communication error.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
307B	Diag get drive 3 status failed (Failed to get drive status, communication error.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Deactivate the drive using the GUI control panel maintenance menu. ■ Reseat drive. ■ Load/unload a cartridge to the drive to verify. ■ Check the tape cartridge used in the last operation for damage. ■ Run the cartridge cycle diagnostic to verify.
3082	Drive Stow Failed, Media Returned to Source (The DLT drive detected an SDLT cartridge and the cartridge has been returned to its origin.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Use only media approved for the drive type. ■ Invalid user initiated operation. Set parameters correctly and try again.
3083	Drive Stow Failed, Media Remains in Drive (The DLT drive detected an SDLT cartridge and the cartridge has been returned to its origin.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again. ■ Ensure cartridges are in magazines. ■ Attempt drive unload to empty DLT magazine slot.
3084	Unsupported Drive For Requested Operation (Unsupported drive type.)	<ul style="list-style-type: none"> ■ Make sure the media type used is compatible with the drive. ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again.
308F	No Retry On Fetch/Stow (The loader retried an operation and retries were disabled.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again. ■ Ensure configuration options are set correctly.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
3100	Picker Jammed (The picker jammed during a bin stow operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s).
3102	Picker Jammed 2 (The picker jammed during a bin stow operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s).
3103	Picker Jammed 3 (The picker jammed during a bin stow operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s).
3104	Picker Jammed 4 (The picker jammed during a bin stow operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s).

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
3105	Picker Jammed 5 (The picker jammed during a bin stow operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s).
3106	Picker Jammed 6 (The picker jammed during a bin stow operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s).
3107	Picker Jammed 7 (The picker jammed during a pass-through fetch operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s). ■ Check pass-through alignment.
3108	Picker Jammed 8 (The picker jammed during a pass-through fetch operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s). ■ Check pass-through alignment.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
310B	Picker Jammed 11 (The picker jammed during a drive fetch operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s).
310F	Picker Jammed on Stow (The picker jammed on a stow operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s).
3111	Picker Retries Exceeded 1 (Picker retries exceeded during a pass-through fetch operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Check pass-through alignment.
3113	Picker Retries Exceeded 3 (Picker retries exceeded during a bin stow operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s).
3115	Picker Retraction Error (Picker did not retract during a bin check operation.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
3200	Shuttle Jammed (Shuttle could not reach target location.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
3300	Rotary Jammed (Rotary track could not reach target location.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Ensure cartridges are fully inserted in the magazine(s).
3301	Shuttle on Wrong Side Of The Rotary (Zone indicators show that the shuttle is backwards on the rotary track during power-up initialization.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
3400	Pass-through Elevator Jammed (Pass-through shuttle could not reach target location.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Check pass-through alignment.
3500	Vertical Elevator Jammed (Vertical elevator could not reach target location. 10U libraries only).	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines).
5011	All Slots Empty (There are no cartridges installed in any of the reserved cleaning slots.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Insert cleaning cartridge in reserved cleaning slot. ■ Invalid user initiated operation. Set parameters correctly and try again.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
5014	Drive Already Loaded (Cleaning operation failed because the drive already has a cartridge inserted.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again. ■ If the tape in the drive is not in use, unload the drive and retry the cleaning operation.
5015	Expired Clean'g Cart (Cleaning operation failed due to an expired cleaning cartridge.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Remove expired cleaning cartridge from library and discard. Replace with new cleaning cartridge.
5016	Not a Clean'g Cart (Cleaning operation failed because the loaded cartridge is not a cleaning cartridge.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Make sure tape in reserved slot is a cleaning cartridge. ■ Invalid user initiated operation. Set parameters correctly and try again.
5035	Drive Timeout Error (Cleaning operation failed because the drive timed out.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again. ■ Ensure the drive shows good status through the drive status window.
503B	Move Command Fail (A front panel move operation failed.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again.
503C	Clean Operation Timeout (Cleaning operation failed because the drive timed out.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again. ■ Ensure the drive shows good status through the drive status window.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
503D	Drive Status Fail (Cleaning operation failed because the library could not retrieve drive status.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Invalid user initiated operation. Set parameters correctly and try again. ■ Ensure the drive shows good status through the drive status window.
7001	Command response from unexpected source	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
7002	Control command execution failed	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
7003	Control response not matched to a known command	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
7004	Loader response not matched to a known command	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
7005	Drive response not matched to a known command	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
7006	Flash response not matched to a known command	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
7007	Drive index on Update Status message was invalid	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.
7008	The Drive response was not expected	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
7009	The opcode for a WORD message was unknown	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
700A	The opcode for a DWORD message was unknown	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
700B	The button causing library to go offline was unknown (A command to take the library off-line was completed successfully, but the GUI button that initiated the action could not be identified.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen.
700C	Destination Xchg was Null	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
700D	Sending of a cmd failed	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
700E	Deactivating a drive that is not attached (The control task indicates that a request to deactivate a drive failed because the drive is not attached.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window. ■ Reseat the drive.
700F	Deactivation of a drive failed (The control task indicates that a request to deactivate a drive failed. Reason unknown.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window ■ Reseat the drive.
7010	Drive removal failed (The drive task indicates that a request to power-down a drive failed. Reason unknown.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
7012	Drive is Active failed (The drive task indicates that a request to determine if a drive is executing a host command failed. Reason unknown.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.
7013	Control Com Unidentified (During a hot swap, a command response from the control task could not be associated with any outstanding command.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.
7014	Drive status update failed (The drive task indicates that a request to determine the current state of a drive failed. Reason unknown.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.
7015	Loader command execution failed (The loader task indicates that a command has failed to complete successfully.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen.
7016	Sequential command execution failed (The sequential task indicates that a command has failed to complete successfully.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen.
7017	Destination Xchg for msg. was Null (Attempted to send a message to a task, but the argument exchange pointer was NULL.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen.
7018	Bad src mod in peg msg (A message was received from a remote module, but the module number was out of range.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen.
7019	Peg message wrapping a Null msg. ptr. (A peg message has a pointer to NULL.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the router. ■ Cycle power to all libraries in a stack, or reboot using the GUI touch screen.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
701A	Xchg conversion failed (Attempted to determine the module number containing the task that is returning a command response failed.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen.
701B	Invalid L-drive number to convert (Attempted to send a command to a drive, but the logical drive number is out of range.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.
701C	Invalid P-drive number to convert (Attempted to send a command to a drive, but the physical drive number is out of range.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library. ■ Ensure the drive shows good status through the drive status window.
701D	Invalid mod number to convert (Attempted to send a command to a drive in a remote module, but the module number is out of range.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen.
701E	Unknown drive type (Attempted to show detailed drive status of a drive whose type is unknown.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.
701F	The SCSI response was not expected (The command response from the SCSI task in a remote module was unexpected.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.
7020	The Flash response was not expected (The command response from the Flash task in a remote module was unexpected.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
7021	SCSI response not matched to a known command (A command response was received from a SCSI task, but the original command opcode could not be determined.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.
7022	Unexpected state after NonVolConfig cmd (After successfully completing a NonVolConfigPut command, the current state of the save operation was unknown.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.
7023	Unexpected state after SCSI mode cmd (After successfully completing a SCSIUpdateMode Parameters command, the current state of the save operation was unknown.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.
7024	Unexpected state after SCSI init cmd (After successfully completing a SCSIInitCommand, the current state of the save operation was unknown.)	<ul style="list-style-type: none"> ■ Press the Enter button clear the message. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Ensure the drive shows good status through the drive status window.
8001	Cartridge reject recovery failed (The DLT drive failed to successfully load a tape even after retries.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Check the tape cartridge used in the last operation for damage.
8002	Drive Fan stalled (The fan in the drive hot-swap shoe is either not installed or has stalled.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Look for a drive with an amber LED (rear of library) to determine which drive has the fan issue. If the drive is not in use, take it off-line to prevent it from overheating. If currently in use, end the operation immediately, and take the drive off-line.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
8003	Drive load did not complete (The drive failed to successfully load a tape.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Ensure the drive shows good status through the drive status window. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Check the tape cartridge used in the last operation for damage.
8004	Invalid drive was installed (One or more installed drives are of a type either unknown or not supported in the current library personality.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Update the firmware if a newer revision exists. ■ Invalid user initiated operation. Set parameters correctly and try again.
9001	Orphan cartridge recovery failed (The master module could not successfully return an orphan cartridge to a slot location.)	<ul style="list-style-type: none"> ■ Make sure there is one empty slot in a magazine in the master module. ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Check pass-through alignment. ■ Ensure that there are no obstructions inside the library (all cartridges are in magazines). ■ Check the tape cartridge used in the last operation for damage.
9003	Master pass-thru opto failed. (The master module opto sensor was not detected during the power-up Pass-Through module inventory.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Run the sensor test, checking appropriate sensor. ■ Determine if the pass-through may have been plugged or unplugged while power was on to the library. ■ Reinitialize or power-cycle the master it is connected to. Ensure the pass-through is functioning by observing whether or not the pass-through car moves to either end of the pass-through smoothly.
A001	SMX send error (An attempt to place a message on a task's exchange generated a kernel error.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
A002	SMX receive error (An attempt to receive a message from a task's exchange generated a kernel error.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
A003	Comm free list empty (An attempt to acquire a message from the free pool failed because the pool is empty.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
A004	Invalid comm. put attempt (An attempt to place a message on a task's exchange failed.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
A005	Invalid comm. get attempt (An attempt to receive a message from a task's exchange failed.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
A006	Comm initialization error (The Comm manager could not be initialized at power-up because system is out of memory.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
A007	Put of a NULL comm.	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
A008	Msg contains no comm. (A message obtained from the pool did not contain a Comm block.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
A009	Comm return address is unknown (An attempt to return a command response to the originating task failed because the originator could not be determined.)	<ul style="list-style-type: none"> ■ Press the Enter button to reboot. ■ Cycle power to the library or reboot using the GUI touch screen.
F001	Bad Image CRC (The uploaded firmware image has a bad CRC and is probably corrupted.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Make sure the firmware file is complete and correct. If having difficulty uploading firmware via FTP, telnet, the web management interface, or TSMC, try using HP StorageWorks Library and Tape Tools (see page 175).
F002	Flash erase sector failed (One of the flash memory sectors could not be programmed.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message.

Table 11: Fault Symptom Codes (Continued)

FSC	Message	ERP
F003	Flash program sector failed (One of the flash memory sectors could not be erased.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message.
F004	Bad flash CRC (The firmware image programmed into flash memory has a bad CRC and is probably corrupted.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Make sure the firmware file is complete and correct. If having difficulty uploading firmware via FTP, telnet, the web management interface, or TSMC, try using HP StorageWorks Library and Tape Tools (see page 175).
F005	Flash exit error (Internal flash task error.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message.
F006	Incompatible image (The uploaded firmware image is not compatible with the library hardware, and is possibly an older firmware version.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message. ■ Make sure the firmware file is complete and correct. If having difficulty uploading firmware via FTP, telnet, the web management interface, or TSMC, try using HP StorageWorks Library and Tape Tools (see page 175).
F402	Buffer allocation failed (The flash task could not allocate a buffer area to hold the firmware image to be uploaded.)	<ul style="list-style-type: none"> ■ Press the Enter button to clear the message.

Troubleshooting General Problems

This section includes information on troubleshooting general library problems. For problems that may be related to the host or application software, refer to the host system documentation or the application software instructions, and ensure that the software has the latest patches. If these procedures fail, contact your authorized service provided for further assistance.



Caution: Consult your system administrator before cycling power. Never cycle power when active devices are connected to the SCSI bus or Fibre Channel bus. Cycling power when the SCSI bus or Fibre Channel bus is active can cause data loss or hang the host system.

Table 12: Troubleshooting General Problems

Problem	Solution
Power	
Library will not power on.	<ul style="list-style-type: none"> ■ Check all power cord connections. ■ Make sure that each power switch is on. ■ Press anywhere on the GUI touch screen to activate the display and turn on the library. ■ Verify that the LEDs on the back of the library are on and that the fans are turning to ensure the library is receiving power. ■ Replace the power cord(s). ■ Contact your authorized service provider.
One of the redundant power supplies is not functioning properly.	<ul style="list-style-type: none"> ■ Check the LEDs on the power supplies to identify the one that may be at fault. ■ Contact your authorized service provider.

Table 12: Troubleshooting General Problems (Continued)

Problem	Solution
No display messages appear on the GUI touch screen.	<ul style="list-style-type: none"> ■ Touch the GUI screen to bring out of sleep mode. ■ Make sure the power cord is connected. ■ Make sure the power switches are on. ■ Check that the LEDs on the back of the library are on and the fans are turning. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Try to access the library from the Web using the Remote Management Interface (see page 107), or through a host-based diagnostics tool such as HP StorageWorks Library & Tape Tools (see page 175). ■ Download library firmware (see page 133). ■ Contact your authorized service provider.
Tape Movement	
An error message appears after inserting the magazine or loading tapes.	<ul style="list-style-type: none"> ■ Verify that tapes are inserted correctly in the magazine. ■ Ensure that you are using the correct tape type for your drive technology. ■ Contact your authorized service provider.
A tape is stuck in a drive.	<ul style="list-style-type: none"> ■ Cycle power to the library or reboot using the GUI touch screen, and retry unloading the tape from the library GUI touch screen, the Remote Management Interface, or the host application software. ■ Ensure the host application software is not reserving the slot or drive. The software needs to cancel the reservation. If necessary, disconnect from the host, power cycle, and unload the drive. ■ Contact your authorized service provider.
A tape is stuck in the robotics.	<ul style="list-style-type: none"> ■ Run a Vertical Calibration test from the Diagnostics section of the Utilities menu. ■ Cycle power to the library or reboot using the GUI touch screen. ■ Contact your authorized service provider.

Table 12: Troubleshooting General Problems (Continued)

Problem	Solution
A tape is stuck in a storage slot.	<ul style="list-style-type: none"> ■ Using the GUI touch screen, open the appropriate door, and remove the magazine. ■ Pull the tape out. ■ Reinsert the magazine. ■ If the magazine is damaged, contact your authorized service provider.
Robotics are misaligned. Robotics won't get a tape. Tape/drive/robotics are misaligned.	<ul style="list-style-type: none"> ■ Run a Vertical Calibration test from the Diagnostics section of the Utilities menu. ■ Ensure that you are using the correct tape type for your drive technology. ■ Contact your authorized service provider.
Media	
Cannot load tape into drive.	<ul style="list-style-type: none"> ■ Ensure your media and format type matches your drive type.
DLT tape has circular wear patterns around the hub.	<ul style="list-style-type: none"> ■ The DLT drive hub may not be engaging the tape hub properly. Discard the tape and contact your authorized service provider.
A new Ultrium data cartridge that is write-enabled is rejected by the drive.	<ul style="list-style-type: none"> ■ LTO Cartridge Memory has failed or is damaged. Replace the data cartridge.
A new Ultrium data cartridge that is write-protected is rejected in multiple known good drives.	<ul style="list-style-type: none"> ■ LTO Cartridge Memory has failed, and the drive has found no data to recover. Replace the data cartridge.
An Ultrium cartridge that has data written to it and is write-protected restores very slowly.	<ul style="list-style-type: none"> ■ LTO Cartridge Memory has failed, and the drive cannot use the tape directory information to recover the data. The data can still be recovered, but may take longer than normal. ■ Contact your authorized support provider for more information.

Table 12: Troubleshooting General Problems (Continued)

Problem	Solution
<p>Cannot write to tape.</p>	<ul style="list-style-type: none"> ■ Check the write-protect tab on the tape to assure write-enabled status. ■ Ensure that the application software does not have the write-protect setting activated. ■ Check the host device file system access permissions. ■ Verify that you are using the correct tape type for your drive technology. ■ Try a new tape. ■ SDLT drives can read DLT4000, DLT7000, DLT8000, and DLT1 media but cannot write to them. <hr/> <p style="text-align: center;">Caution: During the troubleshooting process, do not put the tape in question into another drive, since damaged tapes can damage drives.</p>
<p>Cannot load the cleaning cartridge.</p>	<ul style="list-style-type: none"> ■ Ensure you are using an approved cleaning cartridge for your drive type. ■ Verify that the reserved cleaning slot is set up correctly and that the cartridge is in the correct slot. The slot numbering may be affected when manually loading a magazine, changing the number of mail slots, or using the default numbering scheme which begins with zero. ■ Contact your authorized service provider.
<p>Connections</p>	
<p>Changed the drive SCSI ID, but the new ID is not recognized by the host computer.</p>	<ul style="list-style-type: none"> ■ Check that all SCSI devices on the same bus have different ID numbers. ■ Reboot the host. ■ Check for proper cabling and termination. ■ Contact your authorized service provider.

Table 12: Troubleshooting General Problems (Continued)

Problem	Solution
<p>Host does not detect the library.</p>	<ul style="list-style-type: none"> ■ Ensure that the HBA type matches the library type (LVDS or single-ended SCSI) and is properly installed and configured. ■ Check that the library is terminated and properly cabled. ■ Check that the SCSI cable length limits have not been exceeded. <hr/> <p>Note: SCSI cable length limits are very short on a Single-Ended bus.</p> <hr/> <ul style="list-style-type: none"> ■ Ensure that the terminator is compatible with the library (LVDS or single-ended SCSI). ■ Check for SCSI ID conflicts. ■ Check that the HBA is recognized by the operating system and properly configured. ■ Check that the application software is compatible with the library, and that it has all necessary patches and updates. ■ Check that the device is properly installed and configured using HP StorageWorks Library & Tape Tools, available from http://www.hp.com/support/tapetools ■ Power cycle the library and power down the host. Wait until the library completes its power cycle before powering up the host. ■ If using Fibre Channel, make sure you power on the devices in the correct order (switch, hub, library, host). ■ If using Fibre Channel, make sure there is not a zoning issue that is preventing the host from seeing the library. ■ If using Fibre Channel, make sure that the router sees the library and/or drives. ■ Contact your authorized service provider.

Table 12: Troubleshooting General Problems (Continued)

Problem	Solution
Library Performance	
<p>HP-UX host responds slowly, or crashes after connecting to the library.</p>	<ul style="list-style-type: none"> ■ Check the SCSI IDs of all devices on the host busses to ensure there are no conflicts. ■ Check that the application software does not require SCSI IDs to be in a certain order. ■ Contact your authorized service provider.
<p>The library is not efficiently backing up data.</p>	<ul style="list-style-type: none"> ■ Check the network bandwidth from the target to the host computer. ■ Check that the library's drives are on their own SCSI bus, and not daisy-chained to another tape drive, hard drive, or other high bandwidth device. ■ Check that the server and file system have the processing power and memory needed to stream the tape drive. ■ Ensure that other applications are not taking up bandwidth from the backup server or target workstations. ■ Ensure the server has a fast enough file system (i.e. RAID). ■ Ensure that the drive is clean. ■ Try a new tape. A marginal tape can cause performance problems due to bad spots on the tape, requiring retries. ■ Ensure that the application software is using fixed-length records (or blocks) to maximize throughput, and has not defaulted to a smaller record size. (64K should be sufficient.) ■ Ensure that the data is being compressed, however do not turn on both software and hardware compression. (In most cases, hardware compression should be enabled.) ■ Check the size of the files. Backing up several small files can impact performance.

Using Diagnostic Support Tools

This section describes diagnostic tools available to help troubleshoot and maintain your tape library.

HP StorageWorks Library and Tape Tools

To provide continued service to our customers, HP provides the HP StorageWorks Library and Tape Tools (L&TT) software application. L&TT is a diagnostic tool that is designed to aid in the installation and maintenance of both HP tape devices and tape libraries. L&TT includes several features designed for use by both HP storage customers and trained service personnel. The key features include:

- Diagnostic tools for tape drive and tape automation devices designed for simple troubleshooting and verifying installations.
- Multiple options for retrieving and updating both the latest firmware for library and drives, and the most current version of L&TT.
- Comprehensive reports to assist authorized service providers in troubleshooting.

Frequent firmware image updates are released on the Internet. For optimal performance, HP recommends that you update your system periodically with the latest device firmware.

L&TT is available for download at no cost from the HP website at:

<http://www.hp.com/support/tapetools>

MSLUtil

The library ships with an RS232 diagnostic cable and a floppy containing the MSLUtil diagnostic utility. After following the recommended steps from the ERP to resolve any issues, use this utility to verify whether error conditions have been corrected. Follow this procedure until the diagnostics software no longer detects an error condition.

Running Library Diagnostic Tests

Use the following procedure to run internal tests of library functions. [Table 13](#) describes these tests.

1. From the library **Status** screen, select **Menu**.
2. Under the **Utilities** area, select **Diagnostics**.
3. Select the test to want to run.

Note: Available tests are dependent on the library model and specified user level.

Table 13: Library Diagnostic Tests

Test	Description
Cartridge Cycle	Cycles cartridges continuously and randomly in bins and mail slots, displaying a count of the type of cycle on the control panel. Press the Start button to begin the test and the Stop button end to end the test.
Drive Cycle	Cycles cartridges continuously and randomly in bins, mail slots, and drives, displaying a count of the type of cycle on the control panel. Press the Start button to begin the test and the Stop button end to end the test.
Barcode Cycle	Scans all bar codes continuously, listing those read and the number of times a full library scan has been done. Press the Start button to begin the test and the Stop button end to end the test.
Inventory	Physically scans the entire library to determine which slots and drives contain tapes and reads all barcode labels.
Sensor Test	Tests all the hall effect sensors and lists their status.
Vertical Calibration <i>(available in four-drive models only)</i>	Calibrates the vertical lifters to correct limits. This test is typically used when vertical lifters are replaced.

Table 13: Library Diagnostic Tests (Continued)

Test	Description
View Error Log	Allows access to the error log to view posted errors.
Touch Screen Calibrate	Allows resetting of calibration values when the screen brightness is not uniform.
Tachometer Diagnostic	This is a factory only diagnostic used to measure tachometer motor function limits.
Friction Diagnostic	This is a factory only diagnostic used to measure friction in the motors for acceptable limits.

Regulatory Compliance Notices



This appendix includes the following information:

- [Federal Communications Commission Notice](#), page 180
- [Canadian Notice \(Avis Canadien\)](#), page 182
- [European Union Notice](#), page 182
- [BSMI Class A Notice](#), page 183
- [Japanese Notice](#), page 183
- [Laser Device](#), page 183
- [Laser Regulation Labels](#), page 185

Federal Communications Commission Notice

Part 15 of the Federal Communications Commission (FCC) Rules and Regulations has established Radio Frequency (RF) emission limits to provide an interference-free radio frequency spectrum. Many electronic devices, including computers, generate RF energy incidental to their intended function and are, therefore, covered by these rules. These rules place computers and related peripheral devices into two classes, A and B, depending upon their intended installation. Class A devices are those that may reasonably be expected to be installed in a business or commercial environment. Class B devices are those that may reasonably be expected to be installed in a residential environment (that is, personal computers). The FCC requires devices in both classes to bear a label indicating the interference potential of the device as well as additional operating instructions for the user.

The rating label on the device shows which class (A or B) the equipment falls into. Class B devices have an FCC logo or FCC ID on the label. Class A devices do not have an FCC logo or FCC ID on the label. Once the class of the device is determined, refer to the following corresponding statement.

Class A Equipment

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at personal expense.

Class B Equipment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Hewlett-Packard Company may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods in order to maintain compliance with FCC Rules and Regulations.

Declaration of Conformity for products marked with the FCC logo - United States only

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For questions regarding this FCC declaration, contact:

Hewlett-Packard Company
Regulatory Engineer, MS E-200
825 14th Street S.W.
Loveland, CO 80537

Or, call

(970) 898-1738

To identify this product, refer to the Part, Series, or Model number found on the product.

Canadian Notice (Avis Canadien)

Class A Equipment

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Class B Equipment

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union Notice



Products bearing the CE marking comply with the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community and if this product has telecommunication functionality, the R&TTE Directive (1999/5/EC).

Compliance with these directives implies conformity to the following European Norms (in parentheses are the equivalent international standards and regulations):

- EN 55022 (CISPR 22) - Electromagnetic Interference
- EN55024 (IEC61000-4-2, 3, 4, 5, 6, 8, 11) - Electromagnetic Immunity
- EN61000-3-2 (IEC61000-3-2) - Power Line Harmonics
- EN61000-3-3 (IEC61000-3-3) - Power Line Flicker
- EN 60950 (IEC 60950) - Product Safety

BSMI Class A Notice

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Japanese Notice

ご使用になっている装置にVCCIマークが付いていましたら、次の説明文をお読み下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCIマークが付いていない場合には、次の点にご注意下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

Laser Device

All HP systems equipped with a laser device comply with safety standards, including International Electrotechnical Commission (IEC) 825. With specific regard to the laser, the equipment complies with laser product performance standards set by government agencies as a Class 1 laser product. The product does not emit hazardous light; the beam is totally enclosed during all modes of customer operation and maintenance.

Laser Safety Warnings



WARNING: To reduce the risk of exposure to hazardous radiation:

Do not try to open the laser device enclosure. There are no user-serviceable components inside.

Do not operate controls, make adjustments, or perform procedures to the laser device other than those specified herein.

Allow only HP authorized service technicians to repair the laser device.

Compliance with CDRH Regulations

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration implemented regulations for laser products on August 2, 1976. These regulations apply to laser products manufactured from August 1, 1976. Compliance is mandatory for products marketed in the United States.

Compliance with International Regulations

All HP systems equipped with laser devices comply with appropriate safety standards, including IEC825.

Laser Specifications

Table 14: Laser Specifications

Feature	Description
Laser type	Semiconductor GaAIAs
Wave length	780 nm +/- 35 nm
Divergence angle	53.5 degrees +/- 0.5 degrees
Output power	Less than 0.2 mW or 10,869 W m ⁻² sr ⁻¹
Polarization	Circular 0.25
Numerical aperture	0.45 inches +/- 0.04 inches

Laser Regulation Labels

Product Conformation Label

The product conformation label is on the rear panel of the library (see [Figure 79](#)).



Figure 79: Product conformation label

Laser Caution Label

The laser light caution label is near the laser (see [Figure 80](#)).

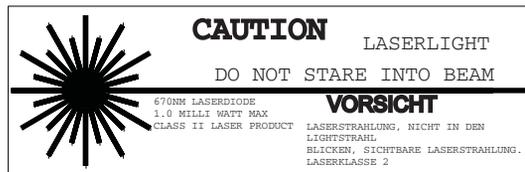


Figure 80: Laser light caution label

Exposure Caution Label

The exposure caution label is on the laser (see [Figure 81](#)).

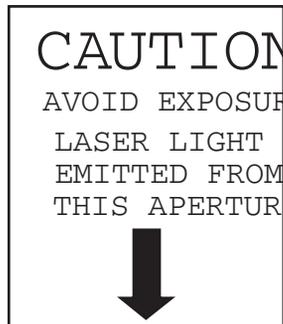


Figure 81: Exposure caution label

Specifications



This appendix lists the following specifications met by HP StorageWorks MSL Series tape libraries:

- [Power](#), page 188
- [Mechanical](#), page 189
- [Environmental \(All Models\)](#), page 190
- [Acoustics](#), page 192
- [Safety and Regulatory](#), page 193

Power

Table 15: Power Specifications

Description	MSL6030/ MSL5030/MSL5026 Specification	MSL6060/ MSL5060/MSL5052 Specification
Voltage	100 to 240 VAC, +/- 10%	100 to 240 VAC, +/- 10%
Current	3.0 to 6.0 A	3.0 to 6.0 A
Line frequency operating range	50 to 60 Hz	50 to 60 Hz
Power consumption	180 W (2 tape drives)	300 W (4 tape drives)
Maximum peak power consumption	200 W (2 tape drives)	360 W (4 tape drives)

Mechanical

Table 16: Tabletop Model Mechanical Specifications

Description	MSL6030/ MSL5030/MSL5026 Specification	MSL6060/ MSL5060/MSL5052 Specification
Height	9.5 inches (24 cm), nominal (5U)	18.5 inches (47 cm), nominal (10U)
Width	19 inches (48.3 cm)	19 inches (48.3 cm)
Depth	31.5 inches (80 cm)	31.5 inches (80 cm)
Weight	63 pounds (28.6 kg), estimated (with 2 tape drives installed)	136 pounds (61.8 kg), estimated (with 4 tape drives installed)

Table 17: Rackmount Model Mechanical Specifications

Description	MSL6030/ MSL5030/MSL5026 Specification	MSL6060/ MSL5060/MSL5052 Specification
Height	8.75 inches (22.2 cm), nominal (5U)	17.5 inches (44.4 cm), nominal (10U)
Width	17 inches (43.2 cm)	17 inches (43.2 cm)
Depth	31.5 inches (80 cm)	31.5 inches (80 cm)
Weight	61 pounds (27.7 kg), estimated (with 2 tape drives installed)	123 pounds (55.9 kg), estimated (with 4 tape drives installed)

Environmental (All Models)

Table 18: Operating Environmental Specifications

Description	Specification
Dry bulb temperature	50°F to 104°F (10°C to 40°C)
Temperature gradient	1.8°F/min (1°C/min)
Temperature shock	27°F (15°C) over 2 minutes
Wet bulb temperature	78.8°F (26°C)
Relative humidity (noncondensing)	20% to 80%
Humidity gradient	10%/hr
Altitude	-1000 feet to +10,000 feet (-305 m to 3050 m)

Table 19: Packed or Unpacked Environmental Specifications

Description	Specification
Dry bulb temperature	-40°F to 140°F (-40°C to 60°C)
Temperature gradient	36°F (20°C)/hr (across the range)
Temperature shock	27°F (15°C) (over 2 minutes)
Wet bulb temperature	86°F (30°C)
Relative humidity (noncondensing)	10% to 95%
Humidity gradient	10%/hr
Altitude	-1000 feet to +15,000 feet (-305 m to 4600 m)

Table 20: Transit -- Short Term Environmental Specifications

Description	Specification
Dry bulb temperature	-40°F to 140°F (-40°C to 60°C)
Temperature gradient	36°F (20°C)/hr (across the range)
Temperature shock	27°F (15°C) (over 2 minutes)
Wet bulb temperature	86°F (30°C)

Table 20: Transit -- Short Term Environmental Specifications (Continued)

Description	Specification
Relative humidity (noncondensing)	5% to 95%
Humidity gradient	10%/hr
Altitude	-1000 feet to +40,000 feet (-305 m to 12,200 m)

Acoustics

Table 21: Acoustic Noise Declared per ISO 9296 and ISO 7779

Sound Power Level $L_{W,Ad}$ B			Sound Pressure Level $L_{p,Am}$ dBA (bystander position)	
Product	Idle	Operate	Idle	Operate
MSL6030/MSL5030 MSL5026 MSL6060/MSL5060 MSL5052	6.4	7.0	48	48

Note: Current values for specific configurations are available from HP representatives
1 B = 10 dBA.

**Table 22: Schallemissionswerte - Werteangaben nach ISO 9296 und ISO 7779/
DIN 27779**

Schalleistungspegel $L_{W,Ad}$ B			Schalldruckpegel $L_{p,Am}$ dBA (bediener position)	
Gerät	Leerlauf	Betrieb	Leerlauf	Betrieb
MSL6030/MSL5030 MSL5026 MSL6060/MSL5060 MSL5052	6,4	7,0	48	48

Note: Aktuelle Werte für spezielle Ausrüstungsstufen sind über die HP Vertretungen
erhältlich. 1 B = 10 dBa.

Safety and Regulatory

The library carries the following Regulatory Agency product safety certifications.

Table 23: Regulatory and Product Safety Certifications

Description	Specification
UL Listed Mark	UL 1950 (standard for safety of information technology equipment)
TUV GS Mark (Germany)	EN60950, IEC950 (standard for safety of information technology equipment third edition)
CE Marking (European Union)	Low Voltage Directive, 72/23/EEC, European Union
CUL Mark (Canadian UL)	CAN/CSA 22.2 No. 950 (standard for safety of information technology equipment)
Regulatory Series ID Number	1005 and 1005A, Class A

Electrostatic Discharge



To prevent damage to the system, be aware of the precautions you need to follow when setting up the system or handling parts. A discharge of static electricity from a finger or other conductor can damage system boards or other static-sensitive devices. This type of damage can reduce the life expectancy of the device.

To prevent electrostatic damage, observe the following precautions:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly.

Grounding Methods

There are several methods for grounding. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:

- Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm \pm 10 percent resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
- Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
- Use conductive field service tools.
- Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an HP authorized service provider install the part.

Note: For more information on static electricity, or for assistance with product installation, contact your authorized service provider.

Configuration Examples



This appendix illustrates potential SCSI cabling configurations.

Note: For a more comprehensive set of SCSI cabling configurations, go to <http://www.hp.com/support>.

Note: For step-by-step instructions on how to install and configure the library, see “[Cabling for SCSI Configurations](#)” on page 198.

SCSI Cable Configurations

Use the following guidelines when configuring your SCSI cables:

- Use the highest quality SCSI cables.

Note: Bus errors caused by excessive length or poor quality cables can significantly degrade performance and reliability.


- Each of the tape drives in the library, and the library controller constitute a separate SCSI target. When any two or more devices are connected to the same SCSI bus, each separate SCSI device must be assigned a unique SCSI ID.
- SCSI IDs are set at the factory. Use the GUI touch screen to change any of the factory defaults.
- To connect a library to a host, the host must have at least one Wide LVD controller and the appropriate driver software.

Note: The Single-Ended SCSI interface has a lower performance than LVD SCSI, and also has shorter cable requirements.

- For optimal performance, do not attach more than two drives per SCSI bus.

Note: One drive per bus is HP's recommended configuration. Two drives per bus is an acceptable configuration for SDLT 1 and 2, as well as for Ultrium 230.

Configuration Examples

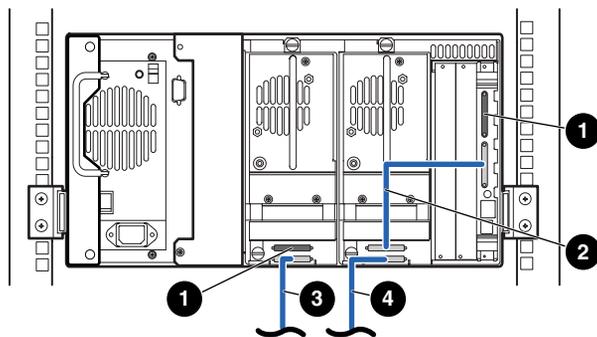

- ❶ SCSI Terminator
- ❷ 0.5 m cable
- ❸ Host cable (Bus 1, to host system)
- ❹ Host cable (Bus 0, to host system)

Figure 82: MSL6030/MSL5030/MSL5026, 2 hosts/2 drives


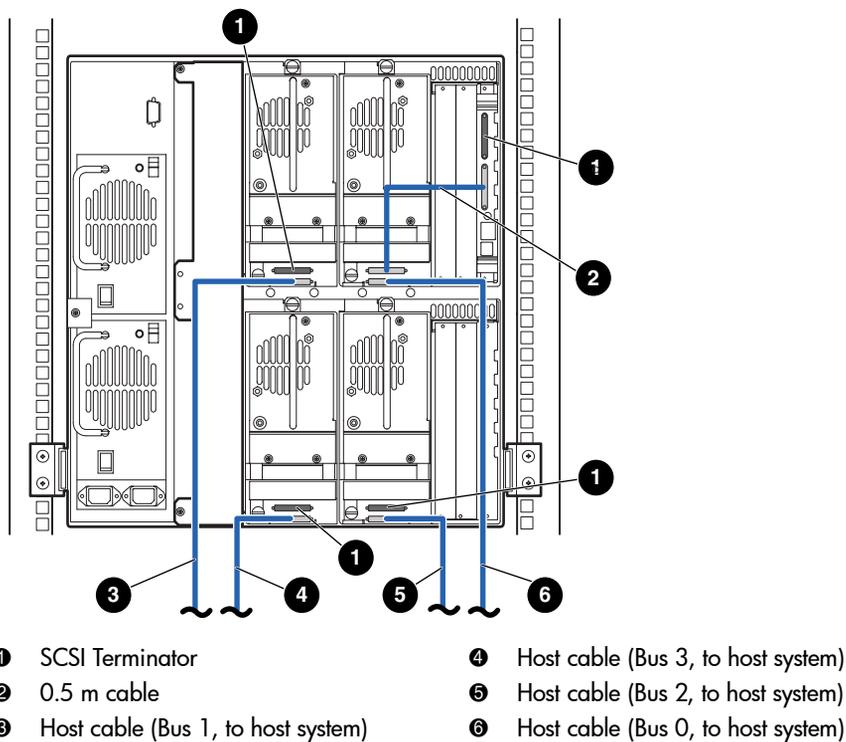



Figure 83: Single MSL6060/MSL5060/MSL5052, 4 hosts/4 drives

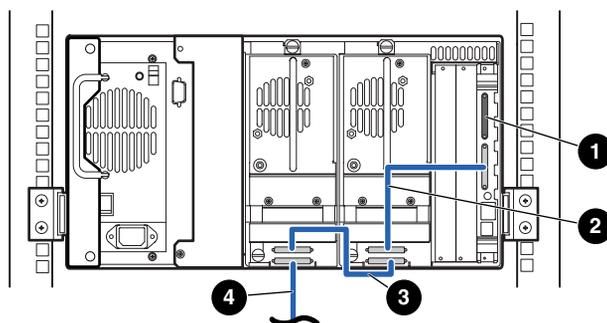

- ❶ SCSI Terminator
- ❷ 0.5 m cable
- ❸ 0.25 m cable or 0.5 m cable
- ❹ Host cable (Bus 0, to host system)

Figure 84: Single MSL6030/MSL5030/MSL5026, 1 host/2 drives

Note: The configuration shown in [Figure 84](#) is not recommended for Ultrium 460 tape drives, due to performance downgrade.

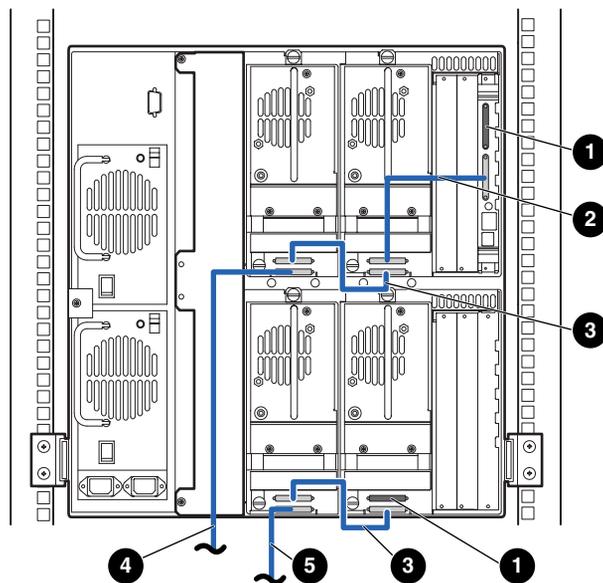

- ❶ SCSI Terminator
- ❷ 0.5 m cable
- ❸ 0.25 m cable or 0.5 m cable
- ❹ Host cable (Bus 0, to host system)
- ❺ Host cable (Bus 1, to host system)

Figure 85: MSL6060/MSL5060/MSL5052, 2 hosts/4 drives

Note: The configuration shown in [Figure 85](#) is not recommended for Ultrium 460 tape drives, due to performance downgrade.

Optional Fibre Channel Card



The optional Fibre Channel card enables connectivity between MSL Series tape libraries and Fibre Channel based Storage Area Networks (SANs). This allows the libraries to be attached to a Switched Fabric.

This appendix includes the following sections:

- [Host Prerequisites](#), page 204
- [Connectors and Indicators](#), page 205
- [Configuration](#), page 207
- [Resetting the Fibre Channel Card](#), page 209

Host Prerequisites


To use Fibre Channel, check the host for the following:

- Fibre Channel backup software, host interface adapters, and associated device drivers.
- Host that acts as an initiator using the Fibre Channel controller to communicate with Fibre Channel SCSI target devices.
- Backup application software with robust error recovery. Fibre Channel is an open system, similar to LAN. Consequently, Fibre Channel is subject to data flow interruptions from power cycling, connections, disconnections, and ESD charges.

Note: For a complete list of prerequisites and supported configurations, contact your HP sales representative.

Connectors and Indicators

Figure 86 shows the connectors and indicators for the optional Fibre Channel board.

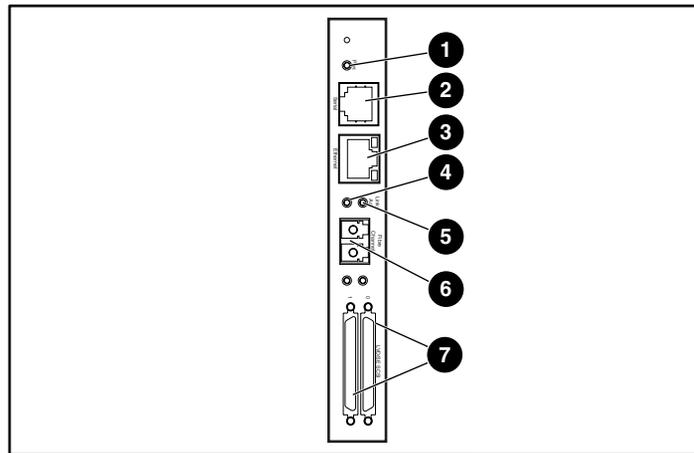

- | | |
|------------------------------|----------------------------|
| ❶ Power LED | ❺ Fibre Channel link LED |
| ❷ Serial RJ-11 connector | ❻ FC-LC connector |
| ❸ Ethernet RJ-45 connector | ❼ SCSI VHDCI connector (2) |
| ❹ Fibre Channel activity LED | |

Figure 86: Connectors and indicators

Note: The Fibre Channel board serial cable is not the same as the library controller board serial cable. The serial pinouts are different for each board, requiring different cables.

Power Indicator

The Fibre Channel card has one power LED ❶. LED definitions:

- Green - power has been applied
- Yellow - POST is in process or processor problems present

Serial Port

The Fibre Channel card has one serial port ②. The serial port can be used to access the Serial/Telnet user interface, which is used to locally manage and configure the Fibre Channel card.

Ethernet Port

The Fibre Channel card has one Ethernet port ③. LED definitions:

- Activity - there is port activity
- Link - a valid Ethernet link exists

Fibre Channel Port

The Fibre Channel card has one Fibre Channel port ⑥. LED definitions:

- Green (ACT) - Fibre Channel port activity ④
- Green (LINK) - a valid Fibre Channel link exists ⑤

SCSI VHDCI Connectors

The Fibre Channel card has two SCSI VHDCI connectors. A green LED indicates activity on the corresponding port.

Configuration

For detailed configuration information, refer to the *HP StorageWorks Network Storage Router User Guide* available on the MSL Series tape library documentation CD, or on the HP website at: <http://www.hp.com/support>.

Before attempting to configure the Fibre Channel board, a basic understanding of Fibre Channel and SCSI devices is recommended. For information on SCSI standards, refer to publications from X3T10 committee of ANSI (American National Standards Institute). For more information on Fibre Channel standards, refer to publications from the X3T11 committee of ANSI. To purchase approved American National Standards and Technical Reports, contact ANSI at (212)642-4900.

Default Ethernet Settings

The basic factory default values are:

- IP address: http://1.1.1.1/
- Subnet mask: 255.255.255.0
- Gateway address: 0.0.0.0
- User name: root
- Password: password


HP recommends that you change these values from the defaults.

All settings within the configuration are pre-set with default values. These values are set to allow the Fibre Channel card into most HP environments with little or no configuration changes.

After changing the basic default values listed above, carefully consider any additional configuration changes.


After the initial configuration is established, HP recommends backing up the configuration to an external file via the FTP file transfer protocol option. If needed, during a recovery process, this file can be restored back onto the router.

Configuration Examples

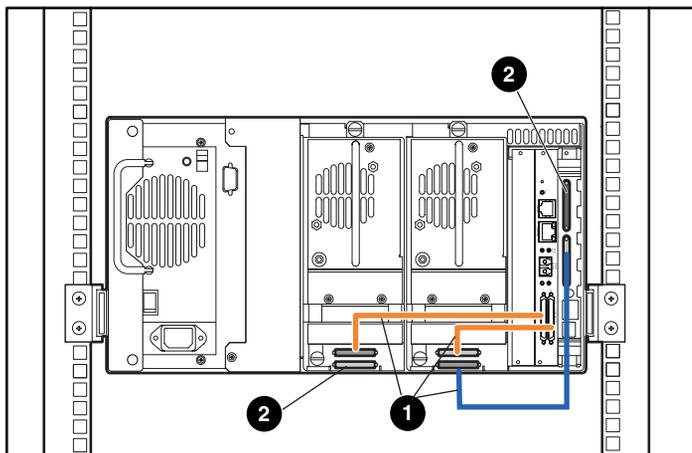

- ❶ 0.5 m cable
- ❷ Terminator

Figure 87: MSL6030/MSL5030/MSL5026 standalone

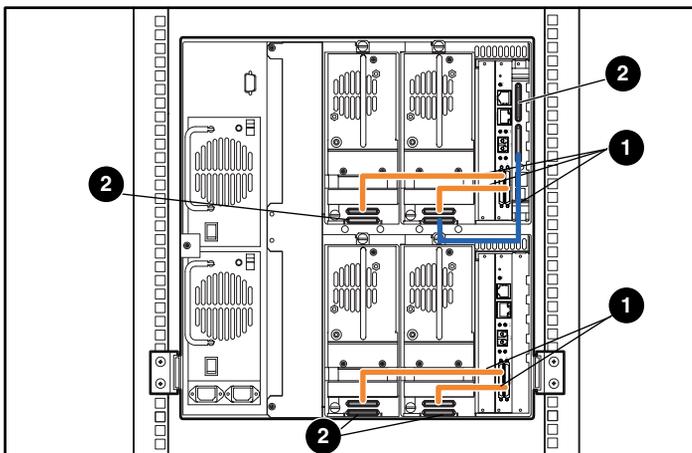

- ❶ 0.5 m cable
- ❷ Terminator

Figure 88: MSL6060/MSL5060/MSL5052 standalone

Resetting the Fibre Channel Card

The Fibre Channel card can be reset by using a paper clip or other sturdy tool to push the reset switch shown in [Figure 89](#).

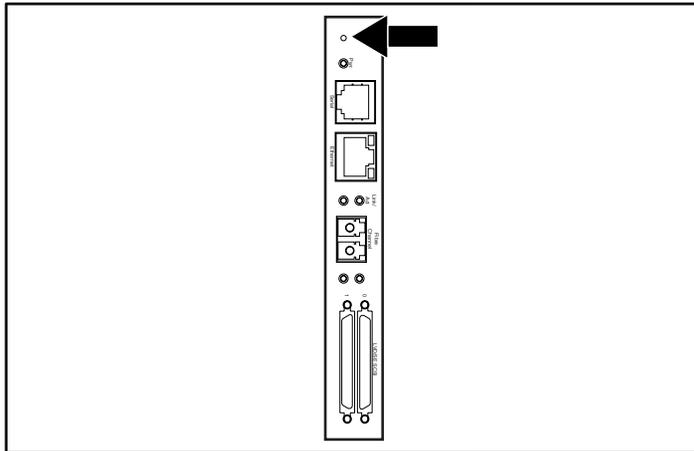


Figure 89: Reset switch

A

abort move status 89
acoustic specs 192
authorized reseller, HP 17
auto power-up 83

B

bar code 103, 104
label
 assignment 85
 check digit 85
labels 103
reader 30
base address 87
bus ID 86
bus parity 87

C

cable configuration 49
 2 tape drives, 1 host 50
 2 tape drives, 2 hosts 51
SCSI 198
SCSI examples 199
card cage 33
cartridge map 91
cleaning cartridge
 automatic 128
 cleaning slot 129
 mail slot 128
 mail slot, replacing 131
 manual 128
 replacing 131

reserved slot 131
right magazine, replacing 131
running 127
clip nuts 44
controller
 wide LVD/SE 49
conventions
 document 14
 equipment symbols 15
 text symbols 14

D

data speed transfer 90
device capability page length 87
diagnostics 97
 library and tape tools 134
 library tests 176
DNS server 91
document
 conventions 14
 related documentation 14
door open response 89
doors 45
 magazine 68
 mechanical releases 69
 open for installation 45
drive and slot numbering 84

E

edit options 81, 93
electronics controller card 30
electrostatic discharge 195

environmental specs 190
equipment symbols 15
error recovery procedures 139
errors
 post recovered 88
European Union Notice 182
exposure caution label 185

F

fasteners 43
fault symptom codes 140
fibre channel board
 described 34
 location 33
fibre channel card
 configuration examples 208
 configuring 207
 Ethernet settings 207
 resetting 209
firmware
 updating 133
 upgrade requirements 135
front panel 68
FSCs 140

G

getting help 17
grounding methods 196
GUI touch screen 35, 71

H

help, obtaining 17
host system 72
HP
 authorized reseller 17
 storage website 17
 technical support 17

I

illustrated
 applying power 48

attaching a bar code 104
attaching a bar code label to an SDLT/DLT
 tape cartridge 105
cable configuration 50, 51
card cage 33
controller board 32
front panel 35, 68
indicators 70
installing the library 45
installing the rails 44
left magazine mail slot 102
left tape magazine 101
magazines 27
mechanical releases 69
power supply 29
PTM mounting location 37
removing magazines 100
reserved slot locations 58, 59, 60, 61
robotics 30
securing the library 46
tabletop model clearances 40
tape drive locations 21
template 42
troubleshooting flow chart 139
import/export element base address 88
indicators
 front panel 35
 library 70
init element status 87
initialization screen 73
initiate wide data transfer negotiation 89
installing rails 44
installing the library 45

L

labels, bar code 103
laser caution label 185
latch mechanism 45
LCD contrast adjust 84
LCD contrast controls 78
library
 components

- tape cartridges 26
- display screens and options 73
- library and tape tools 134
- library info 91
- library mode 84
- library options 82
- library status LED 35
- library systems
 - multi unit 36
- locks 71

M

- magazines 27
 - door mechanical releases 69
 - doors 68
 - inserting cartridges 101
 - removing 99
- mail slot
 - access 102
 - holder 102
 - mode 84
 - using 102
- maintenance 96
- mechanical specs 189
- menu
 - option 81
 - selections 82
- mixed media 21
- models 20

N

- network options 90

O

- offline 83
- online 80
- options
 - edit 93
 - network 90, 95
 - passwords 95
 - SCSI 85, 94

P

- Pass-Through Mechanism (PTM) 30
- password
 - levels 71
 - option 95
- PCI slots 33
- post recovered errors 88
- power supply 28, 47
- power switch 47
- product identification 88
- PTM
 - and robotics 36

R

- rack stability, warning 16
- rackmount model 42
- regulatory 179
- related documentation 14
- reserved slots 83
 - locations 58, 59, 60, 61
 - numbering 58
 - setting up 58
- retaining screws 45
- robotics 33, 36

S

- safety specs 193
- screen
 - diagnostics 97
 - drive 0 bus 0 data field 57
 - drive 0 bus ID 56
 - edit library options 93
 - edit network options 95
 - edit passwords options 95
 - edit SCSI options 94
 - initialization 73
 - magazine access 77
 - mail slot access 76
 - maintenance 96
 - menu 81
 - move media 78

- power-down confirmation message [79](#)
- reserved slots numeric keypad [62](#)
- SCSI ID confirmation [56](#)
- SCSI option selection [55](#)
- security level [98](#)
- status [74](#), [80](#)
- technical support information [75](#)
- total reserved slots [62](#)
- total reserved slots confirmation [63](#)
- view library info [91](#)
- view library options [83](#)
- view network options [90](#)
- view SCSI options [86](#)

SCSI

- bus IDs [86](#)
- bus parity [87](#)
- cable configuration examples [199](#)
- cable configurations [49](#)
- IDs [49](#)
- IDs, setting [55](#)
- options [85](#)

securing the library [46](#)

security level [98](#)

set up

- network [64](#)
- rackmount model [42](#)
- reserved slots [58](#)
- tabletop model [40](#)

setting a SCSI ID [55](#)

slide rails [42](#)

- inner [44](#)
- intermediate [44](#)

specifications

- acoustics [190](#), [192](#)
- environmental [190](#)
- mechanical [189](#)
- power [188](#)
- safety [193](#)

status screen [74](#), [80](#)

storage element base address [87](#)

symbols in text [14](#)

symbols on equipment [15](#)

T

- tabletop model
 - converting to rackmount [41](#)
 - setting up [40](#)
- tape alert mode [89](#)
- tape cartridges
 - inserting and removing [99](#)
 - mixed media [21](#)
 - requirements [103](#)
- tape drives [22](#)
 - location [21](#)
 - LTO Ultrium [22](#)
 - mixed media [21](#)
 - SDLT [22](#)
- technical support, HP [17](#)
- template [42](#), [43](#)
- test unit ready reporting [87](#)
- text symbols [14](#)
- transfer element base address [88](#)
- transport element base address [87](#)
- troubleshooting
 - error recovery [139](#)
 - fault symptom codes [140](#)
 - flow chart [139](#)
 - platform problems [138](#)
- troubleshooting flow chart [139](#)

U

- unit attention reporting [87](#)
- unload mode [83](#)
- utilities [81](#), [96](#)
 - diagnostics [97](#)
 - factory [97](#)
 - maintenance [96](#)
 - security level [98](#)

V

- vendor identification [88](#)
- view system data [81](#), [82](#)
- viewing window [35](#)

W

warning

- defined [15](#)
- laser safety [184](#)
- PTM [36](#)

- rack enclosure [44](#), [45](#)
 - rack stability [16](#)
 - symbols on equipment [15](#)
- websites
- HP storage [17](#)

