

# intel® Technical Advisory

TA-0358-4

5200 NE Elam Young Parkway  
Hillsboro, OR 97124

August 24, 2001

## Intel® SBT2 Server Board New Fan Cable Installation Instructions

Information in this document is provided in connection with Intel products. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document. Except as provided in Intel's Terms and Conditions of Sale for such products, Intel assumes no liability whatsoever, and Intel disclaims any express or implied warranty, relating to sale and/or use of Intel products including liability or warranties relating to fitness for a particular purpose, merchantability, or infringement of any patent, copyright or other intellectual property right. Intel products are not intended for use in medical, life saving, or life sustaining applications. Intel may make changes to specifications and product descriptions at any time, without notice. The **SBT2** server board may contain design defects or errors known as errata that may cause the product to deviate from published specifications. Current characterized errata are available on request.

### Products Affected

**BBTBB, SBT2, KHDHSRPU**

### Description

When the SBT2 server board is installed in SKUs of the SC5000 server chassis, a new fan cable p/n A56278-001 that allows fan monitoring for front system fans is optional. These are the instructions for installing the new cable.

### Root Cause

Our customers requested this cable in order to have the ability to monitor fan activity on the rear fans. Professionals should install the cable. Installation process:






1. Loosen captive thumbscrews (2).

# intel® Technical Advisory


TA-0358-4

5200 NE Elam Young Parkway  
Hillsboro, OR 97124

August 24, 2001

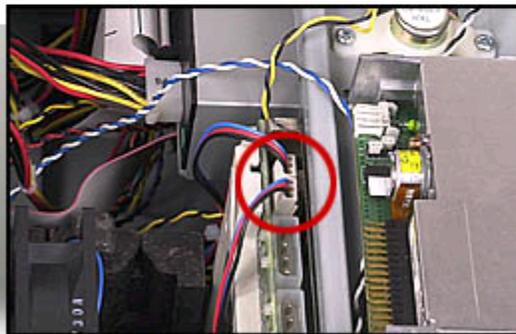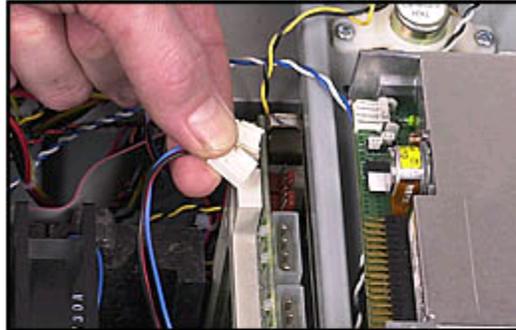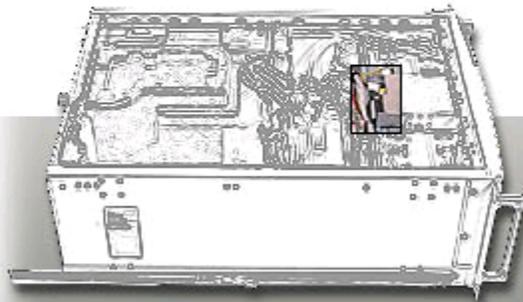

2. Remove the two fan connectors from the hot swap back plane.

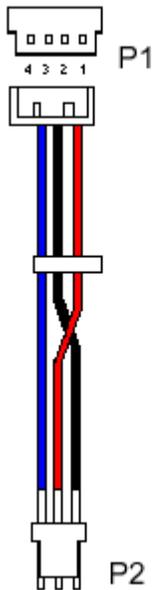


3. Plug each one of the fans into P2 side of the converter cable.

# intel® Technical Advisory

TA-0358-4

5200 NE Elam Young Parkway  
Hillsboro, OR 97124

August 24, 2001

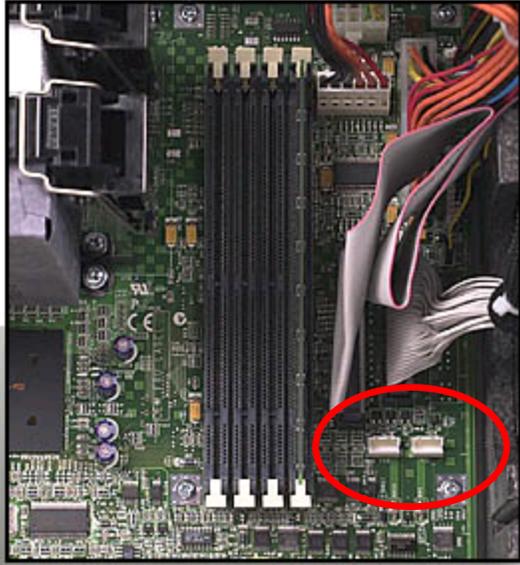

4. Plug both of the converter cables side labeled P1 into the connectors on the Server board labeled P20 and P21. Tuck cables away in order to maximize airflow.



5. Holding cover at an angle, insert into chassis.
6. Download and install the latest FRU/SDR from <http://support.intel.com>.

## Corrective Action/Resolution

Not applicable.

# intel<sup>®</sup> Technical Advisory

TA-0358-4

5200 NE Elam Young Parkway  
Hillsboro, OR 97124

August 24, 2001

## **Workarounds**

This cable can be ordered from your local depot center by using the following: SBTFANCBL, MM # 836576.

Please contact your Intel Sales Representative if you require more specific information about this issue.

Enterprise Products and Services Division  
Enterprise Products Group  
Intel Corporation