

BSQUARE's Update Designer

Configuration Update Only



Preparing the Update Package

- ◆ Open Update Designer
- ◆ Create a new .bud file
- ◆ Set *RebootAfterLevel* = 1
- ◆ Increment the *PackageID*
- ◆ Drag the .reg file that you are updating the device with to the *Registry* Icon.



If your update includes Futuresoft Sessions...

- ◆ Drag Futuresoft Files to *CopyFile* window
 - ◆ .ses Session Files
 - ◆ .acm Attribute Files
 - ◆ .trf Translation Files
 - ◆ .kbm Keyboard Mapping Files
 - ◆ .hot Hot Spot Files
- ◆ Click on each Futuresoft File, set *boot priority* to some level so that each file has a different level.

If your update includes Futuresoft Sessions...

- ◆ Set the *Source* to the path where the actual file is located
 - ◆ <http://yourserver/yourpath/yourFSfile.ses>
 - ◆ <\\localdrive\yourpath\yourFSfile.ses>
- ◆ Set the *Destination* to "\Harddisk3\"
- ◆ Make sure *OSImage*, *Execute*, *Register*, and *WaitforExecute* are all set to "NO"



If your update includes Futuresoft Sessions...

- ◆ Reset *RebootAfterLevel* to the highest priority used by the files in the *CopyFile* windows (max value is "10").
- ◆ Click on the *CopyFile* icon, make sure *OverrideDestination* and *OverrideSource* are set to "NO".
- ◆ Save .bud file.

 


Client Settings

- ◆ On the device, press F2 to open *Terminal Properties*.
- ◆ Click on *Update* tab.
- ◆ Press the *Configure* button.
- ◆ Set the *Boot Preferences*
 - ◆ All Boots
 - ◆ Next Boot


Initiate Update on Client

- ◆ Click on the *CE Update* tab.
- ◆ Enter the location of the .bud file in the *Update URL* field.
 - ◆ http://Your_Server/Your_Path/filename.bud
 - ◆ ftp://Your_Server/Your_Path/filename.bud
 - ◆ <\\yourserver\yourpath\filename.bud>
- ◆ Click *Save*.
- ◆ Click *Update Now*.




Questions?



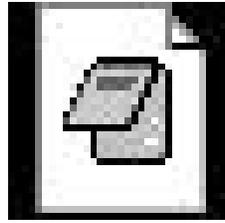

BUD File

**Update with
Futuresoft Emulators**

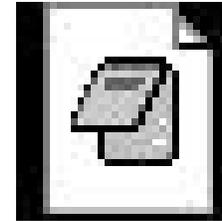

Httppreg2.bud

**Update without
Futuresoft Emulators**