

IBM Management Processor



Command-Line Interface Version 3.0 User's Guide

IBM Management Processor



Command-Line Interface Version 3.0 User's Guide

Note: Before using this information and the product it supports, read the general information in Appendix C, “Notices,” on page 87.

First Edition (December 2004)

© Copyright International Business Machines Corporation 2004. All rights reserved.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

Tables	v
Preface	vii
Chapter 1. Introducing IBM Management Processor Command-Line Interface	1
Chapter 2. Installing IBM Management Processor Command-Line Interface	3
Limitations	3
Supported service processor configurations	3
Installing the command-line interface	5
Installing on a Linux operating system	5
Installing on a Windows operating system	6
Chapter 3. Using IBM Management Processor Command-Line Interface	9
Command-line interface guidelines	9
Known problems	10
SMASH command-line protocol support	11
Starting the command-line interface	11
Logging on to a service processor	11
Managing the command-line interface	14
Using command-line interface commands	15
BladeCenter unit commands	15
Network interface commands	27
Serial port configuration commands	37
Service processor configuration commands	42
Service processor event commands	51
System power commands	61
System statistics commands	65
System component commands	67
System health and environment commands	74
Using scripts	78
Appendix A. Sample scripts	81
Get and set network hardware configuration	81
Log on to and get service processor information	81
Get service processor information and log	81
Get and set various policies and set start options	82
Log on to and flash service processor	82
Log on to and set dial-in configuration	83
Set SNMP configuration	83
Get and set switch module configuration	83
Get VPD	84
Appendix B. Getting help and technical assistance	85
Before you call	85
Using the documentation	85
Getting help and information from the World Wide Web	86
Software service and support	86
Hardware service and support	86
Appendix C. Notices	87
Edition notice	87
Trademarks	88

Important notes.	88
Index	91

Tables

1. Server configurations with full support	3
2. Server configurations with compatible support	4
3. Server configurations with service processor configuration support	5
4. Logon commands	11
5. Application-control commands	14
6. Management module failover commands	15
7. USB configuration commands	16
8. SOL commands	16
9. KVM configuration commands	18
10. Blade server start-option configuration commands	19
11. Blade server policy commands	20
12. Switch module configuration commands	22
13. BladeCenter unit topology command	25
14. BladeCenter unit VPD command	26
15. SNMP configuration commands	27
16. PPP configuration commands	30
17. Static IP configuration commands	31
18. Network hardware configuration commands	33
19. DHCP configuration commands	36
20. DNS configuration commands	36
21. Serial port software configuration commands	38
22. Serial port hardware configuration commands	39
23. Service processor ID commands	42
24. Service processor clock commands	42
25. Service processor configuration command	44
26. Service processor firmware update command	44
27. Service processor restart commands	45
28. LDAP configuration commands	46
29. Command mode interface configuration commands	49
30. Host operating system commands	50
31. Service processor event log	51
32. Alert trigger commands	51
33. Alert dial-out common configuration commands	53
34. Alert dial-out entry configuration commands	55
35. Dial-in configuration commands	58
36. PXE reboot commands	61
37. Server timeout commands	62
38. Remote power control commands	63
39. System statistics commands	65
40. LED names	66
41. Power supply command	67
42. Memory command	68
43. Hard disk backplane command	72
44. CPU command	72
45. VPD command	73
46. Component activity log command	74
47. Temperature commands	74
48. Voltage commands	76
49. Fan commands	77
50. Scripting commands	78

Preface

This book provides information about installing and using IBM[®] Management Processor Command-Line Interface, version 3.0 with the following operating systems:

- Microsoft[®] Windows[®] 2000 Server with Service Pack 3 or later
- Microsoft Windows 2000 Professional with Service Pack 3 or later
- Microsoft Windows 2000 Advanced Server with Service Pack 3 or later
- Microsoft Windows XP Professional
- Microsoft Windows 2003 Standard Edition
- Microsoft Windows 2003 Enterprise Edition
- Red Hat Linux 2.1 AS, WS, ES
- Red Hat Linux 3.0 AS, WS, ES
- SUSE LINUX 8.0 with Service Pack 3

This book is organized into the following chapters:

Chapter 1, “Introducing IBM Management Processor Command-Line Interface,” on page 1 provides an overview of the product.

Chapter 2, “Installing IBM Management Processor Command-Line Interface,” on page 3 contains installation considerations and instructions.

Chapter 3, “Using IBM Management Processor Command-Line Interface,” on page 9 contains usage guidelines and details of each command.

Appendix A, “Sample scripts,” on page 81 contains sample command scripts.

Appendix B, “Getting help and technical assistance,” on page 85 contains information about how to get technical help, support, and service.

Appendix C, “Notices,” on page 87 contains IBM notices and trademark information.

Chapter 1. Introducing IBM Management Processor Command-Line Interface

IBM Management Processor Command-Line Interface, version 3.0 is a management tool for IBM systems running Linux or Microsoft Windows. The system management functions are provided from an easy-to-use command-line interface that connects to a service processor. Using this command-line interface, you can access and set a wide range of information about the health, configuration, communication, and state of your system. These functions are immediately available after you install the command-line interface and make a connection to a service processor.

There are three supported methods that you can use to communicate with a service processor:

- In-band communication using a device driver
- Out-of-band communication using an IP connection
- Out-of-band communication using an RS-485 interconnect

Not all configurations of server and service processor support all functions. See “Supported service processor configurations” on page 3 for more details.

After you have established your communication pathway, you can begin using the following functions provided by the command-line interface:

- Query vital product data (VPD) of system components:
 - BladeCenter™ units, including switch modules
 - Cache coherency
 - Chassis or enclosure
 - Microprocessor and microprocessor electrically erasable programmable read-only memory (EEPROM)
 - Diagnostics
 - Hard disk drive backplane and system board
 - Dual inline memory module (DIMM)
 - Power supply and backplane
 - Service processor device driver, firmware, and hardware revision
 - System slot
 - POST/BIOS
- Query the component light-emitting diodes (LEDs) using light path diagnostics:
 - BladeCenter units
 - CD-ROM drive and hard disk drive cables
 - Centerplane, memory, and adapters
 - Chip and chip set voltage regulator module (VRM)
 - Microprocessor and microprocessor memory
 - Diagnostics and front panel
 - Expansion device, fan, scalability ports, system board, and VRM
 - Memory, memory hot-plug enable, and memory subsystem
 - Peripheral component interconnect (PCI), PCI bus, and PCI adapters
 - Service processor adapter and slot

- Query and set service processor configurations:
 - Restart
 - Network interfaces: Simple Network Management Protocol (SNMP), point-to-point protocol (PPP), and Internet protocol (IP)
 - Serial port hardware and software
 - General identification
 - Vital product data (VPD)
 - Internal clock
 - Alert dial-out settings
 - Dial-in entries
- Query the service processor for entries in its event log recorded by:
 - BIOS
 - Diagnostics
 - POST
 - Service processor
- Query or set server time-outs for your systems:
 - Operating-system loader
 - Operating-system heartbeat
 - POST
 - Power-off delay
- View health and environment information for your systems:
 - System board voltages and thresholds
 - VRM voltages
 - Power-supply voltages
 - Component temperatures and thresholds
 - Fan speeds
- Turn systems on and off remotely:
 - Turn off immediately and with operating-system shutdown.
 - Restart immediately and with operating-system shutdown.
 - Turn on immediately, after a specified delay, and in n seconds.
- Query the general state information for your systems:
 - System state stable or unstable
 - System power on or off
 - Number of times restarted
 - Number of hours turned on
 - Universal unique ID (UUID)
 - Blue indicator light on or off
 - Light path LED functioning
- Create scripts that contain multiple commands for you to use and reuse. When you run a script, each command within it is run.

Chapter 2. Installing IBM Management Processor Command-Line Interface

This chapter contains information about limitations, supported service processor configurations, and installation for IBM Management Processor Command-Line Interface.

Limitations

The command-line interface has the following limitations:

- In Linux, you cannot change the default location of the installation from `/opt/IBMmpcli/`.
- In Linux, you cannot use the Up Arrow and Down Arrow keys to recall a command after you start the command-line interface.

Supported service processor configurations

The command-line interface is supported only on systems with at least one of the following service processors:

- ASM PCI Adapter
- Integrated system management processor (ISMP)
- Management module
- Remote Supervisor Adapter
- Remote Supervisor Adapter II

You must also ensure that the combination of service processor and system type is supported. Additionally, there are different levels of support, depending on your service processor configuration:

- Full
Supports any function available in the server relating to the system-management hardware. The command-line interface will be updated as needed to support any new or unique server functions.
- Compatible
Supports current functions of the command-line interface. There are no plans to support new functions added to the server or command-line interface.
- Service processor configuration
Supports service processor configuration only, because the service processor cannot access the system hardware.

The following tables list the supported configurations of servers and service processors. If your server is not in the list, you can assume that it does not support the command-line interface.

Table 1. Server configurations with full support

Server name	Service processor
BladeCenter	Management module
HS20	Management module
xSeries™ 335	ASM processor
xSeries 360	Remote Supervisor Adapter
xSeries 440	Remote Supervisor Adapter

Table 2. Server configurations with compatible support

Server name	Service processor
Netfinity® 3000	ASM processor
Netfinity 3600	Remote Supervisor Adapter
Netfinity 4100R	ASM processor
	Remote Supervisor Adapter
Netfinity 4500R	ASM processor
Netfinity 5000	ASM processor
Netfinity 5100	ASM processor
Netfinity 5600	ASM processor
Netfinity 5500	ASM processor
Netfinity 5500 M10	ASM processor
Netfinity 5500 M20	ASM processor
Netfinity 6000R	ASM processor
Netfinity 7000 M10	ASM PCI adapter
Netfinity 7100	ASM processor
Netfinity 7600	ASM processor
Netfinity 8500	ASM PCI adapter
xSeries 220	Remote Supervisor Adapter
xSeries 225	Remote Supervisor Adapter
xSeries 230	ASM processor
xSeries 232	ISMP
	Remote Supervisor Adapter
xSeries 235	ISMP
	Remote Supervisor Adapter II
xSeries 240	ASM processor
xSeries 242	ASM processor
xSeries 250	ASM processor
xSeries 255	ISMP
	Remote Supervisor Adapter
	Remote Supervisor Adapter II
xSeries 330	ASM PCI adapter
	Remote Supervisor Adapter
xSeries 335	ISMP
xSeries 340	ASM processor
xSeries 342	ISMP
	Remote Supervisor Adapter
xSeries 345	ISMP
	Remote Supervisor Adapter II
xSeries 350	ASM processor
xSeries 370	ASM PCI adapter
xSeries 450	Remote Supervisor Adapter

Table 3. Server configurations with service processor configuration support

Server name	Service processor
Netfinity 4100R	ASM PCI adapter
Netfinity 4500R	ASM PCI adapter
Netfinity 5000	ASM PCI adapter
Netfinity 5100	ASM PCI adapter
Netfinity 5500 M10	ASM PCI adapter
Netfinity 5500 M20	ASM PCI adapter
Netfinity 5600	ASM PCI adapter
Netfinity 6000R	ASM PCI adapter
Netfinity 7100	ASM PCI adapter
Netfinity 7600	ASM PCI adapter
xSeries 230	ASM PCI adapter
xSeries 240	ASM PCI adapter
xSeries 250	ASM PCI adapter
xSeries 305	Remote Supervisor Adapter
xSeries 330	Remote Supervisor Adapter
xSeries 335	Remote Supervisor Adapter
	Remote Supervisor Adapter II
xSeries 340	ASM PCI adapter
xSeries 350	ASM PCI adapter

There is also limited support for the IBM RXE-100 Remote Expansion Enclosure that enables you to add other devices. See the *RXE-100 Hardware Maintenance Manual* for more information.

Installing the command-line interface

This section provides instructions for installing the command-line interface on the following operating systems:

- Red Hat Linux 2.1 AS, WS, ES
- Red Hat Linux 3.0 AS, WS, ES
- SUSE LINUX 8.0
- Windows 2000 Server
- Windows 2000 Advanced Server
- Windows 2000 Professional
- Microsoft Windows XP Professional
- Microsoft Windows 2003 Standard Edition
- Microsoft Windows 2003 Enterprise Edition

Installing on a Linux operating system

Before you begin the installation, note the following information:

- There is no upgrade path from IBM Management Processor Command-Line Interface for Linux, all releases of version 1 and version 2, to IBM Management

Processor Command-Line Interface, version 3.0. You must uninstall any previous installation by typing the following command at a shell prompt:

```
rpm -e mpcli
```

- If you are not the root user or a member of the root user group, you might not be able to install or uninstall the command-line interface.

Complete the following steps to install the command-line interface:

1. Download the Linux installation file, `mpcli-3.0-1.0.i386.rpm`, from <http://www-3.ibm.com/pc/support/site.wss/document.do?Indocid=MIGR-52058> to a temporary directory.

2. From a shell prompt, type the following command:

```
rpm -ivh mpcli-3.0-1.0.i386.rpm
```

The installation process begins.

3. (Optional) Delete the `mpcli-2.0-1.0.i386.rpm` file to free up disk space.

After the installation is completed, begin using the command-line interface by typing the following command at a shell prompt:

```
/opt/IBMmpcli/bin/MPCLI.bsh
```

Installing on a Windows operating system

You can install the command-line interface using the InstallShield wizard, or you can perform an unattended installation.

After the installation is completed, the command-line interface is available on the Windows **Start** menu. Click **Start** → **Programs** → **IBM** → **MPCLI** to start the program.

InstallShield wizard installation

Complete the following steps to install the command-line interface:

1. Download the Windows installation file, `26r0684.exe`, from <http://www-3.ibm.com/pc/support/site.wss/document.do?Indocid=MIGR-52058> to a temporary directory.
2. Double-click the **26r0684.exe** file. The “Welcome to InstallShield Wizard” window opens.
3. Click **Next**. The “License Agreement” window opens.
4. Click **I accept the terms of this license agreement**, and then click **Next**. The “Customer Information” window opens.
5. Enter the following information:
 - a. In the **User Name** field, type the user ID you are logged on as.
 - b. In the **Organization** field, type the name of your company or organization.
6. From the **Who can use this product** field, click **Anyone** to allow all users to use the command-line interface. Otherwise, click **Only this user**.
7. Click **Next**. The “Installation type window” opens.
8. Click **Complete** to install the command-line interface in the default location. Otherwise, click **Custom** to select a different installation directory.
9. Click **Next**. The “Ready to install” window opens.
10. Click **Install**. The status bar displays the installation progress. When the installation is completed, the “InstallShield Wizard Completed” window opens.
11. Click **Finish**.

Unattended (silent) installation

Complete the following steps to install the command-line interface:

1. Download the Windows installation file, 26r0684.exe, from <http://www-3.ibm.com/pc/support/site.wss/document.do?Indocid=MIGR-52058> to a temporary directory.
2. From a command window, type the following command:

```
d:\tempdir\26r0684.exe /S /v/qn
```

where *d:\tempdir* is the directory where you downloaded the installation file.

In an unattended installation, you do not receive any messages notifying you of the installation status or of its completion.

Chapter 3. Using IBM Management Processor Command-Line Interface

With IBM Management Processor Command-Line Interface you can manage and monitor system health and configuration by logging on to a service processor on a system or connected to a system, query for information about system status, or set parameters for system behavior.

This chapter contains the following information about using the command-line interface:

- Command-line interface guidelines, on page 9
- SMASH command-line protocol support, on page 11
- Starting the command-line interface, on page 11
- Logging on to a service processor, on page 11
- Using command-line interface commands, on page 15
- Using scripts, on page 78

In the **Examples** following the tables, the items in **bold** type are examples only. The parameters that you choose to use will be different.

Command-line interface guidelines

All commands have the following basic structure:

command -option parameter

You can add multiple options to a command on one line to avoid repeating the same command, for example:

command -option1 parameter -option2 parameter -option3 parameter

The information for each option is returned in the order in which it was entered and displayed on separate lines.

Observe the following general guidelines when using the command-line interface:

- Case sensitivity
 - All commands and command options are in lowercase and are case sensitive.

Note: If you receive a Command not found error make sure that you are typing the commands in the correct case; they are case sensitive. For a list of valid commands, type `help-cmd`.

- Boolean and string parameters are not case-sensitive, so you can use lowercase, uppercase, or mixed case. For example, a Boolean parameter set to true could be entered as TRUE, True, true, or any other case variation.
- Data types
 - The following data types are predefined:
 - boolean - A string with the value of either true or false.
 - ipaddress - A formatted string of `xxx.xxx.xxx.xxx`, where `xxx` is a number from 0 to 255.
- Delimiters
 - Options are delimited with a minus sign.

- In a command that requires parameters, a single space is expected between the option and the parameter. Any additional spaces are ignored.
- Multiple parameters
 - Multiple parameters must be separated by commas.
 - Comma-separated parameters may be separated by additional spaces.
- Output format
 - Failed commands generate failure messages consisting of a single line of text in the format `FAILURE: failure_message`.
 - Successful commands are indicated by the message `SUCCESS: command_results`.
- Strings
 - Strings containing spaces must be enclosed in quotation marks, such as in `snmp -contactname "John B. Doe"`; in a string with spaces and no quotation marks, only the first word is recognized.
 - Unless otherwise specified, the maximum string length is 15 characters, including spaces. String values over 15 characters long are truncated.
 - String parameters can be mixed case.

Known problems

The following problems of the command-line interface are known:

- If you are logged on to a remote service processor using an RS-485 interconnect, your connection might be lost after a period of inactivity.
- When using the `setmpclock -gmtoffset` command, if you attempt to use an invalid parameter, outside the range of -12 to +12, a message indicating that the command was successful might be displayed, even though the command was unsuccessful. To avoid this, enter a valid parameter.
- If you are logged on to a Remote Supervisor Adapter and running the command-line interface, and then fail at logging on to an integrated system management processor on an RS-485 interconnect, the command-line interface might lose all functionality. You must restart the command-line interface and log on again.
- In using the `setsmnetwork` command, if you make changes using any of the options, they remain in a pending state even if the `setsmnetwork -enable` command is set to true, which should apply the pending changes. Instead, typing `setsmnetwork -enable true` might return a message indicating that there was a problem sending the command.
- For x455 servers, the `logonlocal` command is not supported.
- On processor blades, the service processor must be restarted before a text ID changed is applied. Whenever the `setmpid` command is used on a blade server, it must be followed by a `restartmp` command to the blade server.
- For ASM service processors, the command `"getvpcd -postbios"` reports an incorrect error and is not supported.
- For the ASM service processors, the `"getlightpath"` command reports an incorrect error and is not supported.

SMASH command-line protocol support

New commands added for the IBM Management Processor Command-Line Interface, version 3.0 release can be issued using either the existing management processor command-line interface syntax, or the SMASH command-line protocol (CLP) syntax. SMASH CLP is an emerging industry standard being developed by a number of vendors (including IBM) via the Distributed Management Task Force (DMTF). For more information on SMASH CLP, please see <http://dmf.org>. The SMASH CLP compliant commands are described in the document in the same sections as the management processor command-line interface commands.

Starting the command-line interface

To start the command-line interface in Linux, type the following command at a shell prompt:

```
/opt/IBMmpcli/bin/MPCLI.bsh
```

Before you start the command-line interface, make sure that you are either the root user or a member of the root user group. If an error is returned when you start the command-line interface, the script file might not have execute permissions. To add execute permissions, type `chmod +x MPCLI.bsh` at a shell prompt.

To start the command-line interface in Windows, click **Start** → **Programs** → **IBM** → **MPCLI**.

Logging on to a service processor

Use the following commands to log on to or log off from a service processor.

Table 4. Logon commands

Function	What it does	Command
Log on in-band (locally)	Log on to the local service processor.	logonlocal
Log on out-of-band using IP	Log on with a host name or IP address.	logonip -hostname <i>IPhost</i> -userid <i>IPuserid</i> -password <i>IPpassword</i> where: <ul style="list-style-type: none">• <i>IPhost</i> is the domain name system (DNS) or IP address of the host• <i>IPuserid</i> is a user ID with administrative privileges• <i>IPpassword</i> is the password for the user ID

Table 4. Logon commands (continued)

Function	What it does	Command
Log on out-of-band using RS-485	<p>Log on to an RS-485 interconnect. Before you can log on to a system on the RS-485 interconnect, you must:</p> <ol style="list-style-type: none"> 1. Log on to a gateway service processor using either the <code>logonip</code> or <code>logonlocal</code> command. Make sure that the system is connected to this service processor with an RS-485 connection. 2. Detect the systems using the RS-485 interconnect network by typing the following command: <code>logonrs485 -query</code> 	<p>There are two command options:</p> <ul style="list-style-type: none"> • <code>logonrs485 -index <i>RSindex</i> -userid <i>RSuserid</i> -password <i>RSpassword</i></code> • <code>logonrs485 -name <i>RSname</i> -userid <i>RSuserid</i> -password <i>RSpassword</i></code> <p>where:</p> <ul style="list-style-type: none"> • <i>RSindex</i> is the number of the system the <code>-query</code> command returned • <i>RSname</i> is the name for the service processor • <i>RSuserid</i> is a user ID with administrative privileges • <i>RSpassword</i> is the password for the user ID
Log on to an RXE-100 expansion unit	Log on to an RXE-100 expansion unit.	<code>logonrx -index</code>
Get service processors on RS-485 bus	Returns a list of service processors that share the RS-485 bus with the current service processor.	<code>logonrs485 -query</code>
Get information about service processors on RS-485 bus	Returns information about service processors that share the RS-485 bus with the current service processor.	<p><code>logonrs485 -query <i>querytype</i></code></p> <p>where <i>querytype</i> can have the following values:</p> <ul style="list-style-type: none"> • <code>count</code>: returns the number of service processors on the RS-485 bus. • <code>list</code>: displays information about the service processors with one line of information for each service processor • <code>long</code>: displays information about the service processors with multiple lines of information for each service processor
Get RXE-100 expansion units	Returns a list of RXE-100 expansion units attached to the system.	<code>logonrx -query</code>

Table 4. Logon commands (continued)

Function	What it does	Command
Log off from a service processor	Log off from the current session and disconnect from the service processor. If multiple sessions were initiated, any previous sessions are still active after the current session is terminated.	logoff
Find last login	Display the last login command.	whoami

Notes:

1. To log on to a service processor using the logonrs485 command, you must first log on to a gateway service processor using either the logonip or logonlocal command.
2. The logonrs485 command options -index and -name specify which service processor to log on to. Use only one of these options for each logon. Also, if you are logging on to an ISMP service processor, the -userid and -password options are not necessary.
3. Multiple logins to other service processors are allowed; however, all commands that are issued affect the most recently accessed service processor until another service processor is accessed or the logoff command is issued.
4. The SLIM Port Busy message gives more thorough information when a connection is unavailable. It differentiates between a busy SLIM port and entry of the wrong connection parameters (IP address, user ID, password).

When a logonip command fails, a check is made to see if the connection can be made using the HTTP port. If this connection is established, the output from the failed logonip command indicates that the SLIM port is busy. If a connection cannot be made using the HTTP port, the output from the failed logonip command indicates that the login parameters are incorrect.

Examples:

- To log on out-of-band with an RS-485 interconnect using a local gateway service processor, type


```
logonlocal
logonrs485 -query
logonrs485 -name batman -userid GayleM -password acegEGBDF
```
- To log on out-of-band with an IP connection, type


```
logonip -hostname 168.1.101.100 -userid italia -password teramo
```

Managing the command-line interface

Use these commands to control the behavior of the command-line interface. They affect the output and function of the application but do not directly affect the service processor.

Table 5. Application-control commands

Function	What it does	Command
Get help	Returns the available help commands.	help
	Returns the application control, logon, and logoff commands.	help-cli
	Returns all the commands you can use after logging onto a service processor.	help-cmd
	Returns all the options for the specified command.	help-cmd <i>commandname</i> where <i>commandname</i> is the name of a command.
Get debugging information	Provides additional debugging information, such as more detail on a command success or failure. By default, verbose is off.	verbose Typing verbose toggles debugging information on or off.
Enter sleep mode	Allows the main execution thread to enter sleep mode.	sleep <i>milliseconds</i> where <i>milliseconds</i> is the number of milliseconds the application is in sleep mode.
Exit command-line interface	Closes the connection to the service processor and exits the program.	exit
Group commands	Toggles the grouping of commands within a logon/logoff block. When connectionblocks are enabled, if a logon is unsuccessful, all commands will be ignored until a logoff is detected. This is feature is primarily used for scripting.	connectionblocks

Examples:

- To query the commands you can use after logging into a service processor, type
`help-cmd`
- To query the options for a specific command, type
`help-cmd setalertcommon`

Using command-line interface commands

This section contains command function and usage information and examples. It is divided into the following subsections:

- BladeCenter unit commands, on page 15
- Network interface commands, on page 27
- Serial port configuration commands, on page 37
- Service processor configuration commands, on page 42
- Service processor event commands, on page 51
- System power commands, on page 61
- System component commands, on page 67
- System health and environment commands, on page 74
- System statistics commands, on page 65

BladeCenter unit commands

Use these commands to read and configure BladeCenter-unit-supported functions.

Management module failover commands

These commands enable or disable failover of the management module.

Table 6. Management module failover commands

Function	What it does	Command
Get failover information	Returns whether management module failover is enabled.	<code>getmmfo</code>
Enable failover	Enables management module failover immediately.	<code>setmmfo -enable</code>
Disable failover	Disables management module failover for the specified number of seconds.	<code>setmmfo -disable <i>seconds</i></code> where <i>seconds</i> is the number of seconds for disabling failover.

Example:

To disable management module failover for 4 minutes, type

`setmmfo -disable 240`

Universal serial bus (USB) configuration commands

These commands display and set USB configuration.

Table 7. USB configuration commands

Function	What it does	Command
Get USB configuration	Returns the USB configuration.	getusb
	Returns the blade server that owns the USB.	getusb -owner
	Returns the last time USB ownership was assigned.	getusb -assigntime
Set USB owner	Assigns USB ownership to a blade server.	setusb -owner <i>bladeserver</i> where <i>bladeserver</i> is the number (1 - 14) of the blade server you want to own the USB.
Park USB	Prevents any blade server from owning the USB.	setusb -park

Examples:

- To query for the blade server that owns the USB and the last time an owner was assigned, type
getusb -owner -assigntime
- To assign ownership of the USB to the third blade server, type
setusb -owner 3

Serial over LAN

View and configure Serial over LAN (SOL) function for the management module using these commands.

Table 8. SOL commands

Function	What it does	Command
Get SOL status	Returns all SOL settings.	getsol
	Returns global SOL status (enabled or disabled).	getsol -status
	Returns the SOL VLAN ID.	getsol -vlanid
	Returns the SOL blade server management processor (BSMP) IP address range. The IP address specified is for the blade server in blade bay 1. The IP addresses for the remaining blade servers will have the same IP address, with the blade bay number of each added to the last byte of the BSMP IP address.	getsol -bsmpips
	Returns the SOL accumulate timeout.	getsol -accumtmo
	Returns the SOL send threshold.	getsol -sendthresh
	Returns the SOL retry count.	getsol -retrycnt
Returns the SOL retry interval.	getsol -retryint	

Table 8. SOL commands (continued)

Function	What it does	Command
Configure SOL	Enable or disable global SOL status.	setsol -enable <i>boolean</i> where <i>boolean</i> is true (enable) or false (disable).
	Set the SOL VLAN ID.	setsol -vlanid <i>vlanid</i> where <i>vlanid</i> is an integer.
	Set the SOL blade server management processor (BSMP) IP address. The IP address specified is for the blade server in blade bay 1. The IP addresses for the remaining blade servers will have the same IP address, with the blade bay number of each added to the last byte of the BSMP IP address.	setsol -bsmpips <i>ipaddress</i> where <i>ipaddress</i> is a valid IP address.
	Set the SOL accumulate timeout.	setsol -accumto <i>timeout</i> where <i>timeout</i> is an integer.
	Set the SOL send threshold.	setsol -sendthresh <i>threshold</i> where <i>threshold</i> is an integer.
	Set the SOL retry count.	setsol -retrycnt <i>count</i> where <i>count</i> is an integer.
	Set the SOL retry interval.	setsol -retryint <i>interval</i> where <i>interval</i> is an integer.

You can view and configure SOL settings also by using the following SMASH CLP compliant commands:

- To view all SOL properties for the management module using the SMASH CLP syntax, type:
`show /sol`
- To set the SOL retry count using the SMASH CLP syntax, type:
`set /sol retrycnt=count`
where *count* is the retry count that you are setting.

Note: All SOL properties are set using this command syntax. Only one property can be set each time a command is entered.

Examples:

- To view all SOL properties from the command-line interface, type:
`getsol`
- To set the SOL retry count to 3 from the command-line interface, type:
`setsol -retrycnt 3`

Keyboard, video, and mouse configuration commands

These commands display and set the keyboard, video, and mouse (KVM) configuration.

Table 9. KVM configuration commands

Function	What it does	Command
Get KVM configuration	Returns the KVM configuration.	getkvm
	Returns the blade server that owns the KVM.	getkvm -owner
	Returns the last time KVM ownership was assigned.	getkvm -assigntime
Assign KVM owner	Assigns KVM ownership to a blade server.	setkvm -owner <i>bladeserver</i> where <i>bladeserver</i> is the number (1 - 14) of the blade server you want to own the KVM.
Park KVM	Prevents any blade server from owning the KVM.	setkvm -park

Examples:

- To query for the blade server that owns the KVM and the last time an owner was assigned, type
getkvm -owner -assigntime
- To assign ownership of the KVM to the third blade server, type
setkvm -owner 3

Blade server start-option configuration commands

These commands display and set the blade server start-option configuration.

Table 10. Blade server start-option configuration commands

Function	What it does	Command
Get start options	Returns the start sequence for the specified blade server.	<code>getbootoptions -blade <i>bladenum</i></code> where <i>bladenum</i> is the number of the blade server.
Set start sequence	Sets the start sequence for the specified blade server.	<code>setbootoptions -options <i>bladenum</i>, <i>bootsequence</i></code> where <ul style="list-style-type: none">• <i>bladenum</i> is the number of the blade server.• <i>bootsequence</i> can be any of the following and in any order, separated by commas and enclosed in double quotation marks:<ul style="list-style-type: none">– hdd1– hdd2– cdrom– floppy– pxe
Delete start sequence	Delete the start sequence for the specified blade server.	<code>setbootoptions -clear <i>bladenum</i></code> where <i>bladenum</i> is the number of the blade server.

Examples:

- To set the start sequence for the seventh blade server, type
`setbootoptions -options -blade 7, "hdd1,cdrom,floppy"`
- To delete the start sequence for the eighth blade server, type
`setbootoptions -clear 8`

Blade server policy commands

These commands display and set the blade server policy settings.

Table 11. Blade server policy commands

Function	What it does	Command
Get blade server policies	Returns the policy settings for all blade servers.	getpbpolicy
	Returns whether the specified blade server is enabled for local power control.	getpbpolicy -localpower <i>bladenum</i> where <i>bladenum</i> is the number of the blade server.
	Returns whether the specified blade server is enabled for local KVM control.	getpbpolicy -localkvm <i>bladenum</i> where <i>bladenum</i> is the number of the blade server.
	Returns whether the specified blade server is enabled for local USB control.	getpbpolicy -localusb <i>bladenum</i> where <i>bladenum</i> is the number of the blade server.
	Returns whether the specified blade server is enabled for the Wake on LAN [®] feature.	getpbpolicy -wol <i>bladenum</i> where <i>bladenum</i> is the number of the blade server.
Enable or disable KVM control	Enables or disables local KVM control for the specified blade server.	setpbpolicy -localkvm <i>bladenum, enableflag</i> where <ul style="list-style-type: none"> • <i>bladenum</i> is the number of the blade server. • <i>enableflag</i> is true to enable local KVM control or false to disable.
	Enables or disables local KVM control for all blade servers.	setpbpolicy -localkvmall <i>enableflag</i> where <i>enableflag</i> is true to enable local KVM control or false to disable.

Table 11. Blade server policy commands (continued)

Function	What it does	Command
Enable or disable power control	Enables or disables local power control for the specified blade server.	setpbpolicy -localpower <i>bladenum</i> , <i>enableflag</i> where <ul style="list-style-type: none"> • <i>bladenum</i> is the number of the blade server. • <i>enableflag</i> is true to enable local power control or false to disable.
	Enables or disables local power control for all blade servers.	setpbpolicy -localpowerall <i>enableflag</i> where <i>enableflag</i> is true to enable local power control or false to disable.
Enable or disable USB control	Enables or disables local USB control for the specified blade server.	setpbpolicy -localusb <i>bladenum</i> , <i>enableflag</i> where <ul style="list-style-type: none"> • <i>bladenum</i> is the number of the blade server. • <i>enableflag</i> is true to enable local USB control or false to disable.
	Enables or disables local USB control for all blade servers.	setpbpolicy -localusball <i>enableflag</i> where <i>enableflag</i> is true to enable local USB control or false to disable.
Enable or disable Wake on LAN	Enables or disables the Wake on LAN feature for the specified blade server.	setpbpolicy -wol <i>bladenum</i> , <i>enableflag</i> where <ul style="list-style-type: none"> • <i>bladenum</i> is the number of the blade server. • <i>enableflag</i> is true to enable Wake on LAN or false to disable.

Examples:

- To enable local power control on all blade servers, type
setpbpolicy -localpowerall **true**
- To query the power policy for the eighth blade server, type
getpbpolicy -localpower **8**
- To enable the third blade server for the Wake on LAN feature, type
setpbpolicy -wol **3, true**

Switch module configuration commands

These commands display and set switch module configuration settings.

Table 12. Switch module configuration commands

Function	What it does	Command
Get configuration	Returns the current configuration of the specified switch module.	getsmnetwork -currentconfig <i>switch</i> where <i>switch</i> is the number of the switch module.
Get configuration method	Returns the current configuration method of the specified switch module. Valid values are static, dhcp, or bootip.	getsmnetwork -currentmethod <i>switch</i> where <i>switch</i> is the number of the switch module.
Get pending configuration	Returns the pending configuration of the specified switch module.	getsmnetwork -pendingconfig <i>switch</i> where <i>switch</i> is the number of the switch module.
Get pending configuration method	Returns the pending configuration method of the specified switch module.	getsmnetwork -pendingmethod <i>switch</i> where <i>switch</i> is the number of the switch module.
Set IP address	Sets the IP address of the specified switch module.	setsmnetwork -ipaddress <i>switch, ipaddress</i> where: <ul style="list-style-type: none"> • <i>switch</i> is the number of the switch module. • <i>ipaddress</i> is the IP address of the switch module.
Set gateway	Sets the gateway of the specified switch module.	setsmnetwork -gateway <i>switch, ipaddress</i> where: <ul style="list-style-type: none"> • <i>switch</i> is the number of the switch module. • <i>ipaddress</i> is the IP address of the gateway.
Set subnet mask	Sets the subnet mask of the specified switch module.	setsmnetwork -subnet <i>switch, ipaddress</i> where: <ul style="list-style-type: none"> • <i>switch</i> is the number of the switch module. • <i>ipaddress</i> is the IP address of the subnet mask.
Set configuration method	Sets the configuration method of the specified switch module.	setsmnetwork -method <i>switch, configmethod</i> where: <ul style="list-style-type: none"> • <i>switch</i> is the number of the switch module. • <i>configmethod</i> is one of the following configuration methods: <ul style="list-style-type: none"> – static – dhcp – bootip

Table 12. Switch module configuration commands (continued)

Function	What it does	Command
Apply pending	Sets the pending configuration changes for the specified switch module. It is valid only with other options.	setsmnetwork -pending <i>switch</i> , <i>enableflag</i> where: <ul style="list-style-type: none"> • <i>switch</i> is the number of the switch module. • <i>enableflag</i> true to enable pending changes or false to disable.
	Sets the specified switch module to enable or disable applying changes made to other setsmnetwork options. Note: Before making any changes to the switch module configuration, you must disable applying changes. Then, after making configuration changes, you must enable to apply those changes.	setsmnetwork -enable <i>switch</i> , <i>enableflag</i> where: <ul style="list-style-type: none"> • <i>switch</i> is the number of the switch module. • <i>enableflag</i> true to enable applying changes or false to disable.
Get power status	Returns whether the specified switch module is on.	getswitchmodule -poweron <i>switch</i> where <i>switch</i> is the number of the switch module.
Get memory diagnostics status	Returns whether the memory diagnostics for the specified switch module are on.	getswitchmodule -memdiagson <i>switch</i> where <i>switch</i> is the number of the switch module.
Get port status	Returns whether other ports are enabled for the specified switch module.	getswitchmodule -cfgotherports <i>switch</i> where <i>switch</i> is the number of the switch module.
	Returns whether external ports are enabled for the specified switch module.	getswitchmodule -extportson <i>switch</i> where <i>switch</i> is the number of the switch module.
Get switch presence	Returns whether the specified switch module is present.	getswitchmodule -ping <i>switch</i> where <i>switch</i> is the number of the switch module.
Get POST status	Returns the results of the last POST for the specified switch module.	getswitchmodule -postresults <i>switch</i> where <i>switch</i> is the number of the switch module.
Set power enablement	Turns on or off the specified switch module.	setswitchmodule -poweron <i>switch</i> , <i>enableflag</i> where: <ul style="list-style-type: none"> • <i>switch</i> is the number of the switch module. • <i>enableflag</i> is true to enable turning on the switch module and false to disable.

Table 12. Switch module configuration commands (continued)

Function	What it does	Command
Memory diagnostics	Enables or disables the memory diagnostics for the specified switch module.	setswitchmodule -memdiagson <i>switch</i> , <i>enableflag</i> where: <ul style="list-style-type: none"> • <i>switch</i> is the number of the switch module. • <i>enableflag</i> is true to enable memory diagnostics and false to disable.
Other ports	Enables or disables other ports for the specified switch module.	setswitchmodule -cfgootherports <i>switch</i> , <i>enableflag</i> where: <ul style="list-style-type: none"> • <i>switch</i> is the number of the switch module. • <i>enableflag</i> is true to enable other ports and false to disable.
External ports	Enables or disables external ports for the specified switch module.	setswitchmodule -extportson <i>switch</i> , <i>enableflag</i> where: <ul style="list-style-type: none"> • <i>switch</i> is the number of the switch module. • <i>enableflag</i> is true to enable external ports and false to disable.
Restart	Restarts the specified switch module.	setswitchmodule -reboot <i>switch</i> where <i>switch</i> is the number of the switch module.
Reset configuration	Resets the configuration of the specified switch module.	setswitchmodule -resetconfig <i>switch</i> where <i>switch</i> is the number of the switch module.

Examples:

- To set the IP address, gateway, and subnet mask and to choose a configuration method for the third switch module, type the following (all on one line)

```
setsmnetwork -ipaddress 3,203.1.168.9 -gateway 3,203.1.168.10  
-subnet 3,255.255.255.0 -method 3,static
```
- To enable memory diagnostics and enable other ports for the third switch module, type

```
setswitchmodule -memdiagson 3,true -cfgootherports 3,true
```

BladeCenter unit topology command

This command displays the topology of the BladeCenter unit.

Table 13. BladeCenter unit topology command

Function	What it does	Command
Get all component information	Returns all BladeCenter unit component information.	gettopology
Get supported components	Returns the maximum number of supported blade servers.	gettopology -pbsupported
	Returns the maximum number of supported switch modules.	gettopology -smsupported
	Returns the maximum number of supported management modules.	gettopology -mmsupported
	Returns the maximum number of supported power supplies.	gettopology -pssupported
	Returns the maximum number of supported fans.	gettopology -bmsupported
Get how many components are installed	Returns the number of installed blade servers.	gettopology -pbcount
	Returns information about blade server assemblies (blade server and blade expansion unit combinations) installed in the BladeCenter unit.	gettopology -assemblies <i>bladenum</i> where <i>bladenum</i> is the number of the blade server.
	Returns the number of installed switch modules.	gettopology -smcount
	Returns the number of installed management modules.	gettopology -mmcount
	Returns the number of installed power supplies.	gettopology -pscount
	Returns the number of installed fans.	gettopology -bmcount
Get which components are installed	Returns which blade servers are installed.	gettopology -pbinstalled
	Returns which switch modules are installed.	gettopology -sminstalled
	Returns which management modules are installed.	gettopology -mminstalled
	Returns which power supplies are installed.	gettopology -psinstalled
	Returns which fans are installed.	gettopology -bminstalled

Examples:

- To query how many blade servers, switch modules, and management modules are installed in a BladeCenter unit, type
gettopology -pbcount -smcount -mmcount
- To query how many power supplies are supported in the BladeCenter unit and how many are installed, type
gettopology -pssupported -psinstalled

BladeCenter unit VPD command

This command displays the BladeCenter unit VPD.

Table 14. BladeCenter unit VPD command

Function	What it does	Command
Get all VPD	Returns all VPD for the BladeCenter unit.	getbladecentervpd
Get component VPD	Returns the VPD for the specified switch module.	getbladecentervpd -switchmodule <i>switchnum</i> where <i>switchnum</i> is the number of the switch.
	Returns the VPD for the midplane.	getbladecentervpd -midplane
	Returns the VPD for the front panel.	getbladecentervpd -frontpanel
	Returns the VPD for the specified power supply.	getbladecentervpd -powersupply <i>powernum</i> where <i>powernum</i> is the number of the power supply.
	Returns the VPD for the specified blade server.	getbladecentervpd -processorblade <i>bladenum</i> where <i>bladenum</i> is the number of the blade server.
	Returns the VPD for the specified management module.	getbladecentervpd -mgmtmodule <i>mm</i> where <i>mm</i> is the number of the management module.

Examples:

- To get the VPD for the eighth blade server and the second management module, type the following (all on one line)
getbladecentervpd -processorblade 8 -mgmtmodule 2
- To get the VPD for the midplane, front panel, and the third power supply, type
getbladecentervpd -midplane -frontpanel -powersupply 3

Network interface commands

The network interface commands are used to configure network protocols and hardware such as SNMP, PPP, IP, network hardware, Dynamic Host Configuration Protocol (DHCP), and DNS.

SNMP configuration commands

These commands read and configure the SNMP interface of the service processor. For more information about service processor SNMP configuration, see the applicable xSeries *User's Guides*.

Table 15. SNMP configuration commands

Function	What it does	Command
Get basic SNMP configuration	Returns the SNMP configuration.	getsnmp If no option is added, the command returns whether agent or traps are enabled and the contact name and location.
	Returns the ID for the system location.	getsnmp -contactlocation
	Returns the ID for the system contact name.	getsnmp -contactname
	Returns whether SNMP traps are enabled.	getsnmp -traps
	Returns whether the SNMP agent is enabled.	getsnmp -agent
	Returns the name for the specified community. There are three user-defined communities available.	getsnmp -communityname <i>commnum</i> where <i>commnum</i> indicates which community.
Get IP address	Returns the IP address for the specified community.	getsnmp -ipaddress <i>commnum, commIPnum</i> where: <ul style="list-style-type: none"> • <i>commnum</i> indicates which community. • <i>commIPnum</i> indicates whether this is the first, second, or third IP address for the community.
Get host name	Returns the host name for the specified community.	getsnmp -hostname <i>commnum, commIPnum</i> where: <ul style="list-style-type: none"> • <i>commnum</i> indicates which community. • <i>commIPnum</i> indicates whether this is the first, second, or third IP address for the community.

Table 15. SNMP configuration commands (continued)

Function	What it does	Command
Set basic SNMP configuration	Sets the system location.	setsnmp -contactlocation <i>location</i> where <i>location</i> is the system location.
	Sets the system contact name.	setsnmp -contactname <i>name</i> where <i>name</i> is the system contact name.
	Enables or disables the SNMP traps sent by the service processor. Valid values are true and false.	setsnmp -traps <i>enableflag</i> where <i>enableflag</i> is true to enable sending SNMP traps or false to disable sending SNMP traps.
	Enables or disables the service processor SNMP agent. Valid values are true and false.	setsnmp -agent <i>enableflag</i> where <i>enableflag</i> is true to enable the SNMP agent or false to disable the SNMP agent.
Set community name	Sets the specified community name.	setsnmp -communityname <i>commnum, commname</i> where: <ul style="list-style-type: none"> • <i>commnum</i> indicates which community. • <i>commname</i> is the community name.
Set IP address	Sets an IP address for the specified SNMP community.	setsnmp -ipaddress <i>commnum, commIPnum, xxx.xxx.xxx.xxx</i> where: <ul style="list-style-type: none"> • <i>commnum</i> indicates which community. • <i>commIPnum</i> indicates whether this is the first, second, or third IP address for the community. • <i>xxx.xxx.xxx.xxx</i> is the IP address you want to assign.

Table 15. SNMP configuration commands (continued)

Function	What it does	Command
Set host name	Sets the host name for the specified SNMP community.	<pre>setsnmp -hostname commnum, commIPnum, hostname</pre> <p>where:</p> <ul style="list-style-type: none"> • <i>commnum</i> indicates which community. • <i>commIPnum</i> indicates whether this is the first, second, or third IP address for the community. • <i>hostname</i> is the host name you want to assign.

Examples:

- To return the first SNMP community name, type

```
getsnmp -communityname 1
```
- To enable the SNMP agent and sending of SNMP traps, type

```
setsnmp -traps true -agent true
```
- There are three user-defined SNMP communities, and each community can have three user-defined locations (IP address or host name). To set the host name and IP address for the second location of the second SNMP community, type

```
setsnmp -hostname 2,2,batman -ipaddress 2,2,198.1.100.101
```

PPP configuration commands

These commands are supported only on the xSeries 220 server. These commands read and configure the PPP interface of the service processor. For more information about service processor PPP configuration, see the applicable xSeries *User's Guides*.

Table 16. PPP configuration commands

Function	What it does	Command
Get PPP configuration	Returns all PPP configuration information.	getppp
	Returns whether PPP configuration is enabled.	getppp -enabled
	Returns the IP address assigned to the client-side of the network connection.	getppp -remoteip
	Returns the IP address assigned to the service processor-side of the network connection.	getppp -serverip
	Returns the IP address assigned as the subnet mask.	getppp -subnet
	Returns the PPP protocol type, as represented by integers: <ul style="list-style-type: none"> • 1 = PAP • 2 = CHAP • 3 = CHAP then PAP 	getppp -protocol
Set PPP configuration	Enables or disables PPP configuration.	setppp -enabled <i>enableflag</i> where <i>enableflag</i> is true to enable PPP configuration or false to disable PPP configuration.
	Sets the IP address for the client-side of the network connection.	setppp -remoteip <i>xxx.xxx.xxx.xxx</i> where <i>xxx.xxx.xxx.xxx</i> is the client-side IP address.
	Sets the IP address for the service processor side of the network connection.	setppp -serverip <i>xxx.xxx.xxx.xxx</i> where <i>xxx.xxx.xxx.xxx</i> is the server-side IP address.
	Sets the PPP subnet mask.	setppp -subnet <i>xxx.xxx.xxx.xxx</i> where <i>xxx.xxx.xxx.xxx</i> is the subnet mask.
	Sets the PPP protocol type, as represented by an integer.	setppp -protocol <i>protocoltype</i> where <i>protocoltype</i> is 1, 2, or 3: <ul style="list-style-type: none"> • 1 = PAP • 2 = CHAP • 3 = CHAP then PAP

Examples:

- To query the IP address, subnet mask, and protocol type of the PPP configuration, type

```
getppp -serverip -subnet -protocol
```
- To enable PPP configuration, set the client-side and service-processor-side IP addresses, and set CHAP then PAP as the protocol, type

```
setppp -enabled true -remoteip 198.1.100.135 -serverip 168.1.100.101 -protocol 3
```

Static IP configuration commands

These commands read and configure the static IP protocol of the service processor. For more information about service processor IP configuration, see the applicable xSeries *User's Guides*.

Table 17. Static IP configuration commands

Function	What it does	Command
Get static IP configuration	Returns the IP configuration, such as host name, IP address, subnet mask, gateway address, and connection type (static or DHCP).	getip If an option is not added, the command returns the static IP configuration of the primary interface.
	<i>For ASM PCI systems and BladeCenter management module only.</i> Returns the IP configuration of specified interface. For the management module, interface 1 represents the external Ethernet interface and interface 2 represents the internal Ethernet interface.	getip -interface <i>index</i> where <i>index</i> is the index number of the interface.
	<i>Cannot be used on ASM PCI systems.</i> Returns the IP configuration of the active interface, such as host name, IP address, subnet mask, gateway address, connection type (static or DHCP), and DHCP configuration if DHCP is the connection type.	getip -active

Table 17. Static IP configuration commands (continued)

Function	What it does	Command
Set static IP configuration	Sets the host name for the service processor.	<pre>setip -interface <i>index</i> -hostname <i>hostname</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>hostname</i> is name you want to assign to the service processor.
	Set IP address of the service processor.	<pre>setip -interface <i>index</i> -ipaddress <i>xxx.xxx.xxx.xxx</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>xxx.xxx.xxx.xxx</i> is the IP address.
	Sets the IP address of the gateway used by the service processor.	<pre>setip -interface <i>index</i> -gateway <i>xxx.xxx.xxx.xxx</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>xxx.xxx.xxx.xxx</i> is the IP address.
	Sets the IP address of the subnet mask.	<pre>setip -interface <i>index</i> -subnet <i>xxx.xxx.xxx.xxx</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>xxx.xxx.xxx.xxx</i> is the IP address <p>..</p>
	Sets the IP configuration type.	<pre>setip -interface <i>index</i> -method <i>configtype</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>configtype</i> is: <ul style="list-style-type: none"> – Static – DHCP – DHCPStatic

Examples:

- To query all IP configuration details, type
`getip`
- To set the IP host name, IP address, gateway, and subnet mask, type the following (all on one line)
`setipaddress -interface 1 -hostname batman -ipaddress 186.1.111.6
-gateway 130.10.115.100 -subnet 168.1.100.101`

Network hardware configuration commands

These commands read or enable attributes of the network hardware configuration of the service processor. For more information about service processor network hardware configuration, see the applicable xSeries *User's Guides*.

Table 18. Network hardware configuration commands

Function	What it does	Command
Get network hardware configuration	Returns the network hardware configuration for the specified interface.	<code>getnethw -interface <i>index</i></code> where <i>index</i> is the index number of the interface.
	Returns data for all getnethw options for the specified interface.	<code>getnethw -interface <i>index</i> -all</code> where <i>index</i> is the index number of the interface.
Get line type	<i>This is an ASM PCI option only.</i> Returns the type of hardware media for the specified interface. Valid values are: <ul style="list-style-type: none">• ENET for Ethernet• TR for Token Ring	<code>getnethw -interface <i>index</i> -linetype</code> where <i>index</i> is the index number of the interface.
Get interface status	Returns whether the specified interface is enabled or disabled. Only one interface can be enabled at a time.	<code>getnethw -interface <i>index</i> -enabled</code> where <i>index</i> is the index number of the interface.
Get data rate	Returns the data rate of the specified interface. Valid values are: <ul style="list-style-type: none">• Auto, 10m, or 100m for Ethernet• Auto, 4m, or 16m for Token Ring	<code>getnethw -interface <i>index</i> -datarate</code> where <i>index</i> is the index number of the interface.
Get duplex mode	Returns the duplex mode of the specified interface. Valid values are: <ul style="list-style-type: none">• Auto• Half• Full	<code>getnethw -interface <i>index</i> -duplex</code> where <i>index</i> is the index number of the interface.
Get MAC address	Returns the network-administrator-assigned MAC address, in the [xx xx xx xx xx] format, for the specified interface.	<code>getnethw -interface <i>index</i> -adminmac</code> where <i>index</i> is the index number of the interface.

Table 18. Network hardware configuration commands (continued)

Function	What it does	Command
Get MTU	Returns the maximum transmission unit (MTU) for this network segment.	getnethw -interface <i>index</i> -mtu where <i>index</i> is the index number of the interface.
Get routing bytes	Returns whether routing bytes for the specified interface are enabled if the line type is Token Ring.	getnethw -interface <i>index</i> -routingbytes where <i>index</i> is the index number of the interface.
Get burned MAC	Returns the MAC address burned into the ROM of the network interface card (NIC).	getnethw -interface <i>index</i> -burnedmac where <i>index</i> is the index number of the interface.
Set interface index	Sets the network hardware configuration index entry.	setnethw -interface <i>index</i> where <i>index</i> is the index number of the interface.
Set line type	<i>This is an ASM PCI option only.</i> Sets the type of hardware media for the specified interface.	setnethw -interface <i>index</i> -linetype <i>linetype</i> where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>linetype</i> is ENET for Ethernet or TR for Token Ring.
Enable or disable interface	Enables or disables the specified interface. Only one interface can be enabled at a time.	setnethw -interface <i>index</i> -enableflag where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>enableflag</i> is true to enable the interface or false to disable the interface.
Set data rate	Set the data rate for the specified interface.	setnethw -interface <i>index</i> -datarate <i>datarate</i> where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>datarate</i> is <ul style="list-style-type: none"> – Auto, 10m, or 100m for Ethernet – Auto, 4m, or 16m for Token Ring

Table 18. Network hardware configuration commands (continued)

Function	What it does	Command
Set duplex mode	Sets the duplex mode for the specified interface.	<pre>setnethw -interface <i>index</i> -duplex <i>duplexmode</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>duplexmode</i> is Auto, Full, or Half.
Set MAC address	Sets the network-administrator-assigned MAC address for the specified interface. To use the hardware MAC address, specify 00.00.00.00.00.00 for the adminmac value.	<pre>setnethw -interface <i>index</i> -adminmac <i>xx xx xx xx xx xx</i> <i>xx</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>xx xx xx xx xx xx</i> is the administrator-assigned MAC address.
Set MTU	Sets the MTU for this network segment.	<pre>setnethw -interface <i>index</i> -mtu <i>mtunum</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>mtunum</i> is the MTU for this network segment.
Enable or disable routing bytes	Enables or disables the routing bytes for the specified interface if the line type is Token Ring.	<pre>setnethw -interface <i>index</i> -routingbytes <i>rbytes</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the interface. • <i>rbytes</i> is true to enable routing bytes or false to disable them.

Examples:

- To enable interface 1 and set its data rate to Auto, type

```
setnethw -interface 1 -enabled true -datarate Auto
```
- To set the network-administrator-assigned MAC address for interface 1, type

```
setnethw -interface 1 -adminmac "00 00 00 00 00 00"
```

DHCP configuration commands

These commands read DHCP configuration of the service processor. For more information about service processor DHCP configuration, see the applicable xSeries *User's Guides*.

Table 19. DHCP configuration commands

Function	What it does	Command
Get DHCP configuration	Returns the DHCP configuration of the service processor.	getdhcp
Set DHCP configuration	Sets whether DHCP configuration is enabled.	setdhcp -enabled <i>enableflag</i> where <i>enableflag</i> is true to enable DHCP or false to disable.

Example:

- To enable DHCP configuration, type
`setdhcp -enable True`

DNS configuration commands

These commands configure the DNS client of the service processor. You can have up to four static IP address-to-host-name mappings without having a DNS server present.

Table 20. DNS configuration commands

Function	What it does	Command
Get DNS configuration	Returns the DNS client configuration.	getdns
	Returns the static mapping of the specified system.	getdns -mapping <i>ipaddressorhost</i> where <i>ipaddressorhost</i> is the system IP address or host name.
	Returns whether DNS is configured. Valid values are true and false.	getdns -enabled
	Returns the IP address of the specified DNS server.	getdns -server <i>ipaddress</i> where <i>ipaddress</i> is the IP address of the DNS server.
Enable or disable DNS client	Enables or disables the DNS client.	setdns -enabled <i>enableflag</i> where <i>enableflag</i> is true to enable the DNS client or false to disable.

Table 20. DNS configuration commands (continued)

Function	What it does	Command
Set DNS IP address	Sets the IP address of the specified DNS server.	<pre>setdns -server <i>ipaddress</i>, <i>servernum</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>ipaddress</i> is the IP address. • <i>servernum</i> is: <ul style="list-style-type: none"> – 1 for the primary server – 2 for the secondary server – 3 for the tertiary server
Set IP address to host name mapping	Set the static mapping of an IP address to a host name when there is no DNS server.	<pre>setdns -mapping <i>mappingnum</i>, <i>ipaddress</i>, <i>hostname</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>mappingnum</i> is the mapping number. • <i>ipaddress</i> is the IP address. • <i>hostname</i> is the host name of the DNS server.

Examples:

- To clear the third static mapping by specifying blank parameters, type

```
setdns -mapping 3,"",""
```
- To set the second static DNS map for an IP address and host name, type

```
setdns -mapping 2,33.12.125.89,batman
```

Serial port configuration commands

These commands enable read and write access to both hardware and software configurations of a serial port. For more information about service processor serial port configurations, see the applicable xSeries *User's Guides*.

Serial port software configuration commands

These commands read and set the software configuration of the serial port.

Table 21. Serial port software configuration commands

Function	What it does	Command
Get serial port software configuration	Returns the software configuration of the serial port.	getcomsw If no option is added, the command returns the configuration of serial port one.
	Returns whether dial-in access using the serial port is enabled. Values are true and false.	getcomsw -dialinenabled
	Returns whether the service processor owns the serial port that it shares with the operating system on startup. Values are true and false.	getcomsw -own
	Returns the number of seconds that must elapse between successive logins.	getcomsw -tamperdelay
Set dial-in access	Enables or disables dial-in access using the serial ports.	setcomsw -dialinenabled <i>enableflag</i> where <i>enableflag</i> is true to enable dial-in access and false to disable.
Set serial port ownership	Enables or disables the service processor to own the serial port it shares with the operating system on startup.	setcomsw -own <i>enableflag</i> where <i>enableflag</i> is true to enable ownership and false to disable.
Turn session on or off	Enable or disable the session on serial port one.	setcomsw -sessionon <i>enableflag</i> where <i>enableflag</i> is true to turn on the session and false to turn off.
Set login delay	Sets the number of seconds that must elapse between successive logins.	setcomsw -tamperdelay <i>seconds</i> where <i>seconds</i> is the number of seconds that must elapse.

Examples:

- To configure the COM port software to enable the session and to set the ownership of the COM port to the service processor upon restart, type

```
setcomsw -session true -own true
```
- To query the number of seconds between successive logins and whether dial-in access for the serial port is enabled, type

```
getcomsw -tamperdelay -dialinenabled
```

Serial port hardware configuration commands

These commands read and set the serial port hardware configuration.

Table 22. Serial port hardware configuration commands

Function	What it does	Command
Get serial port hardware configuration	Returns the hardware configuration of the serial port.	getcomhw If no option is added, the command returns the configuration of serial port one.
	Returns the hardware configuration of the specified serial port.	getcomhw -port <i>index</i> where <i>index</i> is the index number of the serial port.
Set serial port index	Sets the serial port index number.	setcomhw -port <i>index</i> where <i>index</i> is the index number of the serial port.
Set baud rate	Sets the baud rate for the specified serial port.	setcomhw -port <i>index</i> -baudrate <i>baudrate</i> where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>baudrate</i> is a valid baud rate at which the modem should run.
Set parity	Sets the parity on the specified serial port.	setcomhw -port <i>index</i> -parity <i>parity</i> where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>parity</i> is one of the following: <ul style="list-style-type: none"> – None – Odd – Even – Mark – Space
Set stop bit value	Sets the stop bit value for the specified serial port.	setcomhw -port <i>index</i> -stopbits <i>bitvalue</i> where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>bitvalue</i> is a stop bit value of 0, 1, or 2.
Set initialization string	Sets the initialization string for the modem on the specified serial port.	setcomhw -port <i>index</i> -initstring <i>initstring</i> where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>initstring</i> is an initialization string for the modem.

Table 22. Serial port hardware configuration commands (continued)

Function	What it does	Command
Enable or disable serial port	Enables or disables the specified serial port.	<p>setcomhw -port <i>index</i> -enabled <i>enableflag</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>enableflag</i> is true to enable the port and false to disable.
Set caller ID	Sets the caller ID for a discovered phone number on the specified serial port.	<p>setcomhw -port <i>index</i> -calleridstring <i>callerID</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>callerID</i> is the caller ID.
Return to default settings	Returns the modem on the specified serial port to its factory-default settings.	<p>setcomhw -port <i>index</i> -returnfactorydefault <i>factorysettings</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>factorysettings</i> is the control string in your modem documentation for its default settings.
Set time delay	Sets a time delay before and after the sending of a modem escape string for the specified serial port.	<p>setcomhw -port <i>index</i> -escapeguardtime <i>escape</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>escape</i> is the time delay.
Set escape code	Sets an escape code for the specified serial port.	<p>setcomhw -port <i>index</i> -escapestring <i>escape</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>escape</i> is the escape code.
Set area code	Sets the area code for the modem on the specified serial port.	<p>setcomhw -port <i>index</i> -dialprefix <i>areacode</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>areacode</i> is the area code.

Table 22. Serial port hardware configuration commands (continued)

Function	What it does	Command
Set phone number	Sets the phone number for the modem on the specified serial port.	setcomhw -port <i>index</i> -dialpostfix <i>phonenum</i> where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>phonenum</i> is the phone number.
Set auto answer	Sets the auto-answer string for the modem on the specified serial port.	setcomhw -port <i>index</i> -autoanswer <i>answer</i> where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>answer</i> is the auto-answer string. The generic value is ATSO=1.
Set auto-answer stop	Sets the auto-answer stop string for the modem on the specified serial port.	setcomhw -port <i>index</i> -autoanswerstop <i>answerstop</i> where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>answerstop</i> is the auto-answer stop string. The generic value is ATSO=0.
Set query string	Sets the query string for the modem on the specified serial port.	setcomhw -port <i>index</i> -querystring <i>modemquery</i> where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>modemquery</i> is the modem query string. The generic value is AT.
Set exit string	Sets the string used to stop communication with the modem on the specified serial port.	setcomhw -port <i>index</i> -hangupstring <i>hangup</i> where: <ul style="list-style-type: none"> • <i>index</i> is the index number of the serial port. • <i>hangup</i> is the string used to hang up.

Examples:

- To configure the first serial port and load the initial carrier string to the host, type
`setcomhw -port 1 -initstring "AT 0T #2"`
- To enable the first serial port and set the parity to Even, type
`setcomhw -port 1 -enabled true -parity Even`

Service processor configuration commands

The following commands allow you to read and set the service processor clock and IDs, update the firmware, reset to the default configuration, and restart the service processor.

Service processor ID commands

Use the service processor ID commands to query and set service processor identification strings.

Table 23. Service processor ID commands

Function	What it does	Command
Get all ID strings	Returns the identification strings stored in the service processor ID table. If no parameter is specified, all IDs are returned.	<code>getmpid</code>
Get numeric ID	Returns the numeric identification string of the service processor.	<code>getmpid -numeric</code>
Get text ID	Returns the text identification string of the service processor.	<code>getmpid -text</code>
Get asset tag	Returns the asset tag of the service processor.	<code>getmpid -assettag</code>
Set numeric ID	Sets the numeric ID string of the service processor.	<code>setmpid -numeric</code>
Set text ID	Sets the text ID string of the service processor.	<code>setmpid -text</code>
Set asset tag	Sets the asset tag of the service processor.	<code>setmpid -assettag</code>

Example:

- To set the service processor ID tag to SP Batman #13, type
`setmpid -text "SP Batman #13"`

Service processor clock commands

These commands are used to read and write to the internal clock on the service processor. Time is interpreted relative to the current time on your service processor. On systems where a Greenwich mean time (GMT) offset is supported, the service processor clock is converted to GMT using the offset and then converted to local time for the system.

Table 24. Service processor clock commands

Function	What it does	Command
Get all service processor clock information	Returns the time and date, whether daylight saving time (DST) is used, and GMT offset information as recorded in the service processor.	<code>getmpclock</code>

Table 24. Service processor clock commands (continued)

Function	What it does	Command
Get time and date	Returns the current time of the internal clock on the service processor using the 24-hour clock format and the calendar format of <i>mm/dd/yyyy</i> .	<code>getmpclock -timeanddate</code>
Get DST	Reports whether the service processor uses DST.	<code>getmpclock -dst</code>
Get GMT offset	Returns the GMT offset, in hours. This value ranges from -12 to +12.	<code>getmpclock -gmtoffset</code>
Set service processor time	Sets the time for the internal clock on the service processor using the 24-hour clock.	<code>setmpclock -time <i>hh:mm</i></code> where <i>hh:mm</i> is the hour and minutes.
Set service processor date	Sets the date for the internal clock of the service processor using the format of <i>mm/dd/yyyy</i> .	<code>setmpclock -date <i>mm/dd/yyyy</i></code> where <i>mm/dd/yyyy</i> is the month, day, and year.
Enable/disable DST	Enables or disables DST.	<code>setmpclock -dst <i>enableflag</i></code> where <i>enableflag</i> is true to enable DST or false to disable.
Set GMT offset	Sets GMT offset, in hours. Valid values range from -12 to +12.	<code>setmpclock -gmtoffset <i>offsetnum</i></code> where <i>offsetnum</i> is the GMT offset.

Examples:

- To set the service processor time to 9:00 p.m. and the date to 3 November 2003, and enable daylight saving time, type
`setmpclock -time 21:00 -date 11/03/2003 -dst TRUE`
- To query the time and date on the service processor and whether it is using DST, type
`getmpclock -timeanddate -dst`

Service processor reset command

This command resets the service processor configuration to its factory-default settings.

Table 25. Service processor configuration command

Function	What it does	Command
Reset service processor	Resets the service processor configuration to its factory-default settings.	resetmp

Service processor firmware update command

This command updates service processor firmware. The -usb option is valid for the management module only.

Note: You must obtain the applicable firmware update file from <http://www.ibm.com/pc/support/>

Table 26. Service processor firmware update command

Function	What it does	Command
Update firmware	Updates the firmware for the main application image.	fwupdate -mn <i>filename</i> where <i>filename</i> is the fully-qualified path name for the file.
	Updates the firmware for the boot ROM image.	fwupdate -br <i>filename</i> where <i>filename</i> is the fully-qualified path name for the file.
	Updates the firmware for the remote graphics image.	fwupdate -vnc <i>filename</i> where <i>filename</i> is the fully-qualified path name for the file.
	Updates the firmware for the USB images; however, each USB image must be updated individually.	fwupdate -usb <i>filename</i> where <i>filename</i> is the fully-qualified path name for the file.

Examples:

- To update a boot ROM using a file you have downloaded from a support site, type

```
fwupdate -br d:\firmware\x220\batman\CNETBRUS.PKT
```
- To update a main application firmware image using a file you have downloaded from a support site, type

```
fwupdate -mn d:\firmware\x220\batman\CNETMNUM.PKT
```

Service processor restart command

The restart commands restart the current service processor hardware and close the command-line-interface connection to the service processor. If another logon session with a different service processor began before this session, the application returns to that session. Service processor restart can be performed using the command-line interface, HTTP port, or SMASH compliant command-line protocol.

Table 27. Service processor restart commands

Function	What it does	Command
Restart service processor	Restarts the current service processor hardware and close the command-line-interface connection to the service processor using the command-mode port.	restartmp
	Restarts the current service processor hardware and closes the command-line-interface connection to the service processor using the HTTP port.	<pre>httpreset -hostname <i>host</i> -u <i>userid</i> -p <i>password</i></pre> <p>where:</p> <ul style="list-style-type: none"> • <i>host</i> is the domain name system (DNS) or IP address of the host • <i>userid</i> is a user ID with administrative privileges • <i>password</i> is the password for the user ID

You can start the service processor also by using SMASH CLP compliant commands. To restart the service processor using the SMASH CLP syntax, type:

```
reset / method=http s=host u=userid p=password
```

where:

- *host* is the domain name system (DNS) or IP address of the host
- *userid* is a user ID with administrative privileges
- *password* is the password for the user ID

Examples:

To restart the service processor from the command-line interface, type:

```
httpreset -hostname host -u userid -p password
```

Lightweight Directory Access Protocol

These commands read and configure the Lightweight Directory Access Protocol (LDAP) interface of the service processor. LDAP settings can be read and configured using the command-line interface or SMASH CLP complaint commands.

Note: The `-properties` and `-interface` command options can be combined to view or set the parameters for a specific network interface.

Table 28. LDAP configuration commands

Function	What it does	Command
Get basic LDAP configuration	Returns the LDAP configuration for the specified network interface.	<code>getldap -interface <i>interfacenumber</i></code> where <i>interfacenumber</i> is an integer that specifies the number of the network interface.
	Returns all LDAP parameters.	<code>getldap -properties all</code>
	Returns the specified LDAP parameter.	<code>getldap -properties <i>propertyname</i></code> where <i>propertyname</i> indicates the property to return. Valid properties to return are: <ul style="list-style-type: none"> • server1hostname • server2hostname • server3hostname • server1port • server2port • server3port • rootdn • baseuserdn • usergroupattr • clientbindmethod • clientbinduserid • clientbindpassword • groupfilter • userauthmethod • uidattr • permissionattr • searchdomainmethod • servicename • searchdomain

Table 28. LDAP configuration commands (continued)

Function	What it does	Command
Set basic LDAP configuration	Sets the root distinguished name.	setldap -properties rootdn= <i>distname</i> where <i>distname</i> is the root distinguished name.
	Sets the base user distinguished name.	setldap -properties baseuserdn= <i>distname</i> where <i>distname</i> is the base user distinguished name.
	Sets the user group attribute.	setldap -properties usergroupattr= <i>attribute</i> where <i>attribute</i> is the user group attribute.
	Sets the client binding method.	setldap -properties clientbindmethod= <i>method</i> where <i>method</i> is the client binding method. Valid methods are: <ul style="list-style-type: none"> • anonymous • saved • principalupn • strictupn
	Sets the client binding user ID.	setldap -properties clientbinduserid= <i>userid</i> where <i>userid</i> is the client binding user ID.
	Sets the client binding password.	setldap -properties clientbindpassword= <i>pwd</i> where <i>pwd</i> is the client binding password.
	Sets the group filter.	setldap -properties groupfilter= <i>filter</i> where <i>filter</i> is the group filter.
	Sets the user authentication method.	setldap -properties userauthmethod= <i>method</i> where <i>method</i> is the user authentication method. Valid methods are: <ul style="list-style-type: none"> • local • ldap • ldaplocal • localldap
	Sets the user ID attribute.	setldap -properties uidattr= <i>attribute</i> where <i>attribute</i> is the user ID attribute.

Table 28. LDAP configuration commands (continued)

Function	What it does	Command
	Sets the permission attribute.	<p>setldap -properties permissionattr=<i>attribute</i></p> <p>where <i>attribute</i> is the permission attribute.</p>
	Sets the search domain method.	<p>setldap -properties searchdomainmethod=<i>mtd</i></p> <p>where <i>mtd</i> is the search domain method. Valid methods are:</p> <ul style="list-style-type: none"> • loginid • fixed • loginidfixed
	Sets the service name.	<p>setldap -properties servicename=<i>name</i></p> <p>where <i>name</i> is the service name.</p>
	Sets the search domain.	<p>setldap -properties searchdomain=<i>domain</i></p> <p>where <i>domain</i> is the search domain.</p>
Set port	Sets a port number for the specified server.	<p>setldap -properties serverIDport=<i>port</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>serverIDport</i>, indicates whether this is the first, second, or third server ID. Valid values are: <ul style="list-style-type: none"> – server1port – server2port – server3port • <i>port</i> is the port number you want to assign.
Set host name	Sets the host name for the specified server.	<p>setldap -properties serverIDhostname=<i>hname</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>serverIDhostname</i>, indicates whether this is the first, second, or third server ID. Valid values are: <ul style="list-style-type: none"> – server1hostname – server2hostname – server3hostname • <i>hname</i> is the host name you want to assign.

You can view and configure LDAP settings also by using the following SMASH CLP compliant commands:

- To view all LDAP properties using the SMASH CLP syntax, type:

```
show /ldap
```
- To set the LDAP root distinguished name using the SMASH CLP syntax, type:

```
set /ldap rootdn=distname
```

 where *distname* is the root distinguished name that you are setting.

Note: All LDAP properties are set using this command syntax. Only one property can be set each time a command is entered.

Examples:

- To view all LDAP properties from the command-line interface, type:

```
getldap -properties all
```
- To set the LDAP root distinguished name to xyz from the command-line interface, type:

```
setldap -properties rootdn=xyz
```

Command mode interface configuration

These commands read and configure the inactivity timeout for the command mode port. The inactivity timeout can be read and configured using the command-line interface or SMASH CLP compliant commands.

Table 29. Command mode interface configuration commands

Function	What it does	Command
Get command mode interface configuration	Returns all command mode interface configuration properties.	getcmdmode -properties all
	Returns command mode interface status (enabled or disabled).	getcmdmode -properties status
	Returns command mode interface inactivity timeout.	getcmdmode -properties timeout
Set command mode interface configuration	Enable or disable the command-mode interface.	setcmdmode -properties enable= <i>status</i> where <i>status</i> is: <ul style="list-style-type: none"> • true to enable • false to disable
	Sets the command mode interface inactivity timeout.	setcmdmode -properties timeout= <i>time</i> where <i>time</i> is an integer that indicates the timeout in seconds. A value of 0 indicates no timeout.

You can view and configure command mode interface settings also by using the following SMASH CLP compliant commands:

- To view all command mode interface properties using the SMASH CLP syntax, type:

```
show /cmdmode
```

- To set the command mode interface timeout using the SMASH CLP syntax, type:
`set /cmdmode timeout=time`
 where *time* is the timeout value in seconds, or 0 for no timeout.

Note: All command mode interface properties are set using this command syntax. Only one property can be set each time a command is entered.

Examples:

- To view all command mode interface properties from the command-line interface, type:
`getcmdmode -properties all`
- To set the command mode interface timeout to 120 seconds from the command-line interface, type:
`setcmdmode -properties timeout=120`

Host operating system

These commands read and set the ihost operating system. The host operating system can be read and configured using the command-line interface or SMASH CLP compliant commands.

Table 30. Host operating system commands

Function	What it does	Command
Get host operating system	Returns host operating system.	gethostos
Set host operating system	Set the host operating system.	sethostos -ostype where <i>type</i> is linux or other.

You can view and configure the host operating system also by using the following SMASH CLP compliant commands:

- To view the host operating system using the SMASH CLP syntax, type:
`show /hostos`
- To set the host operating system using the SMASH CLP syntax, type:
`set /hostos os=type`
 where *type* is linux or other.

Examples:

- To view the host operating system from the command-line interface, type:
`gethostos`
- To set the host operating system to Linux from the command-line interface, type:
`sethostos -os linux`

Service processor event commands

The following commands can be used to read and change dial-out and dial-in alert configuration settings; read and clear the event log; and read, enable, or disable alert triggers for the service processor.

Event log commands

These commands display or clear entries in the service processor event log. When a query is sent to the event log, events are listed in a last-in-first-out order.

Table 31. Service processor event log

Function	What it does	Command
Get event log	Returns the first service processor event log entry.	getmplog getmplog -first
	Returns the next service processor event log entry.	getmplog -next
	Returns all service processor event log entries in last-in-first-out order.	getmplog -all
Clear event log	Deletes all entries from the service processor event log.	clearmplog

Example:

- To query the service processor event log for the next event log entry, type
getmplog -next

Alert trigger commands

The alert trigger commands read, enable, or disable supported dial-out triggers that are monitored by the service processor. The following table lists all available parameters and the alert triggers they control. For more information about service processor alert triggers, see the applicable xSeries *User's Guide*.

Table 32. Alert trigger commands

Function	What it does	Command
Get software configuration of COM port	Returns a list of all the events that are currently enabled.	getalertrigger -enabled
	Returns a list of all the events that are currently disabled.	getalertrigger -disabled
	Returns a superset of events that can be forwarded by any service processor.	getalertrigger -possible
	Returns a list of all the events that can be forwarded by the target service processor.	getalertrigger -supported
Enable alert triggers	Enables an alert or set of alerts. When you enable an alert, it is set to true.	setalertrigger -enabled <i>alert</i> where <i>alert</i> is the name of an alert trigger parameter. You can specify more than one parameter.

Table 32. Alert trigger commands (continued)

Function	What it does	Command
Disable alert triggers	Disables an alert or set of alerts. When you disable an alert, it is set to false.	setalertrigger -disabled <i>alert</i> where <i>alert</i> is the name of an alert trigger parameter. You can specify more than one parameter.

The following table contains the alert trigger parameters that you can use with the setalertrigger command.

Parameter	Enables or disables alert triggering for
all	All supported events
critical.all	All supported critical events
critical.temp	A critical temperature event
critical.voltage	A critical voltage event
critical.tamper	A critical tampering event
critical.multiple_fan	A critical multiple fan-failure event
critical.power_supply	A critical power-failure event
critical.dasd	A critical hard disk backplane event
critical.vrm	A critical VRM failure event
noncritical.all	All noncritical events
noncritical.rps	A redundant power supply (RPS) event
noncritical.single_fan	An event of alerts for a single fan failure
noncritical.temperature	A temperature event
noncritical.voltage	A voltage event
noncritical.log_full	A log-full event
noncritical.log_75%	A log-75%-full event
noncritical.secondary	A secondary event
system.all	All supported system-level events
system.post	When an operating-system POST timeout expires
system.os	When an operating-system heartbeat timeout expires
system.application	A system-application alert passed to the service processor
system.power_off	When the system is powered off
system.power_on	When the system is powered on
system.boot	When the system failed to start
system.loader	When an operating system loader timeout expired
system.pfa	An alert received through a Predictive Failure Alert® (PFA)
system.inventory	A system-inventory event
system.netstack	A system-network-stack event
complex.ping	A complex discovery ping event

Parameter	Enables or disables alert triggering for
info.remote_login	An informational remote logon event
info.chipkill	An informational Chipkill™ memory event
info.fuelgauge	An informational fuel-gauge event
info.component	An informational component-activity event
normal.single_fan	A normal single-fan event
normal.voltage	A normal voltage event
normal.temperature	A normal temperature event
normal.component	A normal component-activity event
expdev.crit_temp	An expansion-device critical temperature event
expdev.noncrit_temp	An expansion-device non-critical temperature event
expdev.crit_voltage	An expansion-device critical voltage event
expdev.noncrit_voltage	An expansion-device noncritical voltage event
expdev.fan_failure	An expansion-device fan-failure event
expdev.pfa	An expansion-device PFA event
expdev.power_failure	An expansion-device power-failure event
expdev.crit_voltfault	An expansion-device voltage-fault event
expdev.fuelgauge	An expansion-device fuel-gauge event
blade.multswitch	A BladeCenter unit multiple switch event
blade.incompat_config	A BladeCenter unit incompatible-configuration event
blade.redund_mm	A BladeCenter unit redundant management-module event
blade.kvm_usb_fail	A BladeCenter unit KVM/USB switching failure event

Examples:

- To enable an event to be sent when a temperature, voltage, or power supply is in a critical state, type

```
setalerttrigger -enabled critical.temp, critical.voltage, critical.powersupply
```
- To query the alert triggers that are supported by the service processor, type

```
getalerttriggers -supported
```

Alert dial-out common configuration commands

These commands display and set the alert dial-out configuration that is common (with the exception of triggers) to all dial-out entries.

Table 33. Alert dial-out common configuration commands

Function	What it does	Command
Get all dial-out alerts	Returns the status of all common dial-out alerts.	getalertcommon If parameters are not specified, all common dial-out alert status is returned.
Get polling delay	Reports the polling delay, in seconds, between entries sent by the service processor.	getalertcommon -entrydelay

Table 33. Alert dial-out common configuration commands (continued)

Function	What it does	Command
Get retry delay	Reports the retry delay, in seconds, before the service processor attempts to resend an alert.	getalertcommon -retrydelay
Get retry limit	Reports the number of cycles a service processor attempts through the dial-out entry table before failing.	getalertcommon -retrylimit
Get SMTP address	Reports the SMTP server IP address.	getalertcommon -smtpserver
Log sent as e-mail	Reports whether the log is sent as an e-mail attachment.	getalertcommon -sendlog
Set polling delay	Sets the polling delay, in seconds, between entries reported by the service processor.	setalertcommon -entrydelay <i>seconds</i> where <i>seconds</i> is the number of seconds for the polling delay.
Set retry delay	Sets the retry delay, in seconds, before the service processor attempts to poll the entry table.	setalertcommon -retrydelay <i>seconds</i> where <i>seconds</i> is the number of seconds for the retry delay.
Set retry limit	Sets the number of cycles a service processor attempts through the dial-out entry table before failing.	setalertcommon -retrylimit <i>cycletime</i> where <i>cycletime</i> is the number of cycles through the table before failing.
Set SMTP address	Sets the SMTP server IP address.	setalertcommon -smtpserver
Stop sending alerts	Cancels all pending notifications and clears the queue.	setalertcommon -stopsending
Send log as e-mail	Specifies whether to send the log as an e-mail attachment.	setalertcommon -sendlog <i>emailflag</i> where <i>emailflag</i> is true to send logs by e-mail or false to not send e-mail logs.

Examples:

- To query the SMTP IP address and whether the log is sent as an e-mail attachment, type
getalertcommon -smtpserver -sendlog
- To set the SMTP IP address and enable sending the log by e-mail, type
setalertcommon -smtpserver **260.1.100.101** -sendlog **true**

Alert dial-out entry configuration commands

These commands display and set the alert dial-out entry configuration to allow access to profiles of recipients of the remote alerts. For more information about remote alert recipients, see the applicable xSeries *User's Guides*.

Table 34. Alert dial-out entry configuration commands

Function	What it does	Command
Get dial-out alert entry	Returns the configuration of the specified dial-out alert entry.	getalertentry -index <i>entrynumber</i> where <i>entrynumber</i> is the number of the entry, which ranges from 1-12.
Set a dial-out alert entry	Specifies which dial-out alert entry to update. This command always uses the -index option and must be used with one or more of the other setalertentry options.	setalertentry -index <i>entrynumber</i> where <i>entrynumber</i> is the number of the entry, which ranges from 1-12.
Enable a dial-out entry	Enables or disables the dial-out alert entry without first clearing the configuration.	setalertentry -index <i>entrynumber</i> -enabled <i>enableflag</i> where: <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>enableflag</i> is true to enable clearing the configuration or false to disable clearing the configuration.
Delete a dial-out alert entry	Deletes the dial-out alert entry specified by the -index option.	deletealertentry -index <i>entrynumber</i> where <i>entrynumber</i> is the number of the entry, which ranges from 1-12.
Set sending of critical events	Enables or disables sending only critical events.	setalertentry -index <i>entrynumber</i> -criticaleventseverity <i>enableflag</i> where: <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>enableflag</i> is true to enable sending critical events or false to disable sending critical events.

Table 34. Alert dial-out entry configuration commands (continued)

Function	What it does	Command
Add entry description	Adds a description for the specified dial-out alert entry.	<p>setalertentry -index <i>entrynumber</i> -description <i>descriptiontext</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>descriptiontext</i> is a string that identifies the dial-out alert entry.
Set connection type	<p>Specifies the connection type for the dial-out alert entry. Valid parameters are:</p> <ul style="list-style-type: none"> • snmp.ppp • snmp.lan • director.lan • director.modem • pager.numeric • pager.alphanumeric • email.lan • email.ppp • director.all 	<p>setalertentry -index <i>entrynumber</i> -type <i>connection</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>connection</i> is one of the valid parameters for a dial-out entry.
Set phone number	Sets the phone number of the specified dial-out alert entry for the service processor to dial.	<p>setalertentry -index <i>entrynumber</i> -number <i>phonenum</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>phonenum</i> is the phone number.
Set IP address	Sets the IP address for the service processor to use if required by the specified dial-out alert entry.	<p>setalertentry -index <i>entrynumber</i> -ipaddress <i>ipaddress</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>ipaddress</i> is the IP address you want to add.

Table 34. Alert dial-out entry configuration commands (continued)

Function	What it does	Command
Set hostname address	Sets the hostname for the service processor to use if required by the specified dial-out alert entry.	<p>setalertentry -index <i>entrynumber</i> -hostname <i>host</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>host</i> is the hostname you want to add.
Set PIN	Sets a personal identification number (PIN) code if required by the specified dial-out alert entry.	<p>setalertentry -index <i>entrynumber</i> -pin <i>pincode</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>pincode</i> is the PIN.
Set e-mail address	Sets an e-mail address if required by the specified dial-out alert entry.	<p>setalertentry -index <i>entrynumber</i> -emailaddress <i>email</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>email</i> is the e-mail address.
Set PPP login	Sets a PPP logon ID if required by the specified dial-out alert entry.	<p>setalertentry -index <i>entrynumber</i> -pppid <i>ppplogin</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>ppplogin</i> is the PPP logon ID.
Set PPP Password	Sets a PPP password if required by the specified dial-out entry.	<p>setalertentry -index <i>entrynumber</i> -ppppassword <i>password</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>password</i> is the PPP password.

Examples:

- To configure the first alert entry to send only critical events and to dial out to a phone number, type

```
setalertentry -index 1 -criticaleventseverity true -number "1-919-555-1212"
```
- To configure the seventh alert entry to use a director.all connection type and send all events, type

```
setalertentry -index 7 -type director.all -criticaleventseverity false
```

Dial-in configuration commands

These commands display and set the dial-in (serial port) configuration, which provide information about who is allowed to dial in to the service processor.

Table 35. Dial-in configuration commands

Function	What it does	Command
Get dial-in entry configuration	Returns the configuration for the specified dial-in entry.	getdialinentry -index <i>entrynumber</i> where <i>entrynumber</i> is the number of the entry, which ranges from 1-12.
Set a login ID	Sets the logon ID for the specified dial-in entry.	setdialinentry -index <i>entrynumber</i> -id <i>loginid</i> where: <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>loginid</i> is the login ID.
Set a login password	Sets the logon password for the specified dial-in entry.	setdialinentry -index <i>entrynumber</i> -password <i>loginpassword</i> where: <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>loginpassword</i> is the password login ID.
Enable dial-back	Enables or disables the dial-back feature for the specified entry. Valid values are true and false.	setdialinentry -index <i>entrynumber</i> -dialback <i>enableflag</i> where: <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>enableflag</i> is true to enable dial-back or false to disable dial-back.

Table 35. Dial-in configuration commands (continued)

Function	What it does	Command
Set a phone number	Sets the phone number for the specified entry for the service processor to dial back.	setdialinentry -index <i>entrynumber</i> -number <i>phonenum</i> where: <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • <i>phonenum</i> is dial-back phone number.

Table 35. Dial-in configuration commands (continued)

Function	What it does	Command
<p>Set dial-in permissions</p>	<p>Sets permissions for the specified dial-in entry. Valid dial-in user authority levels are as follows:</p> <ul style="list-style-type: none"> • readonly: dial-in user has read-only access • denyall: user is denied all access (logins from dial-in users will fail). • operator: user can clear logs and execute power functions. • supervisor: user has all privileges • network: user has write access to all configuration parameters relating to network interfaces, network protocols, and serial ports. • usermgtt: user can add, modify, or delete user IDs and can change global login settings. • remoteconsole: user has access to the remote server console. • remotemedia: user has access to the remote server console and the virtual media functions for that remote server. • remoteserver: user has access to the power-on and restart functions for the remote server. • basic: user has write access to the basic configuration parameters for the system (for example, system settings and alerts). This type of access is not sufficient for the user to clear event logs, perform restarts, restore adapter factory defaults, modify and restore adapter configuration from a configuration file, or upgrade the firmware. • clearlogs: user can clear the event logs. All users can view the event logs; clearlog authority is required to clear the event logs. • advanced: user is given access to Networking & Security and Basic Configuration. In addition, the user is also given access to the following advanced functions: firmware upgrades, restore adapter factory defaults, modify and restore adapter configuration from a configuration file, and restart/reset the adapter. 	<p>setdialinentry -index <i>entrynumber</i> -authority <i>authoritylevel</i></p> <p>where:</p> <ul style="list-style-type: none"> • <i>entrynumber</i> is the number of the entry, which ranges from 1-12. • the dial-in user <i>authoritylevel</i> is: <ul style="list-style-type: none"> – readonly – denyall – operator – supervisor – network – usermgtt – remoteconsole – remotemedia – remoteserver – basic – clearlogs – advanced <p>To set multiple authority levels at once, a comma-separated list of levels is accepted.</p>

You can set dial-in user authority (in this case, for user 3) also by using SMASH CLP complaint commands. To set the dial-in user authority (in this case, for user 3) using the SMASH CLP syntax, type:

```
set /authority 3 level=authoritylevel
```

where *authoritylevel* is the authority level for the dial-in user that you are setting.

Note: All user authorities levels are set using this command syntax. multiple authority levels are separated by commas.

Examples:

- To enable the dial-back feature and set the logon ID and password for the fourth alert entry, type

```
setdialentry -index 4 -dialback true -id GayleM -password acegEGBDF
```
- To specify the dial-back phone number for the seventh alert entry, type

```
setdialentry -index 7 -number "919-555-1212"
```

System power commands

Use these commands to read or set system power options such as server time-outs, remote power control, and preboot execution environment (PXE) reboot.

PXE reboot commands

These commands read and set the PXE boot flag on the target system.

Table 36. PXE reboot commands

Function	What it does	Command
Get PXE reboot state	Returns the PXE boot flag value in the BIOS code of the target system.	getpxe
Set PXE reboot state	Sets the PXE boot flag in the BIOS code of the target system.	setpxe -enabled <i>bootflag</i> where <i>bootflag</i> is true to enable PXE reboot or false to disable PXE reboot.

Example:

- To disable the PXE bootstrap, which enables the system to start locally, type

```
setpxe -enabled false
```

Server timeout commands

Use these commands to read and set four server timeouts. Values for all timeout queries are in seconds.

Table 37. Server timeout commands

Function	What it does	Command
Get all server timeout	Returns information for all server timeouts.	getservertimeout
Get load timeout	Returns the number of 30-second intervals the service processor allows for the operating system to load. For example, if this command returns a value of 10, there are 10 intervals of 30 seconds in length. In this case, the operating system would have 300 seconds (5 minutes) to load.	getservertimeout -loader
Get heart beat timeout	Returns the timeout value for the heartbeat between the device driver and the service processor.	getservertimeout -os
Get POST timeout	Returns the number of 30-second intervals the service processor allows for POST to be completed.	getservertimeout -boot
Get shutdown timeout	Returns the number of seconds the service processor allows for the operating system to shut down.	getservertimeout -shutdown
Set load timeout	Sets the number of seconds the service processor allows for the operating system to load.	setservertimeout -loader <i>loadtime</i> where <i>loadtime</i> is the number of seconds. Valid value range is 0 to 7650 and must be a multiple of 30.
Set heartbeat timeout	Sets the timeout value, in seconds, for the heartbeat between the device driver and the service processor.	setservertimeout -os <i>heartbeattime</i> where <i>heartbeattime</i> is the number of seconds. Valid values are 0 or 10 to 255.
Set POST timeout	Sets the number of 30-second intervals the service processor allows for POST to be completed.	setservertimeout -boot <i>POSTtime</i> where <i>POSTtime</i> is the number of seconds. Valid values are 0 or 7 to 255.
Set shutdown timeout	Sets the number of seconds the service processor allows for the operating system to shut down.	setservertimeout -shutdown <i>shutdowntime</i> where <i>shutdowntime</i> is the number of seconds. Valid values are 0 or 30 to 36000.

Examples:

- To query the POST, load and heartbeat timeout values, type
`getservertimeout -post -loader -os`
- To set the POST timeout to 5 minutes, the load timeout to 5 minutes, and the heartbeat timeout to 30 seconds, type
`setservertimeout -post 10 -loader 300 -os 30`

Remote power control commands

These commands control remote power management to the system where the target service processor is located.

Table 38. Remote power control commands

Function	What it does	Command
Power on	Turns on the system.	<code>poweron</code>
Shutdown	Shuts down the system immediately.	<code>poweroff -now</code>
	Shuts down the system after the operating system shutdown timer has expired.	<code>poweroff -shutdown</code>
Restart	Shuts down the operating system and restarts the system immediately.	<code>restart -now</code>
	Shuts down the operating system and restarts the system after the operating system shutdown timer has expired.	<code>restart -shutdown</code>
Get start time and date	Returns the current power-on time and date of the system in the format of <code>xx:xx mm/dd/yyyy</code> .	<code>getpowerontime</code> or <code>getpowerontime -query</code>

Table 38. Remote power control commands (continued)

Function	What it does	Command
Set start options	Starts the system immediately.	setpowerontime -now
	Starts the system in the specified number of minutes.	setpowerontime -delay <i>minutes</i> where <i>minutes</i> is the number of minutes after the command is sent that the service processor starts the system (1 to 35791).
	Starts the system on the specified month, day, and year. The date is referred to by the internal clock of the service processor.	setpowerontime -date <i>mm/dd/yyyy</i> where <i>mm/dd/yyyy</i> is the month, day, and year that the service processor starts that system and is in the format <i>mm/dd/yyyy</i>
	Starts the system at the specified hour and minutes. Time is referenced by the internal clock of the service processor.	setpowerontime -time <i>xx:xx</i> where <i>xx:xx</i> is the time in hours and minutes after the command is sent that the service processor starts that system in the 24-hour clock format of <i>xx:xx</i> .
	Clears the current date and time for the system to start.	setpowerontime -clear

Examples:

- To query the current time and date that the system was turned on, type
getpowerontime
- To start the system at 4:00 p.m. on 3 November 2003, type
setpowerontime -time **16:00** -date **11/03/2003**

System statistics commands

These commands display the system statistics, which are maintained by the service processor, set the blue indicator light function, and display light path diagnostics states.

Table 39. System statistics commands

Function	What it does	Command
Get all system statistics	Returns all available system statistics of the target service processor.	getsysstat
Get system operating status	Returns the system state. Valid values are: <ul style="list-style-type: none"> • In POST • Off/Unknown • Stopped • Booting • OS is running 	getsysstat -state
	Returns the number of times the system has been restarted.	getsysstat -restart
	Returns whether the system power is on or off.	getsysstat -power
	Returns, in hours, how long the system has been powered on.	getsysstat -uptime
Get system UUID	Returns the system UUID.	getsysstat -uuid
Get blue indicator light status	Returns whether the blue indicator light state is on, off, or blink.	getsysstat -bluelight
Set blue indicator light status	Returns the state for the blue indicator light. These values are not case sensitive.	setsysstat -bluelight <i>state</i> where <i>state</i> is: <ul style="list-style-type: none"> • On • Off • Blink

Table 39. System statistics commands (continued)

Function	What it does	Command
Get light path diagnostics LEDs status	Returns all LEDs that are supported.	getlightpath -all
	Returns which LEDs are on.	getlightpath -on
	Returns which LEDs are off.	getlightpath -off
	Returns which LEDs are blinking.	getlightpath -blink
	Returns which LEDs are on the front panel.	getlightpath -frontpanel
	Returns which LEDs are diagnostic.	getlightpath -diags
	Returns which LEDs are in the specified state.	getlightpath -state <i>LEDstate</i> where <i>LEDstate</i> is the state of the LED: <ul style="list-style-type: none"> • On • Off • Blinking • All
Returns whether the specified LED is on, off, or blinking. See Table 40 for a list of LED names.	getlightpath -location " <i>LEDname</i> " where " <i>LEDname</i> " is name of an LED. Make sure that the LED name is enclosed in quotation marks.	

Table 40. LED names

cdrom cable location	pci bus location
center plane card location	pci card location
chip set vrm location	pci slot location
cpu location	processor blade location
cpu memory location	rear panel location
diagnostics panel location	scalibility port location
dmc backplane location	smp expansion module 1, chip set vrm location
fan location	smp expansion module 1, memory card location
add cable location	smp expansion module 1, memory hot plug location
front panel location	smp expansion module 1 location
memory card a location	smp expansion module 2 location
memory card b location	smp expansion module 3 location
memory location	smp expansion module 4 location
memsubsystem location native i/o	sp card location
card location	sp slot location
pci backplane a location	system board location
pci backplane b location	vrm location

Examples:

- To return statistics on the current state of the system, how many times the system has been restarted, and the number of hours the system has been running, type

```
getsysstat -state -restart -uptime
```
- To get the location of the diagnostics LED panel, type

```
getlightpath -location "diagnostics panel location"
```
- To turn the blue indicator light on for a system, type

```
setsysstat -bluelight On
```

System component commands

These commands provide information about system components that the service processor is monitoring, such as memory, power supplies, hard disk backplanes, and microprocessors.

Power supply command

This command is supported only on xSeries 370 servers. This command monitors the power supplies.

Table 41. Power supply command

Function	What it does	Command
Get all power supply information	Returns values for all options if no option is used.	getfuelgauge
Power supplies supported	Returns the maximum number of power supplies supported by the system.	getps -max
Power supplies installed	Returns the number of power supplies installed in the system.	getps -inst
Available power supplies	Returns the number of available power supplies.	getfuelgauge -available
Failed power supplies	Returns the number of failed power supplies.	getfuelgauge -failed
Bit mask value	Returns a bit mask value for the fuel gauge status: 0 equals off, 1 equals on.	getfuelgauge -status
	Returns a bit mask value for a voltage fault: 0 equals off, 1 equals on.	getfuelgauge -voltagefault
Maximum current	Returns the maximum amount of current, in watts, drawn by the system.	getfuelgauge -maximumcurrent
Average current	Returns the average amount of current, in watts, drawn by the system.	getfuelgauge -averagecurrent

Table 41. Power supply command (continued)

Function	What it does	Command
Power supply redundancy	Returns whether the system is operating with a redundant power supply.	getfuelgauge -redundancystatus
	Returns the number of power supplies required to provide power redundancy.	getfuelgauge -powersupplyrequired
	Returns whether the redundant power supply in the system is in use.	getfuelgauge -redundantpowersupply
	Returns whether the service processor is monitoring redundancy in the system.	getfuelgauge -monitorredundancy
Low-fuel threshold	Returns the low-fuel threshold, in watts.	getfuelgauge -lowfuelthreshold
Power supply capacity	Returns the total number of power supplies that can be installed in the system.	getfuelgauge -powersupplycapacity
Maximum power	Returns the maximum available power, in watts, available to the system.	getfuelgauge -maxpower
Low-fuel state	Returns whether the system is operating in a low-fuel state.	getfuelgauge -lowfuelstate
Over power capacity	Returns whether the drawn current exceeds 100% of the capacity of the power supply in the system.	getfuelgauge -overcurrentstate

Examples:

- To query the number of available power supplies, the number of failed power supplies, and whether the server is in a low-fuel state, type
getfuelgauge -available -failed -lowfuelstate
- To query the number of power supplies the system supports and the number installed, type
getps -max -inst

Memory command

This command provides information about the memory (DIMMs) installed in a system that the service processor is monitoring.

Table 42. Memory command

Function	What it does	Command
Get all DIMM information	Returns all memory information.	getdimm
Get maximum DIMMs	Returns the maximum number of DIMMs supported by the system.	getdimm -max

Table 42. Memory command (continued)

Function	What it does	Command
DIMMs installed	Returns whether the specified DIMM is installed in the system.	<p>getdimm -inst <i>DIMMnumber</i></p> <p>where <i>DIMMnumber</i> is the number of the memory module.</p> <p>If a parameter is not specified, all installed DIMMs are returned.</p>
Amount of RAM	Returns the amount of memory as RAM for the specified DIMM.	<p>getdimm -memory <i>DIMMnumber</i></p> <p>where <i>DIMMnumber</i> is the number of the memory module.</p> <p>If a parameter is not specified, the total of all DIMMs as RAM is returned.</p>
Memory type	Returns the type of memory of the specified DIMM, such as SDRAM or EDO.	<p>getdimm -type <i>DIMMnumber</i></p> <p>where <i>DIMMnumber</i> is the number of the memory module.</p> <p>If a parameter is not specified, the type of all DIMMs is returned.</p>
Memory configuration	Returns the memory configuration of the specified DIMM, such as nonparity, parity, or ECC.	<p>getdimm -cfgtype <i>DIMMnumber</i></p> <p>where <i>DIMMnumber</i> is the number of the memory module.</p> <p>If a parameter is not specified, the configuration of all DIMMs is returned.</p>
Memory size	Returns the memory size, in MB, for the specified DIMM.	<p>getdimm -size <i>DIMMnumber</i></p> <p>where <i>DIMMnumber</i> is the number of the memory module.</p> <p>If a parameter is not specified, the size of all DIMMs is returned.</p>

Table 42. Memory command (continued)

Function	What it does	Command
Memory frequency	Returns the frequency of the specified DIMM, in MHz.	<p>getdimm -frequency <i>DIMMnumber</i></p> <p>where <i>DIMMnumber</i> is the number of the memory module.</p> <p>If a parameter is not specified, the frequency of all DIMMs is returned.</p>
Memory manufacturer	Returns the manufacturer ID for the specified DIMM.	<p>getdimm -mfrid <i>DIMMnumber</i></p> <p>where <i>DIMMnumber</i> is the number of the memory module.</p> <p>If a parameter is not specified, the manufacturer of all DIMMs is returned.</p>
	Returns the manufacturer location for the specified DIMM.	<p>getdimm -mfrlocn <i>DIMMnumber</i></p> <p>where <i>DIMMnumber</i> is the number of the memory module.</p> <p>If a parameter is not specified, the manufacturer location of all DIMMs is returned.</p>

Table 42. Memory command (continued)

Function	What it does	Command
Memory identification	Returns the part number of the specified DIMM.	<p>getdimm -partnum <i>DIMMnumber</i></p> <p>where <i>DIMMnumber</i> is the number of the memory module.</p> <p>If a parameter is not specified, the part number of all DIMMs is returned.</p>
	Returns the serial number of the specified DIMM.	<p>getdimm -serialnum <i>DIMMnumber</i></p> <p>where <i>DIMMnumber</i> is the number of the memory module.</p> <p>If a parameter is not specified, the serial number of all DIMMs is returned.</p>
	Returns the revision level for the specified DIMM.	<p>getdimm -revision <i>DIMMnumber</i></p> <p>where <i>DIMMnumber</i> is the number of the memory module.</p> <p>If a parameter is not specified, the revision level of all DIMMs is returned.</p>

Examples:

- To query the part number, serial number, and manufacturer ID for the first DIMM, type
`getdimm -partnum 1 -serialnum 1 mfrid 1`
- To query how many memory modules are installed, the total amount of RAM, and the type of memory, type
`getdimm -inst -memory -type`

Hard disk command

This command returns information about the hard disk drives.

Table 43. Hard disk backplane command

Function	What it does	Command
SCSI buses supported	Returns the maximum number of SCSI buses supported by the system.	<code>getdasd -buscount</code>
Hard disks installed	Returns hard disk drives, by IDs, installed on the specified SCSI bus.	<code>getdasd -scsiid <i>scsibus</i></code> where <i>scsibus</i> is the number of the SCSI bus.
	Returns the hard disk drives that are installed.	<code>getdasd -installed</code>
	Returns the hard disk drives that were installed when the service processor started.	<code>getdasd -expected</code>
Hard disks failed	Returns the hard disks that have failed.	<code>getdasd -failed</code>

Example:

- To query the number of installed hard disk drives and the IDs of the hard disk drives on the first SCSI bus, type
`getdasd -installed -scsiid 1`

CPU command

This command returns information about each microprocessor (also called a CPU) that the service processor is monitoring.

Table 44. CPU command

Function	What it does	Command
Microprocessors supported	Returns the maximum number of microprocessors supported by the system.	<code>getcpu -maxcpu</code>
VRMs supported	Returns the number of VRMs installed in the system.	<code>getcpu -maxvrm</code>

Example:

- To query the number of installed VRMs and the number of supported microprocessors, type
`getcpu -maxvrm -maxcpu`

Vital product data command

This command is used to read the vital product data (VPD) of various components of a system. Each command option returns values as specified in your specific system hardware manual or firmware update.

Table 45. VPD command

Function	What it does	Command
Get all VPD information	Returns all the VPD for all system components.	getvpd
Get VPD for system components	Returns VPD for the system POST/BIOS.	getvpd -postbois
	Returns VPD for the backplane installed in the system.	getvpd -planariobackplane
	Returns VPD for the I/O adapter installed in the system.	getvpd -planariocard
	Returns VPD for the system front panel.	getvpd -planarfrontpanel
	Returns VPD for the memory adapter installed in the system.	getvpd -planarmemorycard
	Returns VPD for the midplane.	getvpd -midplane
	Returns VPD for the service processor hardware.	getvpd -mphardware
	Returns VPD for the main ROM on the service processor.	getvpd -mprom
	Returns VPD for the boot code of the service processor.	getvpd -mpboot
	Returns VPD for the service processor device driver.	getvpd -mpdevicedriver
	Returns VPD for the hard disk drives installed in the system.	getvpd -dasd
	Returns VPD for the system board.	getvpd -planar
	Returns VPD for the power supplies installed in the system.	getvpd -ps
	Returns VPD for the system power backplane.	getvpd -powerbackplane
	Returns VPD for the voltage regulator monitor (VRMs) installed in the system.	getvpd -vrm
	Returns VPD for the drawer management controller installed in the system.	getvpd -dmc
Returns VPD for the BladeCenter unit.	getvpd -chassis	

Example:

- To query the VPD for the service processor hardware, the installed hard disk drives, and the installed microprocessors, type
getvpd -mphardware -dasd

Component activity log command

This command returns entries that are written in the component activity log.

Table 46. Component activity log command

Function	What it does	Command
Get component activity log entries	Returns the 10 most recent entries in the component activity log.	getcomplog
	Resets the component activity log to the beginning.	getcomplog -reset
	Returns the next 10 entries in the component activity log.	getcomplog -next

Example:

- To query the next 10 entries in the component activity log, type
`getcomplog -next`

System health and environment commands

These commands provide system health and environment information, such as voltages, temperatures, and fan speeds. You can access the current values and thresholds for the system hardware that the service processor is monitoring.

Temperature commands

The following commands read the temperatures that are monitored by the service processor and return the values as currently monitored temperatures. Temperature queries are divided into two commands: current temperature values and temperature thresholds.

Table 47. Temperature commands

Function	What it does	Command
Get all temperatures	Returns all the current temperatures the service processor is monitoring. All values are reported in Celsius.	gettemperatures If parameters are not specified, every temperature for which access exists is returned.
Get microprocessor temperature	Returns the current microprocessor temperature.	gettemperatures -cpu <i>cpunumber</i> where <i>cpunumber</i> is the number of the microprocessor. If a parameter is not specified, current temperatures of all microprocessors are returned.
Get hard disk temperatures	Returns the current hard disk drive temperature.	gettemperatures -dasd <i>dasdnumber</i> where <i>dasdnumber</i> is the number of the hard disk drive. If a parameter is not specified, current temperatures of all hard disk drives are returned.
Get center card temperatures	Returns the current center card temperature.	gettemperatures -planarcenter

Table 47. Temperature commands (continued)

Function	What it does	Command
Get ambient system temperatures	Returns the current ambient system temperature.	gettemperatures -systemambient
Get service processor temperatures	Returns the current service processor temperature.	gettemperatures -managementprocessor
Get power supply temperatures	Returns the current power supply unit temperature.	gettemperatures -ps <i>psnumber</i> where <i>psnumber</i> is the number of the power supply unit. If a parameter is not specified, current temperatures of all power supply units are returned.
Get microprocessor area temperatures	Returns the current microprocessor area ambient temperature.	gettemperatures -planarcpu
Get PCI area temperatures	Returns the current PCI area ambient temperature.	gettemperatures -planarpci
Get I/O area temperatures	Returns the current I/O area ambient temperature.	gettemperatures -planario
Get all temperature thresholds	Returns all the thresholds for each temperature the service processor is monitoring.	gettemperaturethresholds If parameters are not specified, every temperature threshold that exists is returned.
Get microprocessor temperature thresholds	Returns the current microprocessor temperature threshold.	gettemperaturethresholds -cpu <i>cpunumber</i> where <i>cpunumber</i> is the number of the microprocessor. If a parameter is not specified, current thresholds of all microprocessors are returned.
Get hard disk temperature thresholds	Returns the current hard disk drive temperature threshold.	gettemperaturethresholds -dasd
Get center card temperature thresholds	Returns the current center card temperature threshold.	gettemperaturethresholds -center
Get ambient system temperature thresholds	Returns the current system ambient temperature threshold.	gettemperaturethresholds -ambient
Get service processor temperature thresholds	Returns the current service processor temperature threshold.	gettemperaturethresholds -managementprocessor

Examples:

- To query the temperature thresholds for the second service processor and the center card, type
`gettemperaturethresholds -cpu 2 -planarcenter`
- To query the temperature of the second power supply, the service processor, and the first hard disk, type
`gettemperatures -ps 2 -managementprocessor -dasd 1`

Voltage commands

Voltages are maintained by the service processor. Querying the voltages returns read-only values in volts. Voltage queries are divided into two commands: current voltage measurements and voltage thresholds.

Table 48. Voltage commands

Function	What it does	Command
Get all voltages	Returns all the current voltages the service processor is monitoring.	<code>getvoltages</code>
Get VRM voltages	Returns the current voltage of a voltage regulator module (VRM).	<code>getvoltages -vrm <i>vrnumber</i></code> where <i>vrnumber</i> is the number of the VRM. If a parameter is not specified, the current voltages of all VRMs are returned.
Get system board voltages	Returns the current voltages of all system boards. To get a list of supported voltages, run the <code>getvoltages -sbvolts</code> command.	<code>getvoltages -systemboard <i>sbvoltage</i></code> where <i>sbvoltage</i> is a voltage value. If a parameter is not specified, the voltages of all system boards are returned.
Get power supply voltages	Returns the current voltage of a power supply.	<code>getvoltages -ps <i>psnumber</i></code> where <i>psnumber</i> is the number of the power supply. If a parameter is not specified, current voltages of all power supplies are returned.
Get supported system board voltages	Returns the supported system board voltages.	<code>getvoltages -sbvolts</code>
Get supported power supply voltages	Returns the supported power supply voltages.	<code>getvoltages -psvolts <i>powersupply</i></code> where <i>powersupply</i> is the number of the power supply.
Get all voltage thresholds	Returns all the current voltage thresholds the service processor is monitoring.	<code>getvoltage thresholds</code> If a parameter is not specified, every voltage threshold that exists is returned.

Table 48. Voltage commands (continued)

Function	What it does	Command
Get system board voltage thresholds	Returns the system board voltage threshold for the specified voltage setting. To get a list of supported voltages, run the <code>getvoltages -sbvolts</code> command.	<code>getvoltage thresholds -systemboard <i>sbvoltage</i></code> where <i>sbvoltage</i> is a voltage value.

Examples:

- To query the values for the first VRM and the system board record for -5 volts, type
`getvoltages -vrm 1 -systemboard N5V`
- To query the system board threshold for 12 volts, type
`getvoltage thresholds -systemboard 12V`

Fan commands

Fans monitored by a service processor can be queried for status such as fan speed, installed fans, and fans that are running.

Table 49. Fan commands

Function	What it does	Command
Get fan speeds	Returns information for all fans the service processor is monitoring: <ul style="list-style-type: none"> • Fan speeds • Fan rotations per minute (RPMs) • Number of fans supported • Number of fans installed • List of currently installed • List of fans initially installed 	<code>getfan</code> If a parameter is not specified, information for all fans for which access exists is returned.
	Returns the fan speed for each fan the service processor has access to and is monitoring. The values are a percentage of maximum RPM.	<code>getfan -speeds <i>fannumber</i></code> where <i>fannumber</i> is the number of the fan. If a parameter is not specified, the current speed of all fans is returned.
	Returns the fan speed for each fan the service processor has access to and is monitoring. The values are raw RPM.	<code>getfan -rpm <i>fannumber</i></code> where <i>fannumber</i> is the number of the fan. If a parameter is not specified, the current RPM of all fans is returned.
Get number of fans supported	Returns the maximum number of fans supported by the system.	<code>getfan -num</code>

Table 49. Fan commands (continued)

Function	What it does	Command
Get number of fans installed	Returns the number of fans currently installed in the system.	getfan -inst
	Returns the number of fans initially installed in the system.	getfan -expected
Get number of fans running	Returns a list of operational fans.	getfan -run

Examples:

- To query the speed of the first fan as a percentage of the maximum RPM, type
getfan -speeds 1
- To query how many fans are installed and how many fans are working, type
getfan -inst -run

Using scripts

You can use scripts instead of typing each command, one at a time, to accomplish a specific task or set of tasks. For example, to make logging in to a service processor easier, you can create a logon script to avoid repeatedly typing the host name, user ID, and password.

You can create a script in any word processor application, and it can have any file name you choose. You can name your scripts so you can easily keep track of their usage. For example, a logon script might be named *hostname_myname.loginSP*, where *hostname* is your system name and *myname* is your user ID.

Table 50. Scripting commands

Function	What it does	Command
Write to a script file	Captures all subsequent commands and stores them in the specified output file.	commandfile <i>outputfilename</i> where <i>outputfilename</i> is the relative path and name of the output file.
Stop capturing commands	Stops capturing commands.	commandfile
Run a script file	Reads the command set from the specified input file.	inputfile <i>inputfilename</i> where <i>inputfilename</i> is the relative path and name of the input file.
Write command output to a file	Redirects the output of subsequent commands to the specified file rather than the command window. As the commands run, the command window remains blank because all results, even failures, are captured in the output file.	outputfile <i>outputfilename</i> where <i>outputfilename</i> is the relative path and name of the output file.

Table 50. Scripting commands (continued)

Function	What it does	Command
Reset output to prompt window	Returns command output back to the command window from the output file specified in the outputfile command.	resetoutput

Examples:

- To capture subsequent commands and store them in a specified script file, type
commandfile c:\MPCLI\scripts\eventscripts.txt
- To run a specified script file, type
inputfile c:\MPCLI\scripts\logonscript.txt
- To send the output of subsequent commands to a specified file rather than viewing the output in the command window, type
outputfile c:\MPCLI\commandresults\VPDquery.txt

For script file examples, see Appendix A, “Sample scripts,” on page 81.

Appendix A. Sample scripts

This appendix contains some sample scripts. You can use these scripts, modify them to suit your needs, or refer to them when you are creating your own scripts.

In the following sample scripts, the items in **bold** type are examples only. The parameters that you choose to use will be different.

Get and set network hardware configuration

See “Network hardware configuration commands” on page 33 for command variables and valid values used in the following sample script.

```
outputfile ./enetcfgresults.txt
getmpid
getmpclock
setnethw -interface 1 -enabled false
setdhcp -enabled false
setnethw -interface 1 -linetype "ENET" -enabled true
setip -interface 1 -hostname X
setip -interface 1 -ipaddress 9.67.37.00
setip -interface 1 -subnet 255.255.255.128
setnethw -interface 1 -datarate "AUTO"
setnethw -interface 1 -duplex "AUTO"
setnethw -interface 1 -adminmac "00 00 00 00 00 00"
setnethw -interface 1 -gateway 9.67.37.1
setnethw -interface 1 -enabled true
resetoutput
restartmp
```

Log on to and get service processor information

See “Logging on to a service processor” on page 11 for command variables and valid values used in the following sample script.

```
outputfile ./getaccess.txt
logonip -hostname SPbatman -userid gisellem -password s0ngb1rd
getmpid -text
getmpclock -timeanddate
getdialinentry -index 12
logoff
exit
```

Get service processor information and log

See “Service processor event commands” on page 51 for command variables and valid values used in the following sample script.

```
outputfile /mplog.txt
getmpid
getmpclock
getmplog -first
getmplog -all
resetoutput
```

Get and set various policies and set start options

See “Blade server policy commands” on page 20 for command variables and valid values used in the following sample script.

```
getpbpolicy -localpower 2
setpbpolicy -localpower 2,false
getpbpolicy -localpower 2
setpbpolicy -localpowerall true
getpbpolicy -localpower 2

getpbpolicy -localkvm 2
setpbpolicy -localkvm 2,false
getpbpolicy -localkvm 2
setpbpolicy -localkvmall true
getpbpolicy -localkvm 2

getpbpolicy -localusb 2
setpbpolicy -localusb 2,false
getpbpolicy -localusb 2
setpbpolicy -localusball true
getpbpolicy -localusb 2

bootoptions -get 2
bootoptions -set 2,"pxe,cdrom,floppy"
bootoptions -get 2

getkvm
setkvm -owner 2
getkvm
setkvm -park
getkvm
```

Log on to and flash service processor

See “Vital product data command” on page 73 for command variables and valid values used in the following sample script.

```
outputfile ./rsaflash.txt
logonip -hostname 192.168.1.100 -userid gisellem -password s0ngb1rd
getmpid -text
getvpd -mpboot
getvpd -mprom

fwupdate -mn d:\firmware\x220\batman\CNETMNUS.PKT
logoff
sleep 15000
logonip -hostname 192.168.1.100 -userid gisellem -password s0ngb1rd
fwupdate -br d:\firmware\x220\batman\CNETBRUS.PKT
logoff
sleep 15000
logonip -hostname 192.168.1.100 -userid gisellem -password s0ngb1rd
fwupdate -vnc d:\firmware\x220\batman\CNETRGUS.PKT
logoff
exit
```

Log on to and set dial-in configuration

See “Dial-in configuration commands” on page 58 for command variables and valid values used in the following sample script.

```
outputfile ./setaccess.txt
logonip -hostname svcprocella -userid gisellem -password s0ngb1rd
getmpid -text
getmpclock -timeanddate
setdialinentry -index 12 -id gisellem -password s0ngb1rd -authority supervisor
logoff
exit
```

Set SNMP configuration

See “SNMP configuration commands” on page 27 for command variables and valid values used in the following sample script.

```
outputfile ./snmpcfgresults.txt
getmpid
getmpclock
setsnmp -agent false
setsnmp -contactname "Mark Oniram"
setsnmp -contactlocation "Service Processor Lab"
setsnmp -communityname 0,Public
setsnmp -ipaddress 1,1,9.37.113.211
setsnmp -ipaddress 1,2,0.0.0.0
setsnmp -ipaddress 1,3,0.0.0.0
setsnmp -communityname 0,0
setsnmp -ipaddress 2,1,0.0.0.0
setsnmp -ipaddress 2,2,0.0.0.0
setsnmp -ipaddress 2,3,0.0.0.0
setsnmp -communityname 0,0
setsnmp -ipaddress 3,1,0.0.0.0
setsnmp -ipaddress 3,2,0.0.0.0
setsnmp -ipaddress 3,3,0.0.0.0
setsnmp -agent true
resetoutput
```

Get and set switch module configuration

See “Switch module configuration commands” on page 22 for command variables and valid values used in the following sample script.

```
getsmnetwork -currentconfig 1
getsmnetwork -currentmethod 1
getsmnetwork -pendingconfig 1
getsmnetwork -pendingmethod 1
switchmodule -getpoweron 1
switchmodule -getmemdiagson 1
switchmodule -getcfgothports 1
switchmodule -gettextportson 1
switchmodule -ping 1
switchmodule -getpostresults 1
setsmnetwork -ipaddress 1, 192.168.1.125
setsmnetwork -gateway 1, 192.168.1.126
```

```
setsmnetwork -subnet 1,255.255.255.0
setsmnetwork -method 1, "static"
setsmnetwork -pending 1,false
setsmnetwork -pending 1,true
switchmodule -setpoweron 1,true
switchmodule -setmemdiagson 1,true
switchmodule -setcfgothports 1,true
switchmodule -setextportson 1,true
switchmodule -ping 1
switchmodule -getpostresults 1
```

Get VPD

See “Vital product data command” on page 73 for command variables and valid values used in the following sample script.

```
outputfile ./vpd.txt
getmpid
getmpclock
getvpd -postbios
getvpd -planariobackplane
getvpd -planariocard
getvpd -planarfrontpanel
getvpd -planarmemorycard
getvpd -planarcpu
getvpd -mphardware
getvpd -mprom
getvpd -mpboot
getvpd -mpdevicedriver
getvpd -dasd
getvpd -ps
```

Appendix B. Getting help and technical assistance

If you need help, service, or technical assistance or just want more information about IBM products, you will find a wide variety of sources available from IBM to assist you. This appendix contains information about where to go for additional information about IBM and IBM products, what to do if you experience a problem with your @server or IntelliStation® system, and whom to call for service, if it is necessary.

Before you call

Before you call, make sure that you have taken these steps to try to solve the problem yourself:

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system is turned on.
- Use the troubleshooting information in your system documentation, and use the diagnostic tools that come with your system. Information about diagnostic tools is in the *Hardware Maintenance Manual and Troubleshooting Guide* or *Problem Determination Guide* on the IBM xSeries Documentation CD or IBM BladeCenter Documentation CD or in the IntelliStation *Hardware Maintenance Manual* at the IBM support Web site.
- Go to the IBM support Web site at <http://www.ibm.com/pc/support/> to check for technical information, hints, tips, and new device drivers or to submit a request for information.

You can solve many problems without outside assistance by following the troubleshooting procedures that IBM provides in the online help or in the publications that are provided with your system and software. The information that comes with your system also describes the diagnostic tests that you can perform. Most @server and IntelliStation systems, operating systems, and programs come with information that contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the information for the operating system or program.

Using the documentation

Information about your IBM @server or IntelliStation system and preinstalled software, if any, is available in the documentation that comes with your system. That documentation includes printed books, online books, readme files, and help files. See the troubleshooting information in your system documentation for instructions for using the diagnostic programs. The troubleshooting information or the diagnostic programs might tell you that you need additional or updated device drivers or other software. IBM maintains pages on the World Wide Web where you can get the latest technical information and download device drivers and updates. To access these pages, go to <http://www.ibm.com/pc/support/> and follow the instructions. Also, some publications are available through the IBM Publications Ordering System at <http://www.elink.ibmink.ibm.com/public/applications/publications/cgibin/pbi.cgi>.

Getting help and information from the World Wide Web

On the World Wide Web, the IBM Web site has up-to-date information about IBM eServer and IntelliStation products, services, and support. The address for IBM xSeries and BladeCenter information is <http://www.ibm.com/eserver/xseries/>. The address for IBM IntelliStation information is <http://www.ibm.com/pc/us/intellistation/>.

You can find service information for your IBM products, including supported options, at <http://www.ibm.com/pc/support/>.

Software service and support

Through IBM Support Line, you can get telephone assistance, for a fee, with usage, configuration, and software problems with xSeries servers, BladeCenter products, IntelliStation workstations, and appliances. For information about which products are supported by Support Line in your country or region, see <http://www.ibm.com/services/sl/products/>.

For more information about Support Line and other IBM services, see <http://www.ibm.com/services/>, or see <http://www.ibm.com/planetwide/> for support telephone numbers. In the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

Hardware service and support

You can receive hardware service through IBM Services or through your IBM reseller, if your reseller is authorized by IBM to provide warranty service. See <http://www.ibm.com/planetwide/> for support telephone numbers, or in the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

In the U.S. and Canada, hardware service and support is available 24 hours a day, 7 days a week. In the U.K., these services are available Monday through Friday, from 9 a.m. to 6 p.m.

Appendix C. Notices

This information was developed for products and services offered in the U.S.A.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing
IBM Corporation
North Castle Drive
Armonk, NY 10504-1785
U.S.A.*

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product, and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Edition notice

© Copyright International Business Machines Corporation 2004. All rights reserved.

U.S. Government Users Restricted Rights — Use, duplication, or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Trademarks

The following terms are trademarks of International Business Machines Corporation in the United States, other countries, or both:

Active Memory	Predictive Failure Analysis
Active PCI	PS/2
Active PCI-X	ServeRAID
Alert on LAN	ServerGuide
BladeCenter	ServerProven
C2T Interconnect	TechConnect
Chipkill	ThinkPad
EtherJet	Tivoli
e-business logo	Tivoli Enterprise
@server	Update Connector
FlashCopy	Wake on LAN
IBM	XA-32
IBM (logo)	XA-64
IntelliStation	X-Architecture
NetBAY	Xcel4
Netfinity	XpandOnDemand
NetView	xSeries
OS/2 WARP	

Intel, MMX, and Pentium are trademarks of Intel Corporation in the United States, other countries, or both.

Microsoft, Windows, and Windows NT are trademarks of Microsoft Corporation in the United States, other countries, or both.

UNIX is a registered trademark of The Open Group in the United States and other countries.

Java and all Java-based trademarks and logos are trademarks of Sun Microsystems, Inc. in the United States, other countries, or both.

Adaptec and HostRAID are trademarks of Adaptec, Inc., in the United States, other countries, or both.

Linux is a trademark of Linus Torvalds in the United States, other countries, or both.

Red Hat, the Red Hat "Shadow Man" logo, and all Red Hat-based trademarks and logos are trademarks or registered trademarks of Red Hat, Inc., in the United States and other countries.

Other company, product, or service names may be trademarks or service marks of others.

Important notes

Processor speeds indicate the internal clock speed of the microprocessor; other factors also affect application performance.

CD-ROM drive speeds list the variable read rate. Actual speeds vary and are often less than the maximum possible.

When referring to processor storage, real and virtual storage, or channel volume, KB stands for approximately 1000 bytes, MB stands for approximately 1 000 000 bytes, and GB stands for approximately 1 000 000 000 bytes.

When referring to hard disk drive capacity or communications volume, MB stands for 1 000 000 bytes, and GB stands for 1 000 000 000 bytes. Total user-accessible capacity may vary depending on operating environments.

Maximum internal hard disk drive capacities assume the replacement of any standard hard disk drives and population of all hard disk drive bays with the largest currently supported drives available from IBM.

Maximum memory may require replacement of the standard memory with an optional memory module.

IBM makes no representation or warranties regarding non-IBM products and services that are ServerProven[®], including but not limited to the implied warranties of merchantability and fitness for a particular purpose. These products are offered and warranted solely by third parties.

IBM makes no representations or warranties with respect to non-IBM products. Support (if any) for the non-IBM products is provided by the third party, not IBM.

Some software may differ from its retail version (if available), and may not include user manuals or all program functionality.

Index

A

- alert dial-out configuration
 - commands 53, 54
- alert dial-out entry configuration
 - commands 55, 58
- alert trigger
 - commands 51, 53
- application-control commands 14, 15

B

- blade server policy settings
 - commands 20, 21
- blade server start options
 - commands 19
- BladeCenter unit
 - commands 15, 26
- BladeCenter unit topology
 - commands 25
- BladeCenter unit VPD
 - commands 26

C

- clearplog 51
- command
 - groups 14
- command mode interface configuration
 - commands 49, 50
- command-line interface
 - debugging information 14
 - exit 14
 - functions 1
 - guidelines 9
 - case sensitivity 9
 - data types 9
 - delimiters 9
 - multiple parameters 10
 - output format 10
 - strings 10
 - help 14
 - installation
 - supported operating systems 5
 - installing 5
 - Linux 5
 - Windows 6
 - known problems 10
 - launching 11
 - limitations 3
 - managing 14
 - sleep mode 14
 - using 15
- command-line processor 11
- command-line protocol
 - reset 45
 - set /authority 61
 - set /cmdmode 49

- command-line protocol (*continued*)
 - set /hostos 50
 - set /ldap 49
 - set /sol 17
 - show /cmdmode 49
 - show /hostos 50
 - show /ldap 49
 - show /sol 17
- commandfile 78
- commands
 - alert dial-out configuration 53, 54
 - alert dial-out entry configuration 55, 58
 - alert trigger 51, 53
 - application-control 14, 15
 - blade server policy settings 20, 21
 - blade server start options 19
 - BladeCenter unit 15, 26
 - BladeCenter unit topology 25
 - BladeCenter unit VPD 26
 - command mode interface configuration 49, 50
 - component activity log 74
 - CPU 72
 - DHCP configuration 36
 - dial-in configuration 58, 61
 - DNS configuration 36, 37
 - examples
 - application control 15
 - log on 13
 - management module failover 15
 - fan 77, 78
 - hard disk 72
 - host operating system 50
 - KVM configuration 18
 - LDAP 46, 49
 - login 11, 13
 - management module failover 15
 - memory 68, 72
 - network hardware configuration 33, 35
 - network interface 27, 37
 - power supply 67, 68
 - PPP configuration 30, 31
 - PXE reboot 61
 - remote power control 63, 64
 - scripts 78, 79
 - serial port configuration 37, 42
 - serial port hardware configuration 39, 42
 - serial port software configuration 38
 - server timeouts 62, 63
 - service processor clock 42, 43
 - service processor configuration 42, 50
 - service processor event log 51
 - service processor events 51, 61
 - service processor firmware update 44
 - service processor ID 42
 - service processor reset 44
 - service processor restart 44, 45
 - SNMP configuration 27, 29
 - SOL 16, 18

- commands *(continued)*
 - static IP configuration 31, 33
 - switch module configuration 22, 24
 - system components 67, 74
 - system health and environment 74, 78
 - system power 61, 64
 - system statistics 65, 67
 - temperature 74, 76
 - USB configuration 16
 - vital product data 73
 - voltage 76, 77
- component activity log
 - commands 74
- connectionblocks 14
- contact
 - initiating 11
- CPU
 - commands 72

D

- deletealertentry 55
 - option, index 55
- DHCP configuration
 - commands 36
- dial-in configuration
 - commands 58, 61
- DNS configuration
 - commands 36, 37

E

- exit 14

F

- fan
 - commands 77, 78
- fwupdate 44
 - options
 - all 51
 - br 44
 - mn 44
 - next 51
 - usb 44
 - vnc 44

G

- getalertcommon 53
 - options
 - entrydelay 53
 - retrydelay 54
 - smtpserver 54
- getalertentry 55
 - option, index 55
- getalerttrigger 51
 - options
 - disabled 51
 - enabled 51

- getalerttrigger *(continued)*
 - options *(continued)*
 - possible 51
 - supported 51
- getbladecentervpd 26
 - options
 - frontpanel 26
 - mgmtmodule 26
 - midplane 26
 - powersupply 26
 - processorblade 26
 - switchmodule 26
- getbootoptions 19
 - option, blade 19
- getcmdmode
 - options
 - properties, all 49
 - properties, status 49
 - properties, timeout 49
- getcomhw 39
 - option, port 39
- getcomplog 74
 - options
 - next 74
 - reset 74
- getcomsw 38
 - options
 - dialinenabled 38
 - own 38
 - tamperdelay 38
- getcpu 72
 - options
 - maxcpu 72
 - maxvrm 72
- getdasd 72
 - options
 - buscount 72
 - expected 72
 - failed 72
 - installed 72
 - scsiid 72
- getdhcp 36
- getdialinentry 58
 - option, index 58
- getdimm 68
 - options
 - cfgtype 69
 - frequency 70
 - inst 69
 - max 68
 - memory 69
 - mfrid 70
 - mfrlocn 70
 - partnum 71
 - revision 71
 - serialnum 71
 - size 69
 - type 69
- getdns 36
 - options
 - enabled 36

- getdns *(continued)*
 - options *(continued)*
 - mapping 36
 - server 36
- getfan 77
 - options
 - expected 78
 - inst 78
 - num 77
 - rpm 77
 - run 78
 - speeds 77
- getfuelgauge 67
 - options
 - available 67
 - averagecurrent 67
 - failed 67
 - lowfuelstate 68
 - lowfuelthreshold 68
 - maximumcurrent 67
 - maxpower 68
 - monitorredundancy 68
 - overcurrentstate 68
 - powersupplycapacity 68
 - powersupplyrequired 68
 - redundancystatus 68
 - redundantpowersupply 68
 - status 67
 - voltagefault 67
- gethostos 50
- getip 31
 - options
 - active 31
 - interface 31
- getkvm 18
 - options
 - assigntime 18
 - owner 18
- getldap
 - options
 - interface 46
 - properties 46
- getlightpath 66
 - LED, query
 - add cable location 66
 - cdrom cable location 66
 - center plane card location 66
 - chip set vrm location 66
 - cpu location 66
 - cpu memory location 66
 - diagnostics panel location 66
 - dmc backplane location 66
 - fan location 66
 - front panel location 66
 - memory card a location 66
 - memory card b location 66
 - memory location 66
 - memsubsystem location 66
 - native i/o card location 66
 - pci backplane a location 66
 - pci backplane b location 66
- getlightpath *(continued)*
 - LED, query *(continued)*
 - pci bus location 66
 - pci card location 66
 - pci slot location 66
 - processor blade location 66
 - rear panel location 66
 - scalability port location 66
 - smp expansion module 1 location 66
 - smp expansion module 1, chip set vrm location 66
 - smp expansion module 1, memory card location 66
 - smp expansion module 1, memory hot plug location 66
 - smp expansion module 2 location 66
 - smp expansion module 3 location 66
 - smp expansion module 4 location 66
 - sp card location 66
 - sp slot location 66
 - system board location 66
 - vrm location 66
 - options
 - all 66
 - blink 66
 - diags 66
 - frontpanel 66
 - location 66
 - off 66
 - on 66
 - state 66
- getmmfo 15
- getmpclock 42
 - options
 - dst 43
 - gmtoffset 43
 - timeanddate 43
- getmpid 42
 - options
 - assettag 42
 - numeric 42
 - text 42
- getmplog 51
 - option, first 51
- getnethw 33
 - options
 - adminmac 33
 - all 33
 - burnedmac 34
 - datarate 33
 - duplex 33
 - enabled 33
 - interface 33
 - linetype 33
 - mtu 34
 - routingbytes 34
- getpbpolicy 20
 - options
 - localkvm 20
 - localpower 20
 - localusb 20

- getpbpolicy *(continued)*
 - options *(continued)*
 - wol 20
- getpoweronetime 63
 - option, query 63
- getppp 30
 - options
 - enabled 30
 - protocol 30
 - remoteip 30
 - serverip 30
 - subnet 30
- getps 67
 - options
 - inst 67
 - max 67
- getpxe 61
- getservertimeout 62
 - options
 - boot 62
 - loader 62
 - os 62
 - shutdown 62
- getsmnetwork 22
 - options
 - currentconfig 22
 - currentmethod 22
 - pendingconfig 22
 - pendingmethod 22
- getsnmp 27
 - options
 - agent 27
 - communityname 27
 - contactlocation 27
 - contactname 27
 - hostname 27
 - ipaddress 27
 - traps 27
- getsol 16
 - options
 - accumto 16
 - bsmpips 16
 - retrycnt 16
 - retryint 16
 - sendthresh 16
 - status 16
 - vlanid 16
- getswitchmodule
 - options
 - cfgothports 23
 - extportson 23
 - memdiagson 23
 - ping 23
 - postresults 23
 - poweron 23
- getsysstat 65
 - options
 - bluelight 65
 - power 65
 - restart 65
 - state 65
- getsysstat *(continued)*
 - options *(continued)*
 - uptime 65
 - uuid 65
- gettemperatures 74
 - options
 - cpu 74
 - dasd 74
 - managementprocessor 75
 - planarcenter 74
 - planarcpu 75
 - planario 75
 - planarpci 75
 - ps 75
 - systemambient 75
- gettemperaturethresholds 75
 - options
 - ambient 75
 - center 75
 - cpu 75
 - dasd 75
 - managementprocessor 75
- gettopology 25
 - options
 - assemblies 25
 - bmcount 25
 - bminstalled 25
 - bmsupported 25
 - mmcount 25
 - mminstalled 25
 - mmsupported 25
 - pbcount 25
 - pbinstalled 25
 - pbsupported 25
 - pscount 25
 - psinstalled 25
 - pssupported 25
 - smcount 25
 - sminstalled 25
 - smsupported 25
- getusb 16
 - options
 - assigntime 16
 - owner 16
- getvoltages 76
 - options
 - ps 76
 - psvolts 76
 - sbvolts 76
 - systemboard 76
 - vrn 76
- getvoltage thresholds 76
 - option, systemboard 77
- getvpd 73
 - options
 - chassis 73
 - dasd 73
 - dmc 73
 - midplane 73
 - mpboot 73
 - mpdevicedriver 73

- getvpd (*continued*)
 - options (*continued*)
 - mphardware 73
 - mprom 73
 - planar 73
 - planarfrontpanel 73
 - planariobackplane 73
 - planariocard 73
 - planarmemorycard 73
 - postbois 73
 - powerbackplane 73
 - ps 73
 - vrn 73
- group commands 14
- guidelines
 - case sensitivity 9
 - data types 9
 - delimiters 9
 - multiple parameters 10
 - output format 10
 - overview of 9
 - strings 10

H

- hard disk
 - commands 72
- help 14
 - options
 - help-cli 14
 - help-cmd 14
- host operating system
 - commands 50
- httpreset 45

I

- initiating contact 11
- inputfile 78
- installation
 - Management Processor Command-Line Interface 3
 - steps
 - Linux 6
 - Windows 6
 - supported operating systems 5
- introduction
 - Management Processor Command-Line Interface 1

K

- known problems, command-line interface 10
- KVM configuration
 - commands 18

L

- launch, command-line interface 11
- LDAP
 - commands 46, 49
- limitations, command-line interface 3

- log on service processor
 - inband, logonlocal 11
 - logonrxe 12
 - out-of-band
 - logonip 11
 - logonrs485 12
- login
 - find last 13
- login commands 11, 13
- logoff 13
- logon 11
- logonip 11
- logonlocal 11
- logonrs485
 - options
 - index 12
 - name 12
 - query 12
- logonrxe
 - options
 - index 12
 - query 12

M

- management module
 - disable failover 15
 - enable failover 15
 - failover commands 15
 - failover information 15
 - SOL commands 16
 - SOL configuration 17
 - SOL information 16
- management module failover commands 15
- Management Processor Command-Line Interface
 - installing 3
 - introduction 1
 - using 9
- memory
 - commands 68, 72

N

- network hardware configuration
 - commands 33, 35
- network interface
 - commands 27, 37
- notes, important 88

O

- outputfile 78

P

- power supply
 - commands 67, 68
- poweroff 63
 - options
 - now 63

- poweroff *(continued)*
 - options *(continued)*
 - shutdown 63
- poweron 63
- PPP configuration
 - commands 30, 31
- PXE reboot
 - commands 61

R

- remote power control
 - commands 63, 64
- resetmp 44
- resetoutput 79
- restart 63
 - options
 - now 63
 - shutdown 63
- restartmp 45
- RXE100 expansion devices
 - logon 12
 - query 12

S

- scripting examples 81
 - get and set network hardware configuration 81
 - get and set switch module configuration 83
 - get and set various policies and set start options 82
 - get service processor information and log 81
 - get VPD 84
 - login and flash service processor 82
 - login and get service processor information 81
 - logon and set dial-in configuration 83
 - set SNMP configuration 83
- scripts
 - commands 78, 79
- serial port configuration
 - commands 37, 42
- serial port hardware configuration
 - commands 39, 42
- serial port software configuration
 - commands 38
- server timeouts
 - commands 62, 63
- service processor clock
 - commands 42, 43
- service processor configuration
 - commands 42, 50
- service processor event log
 - commands 51
- service processor events
 - commands 51, 61
- service processor firmware update
 - commands 44
- service processor ID
 - commands 42
- service processor reset
 - commands 44

- service processor restart
 - commands 44, 45
- service processors
 - communicating with 1
 - connecting to 11
 - connecting to, examples 13
 - log off 13
 - logging onto 11
 - logging onto, examples 13
 - query on RS485 12
 - supported configurations 3
 - types 3
- set
 - options
 - gateway 32
 - hostname 32
- setalertcommon 54
 - options
 - entrydelay 54
 - retrydelay 54
 - retrylimit 54
 - sendlog 54
 - smtpserver 54
 - stopping 54
- setalertentry 55
 - options
 - criticaleventseverity 55
 - description 56
 - emailaddress 57
 - enabled 55
 - index 55
 - ipaddress 56, 57
 - number 56
 - pin 57
 - pppid 57
 - ppppassword 57
 - type 56
- setalerttrigger 51
 - alert parameters
 - all 52
 - blade.incompat_config 53
 - blade.kvm_usb_fail 53
 - blade.multiswitch 53
 - blade.redund_mm 53
 - complex.ping 52
 - critical.all 52
 - critical.dasd 52
 - critical.multiple_fan 52
 - critical.power_supply 52
 - critical.tamper 52
 - critical.temp 52
 - critical.voltage 52
 - critical.vrm 52
 - expdev.crit_temp 53
 - expdev.crit_voltage 53
 - expdev.crit_voltfault 53
 - expdev.fan_failure 53
 - expdev.fuelgauge 53
 - expdev.noncrit_temp 53
 - expdev.noncrit_voltage 53
 - expdev.pfa 53

- setalerttrigger *(continued)*
 - alert parameters *(continued)*
 - expdev.power_failure 53
 - info.chipkill 53
 - info.component 53
 - info.fuelgauge 53
 - info.remote_login 53
 - noncritical.all 52
 - noncritical.log_75% 52
 - noncritical.log_full 52
 - noncritical.rps 52
 - noncritical.secondary 52
 - noncritical.single_fan 52
 - noncritical.temperature 52
 - noncritical.voltage 52
 - normal.component 53
 - normal.single_fan 53
 - normal.temperature 53
 - normal.voltage 53
 - system.all 52
 - system.application 52
 - system.boot 52
 - system.inventory 52
 - system.loader 52
 - system.netstack 52
 - system.os 52
 - system.pfa 52
 - system.post 52
 - system.power_off 52
 - system.power_on 52
 - options
 - disabled 52
 - enabled 51
- setbootoptions 19
 - options
 - clear 19
 - options 19
- setcmdmode
 - options
 - properties, enable 49
 - properties, timeout 49
- setcomhw 39
 - options
 - autoanswer 41
 - autoanswerstop 41
 - baudrate 39
 - calleridstring 40
 - dialpostfix 41
 - dialprefix 40
 - enabled 40
 - escapeguardtime 40
 - escapestring 40
 - hangupstring 41
 - initstring 39
 - parity 39
 - port 39
 - querystring 41
 - returnfactorydefault 40
 - stopbits 39
- setcomsw 38
 - options
 - dialinenabled 38
 - own 38
 - sessionon 38
 - tamperdelay 38
- setdhcp
 - option, enabled 36
- setdialinentry 58
 - options
 - authority 60
 - dialback 58
 - id 58
 - index 58
 - number 59
 - password 58
- setdns 36
 - options
 - enabled 36
 - mapping 37
 - server 37
- sethostos
 - options
 - os 50
- setip
 - options
 - interface 32
 - ipaddress 32
 - method 32
 - subnet 32
- setkvm 18
 - options
 - owner 18
 - park 18
- setldap 47
 - options
 - properties, baseuserdn 47
 - properties, clientbindmethod 47
 - properties, clientbindpassword 47
 - properties, clientbinduserid 47
 - properties, groupfilter 47
 - properties, permissionattr 48
 - properties, rootdn 47
 - properties, searchdomain 48
 - properties, searchdomainmethod 48
 - properties, servicename 48
 - properties, uidattr 47
 - properties, userauthmethod 47
 - properties, usergroupattr 47
- setmmfo 15
 - options
 - disable 15
 - enable 15
- setmpclock 43
 - options
 - date 43
 - dst 43
 - gmtoffset 43
 - time 43
- setmpid 42

- setmpid *(continued)*
 - options
 - assettag 42
 - numeric 42
 - text 42
- setnethw 34
 - options
 - adminmac 35
 - datarate 34
 - duplex 35
 - enabled 34
 - interface 34
 - linetype 34
 - mtu 35
 - routingbytes 35
- setpbpolicy 20
 - options
 - localkvm 20
 - localkvmall 20
 - localpower 21
 - localpowerall 21
 - localusb 21
 - localusball 21
 - wol 21
- setpowerontime 64
 - options
 - clear 64
 - date 64
 - delay 64
 - time 64
- setppp 30
 - options
 - enabled 30
 - protocol 30
 - remoteip 30
 - serverip 30
 - subnet 30
- setpxe 61
 - option, enabled 61
- setservertimeout 62
 - options
 - boot 62
 - loader 62
 - os 62
 - shutdown 62
- setsmnetwork 22
 - options
 - enable 23
 - gateway 22
 - ipaddress 22
 - method 22
 - pending 23
 - subnet 22
- setsnmp 28
 - options
 - agent 28
 - communityname 28
 - contactlocation 28
 - contactname 28
 - hostname 29
 - ipaddress 28
- setsnmp *(continued)*
 - options *(continued)*
 - properties, serverhostname 48
 - properties, serverport 48
 - traps 28
- setsol
 - options
 - accumto 17
 - bsmpips 17
 - enable 17
 - retrycnt 17
 - retryint 17
 - sendthresh 17
 - vlanid 17
- setswitchmodule 23
 - options
 - cfgotherports 24
 - extportson 24
 - memdiagson 24
 - poweron 23
 - reboot 24
 - resetconfig 24
- setsysstat 65
 - option, bluelight 65
- setusb 16
 - options
 - owner 16
 - park 16
- sleep 14
- SMASH command-line processor 11
- SNMP configuration
 - commands 27, 29
- static IP configuration
 - commands 31, 33
- supported configurations
 - compatible support 3, 4
 - full support 3
 - service processor configuration support 3, 5
- switch module configuration
 - commands 22, 24
 - configuration 22
- system components
 - commands 67, 74
- system health and environment
 - commands 74, 78
- system power
 - commands 61, 64
- system statistics
 - commands 65, 67

T

- temperature
 - commands 74, 76
- trademarks 88

U

- USB configuration
 - commands 16
 - park 16

USB configuration (*continued*)

- query 16
- set owner 16

V

- verbose 14
- vital product data
 - commands 73
- voltage
 - commands 76, 77

W

- whoami 13



Part Number: 31R1473

Printed in USA

(1P) P/N: 31R1473

