

IBM TotalStorage FAStT



# Fibre Channel Hard Drive and Storage Expansion Enclosure Installation and Migration Guide



IBM TotalStorage FAStT



# Fibre Channel Hard Drive and Storage Expansion Enclosure Installation and Migration Guide

**Note:**

Before using this information and the product it supports, be sure to read the general information in "Notices" on page 57.

**First Edition (May 2004)**

**© Copyright International Business Machines Corporation 2004. All rights reserved.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

---

## Safety

The caution and danger statements that this document contains can be referenced in the multilingual *IBM Safety Information* document that is provided with your IBM TotalStorage FASTT100 Storage Server. Each caution and danger statement is numbered for easy reference to the corresponding statements in the translated document.

- **Danger:** These statements indicate situations that can be potentially lethal or extremely hazardous to you. A danger statement is placed just before the description of a potentially lethal or extremely hazardous procedure, step, or situation.
- **Caution:** These statements indicate situations that can be potentially hazardous to you. A caution statement is placed just before the description of a potentially hazardous procedure step or situation.
- **Attention:** These notices indicate possible damage to programs, devices, or data. An attention notice is placed just before the instruction or situation in which damage could occur.

Before installing this product, read the following danger and caution notices.

Statement 1:



**DANGER**

**Electrical current from power, telephone, and communication cables is hazardous.**

**To avoid a shock hazard:**

- **Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.**
- **Connect all power cords to a properly wired and grounded electrical outlet.**
- **Connect to properly wired outlets any equipment that will be attached to this product.**
- **When possible, use one hand only to connect or disconnect signal cables.**
- **Never turn on any equipment when there is evidence of fire, water, or structural damage.**
- **Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.**
- **Connect and disconnect cables as described in the following table when installing, moving, or opening covers on this product or attached devices.**

<b>To Connect:</b>	<b>To Disconnect:</b>
<ol style="list-style-type: none"><li>1. Turn everything OFF.</li><li>2. First, attach all cables to devices.</li><li>3. Attach signal cables to connectors.</li><li>4. Attach power cords to outlet.</li><li>5. Turn device ON.</li></ol>	<ol style="list-style-type: none"><li>1. Turn everything OFF.</li><li>2. First, remove power cords from outlet.</li><li>3. Remove signal cables from connectors.</li><li>4. Remove all cables from devices.</li></ol>

**Statement 3:**



**CAUTION:**

When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.



**DANGER**

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following.

Laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.

**Class 1 Laser statement**

**Class 1 Laser Product**  
**Laser Klasse 1**  
**Laser Klasse 1**  
**Luokan 1 Laserlaitte**  
**Appareil À Laser de Classe 1**

IEC 825-11993 CENELEC EN 60 825

**Statement 4:**




≥ 18 kg (39.7 lb)	≥ 32 kg (70.5 lb)	≥ 55 kg (121.2 lb)

**CAUTION:**  
Use safe practices when lifting.

**Statement 5:**



**CAUTION:**  
The power control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.

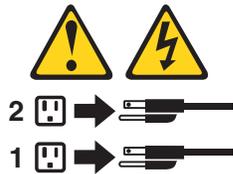

**Statement 8:**



**CAUTION:**

**Never remove the cover on a power supply or any part that has the following label attached.**



**Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.**



---

# Contents

<b>Safety</b> . . . . .	iii
<b>Figures</b> . . . . .	xi
<b>Tables</b> . . . . .	xiii
<b>About this document</b> . . . . .	xv
Who should read this document. . . . .	xv
Illustrations . . . . .	xv
Using this document . . . . .	xv
How to send your comments . . . . .	xv
<b>Chapter 1. Introduction</b> . . . . .	1
Enclosure IDs. . . . .	5
FAST Storage Manager installation and support guides . . . . .	8
<b>Chapter 2. Prerequisites to adding capacity and hard drive migration</b> . . . . .	9
Verifying ESM firmware and NVSRAM file levels . . . . .	10
Upgrading fibre channel drive firmware levels . . . . .	12
Bringing storage subsystems and drive loops into optimal state . . . . .	12
Saving the storage subsystem profile. . . . .	13
<b>Chapter 3. Adding one or more new fibre channel hard drives</b> . . . . .	15
Activity 1: Disabling the drive migration settings . . . . .	15
Activity 2: Inserting fibre channel drives . . . . .	16
Activity 3: Re-enabling the drive migration settings. . . . .	16
<b>Chapter 4. Adding expansion units containing new hard drives</b> . . . . .	19
Activity 1: Preliminary activities . . . . .	19
Activity 2: Cabling new storage expansion units . . . . .	20
Activity 3: Disabling storage subsystem drive migration settings . . . . .	24
Activity 4: Inserting drives and cabling additional storage expansion units . . . . .	25
Activity 5: Re-enabling drive migration settings . . . . .	26
<b>Chapter 5. Migrating one or more fibre channel hard drives</b> . . . . .	29
Activity 1: Preliminary activities . . . . .	29
Activity 2: Removing the migrating fibre channel hard drives . . . . .	31
Activity 3: Inserting the migrating fibre channel hard drives. . . . .	32
<b>Chapter 6. Migrating expansion units containing hard drives</b> . . . . .	33
Activity 1: Preliminary activities . . . . .	33
Activity 2: Deleting partition mappings, remote mirror relationships, and flashcopies . . . . .	34
Activity 3: Preparing and backing up the drives . . . . .	34
Activity 4: Shutting down and moving the storage expansion unit . . . . .	35
Activity 5: Installing and setting storage expansion unit IDs and speeds . . . . .	36
Activity 6: Cabling, powering on, and verifying storage expansion unit operation . . . . .	37
Activity 7: Inserting hard drives and placing logical drives online. . . . .	38
<b>Chapter 7. Upgrading a storage server in a functioning configuration</b> . . . . .	41
Preliminary considerations: Server upgrade . . . . .	41
Preliminary considerations: Firmware behavior during server upgrade. . . . .	42

FAST configuration behavior after upgrade and FAST Storage Server replacement . . . . .	43
Redeployed FAST configuration behavior in an original (replaced) FAST Storage Server . . . . .	43
Upgrading storage servers in functioning FAST configurations . . . . .	45
Activity 1: Preliminary activities . . . . .	45
Activity 2: Powering off the original FAST Storage Server . . . . .	46
Activity 3: Installing new FAST Storage Servers and setting minihub speed . . . . .	46
Activity 4: Making fibre channel connections . . . . .	47
Activity 5: Powering on the expansion unit and setting IP addresses . . . . .	47
Activity 6: Downloading firmware and NVSRAM and returning arrays online . . . . .	47
Activity 7: Generating and applying premium feature SAFE key files . . . . .	48
Redeploying the original (replaced) FAST Storage Server . . . . .	48
Accessing the FAST Storage Server controller shell . . . . .	48
<b>Appendix. Additional FAST documentation . . . . .</b>	<b>51</b>
FAST900 Fibre Channel Storage Server library . . . . .	51
FAST700 Fibre Channel Storage Server library . . . . .	53
FAST600 Fibre Channel Storage Server library . . . . .	54
FAST-related documents . . . . .	55
<b>Notices . . . . .</b>	<b>57</b>
Trademarks . . . . .	57
Important notes. . . . .	58
Electronic emission notices . . . . .	58
Federal Communications Commission (FCC) statement . . . . .	58
Chinese class A compliance statement . . . . .	59
Industry Canada Class A emission compliance statement . . . . .	59
Australia and New Zealand Class A statement . . . . .	59
United Kingdom telecommunications safety requirement. . . . .	59
European Union EMC Directive conformance statement. . . . .	59
Taiwan Class A warning statement. . . . .	60
Japanese Voluntary Control Council for Interference (VCCI) statement . . . . .	60
<b>Glossary . . . . .</b>	<b>61</b>
<b>Index . . . . .</b>	<b>69</b>

---

## Figures

1.	FAST EXP500 and EXP700 cabling in a mixed configuration . . . . .	4
2.	EnableDriveMigration.scr file listing . . . . .	17
3.	DisableDriveMigration.scr file listing . . . . .	18
4.	EXP700 and EXP500 enclosure ID and fibre channel speed switches . . . . .	20
5.	First connection: Cabling a single drive enclosure to a functioning drive loop . . . . .	22
6.	Second connection: Cabling a single drive enclosure to a functioning drive loop . . . . .	23
7.	Third (final) connection: Cabling a single drive enclosure to a functioning drive loop . . . . .	24
8.	Cabling a second drive enclosure to a functioning drive loop . . . . .	26
9.	Drive CRU assembly . . . . .	31



---

## Tables

1. Maximum allowable drives and drive loop pairs for FAStT storage servers . . . . .	1
2. Supported EXP500 and EXP700 combinations per maximum redundant drive loop pair drives . . . . .	5
3. EXP500 Storage Expansion Enclosure ID settings . . . . .	6
4. EXP700 Storage Expansion Enclosure ID settings . . . . .	6
5. Intermixed EXP500 and EXP700 Storage Expansion Enclosure ID settings . . . . .	7
6. Compatible controller firmware and NVSRAM version by machine type and model number . . . . .	10
7. Compatible expansion unit ESM firmware version by machine type and model number . . . . .	11
8. FAStT storage servers by supported replacement machine types . . . . .	42
9. TotalStorage FAStT900 Fibre Channel Storage Server document titles by user tasks . . . . .	51
10. TotalStorage FAStT700 Fibre Channel Storage Server document titles by user tasks . . . . .	53
11. TotalStorage FAStT600 Fibre Channel Storage Server document titles by user tasks . . . . .	54
12. TotalStorage FAStT related document titles by user tasks . . . . .	55



---

## About this document

This document describes procedures for adding either new Fibre Channel hard drives or new IBM TotalStorage FASTT drive expansion enclosures containing new Fibre Channel hard drives to an existing IBM FASTT Storage Server configuration. This document also describes the procedure for migrating either Fibre Channel hard drives or IBM TotalStorage FASTT storage expansion enclosures containing Fibre Channel hard drives from one FASTT storage subsystem to another.

---

## Who should read this document

This document is intended for system administrators who are familiar with the IBM TotalStorage FASTT storage subsystem components, terminology, and FASTT Storage Server administrative tasks.

---

## Illustrations

Illustrations contained in this document depict general visual characteristics of the FASTT Storage Server, storage expansion unit, and fibre channel drive hardware cited. They are not intended for use as detailed FASTT storage hardware images.

---

## Using this document

Before you proceed to complete any storage addition or migration procedures detailed in this publication, familiarize yourself with the principles, prerequisite instructions at Chapter 2, "Prerequisites to adding capacity and hard drive migration," on page 9, as well as the following storage addition or migration procedures applicable to your specific need.

- Chapter 3, "Adding one or more new fibre channel hard drives," on page 15
- Chapter 4, "Adding expansion units containing new hard drives," on page 19
- Chapter 5, "Migrating one or more fibre channel hard drives," on page 29
- Chapter 6, "Migrating expansion units containing hard drives," on page 33
- Chapter 7, "Upgrading a storage server in a functioning configuration," on page 41

Your familiarity with the principles, preliminary procedures, and detailed steps described in this document is critical to prevent loss of data availability, and in some cases, loss of data. If you have questions about the procedures described in this document, please contact the IBM Help Center in your geography for assistance.

### **Important:**

1. Do not mix SATA and Fibre Channel drives in the same enclosure.
2. Do not mix SATA drive expansion enclosures (EXP100) and Fibre channel drive enclosures (EXP700 and EXP500) in the same drive loop or FASTT Storage Server.

---

## How to send your comments

Your feedback is important to help us provide the highest quality of information. If you have any comments about this document, please either fill out the Readers' comments form (RCF) at the back of this document and give it to an IBM representative, or submit it in one of the following ways:

- E-mail
  - Submit your comments over the Internet to:  
starpubs@us.ibm.com
  - Submit your comments over IBMLink™ from the U.S.A. to:  
STARPUBS at SJEVM5
  - Submit your comments over IBMLink from Canada to:  
STARPUBS at TORIBM
  - Submit your comments over IBM Mail Exchange to:  
USIB3WD at IBMMAIL

Be sure to include the name and order number of the document and, if applicable, the specific location of the text that you are commenting on, such as a page or table number.

- Mail

Complete the Readers' comments form (RCF) at the back of this document and return it by mail. If the RCF Business Reply Mailer has been removed, you may address your comments to:

International Business Machines Corporation  
Information Development  
Dept. GZW  
9000 South Rita Road  
Tucson, Arizona 85744-0001  
U.S.A.

## Chapter 1. Introduction

Scalability is a primary attribute of the IBM TotalStorage FASTT Storage Server family. Whenever the need arises, you can expand a FASTT Storage Server from its minimum to its maximum capacity configuration. To expand FASTT Storage Server configurations you can purchase additional equipment or migrate equipment from FASTT Storage Server configurations previously deployed.

The typical FASTT Storage Server drive connects to both Controller A and Controller B. Taken together, these connections represent a single drive loop or a redundant drive loop pair. You must connect drive loops in pairs to enable redundant drive loop configurations (two data paths per drive enclosure).

Table 1 provides a list of the maximum allowable number of drives and drive loop pairs for each FASTT Storage Server by machine type and model number. It also specifies storage expansion enclosure license requirements.

*Table 1. Maximum allowable drives and drive loop pairs for FASTT storage servers*

<b>Product name</b>	<b>Machine type</b>	<b>Model number</b>	<b>Maximum number of drives</b>	<b>Maximum number of drive loop pairs</b>	<b>License requirement to add storage expansion units</b>
IBM TotalStorage FASTT200 Fibre Channel Storage Server	3542	1RU 1RX	38	1	None
IBM TotalStorage FASTT200 High Availability (HA) Fibre Channel Storage Server		2RU 2RX	66	1	None
IBM TotalStorage FASTT500 Fibre Channel Storage Server	3552	1RU 1RX	224	2	None
IBM TotalStorage FASTT700 Fibre Channel Storage Server	1742	1RU 1RX	224	2	None
IBM TotalStorage FASTT900 Fibre Channel Storage Server	1742	90X 90U	224	2	None

Table 1. Maximum allowable drives and drive loop pairs for FASiT storage servers (continued)

Product name	Machine type	Model number	Maximum number of drives	Maximum number of drive loop pairs	License requirement to add storage expansion units
IBM TotalStorage FASiT600 Fibre Channel Storage Server	1722	60X 60U	56	1	Purchase storage expansion unit entitlements in increments up to three storage expansion units per FASiT600 Storage Server.
IBM TotalStorage FASiT600 Turbo Fibre Channel Storage Server			112	1	None. The FASiT600 Turbo option includes a seven storage expansion unit entitlement.
IBM TotalStorage FASiT600 Single Controller Fibre Channel Storage Server		6LU 6LX	14	0	None. The FASiT600 Single Controller Storage Server does not support storage expansion enclosure attachment.

**Notes:**

1. The maximum number of drives supported by the FASiT200 HA Storage Server (models 2RU and 2RX) assumes attachment to 4 EXP700 storage expansion enclosures containing 56 fibre channel drives.
2. The maximum number of drives supported by the FASiT500, FASiT700, and FASiT900 storage servers assumes their attachment to 16 EXP700 storage expansion enclosures.

You can mix FASiT TotalStorage EXP500 (which operates only at 1 Gbps) and FASiT TotalStorage EXP700 (which operates at either 1 Gbps or 2 Gbps) storage expansion enclosures in the same redundant drive loop pair in all FASiT Storage Server configurations with one exception. FASiT600 Storage Server configurations do not accommodate this mix. The FASiT600 Storage Server (models 60X and 60U) supports only FASiT EXP700 storage expansion enclosures.

Although the EXP700 storage expansion enclosure is capable of operating at 2 Gbps, you must set the fibre channel speed of drive loops in a mixed storage expansion enclosure environment to the lowest fibre channel speed supported by all hardware in the loop, which is 1 Gbps. If one of the drive loops in a FASiT storage configuration is set to 1 Gbps, you must set all of the drives loops to 1 Gbps. This speed restriction applies to all four drive loops in either the FASiT700 or FASiT900 storage subsystem configuration, even where some of the drive loops consist only of EXP700 storage expansion enclosures that might otherwise operate at 2 Gbps.

**Important:** Do not change the speed of a drive loop while the FAStT Storage Server is powered on. Such a speed change will cause unpredictable results. To change the speed of a drive loop:

1. Shutdown the FAStT Storage Server.
2. Shutdown the FAStT storage expansion enclosures.
3. Change the fibre channel speed settings.
4. Power on the FAStT storage expansion enclosures.
5. Power on the FAStT Storage Server.

**Note:** For additional information on turning a storage server on and off, see the appropriate *FAStT Storage Server installation and user's guide*. For more information on these guides, see the following Web site:

[www-1.ibm.com/servers/storage/support/fastt/index.html](http://www-1.ibm.com/servers/storage/support/fastt/index.html)

For hardware compatibility, ensure that the environmental service module (ESM) firmware for each storage expansion enclosure and the storage server controller firmware are either at or above the levels that are recommended in Table 6 on page 10 and Table 7 on page 11.

Figure 1 on page 4 illustrates cabling of FAStT TotalStorage EXP500 and EXP700 storage expansion enclosures in a mixed configuration.

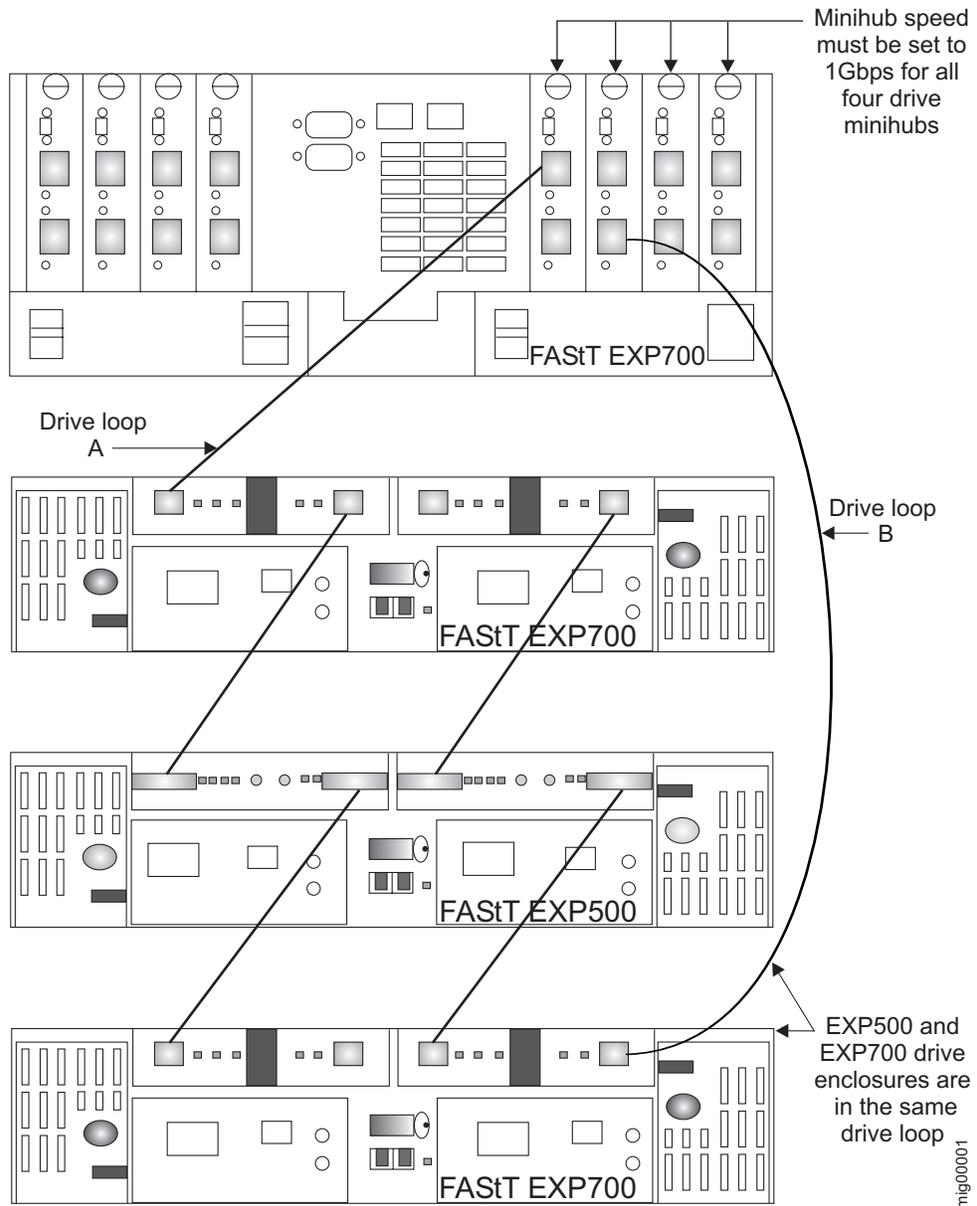


Figure 1. FASTt EXP500 and EXP700 cabling in a mixed configuration

There are maximum limits to the number of fibre channel hard drives that you can configure in redundant drive loop pairs. Table 2 on page 5 lists the numbers of EXP500 and EXP700 storage expansion enclosures that you can combine for use in a single redundant drive loop pair. Table 2 on page 5 assumes that a FASTt Storage Server is generally capable of addressing the maximum of 112 fibre channel hard drives for each redundant drive loop pair.

**Important:** IBM supports only those EXP500 and EXP700 Storage Expansion Unit combinations listed in Table 2 on page 5.

Table 2. Supported EXP500 and EXP700 combinations per maximum redundant drive loop pair drives

Total number of EXP500 enclosures per redundant drive loop pair	Total number of EXP700 enclosures per redundant drive loop pair	Maximum number of storage expansion units per redundant drive loop pair	Maximum number of drives per redundant drive loop pair
11	0	11	110
10	0	10	100
9	1	10	104
8	2	10	108
7	3	10	112
6	3	9	102
5	4	9	106
4	5	9	110
3	6	9	114
2	6	8	104
1	7	8	108
0	8	8	112

**Note:** The combination of three EXP500 and six EXP700 storage expansion enclosures has the maximum number of 114 drives per redundant drive loop pair. You can have this maximum number of hard drives per drive loop pair only in this mixed EXP500 and EXP700 configuration.

## Enclosure IDs

Each drive enclosure in a FAST storage subsystem drive loop must have a unique drive enclosure ID. FAST controllers use a combination of the enclosure ID and the number of the physical slot that a fibre channel hard drive occupies to create a unique fibre channel loop address or arbitrated loop physical address (AL\_PA) for each drive in a fibre channel drive loop. The enclosure ID consists of two digits, a tens (x10) digit and a ones (x1) digit. The possible values for the tens and the ones digits are 0-9 for EXP500 drive enclosures, and 0-7 for EXP700 drive enclosures.

Give each drive expansion enclosure in a redundant drive loop a unique ones digit ID. This setting will enforce hard AL\_PAs (unchangeable between fibre channel Loop Initializations [LIPs]) for the drives and facilitate drive loop problem troubleshooting in the event of an error. If the ones digits are not unique, two or more devices will have the same hard AL\_PA. In such a case, the controller will use soft AL\_PAs for the devices that have identical hard AL\_PAs.

The problem with soft addressing is that addresses may change between LIPs. This possibility increases the difficulty of troubleshooting drive loop problems, since one cannot easily ascertain whether the same device with a different address or a different device may be causing a problem. Since the FAST storage server supports more enclosures than available values of the enclosure ID ones digit, Table 3 on page 6, Table 4 on page 6, and Table 5 on page 7 suggest enclosure ID settings for various drive expansion enclosure families to minimize soft addressing in a drive loop.

Table 3. EXP500 Storage Expansion Enclosure ID settings

Storage expansion enclosure	Enclosure ID setting for enclosure in the first redundant drive loop	Enclosure ID setting for enclosure in the second redundant drive loop
1st unit (storage expansion enclosure, FASiT600, or FASiT200 Storage Server)	00	x0 (where x is 2-7)
2nd unit (EXP500)	01	x1 (where x is 2-7)
3rd unit (EXP500)	02	x2 (where x is 2-7)
4th unit (EXP500)	03	x3 (where x is 2-7)
5th unit (EXP500)	04	x4 (where x is 2-7)
6th unit (EXP500)	05	x5 (where x is 2-7)
7th unit (EXP500)	06	x6 (where x is 2-7)
8th unit (EXP500)	07	x7 (where x is 2-7)
9th unit (EXP500)	08	x8 (where x is 2-7)
10th unit (EXP500)	09	x9 (where x is 2-7)
11th unit (EXP500)	10	x0 (where x is 3-7)

**Note:** Drives in the 11th enclosures of of each drive loop in Table 3 will have soft AL\_PAs.

Table 4 suggests enclosure ID settings that minimize soft addressing for the EXP700 Storage Expansion Enclosure in a drive loop.

Table 4. EXP700 Storage Expansion Enclosure ID settings

Storage expansion enclosure	Enclosure ID setting for enclosure in the first redundant drive loop	Enclosure ID setting for enclosure in the second redundant drive loop
1st unit (storage expansion enclosure, FASiT600, or FASiT200 Storage Server)	00	x0 (where x is 1-7)
2nd unit (EXP700)	01	x1 (where x is 1-7)
3rd unit (EXP700)	02	x2 (where x is 1-7)
4th unit (EXP700)	03	x3 (where x is 1-7)
5th unit (EXP700)	04	x4 (where x is 1-7)

Table 4. EXP700 Storage Expansion Enclosure ID settings (continued)

Storage expansion enclosure	Enclosure ID setting for enclosure in the first redundant drive loop	Enclosure ID setting for enclosure in the second redundant drive loop
6th unit (EXP700)	05	x5 (where x is 1-7)
7th unit (EXP700)	06	x6 (where x is 1-7)
8th unit (EXP700)	07	x7 (where x is 1-7)

**Note:** All drives in drive loops described in Table 4 on page 6 will be assigned hard AL\_PAs.

Table 5 suggests enclosure ID settings that minimize soft addressing for the EXP500 and EXP700 Storage Expansion Enclosure when intermixed in a redundant drive loop.

Table 5. Intermixed EXP500 and EXP700 Storage Expansion Enclosure ID settings

Storage expansion enclosure	Enclosure ID setting for enclosure in the first redundant drive loop	Enclosure ID setting for enclosure in the second redundant drive loop
1st unit (storage expansion enclosure, FAStT600, or FAStT200 Storage Server)	00	x0 (where x is 2-7)
2nd unit (EXP500 or EXP700)	01	x1 (where x is 2-7)
3rd unit (EXP500 or EXP700)	02	x2 (where x is 2-7)
4th unit (EXP500 or EXP700)	03	x3 (where x is 2-7)
5th unit (EXP500 or EXP700)	04	x4 (where x is 2-7)
6th unit (EXP500 or EXP700)	05	x5 (where x is 2-7)
7th unit (EXP500 or EXP700)	06	x6 (where x is 2-7)
8th unit (EXP500 or EXP700)	07	x7 (where x is 2-7)
9th unit (EXP500 or EXP700)	10	x0 (where x is 2-7)
10th unit (EXP500 or EXP700)	11	x1 (where x is 2-7)

**Note:** The drives in the 9th and 10th enclosures in each drive loop described in Table 5 will have soft AL\_PAs.

---

## FASTT Storage Manager installation and support guides

This publication frequently cites *IBM TotalStorage FASTT Storage Manager installation and support guides* supporting various versions and operating system environments. There are currently two, namely:

- *IBM TotalStorage FASTT Storage Manager Installation and Support Guide for AIX, HP-UX, and Solaris*
- *IBM TotalStorage FASTT Storage Manager Installation and Support Guide for Intel-based Operating System Environments*

Visit the following Web site to access documentation related to your particular operating system and FASTT Storage Manager version.

[www-1.ibm.com/servers/storage/support/fastt/index.html](http://www-1.ibm.com/servers/storage/support/fastt/index.html)

See “Additional FASTT documentation,” on page 51 for more information.

---

## Chapter 2. Prerequisites to adding capacity and hard drive migration

Perform the preliminary steps detailed in this chapter before you add storage capacity or migrate hard drives. After you meet these prerequisite requirements, proceed to any of the following sections to address your particular storage hardware addition or migration requirements:

- Chapter 3, “Adding one or more new fibre channel hard drives,” on page 15
- Chapter 4, “Adding expansion units containing new hard drives,” on page 19
- Chapter 5, “Migrating one or more fibre channel hard drives,” on page 29
- Chapter 6, “Migrating expansion units containing hard drives,” on page 33
- Chapter 7, “Upgrading a storage server in a functioning configuration,” on page 41

Failure to perform the steps listed in this section might result in loss of data availability, and in some cases, loss of data. Perform the following steps on the FASTT Storage Server to which you will migrate or add new hard drives:

1. Complete a full backup of all data residing on the FASTT Storage Server.
2. Verify that the backup was successful.
3. Verify that the FASTT Storage Server has the latest controller firmware, non-volatile storage random access memory (NVRAM), and ESM firmware.

**Note:** If your FASTT Storage Server has controller firmware version 04.01.02.29 or lower, download and install controller firmware version 4.01.02.33 or higher before you download and install controller firmware version 5.30.xx.xx or higher.

4. Verify that the fibre channel drive firmware is at the latest level.
5. Verify that the FASTT Storage Server to which you will migrate the hard drives is in optimal state. If it is not, perform the appropriate steps listed in the Recovery Guru to bring the storage server into optimal state.
6. Use the `Read_Link_Status` function of the Storage Manager client program and the FASTT Storage Server management event log (MEL) to verify that the drive loops are in optimal state.
7. Investigate and resolve any errors that reported in the FASTT Storage Server MEL.
8. Save and store the storage subsystem profile of the FASTT Storage Server.

**Important:** Do not store FASTT Storage Server profiles in the same location as the logical drives defined on your FASTT Storage Server. Should you do so, and a RAID array failure occurs during subsequent migration, the data will be lost.

If you are migrating drives from another FASTT Storage Server, you must also perform the preceding steps 1 through 8 on the FASTT Storage Server from which you intend to migrate hard drives. You must also perform the following steps to flush server-cached I/O to disks.

1. Stop all programs, services or processes in the host servers that access the logical drives defined in the migrated hard drives.
2. Verify that there are no programs, services, or processes running in the background that might write data to the logical drives. (For example, Microsoft® MSCS service periodically writes to the “Quorum” disk.)

3. Unmount the file systems to flush I/O from the server cache to disk.

**Notes:**

- a. In a Microsoft Windows® environment, it is also necessary for you to remove the drive letter or the mount points of the mapped LUNs instead of unmounting the file systems.
- b. Consult documentation associated with your particular operating system for detailed information regarding the Unmount procedure.

After you meet prerequisites described in this section, proceed to any of the following sections to address your particular drive migration requirements.

- Chapter 3, “Adding one or more new fibre channel hard drives,” on page 15
- Chapter 4, “Adding expansion units containing new hard drives,” on page 19
- Chapter 5, “Migrating one or more fibre channel hard drives,” on page 29
- Chapter 6, “Migrating expansion units containing hard drives,” on page 33
- Chapter 7, “Upgrading a storage server in a functioning configuration,” on page 41

---

## Verifying ESM firmware and NVSRAM file levels

The controller firmware and NVSRAM of the FASTT Storage Server to which you will migrate hard drives, and the ESM firmware in the FASTT storage expansion enclosures must be at the levels indicated in Table 6 to ensure firmware compatibility between the migrating and original hardware. Additionally, FASTT Storage Manager version 8.3 or higher client software, in conjunction with the controller firmware level 5.30.xx.xx or higher, allows you to upgrade the ESM firmware while the storage server receives I/O from the host server.

**Tip:** Even though you can upgrade the FASTT Storage Server and ESM firmware while it processes I/O from the host server, schedule upgrades to occur during time periods of low I/O between the FASTT storage servers and host servers.

Table 6 lists IBM FASTT machine types and model numbers, as well as their current firmware (AppWare or BootWare) and NVSRAM versions.

*Table 6. Compatible controller firmware and NVSRAM version by machine type and model number*

Product name/model	Machine type	Model number	Firmware version (AppWare / BootWare)	NVSRAM version
IBM TotalStorage FASTT200 Fibre Channel Storage Server	3542	1RU 1RX	05.30.16.00	N3542-1RUR830V09
IBM TotalStorage FASTT200 HA Fibre Channel Storage Server		2RU 2RX	05.30.16.00	N3542-2RUR830V12
IBM TotalStorage FASTT500 Fibre Channel Storage Server	3552	1RU 1RX	05.30.16.00	N3552F500R830V05

Table 6. Compatible controller firmware and NVSRAM version by machine type and model number (continued)

Product name/model	Machine type	Model number	Firmware version (AppWare / BootWare)	NVSRAM version
IBM TotalStorage FAStT700 Fibre Channel Storage Server	1742	1RU 1RX	05.30.16.00	N1742R700R830V05
IBM TotalStorage FAStT900 Fibre Channel Storage Server	1742	90X 90U	05.30.16.00	N1742F900R830V06
IBM TotalStorage FAStT600 Fibre Channel Storage Server	1722	60X 60U	05.34.02.00	N1722F600R834V01
IBM TotalStorage FAStT600 Turbo Fibre Channel Storage Server			05.40.11.00	N1722F600R840V05
IBM TotalStorage FAStT600 Single Controller Fibre Channel Storage Server		6LU 6LX	05.34.02.00	N1722F60LR834V0

**Note:** Visit the following Web site either to verify software version levels or to identify possible interim updates to firmware and NVSRAM file versions described in Table 6 on page 10.

[www-1.ibm.com/servers/storage/support/fastt/index.html](http://www-1.ibm.com/servers/storage/support/fastt/index.html)

Update the FAStT controller firmware and NVSRAM to the levels indicated in Table 6 on page 10 (or higher) before you upgrade the ESM firmware on the storage expansion enclosures to versions indicated in Table 7.

Table 7 lists IBM FAStT storage expansion enclosure models by name, machine type, model number, and current ESM firmware version.

Table 7. Compatible expansion unit ESM firmware version by machine type and model number

FAStT Storage Expansion Unit product name/model	Machine type	Model number	ESM firmware version
IBM TotalStorage FAStT EXP500	3560	1RU 1RX	9166
IBM TotalStorage FAStT EXP700	1750	1RU 1RX	9325

Perform the following steps to upgrade ESM firmware for a down-level controller:

1. Upgrade the FAStT Storage Manager software to the latest version. That is FAStT Storage Manager version 8.4x for firmware versions 05.3x.xx.xx and

higher. For additional information, see the *IBM TotalStorage FASTT Storage Manager installation and support guide* for the appropriate server operating system environment at:

[www-1.ibm.com/servers/storage/support/fastt/index.html](http://www-1.ibm.com/servers/storage/support/fastt/index.html)

**Note:** To ensure the highest level of software compatibility, update the host server's multi-path software (Redundant Disk Array Controller [RDAC], IBMSAN.CDM, or Linux failover adapter driver) to the level that is either supported by or released with the controller firmware that you intend to download. See the following Web site for current details on software compatibility:

[www-1.ibm.com/support/docview.wss?uid=psg1MIGR-50176](http://www-1.ibm.com/support/docview.wss?uid=psg1MIGR-50176)

2. Upgrade the controller firmware and NVSRAM.

**Note:** See the readme file in the FASTT Storage Manager software package associated with the appropriate host operating system environment for a support statement about the concurrent controller firmware download (that is, downloading code to the FASTT Storage Server while it is processing I/O from the host server).

3. Upgrade the storage expansion enclosure ESM firmware. With FASTT Storage Manager version 8.3 or higher and controller firmware version 05.3x.xx.xx or higher, you can update the ESM firmware while the FASTT Storage Server is processing I/O from the host server.

**Important:** Even though the FASTT Storage Server supports controller and ESM firmware upgrade while the FASTT Storage Server processes I/O from the host server, schedule controller and ESM firmware upgrades to occur during time periods of low I/O between the FASTT storage servers and host servers.

---

## Upgrading fibre channel drive firmware levels

Before you begin migration, upgrade the fibre channel drive firmware to the latest level. Suspend I/O from the hosts during drive firmware upgrade. Do not move or migrate fibre channel drives from a 1 Gbps fibre channel environment to a 2 Gbps fibre channel environment unless you have installed the latest firmware documented to enable their operation in a 2 Gbps fibre channel environment.

---

## Bringing storage subsystems and drive loops into optimal state

**Note:** For additional information on how to make this determination, see the *FASTT Problem Determination Guide* associated with your particular FASTT hardware model.

After you have updated or verified that a FASTT Storage Server is using the latest firmware and NVSRAM:

1. Bring the FASTT Storage Server to its optimal state before reconfiguring it with new hardware.
2. Use the FASTT Storage Manager client program to display the status of the FASTT Storage Server and to correct any problems that might cause the FASTT Storage Server to enter its Needs Attention state.
3. Verify that all indicator lights on the storage subsystem are in their optimal state.

4. In addition, use the `Read_Link_Status` function of the FASTT Storage Manager client program and the FASTT Storage Server MEL to verify that all components in the drive loop are in their optimal states (that is, there are no drive loop component errors in the event log and no errors in the `Read_Link_Status` window.)
5. If the arrays are in degraded state due to failed drive, correct the problem before migration.

If necessary, contact the IBM Help Center in your geography for assistance with event log interpretation.

It is necessary for certain tasks to complete before proceeding to add drives or enclosures. Before you add drives or enclosures, verify that the storage subsystem involved is not performing any of the following tasks.

- Dynamic logical drive capacity expansion (dynamic volume expansion [DVE] or dynamic capacity expansion [DCE])
- Logical drive segment size modification
- Array RAID-level modification
- User-initiated array redundancy checking (menu option **Array** → **Check Redundancy** in the Subsystem Management window)
- Remote mirror logical drive synchronization
- FlashCopy® or VolumeCopy logical drive creation
- Logical drive reconstruction or copyback. This action is sometimes referred to as logical drive sparing.

---

## Saving the storage subsystem profile

Use the FASTT Storage Manager client program to save a FASTT Storage Server profile. Such a profile is necessary to restore a storage subsystem configuration in the event of a catastrophic failure. Migration from one FASTT Storage Server configuration to another will require that you save both FASTT Storage Server configuration profiles involved. For details on this procedure, see one of the following:

- FASTT Storage Manager client program Client Subsystem Management window online help
- *IBM TotalStorage FASTT Storage Manager installation and support guide* associated with your particular operating system environment located at: [www-1.ibm.com/servers/storage/support/fastt/index.html](http://www-1.ibm.com/servers/storage/support/fastt/index.html)
- *Saving a module profile report and state capture information to help prevent data loss* located at: [www-3.ibm.com/pc/support/site.wss/document.do?Indocid=MIGR-4VVPEF](http://www-3.ibm.com/pc/support/site.wss/document.do?Indocid=MIGR-4VVPEF)

**Important:** Do not store FASTT Storage Server profiles in the same location as the logical drives defined on your FASTT Storage Server. Should you do so, and a RAID array failure occurs during subsequent migration, the data will be lost.



---

## Chapter 3. Adding one or more new fibre channel hard drives

While adding a fibre channel hard drive to either a controller or a drive expansion enclosure, observe these important rules:

- Observe proper electrostatic discharge (ESD) procedures when handling electronic equipment.
- Never alter the physical configuration of a FAStT Storage Server while it is powered off unless you are instructed to do so as part of a FAStT configuration procedure. Specifically, never attach storage components to or remove storage components from a configured FAStT Storage Server while it is powered off.
- Any fibre channel hard drive, whether new or old, might contain configuration data. Unless you intend to migrate a drive from another FAStT Storage System (retaining its configuration data), always use the following procedure to add one or more fibre channel drives to a functioning FAStT Storage Server configuration.

Neither FAStT EXP700 storage expansion units nor FAStT600 storage servers support 1 Gbps fibre channel drives. These drives will not spin up when you insert them into EXP700 or FAStT600 drive slots.

To identify a 1 Gbps fibre channel drive, locate the product's label and examine its ID or Model Number. Hard drives with ID or Model Number values that end with "04FC" or "03FC" are 1 Gbps fibre channel drives. For example, "ST173404FC", "ST318203FC" and "ST136403FC" are model numbers that appear on several 1 Gbps fibre channel hard drives.

The following procedure outlines the steps necessary to add one or more new fibre channel hard drives to empty drive slots in either FAStT200 or FAStT600 controllers or in EXP500 or EXP700 storage expansion enclosures. If you plan to add a used drive, be sure that there is no configuration data on the drive that you need to preserve. Add drives to a FAStT Storage Server only while it is powered on and in optimal state. See the *FAStT Problem Determination Guide* associated with your particular FAStT hardware model or "Bringing storage subsystems and drive loops into optimal state" on page 12 for additional information on how to make this determination.

---

### Activity 1: Disabling the drive migration settings

Before you add fibre channel drives to the subsystem, perform this activity to remove any configuration data that they may contain.

1. Open the Storage Manager client program's Enterprise Management window.
2. Right-click on the name of the FAStT storage subsystem to which you intend to add fibre channel drives and click **Execute Script**.
3. A script editor window opens. Click **File** → **Load Script**.
4. A Load Script file selection window opens. Locate and select the file named `DisableDriveMigration.scr` and click **OK**. The `DisableDriveMigration.scr` file is normally located in the `SCRIPTS` directory of the IBM FAStT Storage Manager Installation Compact Disc (CD). Use this file to reset the FAStT storage subsystem setting to ignore configuration data that might reside on newly discovered hard drives. Figure 3 on page 18 provides a listing of the `DisableDriveMigration.scr` file.
5. Click **Tools** → **Verify and Execute** to run the script.
6. When the script completes execution, reset both FAStT controllers to enable the FAStT drive migration setting.

If you used the DisableDriveMigration.scr script associated with this document and described in Figure 2 on page 17, it is not necessary for you to perform this step because the last two commands in that script file automatically reset the controllers.

To reset the controllers, open the Storage Subsystem Management window and sequentially (one at a time) reset each controller by clicking **Advanced** → **Reset Controller**. Then, follow the instructions in the Reset Controller window when it opens.

---

## Activity 2: Inserting fibre channel drives

1. Insert fibre channel drives as pairs (two at a time) into the empty drive slots.
2. Wait until each drive pair has fully spun up and displayed in the FASTT Storage Subsystem Management window before inserting the next drive pair.

---

## Activity 3: Re-enabling the drive migration settings

Perform this activity to re-enable the drive migration settings if you performed “Activity 1: Disabling the drive migration settings” on page 15 to disable FASTT storage subsystem drive migration settings. If you do not, whenever you might subsequently, even momentarily remove a drive from the storage subsystem for any reason, its configuration data will be cleared. When the storage subsystem next recognizes such a drive, it will display it as unconfigured.

**Attention:** In order to prevent data loss, set the FASTT Storage Server drive migration to enable after you complete the fibre channel hard drive addition process.

1. Open the Storage Manager client program Enterprise Management window.
2. Right-click on the name of the FASTT storage subsystem to which you want to add fibre channel drives and click **Execute Script**.
3. A script editor window opens. Click **File** → **Load Script**.
4. A Load Script file selection window opens. Locate, and select the file named EnableDriveMigration.scr and click **OK**. The file EnableDriveMigration.scr is normally located in the SCRIPTS directory of the IBM FASTT Storage Manager Installation CD. Use this file to reset the FASTT storage subsystem setting in order to check for configuration data that might reside on newly discovered hard drives. Figure 2 on page 17 provides a listing of the EnableDriveMigration.scr file.
5. Click **Tools** → **Verify and Execute** to run the script.
6. When the script completes execution, reset both FASTT controllers to enable the FASTT drive migration setting.

If you use the EnableDriveMigration.scr script associated with this document and described in Figure 2 on page 17, it is not necessary for you to perform this step because the last two commands in that script file automatically reset the controllers.

To reset the controllers, open the Storage Subsystem Management window and sequentially (one at a time) reset each controller by clicking **Advanced** → **Reset Controller**, and then following the instructions in the Reset Controller window when it opens.

**Result:** The newly added drives are ready for you to configure and map to host servers.

The next two figures list the EnableDriveMigration.scr and DisableDriveMigration.scr files.

```
// Name: Enable Drive Migration
//
// Date: 05-08-2004
// Revision: 1.3
// Comments:
// This script is intended to work with controllers at Firmware 05.30.xx.xx and
// higher only.
//
// This script returned the FASTT to it's default operation of importing
// configuration information from disks.
//
// This script will reboot both controllers in the FASTT unit. If your
// hosts are configured for multi-path support, this can be done with I/O
// running to the controllers. If your hosts are not configured for
// redundant access you must schedule downtime before running this
// script.
//
// See the directions at the bottom of this script if you do not have multi
// path software installed and wish to prevent the controller restarts
//
// Show the current state of Drive Migration
show "Showing the current state of Drive Migration (80=0ff, 82=0n)";
show controller[a] nvsrambyte[0x35];
show controller[b] nvsrambyte[0x35];
//
// Setting Drive Migration to Enable
show "Setting Drive Migration to Enable";
set controller[a] nvsrambyte[0x35] = 0x02,0x00;
set controller[b] nvsrambyte[0x35] = 0x02,0x00;
show controller[a] nvsrambyte[0x35];
show controller[b] nvsrambyte[0x35];
//
// Reset Controllers to make changes active. Note:
// To prevent the controllers from restarting, add '//' to the beginning
// of each of the lines below. This will comment out the restart of the
// controllers. Important: The controllers will have to be restarted for the
// changes in this script to take effect.
//
show "Resetting controller A";
reset Controller [a];
show "Resetting controller B";
reset Controller [b];
show "Drive Migration is now enabled.";
```

Figure 2. EnableDriveMigration.scr file listing

```

// Name: Disable Drive Migration
//
// Date: 05-08-2004
// Revision: 1.3
// Comments:
// This script is intended to work with controllers at Firmware 05.30.xx.xx and
// higher only.
// This script allows the addition of disk drives while the system is running
// and by clearing the configuration of any drives as unused capacity
// regardless of past configuration of these drives.
//
// Attention: This setting should not be left active after the new disks have
// been added to the subsystem. Leaving this setting active could
// cause the configuration for the FASTt to be lost if the FASTt is
// power cycled incorrectly. Please run the EnableDriveMigration.scr
// after all the disks are added.
//
//
// This script will reboot both controllers in the FASTt unit. If your
// hosts are configured for multi-path support, this can be done with I/O
// running to the controllers. If your hosts are not configured for
// redundant access you much schedule downtime before running this
// script.
//
// Show the current state of Drive Migration
show "Showing the current state of Drive Migration (80=Off, 82=On)";
show controller[a] nvsrambyte[0x35];
show controller[b] nvsrambyte[0x35];
//
// Setting Drive Migration to Disable
show "Setting Drive Migration to Disable";
set controller[a] nvsrambyte[0x35] = 0x02,0x02;
set controller[b] nvsrambyte[0x35] = 0x02,0x02;
show controller[a] nvsrambyte[0x35];
show controller[b] nvsrambyte[0x35];
//
// Reset Controllers to make changes active
// To prevent the controllers from restarting, add '/' to the beginning
// of each of the lines below. This will comment out the restart of the
// controllers. Important: The controllers will have to be restarted for
// the changes in this script to take effect.
show "Resetting controller A";
reset Controller [a];
show "Resetting controller B";
reset Controller [b];
//
show "Drive Migration is now disabled. Add the new drives to the subsystem,";
show "then execute the EnableDriveMigrationScript.scr to re-enable drive ";
show "migration.";

```

Figure 3. DisableDriveMigration.scr file listing

---

## Chapter 4. Adding expansion units containing new hard drives

While adding storage expansion enclosures containing new hard drives, observe these important rules:

- Observe proper ESD procedures when handling electronic equipment.
- Never alter the physical configuration of a FAStT Storage Server while it is powered off unless you are instructed to do so as part of FAStT configuration procedure. Specifically, never attach storage components to or remove storage components from a configured FAStT Storage Server while it is powered off.
- Any fibre channel hard drive, whether new or old, might contain configuration data. Unless you intend to migrate drives from another FAStT Storage System (retaining their configuration data), always use the following procedure to add one or more storage expansion enclosures containing one or more fibre channel hard drives to a functioning FAStT Storage Server configuration.

Neither FAStT EXP700 storage expansion units nor FAStT600 storage servers support 1 Gbps fibre channel drives. These drives will not spin up when you insert them into EXP700 or FAStT600 drive slots.

To identify a 1 Gbps fibre channel drive, locate the product's label and examine its ID or Model Number. Hard drives with ID or Model Number values that end with "04FC" or "03FC" are 1 Gbps fibre channel drives. For example, "ST173404FC", "ST318203FC" and "ST136403FC" are model numbers that appear on several 1 Gbps fibre channel hard drives.

The following procedure describes the steps required to add one or more FAStT storage expansion enclosures containing new drives to a functioning FAStT Storage Server configuration.

---

### Activity 1: Preliminary activities

Add a new FAStT storage expansion enclosure as follows:

1. Verify that the FAStT Storage Server is both powered on and in optimal state. See the *FAStT Problem Determination Guide* associated with your particular FAStT hardware model or "Bringing storage subsystems and drive loops into optimal state" on page 12 for additional information on how to make this determination. You can perform this process while the FAStT Storage Server is processing I/O from or to the host server. However, because the drive loops are interrupted momentarily during the addition process, schedule additions to occur during time periods of low I/O between the FAStT storage servers and host servers. Review the readme and the *IBM TotalStorage FAStT Storage Manager installation and support guide* associated with the operating system environment of the host servers that connect to the FAStT Storage Server for any additional restrictions or required preparation tasks specific to your particular operating system environment. You will find the *IBM TotalStorage FAStT Storage Manager installation and support guides* at:  
[www-1.ibm.com/servers/storage/support/fastt/index.html](http://www-1.ibm.com/servers/storage/support/fastt/index.html)
2. Unpack and mount any additional storage expansion enclosures in the rack using the mounting hardware supplied with each storage expansion enclosure.

**Important:** Do not fully insert hard drives into the enclosures at this time. Keep them unlatched and no less than ½-inch away from their full insertion points in the drive slots.

- Set the enclosure ID of the additional storage expansion enclosures. Each drive enclosure in the FAStT storage subsystem drive loop must have a unique drive enclosure ID. In a EXP500 storage expansion enclosure, there is an enclosure ID switch mounted on each of two ESM canisters. Set each ESM canister's enclosure ID switch in the EXP500 drive enclosure to the same unique number in the drive loop. In a EXP700 storage expansion enclosure, the only enclosure ID switch is mounted between the power supplies. See the appropriate *FAStT storage expansion unit installation and user's guide* for additional information. Figure 4 illustrates the location of fibre channel speed switches on the EXP700 and EXP500 storage expansion enclosures.

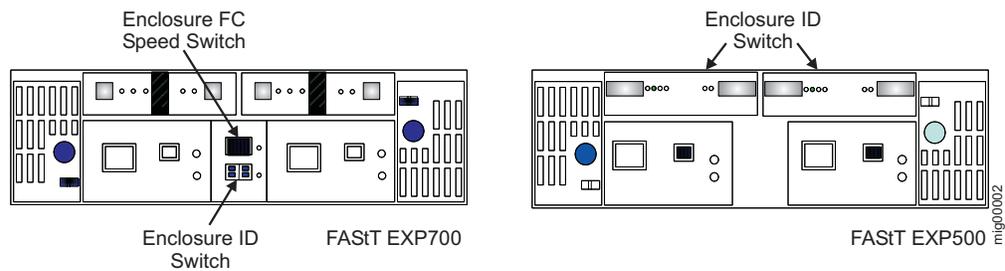


Figure 4. EXP700 and EXP500 enclosure ID and fibre channel speed switches

If the FAStT Storage Server to which the storage expansion enclosure will attach is either a FAStT200 or FAStT600 machine type, the enclosure IDs of additional storage expansion enclosures must differ from the FAStT200 or FAStT600 storage server enclosure IDs, which are normally set at “0” at the factory.

- Verify that the EXP700 Storage Expansion Unit speed switch is set to the correct drive loop speed.

**Note:** If the enclosure speed switch was originally set to 1 Gbps, do not automatically set it to 2 Gbps unless you are sure that each fibre channel hard drive that it now contains is capable of 2 Gbps operation and that you have installed the latest firmware enabling their operation in a 2 Gbps fibre channel environment.

- Insert the small form-factor pluggables (SFPs) or gigabit interface converters (GBICs) into only those fibre channel ports you intend to use. Do not leave GBICs or SFPs inserted into fibre channel port slots without connecting them to other fibre channel ports using fibre channel cables.

## Activity 2: Cabling new storage expansion units

To complete addition of FAStT storage expansion enclosures, cable the new storage expansion enclosures to the end of the functioning storage expansion enclosure drive loop to which you are migrating them. Add only one enclosure at a time to a functioning drive loop if you intend to attach multiple storage expansion enclosures.

The cabling instructions in the steps that follow are based on the cable routing scheme that is documented in *IBM TotalStorage FAStT Storage Manager installation and support guides*. The cabling instructions illustrated in Figure 5 on page 22, Figure 6 on page 23, and Figure 7 on page 24 describe cabling a FAStT

EXP700 Storage Expansion Enclosure to the redundant drive loop of a functioning FAStT600 Storage Server (model 60X or 60U).

The general cabling scheme for FAStT external drive enclosures is described in the *IBM TotalStorage FAStT Fibre Channel Cabling Guide* available at:

[www-3.ibm.com/pc/support/site.wss/document.do?Indocid=MIGR-4KELS5](http://www-3.ibm.com/pc/support/site.wss/document.do?Indocid=MIGR-4KELS5)

1. Extend one of the drive loops (that is, drive loop A) in a FAStT Storage Server redundant drive loop pair by connecting the OUT port of the last storage expansion enclosure to the IN port of the new storage expansion enclosure as shown in Figure 5 on page 22.

**Warning:** Carefully reconfigure only one drive loop at a time, making sure that the drive loop that you modify is properly connected and in optimal state before you attempt to reconfigure another drive loop. Take this precaution to prevent the arrays from being inadvertently failed by the FAStT Storage Server controllers. This happens when two or more drives in the arrays cannot be reached through either drive loop in the redundant drive loop pair.

2. Power on the newly added storage expansion enclosure unit.
3. Wait a few seconds; verify that the port bypass LEDs of all of the ports in drive loop A, now extended to the new storage expansion enclosure, are not lit. Using the FAStT Storage Manager Client Subsystem Management window, verify that the new storage expansion enclosure is added and displayed in the Logical/Physical view of the window.

Correct any errors before proceeding to step 4. For port bypass:

- a. Verify that the SFPs and GBICs or fibre channel cables are in good condition.
- b. Remove and reinsert SFPs, GBICs and fibre channel cables.
- c. Make sure the new drive expansion enclosure fibre channel speed switch is set to the same speed as the existing drive expansion enclosures and the FAStT Storage Server fibre channel speed setting.
- d. Verify that the ESM is good by physically removing and swapping it with the other ESM in the same drive expansion enclosure. For enclosure ID conflict, set the drive expansion enclosure ID switch to values unique from the current settings in the existing drive expansion enclosures and storage server.

Call the IBM Help Center in your geography for assistance if the problems persist.

4. In the other drive loop (that is, drive loop B) in a FAStT Storage Server redundant drive loop pair, remove the fibre channel connection from the storage subsystem drive loop port to the OUT port of the last storage expansion enclosure and connect it to the OUT port of the new drive enclosure as shown in Figure 6 on page 23.
5. Wait a few seconds; verify that the port bypass LEDs of the two ports in the fibre channel connection between the storage subsystem drive loop port and the OUT port of the new drive enclosure are not lit. Using the FAStT Storage Manager Client Subsystem Management window, verify that the new drive enclosure does not indicate the drive enclosure lost redundancy path error. See the preceding step 3 for possible corrective actions, if needed.
6. In drive loop B, cable the new drive enclosure's IN port to the OUT port of the last enclosure in the already functioning storage expansion enclosure drive loop as shown in Figure 7 on page 24.

- Wait a few seconds; verify that the port bypass LEDs of all of the ports in drive loop B to which you have added a new fibre channel connection are not lit. Using the FASiT Storage Manager Client Subsystem Management window, verify that all of the drive enclosures in the FASiT redundant drive loop pair to which the new enclosure was added does not report the drive enclosure lost redundancy path error.

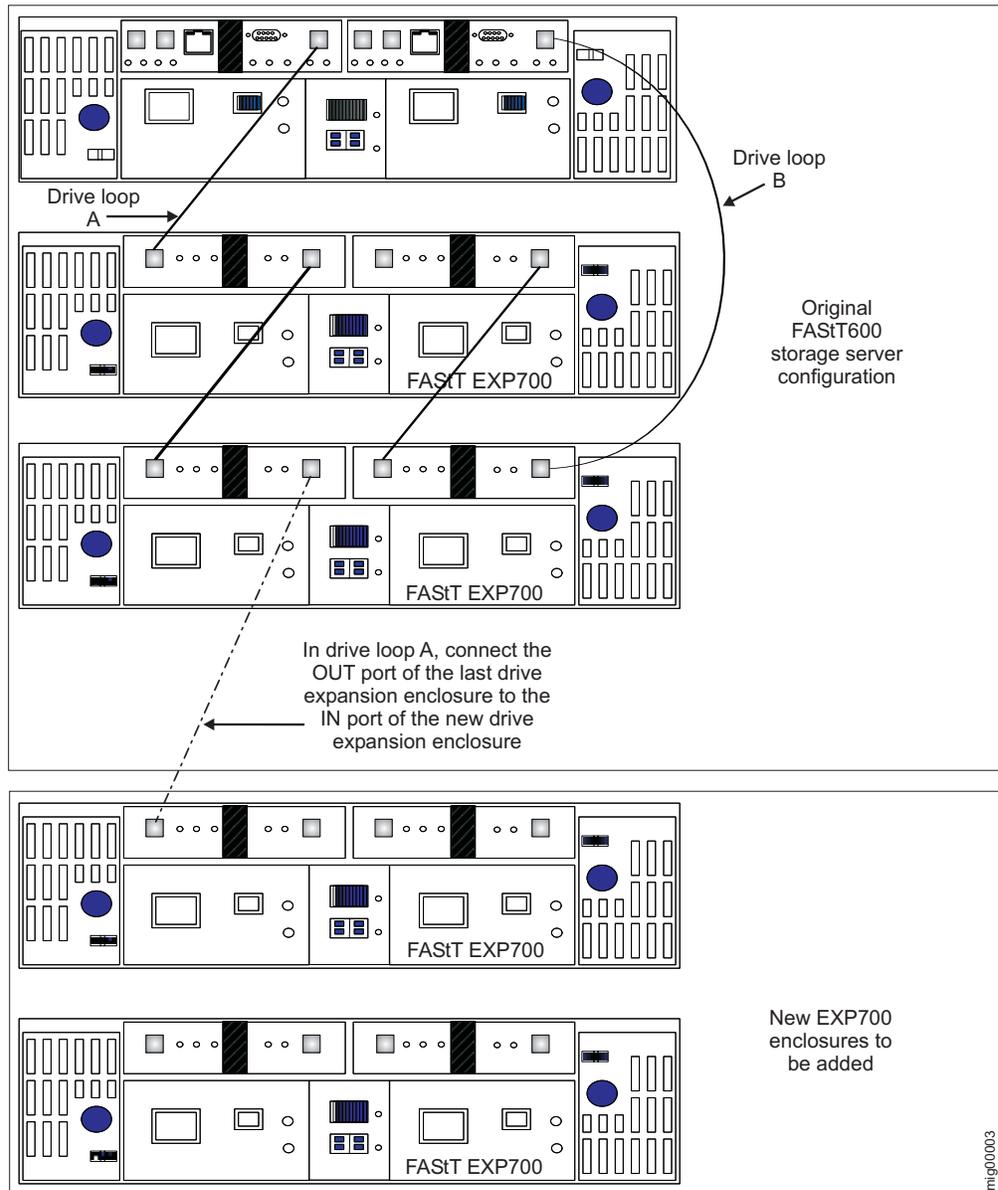


Figure 5. First connection: Cabling a single drive enclosure to a functioning drive loop

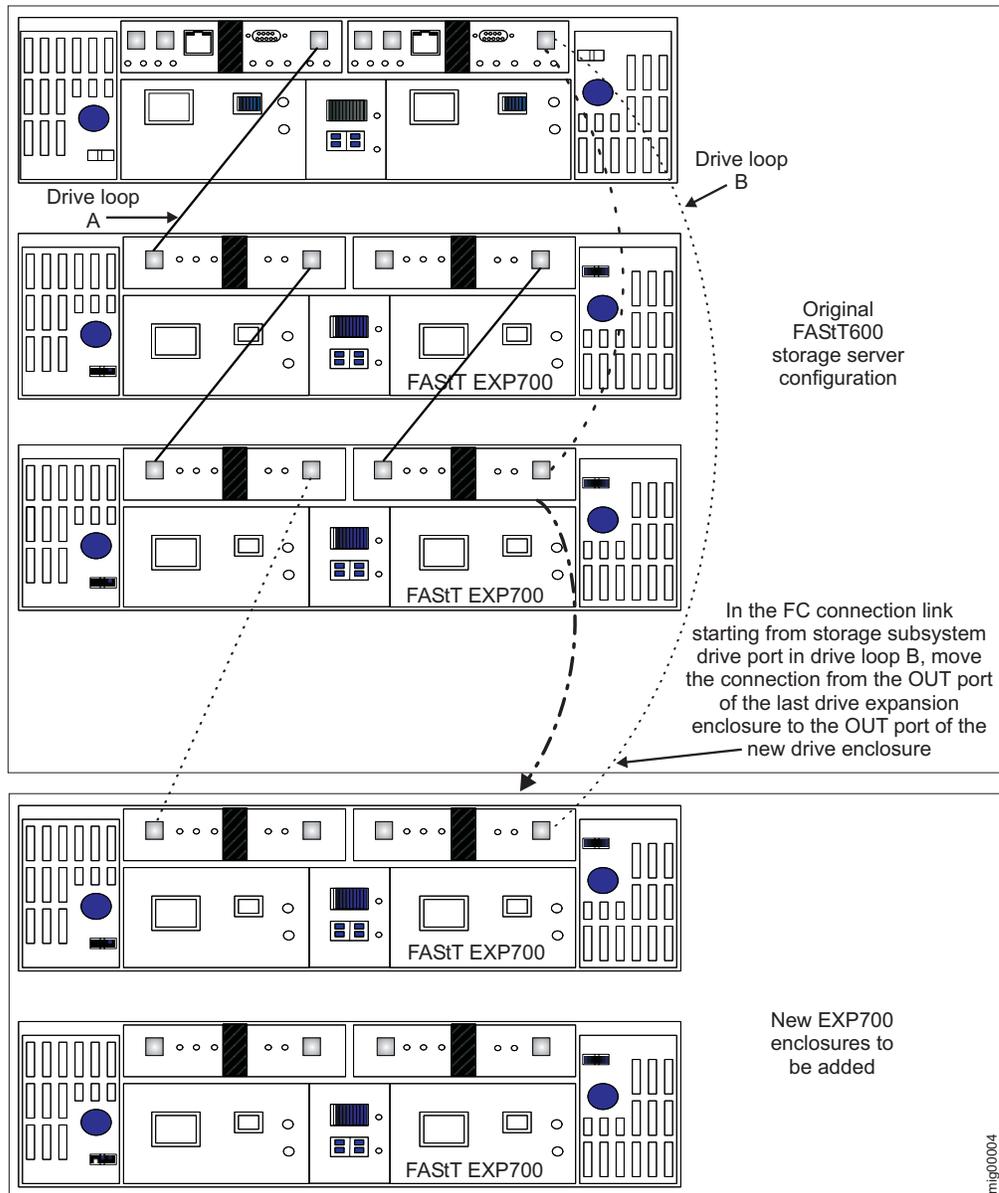


Figure 6. Second connection: Cabling a single drive enclosure to a functioning drive loop

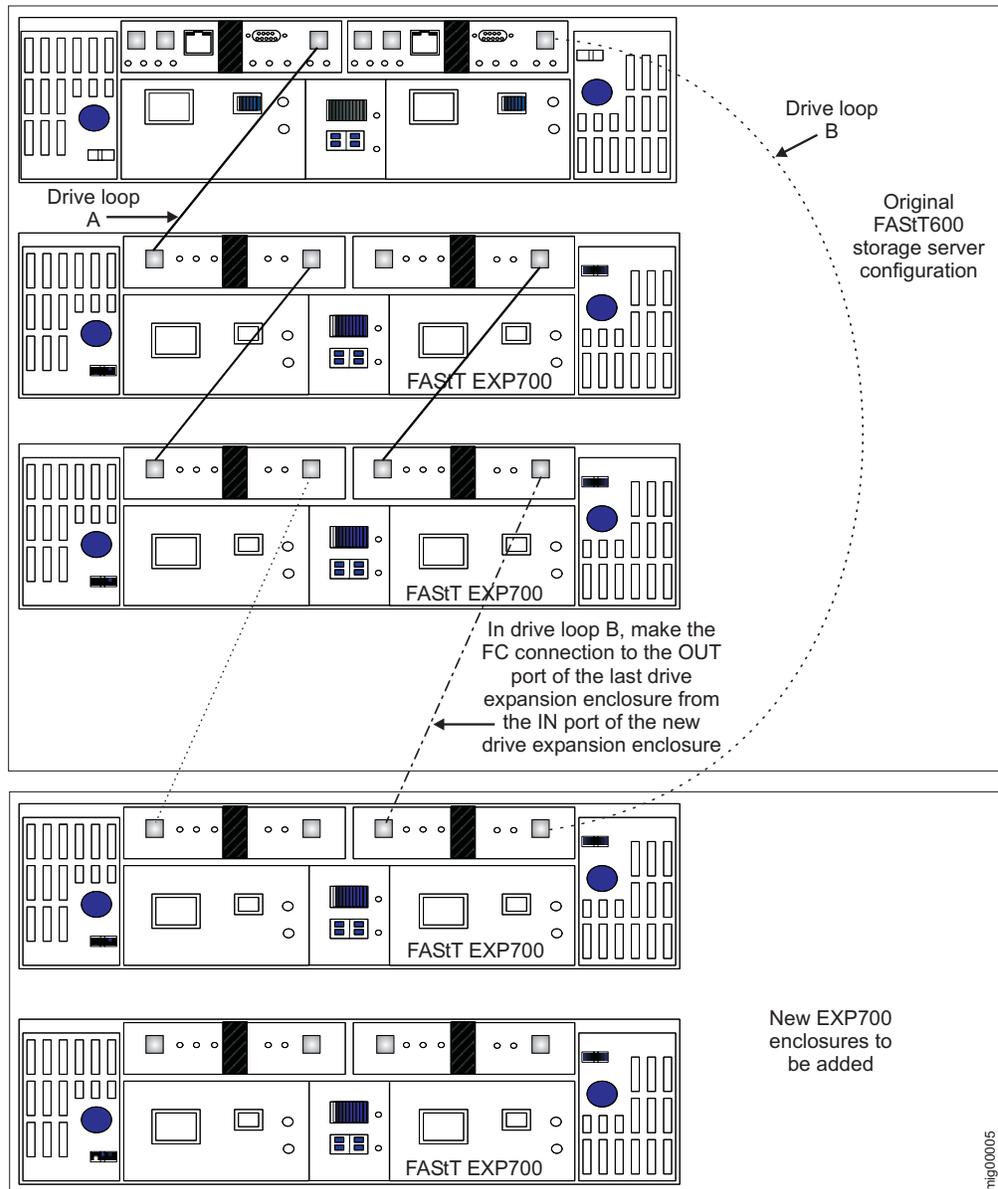


Figure 7. Third (final) connection: Cabling a single drive enclosure to a functioning drive loop

### Activity 3: Disabling storage subsystem drive migration settings

When you have completed cabling the new storage expansion enclosures, disable FASTt storage subsystem drive migration settings as follows:

1. Open the Storage Manager Client program Enterprise Management window.
2. Right-click on the name of the FASTt storage subsystem to which you want to add fibre channel drives, and select **Execute Script**.
3. A script editor window opens. Click **File** → **Load Script**.
4. A Load Script file selection window opens. Locate and select the `DisableDriveMigration.scr` file and click **OK**. The file `DisableDriveMigration.scr` file is normally in the `SCRIPTS` directory of the IBM FASTt Storage Manager Installation CD. This file is used to reset the FASTt storage subsystem setting,

in order to treat all newly-discovered hard drives as “new” drives, and to ignore any configuration information that might exist in the new hard drives. Figure 3 on page 18 contains the DisableDriveMigration.scr file listing.

5. Click **Tools** → **Verify and Execute** to run the script.
6. When the script execution completes, reset both FAStT controllers to make the disable drive migration settings effective. If you used the DisableDriveMigration.scr file described in this document in Figure 3 on page 18, you do not need to perform this step because the last two commands in the script file automatically reset the controllers. To reset the controllers, open the Storage Subsystem Management window and alternately (one at a time) reset each controller by clicking **Advanced** → **Reset Controller** and following the instructions in the Reset Controller window when it opens.

---

## Activity 4: Inserting drives and cabling additional storage expansion units

Once you have disabled FAStT storage subsystem drive migration settings, insert drives and connect additional storage expansion enclosures to complete the installation process as follows:

1. Insert the appropriate fibre channel drives into empty drive slots in the new enclosure in pairs (two at a time). Wait until the inserted drive pair fully spins up and displays in the FAStT Storage Subsystem Management window before inserting the next drive pair.
2. To connect additional storage expansion enclosures to the functioning drive loop pair, perform Activity 1: Preliminary activities step 2 on page 19 through step 5 on page 20, Activity 2: Cabling new storage expansion units step 1 on page 21 through step 6 on page 21, and step 1 (immediately preceding this step) for each additional storage expansion enclosure that you intend to add . (See Figure 8 on page 26.) When you have completed adding enclosures, proceed to Activity 5: Re-enabling drive migration settings step1 on page 27 to re-enable the drive migration settings.

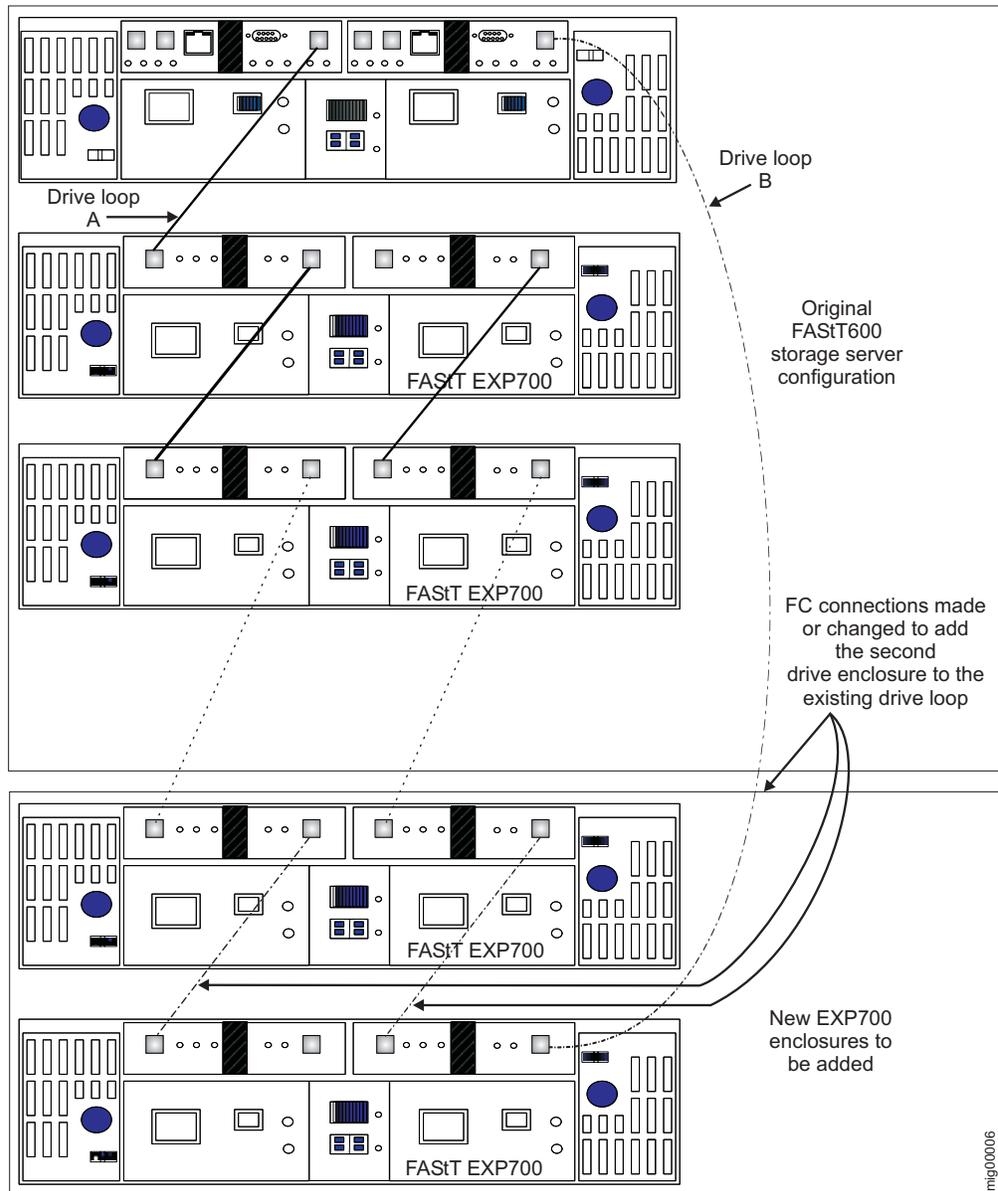


Figure 8. Cabling a second drive enclosure to a functioning drive loop

## Activity 5: Re-enabling drive migration settings

If you performed steps 1 on page 24 through 6 on page 25 of Activity 3: Disabling storage subsystem drive migration settings to disable FAST storage subsystem drive migration settings, perform the following steps 1 on page 27 through 6 on page 27 to re-enable the drive migration settings. If you should ever momentarily remove a drive from the storage subsystem, the storage subsystem clears its configuration data when it later recognizes it. When this happens, the drive displays as unconfigured.

**Attention:** In order to prevent data loss, set the FAST Storage Server drive migration setting to enable after you complete the fibre channel hard drive addition process.

1. Open the Storage Manager Client program Enterprise Management window.
2. Right-click on the name of the FAST storage subsystem to which you want to add fibre channel drives and click **Execute Script**.
3. A script editor window opens. Click **File → Load Script**.
4. A Load Script file selection window opens. Locate and select the EnableDriveMigration.scr file and click **OK**. The file EnableDriveMigration.scr file is normally in the SCRIPTS directory of the IBM FAST Storage Manager Installation CD. Use this file to reset the FAST storage subsystem setting in order to check for any configuration data that might exist on the newly discovered hard drives.
5. Click **Tools → Verify and Execute** to run the script.
6. When the script execution completes, reset both FAST controllers to make the setting effective.

If you use the EnableDriveMigration.scr script associated with this document and described in Figure 2 on page 17, it is not necessary for you to perform this step because the last two commands in that script file automatically reset the controllers. To reset the controllers, open the Storage Subsystem Management window and alternately (one at a time) reset each controller by clicking **Advanced → Reset Controller** and following the instructions in the Reset Controller window when it opens.

**Result:** The newly added drives are now ready for you to configure and map to host servers.

**Note:** Listings of the EnableDriveMigration.scr and DisableDriveMigration.scr files are found in Figure 2 on page 17 and Figure 3 on page 18.



---

## Chapter 5. Migrating one or more fibre channel hard drives

While migrating a fibre channel hard drive to either a controller or a drive expansion enclosure, observe these important rules:

- Observe proper ESD procedures when handling electronic equipment.
- Never alter the physical configuration of a FAStT Storage Server while it is powered off unless you are instructed to do so as part of FAStT configuration procedure. Specifically, never attach storage components to or remove storage components from a configured FAStT Storage Server while it is powered off.
- Use this procedure to preserve the configuration and user data in one or more fibre channel hard drives that you will migrate to a functioning FAStT Storage Server configuration. Do not use this procedure if you are unsure of the quality of the data on the fibre channel hard drives.

Neither FAStT EXP700 storage expansion units nor FAStT600 storage servers support 1 Gbps fibre channel drives. These drives will not spin up when you insert them into EXP700 or FAStT600 drive slots.

To identify a 1 Gbps fibre channel drive, locate the product's label and examine its ID and Model Number. Hard drives whose ID/Model Number values end with "04FC" or "03FC" are 1 Gbps fibre channel drives. For example, "ST173404FC", "ST318203FC" and "ST136403FC" are model numbers that appear on several 1 Gbps fibre channel hard drives.

This procedure describes the steps that you must perform to migrate one or more fibre channel drives from a functioning FAStT Storage Server configuration to another FAStT Storage Server configuration. Drives described in the following steps are those that contain configuration data that you want to preserve. Add such drives to a FAStT Storage Server only while it is powered on and in its optimal state. See the *FAStT Problem Determination Guide* associated with your particular FAStT hardware model or "Bringing storage subsystems and drive loops into optimal state" on page 12 for additional information on how to make this determination.

**Tip:** Before you attempt to complete the drive migration procedure, review and perform the steps documented in Chapter 2, "Prerequisites to adding capacity and hard drive migration," on page 9.

The procedure for migrating hard drives which contain configuration data that you want to preserve is as follows:

---

### Activity 1: Preliminary activities

Before you remove drives from a functioning FAStT Storage Server, perform the following steps to ensure that you successfully migrate the drives to the destination FAStT Storage Server.

1. Perform a backup of the logical drives defined in the hard drives that you plan to migrate.
2. Stop all programs, services or processes in the host servers that access the logical drives defined in the migrated hard drives. Make sure that there are not any running background programs, services or processes that write data to the logical drives. (For example, the Microsoft MSCS service periodically writes to the "Quorum" disk.)
3. Unmount the file systems to flush I/O from the server cache to disks.

**Notes:**

- a. In a Microsoft Windows environment, remove the drive letter or the mount points of the mapped LUNs instead of unmounting the file systems.
  - b. Consult documentation associated with your particular operating system for detailed information regarding the Unmount procedure.
4. Verify that the FAStT Storage Server controller and NVSRAM of both the source and destination systems are at or above levels described in Table 6 on page 10.
  5. Verify that the names of the logical drives that are associated with hard drives on both the source and destination systems are unique. If they are not, make the necessary changes.
  6. In addition to array configuration information, any storage partitioning configuration data that may reside on drives you plan to migrate will migrate with those drives when installed on another FAStT Storage Server. For this reason, take the following precautions to facilitate the migration process and prevent problems in storage partitioning configuration data migration.
    - a. If a FAStT storage partitioning premium feature has been enabled both on a drive's original and destination FAStT storage servers, assure that the defined host ports, hosts, and host group names are unique to each FAStT storage server involved in the migration.
    - b. If you must use identical names on both FAStT storage servers, make the names unique before you perform the drive migration.

If necessary, customize the storage partitioning information on the FAStT storage server to which you have migrated the drives after you complete the migration.

7. Delete any flashcopies of the logical drives defined on the drives that you plan to migrate.
8. Remove any remote mirror relationships using the logical drives defined on the drives that you plan to migrate.
9. Ensure that the arrays and logical drives are in optimal state before starting the migration process. See the *FAStT Problem Determination Guide* associated with your particular FAStT hardware model or "Bringing storage subsystems and drive loops into optimal state" on page 12 for additional information on how to make this determination.
10. Place the arrays defined in the hard drives that you plan to migrate in offline state. To do so, right-click on the name of the array in the Storage Subsystem Management window and click **Place → Offline**.
11. If you migrate drive expansion enclosures from a 1 Gbps fibre channel environment to a 2 Gbps fibre channel environment, verify that the fibre channel hard drives that you plan to migrate are each capable of 2 Gbps operation and that you have installed the latest firmware enabling them to work properly in a 2 Gbps fibre channel environment.
12. Save the FAStT storage subsystem profile of the functioning FAStT Storage Server configuration to which the migration will occur in a location other than that of the logical drives you plan to migrate.
13. If you migrate the drives to a single controller FAStT Storage Server (for example, FAStT600 Storage Server Model 6LU or 6LX), change the logical drive's preferred owner to Controller A using the FAStT Storage Manager client program before taking it offline and removing it from the FAStT Storage Server. To set Controller A as the the logical drive preferred owner, right-click the logical drive entry in the Subsystem Management window and select **Change → Ownership/Preferred Path → Controller A**.

---

## Activity 2: Removing the migrating fibre channel hard drives

While the functioning FAST Storage Server is still powered on, remove the hard drives that you plan to migrate one at a time using the following steps:

1. Press on the inside of the bottom of the tray handle to release the blue latch.
2. Lift the closed latch to its open position. (The latch is at a 90-degree angle to the front of the drive when open.)
3. Using the handle, slowly pull the drive ½-inch out of its drive slot.
4. Wait at least 20 seconds to allow the hard drive to spin down before fully removing it from the drive slot.
5. Place the hard drive into an ESD bag or container before moving it to the new FAST Storage Server.

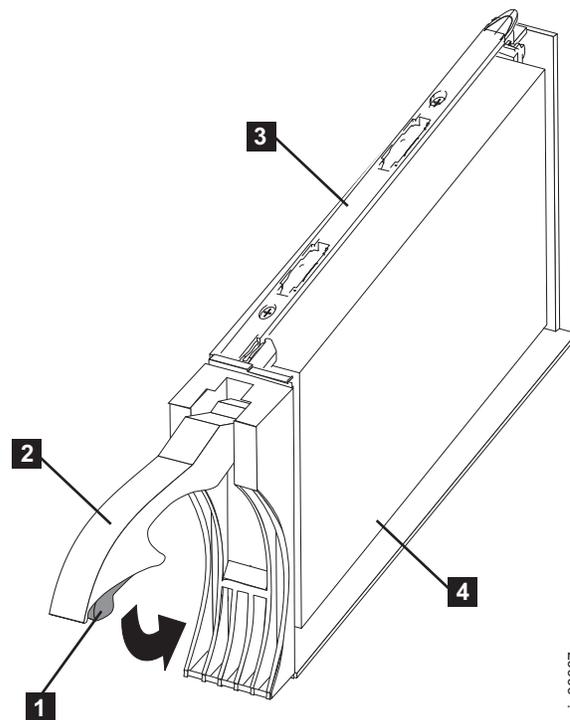


Figure 9. Drive CRU assembly

### Legend:

- 1 Blue latch
- 2 Drive CRU handle
- 3 Tray
- 4 FC hard drive

**Attention:** Orient fibre channel drives horizontally and place them in appropriate ESD bags or containers before relocation. When in transit, use only moving equipment that prevents shock to the drives. Never stack fibre channel drives.

---

## Activity 3: Inserting the migrating fibre channel hard drives

1. While the destination FAStT Storage Server is powered on, insert the migrating fibre channel drives into the empty drive slots in pairs. Wait until the inserted drive pair is fully spun up and displayed in the FAStT Storage Subsystem Management window before inserting the next drive pair.
2. As the the FAStT Storage Server recognizes the drives, it reads and displays the array and logical drive information in the Logical/Physical view of the FAStT Storage Subsystem Management window. The storage subsystem represents arrays in offl ine state until it recognizes that you have inserted all of the drives that comprise an array.
3. After you migrate all of the drives, manually change the state of the arrays and logical drives involved from optimal to onl ine state if it has not changed automatically. To do so, right-click on the array name in the Storage Subsystem Management window and select **Place → Online**. If any of the following conditions persist, contact the IBM Help Center in your geography for assistance:

- The empty drive slot icon (  ) displayed for the drive slot into which you inserted the migrating drive.
- The Failed unconfigured drive icon (  ) or the Failed configured drive icon (  ) displayed for the drive slot into which you inserted the migrating drive.
- Array configuration data on the drives you have added is incomplete.
- You cannot bring the array online.

**Attention:** Do not initialize a drive that you want to keep (by right-clicking its icon and selecting **Initialize** from the pull-down menu) if it contains configuration or user data. Initializing any drives in a defined array causes all hard drives known to comprise that array to return to the Unconfigured Capacity storage pool, deleting their array definitions from the FAStT Storage Server configuration. The user data on such drives is lost.

**Result:** Once the arrays are online, they are ready to for you to configure and map to host servers. You might also then recreate flashcopies of the logical drives.

4. Use the FAStT Storage Manager program to view the storage partitioning definitions and make any necessary corrections.
5. The FAStT Storage Server that the fibre channel drives are migrated from will display the logical drives that are defined in these drives as “missing LUNs”. In order to remove these “missing LUNs” entries, right-click on each entry and select **Delete** from the pull-down menu.

---

## Chapter 6. Migrating expansion units containing hard drives

While migrating a fibre channel hard drive to either a controller or a drive expansion enclosure, observe these important rules:

- Observe proper ESD procedures when handling electronic equipment.
- Never alter the physical configuration of a FASTt Storage Server while it is powered off unless you are instructed to do so as part of FASTt configuration procedure. Specifically, never attach storage components to or remove storage components from a configured FASTt Storage Server while it is powered off.
- Use this procedure to preserve the configuration and user data in one or more fibre channel hard drives that you will migrate to a functioning FASTt Storage Server configuration. Do not use this procedure if you are unsure of the quality of the data on the fibre channel hard drives. Import of incorrect configuration data from fibre channel hard drives could cause a FASTt Storage Server failure.

Use this procedure to migrate one or more FASTt storage expansion enclosures containing hard drives which themselves contain configuration data from a functioning FASTt Storage Server configuration to another FASTt Storage Server configuration.

**Attention:** Make additions to the FASTt Storage Server only while it is powered on and in optimal state. See “Bringing storage subsystems and drive loops into optimal state” on page 12 for additional information on how to make this determination. You can complete this process while the FASTt Storage Server is receiving I/O from the host server. However, because the drive loops are interrupted momentarily during the addition process, schedule the addition to occur during time periods of low I/O between the FASTt storage servers and host servers.

Review the readme and the *IBM TotalStorage FASTt Storage Manager installation and support guides* associated with the operating system environment of the host servers that connect to the FASTt Storage Server for information about any operating system-specific restrictions in addition to those detailed in this document. You will also find preliminary tasks that you may be required to complete detailed in that documentation. *IBM TotalStorage FASTt Storage Manager installation and support guides* are located at the following Web site:

[www-1.ibm.com/servers/storage/support/fastt/index.html](http://www-1.ibm.com/servers/storage/support/fastt/index.html)

**Tip:** Before proceeding with the migration procedure, review and perform the steps outlined in Chapter 2, “Prerequisites to adding capacity and hard drive migration,” on page 9.

The procedure for migrating a new FASTt storage expansion enclosure is as follows:

---

### Activity 1: Preliminary activities

Before disconnecting any storage expansion enclosures from a FASTt Storage Server, to ensure a successful migration of your drives to the FASTt Storage Server, perform the following steps:

1. Verify that both the functioning source and the destination FASTt Storage Servers' controller firmware and NVSRAM are at the levels recommended in Table 6 on page 10.

2. Verify that the firmware of the ESMs in the storage expansion enclosures that you plan to migrate are at the levels recommended in Table 7 on page 11.
3. Verify that the firmware of the ESMs in the storage expansion enclosures attached to the FAStT Storage Server to which you will migrate your drives is at the levels recommended in Table 7 on page 11.
4. If you migrate storage expansion enclosures from a 1 Gbps fibre channel environment to a 2 Gbps fibre channel environment, verify that the fibre channel hard drives that you plan to migrate are each capable of 2 Gbps operation and that you have installed the latest firmware enabling them to work properly in a 2 Gbps fibre-channel environment.
5. Verify that the names of the logical drives that are created using the hard drives in the migrated storage expansion enclosures are unique in the FAStT Storage Server to which these storage expansion enclosures will migrate. If they are not unique, make any necessary changes.
6. If you migrate the drives to a single controller FAStT Storage Server (for example, FAStT600 Storage Server Model 6LU or 6LX), change the logical drive's preferred owner to Controller A using the FAStT Storage Manager Client program before taking it offline and removing it from the FAStT Storage Server. To set Controller A as the the logical drive preferred owner, right-click the logical drive entry in the Subsystem Management window and select **Change** → **Ownership/Preferred Path** → **Controller A**.

---

## Activity 2: Deleting partition mappings, remote mirror relationships, and flashcopies

1. In addition to array configuration information, any storage partitioning configuration data that may reside on drives you plan to migrate will migrate with those drives when installed on another FAStT Storage Server. For this reason, take the following precautions to facilitate the migration process and prevent problems in storage partitioning configuration data migration.
  - a. If a FAStT storage partitioning premium feature has been enabled both on a drive's original and destination FAStT storage servers, assure that the defined host ports, hosts, and host group names are unique to each FAStT storage server involved in the migration.
  - b. If you must use identical names on both FAStT storage servers, make the names unique before you perform the drive migration.

If necessary, customize the storage partitioning information on the FAStT storage server to which you have migrated the drives after you complete the migration.

2. Delete any flashcopies of logical drives defined in the hard drives that you plan to migrate.
3. Remove any remote mirror relationships that involve the logical drives defined on the drives that you plan to migrate.

---

## Activity 3: Preparing and backing up the drives

1. If the arrays and logical drives involved are not in optimal state, perform the steps necessary to bring these arrays and logical drives to their optimal state before attempting migration. See "Bringing storage subsystems and drive loops into optimal state" on page 12 for additional information on how to make this determination.
2. If the drive enclosures that you plan to migrate are not in optimal state, perform the steps necessary to bring them to their optimal state before attempting

migration. See “Bringing storage subsystems and drive loops into optimal state” on page 12 for additional information on how to make this determination.

3. Perform a backup of the logical drives defined in the storage expansion enclosures that you plan to migrate.
4. Monitor the FASTT Storage Server event log for any errors in the drive loop or its components for several days before migrating storage expansion enclosures.
5. Stop all programs, services or processes in the host servers that access the logical drives defined in the migrated hard drives. Make sure that there are not any running background programs, services or processes that write data to the logical drives. (For example, Microsoft MSCS service periodically writes to the “Quorum” disk.)
6. Unmount the file systems to flush I/O from the server cache to disks.

**Notes:**

- a. In a Microsoft Windows environment, remove the drive letter or the mount points of the mapped LUNs instead of unmounting the file systems.
  - b. Consult documentation associated with your particular operating system for detailed information regarding the Unmount procedure.
7. Place the arrays defined in the storage expansion enclosures that you plan to migrate in *offline* state. In the Storage Subsystem Management window, right-click on the name of the array and click **Place → Offline**.
  8. Save the FASTT storage subsystem profile of the functioning FASTT Storage Server configuration to which the migration will occur in a location other than that of the logical drives you plan to migrate.

---

## Activity 4: Shutting down and moving the storage expansion unit

1. Because removing a storage expansion enclosure from a functioning FASTT Storage Server will disrupt its drive loops, shutdown the functioning destination FASTT Storage Server while you remove its storage expansion enclosures for reconfiguration. If you cannot shutdown the FASTT Storage Server, carefully reconfigure only one drive loop, making sure that the drive loop that you modify is connected correctly and in *optimal* state before you attempt to reconfigure the other drive loop. For additional information on making this determination, see “Bringing storage subsystems and drive loops into optimal state” on page 12.

Take this precaution to prevent the arrays from being inadvertently failed by the FASTT Storage Server controllers because two or more drives in the arrays cannot be reached through either drive loop in the redundant drive loop pair.

Perform the following steps to verify that the drive loops are in *optimal* state:

- a. Physically trace the actual fibre channel cable connections making sure that fibre channel connections are properly modified and that the fibre channel cable connectors are firmly inserted into the SFPs or GBICs.
- b. Verify that the following LEDs are not lit or briefly flashed in the modified drive loop:
  - ESM Fault
  - port bypass
  - ID conflict
- c. Verify that the controller drive loop LED remains lit. If the controller drive loop LED becomes unlit momentarily, there are problems in the drive loop and the fibre channel Loop Initialization Primitives (LIPs) are generated by the FASTT Storage Server controller.

- d. In the FAStT Storage Manager Client Subsystem Management window, verify that there are no loss of ESM path redundancy errors in the storage expansion enclosures that are not migrated.

Do not modify the second drive loop in the redundant drive loop pair until you are sure that the first modified drive loop is operating optimally.

2. Power down the storage expansion enclosures and move them to the FAStT Storage Server to which you plan to migrate them.

**Notes:**

- A storage expansion enclosure with 14 drives weighs up to 100 lbs. (45 kg). If necessary, remove the drives and other storage expansion enclosure components to reduce the weight of the unit for easier handling. Mark each drive before removing it in order to return it to the same drive slot when you reassemble the components at the destination location.
- Move fibre channel drives only in a horizontal position using an appropriate ESD bag or container and moving equipment that prevents shock to the drives during transit. Never stack fibre channel drives.

---

## Activity 5: Installing and setting storage expansion unit IDs and speeds

1. Once the storage expansion enclosures and drives are at the location of FAStT Storage Server to which they will be migrated, install them into the rack. If the drives were removed during transit, return them to the slots from which they were removed, unlatched and no less than ½-inch away from their full insertion points in the drive slots. If the drives were not removed, unlatch and pull them out no less than ½-inch away from their full insertion points in the drive slots.
2. See Figure 4 on page 20 for an illustration of how to set the enclosure ID of the storage expansion enclosures. Each drive enclosure in the FAStT storage subsystem drive loop must have a unique drive enclosure ID. In a EXP500 Storage Expansion Unit, there is an enclosure ID switch mounted on each of two ESM canisters. Set each ESM canister's enclosure ID switch in the EXP500 drive enclosure to the same unique number in the drive loop. In a EXP700 Storage Expansion Unit, the only enclosure ID switch is mounted between the power supplies. To access the appropriate *FAStT storage expansion unit installation and user's guide* for additional information, use the following Web link:

[www.storage.ibm.com/disk/fastt/index.html](http://www.storage.ibm.com/disk/fastt/index.html)

**Important:** If the FAStT Storage Server to which you will attach migrating hard drives is either a FAStT200 or FAStT600 (model 60X or 60U) machine type, the enclosure IDs of additional storage expansion enclosures must differ from the FAStT200 or FAStT600 storage servers' enclosure IDs. These IDs are normally set to "0" at the factory.

3. Verify that you set the enclosure speed switch of the FAStT700 to the correct drive loop speed.

If the enclosure speed switch was originally set to 1 Gbps, do not automatically set it to 2 Gbps unless you are sure that each fibre channel hard drive it now contains is capable of 2 Gbps operation and that you have installed the latest firmware enabling their operation in a 2 Gbps fibre-channel environment.

---

## Activity 6: Cabling, powering on, and verifying storage expansion unit operation

1. Insert the SFPs or GBICs only into the fibre channel ports that you plan to use. Do not leave GBICs or SFPs inserted into fibre channel port slots without connecting them to other fibre channel ports using fibre channel cables.
2. Cable the new storage expansion enclosures to the end of the functioning storage expansion enclosure drive loop to which you are migrating them. Add only one enclosure at a time to a functioning drive loop if you intend to attach multiple storage expansion enclosures. The cabling instructions are illustrated in Figure 5 on page 22.

The general cabling scheme for FAStT external drive enclosures is described in the *IBM TotalStorage Fibre Channel Cabling Guide*, which is available at: [www-3.ibm.com/pc/support/site.wss/document.do?Indocid=MIGR-4KELS5](http://www-3.ibm.com/pc/support/site.wss/document.do?Indocid=MIGR-4KELS5)

3. Extend one of the drive loops (that is, drive loop A) in a FAStT Storage Server redundant drive loop pair by connecting the OUT port of the last storage expansion enclosure to the IN port of the new storage expansion enclosure as shown in Figure 5 on page 22.

**Warning:** Carefully reconfigure only one drive loop at a time, making sure that the drive loop that you modify is properly connected and in optimal state before you attempt to reconfigure another drive loop. Take this precaution to prevent the arrays from being inadvertently failed by the FAStT Storage Server controllers. This happens when two or more drives in the arrays cannot be reached through either drive loop in the redundant drive loop pair.

4. Power on the newly added storage expansion enclosure unit.
5. Wait a few seconds; verify that the port bypass LEDs of all of the ports in drive loop A, now extended to the new storage expansion enclosure, are not lit. Using the FAStT Storage Manager Client Subsystem Management window, verify that the new storage expansion enclosure is added and displayed in the Logical/Physical view of the window.

Correct any errors before proceeding to step 6. For port bypass:

- a. Verify that the SFPs and GBICs or fibre channel cables are in good condition.
- b. Remove and reinsert SFPs, GBICs and fibre channel cables.
- c. Make sure the new drive expansion enclosure fibre channel speed switch is set to the same speed as the existing drive expansion enclosures and the FAStT Storage Server fibre channel speed setting.
- d. Verify that the ESM is good by physically removing and swapping it with the other ESM in the same drive expansion enclosure. For enclosure ID conflict, set the drive expansion enclosure ID switch to values unique from the current settings in the existing drive expansion enclosures and storage server.

Call the IBM Help Center in your geography for assistance if the problems persist.

6. In the other drive loop (that is, drive loop B) in a FAStT Storage Server redundant drive loop pair, remove the fibre channel connection from the storage subsystem drive loop port to the OUT port of the last storage expansion enclosure and connect it to the OUT port of the new drive enclosure as shown in Figure 6 on page 23.
7. Wait a few seconds; verify that the port bypass LEDs of the two ports in the fibre channel connection between the storage subsystem drive loop port and the

OUT port of the new drive enclosure are not lit. Using the FASSt Storage Manager Client Subsystem Management window, verify that the new drive enclosure does not indicate the drive enclosure lost redundancy path error. See the preceding step 5 on page 37 for possible corrective actions, if needed.

8. In drive loop B, cable the new drive enclosure's IN port to the OUT port of the last enclosure in the already functioning storage expansion enclosure drive loop as shown in Figure 7 on page 24.
9. Wait a few seconds; verify that the port bypass LEDs of all of the ports in drive loop B to which you have added a new fibre channel connection are not lit. Using the FASSt Storage Manager Client Subsystem Management window, verify that all of the drive enclosures in the FASSt redundant drive loop pair to which the new enclosure was added does not report the drive enclosure lost redundancy path error.

---

## Activity 7: Inserting hard drives and placing logical drives online

1. Insert the fibre channel drives into the empty drive slots in the new enclosure in pairs. Wait until each drive pair has fully spun up and displayed in the FASSt Storage Subsystem Management window before inserting the next drive pair.
2. For each additional enclosure that you intend to migrate to the functioning drive loop pair, perform Activity 5: Installing and setting storage expansion unit IDs and speeds step 1 on page 36 through step 3 on page 36, Activity 6: Cabling, powering on, and verifying storage expansion unit operation step 1 on page 37 through step 9, and step 1 of this activity. (See Figure 8 on page 26.) When you have completed adding enclosures, proceed to step 3.
3. As the FASSt Storage Server recognizes the drives, it reads and displays the array and logical drive information on the drives in the Logical/Physical view of the FASSt Storage Subsystem Management window. The storage subsystem places the array in *offline* state until it recognizes that you have inserted all of the drives that comprise the array.
4. Once you insert all of the drives and the FASSt Storage Server recognizes them, change the state of the arrays or logical drives to the *online* state by right-clicking on the array name in the Storage Subsystem window and clicking **Place → Online**.

If any of the following conditions persist, contact the IBM Help Center in your geography for assistance.

- The empty drive slot icon (  ) displayed for the drive slot into which you inserted the migrating drive.
- The Failed unconfigured drive icon (  ) or the Failed configured drive icon (  ) displayed for the drive slot into which you inserted the migrating drive.
- Array configuration data on the drives you have added is incomplete.
- You cannot bring the array online.

**Attention:** Do not initialize a drive that you want to keep (by right-clicking its icon and selecting **Initialize** from the pull-down menu) if it contains configuration or user data. Initializing any of the drives in a defined array causes all hard drives that comprise an array to return to the Unconfigured Capacity storage pool, deleting their array definitions from the FASSt Storage Server configuration. The user data on such drives is lost.

**Result:** Once the arrays are online, they are ready for you to configure and map to host servers. You might also then recreate flashcopies and remote mirror relationships.

5. Use the FAStT Storage Manager program to view the storage partitioning definitions and make any necessary corrections.
6. The FAStT Storage Server that the fibre channel drives are migrated from will display the logical drives that are defined in these drives as “missing LUNs”. In order to remove these “missing LUNs” entries, right-click on each entry and select **Delete** from the pull-down menu.



---

## Chapter 7. Upgrading a storage server in a functioning configuration

This procedure details the steps that are required to upgrade a FAStT Storage Server in a functioning FAStT configuration. Where either an identical or newer FAStT Storage Server model is involved, this upgrade involves only the replacement of the FAStT storage controller to be upgraded. FAStT storage expansion enclosures that had been attached to drives containing configuration data are connected to the new FAStT Storage Server. The upgraded (original) FAStT Storage Server being replaced will be either scrapped or returned to operation (redeployed) at a later date with new drives and/or new storage expansion enclosures. Table 8 on page 42 illustrates what FAStT Storage Server models you can use as replacements.

---

### Preliminary considerations: Server upgrade

While upgrading a storage server in a functioning configuration, remain aware of these important considerations:

- Observe proper ESD handling procedures when handling electronic equipment.
- IBM assigns premium feature entitlements only to specific FAStT storage servers. In order to enable premium features in a replacement FAStT Storage Server configuration that had been enabled in an original FAStT Storage Server configuration, you must purchase appropriate entitlements for the replacement FAStT Storage Server. In addition, IBM assigns host kits only to specific FAStT storage servers. You must also purchase the appropriate host kits for new FAStT storage servers.
- See the appropriate *FAStT storage controller's installation and user's guide* for information on the proper power on or power off sequences.

**Note:** The remainder of this topic pertains to the original FAStT Storage Server that is designated for replacement as either the original or old FAStT Storage Server.

This task requires that you shutdown the FAStT Storage Server configuration. In addition, after the upgrade, premium features previously enabled in the original FAStT Storage Server along with the enable-by-default premium features in the new FAStT Storage Server will automatically be placed in Out-of-Compliance state. Full data availability is retained, but you must generate new premium feature SAFE keys in order to re-enable premium features. You can generate new SAFE keys by contacting the IBM Help Center in your geography. Be sure to have the necessary proof of purchase. Alternately, you can also generate new SAFE keys by using instructions located at the following Web site:

[www.premiumfeatures.com](http://www.premiumfeatures.com)

The new FAStT Storage Server controller identifies itself using a new fibre channel Worldwide Name (WWN) that is different from the WWN used by the original FAStT Storage Server controller. For this reason, additional tasks might be required after the upgrade for any host applications or drivers that rely on the WWNs to identify logical drives defined in a given FAStT Storage Server. See your application program's documentation, your driver's user guide, or related documentation for detailed instructions on how to update the WWN of the FAStT Storage Server in the application or driver. Additionally, review the readme file and the related *IBM*

*TotalStorage FAStT Storage Manager installation and support guide* for information about any preparation tasks required in addition or operating system-specific restrictions. *IBM TotalStorage FAStT Storage Manager installation and support guides* are located at the following Web site:

[www-1.ibm.com/servers/storage/support/fastt/index.html](http://www-1.ibm.com/servers/storage/support/fastt/index.html)

Table 8 associates FAStT Storage Server machine types with their supported replacements.

*Table 8. FAStT storage servers by supported replacement machine types*

<b>FAStT Storage Server machine type</b>	<b>Supported replacement FAStT Storage Server machine types</b>
FAStT200	FAStT200, FAStT500, FAStT700, FAStT900
FAStT500	FAStT500, FAStT700, FAStT900, FAStT600 (60U/60X), FAStT600 Turbo (60U/60X)
FAStT600 Single Controller (6LU/6LX)	FAStT600 (6LU/6LX), FAStT600 (60U/60X), FAStT600 Turbo (60U/60X)
FAStT600 (60U/60X)	FAStT500, FAStT600 (60U/60X), FAStT600 Turbo (60U/60X), FAStT700, FAStT900
FAStT600 Turbo (60U/60X)	FAStT500, FAStT600 (60U/60X), FAStT600 Turbo (60U/60X), FAStT700, FAStT900
FAStT700	FAStT500, FAStT600 (60U/60X), FAStT600 Turbo (60U/60X), FAStT700, FAStT900
FAStT900	FAStT500, FAStT600 (60U/60X), FAStT600 Turbo (60U/60X), FAStT700, FAStT900

**Attention:**

- Migration to a FAStT600 Storage Server configuration from FAStT500, FAStT700 or FAStT900 Storage Server configurations with more than eight drive expansion enclosures will require more than one FAStT600 Storage Server. See Table 1 on page 1.
- FAStT600 and FAStT600 Turbo storage servers do not accommodate FAStT EXP500 drive expansion enclosures. Do not migrate the EXP500 enclosures in FAStT500, FAStT700 or FAStT900 Storage Server configurations to FAStT600 or FAStT600 Turbo Storage Server configurations.
- Set the FAStT EXP700 storage expansion enclosure's speed switch to 1 Gbps when migrating from 2 Gbps configurations to a FAStT500 Storage Server 1 Gbps configuration.
- Never alter the physical configuration of a FAStT Storage Server while it is powered off unless you are instructed to do so as part of a FAStT configuration procedure. This includes both attaching and removing storage components from a previously configured FAStT Storage Server.

---

## **Preliminary considerations: Firmware behavior during server upgrade**

This section describes technical considerations regarding basic FAStT Storage Server controller firmware behavior during a FAStT Storage Server upgrade. It covers firmware behavior during system upgrade, where a new FAStT Storage Server connects to functioning drives and storage expansion enclosures, as well as

firmware behavior during system redeployment, where the original (old) FAST Storage Server serves as a logically distinct entity, optionally, using some of the drives from the original system.

## **FAST configuration behavior after upgrade and FAST Storage Server replacement**

The new FAST Storage Server that powers up in a functioning storage expansion enclosure configuration as part of the FAST Storage Server upgrade process impacts the following areas of the FAST Storage Server identification and premium features:

1. Fibre Channel Worldwide Name (WWN):

The fibre channel worldwide names that were used by the original FAST Storage Server prior to the upgrade are not returned when the upgrade is complete. Rather, the new FAST Storage Server begins to advertise itself using WWNs that are based on an embedded unique identifier from its controller blades. This statement applies to both the fibre channel port WWNs and the fibre channel node WWNs. Consequently, any hosts that were aware of the logical drives in the original FAST Storage Server based on the original FAST storage server's WWN values will likely be confused. The data volumes that resided behind the previously known WWNs now reside behind a seemingly new fibre channel device with different WWNs.

2. Storage Array Identifier (SAI or SA Identifier):

The storage array identifier, or SA Identifier, is the identification value used by the FAST Storage Manager host software (SMclient) to uniquely identify managed storage servers. The FAST Storage Manager SMclient program maintains SA Identifier records of previously discovered storage servers in the host resident file, which allows it to retain discovery information in a persistent fashion. This identifier is stored on DACstore, and persists across reboots, power cycles, and so on. The new FAST Storage Server that powers up in a functioning storage expansion enclosure configuration as part of the FAST Storage Server upgrade process continues to use the SA Identifier of the original FAST Storage Server.

3. SAFE Premium Feature Identifier (SAFE ID) and Premium Feature Enable Status:

The new FAST Storage Server retains the SAFE ID of the original FAST Storage Server. It also retains all of the features previously enabled on the original FAST Storage Server. The feature states, however, are set to the Out-of-Compliance state. As a result, the system sends alert notices and establishes a Needs Attention condition. Also, any features that are marked in the new controller's NVSRAM for automatic enablement are enabled, though their feature states are also set to Out-of-Compliance. You must re-enable the premium features by using premium feature SAFE key files.

## **Redeployed FAST configuration behavior in an original (replaced) FAST Storage Server**

When you redeploy FAST Storage Server hardware in another FAST storage server's configuration, identification and premium features of the redeployed system behave somewhat differently from information described in "FAST configuration behavior after upgrade and FAST Storage Server replacement." This section describes those relevant behavioral differences.

- Fibre Channel Worldwide Name (WWN):

The fibre channel worldwide names that were used by the original FAStT Storage Server are retained on the redeployed system. These values are based on an embedded unique identifier from the original FAStT Storage Server controller blades, and are stored in the NVSRAM on each controller board within the controller blade. Assuming that both controllers remain fully optimal after the redeployment, they recognize the stored value and continue to use it. Consequently, any hosts that were aware of the original FAStT Storage Server, based on its fibre channel WWN values, will likely be confused. The logical drives that used to reside behind the previously-known WWNs no longer reside there, because they are now part of the new FAStT Storage Server, which has a different WWN.

- Storage Array Identifier or SA Identifier:

If you return one or more drives that were originally moved from a FAStT Storage Server back to the original FAStT Storage Server configuration before it is redeployed, it is possible that the SA Identifier that was used on the original FAStT Storage Server system will also be reused in the redeployed FAStT Storage Server configuration. Whether or not this occurs depends on the specific selection of transported drives. If certain conditions are met, however, the redeployed unit adopts the same SA Identifier that was retained by the new FAStT Storage Server. Otherwise, or in cases in which only new drives are used in the redeployed configuration, the redeployed FAStT Storage Server generates a new (and unique) SA Identifier that does not conflict with the one that was retained by the upgraded unit.

If both the new and the redeployed FAStT Storage Server have the same SA Identifier, serious problems will result when you start the FAStT Storage Manager SMclient program. Since there will be two FAStT storage servers with the same SA Identifier, the FAStT Storage Manager SMclient program will respond by arbitrarily selecting either the new or the redeployed FAStT Storage Server. The storage server that the FAStT Storage Manager SMclient program arbitrarily selects will be manageable, and the other storage server will be unmanageable.

- SAFE Premium Feature Identifier (SAFE ID)

Premium Feature Enable status:

If you return any drives from an original FAStT Storage Server, along with the original FAStT Storage Server controllers, to a redeployed FAStT configuration, the SAFE ID of the original FAStT Storage Server will be retained, and all enabled features will remain fully enabled and compliant.

If you do not move any drives from an original FAStT Storage Server, it generates a new SAFE ID when redeployed, enabling none of the premium features from the original system. This new SAFE ID prevents the system from using any previously-acquired SAFE key files and re-enabling any premium features. In cases where the original FAStT Storage Server was pre-loaded with NVSRAM codes to enable certain premium features, NVSRAM codes are cleared from the FAStT Storage Server when redeployed and powered on for the first time. Therefore, premium features that were considered every unit items do not reactivate on the redeployed system. The system retains full data availability, but you must generate new premium feature SAFE keys in order to re-enable premium features. You can generate new SAFE keys by contacting the IBM Help Center in your geography. Be sure to have the necessary proof of purchase. Alternately, you can also generate new SAFE keys by using instructions located at the following Web site:

[www.premiumfeatures.com](http://www.premiumfeatures.com)

- Controller IP addresses:

When the FASiT Storage Server controllers were assigned static IP addresses, the IP addresses were stored in the NVSRAM of the controller board as well as the DACstore on the fibre channel disks. If the new (replacement) FASiT Storage Server controllers were assigned the same IP addresses as the original (replaced) FASiT Storage Server controllers, network problem will arise when the original (replaced) FASiT Storage Server is eventually redeployed . The problem will occur because two devices have the same IP address in the Ethernet network. The best practice is to assign new unique IP addresses to new (replacement) FASiT Storage Server controllers instead of using the same IP addresses as the FASiT controllers that they replace.

---

## Upgrading storage servers in functioning FASiT configurations

Before you perform the following upgrade procedure, review and perform the steps detailed in Chapter 2, “Prerequisites to adding capacity and hard drive migration,” on page 9.

Complete the following activities to upgrade your FASiT Storage Server:

### Activity 1: Preliminary activities

Perform the following steps before you disconnect storage expansion enclosures from an original FASiT Storage Server that is being replaced to ensure a successful FASiT Storage Server upgrade.

1. Verify that the original FASiT storage server’s controller firmware and NVSRAM are at the levels shown in Table 6 on page 10.
2. Verify that the firmware of the ESMs in the storage expansion enclosures is at the levels shown in Table 7 on page 11.
3. Disable or delete any flashcopies of the logical drives.
4. Delete any remote mirror relationships.
5. If the arrays (logical drives) are not in optimal state, perform the steps necessary to bring the arrays (logical drives) into their optimal state before you attempt their migration. See the *FASiT Problem Determination Guide* associated with your particular FASiT hardware model or “Bringing storage subsystems and drive loops into optimal state” on page 12 for additional information on how to make this determination.
6. If the drive enclosures are not in optimal state, perform the steps necessary to bring them to optimal state before attempting migration. Perform the following steps to verify that the drive loops are in optimal state:
  - a. Physically trace the actual fibre channel cable connections making sure that fibre channel connections are properly modified and that the fibre channel cable connectors are firmly inserted into the SFPs or GBICs.
  - b. Verify that the following LEDs are not lit or briefly flashed in the modified drive loop:
    - ESM fault
    - port bypass
    - ID conflict
  - c. Verify that the controller drive loop LED remains lit. If the controller drive loop LED becomes unlit momentarily, there are problems in the drive loop and the fibre channel LIPs are generated by the FASiT Storage Server controller.

- d. In the FAStT Storage Manager Client Subsystem Management window, verify that there are no loss of ESM path redundancy errors in the drives expansion enclosures that are not migrated.

Do not modify the second drive loop in a redundant drive loop pair until you are sure that the first modified drive loop is operating optimally. See the *FAStT Problem Determination Guide* associated with your particular FAStT hardware model or “Bringing storage subsystems and drive loops into optimal state” on page 12 for additional information on how to make this determination.

7. Perform a full backup of the original FAStT Storage Server and schedule it for down time. This is necessary because you must power down the FAStT Storage Server configuration during the upgrade procedure.
8. Save the FAStT storage subsystem profile of the original FAStT Storage Server configuration in a location other than that in which the logical drives are defined in the original FAStT Storage Server configuration.
9. Stop all programs, services or processes in the host servers that access the logical drives defined in the migrated hard drives. Make sure that there are not any running background programs, services or processes that write data to the logical drives. (For example, Microsoft MSCS service periodically writes to the “Quorum” disk.)
10. Unmount the file systems to flush I/O from the server cache to disks.

**Notes:**

- a. In a Microsoft Windows environment, remove the drive letter or the mount points of the mapped LUNs instead of unmounting the file systems.
  - b. Consult documentation associated with your particular operating system for detailed information regarding the Unmount procedure.
11. Place the arrays defined on the FAStT Storage Server in offline state. In the Storage Subsystem Management window, right-click on the name of the array and select **Place → Offline**.
  12. Retrieve proofs of purchase for both the original and new FAStT storage servers and for the additional premium feature entitlements on the new and original FAStT storage servers. IBM support personnel will require this information to regenerate premium feature SAFE key files that were enabled in the original FAStT Storage Server for use on the new FAStT Storage Server.

## Activity 2: Powering off the original FAStT Storage Server

Power down the original FAStT Storage Server and remove it from the FAStT configuration. Do not redeploy this FAStT Storage Server in the same management domain as its upgrade (replacement) FAStT Storage Server until you regenerate its SA identifier using the instructions in “Redeploying the original (replaced) FAStT Storage Server” on page 48.

**Note:** See the appropriate *FAStT storage controller’s installation and user’s guide* for details on the correct power off sequence.

## Activity 3: Installing new FAStT Storage Servers and setting minihub speed

Install the new FAStT Storage Server. For FAStT700 and FAStT900 Storage Server machine types, set the drive minihub speed switch to the speed of the storage expansion enclosure ports to which they are connected.

**Note:** The FAST600 drive loop port operates only at 2 Gbps. If you migrate storage expansion enclosures from a 1 Gbps fibre channel environment to a 2 Gbps fibre channel environment, do not automatically change the storage expansion enclosure speed settings from 1 Gbps to 2 Gbps. Before you do, verify that each fibre channel drive involved is capable of 2 Gbps operation and that you have installed the latest firmware enabling them to work properly in a 2 Gbps fibre channel environment.

**Important:** If the new FAST Storage Server is either a FAST200 or FAST600 Storage Server machine type, set the FAST200 or FAST600 enclosure ID to a value unique from other EXP storage expansion enclosures in the fibre channel drive loop. These IDs are normally set to “0” at the factory.

## Activity 4: Making fibre channel connections

Insert the SFPs or GBICs into the FAST Storage Server drive port slots and make the fibre channel connections from the FAST Storage Server to the storage expansion enclosures. For detailed information, see the appropriate *FAST storage controller's installation and user guide*.

## Activity 5: Powering on the expansion unit and setting IP addresses

1. Verify that all of the storage expansion enclosures are powered on and in optimal state by examining the expansion enclosure LED states. Then, power on the new FAST Storage Server. Using the FAST Storage Manager client program, verify that the FAST Storage Server is operational and that all of the drives are recognized and in optimal state. See the *FAST Problem Determination Guide* associated with your particular FAST hardware model or “Bringing storage subsystems and drive loops into optimal state” on page 12 for additional information on how to make this determination.

### Notes:

- a. Your storage subsystem will identify the new FAST Storage Server as the machine type it replaced until you download the appropriate NVSRAM file for the new storage server. For example, if you replace a FAST500 with a FAST900, the FAST900 will be reported as machine type FAST500 until you download the appropriate NVSRAM file for the FAST900.
  - b. See the appropriate *FAST storage controller's installation and user guide* for information on the proper power on sequence.
2. If the new FAST Storage Server is managed out-of-band, perform the steps for setting the IP addresses for new FAST Storage Server controllers defined in the *IBM TotalStorage FAST Storage Manager installation and support guide* associated with your operating system environment. *FAST Storage Manager installation and support guides* are located at the following Web site:  
[www-1.ibm.com/servers/storage/support/fastt/index.html](http://www-1.ibm.com/servers/storage/support/fastt/index.html)

## Activity 6: Downloading firmware and NVSRAM and returning arrays online

1. Use the FAST Storage Manager client program to download the firmware and the NVSRAM for the new FAST Storage Server.
2. Return the offline arrays to online state by right-clicking on the array and selecting **Place → Online**. If any of the following conditions persist, contact the IBM Help Center in your geography for assistance:

- The empty drive slot icon (  ) displayed for the drive slot into which you inserted the migrating drive.
- The Failed unconfigured drive icon (  ) or the Failed configured drive icon (  ) displayed for the drive slot into which you inserted the migrating drive.
- Array configuration data on the drives you have added is incomplete.
- You cannot bring the array online.

## Activity 7: Generating and applying premium feature SAFE key files

Generate the new premium feature SAFE key files using the new FAStT Storage Server Feature Enable Identifier. Apply premium feature SAFE keys to remove Out-of-Compliance errors on enabled premium features.

**Result:** You are now able to recreate flashcopies and remote mirror relationships, if required.

---

## Redeploying the original (replaced) FAStT Storage Server

As a safety measure, force generation of a new SA Identifier when you redeploy an original (replaced) FAStT Storage Server. Use the controller shell commands to generate a new SA Identifier. To gain access to the controller shell, you will require a null modem cable and a terminal emulation program that is capable of sending a BREAK signal. The setting for the terminal emulation session is 8-N-1 (8 data bits, no parity bit and 1 stop bit). Once you enter the controller shell, use the following command sequence to force the controller to generate a new SA Identifier:

```
1d </Debug
symbolGenerateNewSAIdentifier
```

**Note:** It is necessary for you to run this command sequence on only one controller. Then, reset both FAStT Storage Server controllers and proceed with the normal FAStT Storage Server installation and configuration process.

## Accessing the FAStT Storage Server controller shell

The following steps describe how to access the FAStT Storage Server controller shell using the terminal emulation program of your choice. One example of such a terminal emulation program for which IBM neither makes nor implies a warranty, HyperTerminal, Private Edition; version 6.3 or higher, is available for your consideration at the following Web site:

[www.hilgraeve.com](http://www.hilgraeve.com)

A generic version of steps involved in accessing the FAStT Storage Server controller shell using the terminal emulation program of your choice follows:

1. Stop all I/O on the FAStT Storage Server.
2. Connect a null modem serial cable from one of the FAStT Storage Server controller communications (COM) ports to a system with an available terminal emulator.
3. Open the terminal emulation program of your choice, such as the HyperTerminal, Private Edition program and from the menu bar, click **File** → **Properties** → **Configure**. Establish the following property settings:
  - Bits per second: 57600

- Data bits: 8
  - Parity: None
  - Stop Bit: 1
  - Flow Control: None
4. Connect to the FAStT Storage Server controller shell by sending a BREAK signal. (If you are using the HyperTerminal, Private Edition program, press the Ctrl and BREAK keys simultaneously to send the BREAK signal.)
  5. Repeat step 4 until the following message displays:  
“Press the space bar for baud rate within 5 seconds.”
  6. Press the space bar within the time limit to establish the correct baud rate setting.
  7. Send another BREAK signal. The following message is displayed:  
“Press within 5 seconds: ESC for SHELL, BREAK for baud rate.”
  8. Press the ESC key within the time limit to access the controller shell.
  9. When prompted, type the following password:  
infiniti
  10. You are now accessing the FAStT Storage Server controller shell.  
**Important:** Be careful when entering commands in the FAStT Storage Server controller shell. Improper use of FAStT Storage Server controller shell commands could result in loss of configuration data.



## Appendix. Additional FAStT documentation

The following tables present an overview of the FAStT900, FAStT700, and FAStT600 Fibre Channel Storage Server product libraries, as well as other related documents. Each table lists documents that are included in the libraries and what common tasks they address. Click on active links in the tables to access those documents currently available on the Internet. You can access documentation for the other FAStT products at the following Web site:

[ssddom02.storage.ibm.com/techsup/webnav.nsf/support/fastt/](http://ssddom02.storage.ibm.com/techsup/webnav.nsf/support/fastt/)

### FAStT900 Fibre Channel Storage Server library

Table 9 associates each document in the FAStT900 Fibre Channel Storage Server library with its related common user tasks.

Table 9. TotalStorage FAStT900 Fibre Channel Storage Server document titles by user tasks

Title	User Tasks					
	Planning	Hardware Installation	Software Installation	Configuration	Operation and Administration	Diagnosis and Maintenance
IBM TotalStorage FAStT900 Installation and Support Guide, GC26-7530	✓	✓		✓		
IBM TotalStorage FAStT900 Fibre Channel Cabling Instructions, 24P8135	✓	✓				
IBM TotalStorage FAStT900 Storage Server User's Guide, GC26-7534				✓	✓	✓
IBM TotalStorage FAStT FC2-133 Dual Port Host Bus Adapter Installation and User's Guide, GC26-7532		✓			✓	
IBM FAStT FC2-133 Host Bus Adapter Installation and User's Guide, 48P9823		✓			✓	
IBM TotalStorage FAStT900 Rack Mounting Instructions, 19K0900	✓	✓				

Table 9. TotalStorage FAST900 Fibre Channel Storage Server document titles by user tasks (continued)

Title	User Tasks					
	Planning	Hardware Installation	Software Installation	Configuration	Operation and Administration	Diagnosis and Maintenance
IBM Fibre Channel Planning and Integration: User's Guide and Service Information, SC23-4329	✓	✓			✓	✓
IBM FAST Management Suite Java User's Guide, 32P0081					✓	✓
IBM TotalStorage FAST Fibre Channel Hardware Maintenance Manual, GC26-7640						✓
IBM TotalStorage FAST Fibre Channel Problem Determination Guide, GC26-7642						✓

## FAST700 Fibre Channel Storage Server library

Table 10 associates each document in the FAST700 Fibre Channel Storage Server library with its related common user tasks.

Table 10. TotalStorage FAST700 Fibre Channel Storage Server document titles by user tasks

Title	User Tasks					
	Planning	Hardware Installation	Software Installation	Configuration	Operation and Administration	Diagnosis and Maintenance
IBM FAST700 Installation and Support Guide, 32P0171	✓	✓		✓		
IBM FAST700 Fibre Channel Cabling Instructions, 32P0343	✓	✓				
IBM FAST700 Fibre Channel Storage Server User's Guide, 32P0341				✓	✓	✓
IBM FAST FC2-133 Dual Port Host Bus Adapter Installation and User's Guide, GC26-7532		✓			✓	
IBM TotalStorage FAST FC2-133 Host Bus Adapter Installation and User's Guide, 48P9823		✓			✓	
IBM FAST Management Suite Java User's Guide, 32P0081					✓	✓
IBM TotalStorage FAST Fibre Channel Hardware Maintenance Manual, GC26-7640						✓
IBM TotalStorage FAST Fibre Channel Problem Determination Guide, GC26-7642						✓

## FAStT600 Fibre Channel Storage Server library

Table 11 associates each document in the FAStT600 Fibre Channel Storage Server library with its related common user tasks.

Table 11. TotalStorage FAStT600 Fibre Channel Storage Server document titles by user tasks

Title	User Tasks					
	Planning	Hardware Installation	Software Installation	Configuration	Operation and Administration	Diagnosis and Maintenance
IBM TotalStorage FAStT600 Fibre Channel Storage Server Installation and User's Guide, GC26-7531	✓	✓		✓		
IBM TotalStorage FAStT Fibre Channel Hardware Maintenance Manual, GC26-7640						✓
IBM TotalStorage FAStT Fibre Channel Problem Determination Guide, GC26-7642						✓
IBM TotalStorage FAStT FC2-133 Dual Port Host Bus Adapter Installation and User's Guide, GC26-7532		✓			✓	
IBM TotalStorage FAStT600 Rack Mounting Instructions, 24P8125	✓	✓				
IBM TotalStorage FAStT600 Cabling Instructions, 24P8126	✓	✓				

## FASTt-related documents

Table 12 associates each of the following documents related to FASTt operations with its related common user tasks.

Table 12. TotalStorage FASTt related document titles by user tasks

Title	User Tasks					
	Planning	Hardware Installation	Software Installation	Configuration	Operation and Administration	Diagnosis and Maintenance
IBM Safety Information, P48P9741					✓	
IBM TotalStorage FASTt EXP100 Storage Expansion Unit Release Notes, GC26-7619	✓	✓				
IBM TotalStorage FASTt EXP100 Storage Expansion Unit Installation and Users Guide, GC26-7601	✓	✓		✓	✓	✓
Fibre Channel Solutions - IBM FASTt EXP500 Installation and User's Guide, 59p5637	✓	✓		✓	✓	✓
IBM EXP700 Storage Expansion Unit Installation and User's Guide, 32P0178	✓	✓		✓	✓	✓
IBM Netfinity® Fibre Channel Cabling Instructions, 19K0906		✓				
IBM Fibre Channel SAN Configuration Setup Guide, 25P2509	✓		✓	✓	✓	



---

## Notices

This publication was developed for products and services offered in the U.S.A.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM® may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing  
IBM Corporation  
North Castle Drive  
Armonk, NY 10504-1785  
U.S.A.*

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this publication to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product, and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

---

## Trademarks

The following terms are trademarks of International Business Machines Corporation in the United States, other countries, or both:

FlashCopy  
IBM  
IBMLink

Netfinity  
ServerProven  
TotalStorage

Intel is a trademark of Intel Corporation in the United States, other countries, or both.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.

---

## Important notes

Processor speeds indicate the internal clock speed of the microprocessor; other factors also affect application performance.

CD-ROM drive speeds list the variable read rate. Actual speeds vary and are often less than the maximum possible.

When referring to processor storage, real and virtual storage, or channel volume, KB stands for approximately 1000 bytes, MB stands for approximately 1 000 000 bytes, and GB stands for approximately 1 000 000 000 bytes.

When referring to hard disk drive capacity or communications volume, MB stands for 1 000 000 bytes, and GB stands for 1 000 000 000 bytes. Total user-accessible capacity may vary depending on operating environments.

Maximum internal hard disk drive capacities assume the replacement of any standard hard disk drives and population of all hard disk drive bays with the largest currently supported drives available from IBM.

Maximum memory may require replacement of the standard memory with an optional memory module.

IBM makes no representation or warranties regarding non-IBM products and services that are ServerProven<sup>®</sup>, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. These products are offered and warranted solely by third parties.

IBM makes no representations or warranties with respect to non-IBM products. Support (if any) for the non-IBM products is provided by the third party, not IBM.

Some software may differ from its retail version (if available), and may not include user manuals or all program functionality.

---

## Electronic emission notices

This section gives the electronic emission notices or statements for the United States and other countries or regions.

## Federal Communications Commission (FCC) statement

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio

communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Chinese class A compliance statement

**Attention:** This is a class A statement. In a domestic environment, this product might cause radio interference in which case the user might be required to take adequate measures.

中华人民共和国“A类”警告声明

声明

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

## Industry Canada Class A emission compliance statement

This Class A digital apparatus complies with Canadian ICES-003.

**Avis de conformité à la réglementation d'Industrie Canada**

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

## Australia and New Zealand Class A statement

**Attention:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## United Kingdom telecommunications safety requirement

**Notice to Customers**

This apparatus is approved under approval number NS/G/1234/J/100003 for indirect connection to public telecommunication systems in the United Kingdom.

## European Union EMC Directive conformance statement

This product is in conformity with the protection requirements of EU Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any

failure to satisfy the protection requirements resulting from a nonrecommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to CISPR 22/European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

**Attention:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## Taiwan Class A warning statement

警告使用者：  
這是甲類的資訊產品，在  
居住的環境中使用時，可  
能會造成射頻干擾，在這  
種情況下，使用者會被要  
求採取某些適當的對策。

## Japanese Voluntary Control Council for Interference (VCCI) statement

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に  
基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を  
引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求  
されることがあります。

---

## Glossary

This glossary provides definitions for the terminology used for the IBM TotalStorage FAStT. This glossary also provides definitions for the terminology used for the IBM TotalStorage FAStT Storage Manager.

This glossary defines technical terms and abbreviations used in this document. If you do not find the term you are looking for, see the *IBM Glossary of Computing Terms* located at [www.ibm.com/networking/nsg/nsgmain.htm](http://www.ibm.com/networking/nsg/nsgmain.htm)

This glossary also includes terms and definitions from:

- *Information Technology Vocabulary* by Subcommittee 1, Joint Technical Committee 1, of the International Organization for Standardization and the International Electrotechnical Commission (ISO/IEC JTC1/SC1). Definitions are identified by the symbol (I) after the definition; definitions taken from draft international standards, committee drafts, and working papers by ISO/IEC JTC1/SC1 are identified by the symbol (T) after the definition, indicating that final agreement has not yet been reached among the participating National Bodies of SC1.
- *IBM Glossary of Computing Terms*. New York: McGraw-Hill, 1994.

The following cross-reference conventions are used in this glossary:

**See** Refers you to (a) a term that is the expanded form of an abbreviation or acronym, or (b) a synonym or more preferred term.

### See also

Refers you to a related term.

**Abstract Windowing Toolkit (AWT).** A Java graphical user interface (GUI).

**accelerated graphics port (AGP).** A bus specification that gives low-cost 3D graphics cards faster access to main memory on personal computers than the usual peripheral component interconnect (PCI) bus. AGP reduces the overall cost of creating high-end graphics subsystems by using existing system memory.

**access volume.** A special logical drive that allows the host-agent to communicate with the controllers in the storage subsystem.

**adapter.** A printed circuit assembly that transmits user data input/output (I/O) between the internal bus of the host system and the external fibre-channel (FC) link and vice versa. Also called an I/O adapter, host adapter, or FC adapter.

**advanced technology (AT) bus architecture.** A bus standard for IBM compatibles. It extends the XT bus architecture to 16 bits and also allows for bus mastering, although only the first 16 MB of main memory are available for direct access.

**agent.** A server program that receives virtual connections from the network manager (the client program) in a Simple Network Management Protocol-Transmission Control Protocol/Internet Protocol (SNMP-TCP/IP) network-managing environment.

**AGP.** See *accelerated graphics port*.

**AL\_PA.** See *arbitrated loop physical address*.

**arbitrated loop.** One of three existing fibre-channel topologies, in which 2 - 126 ports are interconnected serially in a single loop circuit. Access to the Fibre Channel-Arbitrated Loop (FC-AL) is controlled by an arbitration scheme. The FC-AL topology supports all classes of service and guarantees in-order delivery of FC frames when the originator and responder are on the same FC-AL. The default topology for the disk array is arbitrated loop. An arbitrated loop is sometimes referred to as a Stealth Mode.

**arbitrated loop physical address (AL\_PA).** An 8-bit value that is used to uniquely identify an individual port within a loop. A loop can have one or more AL\_PAs.

**array.** A set of fibre-channel hard drives that are logically grouped together to form a redundant array of independent disks (RAID) set.

**AT.** See *advanced technology (AT) bus architecture*.

**ATA.** See *AT-attached*.

**AT-attached.** Peripheral devices that are compatible with the original IBM AT computer standard in which signals on a 40-pin AT-attached (ATA) ribbon cable followed the timings and constraints of the Industry Standard Architecture (ISA) system bus on the IBM PC AT computer. Equivalent to integrated drive electronics (IDE).

**auto-volume transfer/auto-disk transfer (AVT/ADT).** A function that provides automatic failover in case of controller failure on a storage subsystem.

**AVT/ADT.** See *auto-volume transfer/auto-disk transfer*.

**AWT.** See *Abstract Windowing Toolkit*.

**basic input/output system (BIOS).** The personal computer code that controls basic hardware operations, such as interactions with diskette drives, hard disk drives, and the keyboard.

**BIOS.** See *basic input/output system*.

**BOOTP.** See *bootstrap protocol*.

**bootstrap protocol (BOOTP).** In Transmission Control Protocol/Internet Protocol (TCP/IP) networking, an alternative protocol by which a diskless machine can obtain its Internet Protocol (IP) address and such configuration information as IP addresses of various servers from a BOOTP server.

**bridge.** A storage area network (SAN) device that provides physical and transport conversion, such as fibre channel to small computer system interface (SCSI) bridge.

**bridge group.** A bridge and the collection of devices connected to it.

**broadcast.** The simultaneous transmission of data to more than one destination.

**cathode ray tube (CRT).** A display device in which controlled electron beams are used to display alphanumeric or graphical data on an electroluminescent screen.

**client.** A computer system or process that requests a service of another computer system or process that is typically referred to as a server. Multiple clients can share access to a common server.

**command.** A statement used to initiate an action or start a service. A command consists of the command name abbreviation, and its parameters and flags if applicable. A command can be issued by typing it on a command line or selecting it from a menu.

**community string.** The name of a community contained in each Simple Network Management Protocol (SNMP) message.

**CRC.** See *cyclic redundancy check*.

**CRT.** See *cathode ray tube*.

**CRU.** See *customer replaceable unit*.

**customer replaceable unit (CRU).** An assembly or part that a customer can replace in its entirety when any of its components fail. Contrast with *field replaceable unit (FRU)*.

**cyclic redundancy check (CRC).** (1) A redundancy check in which the check key is generated by a cyclic algorithm. (2) An error detection technique performed at both the sending and receiving stations.

**dac.** See *disk array controller*.

**dar.** See *disk array router*.

**DASD.** See *direct access storage device*.

**default host group.** A logical collection of discovered host ports, defined host computers, and defined host groups in the storage-partition topology that fulfill the following requirements:

- Are not involved in specific logical drive-to-LUN mappings
- Share access to logical drives with default logical drive-to-LUN mappings

**device type.** Identifier used to place devices in the physical map, such as the switch, hub, or storage.

**DHCP.** See *Dynamic Host Configuration Protocol*.

**direct access storage device (DASD).** A device in which access time is effectively independent of the location of the data. Information is entered and retrieved without reference to previously accessed data. (For example, a disk drive is a DASD, in contrast with a tape drive, which stores data as a linear sequence.) DASDs include both fixed and removable storage devices.

**direct memory access (DMA).** The transfer of data between memory and an input/output (I/O) device without processor intervention.

**disk array controller (dac).** A disk array controller device that represents the two controllers of an array. See also *disk array router*.

**disk array router (dar).** A disk array router that represents an entire array, including current and deferred paths to all logical unit numbers (LUNs) (hdisks on AIX). See also *disk array controller*.

**DMA.** See *direct memory access*.

**domain.** The most significant byte in the node port (N\_port) identifier for the fibre-channel (FC) device. It is not used in the fibre channel-small computer system interface (FC-SCSI) hardware path ID. It is required to be the same for all SCSI targets logically connected to an FC adapter.

**DRAM.** See *dynamic random access memory*.

**Dynamic Host Configuration Protocol (DHCP).** A protocol defined by the Internet Engineering Task Force that is used for dynamically assigning Internet Protocol (IP) addresses to computers in a network.

**dynamic random access memory (DRAM).** A storage in which the cells require repetitive application of control signals to retain stored data.

**ECC.** See *error correction coding*.

**EEPROM.** See *electrically erasable programmable read-only memory*.

**EISA.** See *Extended Industry Standard Architecture*.

**electrically erasable programmable read-only memory (EEPROM).** A type of memory chip which can retain its contents without consistent electrical power. Unlike the PROM which can be programmed only once, the EEPROM can be erased electrically. Because it can only be reprogrammed a limited number of times before it wears out, it is appropriate for storing small amounts of data that are changed infrequently.

**electrostatic discharge (ESD).** The flow of current that results when objects that have a static charge come into close enough proximity to discharge.

**environmental services monitor (ESM) canister.** A component in a drive enclosure that monitors the environmental condition of the components in that enclosure. Not all storage subsystems have ESM canisters.

**E\_port.** See *expansion port*.

**error correction coding (ECC).** A method for encoding data so that transmission errors can be detected and corrected by examining the data on the receiving end. Most ECCs are characterized by the maximum number of errors they can detect and correct.

**ESD.** See *electrostatic discharge*.

**ESM canister.** See *environmental services monitor canister*.

**EXP.** See *expansion unit*.

**expansion port (E\_port).** A port that connects the switches for two fabrics.

**expansion unit (EXP).** A feature that can be connected to a system unit to provide additional storage and processing capacity.

**Extended Industry Standard Architecture (EISA).** A bus standard for IBM compatibles that extends the Industry Standard Architecture (ISA) bus architecture to 32 bits and allows more than one central processing unit (CPU) to share the bus. See also *Industry Standard Architecture*.

**fabric.** A Fibre Channel entity which interconnects and facilitates logins of N\_ports attached to it. The fabric is responsible for routing frames between source and destination N\_ports using address information in the frame header. A fabric can be as simple as a point-to-point channel between two N-ports, or as complex as a frame-routing switch that provides multiple and redundant internal pathways within the fabric between F\_ports.

**fabric port (F\_port).** In a fabric, an access point for connecting a user's N\_port. An F\_port facilitates N\_port

logins to the fabric from nodes connected to the fabric. An F\_port is addressable by the N\_port connected to it. See also *fabric*.

**FAST MSJ.** See *FAST Management Suite Java*.

**FAST Management Suite Java (FAST MSJ).** A diagnostic and configuration utility that can be used on Linux, Microsoft Windows, and Novell NetWare host systems. In Linux, it is also used with the QLRemote agent to define preferred and non-preferred paths for logical drives.

**FC.** See *fibre channel*.

**FC-AL.** See *arbitrated loop*.

**feature enable identifier.** A unique identifier for the storage subsystem, which is used in the process of generating a premium feature key. See also *premium feature key*.

**fibre channel (FC).** A set of standards for a serial input/output (I/O) bus capable of transferring data between two ports at up to 100 Mbps, with standards proposals to go to higher speeds. FC supports point-to-point, arbitrated loop, and switched topologies.

**Fibre Channel-Arbitrated Loop (FC-AL).** See *arbitrated loop*.

**Fibre Channel Protocol (FCP) for small computer system interface (SCSI).** A high-level fibre-channel mapping layer (FC-4) that uses lower-level fibre-channel (FC-PH) services to transmit SCSI commands, data, and status information between a SCSI initiator and a SCSI target across the FC link by using FC frame and sequence formats.

**field replaceable unit (FRU).** An assembly that is replaced in its entirety when any one of its components fails. In some cases, a field replaceable unit might contain other field replaceable units. Contrast with *customer replaceable unit (CRU)*.

**FlashCopy.** A premium feature for FAST that can make an instantaneous copy of the data in a volume.

**F\_port.** See *fabric port*.

**FRU.** See *field replaceable unit*.

**GBIC.** See *gigabit interface converter*

**gigabit interface converter (GBIC).** A transceiver that performs serial, optical-to-electrical, and electrical-to-optical signal conversions for high-speed networking. A GBIC can be hot swapped. See also *small form-factor pluggable*.

**graphical user interface (GUI).** A type of computer interface that presents a visual metaphor of a real-world scene, often of a desktop, by combining high-resolution

graphics, pointing devices, menu bars and other menus, overlapping windows, icons, and the object-action relationship.

**GUI.** See *graphical user interface*.

**HBA.** See *host bus adapter*.

**hdisk.** An AIX term representing a logical unit number (LUN) on an array.

**host.** A system that is directly attached to the storage subsystem through a fibre-channel input/output (I/O) path. This system is used to serve data (typically in the form of files) from the storage subsystem. A system can be both a storage management station and a host simultaneously.

**host bus adapter (HBA).** An interface between the fibre-channel network and a workstation or server.

**host computer.** See *host*.

**host group.** An entity in the storage partition topology that defines a logical collection of host computers that require shared access to one or more logical drives.

**host port.** Ports that physically reside on the host adapters and are automatically discovered by the FAST Storage Manager software. To give a host computer access to a partition, its associated host ports must be defined.

**hot swap.** To replace a hardware component without turning off the system.

**hub.** In a network, a point at which circuits are either connected or switched. For example, in a star network, the hub is the central node; in a star/ring network, it is the location of wiring concentrators.

**IBMSAN driver.** The device driver that is used in a Novell NetWare environment to provide multipath input/output (I/O) support to the storage controller.

**IC.** See *integrated circuit*.

**IDE.** See *integrated drive electronics*.

**in-band.** Transmission of management protocol over the fibre-channel transport.

**Industry Standard Architecture (ISA).** Unofficial name for the bus architecture of the IBM PC/XT personal computer. This bus design included expansion slots for plugging in various adapter boards. Early versions had an 8-bit data path, later expanded to 16 bits. The "Extended Industry Standard Architecture" (EISA) further expanded the data path to 32 bits. See also *Extended Industry Standard Architecture*.

**initial program load (IPL).** The initialization procedure that causes an operating system to commence operation. Also referred to as a system restart, system startup, and boot.

**integrated circuit (IC).** A microelectronic semiconductor device that consists of many interconnected transistors and other components. ICs are constructed on a small rectangle cut from a silicon crystal or other semiconductor material. The small size of these circuits allows high speed, low power dissipation, and reduced manufacturing cost compared with board-level integration. Also known as a *chip*.

**integrated drive electronics (IDE).** A disk drive interface based on the 16-bit IBM personal computer Industry Standard Architecture (ISA) in which the controller electronics reside on the drive itself, eliminating the need for a separate adapter card. Also known as an Advanced Technology Attachment Interface (ATA).

**Internet Protocol (IP).** A protocol that routes data through a network or interconnected networks. IP acts as an intermediary between the higher protocol layers and the physical network.

**Internet Protocol (IP) address.** The unique 32-bit address that specifies the location of each device or workstation on the Internet. For example, 9.67.97.103 is an IP address.

**interrupt request (IRQ).** A type of input found on many processors that causes the processor to suspend normal processing temporarily and start running an interrupt handler routine. Some processors have several interrupt request inputs that allow different priority interrupts.

**IP.** See *Internet Protocol*.

**IPL.** See *initial program load*.

**IRQ.** See *interrupt request*.

**ISA.** See *Industry Standard Architecture*.

**isolated group.** A collection of isolated devices not connected to the storage area network (SAN) but discovered by the SANavigator tool. The isolated group displays with a gray background near the bottom of the Physical and Data Path maps.

**Java Runtime Environment (JRE).** A subset of the Java Development Kit (JDK) for end users and developers who want to redistribute the Java Runtime Environment (JRE). The JRE consists of the Java virtual machine, the Java Core Classes, and supporting files.

**JRE.** See *Java Runtime Environment*.

**label.** A discovered or user entered property value that is displayed underneath each device in the Physical and Data Path maps.

**LAN.** See *local area network*.

**LBA.** See *logical block address*.

**local area network (LAN).** A computer network located on a user's premises within a limited geographic area.

**logical block address (LBA).** The address of a logical block. Logical block addresses are typically used in hosts' I/O commands. The SCSI disk command protocol, for example, uses logical block addresses.

**logical unit number (LUN).** An identifier used on a small computer system interface (SCSI) bus to distinguish among up to eight devices (logical units) with the same SCSI ID.

**loop address.** The unique ID of a node in fibre-channel loop topology sometimes referred to as a loop ID.

**loop group.** A collection of storage area network (SAN) devices that are interconnected serially in a single loop circuit. Loop groups are discovered by the SANavigator tool and displayed with a gray background on the Physical and Data Path maps.

**loop port.** A node port (N\_port) or fabric port (F\_port) that supports arbitrated loop functions associated with an arbitrated loop topology.

**LUN.** See *logical unit number*.

**MAC.** See *medium access control*.

**management information base (MIB).** The information that is on an agent. It is an abstraction of configuration and status information.

**man pages.** In UNIX-based operating systems, online documentation for operating system commands, subroutines, system calls, file formats, special files, stand-alone utilities, and miscellaneous facilities. Invoked by the **man** command.

**MCA.** See *micro channel architecture*.

**medium access control (MAC).** In local area networks (LANs), the sublayer of the data link control layer that supports medium-dependent functions and uses the services of the physical layer to provide services to the logical link control sublayer. The MAC sublayer includes the method of determining when a device has access to the transmission medium.

**MIB.** See *management information base*.

**micro channel architecture (MCA).** Hardware that is used for PS/2 Model 50 computers and above to

provide better growth potential and performance characteristics when compared with the original personal computer design.

**Microsoft Cluster Server (MSCS).** MSCS, a feature of Windows NT Server (Enterprise Edition), supports the connection of two servers into a cluster for higher availability and easier manageability. MSCS can automatically detect and recover from server or application failures. It can also be used to balance server workload and provide for planned maintenance.

**model.** The model identification that is assigned to a device by its manufacturer.

**MSCS.** See *Microsoft Cluster Server*.

**network management station (NMS).** In the Simple Network Management Protocol (SNMP), a station that runs management application programs that monitor and control network elements.

**NMI.** See *non-maskable interrupt*.

**NMS.** See *network management station*.

**non-maskable interrupt (NMI).** A hardware interrupt that another service request cannot overrule (mask). An NMI bypasses and takes priority over interrupt requests generated by software, the keyboard, and other such devices and is issued to the microprocessor only in disastrous circumstances, such as severe memory errors or impending power failures.

**node.** A physical device that allows for the transmission of data within a network.

**node port (N\_port).** A fibre-channel defined hardware entity that performs data communications over the fibre-channel link. It is identifiable by a unique worldwide name. It can act as an originator or a responder.

**nonvolatile storage (NVS).** A storage device whose contents are not lost when power is cut off.

**N\_port.** See *node port*.

**NVS.** See *nonvolatile storage*.

**NVSRAM.** Nonvolatile storage random access memory. See *nonvolatile storage*.

**Object Data Manager (ODM).** An AIX proprietary storage mechanism for ASCII stanza files that are edited as part of configuring a drive into the kernel.

**ODM.** See *Object Data Manager*.

**out-of-band.** Transmission of management protocols outside of the fibre-channel network, typically over Ethernet.

**PCI local bus.** See *peripheral component interconnect local bus*.

**PDF.** See *portable document format*.

**performance events.** Events related to thresholds set on storage area network (SAN) performance.

**peripheral component interconnect local bus (PCI local bus).** A local bus for PCs, from Intel, that provides a high-speed data path between the CPU and up to 10 peripherals (video, disk, network, and so on). The PCI bus coexists in the PC with the Industry Standard Architecture (ISA) or Extended Industry Standard Architecture (EISA) bus. ISA and EISA boards plug into an IA or EISA slot, while high-speed PCI controllers plug into a PCI slot. See also *Industry Standard Architecture, Extended Industry Standard Architecture*.

**polling delay.** The time in seconds between successive discovery processes during which discovery is inactive.

**port.** A part of the system unit or remote controller to which cables for external devices (such as display stations, terminals, printers, switches, or external storage units) are attached. The port is an access point for data entry or exit. A device can contain one or more ports.

**portable document format (PDF).** A standard specified by Adobe Systems, Incorporated, for the electronic distribution of documents. PDF files are compact; can be distributed globally by e-mail, the Web, intranets, or CD-ROM; and can be viewed with the Acrobat Reader, which is software from Adobe Systems that can be downloaded at no cost from the Adobe Systems home page.

**premium feature key.** A file that the storage subsystem controller uses to enable an authorized premium feature. The file contains the feature enable identifier of the storage subsystem for which the premium feature is authorized, and data about the premium feature. See also *feature enable identifier*.

**private loop.** A freestanding arbitrated loop with no fabric attachment. See also *arbitrated loop*.

**program temporary fix (PTF).** A temporary solution or bypass of a problem diagnosed by IBM in a current unaltered release of the program.

**PTF.** See *program temporary fix*.

**RAID.** See *redundant array of independent disks*.

**RAM.** See *random-access memory*.

**random-access memory (RAM).** A temporary storage location in which the central processing unit (CPU) stores and executes its processes. Contrast with *DASD*.

**RDAC.** See *redundant disk array controller*.

**read-only memory (ROM).** Memory in which stored data cannot be changed by the user except under special conditions.

**recoverable virtual shared disk (RVSD).** A virtual shared disk on a server node configured to provide continuous access to data and file systems in a cluster.

**redundant array of independent disks (RAID).** A collection of disk drives that appears as a single volume to the server and are fault tolerant through mirroring or parity checking.

**redundant disk array controller (RDAC).** (1) In hardware, a redundant set of controllers (either active/passive or active/active). (2) In software, a layer that manages the input/output (I/O) through the active controller during normal operation and transparently reroutes I/Os to the other controller in the redundant set if a controller or I/O path fails.

**ROM.** See *read-only memory*.

**router.** A computer that determines the path of network traffic flow. The path selection is made from several paths based on information obtained from specific protocols, algorithms that attempt to identify the shortest or best path, and other criteria such as metrics or protocol-specific destination addresses.

**RVSD.** See *recoverable virtual shared disk*.

**SAI.** See *Storage Array Identifier*.

**SA Identifier.** See *Storage Array Identifier*.

**SAN.** See *storage area network*.

**SATA.** See *serial ATA*.

**scope.** Defines a group of controllers by their Internet Protocol (IP) addresses. A scope must be created and defined so that dynamic IP addresses can be assigned to controllers on the network.

**SCSI.** See *small computer system interface*.

**segmented loop port (SL\_port).** A port that allows division of a fibre-channel private loop into multiple segments. Each segment can pass frames around as an independent loop and can connect through the fabric to other segments of the same loop.

**sense data.** (1) Data sent with a negative response, indicating the reason for the response. (2) Data describing an I/O error. Sense data is presented to a host system in response to a sense request command.

**serial ATA.** The standard for a high-speed alternative to small computer system interface (SCSI) hard drives. The SATA-1 standard is equivalent in performance to a 10 000 RPM SCSI drive.

**serial storage architecture (SSA).** An interface specification from IBM in which devices are arranged in a ring topology. SSA, which is compatible with small computer system interface (SCSI) devices, allows full-duplex packet multiplexed serial data transfers at rates of 20 Mbps in each direction.

**server.** A functional hardware and software unit that delivers shared resources to workstation client units on a computer network.

**server/device events.** Events that occur on the server or a designated device that meet criteria that the user sets.

**SFP.** See *small form-factor pluggable*.

**Simple Network Management Protocol (SNMP).** In the Internet suite of protocols, a network management protocol that is used to monitor routers and attached networks. SNMP is an application layer protocol. Information on devices managed is defined and stored in the application's Management Information Base (MIB).

**SL\_port.** See *segmented loop port*.

**SMagent.** The FAStT Storage Manager optional Java-based host-agent software, which can be used on Microsoft Windows, Novell NetWare, HP-UX, and Solaris host systems to manage storage subsystems through the host fibre-channel connection.

**SMclient.** The FAStT Storage Manager client software, which is a Java-based graphical user interface (GUI) that is used to configure, manage, and troubleshoot storage servers and expansion units in a FAStT storage subsystem. SMclient can be used on a host system or on a storage management station.

**SMruntime.** A Java compiler for the SMclient.

**SMutil.** The FAStT Storage Manager utility software that is used on Microsoft Windows, HP-UX, and Solaris host systems to register and map new logical drives to the operating system. In Microsoft Windows, it also contains a utility to flush the cached data of the operating system for a particular drive before creating a FlashCopy.

**small computer system interface (SCSI).** A standard hardware interface that enables a variety of peripheral devices to communicate with one another.

**small form-factor pluggable (SFP).** An optical transceiver that is used to convert signals between optical fiber cables and switches. An SFP is smaller than a gigabit interface converter (GBIC). See also *gigabit interface converter*.

**SNMP.** See *Simple Network Management Protocol* and *SNMPv1*.

**SNMP time-out.** The maximum amount of time the SANavigator tool will wait for a device to respond to a request. The specified time applies to one retry only.

**SNMP trap event.** (1) (2) An event notification sent by the SNMP agent that identifies conditions, such as thresholds, that exceed a predetermined value. See also *Simple Network Management Protocol*.

**SNMPv1.** The original standard for SNMP is now referred to as SNMPv1, as opposed to SNMPv2, a revision of SNMP. See also *Simple Network Management Protocol*.

**SRAM.** See *static random access memory*.

**SSA.** See *serial storage architecture*.

**static random access memory (SRAM).** Random access memory based on the logic circuit known as flip-flop. It is called static because it retains a value as long as power is supplied, unlike dynamic random access memory (DRAM), which must be regularly refreshed. It is however, still volatile, meaning that it can lose its contents when the power is turned off.

**storage area network (SAN).** A dedicated storage network tailored to a specific environment, combining servers, storage products, networking products, software, and services. See also *fabric*.

**Storage Array Identifier (SAI or SA Identifier).** The Storage Array Identifier is the identification value used by the FAStT Storage Manager host software (SMClient) to uniquely identify each managed storage server. The FAStT Storage Manager SMClient program maintains Storage Array Identifier records of previously-discovered storage servers in the host resident file, which allows it to retain discovery information in a persistent fashion.

**storage management station.** A system that is used to manage the storage subsystem. A storage management station does not need to be attached to the storage subsystem through the fibre-channel input/output (I/O) path.

**storage partition.** Storage subsystem logical drives that are visible to a host computer or are shared among host computers that are part of a host group.

**storage partition topology.** In the FAStT Storage Manager client, the Topology view of the Mappings window displays the default host group, the defined host group, the host computer, and host-port nodes. The host port, host computer, and host group topological elements must be defined to grant access to host computers and host groups using logical drive-to-LUN mappings.

**subnet.** An interconnected but independent segment of a network that is identified by its Internet Protocol (IP) address.

**sweep method.** A method of sending Simple Network Management Protocol (SNMP) requests for information to all the devices on a subnet by sending the request to every device in the network.

**switch.** A fibre-channel device that provides full bandwidth per port and high-speed routing of data by using link-level addressing.

**switch group.** A switch and the collection of devices connected to it that are not in other groups. Switch groups are discovered by the SANavigator tool and displayed with a gray background on the Physical and Data Path maps.

**system name.** Device name assigned by the vendor's third-party software.

**TCP.** See *Transmission Control Protocol*.

**TCP/IP.** See *Transmission Control Protocol/Internet Protocol*.

**terminate and stay resident program (TSR program).** A program that installs part of itself as an extension of DOS when it is executed.

**topology.** The physical or logical arrangement of devices on a network. The three fibre-channel topologies are fabric, arbitrated loop, and point-to-point. The default topology for the disk array is arbitrated loop.

**TL\_port.** See *translated loop port*.

**transceiver.** A device that is used to transmit and receive data. Transceiver is an abbreviation of transmitter-receiver.

**translated loop port (TL\_port).** A port that connects to a private loop and allows connectivity between the private loop devices and off loop devices (devices not connected to that particular TL\_port).

**Transmission Control Protocol (TCP).** A communication protocol used in the Internet and in any network that follows the Internet Engineering Task Force (IETF) standards for internetwork protocol. TCP provides a reliable host-to-host protocol between hosts in packed-switched communication networks and in interconnected systems of such networks. It uses the Internet Protocol (IP) as the underlying protocol.

**Transmission Control Protocol/Internet Protocol (TCP/IP).** A set of communication protocols that provide peer-to-peer connectivity functions for both local and wide-area networks.

**trap.** In the Simple Network Management Protocol (SNMP), a message sent by a managed node (agent function) to a management station to report an exception condition.

**trap recipient.** Receiver of a forwarded Simple Network Management Protocol (SNMP) trap.

Specifically, a trap receiver is defined by an Internet Protocol (IP) address and port to which traps are sent. Presumably, the actual recipient is a software application running at the IP address and listening to the port.

**TSR program.** See *terminate and stay resident program*.

**uninterruptible power supply.** A source of power from a battery that is installed between a computer system and its power source. The uninterruptible power supply keeps the system running if a commercial power failure occurs, until an orderly shutdown of the system can be performed.

**user action events.** Actions that the user takes, such as changes in the storage area network (SAN), changed settings, and so on.

**vendor.** Property value that the SANavigator tool uses to launch third-party software. Vendor property might be discovered, but will always remain editable.

**worldwide name (WWN).** A unique identifier for a switch on local and global networks.

**WORM.** See *write-once read-many*.

**write-once read many (WORM).** Any type of storage medium to which data can be written only a single time, but can be read from any number of times. After the data is recorded, it cannot be altered.

**WWN.** See *worldwide name*.

**zoning.** A function that allows segmentation of nodes by address, name, or physical port and is provided by fabric switches or hubs.

# Index

## A

- access controller shell 48
- add
  - new hard drives 15
  - single drive enclosure
    - final fibre channel connection 23
    - first fibre channel connection 22
    - second fibre channel connection 22
  - storage expansion enclosures 19
  - storage expansion units
    - license requirement 1
  - used hard drives 15
- AppWare 10
- array
  - cannot bring online 32
  - configuration data for drives incomplete 32
  - RAID-level modification 13
  - redundancy checking 13
  - return online 47
- attention 15, 16, 19, 26, 32, 33, 35, 38
- automatically reset controllers 15, 16, 25, 27

## B

- backup
  - logical drives 29, 35
  - storage server data 9, 46
- bag or container, ESD 41
- BootWare 10

## C

- cable
  - EXP500 to EXP700 3
  - EXP700 to EXP500 3
  - fibre channel connections 22, 23
  - new storage expansion enclosures 20
  - trace fibre channel connections 35, 45
- cannot bring array online 32
- catastrophic failure 13
- change fibre channel speed settings 2
- check for configuration data 16
  - on newly discovered drives 27
- Class A electronic emission notice 58
- clear configuration data 25
- compliant state 44
- configuration
  - behavior after replacement 43
  - data, clear 25
- configure drives 16
- container or bag, ESD 41
- controller
  - blade, embedded unique identifier 43
  - drive loop LED 35, 45
  - firmware download during I/O 12
  - firmware version 9
    - by machine type 10

- controller (*continued*)
  - firmware version (*continued*)
    - by model number 10
    - by NVSRAM version 10
    - current 11
  - firmware, verify level 9, 11, 30, 33, 45
  - reset automatically 15, 16, 25, 27
  - shell, accessing 48
- controller IP addresses 44
- copyback, logical drive 13
- customize storage partitioning information 30, 34

## D

- DACstore 43, 44
- DCE 13
- delete
  - FlashCopy 34
  - remote mirror relationships 34
  - storage partition mappings 34
- disable drive migration settings 15, 24
  - become effective 16
- DisableDriveMigration.scr script 17
- documentation
  - FASTt 51
  - related 55
- drive displays as unconfigured 26
- drive expansion enclosure weight 36
- drive loop
  - optimal state 12
  - pairs, maximum allowable 1
  - speed change procedure 2
- drive loop pairs, maximum 4
- drive loop state, determine 9
- drive loops A and B 21, 37, 38
- drive migration
  - prerequisites 9
  - settings
    - disable 15, 24
    - enable 26
    - re-enable 16, 25
- drives
  - CRU assembly 31
  - do not appear marked as Failed 32
  - do not display 32
  - maximum allowable 1
  - remove
    - configuration data 15
    - will not spin up 15, 19, 29
- DVE 13
- dynamic
  - capacity expansion, DCE 13
  - volume expansion, DVE 13

## E

- electronic emission Class A notice 58

- Electronic emission notices
  - Australia and New Zealand Class A statement 59
  - European Union EMC Directive conformance statement 59
  - Federal Communications Commission (FCC) statement 58
  - Industry Canada Class A emission compliance statement 59
  - Japanese Voluntary Control Council for Interference (VCCI) statement 60
  - Taiwanese Class A warning statement 60
  - United Kingdom telecommunications safety requirement 59
- electrostatic discharge (ESD) procedure 15
- empty drive icon 32
- emulation program, sample 48
- EnableDriveMigration.scr script 16, 17, 27
- enclosure ID 5
- environmental service module (ESM) firmware 3
- errors
  - drive enclosure lost redundancy path 21, 37, 38
  - loss of ESM path redundancy 35, 45
  - management event log (MEL) 9
  - out-of-compliance 48
- ESD bag or container 36, 41
- ESM Fault LED 35, 45
- ESM firmware
  - EXP500 11
  - EXP700 11
  - upgrade during I/O 10
  - version, current 11
  - version, upgrade 11
  - version, upgrade during I/O 12
- event logs, interpreting 12
- every unit items 44
- execute script 15, 16, 24, 27
- EXP500
  - and EXP700 in a redundant drive loop pair 2
  - cabling 3
  - drive loop pair maximum 4
  - ESM firmware 11
  - ID setting 6
  - ID switch location 20, 36
  - maximum per drive loop pairs 4
- EXP700
  - 1 Gbps fibre channel drives 19
  - and EXP500 in a redundant drive loop pair 2
  - cabling 3
  - drive loop pair maximum 4
  - ESM firmware 11
  - ID setting 6
  - ID switch location 20, 36
  - maximum per drive loop pairs 4
- expansion enclosure
  - ID setting 5
- expansion enclosure speed setting 42, 46
- expansion enclosures
  - cabling mixed 3
  - ESM firmware version 11
  - ID setting 20, 36, 47
  - LED state 47

- expansion enclosures *(continued)*
  - migrate 33
  - speeds restriction 2
- expansion unit enclosure speed setting 36
- expansion units
  - ID setting 36
  - migrate 33

## F

- Failed icons 32
- false storage server identification, example 47
- FAST documentation 51
- FAST Problem Determination Guide 45
- FAST Storage Manager
  - related documents 55
- FAST Storage Manager publications 8
- FAST Storage Server
  - firmware 10
  - NVSRAM 10
  - profile 9
- FAST support
  - Web site 11
- FAST200
  - enclosure IDs 20
  - HA Storage Server firmware and NVSRAM 10
  - Storage Server firmware and NVSRAM 10
- FAST500 RAID Controller Enclosure firmware and NVSRAM 10
- FAST600
  - 1 Gbps fibre channel drives 19
  - enclosure IDs 20
  - Storage Server firmware and NVSRAM 10
  - Turbo Storage Server firmware and NVSRAM 10
- FAST600 Fibre Channel Storage Server library 54
- FAST700 Storage Server firmware and NVSRAM 10
- FAST700 Storage Server library 53
- FAST900 Fibre Channel Storage Server library 51
- FAST900 Storage Server firmware and NVSRAM 10
- FC Worldwide Name (WWN) 41, 43
- FCC Class A notice 58
- fibre channel
  - connections cabling 22, 23
  - drive firmware 12
  - insert drives 15, 16, 19, 25, 29, 32, 38
  - remove connection 21, 37
  - trace cable connections 35, 45
  - Worldwide Name (WWN) storage 41, 43
- firmware
  - compatibility 10
  - controller 10
  - controller and NVSRAM levels 30, 33
  - controller, NVSRAM, and ESM levels 9
  - current 10
  - download 47
  - ESM, version by expansion enclosure 11
  - updates 11
  - verify controller and NVSRAM levels 45
- firmware and NVSRAM
  - FAST200
    - HA Storage Server 10

- firmware and NVSRAM *(continued)*
  - FAST200 *(continued)*
    - Storage Server 10
  - FAST500 RAID Controller Enclosure 10
  - FAST600
    - Storage Server 10
    - Turbo Storage Server 10
  - FAST700 Storage Server 10
  - FAST900 Storage Server 10
- FlashCopy
  - delete 30, 34, 45
  - recreate 32, 38, 48
- flush I/O 9, 46
- flush server-cached I/O 9
- force generation SA Identifier 48

## G

- GBIC 20, 35, 37, 45, 47
- generate
  - new premium feature SAFE keys 41, 48
  - SA Identifier 48
- gigabit interface converter 20, 35, 37, 45, 47

## H

- hard drives
  - add new 15
  - add storage expansion enclosures containing 19
  - add used 15
  - ID/Model Number 15, 19, 29
  - migrate 29
  - newly discovered 25
  - prerequisites 9
  - removal 31
  - will not spin up 15, 19, 29
- help
  - center 12
  - online 13
  - prevent data loss 13
- host group names, unique 30, 34
- host kits, purchase 43
- host names, unique 30, 34
- host ports, unique 30, 34
- HyperTerminal, Private Edition 48

## I

- I/O, flush 9, 46
- IBM
  - Help Center, contact 12
- IBMSAN.CDM multi-path software 12
- icon
  - empty drive 32
  - Failed 32, 38, 47
  - Subsystem Management window 32, 38, 47
- ID
  - conflict LED 35, 45
  - switch location 20
- ID/model number, hard drive 15, 19, 29

- identify
  - 1 Gbps FC drives 15, 19, 29
  - firmware updates 11
- ignore
  - configuration data setting 15
  - configuration information 24
- impact of new storage server
  - on identification 43
  - on premium features 43
- IN port 21, 37, 38
- initialize a drive 38
- insert fibre channel drives 25, 32, 38
- intermixed enclosure ID settings 7
- IP addresses 44

## L

- LED
  - controller drive loop 35, 45
  - expansion enclosure states 47
  - ID conflict 35, 45
  - port bypass 35, 45
- license requirements 1
- Linux failover adapter driver
  - multi-path software 12
- listing
  - DisableDriveMigration.scr script file 17
  - EnableDriveMigration.scr script file 17
- load script 15, 16, 27
- logical drive
  - backup 29, 35
  - copyback 13
  - creation, FlashCopy 13
  - creation, VolumeCopy 13
  - dynamic capacity expansion 13
  - flashcopies, delete 30
  - reconstruction 13
  - segment size modification 13
  - sparing 13
  - synchronization, remote mirror 13
  - verify name 30
- Loop Initialization Primitive (LIP) 35
- loss of ESM path redundancy error 35, 45

## M

- machine type 1722
  - Model 60U 1, 10
  - Model 60X 1, 10
  - Model 6LU 1, 10
  - Model 6LX 1, 10
- machine type 1742
  - Model 1RU 1, 10
  - Model 1RX 1, 10
  - Model 90U 1, 10
  - Model 90X 1, 10
- machine type 1750
  - Model 1RU 11
  - Model 1RX 11
- machine type 3542
  - Model 1RU 1, 10

- machine type 3542 *(continued)*
  - Model 1RX 1, 10
  - Model 2RU 1, 10
  - Model 2RX 1, 10
- machine type 3552
  - Model 1RU 1, 10
  - Model 1RX 1, 10
- machine type 3560
  - Model 1RU 11
  - Model 1RX 11
- management event log errors 9
- map drives 16
- maximum
  - allowable drives 1
  - drive expansion enclosures 4
  - drives per redundant drive loop pair 4
  - storage expansion enclosures 4
- MEL errors 9
- menu option
  - Advanced → Reset Controller 16, 27
  - Array → Check Redundancy 13
  - Execute 25, 27
    - Script 16, 27
  - File → Load Script 15, 16, 24, 27
  - Initialize 32
  - Place → Offline 30, 35, 46
  - Place → Online 32, 38
  - Tools → Verify and Execute 15, 16, 25, 27
- migrate fibre channel drives 12
- migrate hard drives 29
- migrate storage expansion enclosures with drives 33
- minihub speed, set 46
- mix expansion enclosures 2
- mixed configuration
  - EXP500 to EXP700 cabling 3
  - EXP700 to EXP500 cabling 3
- model number
  - FAST EXP500
    - 1RU 11
    - 1RX 11
  - FAST EXP700
    - 1RU 11
    - 1RX 11
  - FAST200
    - 1RU 1, 10
    - 1RX 1, 10
    - 2RU 1, 10
    - 2RX 1, 10
  - FAST500
    - 1RU 1, 10
    - 1RX 1, 10
  - FAST600
    - 60U 1, 10
    - 60X 1, 10
  - FAST600 Single Controller
    - 6LU 1, 10
    - 6LX 1, 10
  - FAST600 Turbo
    - 60U 1, 10
    - 60X 1, 10

- model number *(continued)*
  - FAST700
    - 1RU 1, 10
    - 1RX 1, 10
  - FAST900
    - 90U 1, 10
    - 90X 1, 10
- move fibre channel drives 12
- multi-path software
  - IBMSAN.CDM 12
  - Linux failover adapter driver 12
  - RDAC 12

## N

- Needs Attention
  - condition 43
  - state 12
- new storage server impact 43
- notes, important 58
- notices
  - electronic emission 58
  - FCC, Class A 58
- null modem serial cable 48
- NVSRAM
  - clear codes 44
  - codes pre-loaded 44
  - FAST Storage Server 10
  - stores IP addresses 44
  - verify level 9, 11, 33, 45
  - version, by controller firmware version 10
- NVSRAM and controller firmware
  - FAST200
    - HA Storage Server 10
    - Storage Server 10
  - FAST500 RAID Controller Enclosure 10
  - FAST600
    - Storage Server 10
    - Turbo Storage Server 10
  - FAST700 Storage Server 10
  - FAST900 Storage Server 10

## O

- offline state 32, 35, 38, 46
- online help 13
- online state 32, 38, 47
- optimal state 9, 12, 19, 29, 30, 32, 33, 34, 35, 45, 47
- OUT port 21, 37, 38
- out-of-band storage server IP addresses 47
- out-of-compliance state 41, 43

## P

- port bypass LED 21, 35, 37, 38, 45
- post-replacement configuration behavior 43
- post-upgrade configuration behavior 43
- power on
  - drive expansion enclosure 2
  - storage expansion enclosure 2
  - storage server 2

- premium feature
  - enable status 43, 44
  - generate new SAFE keys 41, 48
  - IBM assigns entitlements 43
  - identifier 43
  - impact of new storage server on 43
  - re-enable 43
- prerequisites
  - adding capacity 9
  - drive migration 9
- prevent
  - data loss 13, 16, 26
  - shock 31, 36
- procedure
  - access controller shell 48
  - add new hard drives 15
  - add storage expansion enclosures 19
  - disable drive migration settings 15
  - electrostatic discharge (ESD) 15
  - enable drive migration settings 16
  - flush server-cached I/O 9
  - migrate hard drives 29
  - migrate storage expansion enclosures with drives 33
  - redeploy original (replaced) storage server 48
  - save a module profile report 13
  - save a storage subsystem profile 13
  - unmount file systems 9
  - upgrade
    - storage server 41, 45
- profile
  - FAST Storage Server 13
- proofs of purchase 41, 44, 46
- publications, FAST Storage Manager 8
- purchase
  - entitlements 1, 41, 43
  - host kits 41, 43

## Q

- Quorum disk 46

## R

- RAID-level modification 13
- re-enable
  - drive migration settings 16
  - premium features 41, 43
- Read\_Link\_Status
  - function 9, 12
- readme file 12, 19, 33, 41
- reconstruction, logical drive 13
- Recovery Guru 9
- redeploy original (replaced) storage server 48
- redundancy checking 13
- redundant disk array controller [RDAC]
  - multi-path software 12
- redundant drive loop pair 1, 4
- remote mirror
  - logical drive synchronization 13

- remote mirror (*continued*)
  - relationships
    - delete 34, 45
    - recreate 38, 48
    - remove 30
- remove
  - configuration data 15
  - drive expansion enclosure 35
  - drives 29, 36
  - fibre channel connection 21, 37
  - hard drives 31
  - out-of-compliance errors 48
  - remote mirror relationships 30, 34
  - storage components 15, 19, 29, 33
  - storage expansion enclosure 35
  - storage server 45, 46
- reset
  - controllers 16, 24, 48
    - automatically 25
  - controllers automatically 27
  - storage subsystem setting 15, 16
- restore a storage subsystem configuration 13

## S

- SA Identifier 43
  - force generation 48
- SAFE
  - ID 43
  - key 46
  - Premium Feature Identifier 43
- safety information iii
- SAI 43
- Saving a module profile report and state capture information to help prevent data loss 13
- schedule upgrades 12, 19, 33, 46
- script
  - DisableDriveMigration.scr 17
  - editor window 16, 24, 27
  - EnableDriveMigration.scr 17
  - execute 15, 16, 24, 27
  - load 15, 16, 24, 27
- set drive expansion enclosure ID 36
- set minihub speed 46
- set storage expansion enclosure ID 36
- setting
  - out-of-band storage server IP addresses 47
- settings
  - disable drive migration
    - become effective 16
  - drive migration
    - disable 15, 24
    - enable 26
    - re-enable 16, 25
  - expansion enclosure speed 46
  - fibre channel speed 2
- SFP 20, 35, 37, 45, 47
- shutdown
  - drive expansion enclosure 2
  - storage expansion enclosure 2
  - storage server 2

- small form-factor pluggable 20, 35, 37, 45, 47
- SMclient 43
- software compatibility
  - Web site 12
- sparing, logical drive 13
- speed restriction
  - drive expansion enclosure 2
  - storage expansion enclosure 2
- speed settings
  - drive loop 2
  - expansion enclosure 46
- state
  - compliant 44
  - expansion enclosure LED 47
  - Needs Attention 12
  - offline 29, 32, 35, 38, 46
  - online 32, 38, 47
  - optimal 9, 12, 15, 19, 29, 30, 32, 33, 34, 35, 45, 47
  - out-of-compliance 41, 43
- static IP address
  - storage 44
- storage
  - components removal 33
  - FASTt Storage Server profile 9, 13
  - Fibre Channel Worldwide Name (WWN) 43
  - static IP address 44
- Storage Array Identifier 43
- storage expansion enclosure weight 36
- Storage Manager
  - installation and support guide 11, 13, 19, 33, 41, 47
  - installation CD 15, 16, 24, 27
- storage partition mappings
  - delete 34
- storage partitioning definitions, view 32, 39
- storage pool, unconfigured capacity 38
- storage server
  - configuration behavior after
    - redeployment 43
    - upgrade and replacement 43
  - configuration migration 13
  - controller firmware behavior after upgrade 42
  - controller firmware version 10
  - false identification example 47
  - identification 43
  - physical configuration, alter 15, 19, 29, 33
  - redeploy 48
  - status 12
  - upgrade NVSRAM version 10
- storage subsystem
  - optimal state 12
  - restore configuration 13
- storage subsystem profile
  - restore 13
  - save 9, 13
  - storage 9, 13
- Subsystem Management window icon 32
- suspend I/O from hosts during drive firmware
  - upgrade 12
- switches
  - ID 20

- synchronization
  - remote mirror logical drive 13

## T

- tasks by documentation title 51
- technical background on storage server controller
  - firmware behavior 42
- terminal emulation program, sample 48
- trace fibre channel cable connections 35, 45

## U

- unconfigured capacity storage pool 38
- United States electronic emission Class A notice 58
- United States FCC Class A notice 58
- unmount file systems 9, 29, 35, 46
- upgrade
  - drive firmware 12
  - ESM firmware 11
  - schedule 10, 12, 19, 33, 46
  - storage server 45
    - important considerations 41
    - in functioning configuration 41, 45
- used hard drives 15
- user tasks
  - FASTt600 Fibre Channel Storage Server 54
  - FASTt700 Fibre Channel Storage Server 53
  - FASTt900 Fibre Channel Storage Server 51
  - related documents 55

## W

- Web site 13
  - FASTt documentation 8
  - FASTt support 11
  - software compatibility 12
  - support 13
- weight of drive expansion enclosure 36
- window
  - Client Subsystem Management 13, 21, 35, 37, 38, 45
  - Enterprise Management 15, 16, 24, 26
  - Load Script file selection 15, 16, 24, 27
  - Read\_Link\_Status 12
  - Reset Controller 16, 25, 27
  - script editor 15, 16, 24, 27
  - Storage Subsystem Management 13, 16, 25, 27, 29, 32, 35, 38, 46, 47
- WWN 41, 43

---

# Readers' comments — we would like to hear from you.

IBM TotalStorage FAStT

Fibre Channel Hard Drive and Storage Expansion Enclosure Installation and Migration Guide

Publication No. GC26-7639-00

Overall, how satisfied are you with the information in this book?

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Overall satisfaction	<input type="checkbox"/>				

How satisfied are you that the information in this book is:

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Accurate	<input type="checkbox"/>				
Complete	<input type="checkbox"/>				
Easy to find	<input type="checkbox"/>				
Easy to understand	<input type="checkbox"/>				
Well organized	<input type="checkbox"/>				
Applicable to your tasks	<input type="checkbox"/>				

Please tell us how we can improve this book:

Thank you for your responses. May we contact you?  Yes  No

When you send comments to IBM, you grant IBM a nonexclusive right to use or distribute your comments in any way it believes appropriate without incurring any obligation to you.

\_\_\_\_\_  
Name

\_\_\_\_\_  
Address

\_\_\_\_\_  
Company or Organization

\_\_\_\_\_  
Phone No.



Fold and Tape

Please do not staple

Fold and Tape




NO POSTAGE  
NECESSARY  
IF MAILED IN THE  
UNITED STATES

# BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

International Business Machines Corporation  
Information Development  
Dept. GZW  
9000 South Rita Road  
Tucson, Arizona  
U.S.A. 85744-0001

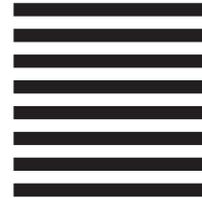

Fold and Tape

Please do not staple

Fold and Tape





Printed in USA

GC26-7639-00

