

# NAS Executor E7000

## Rack Installation and Connection Card




### NOTICE

© 2001 Compaq Computer Corporation.  
Compaq, the Compaq logo, and StorageWorks are trademarks of Compaq Information Technologies Group, L.P.  
All other product names mentioned herein may be trademarks of their respective companies.  
Compaq shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is provided "as is" without warranty of any kind and is subject to change without notice. The warranties for Compaq products are set forth in the express limited warranty statements accompanying such products. Nothing herein should be construed as constituting an additional warranty.  
Printed in the U.S.A.  
STORAGEWORKS NAS EXECUTOR E7000  
RACK INSTALLATION AND CONNECTION CARD  
First Edition (October 2001)  
Part Number: 259125-001



### Important Safety Information

Before installing this product, read the *Important Safety Information* document provided.

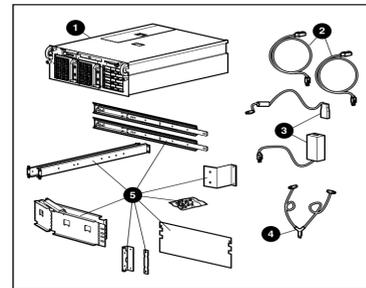

Identify NAS Executor E7000 components.

Item	Description
1	Server
2	Power cords for server power supplies
3	Remote Insight Lights-Out Edition board power cable and adapter
4	"Y" cable for Remote Insight Lights-Out Edition board
5	Rack mounting hardware for the server

**WARNING:** To reduce the risk of personal injury or damage to the equipment, at least two people are needed to safely remove the NAS Executor E7000 from the shipping carton.

### Installation Tips

Begin installing rack components at the bottom of the rack or immediately above a previously installed component, and then work toward the top of the rack.

Have a Phillips screwdriver and a pencil available before beginning the procedure.  
Do not tighten the rack-mounting rail screws completely until after the component is inserted into the rack. The small amount of play helps position the rails to the exact width of the component being installed.

Always make sure that the rack-mounting rails are completely level.

**WARNING:** This product is very heavy. To reduce the risk of personal injury or damage to the equipment:

- Observe local occupational health and safety requirements and guidelines for manual material handling.
- Get help to lift and stabilize the product during installation or removal, especially when the product is not fastened to the rails.

**WARNING:** When the product is installed into or removed from the rack, the product is unstable when not fastened to the rails.

### Space Requirements

**Front clearance.** Leave at least 64 cm (25 in) in front of the rack to allow the door to open all the way and to provide adequate airflow.

**Back clearance.** Leave at least 77 cm (30 in) behind the rack to allow easy servicing and to provide adequate airflow.

### Power Requirements

**WARNING:** To reduce the risk of personal injury, fire, or damage to the equipment, do not overload the AC supply branch circuit that provides power to the rack. Consult the appropriate electrical authority for the wiring and installation requirements of your facility.

**Balance circuit power load.** The circuit power load must be balanced between available AC supply branch circuits.

**Limit circuit current load.** The overall system AC current load must not exceed 80 percent of the branch circuit AC current rating.

**Limit power strip load.** If power strips are used, the load should not exceed 80 percent of the marked electrical current rating.

Installation of this equipment shall be in accordance with local/regional electrical regulations governing the installation of information technology equipment by licensed electricians. This equipment is designed to operate in installations covered by the National Electric Code (ANSI/NFPA 70, 1993) and the code for Protection of Electronic Computer/Data Processing Equipment (NFPA-75, 1992).

For electrical power ratings on options, refer to the rating label on the product or to the user documentation supplied with that option.

### Grounding Requirements

For proper operation and safety, this equipment must be properly grounded (earthed). In the United States, install the equipment in accordance with NFPA 70-1993 (National Electric Code) Article 250, as well as any local and regional building codes. In Canada, the equipment should be installed in accordance with Canadian Standards Association, CSA C22.1, Canadian Electrical Code. In all other countries, the installation should follow any regional or national electrical wiring codes, such as the International Electrotechnical Commission (IEC) 364, parts 1 through 7. All power distribution devices used in the installation, including branch wiring, receptacles, and so forth, should be listed or certified ground-type devices.

**WARNING:** To reduce the risk of personal injury, fire, or damage to the equipment, do not overload the AC supply branch circuit that provides power to the rack. Consult the electrical authority for the wiring and installation requirements of your facility.

Because higher ground-leakage currents are associated with connecting several pieces of equipment to the same power source, Compaq recommends using a power distribution unit (PDU) that provides a supplementary ground conductor. Connect this supplementary ground conductor permanently to a suitable building ground terminal. Do not use common power outlet strips for this equipment.

### Temperature Requirements

To ensure continued safe and reliable operation of the equipment, locate the system in a well-ventilated, climate-controlled environment.

The Compaq Maximum Recommended Ambient Operating Temperature (TMRA) for most server products is 35°C (95°F). Therefore, the temperature in the room where the rack is located should not exceed 35°C (95°F).

The operating temperature inside the rack is always higher than the room temperature and is dependent on the configuration of equipment in the rack. The maximum internal rack temperature for your configuration should not exceed the values in the Rack Internal Temperature Maximums table (below).

Rack Internal Temperature Maximums	
Equipment	Maximum Internal Rack Temperature
Compaq StorageWorks™ NAS Executor E7000	50°C/122°F
Compaq rack-mountable options	40°C/104°F
Other manufacturers' options	See manufacturing specifications

**CAUTION:** To reduce the risk of damage to the equipment when installing third-party options:

- Make sure that the option equipment does not impede airflow to a rack-mountable StorageWorks NAS Executor E7000 or increase the internal rack temperature beyond the maximum rating specified by Compaq.
- Make sure that the manufacturer's maximum recommended ambient operating temperature of the option equipment is not exceeded after the equipment is installed into the rack.


### Airflow Requirements

The server draws cool air in through the front door and exhausts warm air out the rear door. Do not block ventilation apertures.

**CAUTION:** If a third-party rack is used, the following minimum requirements must be observed to ensure adequate airflow and to prevent damage to the equipment:


- Front: The front must have a minimum of 63.5 cm (25 in) of unrestricted ventilation.
- Side: The clearance between the installed module and the side panels of the rack must be a minimum of 6.9 cm (2.75 in).
- Rear: The clearance between the back of the rack and the wall must be a minimum of 76.2 cm (30 in), and the equipment must be operated without a rear door.

### Installing the Server into the Rack

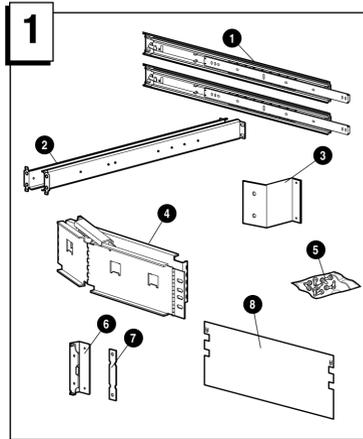


Identify the server rack mounting hardware.

Item	Description
1	One pair 26-inch slide rail assemblies
2	Rack mounting brackets
3	Cable management arm bracket
4	Cable management arm
5	Bag of screws
6	Cable management arm screw-retaining plate
7	Cable management arm screw-retaining plate washer
8	Rack template

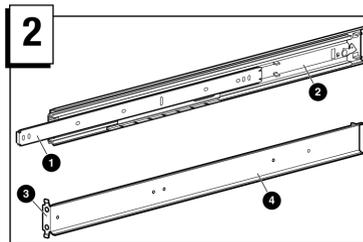


Identifying the slide rail assembly components:  
1 Inner server rail 2 Outer bracket rail  
3 Rack mounting bracket 4 Front flanges


**NOTE:** For easier installation of the rack-mounting bracket, secure the outer bracket rail to the rack-mounting bracket before securing the rack-mounting bracket assembly to the rack. The joined rack-mounting bracket and bracket rail can be fastened to the rack as one assembly.

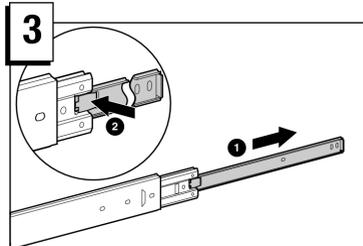


a. Extend the server rail from the outer bracket rail until the server rail release latch clicks.

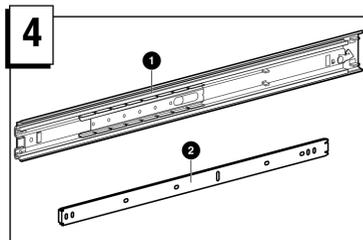

Separate the outer bracket rail 1 and server rail 2.

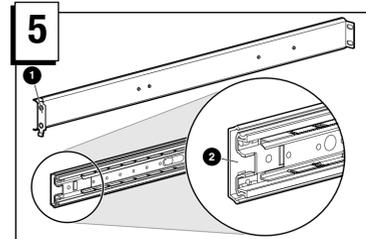


Identify the outer bracket rail 1 and the front of the rack-mounting bracket 2.

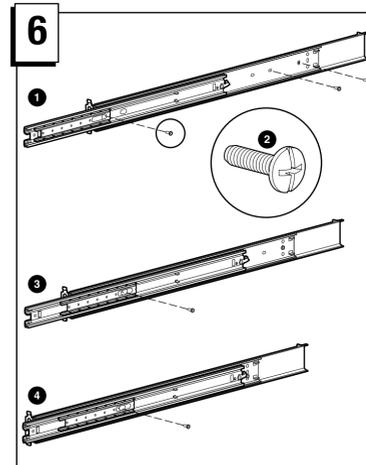


a. Fully extend the inner slide from the front of the outer bracket rail 1.  
b. Secure the outer bracket rail to the rack-mounting bracket with an 8-32 x 1/4-inch slotted screw 2.

**IMPORTANT:** Do not tighten screws until all three screws have been lined up on the assembly. Do not use nuts or washers with the screws.


- Adjust the inner slide to access screw holes through the slotted opening of the inner slide.
- Fasten the bracket rail to the rack mounting bracket as shown 3 and 4.
- Repeat this procedure for the left rack-mounting bracket assembly.

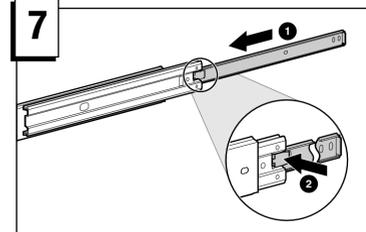


Replace the server rail by aligning it with the front mounting bracket and sliding forward until you hear a click 1. Press the latch in 2 and slide the server rail through the jacket assembly until it stops.

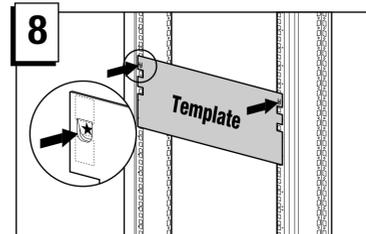


Mark the front and back of the rack using the server rack template.

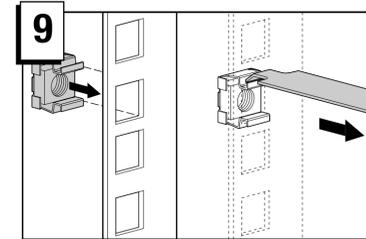


Insert the cage nuts into the rack rails and use the fitting tool to pry the cage nut into position.

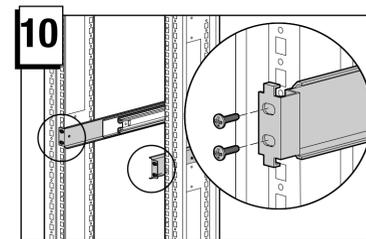

Secure the back of the rack mounting bracket to the rack using M6 x 12 mm Phillips head screws.

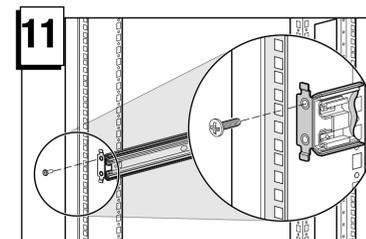


Secure the front of the rack mounting bracket to the rack using M6 x 12 mm Phillips head screws.

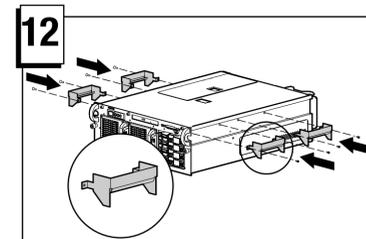


Attach the handle to the sides of the NAS Executor E7000.

Fully extend the slide rails of the mounting bracket and set the handles squarely on the rails.

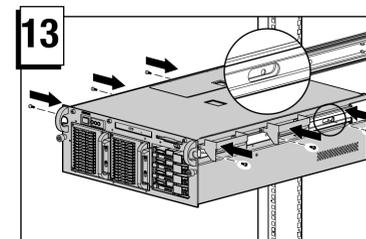

Attach the NAS Executor E7000 to the rails using the screws provided.


Remove the handles from the NAS Executor E7000 and slide it into the rack.

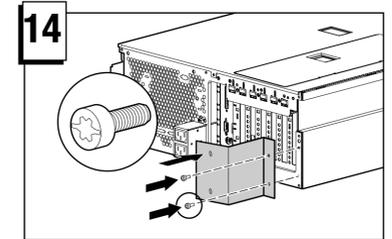


Secure the cable management arm server bracket to the StorageWorks NAS Executor E7000.

**WARNING:** To reduce the risk of personal injury or damage to the equipment, at least two people are needed to safely load the server onto the rack.


**WARNING:** To reduce the risk of injury, remove the hot-plug power supplies and all the hard drives before loading the server onto the rack to reduce the weight of the server.

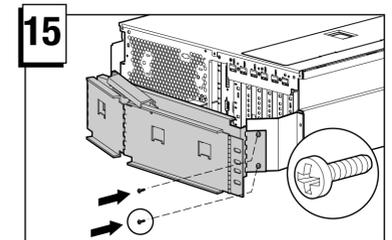

Secure the cable management arm to the cable management server bracket using two screws.

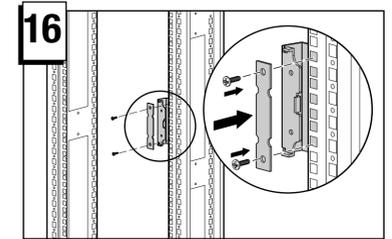

Attach the cable management arm screw-retaining plate.

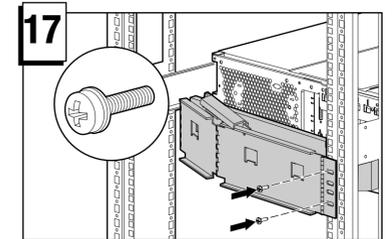


Attach the cable management arm to the rear brace of the rack.

The server rack installation is complete.

Continued on next page.


## Connect the NAS Executor

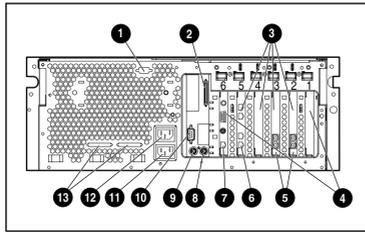


### Server Rear Panel Connectors

Number	Connector or LED
1	Auxiliary serial knockout
2	SCSI connector (support for external tape drives only)
3	PCI Hot Plug expansion slots (4)
4	PCI non-Hot Plug expansion slots (2)
5	Host Bus Adapters
6	Network interface controller (NIC) RJ-45 connectors
7	Remote Insight Lights-Out Edition board connectors
8	Mouse connector
9	Hot-plug keyboard
10	Serial connector
11	Primary hot-plug power cord connector
12	Secondary hot-plug power cord connector
13	VHDC SCSI knockouts


**NOTE:** The *StorageWorks* NAS Executor E7000 includes three loopback cables for Ethernet port termination. A loopback cable must be connected to any server Ethernet port that is not configured for use. Loopback cables are not provided for the Remote Insight Lights-Out Edition board or the storage enclosure, and must not be connected to the Ethernet connectors on the Remote Insight Lights-Out Edition board or the storage enclosure.

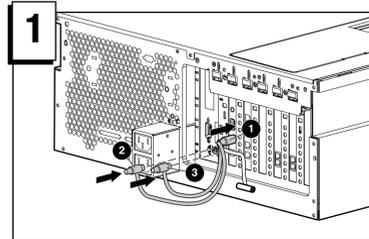


Connect the keyboard/mouse "Y" cable 1 to the Remote Insight Lights-Out Edition board and to the server mouse connection 2 and keyboard connection 3.

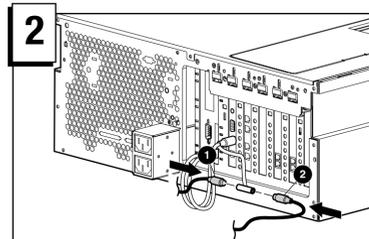


Connect the mouse 1 and the external keyboard 2 to the "Y" cable (optional).

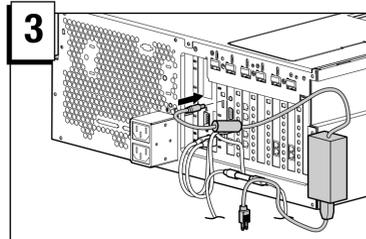


Connect the Remote Insight Lights-Out Edition board power cord and adapter to the power port.

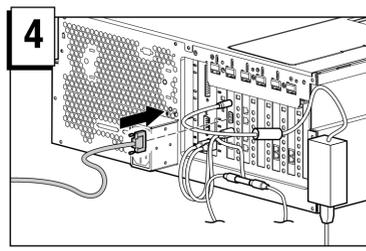

Connect the monitor to the video port on the Remote Insight Lights-Out Edition board.

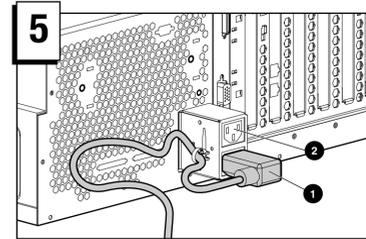

Connect the power cords to the primary 1 and secondary 2 power cord connectors.

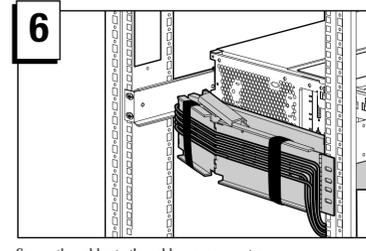

Secure the cables to the cable management arm.

**The NAS Executor E7000 connection process is complete.**

## Connecting the Power Source

Connect each power supply to a separate power source. If multiple uninterruptible power supplies are available, use them.

1. Connect the power cord from the Remote Insight Lights-Out Edition board to a power source.
2. Connect the two power cords from the server to a power source.

**CAUTION:** To reduce the risk of equipment damage, do not power up at this time.

**The power source connection process is complete.**

For instruction on configuring the system, refer to the *StorageWorks* NAS Executor E7000 Quick Start and Quick Reference poster.

## Regulatory Compliance Notices

### European Union Notice

Products with the CE Mark comply with both the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms (the equivalent international standards are in parentheses):

- EN 55022 (CISPR22) Electromagnetic Interference
- EN 50082-1 (IEC 801-2, IEC 801-3, IEC801-4) Electromagnetic Immunity
- EN 60950 (IEC 950) Product Safety

### Federal Communications Commission Notice

The rating label on the device shows which class (A or B) the equipment falls into. Class B devices have a FCC logo or FCC ID on the label. Class A devices do not have a FCC ID or logo on the label. After the class of the device is determined, refer to the following corresponding statement. For complete details, see the Hardware Reference Guide on the server Documentation CD.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and Regulations. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference that will occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

### Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Compaq Computer Corporation may void the user's authority to operate the equipment.

### Declaration of Conformity – United States only

This device complies with Part 15 of the FCC Rules and Regulations. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For questions regarding this declaration, contact:

Compaq Computer Corporation  
P.O. Box 692000, Mail Stop 510101  
Houston, Texas 77269-2000  
Or call 281-514-3333

To identify this product, refer to the series number found on the product.

### Canadian Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

### Avis Canadien

Cet Appareil numérique de la classe B respect toutes les exigences du Règlement sur le matériel brouilleur du Canada.