

C440GX+ Server Board Product Guide

Order Number: 728967-001

Disclaimer

Intel Corporation (Intel) makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Intel assumes no responsibility for any errors that may appear in this document. Intel makes no commitment to update nor to keep current the information contained in this document. No part of this document may be copied or reproduced in any form or by any means without prior written consent of Intel.

An Intel product, when used in accordance with its associated documentation, is "Year 2000 Capable" when, upon installation, it accurately stores, displays, processes, provides, and/or receives date data from, into, and between the twentieth and twenty-first centuries, including leap year calculations, provided that all other technology used in combination with said product properly exchanges date data with it.

† Third party brands and trademarks are the property of their respective owners.

Copyright © 1998, 1999 Intel Corporation.

Contents

1 Description

| | |
|--|----|
| Server Board Features | 9 |
| Back Panel Connectors | 10 |
| Server Board Connector and Component Locations | 11 |
| Processor | 12 |
| Memory | 13 |
| 440GX Host Bridge / Memory Controller | 13 |
| Peripherals | 14 |
| Super I/O Chip | 14 |
| Add-in Board Slots | 14 |
| Video | 15 |
| SCSI Controller | 16 |
| IDE Controller | 16 |
| Network Controller | 17 |
| Keyboard and Mouse | 17 |
| ACPI | 18 |
| Server Management | 19 |
| Baseboard Management Controller (BMC) | 19 |
| Emergency Management Port Console | 20 |
| Security | 20 |
| Security with Mechanical Locks and Monitoring | 20 |
| Software Locks | 20 |

2 Upgrading

| | |
|--|----|
| Tools and Supplies Needed | 25 |
| Warnings and Cautions | 25 |
| Server Board | 26 |
| Installing the Server Board | 26 |
| Removing the Server Board | 30 |
| Voltage Regulator Modules (VRMs) | 31 |
| Processors | 32 |
| Installing a Processor | 32 |
| Removing a Processor | 36 |
| Memory | 37 |
| Installing DIMMs | 37 |
| Removing DIMMs | 38 |
| Replacing the Back up Battery | 39 |

3 Configuration Software and Utilities

| | |
|---|----|
| Hot Keys..... | 41 |
| Power On Self Test (POST) | 42 |
| Using BIOS Setup | 43 |
| Record Your Setup Settings | 43 |
| If You Cannot Access Setup | 43 |
| Starting Setup..... | 44 |
| Setup Menus | 44 |
| Main Menu..... | 45 |
| Advanced Menu..... | 48 |
| Security Menu..... | 51 |
| Server Menu | 52 |
| Boot Menu | 54 |
| Exit Menu..... | 56 |
| Using the System Setup Utility | 57 |
| When to Run the System Setup Utility | 57 |
| What You Need to Do..... | 58 |
| Running the SSU..... | 58 |
| Customizing the SSU..... | 61 |
| Launching a Task | 61 |
| Resource Configuration Add-in (RCA) Window..... | 62 |
| Multiboot Options Add-in..... | 63 |
| Security Add-in | 64 |
| SEL Manager Add-in | 65 |
| FRU Manager Add-in..... | 66 |
| SDR Manager Add-in..... | 67 |
| Exiting the SSU..... | 67 |
| Emergency Management Port Console | 68 |
| How EMP Console Works..... | 69 |
| Requirements | 71 |
| Setting up the Server for the EMP | 72 |
| Main EMP Console Window | 73 |
| Server Control Operations | 74 |
| Phonebook | 77 |
| Management Plug-ins..... | 78 |
| FRUSDR Load Utility..... | 81 |
| When to Run the FRUSDR Load Utility..... | 81 |
| What You Need to Do..... | 81 |
| How You Use the FRUSDR Load Utility..... | 82 |
| Upgrading the BIOS | 85 |
| Preparing for the Upgrade | 85 |
| Upgrading the BIOS..... | 86 |
| Recovering the BIOS..... | 87 |
| Changing the BIOS Language | 87 |

| | |
|---|-----|
| Using the Firmware Update Utility | 88 |
| Running the Firmware Update Utility | 88 |
| Installing Video Drivers..... | 88 |
| Using the Adaptec SCSI Utility | 89 |
| Running the SCSI Utility | 89 |
| 4 Solving Problems | |
| Resetting the System | 91 |
| Fault Resilient Booting..... | 91 |
| Initial System Startup | 91 |
| Checklist..... | 92 |
| Running New Application Software..... | 92 |
| Checklist..... | 92 |
| After the System Has Been Running Correctly | 93 |
| Checklist..... | 93 |
| More Problem Solving Procedures | 94 |
| Preparing the System for Diagnostic Testing | 94 |
| Monitoring POST | 94 |
| Verifying Proper Operation of Key System Lights | 94 |
| Confirming Loading of the Operating System | 94 |
| Specific Problems and Corrective Actions | 95 |
| Power Light Does Not Light | 95 |
| No Characters Appear on Screen..... | 95 |
| Characters Are Distorted or Incorrect | 96 |
| System Cooling Fans Do Not Rotate Properly | 96 |
| Diskette Drive Activity Light Does Not Light | 97 |
| Hard Disk Drive Activity Light Does Not Light | 97 |
| CD-ROM Drive Activity Light Does Not Light | 97 |
| Cannot Connect to a Server | 98 |
| Problems with Network | 98 |
| PCI Installation Tips..... | 99 |
| Problems with Application Software..... | 99 |
| Bootable CD-ROM Is Not Detected | 99 |
| Error and Informational Messages..... | 100 |
| Port-80 Codes and Countdown Codes..... | 100 |
| POST Error Codes and Messages | 100 |
| 5 Technical Reference | |
| Connectors..... | 102 |
| ATX Style Front Panel Connector | 103 |
| Main Power Connector | 104 |
| ATX Aux Power Connector | 104 |
| Fan Interface | 104 |
| SMM Connector..... | 105 |
| Front Panel Connector, 30 pin | 106 |

| | |
|--|-----|
| Server Board Jumpers | 107 |
| General Procedure to Change Jumper Setting | 108 |
| Recovery Boot Jumper | 109 |
| Boot Block Write Protect Jumper | 109 |

6 Regulatory and Integration Information

| | |
|--|-----|
| Regulatory Compliance | 111 |
| Installation Instructions | 112 |
| Ensure EMC | 112 |
| Ensure Host Computer and Accessory Module Certifications | 113 |
| Prevent Power Supply Overload | 113 |
| Place Battery Marking on Computer | 114 |
| Use Only for Intended Applications | 114 |
| Installation Precautions | 114 |

7 Equipment Log and Power Consumption Worksheets

| | |
|-------------------------------------|-----|
| Equipment Log | 115 |
| Current Usage | 117 |
| Calculating Power Consumption | 117 |

Index

Figures

| | |
|---|-----|
| 1. Back Panel Connectors | 10 |
| 2. Server Board Connector and Component Locations | 11 |
| 3. Server Board Screw Hole Locations | 27 |
| 4. Install Fans | 27 |
| 5. Mounting Retention Mechanism | 28 |
| 6. Install Fans | 29 |
| 7. Installing a VRM | 31 |
| 8. Attach Retention Mechanism to Processor | 33 |
| 9. Install Processor | 34 |
| 10. Attaching the Retention Mechanism to the Termination Card | 35 |
| 11. Install the Termination Card | 36 |
| 12. Installing DIMMs | 37 |
| 13. Replacing the Lithium Battery | 40 |
| 14. System Setup Utility Main Window | 60 |
| 15. EMP Console in Command State | 69 |
| 16. EMP Console in Redirect State | 70 |
| 17. Connect Dialog | 75 |
| 18. Power On/Off Dialog | 76 |
| 19. Reset Dialog | 76 |
| 20. Phonebook Dialog | 77 |
| 21. Connector Locations | 102 |
| 22. ATX Style Front Panel Connector | 103 |
| 23. Jumper Locations | 107 |

Tables

| | | |
|-----|--|-----|
| 1. | Server Board Features | 9 |
| 2. | NIC LEDs | 10 |
| 3. | Software Security Features | 22 |
| 4. | Configuration Utilities | 41 |
| 5. | Hot Keys | 41 |
| 6. | EMP Console Access Modes (Server configured for console redirection) | 70 |
| 7. | EMP Console Access Modes (Server not configured for console redirection) | 71 |
| 8. | ATX Style Front Panel Connector Pinout | 103 |
| 9. | Main Power Connector Pinout | 104 |
| 10. | ATX Aux Power Connector Pinout | 104 |
| 11. | Fan Connector Pinout | 104 |
| 12. | SMM Connector Pinout | 105 |
| 13. | Front Panel Connector Pinout | 106 |
| 14. | Server Board Jumper Summary | 107 |
| 15. | Safety Regulations | 111 |
| 16. | EMC Regulations | 111 |
| 17. | Power Usage Worksheet 1 | 118 |
| 18. | Power Usage Worksheet 2 | 119 |


1 Description

Server Board Features

Table 1. Server Board Features

| Feature | Description |
|-------------------|---|
| Processors | Up to two Intel® Pentium® II Xeon™ or Pentium III Xeon processors. The server board has one embedded voltage regulator and two VRM slots to provide the required voltage. |
| Memory (DRAM) | Four 72 bit sockets for 168-pin, gold contact, 100 MHz, PC/100 compliant, ECC or non-ECC, registered or unbuffered, SDRAM dual inline memory modules (DIMM). |
| Video Memory | Installed: 2 MB of video memory. |
| PCI bus | Four standard PCI (PCI-33/32 bit) expansion slots for add-in boards. 1x32 bit PCI bus. Embedded devices: video controller, Network Interface Controller (NIC), and SCSI controller. Two PCI-66/32 bit 5V expansion slots (backwards compatible to PCI-33/32). |
| ISA bus | One ISA expansion slot for an add-in board. Embedded PC-compatible support (serial, parallel, mouse, keyboard, diskette, and Plug and Play features). |
| Server Management | Thermal/voltage monitoring and error handling. Real time clock/calendar (RTC). Front panel controls and indicators (LEDs). System Setup Utility (SSU). Basic Input/Output System (BIOS), Power On Self Test (POST), and Setup stored in flash memory. |
| Graphics | Integrated onboard Cirrus Logic† CL-GD5480 super video graphics array (SVGA) controller. |
| SCSI | Adaptec† AIC-7896, supporting onboard Ultra2 (LVDS) Wide and Ultra-wide SCSI interfaces. Support for the Adaptec ARO-1130 RAIDPort† card is built into PCI slot 4. |
| Network | Integrated onboard NIC, an Intel® 82559 single chip PCI LAN controller for 10 or 100 Mbps TX Fast Ethernet networks. RJ-45 Ethernet connector and indicator LEDs at I/O back panel. |
| System I/O | PS/2†-compatible keyboard and mouse ports, 6 pin DIN. Advanced parallel port, supporting Enhanced Parallel Port (EPP) level 1.7 and 1.9, ECP, compatible 25 pin. VGA video port, 15 pin. Two serial ports, 9 pin. Network: RJ-45 Ethernet port. Two USB ports. |
| Form Factor | Server ATX form factor, 12 × 13 inches, ATX 2.01 compliant I/O. |

Back Panel Connectors

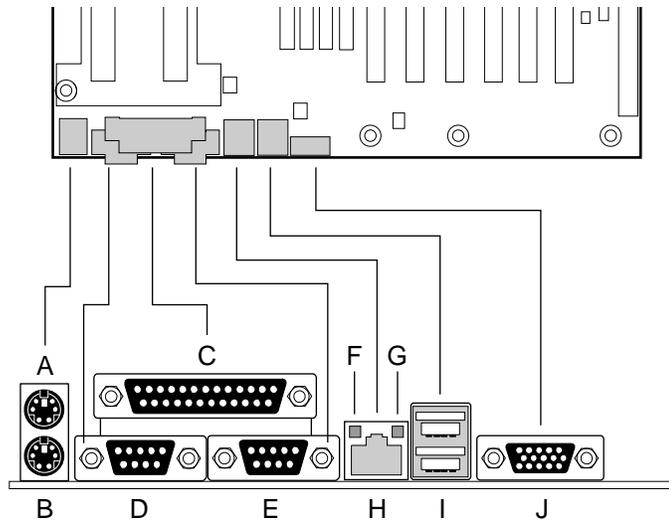

OM08498


Figure 1. Back Panel Connectors

- A. Mouse connector
- B. Keyboard connector
- C. Parallel Port connector
- D. Serial Port connector (COM1)
- E. Serial Port connector (COM2)
- F. Network connector
- G. Green NIC LED
- H. Orange NIC LED
- I. USB connectors
- J. Video connector

Table 2. NIC LEDs

| NIC LED Color | If it's on | If it's blinking | If it's off |
|---------------|--|---|-----------------------------|
| Orange | 100 Mbps network connection. | NA | 10 Mbps network connection. |
| Green | Linked to network, no network traffic. | Linked to network, sending or receiving data. | Not linked to network. |

Server Board Connector and Component Locations

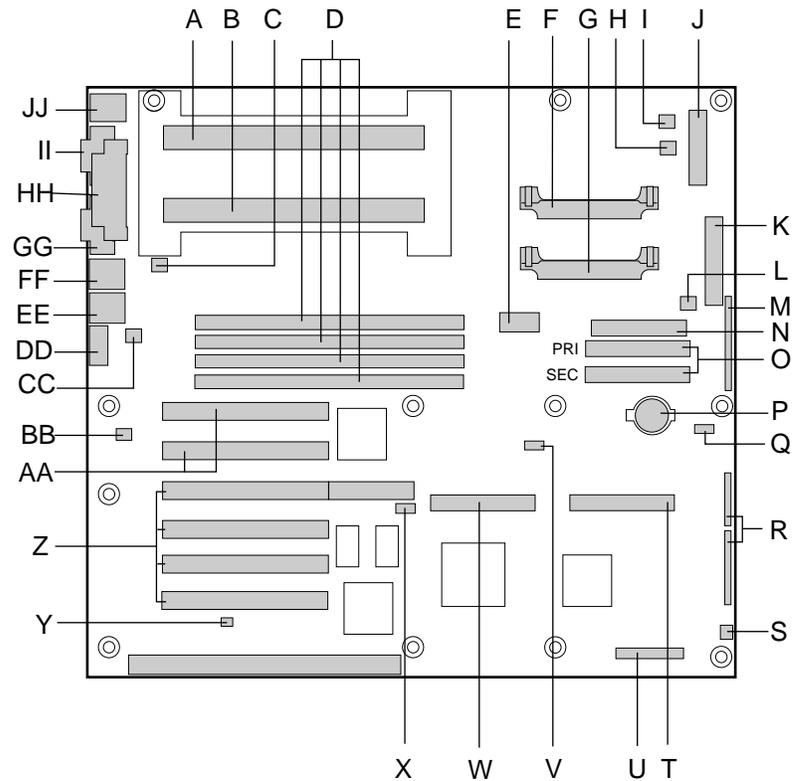

OM08499

Figure 2. Server Board Connector and Component Locations

- | | |
|--|--|
| A. Primary processor | S. Fan connector FAN1 |
| B. Secondary processor | T. Ultra wide SCSI connector |
| C. PROC FAN2 TOP fan connector | U. Server Monitor Module (SMM) connector |
| D. DIMM slots | V. External Wake on LAN [†] connector |
| E. ATX aux power connector | W. Ultra2/LVD SCSI connector |
| F. L2 cache VRM connector | X. Hard drive LED connector |
| G. P2 secondary VRM connector | Y. Chassis intrusion connector |
| H. Fan connector FAN3 | Z. PCI connectors |
| I. Fan connector FAN4 | AA. PCI-66 connectors |
| J. Front panel connector, 30 pin | BB. Fan connector FAN2B |
| K. Main power connector | CC. PROC FAN1 BTM fan connector |
| L. Fan connector FAN2 | DD. Video connector |
| M. ATX front panel connector | EE. USB connectors |
| N. Floppy connector | FF. NIC connector |
| O. IDE connectors | GG. Serial port connector (COM2) |
| P. Battery | HH. Parallel port connector |
| Q. Isolated Server Management (ISOL) IMB connector | II. Serial port connector (COM1) |
| R. Jumper blocks | JJ. Mouse/keyboard connectors |

Processor

Each Intel Pentium II Xeon or Pentium III Xeon processor is packaged in a cartridge that includes the processor core with an integrated 32 KB primary (L1) cache and the secondary (L2) cache.

The processor implements the MMX™ technology and maintains full backward compatibility with the 8086, 80286, Intel386™, Intel486™, Pentium, Pentium Pro and previous Pentium II processors. The processor's numeric coprocessor significantly increases the speed of floating point operations and complies with ANSI/IEEE standard 754-1985.

Each processor cartridge connects to the server board through a 330 pin edge connector. The cartridge is secured by a retention mechanism attached to the server board. Depending on configuration, your server may have one or two processors.

The processor external interface is MP (Multi-Processor) ready and operates at 100 MHz. The processor contains a local APIC (Advanced Programmable Interrupt Controller) section for interrupt handling in MP and UP (Uni-Processor) environments.

The second level cache is located on the substrate of the S.E.C. cartridge. The cache includes burst pipelined synchronous static RAM (BSRAM). The L2 cache is offered in 512 KB, 1 MB, and 2 MB configurations, with error correcting code (ECC) that operates at half the core clock rate.

Voltage Regulator Modules (VRMs)

One integrated VRM and two VRM sockets provide power to the processors. The two socketed VRMs derive power from the 5V or 12V supply depending on the type of VRM used. The integrated VRM powers the primary processor. The VRM socket labeled "Primary VRM" powers the L2 cache for both processors and must be populated. The VRM socket labeled "Secondary VRM" powers the secondary processor and must be populated if a processor is installed in the secondary processor slot.

If you are integrating your C440GX+ server board with an Intel® Cabrillo-C chassis, use the provided VRMs. See this URL for information on which VRM to use:

<http://www.intel.com/go/serverbuilder/>

Look under Reference Chassis.

Memory

Only 100 MHz PC/100 ECC or Non-ECC SDRAM is supported by the server board. Memory is partitioned as four banks of SDRAM DIMMs, each providing 72 bits of noninterleaved memory (64 bit main memory plus ECC):

- Install from 64 MB to 2 GB of memory, using registered DIMMs.
- Install from 32 MB to 1 GB of memory, using unbuffered DIMMs.

Memory should be added in order from slot 1 to slot 4.

⇒ NOTE

Do not mix registered and unbuffered memory. Non ECC memory may be installed but ECC memory is recommended in a server environment. Mixing Non-ECC memory and ECC memory causes all ECC features to be disabled.

The controller automatically detects, sizes, and initializes the memory array, depending on the type, size, and speed of the installed DIMMs, and reports memory size and allocation to the server via configuration registers.

⇒ NOTE

Use DIMMs that have been tested for compatibility with the server board. Contact your sales representative or dealer for a current list of approved memory modules. Check the Intel Customer Support website for the latest tested memory list:

<http://support.intel.com/support/motherboards/server/C440gx/compat.htm>

440GX Host Bridge / Memory Controller

The C440GX+ is designed around the Intel® 82440GX AGPSet (440GX). This device provides 100MHz processor host bus interface support, DRAM controller, PCI bus interface, AGP interface (used on C440GX+ for PCI-66/5V), and power management functions. The host bus/memory interface in the 440GX is optimized for 100MHz operation, using 100MHz SDRAM main memory. The PCI interface is PCI 2.1-compliant, providing a 33 MHz / 5V signaling environment for embedded controllers and slots in the single PCI segment on C440GX+. The 440GX memory controller supports up to 2 GB of ECC or Non-ECC memory, using PC/100 compliant Synchronous DRAM (SDRAM) devices on DIMM plug-in modules. ECC can detect and correct single-bit errors, and detect multiple-bit errors.

Peripherals

Super I/O Chip

The National[†] 87309 device supports two serial ports, one parallel port, diskette drive, PS/2-compatible keyboard and mouse. The server board provides a connector interface for each port.

Serial Ports

Each serial port can be set to one of four different COMx ports and can be enabled separately. When enabled, each port can be programmed to generate edge or level sensitive interrupts. When disabled, serial port interrupts are available to add-in boards.

Parallel Port

The 87309 provides one IEEE 1284-compatible 25 pin bidirectional EPP (supporting levels 1.7 and 1.9). BIOS programming of the 87309 registers enable the parallel port and determine the port address and interrupt. ECP mode is supported with 2 possible DMA channels. When disabled, the interrupt is available to add-in boards.

Add-in Board Slots

The server board has one full length ISA bus connector. ISA features:

- Bus speed up to 8.33 MHz
- 16 bit memory addressing
- Type A transfers at 5.33 Mbps
- Type B transfers at 8 Mbps
- 8 or 16 bit data transfers
- Plug and Play ready

The server board has four full length standard PCI (PCI-33/32 bit)connectors. PCI features:

- Bus speed up to 33 MHz
- 32 bit memory addressing
- 5 V signaling environment
- Burst transfers of up to 133 Mbps
- 8, 16, or 32 bit data transfers
- Plug and Play ready
- Parity enabled

The server board has two full length PCI-66 universal connectors (5 volt/3.3 volt cards designed for the 3.3v connector -cards with only one notch- will not fit). PCI features:

- Bus speed up to 66 MHz
- 32 bit memory addressing
- 5 V/3.3 V signaling environment
- Burst transfers of up to 266 Mbps
- 8, 16, or 32 bit data transfers
- Plug and Play ready
- Parity enabled

⇒ **NOTE**

If you install a PCI-33 card into one of the PCI-66 slots, the bus speed for both slots will be lowered to 33 MHz.

The components on some full length cards installed in slot 6 may interfere with the DIMM connector latches.

Video

The onboard, integrated Cirrus Logic CL-GD5480 64 bit VGA chip contains an SVGA controller that is fully compatible with these video standards: CGA, EGA, Hercules† Graphics, MDA, and VGA. The standard configuration comes with 2 MB of 10 ns onboard Synchronous Graphics Memory (SGRAM). The video controller supports pixel resolutions of up to 1600 x 1200 and up to 16.7 Million colors.

The SVGA controller supports analog VGA monitors (single and multiple frequency, interlaced and noninterlaced) with a maximum vertical retrace noninterlaced frequency of 100 Hz.

You cannot add video memory to the server board. Depending on the environment, the controller displays up to 16.7 M colors in some video resolutions. It also provides hardware accelerated bit block transfers (BITBLT) of data.

SCSI Controller

The embedded Adaptec AIC-7896 dual function SCSI controller provides both Ultra2 (LVDS) wide and Ultra wide SCSI interfaces as two independent PCI functions. PCI slot 4 is RAID-upgradeable, providing additional support for the ARO1130 RAID*Port* controller by Adaptec.

No logic, termination, or resistor loads are required to connect devices to the SCSI controller other than termination in the device at the end of the cable. The SCSI bus is terminated on the server board with active terminators that cannot be disabled. The onboard device must always be at one end of the bus.

IDE Controller

IDE is a 16 bit interface for intelligent disk drives with disk controller electronics onboard. The PCI/ISA/IDE Accelerator, also known as PIIX4e, is a multifunction device on the server board that acts as a PCI based Fast IDE controller. The device controls:

- PIO and IDE DMA/bus master operations
- Mode 4 timings
- Transfer rates up to 33 MB/s
- Buffering for PCI/IDE burst transfers
- Master/slave IDE mode
- Up to two devices per channel; two channels, IDE0 and IDE1

⇒ NOTE

18 inch maximum length of IDE cable on each channel: You can connect an IDE signal cable, up to a maximum of 18 inches each, to each IDE connector on the server board. Each cable can support two devices, one at the end of the cable and one 6 inches from the end of the cable.

Network Controller

The server board includes a 10BASE-T/100BASE-TX network solution based on the Intel 82559 single chip Fast Ethernet PCI Bus Controller. As a PCI bus master, the controller can burst data at up to 132 MB/s. The controller contains two receive and transmit FIFO buffers that prevent data overruns or underruns while waiting for access to the PCI bus. The controller has the following:

- 32 bit PCI bus master interface (direct drive of bus), compatible with *PCI Bus Specification, Revision 2.1*
- Chained memory structure with improved dynamic transmit chaining for enhanced performance
- Programmable transmit threshold for improved bus utilization
- Early receive interrupt for concurrent processing of receive data
- Onchip counters for network management
- Autodetect and autoswitching for 10 or 100 Mbps network speeds
- Support for both 10 Mbps and 100 Mbps networks, capable of full or half duplex, with back-to-back transmit at 100 Mbps

The network status LEDs on the server board indicate:

- Transmit/receive activity on the LAN
- Valid link to the LAN
- 10/100 Mbps transfer mode

Keyboard and Mouse

The keyboard/mouse controller is PS/2-compatible. The server may be locked automatically if there is no keyboard or mouse activity for a predefined length of time, if specified through the System Setup Utility (SSU). Once the inactivity (lockout) timer has expired, the keyboard and mouse do not respond until the previously stored password is entered.

ACPI

The C440GX+ supports the Advanced Configuration and Power Interface (ACPI) as defined by the ACPI 1.0 and PC97 specifications. An ACPI aware operating system can put the system into a state where the hard drives spin down, the system fans stop, and all processing is halted. However, the power supply will still be on and the processors will still be dissipating some power, so the power supply fan and processor fans will still run.

The C440GX+ supports sleep states s0, s4, and s5. With future versions of Microsoft Windows[†] 9X that support ACPI, the BIOS will only support sleep states s0 and s5. With future versions of Microsoft Windows NT^{†x} that support ACPI, the BIOS will support sleep states s0, s4, and s5.

- s0: Normal running state.
- s4: Hibernate or Save to Disk: The memory and machine state are saved to disk. Pressing the power button or other wakeup event will restore the system state from the disk and resume normal operation. This assumes that no hardware changes have been made to the system while it was off.
- s5: Soft off: Only the RTC section of the PIIX4 and the BMC are running in this state.



CAUTION

The system is off only when the AC power is disconnected.

Server Management

Server Management features are implemented using one microcontroller.

Baseboard Management Controller (BMC)

All server management functionality is concentrated in the BMC. The BMC and associated circuitry are powered from +5V_Standby, which remains active when server power is switched off and the server is still plugged into AC power.

One major function of the BMC is to autonomously monitor system management events, and log their occurrence in the nonvolatile System Event Log (SEL). These include events such as overtemperature and overvoltage conditions, fan failure, or chassis intrusion. To enable accurate monitoring, the BMC maintains the nonvolatile Sensor Data Record (SDR), from which sensor information can be retrieved. The BMC provides an ISA host interface to SDR sensor information, so software running on the server can poll and retrieve the server's current status.

SEL contents can be retrieved after system failure, for analysis by field service personnel using server management software tools such as Intel Server Control available on the CD-ROM that ships with the C440GX+ server board or from the Intel Customer Support website: <http://support.intel.com/support/motherboards/server/C440gx>

Because the BMC is powered by 5V_Standby, SEL and SDR information are also available via the IMB (Intelligent Management Bus). An Emergency Management Card, such as the Intel® LANDesk® SMM (Server Monitor Module) card available with the LANDesk Server Manager Pro package, can obtain the SEL and make it remotely accessible using a LAN or telephone line connection. While it receives the proper current, the BMC does the following:

- Monitors server board temperature and voltage
- Monitors processor presence and controls FRB
- Detects and indicates baseboard fan failure
- Manages the SEL interface
- Manages the SDR Repository interface
- Monitors the SDR/SEL timestamp clock
- Manages the server board Field Replaceable Unit (FRU) information interface
- Monitors the system management watchdog timer
- Monitors the periodic SMI timer
- Manages front panel NMI handling
- Monitors the event receiver
- Manages the ISA host and IMB interface
- Controls secure mode, including video blanking, floppy write-protect monitoring, and front panel lock/unlock initiation
- Manages the sensor event initialization agent
- Controls Wake on LAN via Magic Packet[†] support

Emergency Management Port Console

The Emergency Management Port (EMP) Console provides an interface to the Emergency Management Port (EMP). This interface allows remote server management via a modem or direct (serial port to serial port) connection.

The server control operations available with EMP Console are:

- Connecting to remote servers
- Powering the server on or off
- Resetting the server

The EMP Console uses three management plug-ins to monitor the server:

- SEL Viewer
- SDR Viewer
- FRU Viewer

The EMP Console also has Phonebook plug-in that can be used to create and maintain a list of servers and their phone numbers.

Security

To help prevent unauthorized entry or use of the server, Intel® Server Control server management software monitors the system intrusion switch.

Security with Mechanical Locks and Monitoring

If installed, you can activate the chassis intrusion alarm switch. When the side door is opened, the switch transmits an alarm signal to the server board, where BMC firmware and server management software process the signal. The system can be programmed to respond to an intrusion by powering down or by locking the keyboard, for example.

Software Locks

The BIOS Setup and the System Setup Utility (SSU) provide a number of security features to prevent unauthorized or accidental access to the system. Once the security measures are enabled, you can access the system only after you enter the correct password(s). For example:

- Enable the keyboard lockout timer so that the server requires a password to reactivate the keyboard and mouse after a specified time out period—1 to 120 minutes.
- Set and enable an administrative password.
- Set and enable a user password.
- Set secure mode to prevent keyboard or mouse input and to prevent use of the front panel reset and power switches.
- Activate a hot key combination to enter secure mode quickly.
- Disable writing to the diskette drive when secure mode is set.
- Disable access to the boot sector of the operating system hard disk drive.

Using Passwords

You can set either the user password, the administrator password, or both passwords. If only the user password is set, you:

- Must enter the user password to enter BIOS Setup or the SSU.
- Must enter the user password to boot the server if Password on Boot is enabled in either the BIOS Setup or SSU.
- Must enter the user password to exit secure mode.

If only the administrator password is set, you:

- Must enter the administrator password to enter BIOS Setup or the SSU.
- Must enter the administrator password to boot the server if Password on Boot is enabled in either the BIOS Setup or SSU.
- Must enter the administrator password to exit secure mode.

If both passwords are set, you:

- May enter the user password to enter BIOS Setup or the SSU. However, you will not be able to change many of the options.
- Must enter the administrator password if you want to enter BIOS Setup or the SSU and have access to all of the options.
- May enter either password to boot the server if Password on Boot is enabled in either the BIOS Setup or SSU.
- May enter either password to exit secure mode.

Secure Mode

Configure and enable the secure boot mode by using the SSU. When secure mode is in effect:

- You can boot the server and the operating system will run, but you must enter the user password to use the keyboard or mouse.
- You cannot turn off system power or reset the server from the front panel switches.

Secure mode has no effect on functions enabled via the Server Manager Module or power control via the real time clock.

Taking the server out of secure mode does not change the state of system power. That is, if you press and release the power switch while secure mode is in effect, the system will not be powered off when secure mode is later removed. However, if the front panel power switch remains depressed when secure mode is removed, the server will be powered off.

Summary of Software Security Features

The table below lists the software security features and describes what protection each offers. In general, to enable or set the features listed here, you must run the SSU and go to the Security Subsystem Group, menu. The table also refers to other SSU menus and to the Setup utility.

Table 3. Software Security Features

| Feature | Description |
|---|--|
| Secure mode | <p>How to enter secure mode:</p> <ul style="list-style-type: none"> Setting and enabling passwords automatically places the system in secure mode. If you set a hot-key combination (through the SSU or Setup), you can secure the system simply by pressing the key combination. This means you do not have to wait for the inactivity time-out period. <p>When the system is in secure mode: The server can boot and run the operating system, but mouse and keyboard input is not accepted until the user password is entered. At boot time, if a CD is detected in the CD-ROM drive or a diskette in drive A, the system prompts for a password. When the password is entered, the server boots from CD or diskette and disables the secure mode. If there is no CD in the CD-ROM drive or diskette in drive A, the server boots from drive C and automatically goes into secure mode. All enabled secure mode features go into effect at boot time. To leave secure mode: Enter the correct password(s).</p> |
| Disable writing to diskette | <p>In secure mode, the server will not boot from or write to a diskette unless a password is entered. To set this feature, use the SSU Security Subsystem Group.</p> <p>To write protect access to diskette whether the server is in secure mode or not, use the Setup main menu, Floppy Options, and specify Floppy Access as read only.</p> |
| Disable the power and reset buttons | <p>Enable the feature through the SSU. Then the power and reset buttons are disabled when the server is in secure mode.</p> |
| Set a time out period so that keyboard and mouse input are not accepted Also, screen can be blanked, and writes to diskette can be inhibited | <p>Specify and enable an inactivity time out period of from 1 to 120 minutes.</p> <p>If no keyboard or mouse action occurs for the specified period, attempted keyboard and mouse input will not be accepted.</p> <p>The monitor display will go blank, and the diskette drive will be write protected (if these security features are enabled through Setup or the SSU).</p> <p>To resume activity: Enter the correct password(s).</p> |

continued

Table 3. Software Security Features (continued)

| Feature | Description |
|--|---|
| Control access to using the SSU: set administrative password | <p>To control access to setting or changing the system configuration, set an administrative password and enable it through Setup or the SSU.</p> <p>If both the administrative and user passwords are enabled, either can be used to boot the server or enable the keyboard and/or mouse, but only the administrative password will allow Setup and the SSU to be changed.</p> <p>To disable a password, change it to a blank entry or press CTRL-D in the Change Password menu of the Administrative Password Option menu found in the Security Subsystem Group.</p> <p>To clear the password if you cannot access Setup or the SSU, change the Clear Password jumper (see Chapter 5).</p> |
| Control access to the system other than SSU: set user password | <p>To control access to using the system, set a user password and enable it through Setup or the SSU.</p> <p>To disable a password, change it to a blank entry or press CTRL-D in the Change Password menu of the User Password Option menu found in the Security Subsystem Group.</p> <p>To clear the password if you cannot access Setup or the SSU, change the Clear Password jumper (see Chapter 5).</p> |
| Boot without keyboard | <p>The system can boot with or without a keyboard. During POST, before the system completes the boot sequence, the BIOS automatically detects and tests the keyboard if it is present and displays a message. There is no entry in the SSU to enable or disable a keyboard.</p> |
| Specify the boot sequence | <p>The sequence that you specify on the menu in the SSU MultiBoot Group will determine the boot order. If secure mode is enabled (a user password is set), then you will be prompted for a password before the server fully boots. If secure mode is enabled and the “Secure Boot Mode” option is also enabled, the server will fully boot but will require a password before accepting any keyboard or mouse input.</p> |

2 Upgrading

Tools and Supplies Needed

- Phillips (cross head) screwdriver (#1 bit and #2 bit)
- Jumper removal tool or needle nosed pliers
- Pen or pencil
- Antistatic wrist strap and conductive foam pad (recommended)

Warnings and Cautions

These warnings and cautions apply throughout this chapter. Only a technically qualified person should configure the server board.



WARNINGS

System power on/off: The power button **DOES NOT** turn off the system AC power. To remove power from system, you must unplug the AC power cord from the wall outlet. Make sure the AC power cord is unplugged before you open the chassis, add, or remove any components.

Hazardous conditions, devices & cables: Hazardous electrical conditions may be present on power, telephone, and communication cables. Turn off the server and disconnect the power cord, telecommunications systems, networks, and modems attached to the server before opening it. Otherwise, personal injury or equipment damage can result.



CAUTIONS

Electrostatic discharge (ESD) & ESD protection: ESD can damage disk drives, boards, and other parts. We recommend that you perform all procedures in this chapter only at an ESD workstation. If one is not available, provide some ESD protection by wearing an antistatic wrist strap attached to chassis ground—any unpainted metal surface—on your server when handling parts.

ESD and handling boards: Always handle boards carefully. They can be extremely sensitive to ESD. Hold boards only by their edges. After removing a board from its protective wrapper or from the server, place the board component side up on a grounded, static free surface. Use a conductive foam pad if available but not the board wrapper. Do not slide board over any surface.



CAUTION

Installing or removing jumpers: A jumper is a small plastic encased conductor that slips over two jumper pins. Some jumpers have a small tab on top that you can grip with your fingertips or with a pair of fine needle nosed pliers. If your jumpers do not have such a tab, take care when using needle nosed pliers to remove or install a jumper; grip the narrow sides of the jumper with the pliers, never the wide sides. Gripping the wide sides can damage the contacts inside the jumper, causing intermittent problems with the function controlled by that jumper. Take care to grip with, but not squeeze, the pliers or other tool you use to remove a jumper, or you may bend or break the stake pins on the board.

Server Board


Installing the Server Board



CAUTION

The server board can be extremely sensitive to ESD and always requires careful handling. After removing it from the server, place it component side up on a nonconductive, static free surface to prevent shorting out the battery leads. If you place the board on a conductive surface, the battery leads may short out. If they do, this will result in a loss of CMOS data and will drain the battery. Do not slide the server board over any surface.


1. Observe the safety and ESD precautions at the beginning of this chapter.
2. Insert screws through the mounting holes and into the threaded standoffs. Make sure the board is properly seated, and then tighten all the screws firmly.

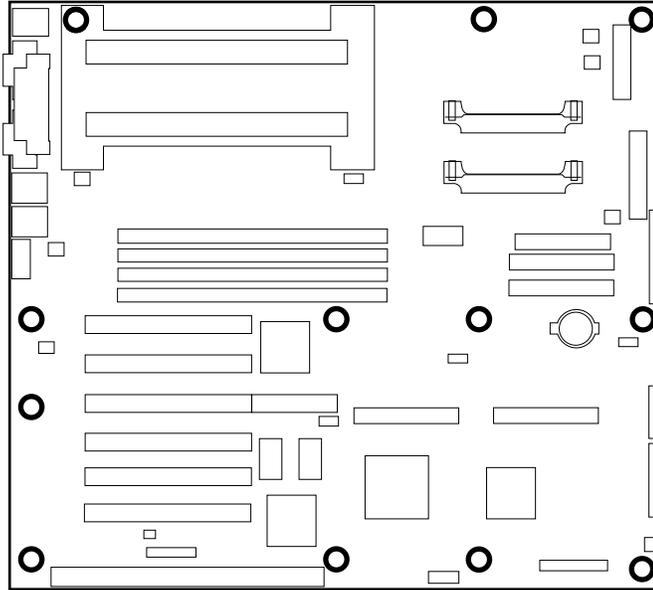

OM08500

Figure 3. Server Board Screw Hole Locations

3. Install the two fans (A) into one of the retention mechanism ends (E) label side out so the airflow (B) flows away from the processors. Use two screws (D) to hold each fan in place.

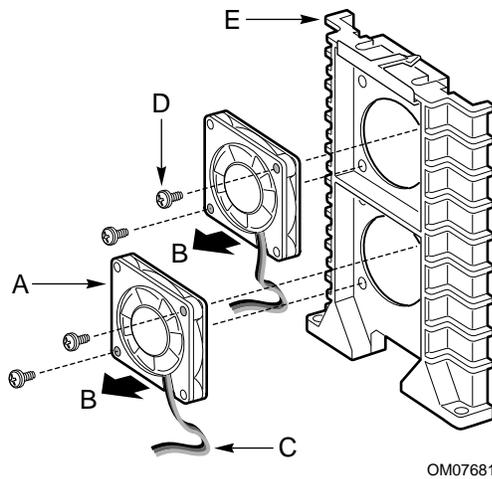


OM07681

Figure 4. Install Fans

- A. Fan
- B. Airflow direction
- C. Cable
- D. Screws
- E. Retention mechanism

4. Install both ends of the retention mechanism. The end with the fans should be closest to the back panel I/O ports. Make sure the pins (C) line up with the holes (D). Use two screws (F) to secure each end.

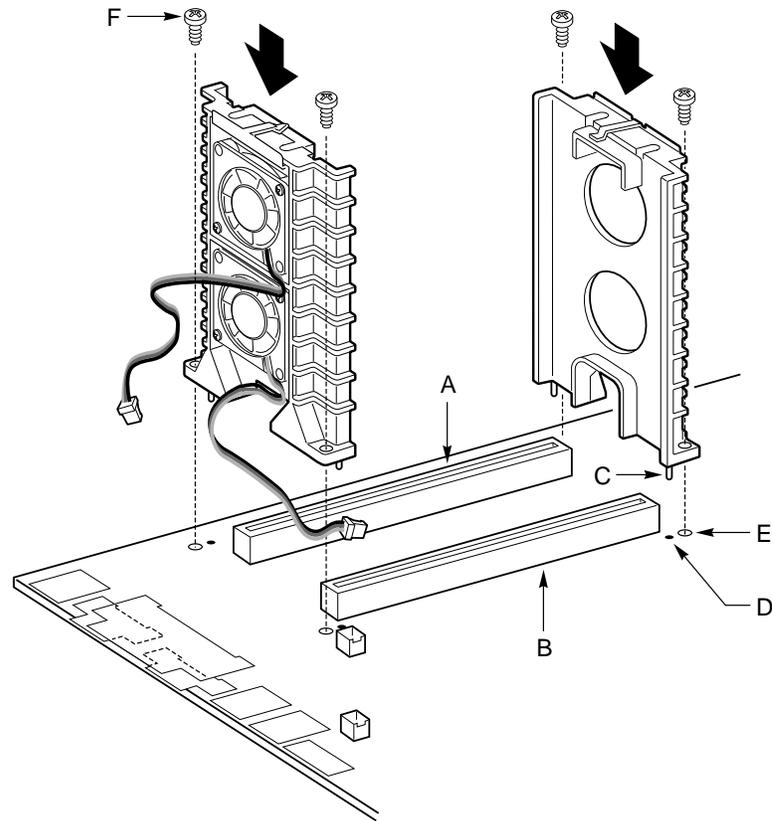


OM07684

Figure 5. Mounting Retention Mechanism

- A. Primary processor slot
- B. Secondary processor slot
- C. Positioning pin
- D. Hole for positioning pin
- E. Screw hole
- F. Screws

5. Connect the fan cables to the server board. The top fan (A) connects to the PROC FAN2 TOP fan connector (C). The bottom fan (B) connects to the PROC FAN1 BTM fan connector (D).

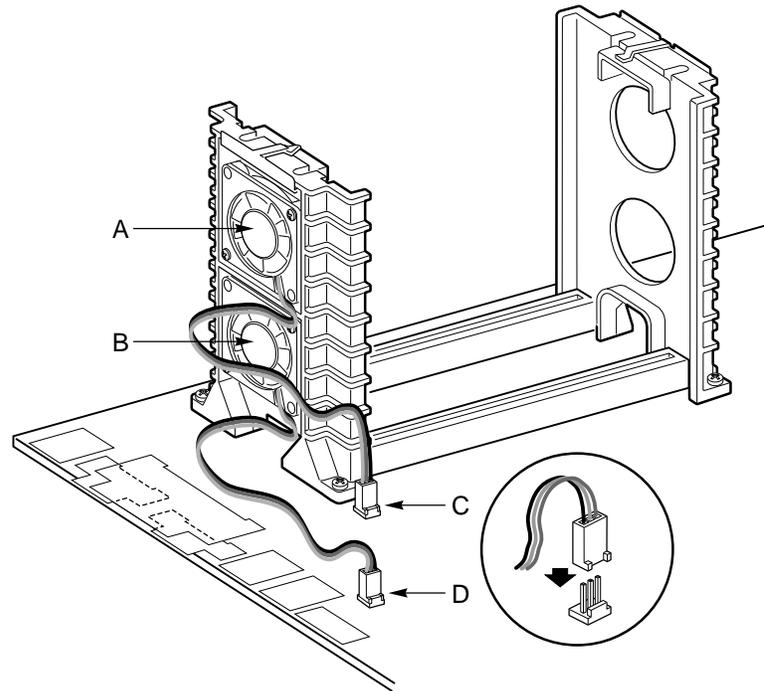

OM07685

Figure 6. Install Fans

- A. Top fan
 - B. Bottom fan
 - C. PROC FAN2 TOP connector (J7B1)
 - D. PROC FAN1 BTM connector (J6A1)
6. Connect all internal cables to the server board.
 7. Reinstall add-in boards.
 8. Connect all internal cables to add-in boards. Make sure you connect the power cables to the correct power connectors.
 9. Connect all peripheral device cables to the I/O panel on the rear of the server.
 10. Run the SSU to configure the server.

Removing the Server Board



CAUTION

The server board can be extremely sensitive to ESD and always requires careful handling. After removing it from the server, place it component side up on a nonconductive, static free surface to prevent shorting out the battery leads. If you place the board on a conductive surface, the battery leads may short out. If they do, this will result in a loss of CMOS data and will drain the battery. Do not slide the server board over any surface.

1. Observe the safety and ESD precautions at the beginning of this chapter.
2. Open the server and remove peripherals and components blocking access to the server board. See your chassis manual for more information.
3. Label and disconnect all internal cables connected to add-in boards.
4. Remove all add-in boards.
5. Label and disconnect all internal cables connected to the server board.
6. Remove the server board retaining screws and set them aside.
7. Remove the server board, and place it component side up on a nonconductive, static free surface or in an antistatic bag.
8. If present, remove and save the EMI gasket that covers the I/O connectors on the board.


Voltage Regulator Modules (VRMs)

You must install a VRM in the P1 Primary VRM socket. If you install a secondary processor, you must also install a VRM in the P2 Secondary VRM Socket. You may install 5 V or 12 V VRMs. See the following URL for information on which URM to use:

<http://www.intel.com/go/serverbuilder/>

Look under Reference Chassis.

1. Observe the safety and ESD precautions at the beginning of this chapter.
2. Open your server.
3. Remove the VRM from its antistatic packaging.
4. Insert the VRM into the socket component side facing the center of the server board.

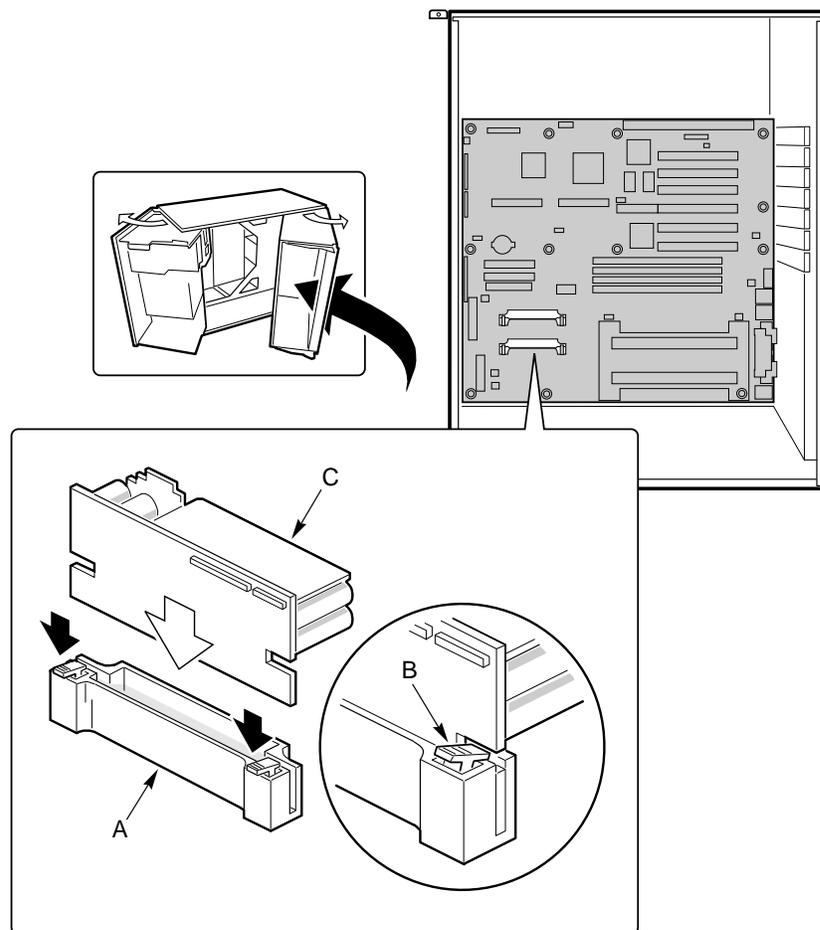

OM07716

Figure 7. Installing a VRM

- A. Socket
- B. Locking tab
- C. VRM

Processors

WARNING

If the server has been running, any installed processor and heat sink will be hot. To avoid the possibility of a burn, be careful when removing or installing server board components that are located near processors.

CAUTIONS


Processor must be appropriate: You may damage the server if you install a processor that is inappropriate for your server. Make sure your server can handle a newer, faster processor (thermal and power considerations). For exact information about processor interchangeability, contact your customer service representative or visit the Intel Customer Support website:

<http://support.intel.com/support/motherboards/server/C440gx>

ESD and handling processors: Reduce the risk of electrostatic discharge (ESD) damage to the processor by doing the following: (1) Touch the metal chassis before touching the processor or server board. Keep part of your body in contact with the metal chassis to dissipate the static charge while handling the processor. (2) Avoid moving around unnecessarily.

Installing a Processor

1. Observe the safety and ESD precautions at the beginning of this chapter and the additional cautions given here. If your server has one processor and you are **ADDING** a second, then you must remove the termination board from the secondary processor connector. If your server has one processor and you are **REPLACING** it, leave the termination board intact in the empty secondary connector. If your server has two processors and you are **REPLACING** one or both, remove the appropriate one(s).
2. Remove the new processor from its antistatic package and place it on a grounded, static free surface or conductive foam pad.
3. Attach the top of the retention mechanism to the processor cartridge. Make sure the screw holes (A) are on the same side as the heatsink. The clips (B) clip into the holes in the processor cartridge (C).

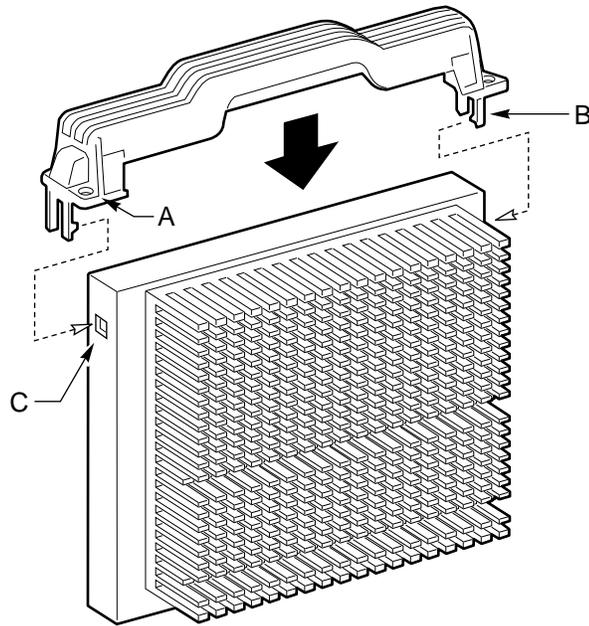

OM07689


Figure 8. Attach Retention Mechanism to Processor

- A. Screw hole
- B. Locking tab
- C. Hole

⇒ **NOTE**

If you are installing the processor in the secondary processor slot, the screw holes (A) are on the side away from the heatsink.

4. Slide the processor (B) into the retention mechanism (C) and press it firmly into its slot (D). Secure the processor with two screws (A).

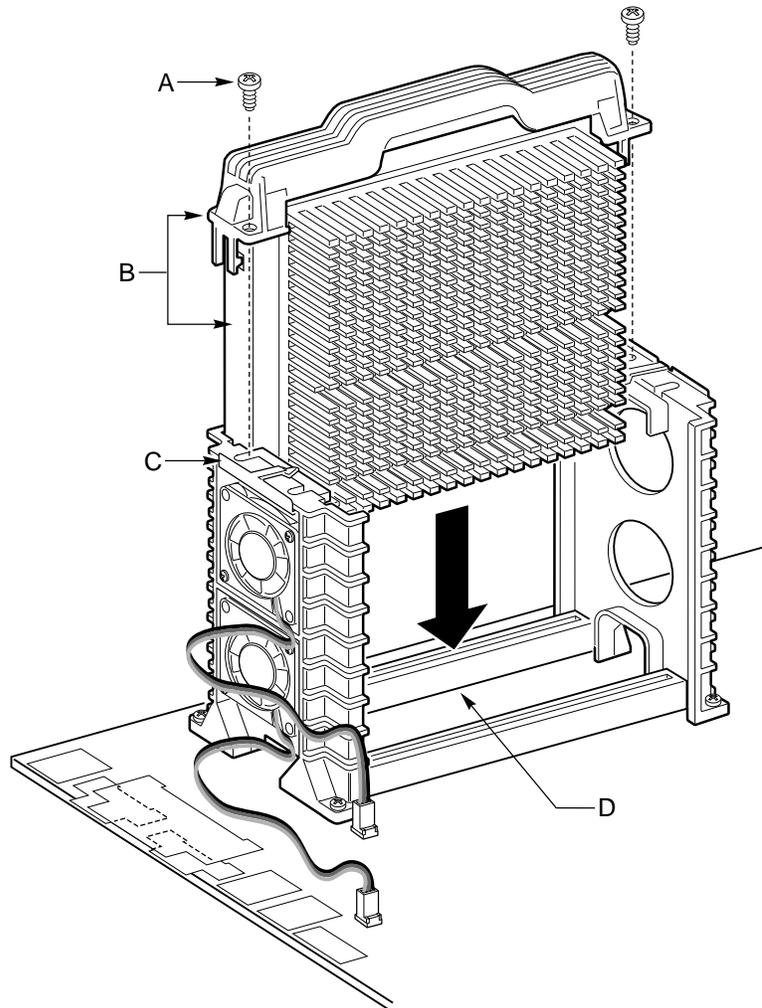

OM07690

Figure 9. Install Processor


- A. Screw
- B. Processor
- C. Retention mechanism
- D. Processor slot



CAUTION

If you install only one processor in a system, it must go in the primary connector (farthest from the DIMM sockets). With a single-processor configuration, you must install a termination board in the empty secondary connector. A termination board is provided with the C440GX+ server board.

5. Attach the top of the retention mechanism to the termination card assembly. Make sure the screw holes (A) are on the rear of the assembly. The clips (B) clip into the holes in the assembly (C).

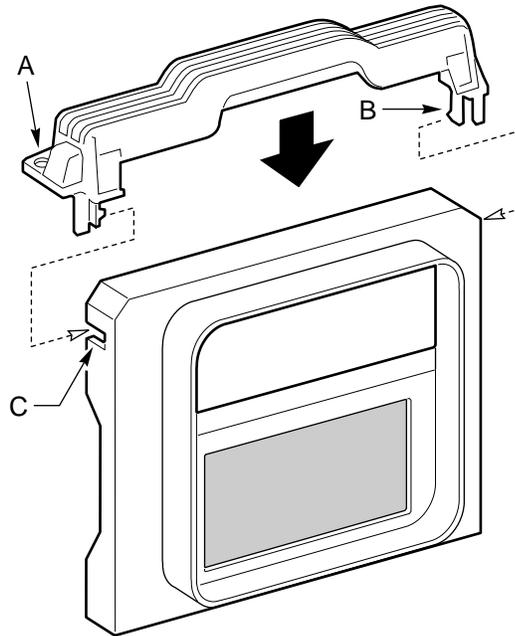


OM07692

Figure 10. Attaching the Retention Mechanism to the Termination Card

- A. Screw hole
- B. Locking tab
- C. Hole

6. Slide the termination card assembly into the retention mechanism and press it firmly into its slot. Secure the assembly with two screws (A).

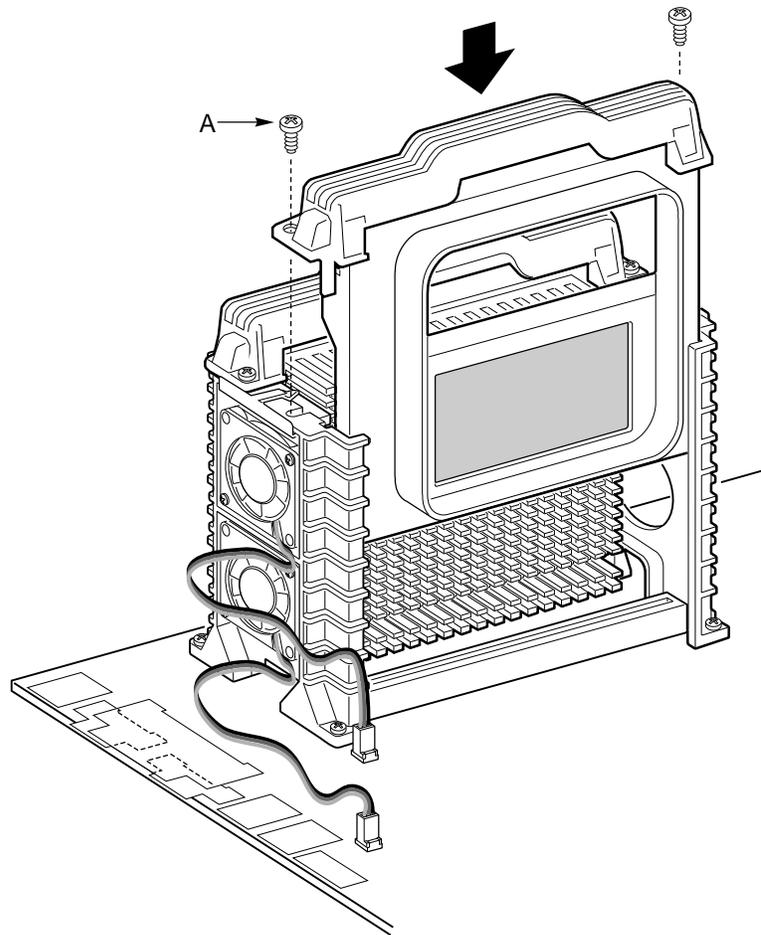

OM07694

Figure 11. Install the Termination Card

A. Screw

Removing a Processor

1. Observe the safety and ESD precautions at the beginning of this chapter and the additional cautions given here.
2. As you work, place boards and processors on a grounded, static free surface or conductive foam pad.
3. Remove the two screws hold the processor to the retention mechansim.
4. Lift the processor cartridge upward, out of the retention mechansim.
5. Put the processor in a piece of conductive foam and store in an antistatic package.

Memory

Installing DIMMs




CAUTIONS

Use extreme care when installing a DIMM. Applying too much pressure can damage the socket. DIMMs are keyed and can be inserted in only one way.

Mixing dissimilar metals may cause later memory failures resulting in data corruption. Only install DIMMs with gold-plated edge connectors in gold-plated sockets.

See Chapter 1 for memory size and requirements.

1. Observe the safety and ESD precautions at the beginning of this chapter.
2. Open your server.
3. Holding the DIMM only by its edges, remove it from its antistatic package.
4. Orient the DIMM so that the two notches in the bottom edge of the DIMM align with the keyed socket.
5. Insert the bottom edge of the DIMM into the socket, and press down firmly on the DIMM until it seats correctly.
6. Gently push the plastic ejector levers on the socket ends to the upright position.
7. Repeat the steps to install each DIMM.
8. Close the server.
9. Connect all external cables and the power cord to the server.
10. Turn on the monitor and then the server.

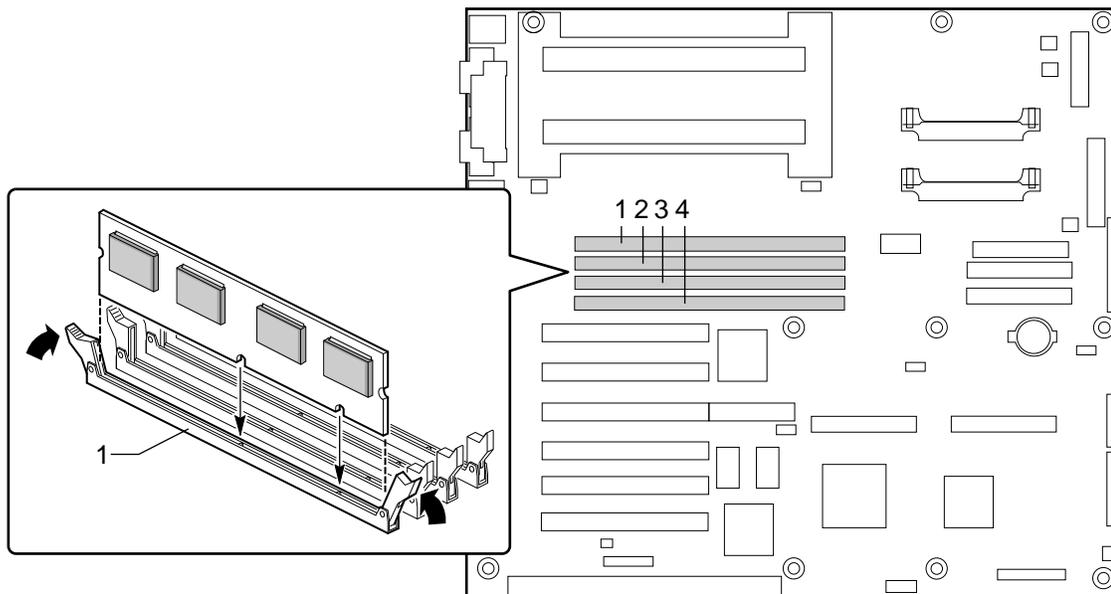

OM08501

Figure 12. Installing DIMMs

Removing DIMMs



CAUTION

Use extreme care when removing a DIMM. Too much pressure can damage the socket slot. Apply only enough pressure on the plastic ejector levers to release the DIMM.

1. Observe the safety and ESD precautions at the beginning of this chapter.
2. Open the server.
3. Gently push the plastic ejector levers out and down to eject a DIMM from its socket.
4. Hold the DIMM only by its edges, being careful not to touch its components or gold edge connectors. Carefully lift it away from the socket, and store it in an antistatic package.
5. Repeat to remove other DIMMs as necessary.
6. Close the server.
7. Connect all external cables and the power cord to the server.
8. Turn on the monitor and then the server.

Replacing the Back up Battery

The lithium battery on the server board powers the real time clock (RTC) for up to 10 years in the absence of power. When the battery starts to weaken, it loses voltage, and the server settings stored in CMOS RAM in the RTC (for example, the date and time) may be wrong. Contact your customer service representative or dealer for a list of approved devices.



WARNING

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the equipment manufacturer. Discard used batteries according to manufacturer's instructions.



ADVARSEL!

Lithiumbatteri - Eksplosjonsfare ved feilagtig håndtering. Utskiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren.



ADVARSEL

Lithiumbatteri - Eksplosjonsfare. Ved utskifting benyttes kun batteri som anbefalt av apparatfabrikanten. Brukt batteri returneres apparatleverandøren.




VARNING

Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.



VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suositteluun tyypin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

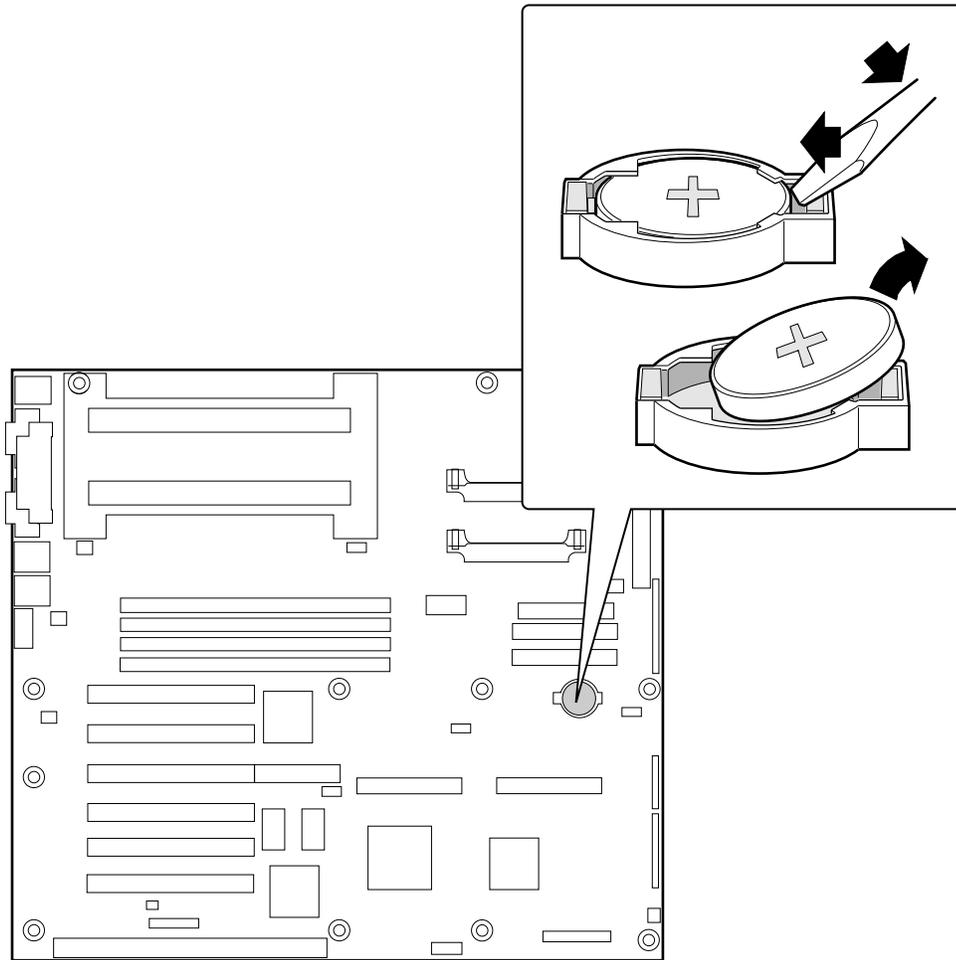

OM08502

Figure 13. Replacing the Lithium Battery

1. Observe the safety and ESD precautions at the beginning of this chapter.
2. Open the chassis.
3. Insert the tip of a small flat bladed screwdriver, or equivalent, under the tab in the plastic retainer.
4. Gently push down on the screwdriver to lift the battery.
5. Remove the battery from its socket.
6. Dispose of the battery according to local ordinance.
7. Remove the new lithium battery from its package, and, being careful to observe the correct polarity, insert it in the battery socket.
8. Reinstall the plastic retainer on the lithium battery socket.
9. Close the chassis.
10. Run the SSU to restore the configuration settings to the RTC.

3 Configuration Software and Utilities

This chapter describes the Power On Self Test (POST) and server configuration utilities. The table below briefly describes the utilities.

Table 4. Configuration Utilities

| Utility | Description and brief procedure | Page |
|--------------------------------|--|------|
| BIOS Setup | If the system does not have a diskette drive, or the drive is disabled or misconfigured, use Setup to enable it. Or, you can move the CMOS jumper on the server board from the default setting (Protect CMOS memory) to the Clear setting; this will allow most server configurations to boot. For the procedure to do this, see the section "CMOS Jumper" in Chapter 5 in this manual. Then run the SSU to configure the server. | 43 |
| System Setup Utility (SSU) | Use for extended system configuration of onboard resources and add-in boards, and for viewing the system event log, setting boot device priority, or setting system security options. The SSU may be run from either the Server Configuration CD or from a DOS-bootable diskette. Information entered via the SSU overrides information entered via BIOS Setup. | 57 |
| EMP Console | Use to access and monitor the server remotely. | 68 |
| FRUSDR Load Utility | Use to update the Field Replacement Unit (FRU), Sensor Data Record (SDR), and Desktop Management Interface (DMI) flash components. | 81 |
| BIOS Update Utility | Use to update the BIOS or recover from a corrupted BIOS update. | 85 |
| Firmware Update Utility | Use to update BMC flash ROM. | 88 |
| Using the Adaptec SCSI Utility | Use to configure or view the settings of the SCSI host adapters and onboard SCSI devices in the server. | 89 |

Hot Keys

Use the keyboard's numeric pad to enter numbers and symbols.

Table 5. Hot Keys

| To do this: | Press these keys |
|--|---|
| Clear memory and reload the operating system—this is a system reset. | <Ctrl+Alt+Del> |
| Secure your system immediately. | <Ctrl+Alt>+hotkey (Set your hot key combination with the SSU or Setup.) |

Power On Self Test (POST)

Each time you turn on the system, POST starts running. POST checks the server board, processor, memory, keyboard, and most installed peripheral devices. During the memory test, POST displays the amount of memory that it is able to access and test. The length of time needed to test memory depends on the amount of memory installed. POST is stored in flash memory.

1. Turn on your video monitor and server. After a few seconds POST begins to run.
2. After the memory test, these screen prompts and messages appear:

```
Press <F2> key if you want to run SETUP
```

```
Keyboard.....Detected
```

```
Mouse.....Detected
```

3. If you do not press <F2> and do NOT have a device with an operating system loaded, the above message remains for a few seconds while the boot process continues, and the system beeps once. Then this message appears:

```
Operating system not found
```

If you do not press <F2> and DO have an operating system loaded, the boot process continues, and this message appears:

```
Press <Ctrl><A> to enter SCSI Utility
```

4. Press <Ctrl+A> if there are SCSI devices installed. When the utility opens, follow the displayed instructions to configure the onboard SCSI host adapter settings and to run the SCSI utilities. Also see “Using the Adaptec SCSI Utility” on page 89. If you do not enter the SCSI utility, the boot process continues.
5. Press <Esc> during POST to pop up a boot menu when POST finishes. From this menu you can choose the boot device or enter BIOS Setup.

After POST completes, the system beeps once.

What appears on the screen after this depends on whether you have an operating system loaded and if so, which one.

If the system halts before POST completes running, it emits a beep code indicating a fatal system error that requires immediate attention. If POST can display a message on the video display screen, it causes the speaker to beep twice as the message appears.

Note the screen display and write down the beep code you hear; this information is useful for your service representative. For a listing of beep codes and error messages that POST can generate, see the “Solving Problems” chapter in this manual.

Using BIOS Setup

This section describes the BIOS Setup options. Use Setup to change the server configuration defaults. You can run Setup with or without an operating system being present. Setup stores most of the configuration values in battery backed CMOS; the rest of the values are stored in flash memory. The values take effect when you boot the server. POST uses these values to configure the hardware; if the values and the actual hardware do not agree, POST generates an error message. You must then run Setup to specify the correct configuration.

Run Setup: You may run Setup to modify such server board feature as:

- Select diskette drive
- Select parallel port
- Select serial port
- Set time/date (to be stored in RTC)
- Configure IDE hard drive
- Specify boot device sequence
- Enable SCSI BIOS
- Specify processor speed

Run SSU, not Setup: You must run the SSU instead of Setup to do the following:

- Add or remove any ISA board that is not Plug and Play-compatible
- Enter or change information about a board
- Alter server resources (such as interrupts, memory addresses, I/O assignments) to user selected choices instead of choices selected by the BIOS resource manager

Record Your Setup Settings

If the default values ever need to be restored (after a CMOS clear, for example), you must run Setup again. Referring to the worksheets could make your task easier.

If You Cannot Access Setup

If the diskette drive is misconfigured so that you cannot access it to run a utility from a diskette, you may need to clear CMOS memory. You will need to open the server, change a jumper setting, use Setup to check and set diskette drive options, and change the jumper back. For a step-by-step procedure, see Chapter 5, under the heading, “CMOS Jumper.”

Starting Setup

You can enter and start Setup under several conditions:

- When you turn on the server, after POST completes the memory test
- When you reboot the server by pressing <Ctrl+Alt+Del> while at the DOS operating system prompt
- When you have moved the CMOS jumper on the server board to the “Clear CMOS” position (enabled); for the procedure, see Chapter 5, under the heading “CMOS Jumper”

In the three conditions listed above, after rebooting, you will see this prompt:

```
Press <F2> to enter SETUP
```

In a fourth condition, when CMOS/NVRAM has been corrupted, you will see other prompts but not the <F2> prompt:

```
Warning:  cmos checksum invalid
Warning:  cmos time and date not set
```

In this condition, the BIOS will load default values for CMOS and attempt to boot.

Setup Menus

| To: | Press |
|-------------------------------------|-----------------|
| Get general help | <F1> or <Alt+H> |
| Move between menus | ← → |
| Go to the previous item | ↑ |
| Go to the next item | ↓ |
| Change the value of an item | + or - |
| Select an item or display a submenu | <Enter> |
| Leave a submenu or exit Setup | <Esc> |
| Reset to Setup defaults | <F9> |
| Save and exit Setup | <F10> |

| When you see this: | What it means |
|---|--|
| On screen, an option is shown but you cannot select it or move to that field. | You cannot change or configure the option in that menu screen. Either the option is autoconfigured or autodetected, or you must use a different Setup screen, or you must use the SSU. |
| On screen, the phrase Press Enter appears next to the option. | Press <Enter> to display a submenu that is either a separate full screen menu or a popup menu with one or more choices. |

The rest of this section lists the features that display onscreen after you press <F2> to enter Setup. Not all of the option choices are described, because (1) a few are not user selectable but are displayed for your information, and (2) many of the choices are relatively self explanatory.

Main Menu

You can make the following selections on the Main Menu itself. Use the submenus for other selections.

| Feature | Choices | Description |
|----------------------|--|---------------------------------------|
| System Time | HH:MM:SS | Sets the system time. |
| System Date | MM/DD/YYYY | Sets the system date. |
| Legacy Diskette A: | Disabled 360KB 1.2 MB 720KB 1.44/1.25 MB 2.88 MB | Selects the diskette type. |
| Legacy Diskette B: | Disabled 360KB 1.2 MB 720KB 1.44/1.25 MB 2.88 MB | |
| Primary IDE Master | | Enters submenu. |
| Primary IDE Slave | | Enters submenu. |
| Secondary IDE Master | | Enters submenu. |
| Secondary IDE Slave | | Enters submenu. |
| Keyboard Features | | Enters submenu. |
| Processor Setting | | Enters submenu. |
| Language | English (US) Français Español Deutsch Italiano | Selects which language BIOS displays. |

Primary/Secondary IDE Master and Slave Submenu

| Feature | Choices | Description |
|-----------------------|---|--|
| Type | Auto None CD-ROM IDE Removable ATAPI Removable User | Auto forces the server to attempt autodetection of the drive type. None informs the server to ignore this drive. CD ROM allows the manual entry of some fields described below. IDE Removable allows the manual entry of some fields described below. ATAPI Removable allows the manual entry of some fields described below. User allows the manual entry of all fields described below. |
| CHS Format | | |
| Cylinders | 0 to 65535 | Number of Cylinders on Drive. This field is changeable only for Type User. |
| Heads | 1 to 16 | Number of read/write heads on drive. This field is available only for Type User. |
| Sectors | 0 to 63 | Number of sectors per track. This field is available only for Type User. |
| Maximum Capacity | N/A | Computed size of drive from cylinders, heads, and sectors entered. This field is informational only. |
| LBA Format | | |
| Total Sectors | N/A | This field is informational only. |
| Maximum Capacity | N/A | This field is informational only. |
| Multi-Sector Transfer | Disabled 2, 4, 8, or 16 sectors | Determines the number of sectors per block for multi-sector transfers. This field is informational only for Type Auto. |
| LBA Mode Control | Disabled Enabled | Enabling LBA causes logical block addressing to be used in place of cylinders, heads, and sectors. This field is informational only for Type Auto. |
| 32 Bit I/O | Disabled Enabled | Enabling allows 32 bit IDE data transfers. |
| Transfer Mode | Standard Fast PIO 1 Fast PIO 2 Fast PIO 3 Fast PIO 4 FPIO 3 / DMA 1 FPIO 4 / DMA 2 | Selects the method for moving data to and from the drive. This field is informational only for Type Auto. |
| Ultra DMA Mode | Disabled Mode 0 Mode 1 Mode 2 | Selects the Ultra DMA mode used for moving data to/from the drive. |

Keyboard Submenu

| Feature | Choices | Description |
|----------------------------|---|--|
| Num Lock | On Off | Selects the power on state for Num Lock. |
| Key Click | Disabled Enabled | Enables or disables the audible key click. |
| Keyboard auto-repeat rate | 30/sec 26.7/sec 21.8/sec 18.5/sec 13.3/sec 10/sec 6/sec 2/sec | Sets the numbers of time per second a key will repeat while it is held down. |
| Keyboard auto-repeat delay | 1/4 sec 1/2 sec 3/4 sec 1 sec | Sets the delay before a key starts to repeat when it is held down. |

Processor Setting Submenu

| Feature | Choices | Description |
|---------------------------|--------------------------------------|---|
| CPU Post Speed Setting | 450 MHz 450 MHz 500 MHz | Sets the speed for the installed processor. |
| Processor Retest | No Yes | Yes tells BIOS to clear the historical processor status and retest all processors on the next boot. BIOS automatically resets to No in next boot. |
| Memory Cache | Enabled Disabled | Enables processor cache. |
| Processor 1 Stepping ID | N/A | This field is informational only. |
| Processor 1 L2 Cache Size | N/A | This field is informational only. |
| Processor 2 Stepping ID | N/A | This field is informational only. |
| Processor 2 L2 Cache Size | N/A | This field is informational only. |

Advanced Menu

You can make the following selections on the Advanced Menu itself. Use the submenus for the three other selections that appear on the Advanced Menu.

| Feature | Choices | Description |
|--------------------------------------|----------------------------|---|
| Installed OS | Other Win95 | Select Win95 if you are booting a Plug and Play capable operating system. |
| Reset Configuration Data | No Yes | Select Yes if you want to clear the server configuration data during next boot. System automatically resets to No in next boot. |
| PCI Configuration | | Enters submenu. |
| Integrated Peripherals Configuration | | Enters submenu. |
| Advanced Chipset Control | | Enters submenu. |
| Use Multiprocessor Specification | 1.1 1.4 | Selects the version of multiprocessor specification to use. Some operating systems do not support version 1.4. |
| Large Disk Access Mode | CHS LBA | Select CHS if your OS is DOS. A large disk has more than 1024 cylinders, more than 16 heads, or more than 63 tracks per sector. |
| Delay on Option ROMs | Disabled Enabled | Forces a short delay at the end of each Option ROM scan. |

PCI Configuration Submenu

The PCI Configuration Menu contains selections that access other submenus.

PCI Device, Embedded SCSI Submenu

| Feature | Choices | Description |
|-----------------|---|---|
| Option ROM Scan | Enabled Disabled | Enables option ROM scan of the onboard SCSI chip. There are 2 SCSI channels that are controlled by the same option ROM. |
| Enable Master | Enabled Disabled | Enabled selects the device as a PCI bus master. |
| Latency Timer | Default 0020h 0040h 0060h 0080h 00A0h 00C0h 00E0h | <p>Minimum guaranteed time, in units of PCI bus clocks, that a device may be master on a PCI bus.</p> <p> CAUTION</p> <p>Do not change this setting unless you fully understand the priority of this device on the PCI bus.</p> |

PCI Device, Slot 1 - Slot 6 Submenus

| Feature | Choices | Description |
|---------------|--|--|
| Enable Master | Enabled Disabled | Enables selected device as a PCI bus master. |
| Latency Timer | Default 020h 040h 060h 080h 0A0h 0C0h 0E0h | Minimum guaranteed time, in units of PCI bus clocks, that a device may be master on a PCI bus.  CAUTION Do not change this setting unless you fully understand the priority of this device on the PCI bus. |

Integrated Peripheral Configuration Submenu

| Feature | Choices | Description |
|------------------|---|---|
| COM 1 | Disabled Enabled Auto OS Controlled | Auto forces BIOS to configure the port. OS Controlled Forces the OS to configure the port. |
| Base I/O Address | 3F8 2F8 3E8 2E8 | Selects the base I/O address for COM 1. |
| Interrupt | IRQ 3 IRQ 4 | Selects the IRQ for COM 1. |
| COM2 | Disabled Enabled Auto PnP OS | Auto forces BIOS to configure the port. PnP OS forces OS configures the port. |
| Base I/O Address | 3F8 2F8 3E8 2E8 | Selects the base I/O address for COM2. |
| Interrupt | IRQ 3 IRQ 4 | Selects the IRQ for COM2. |
| Parallel Port | Disabled Enabled Auto PnP OS | Auto forces BIOS to configure the port. PnP OS forces OS configures the port. |
| Mode | Output only Bi-directional EPP ECP | Selects parallel port mode. |
| Base I/O Address | 378 278 | Selects the base I/O address for LPT port. |

continued

Integrated Peripheral Configuration Submenu (continued)

| Feature | Choices | Description |
|------------------------|---------------------|--|
| Interrupt | IRQ 5 IRQ 7 | Selects the IRQ for LPT port. |
| DMA channel | DMA 1 DMA 3 | Selects the DMA for LPT port (only used for ECP mode). |
| Floppy disk controller | Disabled Enabled | Enables onboard diskette controller. |

Advanced Chipset Control

| Feature | Choices | Description |
|------------------------|---------------------|--|
| 640-768K Memory Region | Enabled Disabled | Enabled forwards ISA Master and DMA cycles to the PCI bus. Disabled forwards these cycles to memory. |
| Delayed Transaction | Enabled Disabled | Enables the delayed transaction mechanism when the PIIX4e is the target of a PCI transaction. |
| Passive Release | Enabled Disabled | Enables the passive release mechanism on the PHOLD# signal when the PIIX4 is a PCI Master. |

Security Menu

You can make the following selections on the Security Menu itself. Enabling the Supervisor Password field requires a password for entering Setup. The passwords are not case-sensitive.

| Feature | Choices | Description |
|-------------------------------------|--|---|
| User Password is | Clear Set | Status only; user cannot modify. Once set, this can be disabled by setting it to a null string, or by clearing password jumper on server board. |
| Supervisor Password is | Clear Set | Status only; user cannot modify. |
| Set User Password | Press Enter | When the <Enter> key is pressed, you are prompted for a password; press ESC key to abort. Once set, this can be cleared by setting it to a null string, or by clearing password jumper on server board (see Server Board Jumpers in Chapter 5). |
| Set Supervisor Password | Press Enter | When the <Enter> key is pressed, you are prompted for a password; press ESC key to abort. Once set, this can be cleared by setting it to a null string, or by clearing password jumper on server board (see Server Board Jumpers in Chapter 5). |
| Password on Boot | Disabled Enabled | Requires password entry before boot. System will remain in secure mode until password is entered. Password on Boot takes precedence over Secure Mode Boot. |
| Fixed Disk Boot Sector | Normal Write Protect | Write protects boot sector on hard disk to protect against viruses. |
| Secure Mode Timer | Disabled 1 min 2 min 5 min 10 min 20 min 1 hr 2 hr | Period of key/PS/2 mouse inactivity specified for secure mode to activate. A password is required for secure mode to function. Cannot be enabled unless at least one password is enabled. |
| Secure Mode Hot Key (Ctrl-Alt-) | [] [A, B, ..., Z] | Key assigned to start the Quicklock feature. Cannot be enabled unless at least one password is enabled. |
| Secure Mode Boot | Disabled Enabled | System will boot in secure mode. You must enter a password to unlock the system. Cannot be enabled unless at least one password is enabled. |
| Video Blanking | Disabled Enabled | Blank video when secure mode is activated. You must enter a password to unlock the system. Cannot be enabled unless at least one password is enabled. |
| Floppy Write Protect | Disabled Enabled | When secure mode is activated, the diskette drive is write protected. You must enter a password to disable. Cannot be enabled unless at least one password is enabled. |
| Front Panel Lockout | Disabled Enabled | When secure mode is activated, the reset and power switches are locked. You must enter a password to unlock the system. Cannot be enabled unless at least one password is enabled. |

Server Menu

You can make the following selections on the Server Menu itself.

| Feature | Choices | Description |
|------------------------------|----------------------------|--|
| System Management | | Enters submenu. |
| Console Redirection | | Enters submenu. |
| Enable Sleep Button | Disabled Enabled | |
| PCI IRQs to IO-APIC mappings | Disabled Enabled | Enabled - BIOS can describe all 24 IO APIC pins in the MP table for PCI interrupts. Not all MP operating systems and drivers can understand this description of the interrupts in the MP table. Disabled - BIOS will only use 16 IO APIC pins in the MP table for PCI interrupts. All PCI interrupts are routed to a standard ISA IRQ pins on IO APIC. All operating systems will work with standard ISA IRQ entries. |
| Processor Retest | Yes No | Yes tells BIOS to clear the historical processor status and retest all processors on the next boot. BIOS automatically resets to No in next boot. |
| Assert NMI on PERR | Disabled Enabled | Enabled generates an NMI on a parity error (PERR). To activate this feature, the system error (SERR) option must be enabled. |
| Assert NMI on SERR | Disabled Enabled | Enabled generates an NMI on SERR. |

System Management Submenu

| Feature | Choices | Description |
|------------------------|----------------------------|--|
| Server Management Info | | Enters submenu. |
| System Event Logging | Disabled Enabled | When enabled, system events will be logged by BIOS and BMC in system event log. |
| Clear Event Log | No Yes | Yes clears the system event log (SEL) in BMC. BIOS automatically resets to NO for next boot. |
| EMP Password switch | Disabled Enabled | Sets the EMP password. |
| EMP Password | [A..Z, 0..9] | This field only shows up when the EMP password switch is enabled. Entering a password and pressing return will send the password immediately to the BMC. If a beep is heard the password was not accepted. If no password is entered, anyone has access to the server through the EMP Console. |
| EMP Escape sequence | +++ | Sets the escape sequence for the modem being used for EMP. This will force the modem to command mode. This is only used if the EMP direct connect/modem mode is set to modem. |

continued

System Management Submenu (continued)

| Feature | Choices | Description |
|-------------------------------|---|--|
| EMP Hangup Line String | ATH | Sets the Hangup Line Sequence for the modem being used for EMP. Used in EMP modem mode. |
| Modem Init String | AT&F0S0=1S14=0&D | Sets the initialization string for the modem being used for EMP. Used in EMP modem mode. This field is only 16 characters long. The High Modem Init String field is a continuation of the Modem Init string so you can enter in another 4 characters. |
| High Modem Init String | 0 | This is a continuation of the Modem Init String. When 16 characters are typed into the Modem Init String field, this field will appear to allow another 4 characters to be typed in. |
| EMP Access Mode | Pre-boot Only Always Active Disabled | Pre-boot Only - EMP is only enabled during power down through end of POST. COM2 is returned to system use at the end of Post when operating system boots. Always Active - EMP is always enabled. COM2 cannot be used by operating system. It is now dedicated for EMP use. Disabled – EMP is disabled. COM2 is always available for system use by console redirection or operating system. |
| EMP Restricted Mode Access | Disabled Enabled | If set to Enabled, Power on/off and Reset server controls via EMP are no longer available. |
| EMP Direct Connect/Modem Mode | Direct Connect Modem Mode | Sets how EMP connects to the server. Direct Connect means a null modem serial cable directly connects COM2 connector port to the EMP console machine. Modem mode indicates that a modem is connected on COM2 for EMP use. |

Server Management Information Submenu

Items on this menu are set when the server board is manufactured and cannot normally be changed. The last two items refer to the firmware level of the BMC on the server board and HSC (Hot Swap Controller) from the Astor II server chassis. If circumstances require a change in the C440GX+ server board's firmware, specific direction will be provided by Intel Customer Support.

| Feature | Choices | Description |
|-----------------------|---------|------------------------|
| Board Part Number | N/A | Information field only |
| Board Serial Number | N/A | Information field only |
| System Part Number | N/A | Information field only |
| System Serial Number | N/A | Information field only |
| Chassis Part Number | N/A | Information field only |
| Chassis Serial Number | N/A | Information field only |
| BMC Revision | N/A | Information field only |
| Primary HSB Revision | N/A | Information field only |

Console Redirection Submenu

| Feature | Choices | Description |
|------------------|---|---|
| COM Port Address | Disabled 3F8 2F8 3E8 | When enabled, console redirection uses the I/O port specified. 3F8 - typically is COM 1 2F8 - typically is COM2 All keyboard/mouse and video will be directed to this port. This is designed to be used only under DOS in text mode. |
| IRQ # | N/A | This field is informational only. |
| Baud Rate | 9600 19.2k 38.4k 115.2k | When console redirection is enabled, specifies the baud rate to be used. |
| Flow Control | No Flow Control CTS/RTS XON/XOFF CTS/RTS + CD | None disallows flow control. CTS/RTS is hardware-flow control. XON/XOFF is software-flow control. CTS/RTS +CD is hardware plus carrier-detect flow control. |

Boot Menu

You can make the following selections on the Boot Menu itself.

| Feature | Choices | Description |
|-----------------------------|----------------------------|-----------------|
| Boot-time Diagnostic Screen | Disabled Enabled | |
| Boot Device Priority | | Enters submenu. |
| Hard Drive | | Enters submenu. |
| Removable Devices | | Enters submenu. |

Boot Device Priority

Use the up or down arrow keys to select a device; then press the <+> or <-> keys to move the device higher or lower in the boot priority list.

| Boot Priority | Device | Description |
|---------------|------------------------------|---|
| 1. | Removable Devices | Attempts to boot from a removable media device. |
| 2. | Hard Drive | Attempts to boot from a hard drive device. |
| 3. | ATAPI CD-ROM Drive | Attempts to boot from an ATAPI CD-ROM drive. |
| 4. | LANDesk (R) Service Agent II | Attempts to boot from the local area network. |

Hard Drive

For options on this menu, use the up or down arrow keys to select a device; then press the <+> or <-> keys to move the device higher or lower in the boot priority list.

| Option | Description |
|---|--|
| 1. Hard Drive #1 (or actual drive string) | IDE drives will have a suffix attached to the drive ID string. PM - hard drive on Primary Master Channel PS - hard drive on Primary Slave Channel SM - hard drive on Secondary Master Channel SS - hard drive on Secondary Slave Channel SCSI CD-ROMs will be displayed here because the onboard SCSI BIOS treats CD-ROMs as hard drives. SCSI ZIP or removable drives will also appear here. Removable IDE ZIP drives will only show up if the removable media is formatted as a hard drive. |
| 2. Other Bootable Device | Covers all the boot devices that are not reported to the system BIOS through the BIOS boot specification mechanism. This includes all PCI cards that are not BIOS boot compliant (legacy) as well as ISA cards that are not PnP compliant. ISA legacy cards will boot first before non BIOS boot compliant PCI cards (in scan order from lowest slot to highest). |

Removable Devices

For options on this menu, use the up or down arrow keys to select a device, then press the <+> or <-> keys to move the device higher or lower in the boot priority list.

| Option | Description |
|------------------------|---|
| 1. Legacy Floppy Drive | Refers to the onboard 3.5" floppy drive. Removable IDE media may also show up here if the removable media was formatted in floppy emulation. |

Exit Menu

You can make the following selections on the Exit Menu. Select an option using the up or down arrow keys; then press <Enter> to execute the option. Pressing <Esc> does not exit this menu. You must select one of the items from the menu or menu bar to exit.

| Choices | Description |
|-------------------------|--|
| Exit Saving Changes | Exits after writing all modified Setup item values to NVRAM. |
| Exit Discarding Changes | Exits leaving NVRAM unmodified. |
| Load Setup Defaults | Loads values of all Setup items from previously saved custom defaults. |
| Load Custom Defaults | Loads default values for all Setup items. |
| Save Custom Defaults | Saves present Setup values to custom defaults. |
| Discard Changes | Reads previous values of all Setup items from NVRAM. |
| Save Changes | Writes all Setup item values to NVRAM. |

Using the System Setup Utility

The System Setup Utility (SSU) is on the C440GX+ Server Board Resource software CD shipped with the server board. The SSU provides a graphical user interface (GUI) over an extensible framework for server configuration. For the C440GX+ systems, the SSU framework supports the following functions and capabilities:

- assigns resources to baseboard devices and add-in cards prior to loading the operating system (OS)
- allows you to specify boot device order and system security options
- permits viewing and clearing of the system's critical event log
- allows troubleshooting of the server when the OS is not operational
- provides a system level view of the server's I/O devices

When to Run the System Setup Utility

The SSU is a DOS-based utility that supports extended system configuration operations for onboard resources and add-in boards. You can also view the system event log and to set system boot and security options. Use the SSU when you need to

- add and remove boards affecting the assignment of resources (ports, memory, IRQs, DMA)
- modify the server's boot device order or security settings
- change the server configuration settings
- save the server configuration
- view or clear the system event log

If you install or remove an ISA add-in board, you must run the SSU to reconfigure the server. Running the SSU is optional for PCI and Plug and Play ISA add-in boards.

The SSU is PCI aware, and it complies with the ISA Plug and Play specifications. The SSU works with any compliant configuration (.CFG) files supplied by the peripheral device manufacturer.

The I/O baseboard comes with a .CFG file. The .CFG file describes the characteristics of the board and the system resources that it requires. The configuration registers on PCI and ISA Plug and Play add-in boards contain the same type of information that is in a .CFG file. Some ISA boards also come with a .CFG file.

The SSU uses the information provided by .CFG files, configuration registers, flash, and the information that you enter, to specify a system configuration. The SSU writes the configuration information to flash memory.

The SSU stores configuration values in flash memory. These values take effect when you boot the server. POST checks the values against the actual hardware configuration; if they do not agree, POST generates an error message. You must then run the SSU to specify the correct configuration before the server boots.

The SSU always includes a checksum with the configuration data so the BIOS can detect any potential data corruption before the actual hardware configuration takes place.

What You Need to Do

The SSU may be run directly from the Server Resource CD by booting the server system to the CD and selecting “Utilities” or from a set of DOS diskettes.

If you choose to run the SSU from a set of DOS diskettes, you must create the SSU diskettes from the Server Resource CD by booting to the CD and selecting “Create Diskettes.” Alternatively, if you have a Windows[†] 95 or Windows NT workstation, you can insert the CD into that system and create diskettes from the “Utilities” menu of the graphical user interface.

If your diskette drive is disabled, or improperly configured, you must use the flash resident Setup utility to enable it so that you can use the SSU. If necessary, you can disable the drive after you exit the SSU. Information entered using the SSU overrides any entered using Setup.

Running the SSU

- **Running the SSU Locally**

Running the `ssu.bat` file provided on the SSU media starts the SSU. If the server boots directly from the SSU media, the `ssu.bat` file is automatically run. If it boots from a different media, the SSU can be started manually or by another application. When the SSU starts in the local execution mode (the default mode), the SSU accepts input from the keyboard and/or mouse. The SSU presents a VGA based Graphical User Interface (GUI) on the primary monitor.

The SSU runs from writable, nonwritable, removable, and nonremovable media. If the SSU is run from nonwritable media, user preference settings (such as screen colors) can not be saved.

The SSU supports the ROM-DOS V6.22 operating system. It may run on other ROM-DOS-compatible operating systems but they are not supported. The SSU will not operate from a “DOS box” running under an operating system such as Windows.

- **Running the SSU Remotely**

Running the SSU remotely requires a remote server with a LANDesk Emergency Management Card 2 (EMC2) card and a local system with Remote Control software available.

The EMC2 card provides video memory, keyboard, and mouse redirection support for the remote server. The Remote Control console of the local system displays and sends video memory and user input to the remote server through either a modem or an Ethernet link.

Because the SSU runs exclusively on the remote server, any files required for the SSU to run must be available on the remote server (on removable or nonremovable media).

If you connect the local system to the remote server through a network or modem you can see the console, control the mouse, and control the keyboard of the remote server.

Starting the SSU

SSU consists of a collection of task oriented modules plugged into a common framework called the Application Framework (AF). The Application Framework provides a launching point for individual tasks and a location for setting customization information. For full functionality the SSU requires the availability of the AF.INI, AF.HLP, plus any .ADN files and their associated .HLP and .INI files.

1. Turn on your video monitor and your system.
2. There are two ways to start the SSU.
 - a. **After creating set of three SSU diskettes from the CD:** Insert the first SSU diskette in drive A, and press the reset button or <Ctrl+Alt+Del> to reboot your server from the diskette.
 - b. **Directly from the Server Resource CD:** Insert the Server Resource CD into your CD ROM drive and press the reset button or <Ctrl-Alt-Del> to reboot. When prompted to do so, press <F2> to enter BIOS Setup. From the Boot Menu, select the Boot Device Priority option and then select CD-ROM as your primary boot device. Save those settings and exit BIOS Setup. The server will boot from the CD-ROM and display a menu of options. Follow the instructions in the menu to start the SSU.
3. When the SSU title appears on the screen, press <Enter> to continue.
4. The mouse driver loads if it is available; press <Enter> to continue.
5. This message appears:

```
Please wait while the Application Framework loads....
```

- When the main window of the SSU appears, you can customize the user interface before continuing.

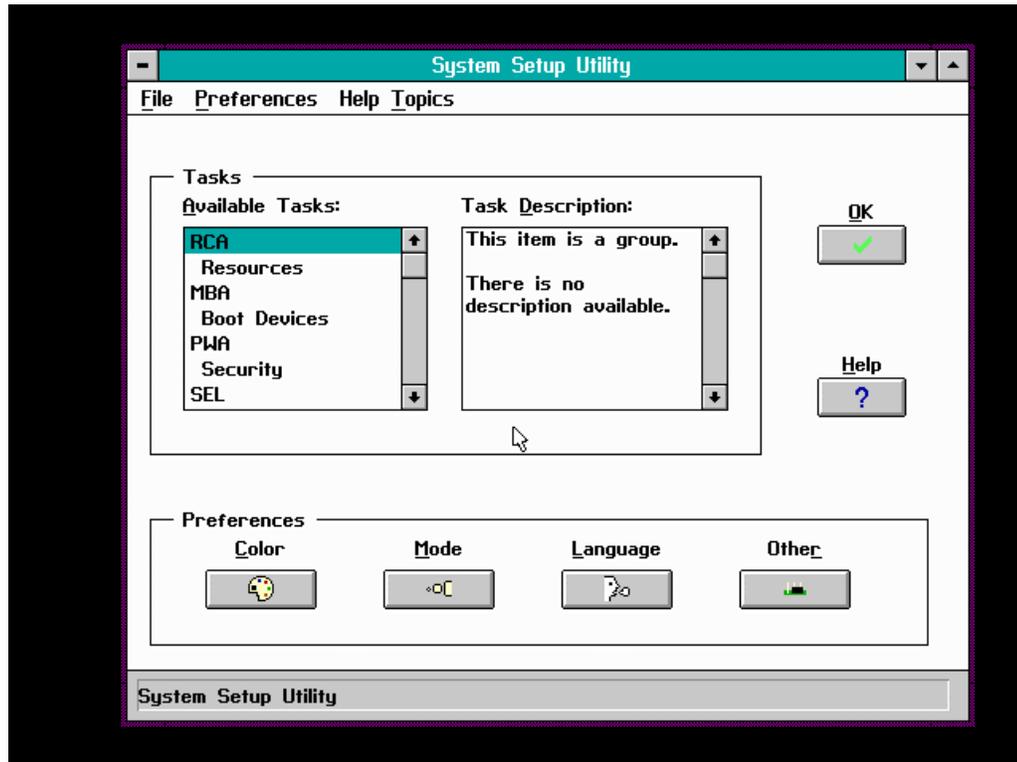


Figure 14. System Setup Utility Main Window

Customizing the SSU

The SSU lets you customize the user interface according to your preferences. The AF sets these preferences and saves them in the AF.INI file so that they take effect the next time you start the SSU. There are four user customizable settings:

- **Color** - this button lets you change the default colors associated with different items on the screen with predefined color combinations. The color changes are instantaneous.
- **Mode** - this button lets you set the desired expertise level.
 - novice
 - intermediate
 - expert

The expertise level determines which tasks are visible in the Available Tasks section and what actions each task performs. For a new mode setting to take effect, you must exit the SSU and restart it.

- **Language** - this button lets you change the strings in the SSU to strings of the appropriate language. For a new language setting to take effect, you must exit the SSU and restart it.
- **Other** - this button lets you change other miscellaneous options in the SSU. The changes take effect immediately.

To change the interface default values:

Use the mouse to click on the proper button in the Preferences section of the SSU Main window.

or

Use the tab and arrow keys to highlight the desired button, and press the spacebar or <Enter>.

or

Access the menu bar with the mouse or hot keys (Alt + underlined letter).

⇒ NOTE

If you run the SSU from nonwritable media (like a CD-ROM), these preferences will be lost when you exit the SSU.

Launching a Task

It is possible to have many tasks open at the same time, although some tasks may require complete control to avoid possible conflicts. The tasks achieve complete control by keeping the task as the center of operation until you close the task window.

To launch a task:

1. In the SSU Main window, double click on the task name under Available Tasks to display the main window for the selected task.

or

Highlight the task name, and click on OK.

or

Use the tab and arrow keys to highlight the desired button, and press the spacebar or <Enter>.

Resource Configuration Add-in (RCA) Window

The RCA provides three major functions:

- Creates representations of devices (ISA cards) that cannot be discovered by the system
- Modifies the contents of the system by adding and removing devices
- Modifies the resources used by devices

You can use the RCA window to define an ISA card or add an ISA card by clicking on the appropriate button. Removing an ISA card requires that the card be highlighted in the Devices section of the screen before clicking on the button. You can only add as many ISA cards as you have ISA slots available.

1. From the SSU main window, launch the RCA by selecting the “Resources” task under the RCA heading in the task box.
2. When the RCA window appears, it displays messages similar to the following:

```
Baseboard:  Server board Server board
PCI Card:  Bus 00 dev 00 -- Host Processor Bridge
PCI Card:  Bus 00 dev 0D -- Multifunction Controller
PCI Card:  Bus 00 dev 0F -- Ethernet Controller
PCI Card:  Bus 00 dev 12 -- Multifunction Controller
PCI Card:  Bus 00 dev 14 -- VGA Controller
```

3. To configure a device, select its name in the Devices section of the RCA window, and press the spacebar or <Enter>, or click on it.
4. It is possible to close the RCA window and return to the AF by clicking on the Close button. Any changes made will be kept in memory for use by the RCA when it is rerun.
5. Save all the changes made by clicking on the Save button. Saving writes your current configuration to nonvolatile storage where it will be available to the system after every reboot.
6. Closing the window by clicking on the system menu, the dash in the upper left corner, discards all changes.

Defining an ISA Card

An ISA card usually comes with a vendor created .CFG file that specifies the resources the card requires to function properly. If the .CFG file is unavailable, you must manually create it or define the card through the SSU. Defining an ISA card consists of specifying the name of the card and the resources it consumes. This allows the RCA to consider the ISA card resource requirements when the RCA tries to resolve conflicts. The information is also used by the system BIOS to configure the hardware when the system is booted.

1. To add or remove ISA card resources, click on the appropriate resource buttons, select the desired value, and click on Add or Remove.
2. After you complete the necessary information, click on Save.
3. To edit a card, click on Load to retrieve the card information. After making changes, click on Save.
4. To create a card, click on New.
5. To remove a current definition of a card, click on Delete.

Adding and Removing ISA Cards

Adding and removing cards through the RCA provides a way for the RCA to run its conflict detection algorithms on the resources requested by the cards. This alerts you to any possible problems with that particular card in the current configuration.

- **To add an ISA card:**
 1. Click on Add ISA Card in the RCA window.
 2. Specify the directory for the .CFG file.
 3. Select the file and click on Ok.
- **To remove an ISA card:**
 1. Select a valid ISA card in the Devices section of the RCA window.
 2. Click on Remove ISA Card.

Modifying Resources

Modifying the resources of a device may be necessary to accommodate certain operating systems, applications, and drivers. It may also be necessary to modify resources to resolve a conflict.

- **To modify the resources associated with a device:**
 1. Highlight the device in the Devices section of the RCA window.
 2. Press the spacebar or <Enter>, or double click on the entry.
This displays the functions of the selected device along with possible choices and the resources associated with those choices.
- **To make a modification:**
 1. Highlight the function in the Configuration window.
 2. Press the spacebar or <Enter>, or double click on the entry (this updates the Choice and resource lists).
 3. Press the tab key to get to the Choice list, and press <Enter>.
 4. Use the arrow keys to select a proper choice, and press <Enter> again.
 5. If the choice allows multiple possible values for a particular resource, use the hot key to select a resource, and press the spacebar or double click on the resource.
 6. Select the desired resource, and click on Ok.

System Resource Usage

Clicking on the Resource Use button in the Configuration window displays the System Resource Usage window. This window shows what resources each device is consuming. This information is useful for choosing resources if a conflict occurs. Devices can be organized according to the resources you want to examine using the options in the Resource section of the screen. The resource information can also be written to a plain text file through this window.

Multiboot Options Add-in

Under this window you can change the boot priority of a device.

1. Select a device.
2. Press the + button to move it up in the list. Press the - button to move it down.

Security Add-in

Under this window, you can set the User and Administrator passwords, and security options.

To Set the User Password

1. Click on the user password button.
2. Enter the password in the first field.
3. Confirm the password by entering it again in the second field.

To Change or Clear the User Password

1. Click on the User password button.
2. Enter the old password in the first field.
3. Enter the new password in the second field (or leave blank to clear).
4. Confirm the password by entering it again in the second field (or leave blank to clear).

To Set the Administrator Password

1. Click on the Administrator password button.
2. Enter the password in the first field.
3. Confirm the password by entering it again in the second field.

To Change or Clear the Administrator Password

1. Click on the Administrator password button.
2. Enter the old password in the first field.
3. Enter the new password in the second field (or leave blank to clear).
4. Confirm the password by entering it again in the second field (or leave blank to clear).

Security Options

Under this window, you can set the other security options:

- **Hot Key** - Set a key sequence that, when pressed, will drop the server into secure mode.
- **Lock-Out Timer** - Set an interval that, if no activity takes place during it, will drop the server into secure mode.
- **Secure Boot Mode** - Force the server to boot directly into secure mode.
- **Video Blanking** - Turn off the video when the server is in secure mode.
- **Floppy Write** - Control access to the diskette drive while the server is in secure mode.
- **Reset/Power Switch Locking** - Control the power and reset buttons while the server is in secure mode.

SEL Manager Add-in

Clicking on the SEL Manager Add-in task brings up the Server Event Log (SEL) viewer. You can load and view the current SEL data stored in the BMC, save the currently loaded SEL data to a file, view previously saved SEL data, or clear the SEL. The SEL Viewer has the following menus:

File

The File menu has the following options:

- **Load SEL...** View data from a previously saved SEL file.
- **Save SEL...** Save the currently loaded SEL data to a file.
- **Clear SEL** Clears the SEL data from the BMC.
- **Exit** Quits the SEL Viewer.

View

The View menu has the following options:

- **SEL Info** Displays information about the SEL. These fields are display only.
- **All Events** Displays the current SEL data from the BMC.
- **By Sensor** Brings up a pop-up menu that allows you to view only the data from a certain sensor type.
- **By Event** Brings up a pop-up menu that allows you to view only the data from a certain event type.

Settings

The Settings menu has the following options:

- **Display HEX/Verbose** Toggles between the Hex/interpreted mode of displaying the SEL records.
- **Output Text/Binary** Determines whether SEL data will be saved to the file (as under File - Save) in binary format or verbose format.

Help

The Help menu has the following option:

- **About** Displays the SEL Viewer version information.

FRU Manager Add-in

Clicking on the FRU Manager Add-in task brings up the Field Replaceable Unit (FRU) viewer. You can load and view the current FRU data stored in the BMC, save the currently loaded FRU data to a file, view previously saved FRU data. The FRU Viewer has the following menus:

File

The File menu has the following options:

- **Load...** View data from a previously saved FRU file.
- **Save...** Saves the currently loaded FRU data to a file.
- **Save As...** Saves the currently loaded FRU data to a file.
- **Exit** Quits the FRU Viewer.

View

The View menu has the following options:

- **FRU Info** Displays information about the FRU. These fields are display only.
- **All FRU Areas** Displays the current FRU data from the BMC.
- **By Device Type** Brings up a pop-up menu that allows you to view only the data from a certain device type.

Settings

The Settings menu has the following options:

- **Display HEX/Verbose** Toggles between the Hex/interpreted mode of displaying the FRU records.
- **Output Text/Binary** Determines whether FRU data will be saved to the file (as under File - Save) in binary format or verbose format.

Help

The Help menu has the following option:

- **About** Displays the FRU Viewer version information.

SDR Manager Add-in

Clicking on the SDR Manager Add-in task brings up the Sensor Data Record (SDR) viewer. You can load and view the current SDR data stored in the BMC, save the currently loaded SDR data to a file, view previously saved SDR data. The SDR Viewer has the following menus:

File

The File menu has the following options:

- **Load...** View data from a previously saved SDR file.
- **Save...** Saves the currently loaded SDR data to a file.
- **Save As...** Saves the currently loaded SDR data to a file.
- **Exit** Quits the SDR Viewer.

View

The View menu has the following options:

- **SDR Info** Displays information about the SDR. These fields are display only.
- **All Records** Displays the current SDR data from the BMC.
- **By Record Type** Brings up a pop-up menu that allows you to view only the data from a certain record type.

Settings

The Settings menu has the following options:

- **Display HEX/Verbose** Toggles between the Hex/interpreted mode of displaying the SDR records.
- **Output Text/Binary** Determines whether SDR data will be saved to the file (as under File - Save) in binary format or verbose format.

Help

The Help menu has the following option:

- **About** Displays the SDR Viewer version information.

Exiting the SSU

Exiting the SSU causes all windows to close.

1. Exit the SSU by opening the menu bar item **F**ile in the SSU Main window.
2. Click on Exit.

or

Highlight Exit, and press <Enter>.

Emergency Management Port Console

The Emergency Management Port (EMP) Console is a software application designed to run on a Windows 95 or Windows NT 4.0 workstation and provides a server administrator's interface to the Emergency Management Port (EMP) of the C440GX+ server. This interface allows remote server management via a modem or direct connection.

The server control operations available with EMP Console are:

- Connecting to remote servers
- Powering the server on or off
- Resetting the server

The EMP Console uses three management plug-ins to monitor the server:

- SEL Viewer
- SDR Viewer
- FRU Viewer

The EMP Console also has Phonebook plug-in that can be used to create and maintain a list of servers and their phone numbers.

The EMP Console software utility is on the C440GX+ resource CD that ships with the product. It can be installed directly from the CD onto a workstation or from diskettes that can be created by booting to the ROM-DOS operating system, also on the CD, and selecting Create Diskettes.

How EMP Console Works

The EMP shares use of the COM2 port with the system on the server. When the EMP has control of the port, the port operates in command mode. When the system has control, the port operates in console redirect mode. When connecting to a server, the EMP Console checks to determine the mode of the COM2 port. The following discussion covers how EMP Console functions in each mode:

- *Command mode* is the default COM2 state. In this state, EMP Console communicates with the server's firmware, allowing the client to remotely reset or power the server up or down. The client can also view the server's System Event Log (SEL), Field Replaceable Unit (FRU) information, or Sensor Data Record (SDR) table.
- In *console redirect mode*, EMP Console serves as a PC ANSI terminal window for BIOS console redirection. Commands typed in this terminal window are transmitted through BIOS to the server's console, and text displayed on the server console is displayed on the EMP Console's terminal window. In this mode, you can remotely view boot messages, access BIOS setup, and run DOS text mode applications through the EMP Console's terminal window.

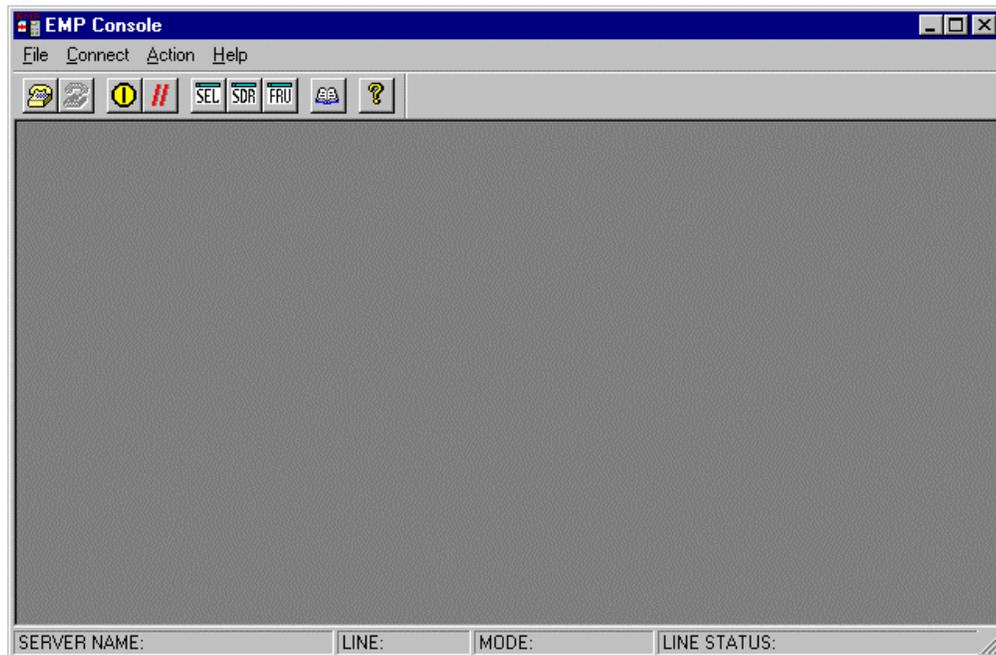


Figure 15. EMP Console in Command State

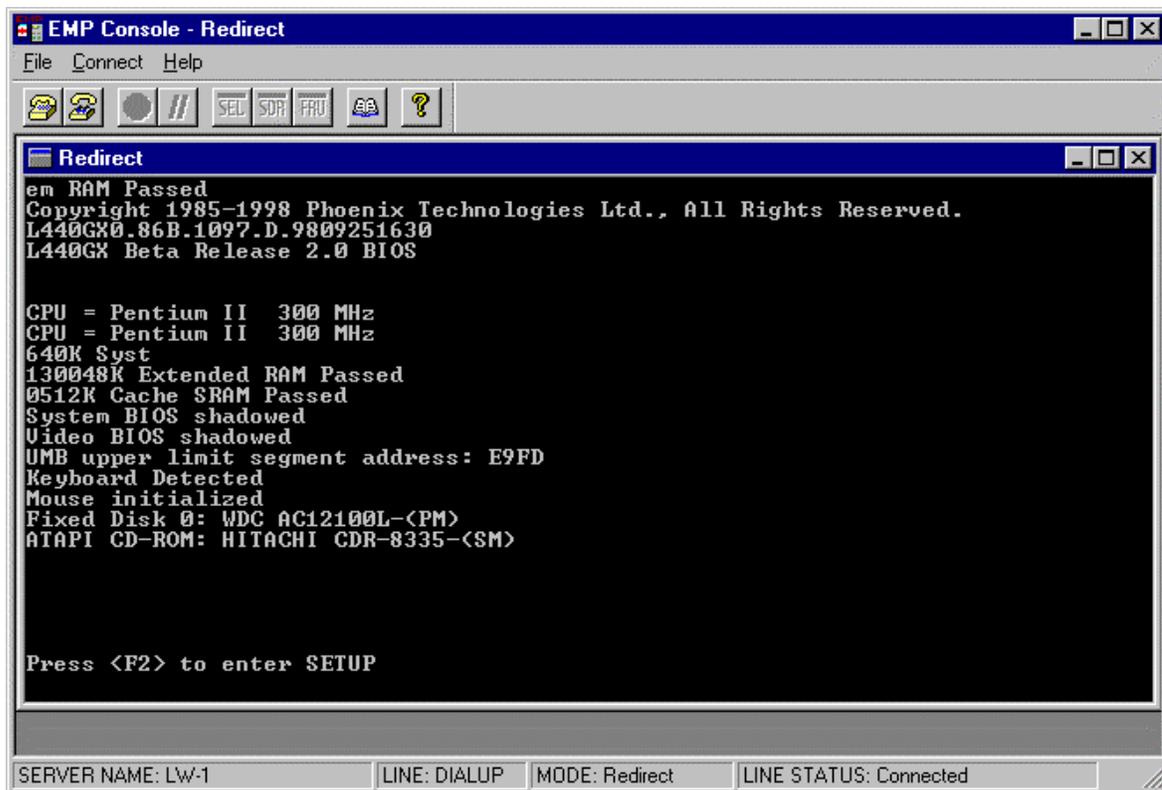


Figure 16. EMP Console in Redirect State

Figure 16 shows EMP Console window in redirect mode with the terminal window. The text that appears on the server monitor displays in the Redirect window.

Availability of the various EMP Console features are determined by two factors: the BIOS EMP access mode and if the server's COM2 port is configured for console redirection. The three EMP access modes are disabled, pre-boot, and always active.

Table 6. EMP Console Access Modes (Server configured for console redirection)

| Mode | Server is powered off | During BIOS POST | After OS boots |
|---------------|---------------------------------------|------------------|------------------------|
| Disabled | Redirect window appears, but is blank | Redirect window | Redirect window |
| Pre-boot | EMP commands available | Redirect window* | Redirect window |
| Always Active | EMP commands available | Redirect window* | EMP commands available |

* The operation mode can be modified by selections in the Reset and Power on/off dialogs. These are server control dialogs available in EMP Console.

Table 7. EMP Console Access Modes (Server not configured for console redirection)

| Mode | Server is powered off | During BIOS POST | After OS boots |
|---------------|---------------------------------------|---------------------------------------|---------------------------------------|
| Disabled | Redirect window appears, but is blank | Redirect window appears, but is blank | Redirect window appears, but is blank |
| Pre-boot | EMP commands available | EMP commands available | Redirect window appears, but is blank |
| Always Active | EMP commands available | EMP commands available | EMP commands available |

Requirements

This section outlines the requirements and configurations necessary for using EMP Console.

Operating Systems:

- Windows 95 or Windows 98
 - 16 MB of RAM, 32 MB recommended
 - 20 MB disk space
- Windows NT
 - Windows NT 4.0
 - 24 MB of RAM, 32 MB recommended
 - 20 MB disk space

Client Configuration: EMP Console supports all COM ports on the client system, along with any Windows NT/95 compatible modem.

Server Configuration: EMP Console requires the server's COM2 port to be connected to an external modem or directly connected to a serial cable.

Direct Connect Configuration: A null modem serial cable is needed. Connect one end of the cable to the COM2 port of server and the other to a port on the client machine.

Modem Configuration: On the client, EMP Console uses the Windows Application Program Interface (API) to determine if a modem is connected and available. The EMP Console does not configure the modem; it should be preconfigured through Windows.

For modem support, the server must use a Hayes compatible modem that supports a baud rate of 19.2k. The modem must be on the Windows 95 or NT Hardware Compatibility List provided by Microsoft. The server modem must be set in auto-answer mode for EMP Console to be able to connect to it.

Setting up the Server for the EMP

To use the EMP, you must configure the server's BIOS with specific settings. These settings are found in two submenus of the BIOS Server menu, the System Management Submenu and the Console Redirection submenu. The BIOS settings section, found earlier in this document, shows all the available options. This section focuses on the settings that must be configured in order to use the EMP.

System Management Submenu

All EMP related settings occur in the Server main menu. Change only the items below; all other default settings should remain the same.

EMP Password Switch & EMP Password: Anytime an attempt to initiate a connection is made, a prompt for the user password appears. If no EMP password is setup, then anyone can access the EMP by clicking OK.

In the EMP Password area of the Server menu, the EMP Password Switch option must be set to enable. Then type in a password of up to eight alphanumeric characters. If a beep is heard, the password was accepted.

EMP Access Modes: Choose either Disabled, Pre-boot, or Always Active, depending on the type of EMP access needed. The tables above show what is available with a given setting.

EMP Restricted Mode Access: Set Restricted Mode to either enabled or disabled as needed. If in enabled mode, this means that EMP Console's server control options, Power off and Reset, are unavailable, except power on. In disabled mode, these same server control options are available.

EMP Direct Connect/Modem Mode: Select Direct Connect if a null modem serial cable directly connects the server's COM2 port to the EMP Console client machine. If they are connected via a modem, select Modem Mode.

Console Redirection Submenu

The settings in the Console Redirection Submenu of the Server menu must be set exactly as noted to be able to use the EMP.

COM Port Address: Select 2F8. This is the COM2 port that must be used by the EMP. The IRQ# setting is automatically populated with the correct number based on the COM Port Address choice.

Baud Rate: Select 19.2k.

Flow Control: Choose CTS/RTS + CD.

Main EMP Console Window

The main EMP Console window provides a graphical user interface (GUI) to access server control operations and to launch the management plug-ins. At the top of the window is the menu and tool bar. These provide the options to initiate plug-ins and other support features. A status bar at the bottom displays connection information such as server name, line status, and mode.

Toolbar

The tool bar buttons of the EMP Console main window combine server control and management plug-in commands available from both the Connect and Action menus as follows:

| | |
|---|---|
|  | Displays the Connect dialog to allow connection to a selected server. |
|  | Disconnects from the currently connected server. |
|  | Displays the Power On/Off dialog. |
|  | Displays the Reset dialog. |
|  | Launches the SEL Viewer. |
|  | Launches the SDR Viewer. |
|  | Launches the FRU Viewer. |
|  | Displays the Phonebook Dialog. |
|  | Displays the online help. |

Status Bar

The status bar is displayed at the bottom of the main window. It contains the following status information:

- **SERVER NAME:** The name of the connected server when connecting via modem.
- **LINE:** The type of line connection. This is either direct or modem.
- **MODE:** Either Redirect of EMP, depending on whether the EMP has control of the COM2 port.
- **LINE STATUS:** Gives status information about the server connection. For example, if a server is connected, the status bar says "Connected." Otherwise, the line is blank.

EMP Console Main Menu

- **File**
 - **Exit** - exits EMP Console
- **Connect**
 - **Disconnect** - disconnects the server connection.
 - **[Re]Connect** - displays the connect dialog.
 - A list of the five most recent modem connections. Click on one of these server names to initiate a connection.
- **Action**
 - **Power On/Off** - displays the Power on/off dialog.
 - **Reset** - displays the Reset dialog.
 - **SEL Viewer** - displays the SEL Viewer.
 - **SDR Viewer** - displays the SDR Viewer.
 - **FRU Viewer** - displays the FRU Viewer.
 - **Phonebook** - displays the Phonebook dialog.
- **Help**
 - **Help Topics** - help topics for EMP Console.
 - **Help About** - provides version information.

Server Control Operations

Three server control operations are available from the menu or toolbar in EMP Console: remote server connection, powering the server on and off, and resetting the server. The server console mode can also be switched between EMP active and BIOS redirect modes through post-power-up and reset options.

Connect

When [Re]Connect is selected from the Connect menu, the Connect dialog in Figure 17 is displayed. This dialog allows you to connect to a server. If the client machine is already connected to a server, initiating connection generates a warning message. The message indicates that the existing connection will be terminated if you continue trying to initiate the new connection. You are prompted to enter the EMP password whenever a connection is attempted.

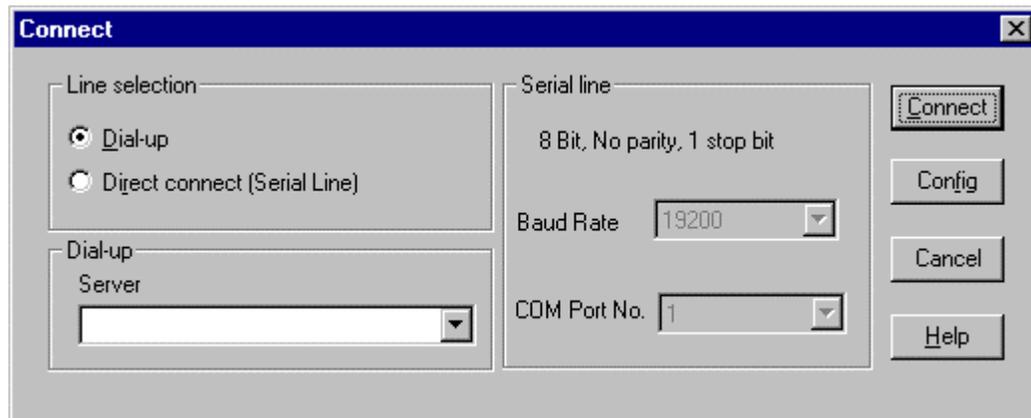


Figure 17. Connect Dialog

Options available in the dialog are:

- **Line Selection** - you can specify whether to use a direct connection or dial-up modem connection to the server.
 - **Dial-up** - connects to a selected server with a modem.
 - **Direct connect (Serial Line)** - connects to the selected server directly using a null modem serial cable.
- **Server** - a server name can be selected from the dropdown list of available servers. A server must be selected when the line selection is Dial-up.
- **Serial Line** - these options are enabled when the line selection is set to Direct connect (Serial Line).
 - **Baud Rate** - must be 19200 for EMP to connect properly.
 - **COM Port No.** - set the COM Port number to the port which the null modem serial cable is connected to.
- **Connect** - initiates the connection to the connected server. When this button is clicked, you are prompted for the EMP password.
- **Config** - displays the Phonebook dialog.
- **Cancel** - exits the Connect dialog without taking any action.
- **Help** - displays the help information for this dialog.

Power On/Off

Selecting Power On/Off from the Action menu displays the Power on/off dialog. This dialog provides commands to remotely power on or power off the server.

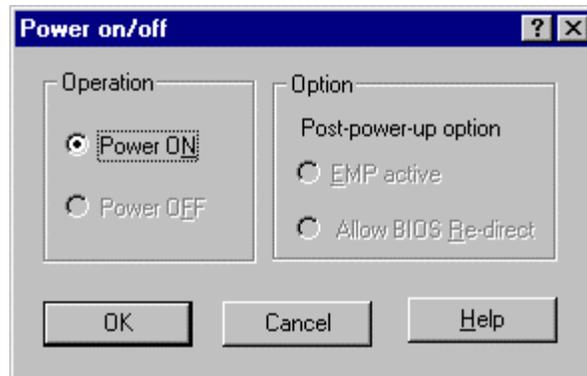


Figure 18. Power On/Off Dialog

Options available in the dialog are:

- **Power ON** - powers on the server.
- **Power OFF** - powers off the server. This option is not allowed if the server is configured in RESTRICTED mode for EMP operations.
- **Post-power-up option** - sets the mode selection of the server to EMP active or BIOS redirection. The setting is available after the next power-up. The default selection is EMP active.
- **Cancel** - exits the Connect dialog without taking any action.
- **Help** - displays the help information for this dialog.

Reset

Selecting Reset from the Action menu displays the Reset dialog. This dialog provides the ability to remotely reset the server with post-reset options.

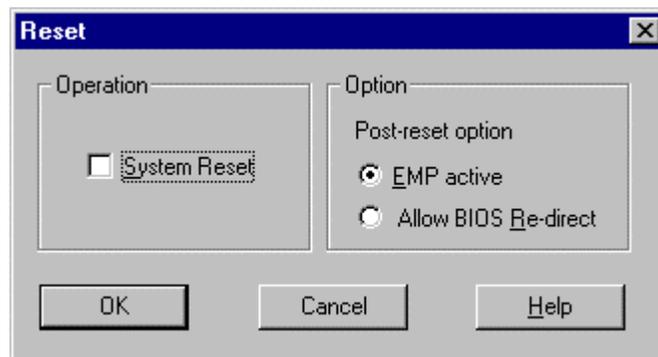


Figure 19. Reset Dialog

Options available in the dialog are:

- **System Reset** - resets the server with the selected post-reset options. This operation is not allowed if the server is configured in RESTRICTED mode for EMP operations.
- **Post-reset option** - sets the post-reset option that will be in effect after reset. The options are EMP active or BIOS redirection. The default selection is EMP active.
- **Cancel** - exits the Connect dialog without taking any action.
- **Help** - displays the help information for this dialog.

Phonebook

EMP Console provides a support plug-in known as the Phonebook. The Phonebook stores names and numbers of servers in a list that can be updated by adding, modifying or deleting entries. The Phonebook can be opened from the main menu and toolbar, or launched from the Connect dialog by clicking the Config button.

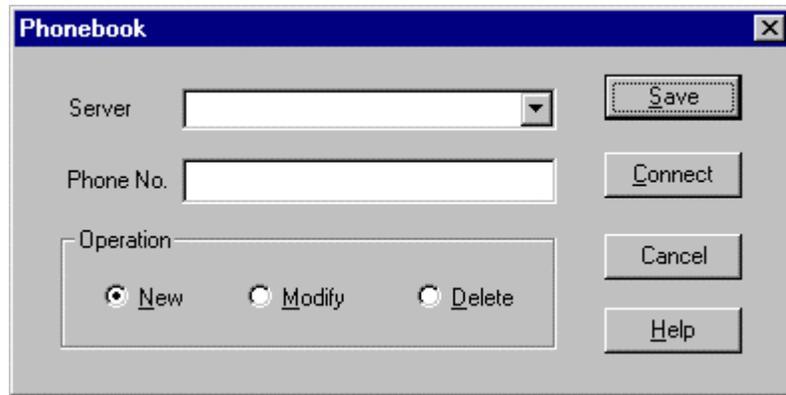


Figure 20. Phonebook Dialog

Options available in the dialog are:

- **Server** - a dropdown list of server names stored in the Phonebook. If the New radio button is selected in the Operation area, this area is cleared.
- **Phone No.** - the number of the selected server. If the New radio button is selected in the Operation area, this area is cleared.
- **Operation**
 - **New** - lets you add a new entry in the Phonebook. Selecting this option clears the Server and Phone No. fields. You must click Save for the entry to be added to the Phonebook.
 - **Modify** - lets you edit an existing entry. You must select an existing entry from the Server dropdown list box and modify the existing phone number before selecting this option. Click Save in order to update the entry in the phonebook.
 - **Delete** - lets you delete an entry from the Phonebook. You must first select an existing server from the Server dropdown list box before selecting this option. You must click Save for the entry to be deleted.
- **Save** - saves a new or modified Phonebook entry, or deletes an entry if the Delete radio button is selected.

- **Connect** - displays the Connect dialog with the server from the Phonebook's Server dropdown list box already populating the Connect dialog's Server field.
- **Cancel** - exits the Connect dialog without taking any action.
- **Help** - displays the help information for this dialog.

Management Plug-ins

SEL Viewer

The SEL Viewer provides access to the System Event Log on the server and can display records in either hexadecimal or text (verbose) form. Options available through the SEL Viewer are:

- View the SEL from a saved file
- Save the SEL to a file
- View SEL summary info
- View all SEL entries
- View SEL entries by sensor type
- View SEL entries by event type
- Set SEL display mode to either Hex or verbose mode
- Set the SEL output file format to either text or binary format
- Close the SEL Viewer
- Exit the EMP Console

SEL Viewer Menu Options

The following menu options are found on the SEL Viewer menu bar:

- **File**
 - **Open** - views SEL data from a previously saved file if it was stored in binary format. Selecting the Open menu item allows you to specify a filename under which the data is found. If the file cannot be opened, the program displays an error message.
 - **Close** - closes the SEL Viewer.
 - **Save** - saves the SEL events to a file in either binary raw or verbose text format. The binary file may be retrieved later. Once data has been saved to a file, selecting this option will save the data to the previously saved file. If no SEL events have been retrieved, then this menu option is not available.
 - **Save As** - saves the SEL events to a new file in either binary raw or verbose text format. The binary file may be retrieved later. Selecting this option lets you specify a filename to which the data will be saved. If no SEL events have been retrieved, then this menu option is not available.
 - **Exit** - exits the EMP Console.
- **View**
 - **SEL Information** - displays SEL summary information as returned by the server.
 - **All Events** - displays all events in the SEL.
 - **By Sensor Type** - displays all events in the SEL generated by a specific sensor type such as voltage, temperature, etc. A submenu lets you select the sensor type to be displayed.

- **By Event** - displays all the events in the SEL of a particular event type; for example, threshold, digital, or discrete. A pop-up menu lets you select the event type to be displayed.
- **Settings** - changes several operating parameters for the SEL Viewer. This menu displays the following suboptions:
 - **Display HEX/Verbose** - toggles between HEX mode and interpreted mode of displaying SEL records.
 - **Output Text/Binary** - toggles between whether the SEL events will be saved to the file in binary format or verbose format.
- **Window** - gives options for displaying currently open windows.
- **Help**
 - **Help Topics** - help topics for EMP Console.
 - **Help About** - provides version information.

SDR Viewer

The SDR Viewer lets you view the Sensor Data Records from the SDR repository. Options available through the SDR Viewer are:

- View all SDR records
- View SDR entries by SDR type
- View SDR summary info
- Set SDR display mode to either Hex or verbose mode
- Close the SDR Viewer
- Exit the EMP Console

SDR Viewer Menu Options

The following menu options are found on the SDR Viewer menu bar:

- **File**
 - **Close** - closes the SDR Viewer.
 - **Exit** - exits the EMP Console.
- **View**
 - **Display all Records** - displays all records from the SDR repository.
 - **SDR Type** - displays the records of a particular SDR type. Select an SDR type from a pop-up menu that displays all the SDR types available for the given hardware.
 - **SDR Information** - displays the SDR summary information as returned by the server.
- **Settings** – changes the operating parameters for the SDR Viewer. This menu displays the following suboption:
 - **Display HEX/Verbose** - toggles between HEX mode and interpreted mode of displaying SDR records.
- **Window** - gives options for displaying currently open windows.
- **Help**
 - **Help Topics** - help topics for EMP Console.
 - **Help About** – provides version information.

FRU Viewer

The FRU Viewer allows you to view the server's FRU (Field Replaceable Unit) data from the server's Front Panel FRU information area. The options available in the FRU Viewer are:

- View all FRU records
- View FRU summary info
- Set FRU display mode to either Hex or verbose mode
- Close the FRU Viewer
- Exit EMP Console

FRU Viewer Menu Options

The following menu options are found on the FRU Viewer menu bar:

- **File**
 - **Close** - closes the FRU Viewer.
 - **Exit** - exits EMP Console.
- **View**
 - **Display all Records** - displays all FRU data, which consists of chassis, board, and product information.
 - **FRU Information** - displays the FRU summary information as returned by the server.
- **Settings** - changes operating parameters for the FRU Viewer. This menu displays the following options:
 - **Display HEX/Verbose** - toggles between HEX mode and interpreted mode of displaying FRU records.
- **Window** - gives options for displaying currently open windows.
- **Help**
 - **Help Topics** - help topics for EMP Console.
 - **Help About** - provides version information.

FRUSDR Load Utility

The Field Replacement Unit (FRU) and Sensor Data Record (SDR) Load Utility is a DOS-based program used to update the server management subsystem's product level FRU, SDR, and the Desktop Management Interface (DMI) nonvolatile storage components (EEPROMs). The load utility

- discovers the product configuration based on instructions in a master configuration file
- displays the FRU information
- updates the nonvolatile storage device (EEPROM) associated with the Baseboard Management Controller (BMC) that holds the SDR and FRU area
- updates the DMI area located in the BIOS nonvolatile storage device
- generically handles FRU devices that may not be associated with the BMC

When to Run the FRUSDR Load Utility

You should run the FRUSDR Load Utility each time you upgrade or replace the hardware in your server, excluding add-in boards, hard drives, and RAM. For example, if you add additional fans, you need to run the utility. It programs the sensors that need to be monitored for server management.

Because the firmware must reload to properly initialize the sensors after programming, turn the server off and remove the AC power cords from the server. Wait approximately 30 seconds, and reconnect the power cords.

What You Need to Do

The FRUSDR Load Utility may be run directly from the Configuration Software CD or from a diskette you create from the CD. It can be extracted from the CD by booting to the CD and selecting "Make Diskettes" or by inserting the CD into a PC running Windows 95 or NT and selecting the "Utilities" section.

⇒ NOTE

If your diskette drive is disabled, or improperly configured, you must use BIOS Setup to enable it. If necessary, you can disable the drive after you are done with the FRUSDR utility.

How You Use the FRUSDR Load Utility

This utility is compatible with ROM-DOS Ver. 6.22, MS-DOS[†] Ver. 6.22, and later versions. The utility accepts CFG, SDR and FRU load files. The executable file for the utility is frusdr.exe. The utility requires the following supporting files:

- one or more .fru files describing the system's field replaceable units
- a .cfg file describing the system configuration
- a .sdr file describing the sensors in the system

Command Line Format

The basic command line format is

```
frusdr [/?] [/h] [/d {dmi, fru, sdr}] [/cfg filename.cfg] /p
```

| Command | Description |
|--------------------|-------------------------------|
| frusdr | Is the name of the utility. |
| /? or /h | Displays usage information. |
| /d {dmi, fru, sdr} | Only displays requested area. |
| /cfg filename.cfg | Uses custom CFG file. |
| /p | Pause between blocks of data. |

Parsing the Command Line

The FRUSDR Load Utility allows only one command line function at a time. A command line function may consist of two parameters; for example, cfg filename.cfg. Any invalid parameters result in displaying an error message and exiting the program. You can use either a slash (/) or a minus sign (-) to specify command line options. The /p flag may be used in conjunction with any of the other options.

Displaying Usage Information

When the utility is run with the /? or /h command line flags, the following message is displayed:

```
FRU & SDR Load Utility Version 3.0
```

```
Usage:  frusdr                Is the name of the utility.
        /? Or /h              Displays usage information.
        /d {dmi,fru,sdr}      Only displays requested area.
        /cfg filename.cfg     Uses custom CFG file.
        /p                    Pause between blocks of data.
```

Displaying a Given Area

When the utility is run with the /d DMI, /d FRU, or /d SDR command line flag, the indicated area is displayed. If the given display function fails because of an inability to parse the data present or a hardware failure, the utility displays an error message and exits.

Displaying DMI Area

The DMI area is displayed in ASCII format when the field is ASCII or as a number when the field is a number. Each DMI area displayed is headed with the DMI area designated name. Each field has a field name header followed by the field in ASCII or as a number.

Displaying FRU Area

The FRU area is displayed in ASCII format when the field is ASCII or as a number when the field is a number. Each FRU area displayed is headed with the FRU area designated name. Each field has a field name header followed by the field in ASCII or as a number. The Board, Chassis, and Product FRU areas end with an END OF FIELDS CODE that indicates there is no more data in this area. The Internal Use area is displayed in hex format, 16 bytes per line.

Displaying SDR Area

The SDR nonvolatile storage area is displayed in the following hex format. The data is separated by a Sensor Record Number X header, where X is the number of that sensor record in the SDR area. The next line after the header is the sensor record data in hex format delineated by spaces. Each line holds up to 16 bytes. The data on each line is followed by the same data in ASCII format; nonprintable characters are substituted by a period (.).

Using Specified CFG File

The utility can be run with the command line parameter of `-cfg filename.cfg`. The filename can be any DOS accepted, eight-character filename string. The utility loads the specified CFG file and uses the entries in the configuration file to probe the hardware and to select the proper SDRs to load into nonvolatile storage.

Displaying Utility Title and Version

The utility displays its title:

```
FRU & SDR Load Utility, Version 3.0
```

Where X.XX is the revision number for the utility.

Configuration File

The configuration file is in ASCII text. The utility executes commands formed by the strings present in the configuration file. These commands cause the utility to perform various tasks needed to ultimately load the proper SDRs into the nonvolatile storage of the BMC. Some of the commands may be interactive and require you to make a choice.

Prompting for Product Level FRU Information

Through the use of a Configuration File, the utility may prompt you for information to determine the system configuration in order to properly program the FRU areas and the SDR repository.

Filtering Sensor Data Record From the SDR File

The MASTER.SDR file has all the possible SDRs for the system. These records may need to be filtered based on the current product configuration. The configuration file directs the filtering of the SDRs.

Updating the SDR Nonvolatile Storage Area

After the utility validates the header area of the supplied SDR file, it updates the SDR repository area. Before programming, the utility clears the SDR repository area. The SDR file is loaded via the .cfg File. Then the utility filters all tagged SDRs depending on the product configuration set in the Configuration File. Nontagged SDRs are automatically programmed.

Updating FRU Nonvolatile Storage Area

After the configuration is determined, the utility updates the FRU nonvolatile storage area. First it verifies the Common Header area and checksum from the specified FRU file. The Internal Use Area is read out of the specified .FRU file and is programmed into the nonvolatile storage. The Chassis, Board, Product and MultiRecord areas are read out of the specified .FRU file, if they exist, then those areas are programmed into the FRU nonvolatile storage.

Updating DMI FRU Nonvolatile Storage Area

After programming the BMC FRU nonvolatile storage area, and when directed by the Configuration file, the utility then programs the following Chassis, Board, and Product FRU information to the DMI BIOS area.

If a failure occurs, the utility displays an error message and exits.

Cleaning Up and Exiting

If an update was successfully performed, the utility displays an appropriate message and then exits with a DOS exit code of zero.

If the utility fails, it immediately exits with an error message and a non-zero DOS exit code.

Upgrading the BIOS

Preparing for the Upgrade

Before you upgrade the BIOS, prepare for the upgrade by recording the current BIOS settings, obtaining the upgrade utility, and making a copy of the current BIOS.

Recording the Current BIOS Settings

1. Boot the computer and press <F2> when you see the message:
`Press <F2> Key if you want to run SETUP`
2. Write down the current settings in the BIOS Setup program.

⇒ NOTE

Do not skip step 2. You will need these settings to configure your computer at the end of the procedure.

Obtaining the Upgrade Utility

You can upgrade to a new version of the BIOS using the new BIOS files and the BIOS upgrade utility, iFLASH.EXE. You can obtain the BIOS upgrade file and the iFLASH.EXE utility through your computer supplier or from the Intel Customer Support website:
<http://support.intel.com/support/motherboards/server/C440gx>

⇒ NOTE

Please review the instructions distributed with the upgrade utility before attempting a BIOS upgrade.

This upgrade utility allows you to:

- Upgrade the BIOS in flash memory.
- Update the language section of the BIOS.

The following steps explain how to upgrade the BIOS.

Creating a Bootable Floppy Diskette

1. Use a DOS or Windows 95 system to create the floppy disk.
2. Insert a floppy disk in floppy drive A.
3. At the C:\ prompt, for an unformatted floppy disk, type:
`format a: /s`
or, for a formatted floppy disk, type:
`sys a:`
4. Press <Enter>

Creating the BIOS Upgrade Floppy Diskette

The BIOS upgrade file is a compressed self-extracting archive that contains the files you need to upgrade the BIOS.

1. Copy the BIOS upgrade file to a temporary directory on your hard disk.
2. From the C:\ prompt, change to the temporary directory.
3. To extract the file, type the name of the BIOS upgrade file, for example:
10006BI1.EXE
4. Press <Enter>. The extracted file contains the following files:
LICENSE.TXT
README.TXT
BIOS.EXE
5. Read the LICENSE.TXT file, which contains the software license agreement and the README.TXT file, which contains the instructions for the BIOS upgrade.
6. Insert the bootable floppy disk into drive A.
7. To extract the BIOS.EXE file to the floppy disk, change to the temporary directory that holds the BIOS.EXE file and type:
BIOS A:
8. Press <Enter>.
9. The floppy disk now holds the BIOS upgrade and recovery files.

Upgrading the BIOS

1. Boot the computer with the floppy disk in drive A. The BIOS upgrade utility screen appears.
2. Select Update Flash Memory From a File.
3. Select Update System BIOS. Press <Enter>.
4. Use the arrow keys to select the correct .bio file. Press <Enter>.
5. When the utility asks for confirmation that you want to flash the new BIOS into memory, select Continue with Programming. Press <Enter>.
6. When the utility displays the message upgrade is complete, remove the floppy disk. Press <Enter>.
7. As the computer boots, check the BIOS identifier (version number) to make sure the upgrade was successful.
8. To enter the Setup program, press <F2> when you see the message:
Press <F2> Key if you want to run SETUP
9. For proper operation, load the Setup program defaults. To load the defaults, press <F9>.
10. To accept the defaults, press <Enter>.
11. Set the options in the Setup program to the settings you wrote down before the BIOS upgrade.
12. To save the settings, press <F10>.
13. To accept the settings, press <Enter>.
14. Turn off the computer and reboot.

Recovering the BIOS

It is unlikely that anything will interrupt the BIOS upgrade; however, if an interruption occurs, the BIOS could be damaged. The following steps explain how to recover the BIOS if an upgrade fails. The following procedure use recovery mode for the Setup program.

⇒ NOTE

Because of the small amount of code available in the nonerasable boot block area, there is no video support. You will not see anything on the screen during the procedure. Monitor the procedure by listening to the speaker and looking at the floppy drive LED.

1. Turn off all peripheral devices connected to the computer. Turn off the computer.
2. Remove the computer cover.
3. Locate jumper block J3J2.
4. Move the Recovery Boot jumper from pins 9-10 to pins 10-11 (see Figure 23 on page 107).
5. Insert the bootable BIOS upgrade floppy disk into floppy drive A.
6. Replace the cover, turn on the computer, and allow it to boot. The recovery process will take a few minutes.
7. Listen to the speaker.
8. Two beeps and the end of activity in drive A indicate successful BIOS recovery.
9. A series of continuous beeps indicates failed BIOS recovery.
10. If recovery fails, return to step 1 and repeat the recovery process.
11. If recovery is successful, turn off the computer. Remove the computer cover and continue with the following steps.
12. Move the Recovery Boot jumper back to pins 9-10.
13. Replace the computer cover. Leave the upgrade disk in drive A and turn on the computer.
14. Continue with the BIOS upgrade (see page 86).

Changing the BIOS Language

You can use the BIOS upgrade utility to change the language the BIOS uses for messages and the Setup program. Use a bootable floppy disk containing the Intel flash utility and language files.

1. Boot the computer with the bootable floppy disk in drive A. The BIOS upgrade utility screen appears.
2. Select `Update Flash Memory From a File`.
3. Select `Update Language Set`. Press `<Enter>`.
4. Select drive A and use the arrow keys to select the correct `.lng` file. Press `<Enter>`.
5. When the utility asks for confirmation that you want to flash the new language into memory, select `Continue with Programming`. Press `<Enter>`.
6. When the utility displays the message `upgrade is complete`, remove the floppy disk. Press `<Enter>`.
7. The computer will reboot and the changes will take effect.

Using the Firmware Update Utility

The Firmware Update Utility is a DOS-based program used to update the Baseboard Management Controller's (BMC), the Hot Swap Controller's (HSC), and the Power Share Controller's (PSC) firmware code. You only need to run the Firmware Update Utility if new firmware code becomes necessary.

Running the Firmware Update Utility

1. Create a DOS bootable diskette. The version of DOS must be 6.0 or higher.
2. Place the firmware update utility (FWUPDATE.EXE) and the *.hex file on the diskette. Make a note of the *.hex file name, you will need it later.
3. Insert the diskette into the drive and boot to it.
4. At the DOS prompt, run the executable file (FWUPDATE.EXE).
5. The utility will display a menu screen. Select "Upload Flash."
6. The utility will ask for a file name. Enter the name of the *.hex file.
7. The program will load the file and then ask if it should "Upload Boot Block." Press "N" to continue.
8. The program will next ask if it should "Upload Operational Code." Press "Y" to continue.
9. Once the operational code has been updated and verified, press any key to continue. Then press the "ESC" key to exit the program.
10. Shut the system down and remove any floppy disks that may be in the system.
11. Disconnect the AC power cord from the system and wait 60 seconds.
12. Connect the AC power cord and power up the system.

Installing Video Drivers

After configuring the system, you need to install video drivers to take full advantage of the features of the onboard Cirrus Logic CL-GD5480 super VGA video controller.

- The C440GX+ Resource CD includes video drivers for use with DOS and Windows NT. Check the README.TXT file on the CD for information on installing these drivers.
- For other operating systems, see your OS instructions for installing device drivers.

Using the Adaptec SCSI Utility

The Adaptec SCSI utility detects the SCSI host adapters on the server board. The utility runs out of BIOS and is used to

- Change default values
- Check and/or change SCSI device settings that may conflict with those of other devices in the server

Running the SCSI Utility

1. When this message appears on the video monitor:

`Press Ctrl-A to run SCSI Utility...`

2. Press <Ctrl+A> to run this utility. When it appears, choose the host adapter that you want to configure.

Another Adaptec utility that is available on the C440GX+ Resource CD is the Adaptec EZ SCSI utility. It is designed to be installed from diskettes on to a DOS or Windows operating system.

4 Solving Problems

This chapter helps you identify and solve problems that might occur while you are using the system.

Resetting the System

| To do this: | Press: |
|---|----------------|
| Soft boot reset, which clears system memory and reloads the operating system. | <Ctrl+Alt+Del> |
| Clear system memory, restart POST, and reload the operating system. | Reset button |
| Cold boot reset. Turn the system power off and then on. This clears system memory, restarts POST, reloads the operating system, and halts power to all peripherals. | Power off/on |

Fault Resilient Booting

Fault resilient booting insures the system will not stop from a boot problem. Two sets of timers are implemented in the BMC that will automatically reset the system if the system should halt for some reason.

- FRB 2 - 5 sec timer. If the primary processor does not come up in 5 seconds the system will automatically reset and switch to the secondary processor (if installed). If a second processor is not installed, the system will try to restart off the primary processor.
- FRB 3 - 7 minute timer. If the system does not make it up to the end of POST in 7 minutes, the system will automatically reset and try again. It is assumed that the processor failed regardless of what may have caused the system to hang. The primary processor is taken off line and the system will boot off the secondary (if installed otherwise it will try to restart again off of the primary). Bad memory or a bad plug in card may cause an FRB 3 failure.

All failures are logged to the system event log.

The system will remember all FRB errors and display them at the end of POST until you select the Processor Retest option from the BIOS Setup utility.

Initial System Startup

Problems that occur at initial system startup are usually caused by incorrect installation or configuration. Hardware failure is a less frequent cause.

Checklist

- Are all cables correctly connected and secured?
- Are the processors or processor termination board fully seated in their slots on the server board?
- Are all add-in ISA and PCI boards fully seated in their slots on the server board?
- Are all switch and jumper settings on the server board correct?
- Are all jumper and switch settings on add-in boards and peripheral devices correct? To check these settings, refer to the manufacturer's documentation that comes with them. If applicable, ensure that there are no conflicts—for example, two add-in boards sharing the same interrupt.
- Are all SDRAM DIMMs installed correctly?
- Are all peripheral devices installed correctly?
- If the system has a hard disk drive, is it properly formatted or configured?
- Are all device drivers properly installed?
- Are the configuration settings made with the SSU correct?
- Is the operating system properly loaded? Refer to the operating system documentation.
- Did you press the system power on/off switch on the front panel to turn the server on (power on light should be lit)?
- Is the system power cord properly connected to the system and plugged into a NEMA 5-15R outlet for 100-120 V~ or a NEMA 6-15R outlet for 200-240 V~?
- Is AC power available at the wall outlet?
- Are all integrated components from the tested components lists? Check the tested memory, and chassis lists, as well as the supported hardware and operating system list on the Intel Customer Support website: <http://support.intel.com/support/motherboards/server/C440gx/compat.htm>

Running New Application Software

Problems that occur when you run new application software are usually related to the software. Faulty equipment is much less likely, especially if other software runs correctly.

Checklist

- Does the system meet the minimum hardware requirements for the software? See the software documentation.
- Is the software an authorized copy? If not, get one; unauthorized copies often do not work.
- If you are running the software from a diskette, is it a good copy?
- If you are running the software from a CD-ROM disk, is the disk scratched or dirty?
- If you are running the software from a hard disk drive, is the software correctly installed? Were all necessary procedures followed and files installed?
- Are the correct device drivers installed?
- Is the software correctly configured for the system?
- Are you using the software correctly?

If the problems persist, contact the software vendor's customer service representative.

After the System Has Been Running Correctly

Problems that occur after the system hardware and software have been running correctly often indicate equipment failure. Many situations that are easy to correct, however, can also cause such problems.

Checklist

- If you are running the software from a diskette, try a new copy of the software.
- If you are running the software from a CD-ROM disk, try a different disk to see if the problem occurs on all disks.
- If you are running the software from a hard disk drive, try running it from a diskette. If the software runs correctly, there may be a problem with the copy on the hard disk drive. Reinstall the software on the hard disk, and try running it again. Make sure all necessary files are installed.
- If the problems are intermittent, there may be a loose cable, dirt in the keyboard (if keyboard input is incorrect), a marginal power supply, or other random component failures.
- If you suspect that a transient voltage spike, power outage, or brownout might have occurred, reload the software and try running it again. (Symptoms of voltage spikes include a flickering video display, unexpected system reboots, and the system not responding to user commands.)

⇒ NOTE

Random errors in data files: If you are getting random errors in your data files, they may be getting corrupted by voltage spikes on your power line. If you are experiencing any of the above symptoms that might indicate voltage spikes on the power line, you may want to install a surge suppressor between the power outlet and the system power cord.

More Problem Solving Procedures

This section provides a more detailed approach to identifying a problem and locating its source.

Preparing the System for Diagnostic Testing



CAUTION

Turn off devices before disconnecting cables: Before disconnecting any peripheral cables from the system, turn off the system and any external peripheral devices. Failure to do so can cause permanent damage to the system and/or the peripheral devices.

1. Turn off the system and all external peripheral devices. Disconnect all of them from the system, except the keyboard and video monitor.
2. Make sure the system power cord is plugged into a properly grounded AC outlet.
3. Make sure your video display monitor and keyboard are correctly connected to the system. Turn on the video monitor. Set its brightness and contrast controls to at least two thirds of their maximum ranges (see the documentation supplied with your video display monitor).
4. If the operating system normally loads from the hard disk drive, make sure there is no diskette in drive A. Otherwise, place a diskette containing the operating system files in drive A.
5. Turn on the system. If the power LED does not light, see “Power Light Does Not Light” on page 95.

Monitoring POST

See Chapter 3.

Verifying Proper Operation of Key System Lights

As POST determines the system configuration, it tests for the presence of each mass storage device installed in the system. As each device is checked, its activity light should turn on briefly. Check for the following:

- Does the diskette drive activity light turn on briefly? If not, see “Diskette Drive Activity Light Does Not Light” on page 97.
- If a second diskette drive is installed, does its activity light turn on briefly? If not, see “Diskette Drive Activity Light Does Not Light” on page 97.
- If there is a hard disk drive or SCSI devices installed in the system, does the hard disk drive activity light on the control panel turn on briefly? If not, see “Hard Disk Drive Activity Light Does Not Light” on page 97.

Confirming Loading of the Operating System

Once the system boots up, the operating system prompt appears on the screen. The prompt varies according to the operating system. If the operating system prompt does not appear, see “Initial System Startup” on page 91.

Specific Problems and Corrective Actions

This section provides possible solutions for these specific problems:

- Power light does not light.
- There is no beep or an incorrect beep pattern.
- No characters appear on screen.
- Characters on the screen appear distorted or incorrect.
- System cooling fans do not rotate.
- Diskette drive activity light does not light.
- Hard disk drive activity light does not light.
- CD-ROM drive activity light does not light.
- There are problems with application software.
- The bootable CD-ROM is not detected.

Try the solutions in the order given. If you cannot correct the problem, contact your service representative or authorized dealer for help.

Power Light Does Not Light

Check the following:

- Is the system operating normally? If so, the power LED is probably defective or the cable from the front panel to the server board is loose.
- Are there other problems with the system? If so, check the items listed under “System Cooling Fans Do Not Rotate Properly.”

If all items are correct and problems persist, contact your service representative or authorized dealer for help.

No Characters Appear on Screen

Check the following:

- Is the keyboard functioning? Check to see that the “Num Lock” light is functioning.
- Is the video monitor plugged in and turned on?
- Are the brightness and contrast controls on the video monitor properly adjusted?
- Are the video monitor switch settings correct?
- Is the video monitor signal cable properly installed?
- Is the onboard video controller enabled?

If you are using an add-in video controller board, do the following:

1. Verify that the video controller board is fully seated in the server board connector.
2. Reboot the system for changes to take effect.

3. If there are still no characters on the screen after you reboot the system and POST emits a beep code, write down the beep code you hear. This information is useful for your service representative. See “Port-80 Codes and Countdown Codes” on page 100.
4. If you do not receive a beep code and characters do not appear, the video display monitor or video controller may have failed. Contact your service representative or authorized dealer for help.

Characters Are Distorted or Incorrect

Check the following:

- Are the brightness and contrast controls properly adjusted on the video monitor? See the manufacturer’s documentation.
- Are the video monitor signal and power cables properly installed?

If the problem persists, the video monitor may be faulty or it may be the incorrect type. Contact your service representative or authorized dealer for help.

System Cooling Fans Do Not Rotate Properly

If the system cooling fans are not operating properly, system components could be damaged.

Check the following:

- Is AC power available at the wall outlet?
- Is the system power cord properly connected to the system and the wall outlet?
- Did you press the power button?
- Is the power on light lit?
- Have any of the fan motors stopped (use the server management subsystem to check the fan status)?
- Are the fan power connectors properly connected to the server board?
- Is the cable from the front panel board connected to the server board?
- Are the power supply cables properly connected to the server board?
- Are there any shorted wires caused by pinched cables or power connector plugs forced into power connector sockets the wrong way?

If the switches and connections are correct and AC power is available at the wall outlet, contact your service representative or authorized dealer for help.

Diskette Drive Activity Light Does Not Light

Check the following:

- Are the diskette drive power and signal cables properly installed?
- Are all relevant switches and jumpers on the diskette drive set correctly?
- Is the diskette drive properly configured?
- Is the diskette drive activity light always on? If so, the signal cable may be plugged in incorrectly.

If you are using the onboard diskette controller, use the SSU to make sure that “Onboard Floppy” is set to “Enabled.” If you are using an add-in diskette controller, make sure that “Onboard Floppy” is set to “Disabled.” To run the SSU, see Chapter 3.

If the problem persists, there may be a problem with the diskette drive, server board, or drive signal cable. Contact your service representative or authorized dealer for help.

Hard Disk Drive Activity Light Does Not Light

If you have installed one or more hard disk drives in your system, check the following:

- Are the power and signal cables to the drive properly installed?
- Are all relevant switches and jumpers on the hard drive and adapter board set correctly?
- Is the onboard IDE controller enabled? (IDE hard drives only)
- Is the hard disk drive properly configured?

⇒ NOTE

Front panel hard disk LED indicates IDE and SCSI devices: The hard disk drive activity light on the front panel lights when either an IDE hard disk drive, or a SCSI device controlled by the onboard SCSI host controller, is in use. This LED does not display CD-ROM activity.

CD-ROM Drive Activity Light Does Not Light

Check the following:

- Are the power and signal cables to the CD-ROM drive properly installed?
- Are all relevant switches and jumpers on the drive set correctly?
- Is the drive properly configured?
- Is the onboard IDE controller enabled?

⇒ NOTE

Front panel hard disk LED indicates IDE and SCSI devices: The hard disk drive activity light on the front panel lights when either an IDE hard disk drive, or a SCSI device controlled by the onboard SCSI host controller, is in use. This LED does not display CD-ROM activity.

Cannot Connect to a Server

- Make sure you are using the drivers that are shipped on the system Configuration Software CD for the onboard network controller.
- Make sure the driver is loaded and the protocols are bound.
- Make sure the network cable is securely attached to the connector at the system back panel and that the network controller Link LED is on (visible at back panel). If the cable is attached but the problem persists, try a different cable.
- Make sure the hub port is configured for the same duplex mode as the network controller.
- Check with your LAN administrator about the correct networking software that needs to be installed.
- If you are directly connecting two servers (no hub), you will need a crossover cable (see your hub documentation for more information on crossover cables).
- Check the network controller LEDs that are visible through an opening at the system back panel.

Problems with Network

The server hangs when the drivers are loaded.

- Change the PCI BIOS interrupt settings. Try the “PCI Installation Tips” below.

Diagnostics pass, but the connection fails.

- Make sure the network cable is securely attached.
- Make sure you specify the correct frame type in your NET.CFG file.

The Link LED doesn't light.

- Make sure you have loaded the network drivers.
- Check all cable connections.
- Try another port on the hub.
- Make sure you have the correct type of cable between the adapter and the hub. Some hubs require a crossover cable while others require a straight through cable (for more information on crossover cabling, see your hub documentation).

The Activity LED doesn't light.

- Make sure you've loaded the correct network drivers.
- Network may be idle. Try accessing a server.

The controller stopped working when an add-in adapter was installed.

- Make sure the cable is connected to the port from the onboard network controller.
- Make sure your PCI BIOS is current. Try the “PCI Installation Tips” below.
- Make sure the other adapter supports shared interrupts. Also, make sure your operating system supports shared interrupts; OS/2† does not.
- Try reseating the add in adapter.

The add-in adapter stopped working without apparent cause.

- Try reseating the adapter first; then try a different slot if necessary.
- The network driver files may be corrupt or deleted. Delete and then reinstall the drivers.
- Run the diagnostics.

PCI Installation Tips

Some common PCI tips are listed here.

- Reserve interrupts (IRQs) and/or memory addresses specifically for ISA adapters. This prevents PCI cards from trying to use the same settings ISA cards are using. Use the SSU to keep track of ISA adapter resources.
- Certain drivers may require interrupts that are not shared with other PCI drivers. The SSU can be used to adjust the interrupt numbers for PCI devices. For certain drivers, it may be necessary to alter settings so that interrupts are not shared.

Problems with Application Software

If you have problems with application software, do the following:

- Verify that the software is properly configured for the system. See the software installation and operation documentation for instructions on setting up and using the software.
- Try a different copy of the software to see if the problem is with the copy you are using.
- Make sure all cables are installed correctly.
- Verify that the server board jumpers are set correctly. See Chapter 5.
- If other software runs correctly on the system, contact your vendor about the failing software.

If the problem persists, contact the software vendor’s customer service representative for help.

Bootable CD-ROM Is Not Detected

Check the following:

- Is the BIOS set to allow the CD-ROM to be the first bootable device?

Error and Informational Messages

When you turn on the system, POST displays messages that provide information about the system. If a failure occurs, POST emits beep codes that indicate errors in hardware, software, or firmware. If POST can display a message on the video display screen, it causes the speaker to beep twice as the message appears.

Port-80 Codes and Countdown Codes

After the video adapter has been successfully initialized, the BIOS indicates the current testing phase during POST after the video adapter has been successfully initialized by outputting a 2-digit hex code to I/O location 80h. If a port-80h ISA POST card is installed, it displays the 2-digit code on a pair of hex display LEDs.

POST Error Codes and Messages

The following error codes and messages are representative of various conditions BIOS identifies. The exact strings and error numbers may be different from those listed here.


5 Technical Reference

This chapter includes the following:

- Environmental specifications
- Board interrupts
- Electromagnetic Compatibility (EMC) notices

Connectors

The figure shows connector locations on the server board. This section provides pin information about the connectors.

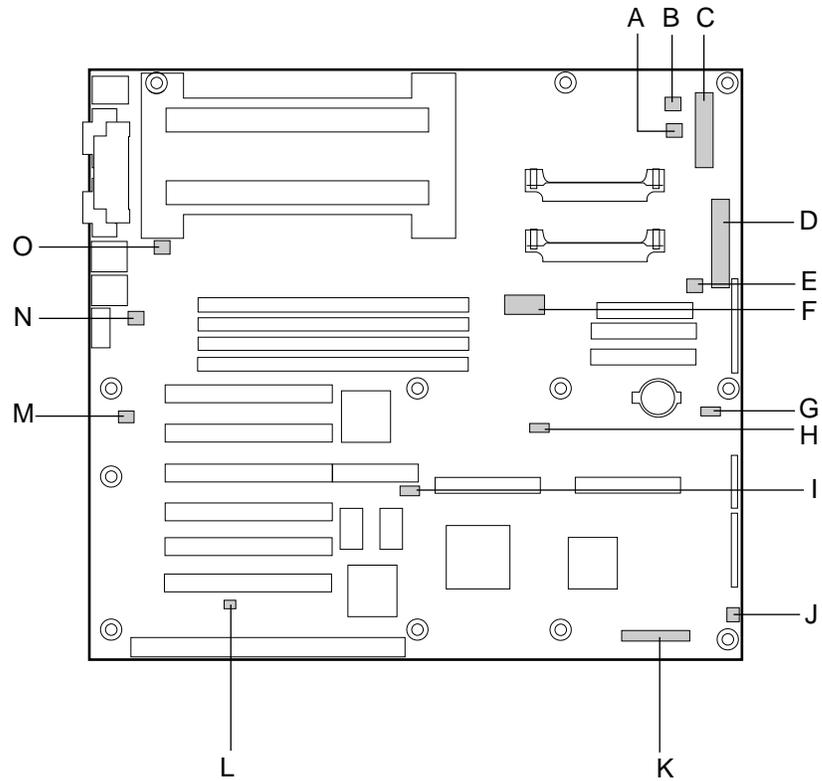


OM08505

Figure 21. Connector Locations

- | | |
|--|--|
| A. Fan connector | I. Hard drive LED connector |
| B. Fan connector | J. Fan connector |
| C. Front panel connector, 30 pin | K. Server Monitor Module (SMM) connector |
| D. Main power connector | L. Chassis intrusion connector |
| E. Fan connector | M. Fan connector |
| F. ATX aux power connector | N. Fan connector |
| G. Isolated Server Management (ISOL) IMB connector | O. Fan connector |
| H. External Wake on LAN connector | |

ATX Style Front Panel Connector

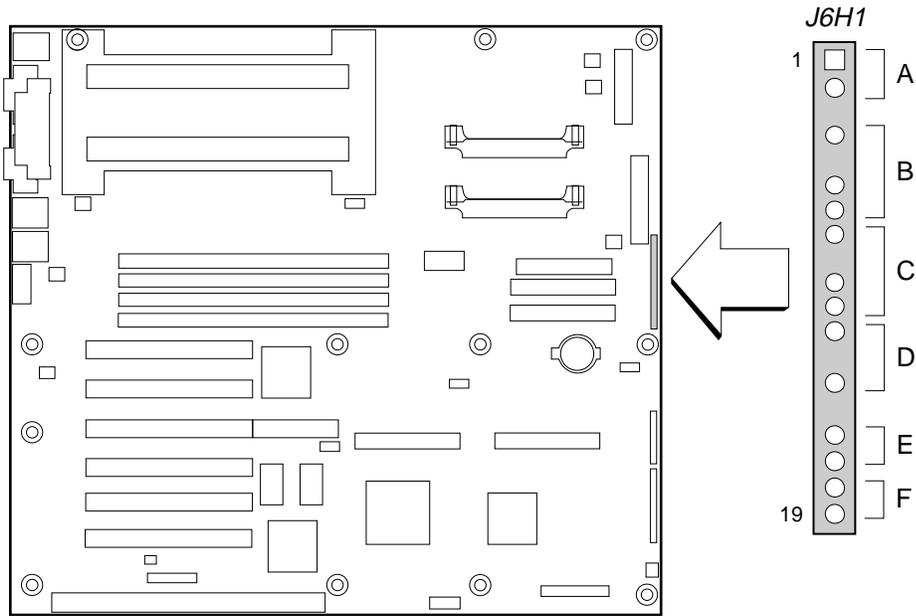

OM08503

Figure 22. ATX Style Front Panel Connector

Table 8. ATX Style Front Panel Connector Pinout

| Connector | Pin | Signal |
|----------------------------|-----|---------------------|
| A. Power switch | 1 | Power switch |
| | 2 | GND |
| | 3 | N/C |
| B. Hard drive activity LED | 4 | Current limited +5V |
| | 5 | Key |
| | 6 | HD activity LED |
| | 7 | Current limited +5V |
| C. Speaker | 8 | GND |
| | 9 | N/C |
| | 10 | PIEZO_IN |
| | 11 | SPKR_HDR |
| D. Power LED | 12 | Current limited +5V |
| | 13 | N/C |
| | 14 | GND |
| | 15 | N/C |
| E. Reset switch | 16 | GND |
| | 17 | Reset switch |
| F. Sleep switch | 18 | GND |
| | 19 | Sleep switch |

Main Power Connector

Table 9. Main Power Connector Pinout

| Pin | Signal | Pin | Signal |
|-----|--------|-----|--------|
| 1 | +3.3V | 13 | +3.3V |
| 2 | +3.3V | 14 | -12V |
| 3 | COM | 15 | COM |
| 4 | +5V | 16 | PS_ON |
| 5 | COM | 17 | COM |
| 6 | +5V | 18 | COM |
| 7 | COM | 19 | COM |
| 8 | PWR_OK | 20 | -5V |
| 9 | +5VSB | 21 | +3.3V |
| 10 | +12V | 22 | +5V |
| 11 | +12V | 23 | +5V |
| 12 | +3.3V | 24 | COM |

ATX Aux Power Connector

Table 10. ATX Aux Power Connector Pinout

| Pin | Signal |
|-----|--------|
| 1 | COM |
| 2 | COM |
| 3 | COM |
| 4 | +3.3V |
| 5 | +3.3V |
| 6 | +5V |

Fan Interface

The server board has seven 3-pin fan connectors that are shrouded and keyed.

⇒ NOTE

Fan connectors 2A and 2B can not be used simultaneously. If you plug fans into both connectors, the fans will not operate properly.

Table 11. Fan Connector Pinout

| Pin | Signal |
|-----|------------|
| 1 | GND |
| 2 | +12V |
| 3 | Fan Sensor |

SMM Connector

Table 12. SMM Connector Pinout


| Pin | Signal | Description |
|-----|-------------------------|--|
| 1 | CPU_SMI_L | System Management Interrupt |
| 2 | LOCAL_IMB_SCL | IMB clock line |
| 3 | GND | Ground |
| 4 | Reserved | |
| 5 | PWR_CNTRL_SFC_L | Host power supply on/off control |
| 6 | LOCAL_IMB_SDA | IMB serial data line |
| 7 | 5VSTNDBY | +5V standby indication (power OK) |
| 8 | KEYLOCK_SFC_L | Keyboard lock signal |
| 9 | CPU_NMI | Non-maskable interrupt indication |
| 10 | VCC3 | 3.3V power supply status input |
| 11 | RST_SFC_L | Server board reset signal from Server Monitor Module |
| 12 | GND | Ground |
| 13 | GND | Ground |
| 14 | Reserved | |
| 15 | SECURE_MODE_BMC | Secure mode indication |
| 16 | GND | Ground |
| 17 | SFC_CHASSIS_INTRUSION_L | Chassis intrusion indication |
| 18 | Reserved | |
| 19 | Reserved | |
| 20 | GND | Ground |
| 21 | Reserved | |
| 22 | Reserved | |
| 23 | Reserved | |
| 24 | Reserved | |
| 25 | Key pin (nc) | Connector key |
| 26 | Reserved | |

Front Panel Connector, 30 pin

Table 13. Front Panel Connector Pinout

| Pin | Signal | Pin | Signal |
|-----|--------------------------------------|-----|-------------------------------------|
| 1 | Speaker Data Out | 2 | GND |
| 3 | Chassis intrusion switch | 4 | Hard Disk Active |
| 5 | +5V | 6 | Sleep Active |
| 7 | Fan failure indicator LED | 8 | Power Indicator |
| 9 | Power fault LED | 10 | GND |
| 11 | I ² C Data line IMB | 12 | Front panel NMI switch |
| 13 | I ² C Clock line IMB | 14 | Reset Switch |
| 15 | +5V standby | 16 | Power Control Switch |
| 17 | GND | 18 | +5V Sense |
| 19 | +3.3V Sense | 20 | Fan Speed Control |
| 21 | Isol. I ² C Clock line SM | 22 | Isol. I ² C Data line SM |
| 23 | GND | 24 | Power Good Signal |
| 25 | Power On Signal | 26 | GND |
| 27 | -12V | 28 | No Connection |
| 29 | +12V Sense | 30 | GND |

Server Board Jumpers

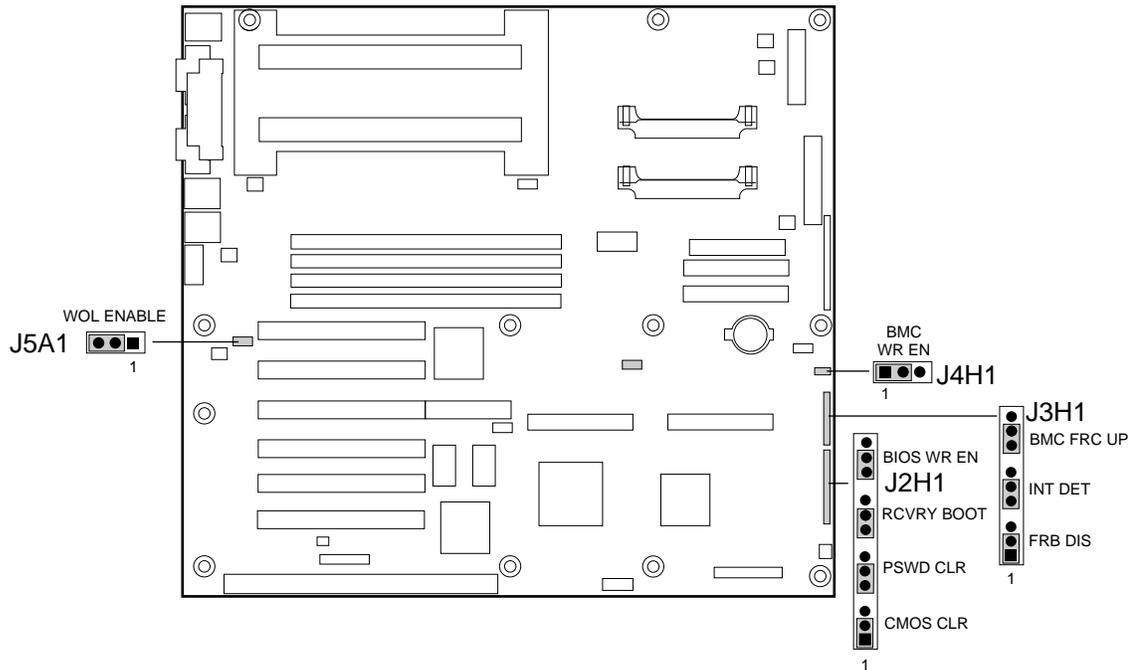

OM08504

Figure 23. Jumper Locations

Table 14. Server Board Jumper Summary

| Jumper Block | Jumper Name | Pins (default in bold) | What it does at system reset |
|--------------|-------------|------------------------|--|
| J5A1 | WOL ENABLE | 1-2, Disabled | Disables Wake On LAN. If your power supply does not provide 0.8 A of +5 V Standby current, you must move the WOL Enable jumper to this position. |
| | | 2-3, Enabled | |
| J4H1 | BMC WR EN | 1-2, Protect | BMC boot block is write protected. |
| | | 2-3, Erase/Program | BMC boot block is erasable and programmable. |
| J3H1 | FRB DIS | 1-2, Enable | FRB operation is enabled (system boots from processor 1 if processor 0 does not respond). |
| | | 2-3, Disable | FRB is disabled. |
| J3H1 | INT DET | 5-6, Disable | Chassis intrusion switch is bypassed. |
| | | 6-7, Enable | Switch installed on chassis indicates when cover has been removed. |
| J3H1 | BMC FRC UP | 9-10, Normal | System boots normally. |
| | | 10-11, Program | System attempts to update BMC firmware. |

continued

Table 14. Server Board Jumper Summary (continued)

| Jumper Block | Jumper Name | Pins (default in bold) | What it does at system reset |
|--------------|-------------|------------------------|--|
| J2H1 | CMOS CLR | 1-2, Protect | Preserves the contents of NVRAM. |
| | | 2-3, Erase | Replaces the contents of NVRAM with the manufacturing default settings. |
| J2H1 | PSWD CLR | 5-6, Protect | Maintains the current system password. |
| | | 6-7, Erase | Clears the password. |
| J2H1 | RCVRY BOOT | 9-10, Normal | System attempts to boot using the BIOS stored in flash memory. |
| | | 10-11, Recovery | BIOS attempts a recovery boot, loading BIOS code from a floppy diskette into the flash device. This is typically used when the BIOS code has been corrupted. |
| J2H1 | BIOS WR EN | 13-14, Protect | BIOS boot block is write-protected. |
| | | 14-15, Erase/Program | BIOS boot block is erasable and programmable. |

General Procedure to Change Jumper Setting

The short general procedure for changing a configuration setting is the same for most of the jumper functions, so we will describe it here.

1. Turn off all connected peripherals, turn off system power, and disconnect the AC power cord.
2. Remove the side cover. You do not need to remove the server board from the chassis, and you probably do not need to remove any add-in boards.
3. Locate the configuration jumpers at the edge of the server board toward the front of the system.
4. Move jumper to pins specified for the desired setting.
5. Reinstall the side cover, connect the power cord, and turn on the system for the change to take effect.
6. You may need to repeat these steps to move the jumper back to its original setting, depending on the jumper function.

Recovery Boot Jumper

The jumper at pins 9, 10, and 11 controls whether the system attempts to boot using the BIOS programmed in the boot block area of the flash memory. This should be used only if the operational area of the BIOS is corrupted or needs to be upgraded. Contact your local service representative before doing this.

Procedure to disable recovery booting:

1. See “General Procedure to Change Jumper Setting” on page 108.
2. Move the recovery boot jumper from pins 9 and 10 to pins 10 and 11.
3. Reinstall the side cover for your safety, connect the power cord to the system.
4. Turn the system on, and insert the Flash Memory Update Utility diskette in drive A. After the system boots, the speaker emits a single beep and the recovery process starts. This takes about three minutes. When the recovery process completes, the speaker emits two beeps.

While in the recovery mode, there is no screen display on the monitor. The keyboard is disabled as the system automatically recovers the BIOS. The following beep codes describe the recovery status.

| Beep Code | Message |
|--------------------------------|---|
| 2 | Successful completion, no errors. |
| 4 | The system could not boot from the diskette. The diskette may not be bootable. |
| Continuous series of low beeps | The wrong BIOS recovery files are being used and/or the flash memory jumper is in the wrong position. |

5. Turn the system off, disconnect the power cord(s) from the system, and remove the left side cover.
6. Move the jumper from pins 9 and 10 to pins 10 and 11 to enable the normal boot mode.
7. Replace the left side cover, remove the diskette from drive A, and connect the power cord(s) to the system.
8. After running the special recovery mode, run the SSU to specify a new password. See Chapter 3.

Boot Block Write Protect Jumper

The jumper at pins 13, 14, and 15 controls whether the BIOS boot block is protected from being erased and reprogrammed.



CAUTION

Leave boot block jumper at factory default setting: Programming the boot block incorrectly will prevent the system from booting. Programming *should be done only* by a technically qualified person. The procedure requires a special “Boot Block Update Utility.” Contact your dealer or sales representative for more information.

6 Regulatory and Integration Information

Regulatory Compliance

This server baseboard complies with the following safety and EMC regulations when correctly installed in a compatible host system.

Table 15. Safety Regulations

| Regulation | Title |
|--|---|
| UL 1950/CSA950, 3 rd edition, Dated 07-28-95 | Bi-National Standard for Safety of Information Technology Equipment including Electrical Business Equipment. (USA and Canada) |
| EN 60950, 2 nd Edition, 1992 (with Amendments 1, 2, 3, and 4) | The Standard for Safety of Information Technology Equipment including Electrical Business Equipment. (European Community) |
| IEC 950, 2 nd edition, 1991 (with Amendments 1, 2, 3, and 4) | The Standard for Safety of Information Technology Equipment including Electrical Business Equipment. (International) |
| EMKO-TSE (74-SEC) 207/94 | Summary of Nordic deviations to EN 60950. (Norway, Sweden, Denmark, and Finland) |

Table 16. EMC Regulations

| Regulation | Title |
|---|---|
| FCC Class B | Title 47 of the Code of Federal Regulations, Parts 2 and 15, Subpart B, pertaining to unintentional radiators. (USA) |
| CISPR 22, 2 nd Edition, 1993 (Class B) | Limits and methods of measurement of Radio Interference Characteristics of Information Technology Equipment. (International) |
| VCCI Class B (ITE) | Implementation Regulations for Voluntary Control of Radio Interference by Data Processing Equipment and Electronic Office Machines. (Japan) |
| EN55022 (1994) (Class B) | Limits and methods of measurement of Radio Interference Characteristics of Information Technology Equipment. (Europe) |
| EN50082-1 (1992) | Generic Immunity Standard; Currently compliance is determined via testing to IEC 801-2, -3, and -4. (Europe) |
| ICES-003 (1997) | Interference-Causing Equipment Standard, Digital Apparatus, Class B (Including CRC c.1374). (Canada) |

This printed circuit assembly has the following product certification markings

- UL Joint Recognition Mark: Consists of small c followed by a stylized backward UR and followed by a small US (Component side)
- Manufacturer's recognition mark: Consists of a unique UL recognized manufacturer's logo, along with a flammability rating (94V-0) (Solder side)
- UL File Number for motherboards: E139761 (Component side)
- PB Part Number: Intel bare circuit board part number XXXXXX-ZZZ (Solder side)
- Battery "+" marking: located on the component side of the board in close proximity to the battery holder
- CE Mark: (Component side) The CE mark should also be on the shipping container
- Australian C-Tick Mark: Consists of solid circle with white check mark and supplier code N232.

Installation Instructions



CAUTION

Follow these guidelines to meet safety and regulatory requirements when installing this board assembly.

Read and adhere to all of these instructions and the instructions supplied with the host computer and associated modules. If the instructions for the host computer are inconsistent with these instructions or the instructions for associated modules, contact the supplier's technical support to find out how you can ensure that your computer meets safety and regulatory requirements. If you do not follow these instructions and the instructions provided by host computer and module suppliers, you increase safety risk and the possibility of noncompliance with regional laws and regulations.

Ensure EMC

Before computer integration, make sure that the host chassis, power supply, and other modules have passed EMC certification testing.

In the installation instructions for the host chassis, power supply, and other modules pay close attention to the following:

- Certifications (See “Ensure Host Computer and Accessory Module Certifications” on page 113.)
- External I/O cable shielding and filtering
- Mounting, grounding, and bonding requirements
- Keying connectors when mismatching of connectors could be hazardous

If the host chassis, power supply, and other modules have not passed applicable EMC certification testing before integration, EMC testing must be conducted on a representative sample of the newly completed computer.

Ensure Host Computer and Accessory Module Certifications

Make sure that the host computer, any added subassembly (such as a board or drive assembly, including internal or external wiring), are certified for the region(s) where the end product will be used. Marks on the product are proof of certification. Certification marks are as follows:

In Europe

The CE marking signifies compliance with all relevant European requirements. If the host computer does not bear the CE marking, obtain a supplier's Declaration of Conformity to the appropriate standards required by the European EMC Directive and Low Voltage Directive. Other directives, such as the Machinery and Telecommunications Directives, may also apply depending on the type of product. No regulatory assessment is necessary for low voltage DC wiring used internally or wiring used externally when provided with appropriate overcurrent protection. Appropriate protection is provided by a maximum 8 Amp current limiting circuit or a maximum 5 Amp fuse or positive temperature coefficient (PTC) resistor. This Intel server board has PTCs on all external ports that provide DC power externally.

In the United States

A certification mark by a Nationally Recognized Testing Laboratory (NRTL) such as UL, CSA, or ETL signifies compliance with safety requirements. External wiring must be UL Listed and suitable for the intended use. Internal wiring must be UL Listed or Recognized and rated for applicable voltages and temperatures. The FCC mark (Class A for commercial or industrial only or Class B for residential) signifies compliance with electromagnetic interference requirements.

In Canada

A nationally recognized certification mark such as CSA or cUL signifies compliance with safety requirements. No regulatory assessment is necessary for low voltage DC wiring used internally or wiring used externally when provided with appropriate overcurrent protection. Appropriate protection is provided by a maximum 8 Amp current limiting circuit or a maximum approved 5 Amp fuse or positive temperature coefficient (PTC) resistor. This server board has PTCs on all external ports that provide DC power externally.

Prevent Power Supply Overload

Do not overload the power supply output. To avoid overloading the power supply, make sure that the calculated total current load of all the modules within the computer is less than the maximum output current rating of the power supply. If you do not do this, the power supply may overheat, catch fire, or damage the insulation that separates hazardous AC line circuitry from low voltage user accessible circuitry and result in a shock hazard. If the load drawn by a module cannot be determined by the markings and instructions supplied with the module, contact the module supplier's technical support.

Place Battery Marking on Computer

There is insufficient space on this server board to provide instructions for replacing and disposing of the battery. The following warning must be placed permanently and legibly on the host computer as near as possible to the battery.



WARNING

Danger of explosion if battery is incorrectly replaced.

Replace with only the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Use Only for Intended Applications

This product was evaluated for use in ITE computers that will be installed in offices, schools, computer rooms and similar locations. The suitability of this product for other product categories other than ITE applications, (such as medical, industrial, alarm systems, and test equipment) may require further evaluation.

Installation Precautions

When you install and test the server board, observe all warnings and cautions in the installation instructions.

To avoid injury, be careful of:

- Sharp pins on connectors
- Sharp pins on printed circuit assemblies
- Rough edges and sharp corners on the chassis
- Hot components (like processors, voltage regulators, and heat sinks)
- Damage to wires that could cause a short circuit

Observe all warnings and cautions that instruct you to refer computer servicing to qualified technical personnel.



WARNING

Do not open the power supply. Risk of electric shock and burns from high voltage and rapid overheating. Refer servicing of the power supply to qualified technical personnel.

7 Equipment Log and Power Consumption Worksheets

Equipment Log

Use the blank equipment log provided here to record information about your system. You will need some of this information when you run the SSU.

| Item | Manufacturer Name and Model Number | Serial Number | Date Installed |
|-------------------------------------|---|----------------------|-----------------------|
| System | | | |
| Server board | | | |
| Primary Processor speed and cache | | | |
| Secondary Processor speed and cache | | | |
| P1 VRM | | | |
| P2 VRM | | | |
| Video display | | | |
| Keyboard | | | |
| Mouse | | | |
| Diskette drive A | | | |
| Diskette drive B | | | |
| Tape drive | | | |
| CD-ROM drive | | | |
| IDE Hard disk drive | | | |
| SCSI Hard disk drive 1 | | | |
| SCSI Hard disk drive 2 | | | |

continued

Current Usage

The expansion slots on the server board are rated for no more than 25 watts for any one slot. The average current usage per slot should not exceed 13 watts.

The cooling efficiency varies per slot; therefore, ensure that adequate cooling is available in the target slot—especially in an expansion slot drawing more than 10 watts.

Calculating Power Consumption

The total combined wattage for the system configuration must be less than the output of your power supply(s). Use the two worksheets in this section to calculate the power used by your server boards. For current and voltage requirements of add-in boards and peripherals, see your vendor documents.

Worksheet, Total Combined Power Used by the System

1. From the previous worksheet, enter the total current for each column.
2. Multiply the voltage by the total current to get the total wattage for each voltage level.
3. Add the total wattage for each voltage level to arrive at a total combined power usage on the power supply.

Table 18. Power Usage Worksheet 2

| Voltage level and total current (V X A = W) | Total Watts for each voltage level |
|--|---|
| (+3.3 V) X (_____ A) | _____ W |
| (+5 V) X (_____ A) | _____ W |
| (-5 V) X (_____ A) | _____ W |
| (+12 V) X (_____ A) | _____ W |
| (-12 V) X (_____ A) | _____ W |
| (+5 V Standby) X (_____ A) | _____ W |
| Total Combined Wattage | _____ W |

Index

A

- Add-in boards
 - IDE bus slots, 14
 - ISA, 57
 - ISA slots, 14
 - PCI, 57
- administrative password, 20
 - limiting access to SCU, 23
- Advanced Menu, configuring in Setup, 48
- audible beep error codes, 42

B

- Back Panel Connectors, 10
- battery
 - disposing of safely, 39
 - installing, 40
 - removing, 39
- beep codes, 42
- BIOS
 - changing the language, 87
 - recovering, 87
 - upgrading, 85
- BIOS update utility, 41
- BMC, 19
- boot block write protect default jumper, 109
- Boot Device Priority menu, configuring, Setup, 55
- Boot menu, configuring, Setup, 54
- boot sequence
 - booting without keyboard, 23
 - setting in Setup, 23
- bootable media, required by POST, 42
- booting cold, 91
- bus termination requirements, SCSI devices, 16

C

- cables, IDE bus length limit, 16
- Caution,

- avoid damaging jumpers when changing, 26
- avoid touching processor pins, 32
- DIMM types, matching, 37
- DIMMs, use extreme care when installing, 37
- ESD protection, 26, 30
- leave boot block protect jumper at default, 109
- selecting correct processor, 32
- CFG files, 57
- CMOS, clear to reconfigure diskette drive, 43
- configuration, limiting access to system with administrative password, 23
- configuring server board jumpers
 - boot block protect, 109
 - general procedure to change, 108
- configuring system
 - SCU, 41
 - Setup, 41
- connector
 - fan, 104
 - locations on server board, 102
- Console Redirection menu, configuring in Setup, 54
- controller
 - baseboard management (BMC), 19
 - diskette (floppy), 16
 - IDE, 16
 - keyboard/mouse, 17
 - network, 9, 17
 - SCSI, 16
 - video, 9, 15

D

- diagnostics, preparing system for testing, 94
- DIMM (memory)
 - installing, 37
 - removing, 38
- diskette
 - drive controller, 16
 - enabling/disabling floppy writes, 22

- no booting in secure mode without password, 22
- reconfiguring if cannot enter Setup, 43
- running SCU from, 41, 42

E

- Emergency Management Port
 - FRU viewer, 80
 - main console window, 73
 - phonebook, 77
 - requirements, 71
 - SDR viewer, 79
 - server control operations, 74
- Emergency Management Port Console, 20, 68
- EMI, gasket for I/O connectors, 30
- EMP. *See* Emergency Management Port Console. *See* Emergency Management Port Console
- equipment log, 115
- error
 - codes and messages, 100
 - messages, 42, 100
- ESD
 - add-in boards, 25
 - avoiding damage to product, 25
 - do not touch processor pins, 32
 - server board sensitive to, 26, 30
- Exit menu, configuring, Setup, 56
- expanded video memory, 15

F-G

- fan
 - connectors on server board, 104
 - heat sink, disconnecting, 36
- feature summary
 - back panel connectors, 10
 - board, 9
- Firmware update utility, 41
- Firmware Update Utility, 88
- form factor, 9
- FRUSDR load utility, 41
 - when to run, 81
- FRUSDR Load Utility, 81
- gasket, EMI protection at I/O connectors, 30

H-I

- Hard Drive menu, configuring, Setup, 55
- heat sink, fan, 36
- hot key option, quick reference, 41
- I/O
 - ISA expansion slots, 9
 - PCI expansion slots, 9
 - ports provided, 9
- I2C bus for monitoring status, 19
- IDE
 - bus length limit, 16
 - controller, 16
 - feature summary, 14
 - primary, master and slave, configuring, Setup, 46
- Integrated Peripheral Configuration menu, configuring in Setup, 49
- intrusion detection, 19, 20
- ISA
 - embedded device support, 9
 - expansion slots, 9
 - feature summary, 14

J-L

- jumpers, do not damage when changing, 26
- keyboard
 - compatibility, 17
 - features, configuring, Setup, 47
 - lockout timer, setting in SCU, 17
- language, changing in BIOS, 87
- lithium backup battery
 - disposing of safely, 39
 - installing, 40
 - removing, 39

M

- Main power supply, connector, 104
- memory
 - amount tested, POST, 42
 - capacity, 9
 - DIMM requirements, 13
 - DIMM size, 13
 - expansion, 13
 - installing DIMM, 37
 - removing DIMM, 38
 - video amount, 9

- video size, 15
- what type to install, 9
- messages, error and informational, 100
- monitoring server status, 19
- mouse
 - compatibility, 17
 - inactivity timer, 17

N-P

- network, controller, 9, 17
- password, 21
 - administrative, 20
 - administrator, 21
 - entering to unblank screen, 22
 - user, 20, 21
 - using to reactivate keyboard/mouse, 22
 - using to reactivate keyboard/mouse, 17
- PCI
 - embedded devices, 9
 - expansion slots, 9
- PCI Configuration Menu, configuring in Setup, 48
- PCI Device, Embedded SCSI menu, configuring in Setup, 48, 50
- PCI Device, Slot 1 - Slot 4 menu, configuring in Setup, 49
- POST
 - bootable media required, 42
 - countdown codes, 100
 - error codes and messages, 100
 - error messages, 42
 - memory, amount tested, 42
- power on/off, locking on/off switch, Setup, 22
- power supply
 - calculating power usage, 117
 - main connector pins, 104
 - monitoring power state, 19
 - worksheet, calculating DC power, 118
- problems
 - after running new application software, 92
 - after system has been running correctly, 93
 - application software, 99
 - bootable CD-ROM not detected, 99
 - cannot connect to network server, 98
 - CD-ROM drive activity light, 97
 - confirm OS loading, 94

- diskette drive light, 97
- hard drive light, 97
- initial system startup, 91
- network, 98
- no characters on screen, 95
- PCI installation tips, 99
- power light, 95
- preparing system for diagnostic testing, 94
- random error in data files, 93
- screen characters incorrect, 96
- system cooling fans do not rotate, 96
- system lights, 94
- processor, 32
 - installing, 32
 - removing, 36
 - selecting the correct processor, 32
 - use grounded, static free surface, 36
- processor description, 12

R-S

- real time clock, running SCU to configure settings, 40
- recovery boot jumper, retaining settings, 109
- removing termination board, 32
- reset system, 41, 91
- SCI files, 57
- SCSI, bus termination requirements, 16
- SCSI controller, 16
- SCU
 - administrative password limits
 - access to, 23
 - changing configuration, 41
 - diskette drive required to run SCU, 41
 - inactivity (lockout) timer, 17
 - software locking feature, 20
- secure mode, 21
 - affects boot sequence, 23
 - enter by setting passwords, 22
 - locking reset and power on/off switches, 22
 - no booting from diskette without password, 22
 - using hot keys to enter, 41
- security, 20, 22
 - alarm switches, 20
 - boot sequence, 23
 - enabling/disabling floppy writes, 22

- locking mouse, keyboard with timer, 17, 22
 - locking reset and power on/off switches, Setup, 22
 - password, 23
 - secure mode, 22
 - secure mode, setting in SCU, 21
 - software lock, SCU, 20
 - unattended start, 23
 - using hot key combination, 41
 - video blanking, 22
 - Security menu, configuring, Setup, 51
 - server board
 - boot block protect, jumper, 109
 - component locations, figure, 11
 - configuration jumpers, 108
 - fan connectors, 104
 - installing, 26
 - recovery boot settings, jumper, 109
 - removing, 30
 - server management
 - BMC, 19
 - features, 19
 - intrusion detection, 20
 - Server Management, 9
 - Server Management Information menu, configuring in Setup, 53
 - Server menu, configuring in Setup, 52
 - Setup
 - Advanced menu, 48
 - Boot Device Priority menu, 55
 - Boot menu, 54
 - cannot enter, need to reconfigure diskette, 43
 - changing configuration, 41
 - Console Redirection menu, 54
 - description, 44
 - Exit menu, 56
 - Hard Drive menu, 55
 - Integrated Peripheral Configuration menu, 49
 - keyboard features menu, 47
 - locking reset and power on/off switches, 22
 - Main menu, 45
 - PCI Configuration menu, 48
 - PCI Device, Embedded SCSI menu contents, 48, 50
 - PCI Device, Slot 1 - Slot 4 menu, 49
 - primary IDE master and slave menu, 46
 - recording settings, 43
 - security menu contents, 51
 - Server Management Information menu contents, 53
 - server menu contents, 52
 - soft boot, 91
 - SSU. *See* system setup utility
 - switches
 - alarm, 20
 - locking reset and power on/off, Setup, 22
 - Switches
 - DC power, 91
 - reset, 91
 - System Configuration Utility. *See* SCU
 - System setup utility
 - CFG files, 57
 - customizing, 61
 - defining an ISA card, 62
 - exiting, 67
 - launching a task, 61
 - location, 57
 - removing an ISA card, 63
 - running, 59
 - locally, 58
 - remotely, 58
 - SCI files, 57
 - when to run, 57
- ## T-U
- termination board, removing, 32
 - timer
 - keyboard or mouse inactive, 17
 - lockout (inactivity), setting in SCU, 17
 - upgrade Flash utility, 85
 - user password, 20
 - limit access to using system, 23
 - utilities
 - BIOS update, 41
 - Emergency Management Port Console, 20, 68
 - Firmware update, 41, 88
 - FRUSDR load, 41
 - SCSI, 41
 - SCU, 41
 - Setup, 41, 43
 - Utilities, FRUSDR load utility, 81

V-W

video

- blanking for security, 22
- controller, 15
- expansion, 15
- memory, 9
- resolutions supported, 15

video controller, 9

video memory, 15

Voltage Regulator Module, 12, 31

VRM. *See* Voltage Regulator Module

Warning

- components may be hot, 32
- dispose of lithium battery safely, 39
- ESD can damage product, 25

worksheet, calculating DC power usage, 118

write protect boot block, jumper, 109

write to diskette, disabling, 22

V-W

video

- blanking for security, 22
- controller, 15
- expansion, 15
- memory, 9
- resolutions supported, 15

video controller, 9

video memory, 15

Voltage Regulator Module, 12, 31

VRM. *See* Voltage Regulator Module

Warning

- components may be hot, 32
 - dispose of lithium battery safely, 39
 - ESD can damage product, 25
- worksheet, calculating DC power usage, 118
- write protect boot block, jumper, 109
- write to diskette, disabling, 22