



**Hardware Maintenance Service
for Service Level A**

Machine Type 6832/6833

**Personal
Computer**

First Edition (March, 2001)

The following paragraph does not apply to any state or country where such provisions are inconsistent with local law: INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

References to IBM products, programs, or services do not imply that IBM intends to make them available outside the United States. This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be made in later editions. IBM may make improvements and/or changes in the product(s) and/or the program(s) at any time. Address comments about this publication to IBM Corporation, Dept. E23/962-2, 455 Park Place, Lexington, KY 40511-1856, USA. Information you supply may be used by IBM without obligation. For copies of publications related to this product, call toll free 1-800-IBM-7282 in the Continental U.S.A. In Canada, call toll free 1-800-465-7999.

**© Copyright International Business Machines Corporation 2001.
All rights reserved.**

Note to U.S. Government Users - Documentation related to restricted rights - Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

Contents

Contents	iii
Notices	vii
Safety Information	viii
Laser Compliance Statement	xxxix
Trademarks	xxxii
Preface	xxxiii
General Information	1
Introduction	2
Product Overview	3
Processor	3
Memory	3
External Ports	4
Diskette Drive	4
Hard Disk Drive	4
DVD-ROM Drive	5
Multimedia	5
Power Management	5
Power Supply	6
Internal Cabling	6
Keyboard	6
Mouse	6
Hardware Interfaces	7
CMOS Reset	9
User Password	10
Flash (BIOS) Update Procedure	11
BIOS Configuration/Setup Utility	12
Working with the Configuration/Setup Utility Menu	12
Main Menu	13
Advanced Menu	16
Security Menu	20
Power Menu	21
Boot Menu	21
Exit Menu	21
Specifications	23
Dimension (width x depth x height)	23
Weight	23
Environment	23
Power consumption	23
Electrical input	23
Operating Requirements	24

Check Procedures	25
Introduction	26
Start	27
Index of Symptoms, Messages, Error Codes, or Beeps	32
Troubleshooting	48
Factory-Installed Storage Devices	48
Factory-Installed Modem Card	52
Audio (Not Supported by Diagnostics Program) ..	54
CD/DVD-ROM Drive	57
Memory	59
Keyboard	60
Mouse	61
Power Supply	63
Monitor	66
Undetermined Problems	68
Diagnostic Aids	71
Introduction	72
Power-On Self Test	73
Diagnostic Diskette	75
Using the Diagnostic Diskette	75
Using Diagnostic Program from Recovery CD	76
Diagnostics Program Features	77
Repair Information	81
Removals and Replacements	82
Handling ESD-Sensitive Parts	83
Cover	86
Bay Panels	88
Bay 1 and 2- 5.25-In. Bay (Internal or External Access)	89
Bay 3 - 3.5-In. Bay (Internal or External Access)	90
Bay 4 - 3.5-In. Bay (External Access for Diskette Drive)	91
Front Panel	95
Power Supply	96
AGP Card	99
Adapter Cards	100
Memory(RIMM)	101
Intel Pentium 4 Willamette Processor	104
System Backup Battery	106
Indicator LED and Cable	107

System Board	108
Parts/Test Point Locations	111
Introduction	112
System Board Jumpers and Connectors	113
Power Supply Connectors and Voltages	115
Network Cards	118
Factory-Installed Modem Card Layout	119
Video Cards	120
Nvidia TNT2 M64, 32MB	120
Nvidia GeForce2 GTS Pro NV15, 64MB	121
ATI RADEON, 32MB (US)	121
ATI RADEON, 32MB (EMEA)	122
1394 Card	124
3.5-In. Hard Disk Drive Jumper Settings	125
CD-ROM Drive	127
CD-ROM Drive Rear Panel Connectors and Jumpers	129
CD-ROM R/W Drive	130
CD-ROM R/W Drive Rear Panel Connectors and Jumpers	131
DVD-ROM Drive	132
DVD-ROM Drive Rear Panel Connectors and Jumpers	133
RIMM Configurations	134
System Board Connector Pin Signals	135
Monitor Port Signals	135
Serial Port Signals	135
Parallel Port Signals	136
Mouse Port Signals	136
Keyboard Port Signals	136
Diskette Drive Cable Connector Signals	137
IDE Cable Connector Signals	138
Safety Inspection Guide	139
General Guidelines	140
6832 Parts Catalog	141
Abbreviations	142
System Assembly	143
Assembly 1: System Unit	143
Assembly 2: Diskette and Hard Drive	145
Assembly 3: CD/DVD-ROM Drive, Adapter Card and Speaker	146
Assembly 4: Power Cord	148
Assembly 5: Keyboard and Mouse	149

Assembly 6: Recovery CD	151
6833 Parts Catalog	153
Abbreviations	154
System Assembly	155
Assembly 1: System Unit	155
Assembly 2: Diskette and Hard Drive	157
Assembly 3: CD/DVD-ROM Drive, Adapter Card and Speaker	158
Assembly 4: Power Cord	159
Assembly 5: Keyboard and Mouse	160
Assembly 6: Recovery CD	162
6832 Appendix A. FRU Number List	163
6833 Appendix A. FRU Number List	167
Appendix B. Online Support Information	171
Index	173

Notices

References in this publication to IBM products, programs, or services do not imply that IBM intends to make these available in all countries in which IBM operates. Any reference to an IBM product, program, or service is not intended to state or imply that only IBM's product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any of IBM's intellectual property rights, or other legally protectable rights, may be used instead of the IBM product, program, or service. References in this publication to IBM products, programs, or services are purely hardware-related and do not cover circumstances of software problems. Evaluation and verification of operation in conjunction with other products, program, or services, except those expressly designated by IBM are the user's responsibility.

IBM may have patents or pending patent applications covering subject matter in this document. The featuring of these patents, pending or otherwise, in this document does not give you any license to these patents. You can send license inquires, in writing, to the IBM director of Commercial Relations, IBM Corporation, Purchase, NY10577.

Voltage Supply Switch Settings

Your IBM Personal Computer might have voltage switches, which must be set correctly for your voltage supply. If your monitor or system unit has a voltage switch, complete these steps to make sure each switch is set correctly:

1. Determine the correct voltage switch setting for your area:

Voltage Supply Range	Voltage Switch Setting
100-127 V	115 V
200-240 V	230 V

2. Locate the voltage switch on the back of your monitor or system unit. If the setting shown on the switch is:
 - Correct: start setting up your IBM computer.
 - Incorrect: change the voltage switch setting.

Safety Information



DANGER

To avoid a shock hazard, do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.

To avoid shock hazard:

- The power cord must be connected to a properly wired and grounded receptacle.
- Any equipment to which this product will be attached must also be connected to properly wired receptacles.

When possible, use one hand to connect or disconnect signal cables to prevent a possible shock from touching two surfaces with different electrical potentials.

Electrical current from power, telephone, and communications cables is hazardous. To avoid shock hazard, connect and disconnect cables as described following when installing, moving, or opening covers of this product or attached devices.

To Connect	To Disconnect
<ol style="list-style-type: none">1. Turn Everything OFF.2. First, attach all cables to devices.3. Attach signal cables to receptacles.4. Attach power cord(s) to outlet.5. Turn device ON	<ol style="list-style-type: none">1. Turn Everything OFF.2. First, remove power cord(s) from outlet.3. Remove signal cables from receptacles.4. Remove all cables from devices.

IMPORTANT:

When replacing the battery, use only IBM Part Number 33F8354 or an equivalent type battery recommended by the manufacturer. If your system has a module containing a lithium battery, replace it only with the same module type made by the same manufacturer. The

battery contains lithium and can explode if not properly used, handled, or disposed of.

Do not:

- Throw or immerse into water
- Heat to more than 100°C (212°F)
- Repair or disassemble

Dispose of the battery as required by local ordinances or regulations.



IMPORTANT:

When a CD-ROM drive is installed, note the following.

Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

Removing the covers of the CD-ROM drive could result in exposure to hazardous laser radiation. There are no serviceable parts inside the CD-ROM drive. Do not remove the CD-ROM drive covers.

DANGER

Some CD-ROM drives contain an embedded Class 3A or Class 3B laser diode. Note the following.

Laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.



IMPORTANT:

Electrical current from power, telephone, and communication cables can be hazardous. To avoid personal injury or equipment damage, disconnect the attached power cords, telecommunications systems, networks, and modems before you open the server covers, unless instructed otherwise in the installation and configuration procedures.



PERIGO:

Para evitar choques elétricos, não conecte ou desconecte nenhum cabo, nem efetue instalação, manutenção ou reconfiguração deste produto durante uma tempestade com raios.

Para evitar choques elétricos:

- O cabo de alimentação deve ser conectado a um receptáculo corretamente instalado e aterrado.
- Todos os equipamentos aos quais este produto será conectado devem também ser conectados a receptáculos corretamente instalados.

Quando possível, utilize uma das mãos para conectar ou desconectar cabos de sinal, para evitar um possível choque ao tocar duas superfícies com potenciais elétricos diferentes.

A corrente elétrica proveniente de cabos de alimentação, de telefone e de comunicação é perigosa. Para evitar choques elétricos, conecte e desconecte os cabos conforme descrito a seguir, ao instalar, movimentar ou abrir tampas deste produto ou de dispositivos conectados.

Para Conectar	Para Desconectar
1. DESLIGUE tudo.	1. DESLIGUE tudo.
2. Conecte primeiro todos os cabos nos dispositivos.	2. Remova primeiro o(s) cabo(s) de alimentação das tomadas.
3. Conecte os cabos de sinal nos receptáculos.	3. Remova os cabos de sinal dos receptáculos.
4. Conecte o(s) cabo(s) de alimentação nas tomadas.	4. Remova todos os cabos dos dispositivos
5. LIGUE o dispositivo	

**CUIDADO:**

Ao substituir a bateria, utilize apenas o Número de Peça IBM 33F8354 ou um tipo de bateria equivalente recomendado pelo fabricante. Se seu sistema possuir um módulo com uma bateria de lítio, substitua-o apenas pelo mesmo tipo de módulo, produzido pelo mesmo fabricante. A bateria contém lítio e pode explodir se não for utilizada, manuseada e descartada de forma adequada.

Não:

- Jogue ou coloque na água
- Aqueça a mais de 100°C (212°F)
- Conserte nem desmonte.

Descarte a bateria conforme requerido pelas disposições e regulamentações locais.

**CUIDADO:**

Quando uma unidade de CD-ROM estiver instalada, observe o seguinte.

A utilização de controles ou ajustes ou a execução de procedimentos diferentes daqueles especificados nesta publicação pode resultar em exposição perigosa à radiação.

A remoção das tampas da unidade de CD-ROM pode resultar em exposição a radiação perigosa de laser. Não existem peças que possam ser consertadas no interior da unidade de CD-ROM. Não remova as tampas da unidade de CD-ROM.

PERIGO:

Algumas unidades de CD-ROM contém um diodo de laser da Classe 3A ou da Classe 3B. Observe o seguinte.

Radiação de laser quando aberto. Não olhe diretamente para o feixe de laser, não olhe

diretamente com instrumentos óticos, e evite exposição direta ao raio.



CUIDADO:

A corrente elétrica proveniente de cabos de alimentação, de telefone e de comunicação é perigosa. Para evitar ferimentos pessoais ou danos aos equipamentos, desconecte os cabos de alimentação, sistemas de telecomunicação, redes e modems antes de abrir as tampas do servidor, a menos que receba outras instruções nos procedimentos de instalação e configuração.

声明 10



注意！

电源线、电话线以及通信电缆中的电流非常危险。为避免人身伤害或设备损坏，除非在安装和配置过程中特别指明，请在打开服务器外盖前断开已连接的全部电源线、电信系统、网络及调制解调器。

声明 1



危险！

为避免电击危险，请不要在暴风雨期间连接或断开任何电缆，或是进行此产品的安装、维护或重新配置操作。

为避免电击危险：

- 电源线必须连接到适当的电线及接地插座。
- 此产品将要连接的所有设备也必须连接到正确接线的插座上。

如果可能，请使用一只手连接或断开连接信号电缆，以避免在接触两个具有不同电势的表面时遭到电击。

电源线、电话线以及通信电缆中的电流非常危险。为避免电击，请在安装、移动或打开本产品或连接设备的外盖时，按照下述步骤连接或断开电缆。

要连接电缆

1. 关闭所有设备。
2. 首先将所有电缆与设备连接。
3. 将信号线连接到插座。
4. 将电源线连接到电源插座。
5. 打开设备。

要断开电缆

1. 关闭所有设备。
2. 首先从电源插座拔下电源线。
3. 从插座拔下信号电缆。
4. 从设备上拔下所有电缆。

声明 2



注意！

当更换电池时，仅可使用 IBM 部件号为 33F8354 的产品或由制造商推荐的同等电池。如果系统中有包含锂电池的模块，则只能使用由相同制造商制造的相同类型模块更换。该电池含有锂，如果使用、操作或处理不当会发生爆炸。

不要：

- 将其投入或浸于水中
- 加热超过100°C (212°F)
- 修理或拆卸

应按照当地法规和条例对此电池进行处理。

声明 3



注意！

在已安装 CD-ROM 驱动器的情况下，请注意下面的内容。

不遵循此处指定的控制、调整、或操作过程的操作将可能导致危险的辐射泄漏。

取下 CD-ROM 驱动器的外盖会导致危险的激光辐射泄漏。CD-ROM 驱动器内没有可以使用的部件。请不要取下 CD-ROM 驱动器的外盖。

声明 4

危险！

一些 CD-ROM 驱动器中包含内置的 3A 类或 3B 类激光二极管。
请注意下述内容。

打开驱动器会产生激光辐射。请不要凝视激光束，请不要使用光学仪器直接观看激光束，同时也要避免人体直接暴露在激光束下。

• 聲明 10



注意：
電源、電話及通信電纜上均有電流通過。在安裝及架構之時，若非專家指導，為了避免人員受傷、設備受損，在開啓伺服器蓋子之前，請切斷電源線、電信系統、網路及數據機。

• 聲明 1



危險

為了避免雷擊，在閃電期間，請勿連接或拔掉本裝置上的任何電纜線，或請勿安裝、維修或重新架構本產品。

為了避免雷擊：

- 電源線必須連接到接線及接地正確的插座。
- 本產品所連接的設備也必須連接到接線正確的插座。

儘可能使用單手來連接或拔掉信號電纜，以避免因接觸兩不同電位的平面，而受到電擊。

電源、電話及通信電纜上均有電流通過。為了避免電擊，在安裝、移動本產品，或開啓本產品的蓋子或與本產品連接之裝置的蓋子時，請依照下列「連接」及「拔掉」電纜線的步驟操作。

連接

1. 關掉所有開關。
2. 首先，將所有電纜線連接到裝置。
3. 將信號電纜連接到信號插座。
4. 將電源線連接到電源插座。
5. 開啓裝置電源。

拔掉

1. 關掉所有開關。
2. 首先，自電源插座拔掉電源線。
3. 拔掉信號插座上的所有信號電纜。
4. 拔掉裝置上的所有電纜線。

• 聲明 2



注意：

更換電池時，只可使用 IBM 零件編號 33F8354 的電池，或廠商建議的相當類型的電池。如您系統中的模組含有鋰電池，更換時，請使用相同廠商製造的相同模組類型。如未正常使用、處理或捨棄含有鋰的電池時，可能會造成爆炸。

嚴禁：

- 丟入或浸入水中
- 加熱超過攝氏100度（華氏 212 度）
- 修補或拆解

處理廢棄電池時，請遵照當地法令規章處理。

• 聲明 3



注意：

安裝光碟機時，請注意下列事項：

不依此處所指示的控制、調整或處理步驟，恐有遭致輻射之虞。

移開光碟機蓋子，恐有遭致雷射輻射之虞。光碟機中沒有需要維修的部分。請勿移開光碟機的蓋子。

• 聲明 4



危險

光碟機含有內嵌式 Class 3A 或 Class 3B 雷射二極體時，請注意下列事項：

開啓時會產生雷射輻射。請勿凝視光束，不要使用光學儀器直接觀察，且應避免直接暴露在光束下。



PERIGO:

Pour éviter tout risque de choc électrique, ne manipulez aucun câble et n'effectuez aucune opération d'installation, d'entretien ou de reconfiguration de ce produit au cours d'un orage.

Pour éviter tout risque de choc électrique :

- Les cordons d'alimentation du présent produit et de tous les appareils qui lui sont connectés doivent être branchés sur des socles de prise de courant correctement câblés et mis à la terre.

Afin d'éviter tout risque de choc électrique provenant d'une différence de potentiel de terre, n'utilisez qu'une main, lorsque cela est possible, pour connecter ou déconnecter les cordons d'interface.

Le courant électrique passant dans les câbles de communication, ou les cordons téléphoniques et d'alimentation peut être dangereux. Pour éviter tout risque de choc électrique, lorsque vous installez ou que vous déplacez le présent produit ou des périphériques qui lui sont raccordés, reportez-vous aux instructions ci-dessous pour connecter et déconnecter les différents cordons.

Connexion	Déconnexion
1. Mettez les unités hors tension.	1. Mettez les unités hors tension.
2. Commencez par brancher tous les cordons sur les unités.	2. Commencez pas débrancher les cordons alimentation des socles de prise de courant.
3. Branchez les câbles d'interface sur les prises.	3. Débranchez les câbles d'interface des prises.
4. Branchez les cordons d'alimentation sur un socle de prise de courant.	4. Débranchez tous les câbles des unités.
5. Mettez les unités sous tension.	

**ATTENTION:**

Remplacez la pile usagée par une pile de référence identique exclusivement - voir la référence IBM - ou par une pile équivalente recommandée par le fabricant. Si votre système est doté d'un module contenant une pile au lithium, vous devez le remplacer uniquement par un module identique, produit par le même fabricant. La pile contient du lithium et présente donc un risque d'explosion en cas de mauvaise manipulation ou utilisation.

- Ne la jetez pas à l'eau.
- Ne l'exposez pas à une température supérieure à 100°C.
- Ne cherchez pas à la réparer ou à la démonter.

Pour la mise au rebut, reportez-vous à la réglementation en vigueur.

**ATTENTION:**

Si une unité de CD-ROM est installée, prenez connaissance des informations suivantes :

Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites dans le présent document.

Pour éviter une exposition directe au rayon laser, n'ouvrez pas l'unité de CD-ROM. Vous ne pouvez effectuer aucune opération de maintenance à l'intérieur.

PERIGO:

Certaines unités de CD-ROM contiennent une diode laser de classe 3A ou 3B. Prenez connaissance des informations suivantes :

Rayonnement laser lorsque le carter est ouvert.
Évitez de regarder fixement le faisceau ou de

l'observer à l'aide d'instruments optiques. Évitez une exposition directe au rayon.



ATTENTION:

Le courant électrique circulant dans les câbles de communication et les cordons téléphoniques et d'alimentation peut être dangereux. Pour votre sécurité et celle de l'équipement, avant de retirer les carters du serveur, mettez celui-ci hors tension et déconnectez ses cordons d'alimentation, ainsi que les câbles qui le relie aux réseaux, aux systèmes de télécommunication et aux modems (sauf instruction contraire mentionnée dans les procédures d'installation et de configuration)



VORSICHT:

Aus Sicherheitsgründen bei Gewitter an diesem Gerät keine Kabel anschließen oder lösen. Ferner keine Installations-, Wartungs- oder Rekonfigurationsarbeiten durchführen.

Aus Sicherheitsgründen:

- Gerät nur an eine Schutzkontaktsteckdose mit ordnungsgemäß geerdetem Schutzkontakt anschließen.
- Alle angeschlossenen Geräte ebenfalls an Schutzkontaktsteckdosen mit ordnungsgemäß geerdetem Schutzkontakt anschließen.

Signalkabel möglichst einhändig anschließen oder lösen, um einen Stromschlag durch Berühren von Oberflächen mit unterschiedlichem elektrischem Potential zu vermeiden.

Elektrische Spannungen von Netz-, Telefon- und Datenübertragungsleitungen sind gefährlich. Um einen Stromschlag zu vermeiden, nur nach den Anweisungen arbeiten, die für Installation, Transport oder Öffnen von Gehäusen dieses Produkts oder angeschlossenen Einheiten gelten.

Kabel anschließen	Kabel lösen
1. Alle Geräte ausschalten und Netzstecker ziehen.	1. Alle Geräte ausschalten.
2. Zuerst alle Kabel an Einheiten anschließen.	2. Zuerst Netzstecker von Steckdose lösen.
3. Signalkabel an Anschlußbuchsen anschließen.	3. Signalkabel von Anschlußbuchsen lösen.
4. Netzstecker an Steckdose anschließen.	4. Alle Kabel von Einheiten lösen.
5. Gerät einschalten.	

**ACHTUNG:**

Eine verbrauchte Batterie nur durch eine Batterie mit der IBM Teilenummer 33F8354 oder durch eine vom Hersteller empfohlene Batterie ersetzen. Wenn Ihr System ein Modul mit einer Lithium-Batterie enthält, ersetzen Sie es immer mit dem selben Modultyp vom selben Hersteller. Die Batterie enthält Lithium und kann bei unsachgemäßer Verwendung, Handhabung oder Entsorgung explodieren.

Die Batterie nicht

- mit Wasser in Berührung bringen.
- über 100 C erhitzen.
- reparieren oder zerlegen.

Die örtlichen Bestimmungen für die Entsorgung von Sondermüll beachten.

**ACHTUNG:**

Wenn ein CD-ROM-Laufwerk installiert ist, beachten Sie folgendes. Steuer- und Einstellelemente sowie Verfahren nur entsprechend den Anweisungen im vorliegenden Handbuch einsetzen. Andernfalls kann gefährliche Laserstrahlung auftreten.

Das Entfernen der Abdeckungen des CD-ROM-Laufwerks kann zu gefährlicher Laserstrahlung führen. Es befinden sich keine Teile innerhalb des CD-ROM-Laufwerks, die vom Benutzer gewartet werden müssen. Die Verkleidung des CD-ROM-Laufwerks nicht öffnen.

VORSICHT:

Manche CD-ROM-Laufwerke enthalten eine eingebaute Laserdiode der Klasse 3A oder 3B. Die nachfolgend aufgeführten Punkte beachten.

Laserstrahlung bei geöffneter Tür. Niemals direkt in den Laserstrahl sehen, nicht direkt mit optischen

Instrumenten betrachten und den Strahlungsbereich meiden.



ACHTUNG:

An Netz-, Telefon- und Datenleitungen können gefährliche elektrische Spannungen anliegen. Um eine Gefährdung des Benutzers oder Beschädigung des Geräts zu vermeiden, ist der Server auszuschalten. Die Verbindung zu den angeschlossenen Netzkabeln, Telekommunikationssystemen, Netzwerken und Modems ist vor dem Öffnen des Servergehäuses zu unterbrechen (sofern in Installations- und Konfigurationsanweisungen nicht anders angegeben)



PERICOLO:

Per evitare il pericolo di scosse elettriche durante i temporali, non collegare o scollegare cavi, non effettuare l'installazione, la manutenzione o la riconfigurazione di questo prodotto.

Per evitare il pericolo di scosse elettriche:

- collegare il cavo di alimentazione ad una presa elettrica correttamente cablata e munita di terra di sicurezza;
- collegare qualsiasi apparecchiatura collegata a questo prodotto ad una presa elettrica correttamente cablata e munita di terra di sicurezza.

Quando possibile, collegare o scollegare i cavi di segnale con una sola mano per evitare il rischio di scosse derivanti dal contatto con due superfici a diverso potenziale elettrico.

La corrente elettrica circolante nei cavi di alimentazione, del telefono e di segnale è pericolosa. Per evitare scosse elettriche, collegare e scollegare

icavi come descritto quando si effettuano l'installazione, la rimozione o l'apertura dei coperchi di questo prodotto o durante il collegamento delle unità.

Per collegare	Per scollegare
1.SPEGNERE tutti i dispositivi.	1.SPEGNERE tutti i dispositivi.
2.Collegare prima tutti I cavi alle unità.	2.Rimuovere prima il(i) cavo(i) di alimentazione dalla presa elettrica.
3.Collegare i cavi di segnale alle prese.	3.Rimuovere i cavi di segnale dalle prese.
4.Collegare il(i) cavo(i) di alimentazione alla presa elettrica.	4.Rimuovere tutti i cavi dalle unità.
5.ACCENDERE le unità.	



ATTENZIONE:

Quando si sostituisce la batteria, utilizzare solo una batteria IBM o batterie dello stesso tipo o di tipo equivalente consigliate dal produttore. Se il sistema di cui si dispone è provvisto di un modulo contenente una batteria al litio, sostituire tale batteria solo con un tipo di modulo uguale a quello fornito dal produttore. La batteria contiene litio e può esplodere se utilizzata, maneggiata o smaltita impropriamente.

Evitare di:

- Gettarla o immergerla in acqua
- Riscaldarla ad una temperatura superiore ai 100°C
- Cercare di ripararla o smaltirla

Smaltire secondo la normativa in vigore (D.Lgs 22 del 5/2/97) e successive disposizioni nazionali e locali.

**ATTENZIONE:**

Quando è installata un'unità CD-ROM, notare quanto segue:

L'utilizzo di controlli, regolazioni o l'esecuzione di procedure non descritti nel presente manuale possono provocare l'esposizione a radiazioni pericolose.

L'apertura di un'unità CD-ROM può determinare l'esposizione a radiazioni laser pericolose. All'interno dell'unità CD-ROM non vi sono parti su cui effettuare l'assistenza tecnica. Non rimuovere i coperchi dell'unità CD-ROM.

PERICOLO:

Alcune unità CD-ROM contengono all'interno un diodo laser di Classe 3A o Classe 3B. Prestare attenzione a quanto segue:

Aperto l'unità vengono emesse radiazioni laser. Non fissare il fascio, non guardarlo direttamente con strumenti ottici ed evitare l'esposizione diretta al fascio.

**ATTENZIONE:**

La corrente circolante nei cavi di alimentazione, del telefono e di segnale è pericolosa. Per evitare situazioni pericolose per le persone o danneggiamenti all'apparecchiatura, scollegare i cavi di alimentazione, i sistemi di telecomunicazioni, le reti e ed i modem prima di aprire i coperchi del server se non diversamente indicato nelle procedure di installazione e configurazione.



주의:

전원, 전화 및 통신 케이블로부터 흘러 나오는 전류는 위험합니다. 설치 및 구성 절차에 다른 지시가 없으면, 다치거나 장비 손상이 생기지 않게 하기 위해 서버 덮개를 열기 전에 접속된 전선, 원격 통신 시스템, 네트워크 및 모뎀의 연결을 끊으십시오.

경고문 1



위험

전기 충격을 피하려면 날씨가 나쁠 때(예: 눈 또는 비가 오거나 천둥 번개가 칠 때)는 케이블을 연결하거나 끊지 않도록 하고 이 제품의 설치, 유지보수 또는 재구성 등의 작업을 수행하지 않도록 하십시오.

전기 충격을 피하려면 다음과 같아야 합니다.

- 고압선은 적절한 배선 및 접지 상태의 콘센트로 연결되어야 합니다.
- 이 제품이 접속될 모든 장비도 적절한 배서 상태의 콘센트로 연결되어야 합니다.

다른 전위를 가진 두 표면을 만졌을 때 발생할 수 있는 전기 충격을 피하려면 한 손으로 신호선을 연결하거나 끊으십시오.

전원, 전화 및 통신 케이블로부터 흘러 나오는 전류는 위험합니다. 전기 충격을 피하려면 이 제품이나 접속 장치를 설치, 이동 및 덮개를 열 때 다음 설명에 따라 케이블을 연결하고 끊도록 하십시오.

연결하려면	연결해제하려면
1. 모든 스위치를 켜다.	1. 모든 스위치를 끈다.
2. 먼저 모든 케이블을 장치에 연결한다.	2. 먼저 모든 케이블을 장치에 제거한다.
3. 신호선을 콘센트에 연결한다.	3. 신호선을 콘센트에서 제거한다.
4. 전원을 콘센트에 연결한다.	4. 장치에서 모든 케이블을 제거한다.
5. 장치 스위치를 켜다.	

경고문 2



주의:

배터리를 교체할 때는 IBM 부품 번호 &PN. 또는 제조업체에서 추천하는 동등한 유형의 배터리를 사용하십시오. 시스템에 리튬 배터리를 포함하는 모듈이 있으면 이것은 동일한 제조업체에서 생산된 동일한 모듈 유형으로만 교체하십시오. 배터리에 리튬이 포함되어 있으므로 제대로 사용, 처리 또는 처분하지 않으면 폭발할 수 있습니다.

다음을 주의하십시오.

- 던지거나 물에 담그지 않도록 하십시오.
- 100°C(212°F) 이상으로 가열하지 않도록 하십시오.
- 수리하거나 분해하지 않도록 하십시오.

지역 법령이나 규정의 요구에 따라 배터리를 처분하십시오.

경고문 3



주의:

CD-ROM 드라이브가 설치되어 있으면 다음 사항을 명심하십시오.

여기에서 지정하지 않은 방식으로 CD-ROM 드라이브를 제어 또는 조절하거나 다른 절차로 사용하면 위험한 방사능 노출이 발생할 수 있습니다.

CD-ROM 드라이브의 덮개를 제거하면 위험한 레이저 방사능이 노출될 수 있습니다.

CD-ROM 드라이브 내에는 정비할 수 있는 부품이 없습니다. CD-ROM 드라이브 덮개를 제거하지 않도록 하십시오.

경고문 4

위험

일부 CD-ROM 드라이브에는 클래스 3A 또는 3B 레이저 2급 진공관(다이오드)이 들어 있습니다. 다음 사항을 명심하십시오.

열면 레이저 방사능이 노출됩니다. 광선을 주시하거나 광학 기계를 직접 쳐다보지 않도록 하고 광선에 노출되지 않도록 하십시오.



PELIGRO:

Para evitar una posible descarga eléctrica, no conecte ni desconecte los cables ni lleve a cabo ninguna operación de instalación, de mantenimiento o de reconfiguración de este producto durante una tormenta eléctrica.

Para evitar una posible descarga:

- El cable de alimentación debe conectarse a un receptáculo con una instalación eléctrica correcta y con toma de tierra.
- Los aparatos a los que se conecte este producto también deben estar conectados a receptáculos con la debida instalación eléctrica.

Cuando sea posible, utilice una sola mano para conectar o desconectar los cables de señal a fin de evitar una posible descarga al tocar dos superficies con distinto potencial eléctrico.

La corriente eléctrica de los cables de comunicaciones, teléfono y alimentación puede resultar peligrosa. Para evitar una posible descarga, siga las indicaciones de conexión y desconexión de los cables siempre que tenga que instalar, mover o abrir las cubiertas de este producto o de los dispositivos acoplados.

Instrucciones de conexión	Instrucciones de desconexión
1. Apague todos los componentes (OFF).	1. Encienda todos los componentes (ON).
2. En primer lugar, conecte todos los cables a los dispositivos.	2. En primer lugar, retire los cables de alimentación de las tomas.
3. Conecte los cables de señal a los receptáculos.	3. Retire los cables de señal de los receptáculos.
4. Conecte los cables de alimentación a las tomas.	4. Retire todos los cables de los dispositivos.
5. Encienda el dispositivo (ON).	

**IMPORTANT:**

Al cambiar la batería, utilice únicamente la batería IBM Número de pieza 33F8354 o un tipo de batería equivalente recomendado por el fabricante. Si el sistema tiene un módulo que contiene una batería de litio, sustitúyalo únicamente por el mismo tipo de módulo del mismo fabricante. La batería contiene litio y puede explotar si no se utiliza, manipula o desecha correctamente.

Lo que no debe hacer

- Tirar o sumergir el producto en agua.
- Exponer el producto a una temperatura superior a 100°C.
- Reparar o desmontar el producto.

Cuando quiera desechar la batería, siga las disposiciones y reglamentaciones locales.

**IMPORTANT:**

Cuando instale una unidad de CD-ROM, tenga en cuenta la siguiente información.

Si se llevan a cabo controles o ajustes o se utilizan métodos que no se atengan a lo aquí especificado, se puede producir una exposición peligrosa a las radiaciones.

Si se retiran las cubiertas de la unidad de CD-ROM, se puede producir una peligrosa exposición a radiaciones de láser. Dentro de la unidad de CD-ROM no existen piezas reparables. No retire las cubiertas de la unidad de CD-ROM.

PELIGRO:

Algunas unidades de CD-ROM tienen incorporado un diodo de láser de Clase 3A o de Clase 3B. Tenga en cuenta la siguiente información.

Cuando la unidad está abierta se generan emisiones de rayos láser. No dirija la mirada al haz, no lo observe directamente con instrumentos ópticos y evite la exposición directa.



IMPORTANT:

La corriente eléctrica de los cables de comunicaciones, de teléfono y de alimentación puede resultar peligrosa. Para evitar posibles lesiones o daños del aparato, desconecte los cables de alimentación, los sistemas de telecomunicaciones, las redes y los módems antes de abrir las cubiertas del servidor, salvo que se indique lo contrario en las instrucciones de las operaciones de instalación y configuración.

Laser Compliance Statement

The CD-ROM drive in the computer is a laser product. The CD-ROM drive's classification label (sample shown below) is located on the drive.



The CD-ROM drive is certified in the U.S. to conform to the requirements of the Department of Health and Human Services 21 Code of Federal Regulations (DHHS 21 CFR) Subchapter J for Class 1 laser products.

In other countries, the drive is certified to conform to the requirements of EN60825.

Class 1 laser products are not considered to be hazardous. The CD-ROM drive has an internal Class 1, 0.5-milliwatt, aluminum gallium-arsenide laser that operates at a wavelength of 760 to 810 nanometers.

The design of the laser system and the CD-ROM drive ensures that there is no exposure to laser radiation above a Class 1 level during normal operation, user maintenance, or servicing conditions.

Trademarks

The following are trademarks of the IBM Corporation in the United States or other countries or both:

AT
HelpCenter
IBM
Operating System/2
OS/2
Personal System/2
PS/1
PS/2

Intel, Pentium, MMX, EtherExpress, and LANDesk are trademarks or registered trademarks of Intel Corporation.

Microsoft, MS-DOS, Windows, and Windows NT are trademarks or registered trademarks of Microsoft Corporation.

Other company, product, and service names may be trademarks or service marks of others.

Preface

This manual contains service information for the **6832 & 6833 Service Level A (SL-A)** model of the IBM Personal Computer, worldwide. This manual is intended to be used as a stand-alone document to service machine type 6832 & 6833 products. It is divided into the following chapters:

Notices contains important safety information and notices required to service this computer.

General Information contains a brief description of this manual.

Check Procedures provides step-by-step instructions that aid in locating the failing Field Replaceable Unit (FRU).

Diagnostic Aids explains how to use the diagnostics tools for isolating failures.

Repairing Information contains illustrations and descriptions to disassemble and reassemble the computer.

Parts/Test Point Locations contains illustrations and descriptions of the locations of the major parts, jumpers, and connectors.

Safety Inspection Guide contains information about inspecting a machine for safety problems before putting the machine under a Maintenance Agreement.

Parts Catalog contains descriptions, illustrations, and part numbers for individual FRUs.

Appendix A, FRU Number Index contains part numbers listed in numerical order.

General Information

Introduction	2
Product Overview	3
Processor	3
Memory	3
External Ports)	4
Diskette Drive	4
Hard Disk Drive	4
DVD-ROM Drive	5
Multimedia	5
Power Management	5
Power Supply	6
Internal Cabling	6
Monitor (Not included with some models)	6
Keyboard	6
Mouse	6
Hardware Interfaces	7
CMOS Reset	9
User Password	10
Flash (BIOS) Update Procedure	11
BIOS Configuration/Setup Utility	12
Working with the Configuration/ Setup Utility Menu	12
Main Menu	13
Advanced Menu	16
Security Menu	20
Power Menu	21
Boot Menu	21
Exit Menu	21
Specifications	23
Dimension (width x depth x height)	23
Weight	23
Environment	23
Power consumption	23
Electrical input	23
Operating Requirements	24

Introduction

This chapter gives a general overview of the Personal Computer Type 6832 and 6833, describes the standard and optional features, and details its functional and environmental specifications.

Product Overview

Personal Computer Type 6832 and 6833 has three PCI slots and supports the Pentium 4 Willamette processor family with Socket W processor package type.

The Personal Computer Type 6832 and 6833 supports Accelerated Graphics Port (AGP) 2X / 4X, which allows installed system memory to be used as texture memory, yielding a huge texture footprint to enhance 3D graphical display performance.

Listed below are 6832 and 6833 system features:

Processor

- Socket W connector.
- Detachable CPU fan sink.
- 128 KB of on-chip level one (L1) cache
- 256 KB level two (L2) cache support for Willamette
- Intel Pentium 4 Willamette processor; 400MHz front side bus, 1.30/1.40/1.50GHz, Streaming SIMD Extensions 2 (SSE2) extends MMXTH and SSE technology
- Dual channel RDRAM

Memory

- 184-pin Direct Rambus Dynamic Random Access Memory (DRDRAM), Rambus in-line Memory Module (RIMM) sockets.
 - 4 RIMM sockets.
 - 64MB, 128MB and 256MB RIMM.
 - PC-133, 2.5V, capable of delivery up to 1.6GB per second, 8-layer, operating at 800MHz, 16-bit/serial data output speed with gold contacts
 - Maximum memory is 1.5GB

RDRAM Technology	Increments	Maximum (2 channels)
64MB	16MB	512MB
128MB	32MB	1GB
256MB	64MB	1.5GB

External Ports

- One multi-mode parallel port (25-pin D-type connector)
- One serial port (9-pin D-sub connector)
- One keyboard port and one mouse port
- Four USB ports (2 on port bracket, the other 2 on the front panel)
- One Game/MIDI port (15-pin D-sub connector)
- Microphone-in jack
- Speaker-out jack
- Line-in jack
- One floppy port (up to 2.88MB, 3 mode support)

Diskette Drive

- One external 3.5 " drive for 2.88MB, 1.44MB or 720KB diskette
- Two 5.25" drives for 1.2MB or 360KB diskette
- Support 3-mode drive

Hard Disk Drive

- 3.5-in., 1-in. height IDE drive. (3.5-in may be in acoustic mounting bracket), and 7200rpm.
- 128 KB "look-ahead" cache memory inside the hard disk drive.
- Average and minimum 12 ms seek time, access time varies for the hard disk drive and the hard disk drive manufacturer.

DVD-ROM Drive

- 5.25-in. high-performance, 8X/40X DVD-ROM IDE/AT drive.
- Read data and audio play from standard, mini DVD-ROM and audio compact discs (audio CDs). DVD media supported on DVD models.

Multimedia

- A pair of external active speakers with a power adapter or a pair of passive speakers.
- Noise canceling microphone available.

Power Management

- Support ACPI (Advanced Configuration and Power Interface) power management.
- ACPI v1.04 and APM v1.2 compliant
- CPU clock throttling and clock stop control for complete ACPI S3 state support
- PCI bus clock run, Power Management enable (PME) control, PCI/CPU color generator stop control.
- Power-on Switch must support Soft-Off and Full-Off.
 - Touch for 1 second or less to put system on Suspend state.
 - Touch and hold for 4 seconds to put system on Full-Off state (Power Supply standby remains).
- System enters standby mode if any of following conditions are met:
 - Execute standby from Windows 98 Start menu
 - Press system power button if it is set to act as standby function
 - System is idle and the standby timer set in the Windows 98 Power Management Property elapses
- 8 bytes of BIOS scratch register

Power Supply

- PC-98 compatible 200W ATX power supply
- Switchable high/low voltage selection

Internal Cabling

- Two 40-pin ribbon cables for hard disk drives and CD/DVD-ROM drive.
- One 34-pin ribbon cable for AT diskette drive.
- One 4-pin (2-wire) cable for hard disk drive light-emitting diode (LED).
- One 3-pin (3-wire) cable for power light-emitting diode (LED).
- One 2-pin (2-wire) cable for power switch.

Keyboard

- 104-key, rubber dome Rapid Access™ III E keyboard with 1.8-m (5.8-ft.) cable
- 104-key, PC Next Lite Chicony™ keyboard with 1.8-m (5.8-ft.) cable

Mouse

- 2 Button PS/2 Logitech™ mouse with 1.8-m (5.8-ft.) cable
- 3 Button USB ScrollPoint™ III mouse with 1.8-m (5.8-ft.) cable

Hardware Interfaces

The following peripheral interfaces for adapters, options, and drives are supported in the system unit.

Item	Interface
Expansion slot for I/O adapter cards	Three PCI (Peripheral Component Interconnect) v2.2 compatible expansion slots that operates at 33 MHz bus speed.
Hard disk drives	Two Dual Channel Bus Master IDE ports support Ultra ATA/100, PIO Mode 3/4, ATAPI IDE CD-ROM, CD-R, CD-RW, and LS120.
DVD-ROM drive	5.25-in. high-performance, 8X/40X DVD-ROM IDE/AT drive. Support Bootable CD-ROM Format specification version 1.0. Compliant to Audio-CD, Video-CD, CD-ROM/XA, Karaoke-CD, and Photo-CD (both single and multi-session) format.
Diskette drive	AT diskette interface
Video	Physical interface is compatible with the IBM Personal System/2 (PS/2) VGA interface. Support Accelerated Graphics Port (AGP)
Modem (only for 6832)	One 56.6 Kbps PCI modem adapter card with data/fax features.
Audio	Compatible to AC'97
Pointing device	IBM PS/2-compatible mouse
Keyboard device	IBM PS/2-compatible keyboard
Serial port	Support one high speed NS 16C550 compatible UARTs with send/receive 16 bytes FIFOs RS232D electrical interface compliant

Item	Interface
Parallel port	Supports SPP (IBM PC/XT, PC/AT, PS/2) compatible, EPP (IEEE 1284 compliance), ECP (IEEE 1284 compliance) interface. IEEE 1284 compliant
Game port	Game port interface for joystick. It also supports MIDI.
USB	Supports Universal UHCI Specification for USB 1.1

CMOS Reset

This system does not deny access to Configuration/Setup Utility, if Supervisor Password is not set. Execute "Load Setup Default" in BIOS Configuration/Setup Utility to clear the corrupted CMOS data. See "Load Setup Defaults" on page 21.

User Password

A user password denies access to the system by an unauthorized user when the system is powered on. When a user password is active, the password prompt appears on the screen each time the system is powered on. The system starts after the proper password is entered. See “User Password” on page 20 for more information about how to change, remove and set password in Configuration/Setup Utility.

In some cases, you might be required to service a system with an active and unknown user password. To clear a password from the system, follow these steps.

1. Turn off system unit.
2. Unplug power cable from the electrical outlet.

IMPORTANT: Do not attempt these steps with the power cord plugged into the electrical outlet. The power supply maintains +5 Vdc of standby power when the power cord is plugged. System damage might result if the power cord is not unplugged during jumper setting.

3. Set JP20 to 2-3 position to clear BIOS setting as original manufacture setting. See “System Board Jumpers and Connectors” on page 113.

IMPORTANT: To reinstall the password, the user must enter a password in the Configuration/Setup Utility. If Enhanced Security is enabled and the password is forgotten, the system board must be replaced.

Flash (BIOS) Update Procedure

1. Prepare a bootable DOS diskette with PHLASH16.EXE, and one XXXXXXXX.WPH files

NOTE: The PHLASH16.EXE is flash utility programs.
The XXXXXXXX.WPH is BIOS source code binary file.

2. Insert the diskette and boot from drive A.

WARNING: Do not boot with any memory related driver such as HIMEM.SYS, EMS.SYS....

3. At the DOS prompt, type **A:> PHLASH16 XXXXXXXX.WPH** then press **Enter**.

4. The program updates the BIOS automatically.

WARNING: Do not turn off the system power while the BIOS is programming, or the flash ROM will be destroyed.

5. Power off system after the BIOS is completely updated.

BIOS Configuration/Setup Utility

The Configuration/Setup Utility lets you review and change important information about the computer and its hardware.

Working with the Configuration/Setup Utility Menu

Starting the Configuration/Setup Utility

Follow these steps to enter Setup when the computer is off:

1. Turn on your monitor.
2. Press and hold **F1**.
3. Turn on the system unit.

If you have previously set a password, you are prompted to type in the password after you press the **F1** key. Refer to the Configuration/Setup Utility Main Menu below.

Main	Advanced	Security	Power	Boot	Exit
IBM BIOS Version	P9KT05AUS				
Language:	[English (US)]				
System Time:	[XX:XX:XX]				
System Date:	[XX/XX XXXX]				
Legacy Diskette A:	[1.44/1.25MB 3 ½"]				
Legacy Diskette B:	[Disabled]				
◆ Primary Master	[40982MB]				
◆ Primary Slave	[None]				
◆ Secondary Master	[CD-ROM]				
◆ Secondary Slave	[None]				
System Memory:	127MB				
F1:Help ↓↑Up/Down Enter:Select Sub-Menu ESC:Exit					
-/+ :ChangeValues F9:Setup Defaults F10:Save&Exit J>Select Menu					

The following table lists specific keys on the keyboard that will help you move through the Configuration/Setup Utility Menus:

Keys	Function
F1	Press this key if you want help for a selected menu option.

Keys	Function
Down- or up- arrow key	Use these arrow keys to go up and down for highlighting an option on the menu. (Press the Enter key to choose the option.)
Enter	Press this key to choose a highlighted option from a menu, or select sub-menu.
Esc	After viewing or making changes to the settings on a menu, press this key to exit the menu.
-/+	Press this key if you want to collapse/extend items
F9	Restore setup defaults
F10	Press this key if you want to save and exit the current settings for a line
<--	Select menu

Changing Parameter Settings

In the Configuration/Setup Utility Menus, the configuration information that you can change is enclosed in brackets like these: []. You cannot change any information that is not enclosed in brackets or is shown in grey instead of black color. Use the up- or down- arrow keys to highlight options then press **Enter** to display a menu. When changing the setting of a particular parameter, highlight the setting then use the left- or right- arrow key to change the setting. Refer to the Configuration/Setup Utility help for details on the configurable parameters in each menu.

Main Menu

To view general hardware information about your computer, select the Configuration/Setup Utility Main Menu.

Setup automatically updates this menu when you do either of the following:

- Add or change hardware on your computer
- Make changes to other menus in Setup and save

those changes

To view the computer information such as the BIOS Version, System Time, System Date, and Diskette A, B, the items are configured and shown automatically. For language displayed, you can choose from English (US), Spanish, French, Deutsch, Italian, Netherlands and Japanese. The default language is English (US).

In Main Menu, you can also find further information for drivers as below.

Primary Master

Type

Default is Auto.

Multi-Sector Transfers

Default is 16 sectors.

LBA Mode Control

Default is Enabled.

32 Bit I/O

Default is Disabled.

Transfer Mode

Default is Fast PIO 4

Ultra DMA Mode

Default is Mode 5.

Primary Slave

Type

Default is Disabled.

Multi-Sector Transfers

Default is Disabled.

LBA Mode Control

Default is Disabled.

32 Bit I/O

Default is Disabled.

Transfer Mode

Default is Standard.

Ultra DMA Mode

Default is Disabled.

Secondary Master**Type**

Default is Auto.

Multi-Sector Transfers

Default is 16 sectors.

LBA Mode Control

Default is Enabled.

32 Bit I/O

Default is Disabled.

Transfer Mode

Default is Fast PIO 4

Ultra DMA Mode

Default is Mode 2.

Secondary Slave**Type**

Default is Disabled.

Multi-Sector Transfers

Default is Disabled.

LBA Mode Control

Default is Disabled.

32 Bit I/O

Default is Disabled.

Transfer Mode

Default is Standard.

Ultra DMA Mode

Default is Disabled.

Advanced Menu

If you want to see advanced information of the system, such as Cache Memory, PCI Device details, enter Advanced Menu to identify or verify the settings in the computer.

Plug & Play O/S

Plug & Play O/S can work, if the OS is Windows 95/98 or 2000. The default is No.

Reset Configuration Data

This parameter will enable BIOS to reset configuration data. The default is No.

Legacy USB Support

This parameter will enable or disable USB device operation in DOS environment. The default is set to Enabled.

Default Primary Video Adapter

The default primary video adapter for the system is PCI.

Boot-time Diagnostic Screen

This parameter can enable or disable diagnostic screen during boot-time. The default is Disabled.

QuickBoot Mode

This parameter can enable or disable quick boot function. The default is Enabled.

NumLock

This parameter can set ON or OFF the number lock function. The default is ON.

Advanced Chipset Control

This sub-menu displays information of graphics aperture and memory gap.

Graphics Aperture

This parameter shows the size of graphics aperture.

Enable Memory Gap

This parameter enables or disables memory gap function. The default is Disabled.

Cache Memory

This sub-menu shows information of cache memory size, cache video, cache base, and cache extended memory area.

Memory Cache

This parameter enables or disables memory cache function. The default is Enabled.

Cache System BIOS Area

This parameter has options of Write Protect or uncached options. The default is Write Protect.

Cache Video BIOS Area

This parameter has options of Write Protect or uncached options. The default is Write Protect.

Cache Base 0-512K

This parameter has options of Write Protect or uncached options. The default is Write Protect.

Cache Base 512K-640K

This parameter has options of Write Protect or uncached options. The default is Write Protect.

Cache Extended Memory Area

This parameter has options of Write Protect or uncached options. The default is Write Protect.

Cache A000-AFFF

The default is Disabled.

Cache B000-BFFF

The default is Disabled.

Cache C800-CBFF

The default is Disabled.

Cache CC00-CFFF

The default is Disabled.

Cache D000-D3FF

The default is Disabled.

Cache D400-D7FF

The default is Disabled.

Cache D800-DBFF

The default is Disabled.

Cache DC00-DFFF

The default is Disabled.

Cache E000-E3FF

The default is Disabled.

Cache E400-E7FF

The default is Disabled.

Cache E800-EBFF

The default is Disabled.

Cache EC00-EFFF

The default is Disabled.

I/O Device Configuration

This sub-menu shows information of large disk access mode, local bus IDE adapter, serial port, parallel port, floppy disk controller and audio.

Large Disk Access Mode

The default is DOS. The other option is Other.

Local Bus IDE Adapter

The available options are Both, Disabled, Primary and Secondary. The default is Both.

Serial Port A

The available options are Auto, Disabled and Enabled. The default is Auto.

Parallel Port

The available options are Enabled, Auto and Disabled. The default is Enabled.

Base I/O Address

The available options are 378, 278, and 3BC. The default is 378.

Interrupt

The available options are IRQ7 and IRQ 5. The default is IRQ7.

Mode

The available options are ECP, Output Only, Bi-directional and EPP. The default is ECP.

DMA Channel

The available options are DMA3 and DMA1. The default is DMA3.

Floppy Disk Controller

The available options are Enabled, Disabled and Auto. The default is Enabled.

Base I/O Address

The available options are Primary and Secondary. The default is Primary.

Audio

The available options are Enabled and Disabled. The default is Enabled.

PCI Device, Slot #1/Slot #2/Slot #3

This sub-menu shows information of Option ROM Scan, Enable Master, and latency Timer.

Option ROM Scan

The options are Enabled and Disabled. Default value is Enabled.

Enable Master

The options are Enabled and Disabled. Default value is Disabled.

Latency Timer

The options are Default, 0020h, 0040h, 0060h, 0080h, 00A0h, 00C0h and 00E0h. Default value is Default.

Security Menu

If you want to see information of password, such as Supervisor Password, User Password, enter Security Menu to review the settings in the computer.

Supervisor Password

This parameter is Clear, if you didn't setup any Supervisor Password.

Set Supervisor Password

For setting supervisor password, click Enter. Another Sub-Menu will show, ask you to key-in new password twice. Once done, press Esc return to Security Menu.

Clear All Password

Press Enter to clear all password settings.

User Password

This parameter is Clear, if you didn't setup any user password.

Set User Password

For setting user password, click Enter. Another Sub-Menu will show, ask you to key-in new password twice. Once done, press Esc return to Security Menu.

Password on Boot

This parameter will enable or disable check password when booting the system. The default is Disabled.

Power Menu

There is only one parameter in this menu. The parameter disable or enable power savings. Default is Disabled.

Boot Menu

This menu shows information regarding system boot.

Exit Menu

If you want to setup exit procedures, choose Exit Menu. There are Exit Saving Changes, Exit Discarding Changes, Load Setup Defaults, Discard Changes, and Save Changes.

Exit Saving Changes

After changing any parameter in the Setup Configuration setting, return to Configuration/Setup Utility Exit Menu and select Exit Saving Changes to save all the settings you have changed. Click Yes, to save the configuration changes and exit.

Exit Discarding Changes

Press **Esc** to return to the Main Menu when you have finished viewing settings and making changes. Then, Select Exit Menu, from this location, you can choose Exit Discarding Changes to exit Setup but without saving your changes.

Load Setup Defaults

The computer is already configured for use. The original configuration settings, also called factory or default settings, are stored in the CMOS. Setup includes an option Load Setup Defaults that lets you reload the original configuration at any time.

To load the default settings, follow these steps:

1. Use down-arrow key to select Load Setup Defaults in Exit Menu. A dialog box appears confirming if you want to load the default settings.
2. Use the left-arrow key to select Yes, then press **Enter**.
3. Press **Esc** to exit Setup.

A dialog box appears confirming if you want to save the settings (in this case, the default settings that you reloaded).

4. Use the left-arrow key to select Yes, then press **Enter** to exit.

You must load the Setup default settings in the following instances:

- When you replace the system battery.
- When you customize the system configuration settings and some resource assignments conflict causing the computer to stop responding.

Discard Changes

Select this parameter, there will be another sub-menu asking you to confirm loading previous configuration. The default value is Yes. If Yes, all the changes made before will be undone.

Save Changes

Select this parameter, there will be another sub-menu asking you to confirm saving configuration changes. The default value is Yes. If Yes, all the changes made before will be saved.

Specifications

Dimension (width x depth x height)

- System unit: 194mm x 381 mm x 381 mm

Weight

- System unit: 10.22kg (22.5lb)

Environment

- Temperature for system unit:
 - Operating: 10° to 35°C (50° to 95°F)
 - Non-operating: -10° to 60°C (14° to 140°F)
: -20° to 60°C (-4° to 140°F)
(Storage package)
- Humidity for system unit:
 - Operating: 20% to 80% RH
 - Non-operating: 20% to 80% RH, unpacked
:20% to 80% RH, Storage package
- Vibration
 - Operating : 5~16.2 Hz ; 0.38mm (peak to peak)
16.2~250 Hz ; 0.2 G
 - Non-operating : 5~27.1 Hz; 0.6G
27.1~50 Hz; 0.4mm(peak to peak)
50~500 Hz; 2.0 G

Power consumption

- System unit: Maximum 95 Watts

Electrical input

- Input voltage for system unit (Sine-wave input is required)
- Low Range: 100 to 120 Vrms
- High Range: 200 to 240 Vrms

Operating Requirements

All machines require two power inputs: one for the system unit and one for the monitor display.

The system unit comes with a voltage selector switch, allowing selection of voltage of either 115 Vac or 230 Vac. This switch must be in the 230 Vac position when the machine is plugged into a 230 Vac electrical outlet.

The required power input for the monitor (Not included with some models) shipped with the system unit is auto-sensing type and does not require any voltage switch adjustment.

Check Procedures

Introduction	26
Start	27
Index of Symptoms, Messages, Error Codes, or Beeps	32
Troubleshooting	48
Factory-Installed Storage Devices	48
Factory-Installed Modem Card	52
Audio (Not Supported by Diagnostics Program) ..	54
CD/DVD-ROM Drive	57
Memory	59
Keyboard	60
Mouse	61
Power Supply	63
Monitor	66
Undetermined Problems	68

Introduction

This chapter contains the check procedures used to diagnose the causes of product failures. The diagnostic information consists of:

Start: This is the starting point for any diagnostic action. Based on high-level symptoms, the check procedure directs you to more detailed procedures to help resolve machine failures.

Index of Symptoms, Messages, Error Codes, or Beeps: The tables for BIOS Error Messages, Codes, Beeps, and Error Symptoms list symptoms along with their probable causes, and direct you to the applicable check procedures to help resolve machine failures. These tables also list the field replaceable units (FRUs) most likely to cause a particular problem.

Check Procedures: When the Start check procedure or the Index of Symptoms, Messages, Error Codes, or Beeps tables point you to a specific check procedure, proceed to that section. If there are any notes or instructions at the top of the page, read them before you begin with the procedure. Carefully read each step of the check procedure and perform the steps as instructed. If you do not remember the location of a specific part or test point, or an adjustment or removal procedure, see the chapter that contains that information. Always return to the check procedure after you do this. In some cases, you are referred to other check procedures to detect the cause of the failure.

Start

This is the entry point for all check procedures. The check procedures use failure symptoms, Power-On Self Test (POST) error codes, or beeps to help determine the defective field replaceable unit (FRU). Follow the suggested check procedures or use the diagnostics diskette to determine the problem FRU.

IMPORTANT: Replace FRUs ONLY when it is determined that the error is not a result of software, loose contacts, or dirty component surfaces. Any FRU change should be verified by running a complete test ("Diagnostics - All Tests" in PC-Doctor diagnostics program).

This book comes with a diagnostic program diskette. This diskette should be used ONLY with **6832 and 6833** IBM Personal Computers. Do not use this diskette on other models.

POST error codes and error messages are displayed on the screen after the IBM logo. Meanwhile, error beeps could be issued to help diagnose system problem. Please refer to "Index of Symptoms, Messages, Error Codes, or Beeps" on page 32 for additional help.

All voltages in the check procedures are positive unless otherwise indicated. Use frame ground for all voltage checks unless otherwise specified.

NOTE: If the check procedures instruct you to replace a FRU and the error message persists, an option adapter card might be causing the failure. Remove all option adapter cards, one at a time, until the error changes or the problem is no longer apparent. Replace the last option adapter card removed.

The hard disk drive contains pre-loaded software. Be sure to reload the software on the primary hard disk drive (Drive C) when replacing it.

IMPORTANT: The drives in the system you are servicing may have been rearranged, or the drive startup sequence has changed. Be extremely careful during write operations, such as copying, saving, or formatting. Data or programs can be overwritten if you select an incorrect drive. **Ask the customer to back up**

any additional software from the hard disk drive before you reload the software.

How to Diagnose Combined FRUs: If an adapter or device consists of more than one FRU, any of the FRUs might cause an error code. Before replacing the device or adapter, remove the FRUs one by one to see if the symptoms change.

If a newly replaced FRU does not correct the problem: If you have reached this point of the check procedures and were instructed to replace a FRU but doing so did not correct the problem, reinstall the original FRU and go through "Start" again.

If you want to print a copy of a Configuration/Setup Utility screen to an attached printer, press **Print Screen** key while the following screen is displayed.

READ THE FOLLOWING:

Human Error is a cause for concern when applied to check procedures. It exists in every first time set of analysis procedures. It is therefore essential for effective and time-efficient servicing that each stage of every procedure be verified. (For example: When a symptom is found, or when a symptom appears to have been cured; the preceding steps should be repeated for accuracy of analysis.)

001 - START

- To begin, note the following:
- Disable the setting of "Fast POST Mode" in Configuration/Setup Utility.
- To disable or reset the power-on password, see "User Password" on page 10.
- Disconnect all external cables and devices including speakers and microphone from the system unit, except for the keyboard, mouse, and monitor.
- Power off the system unit (unplug the power cord) before moving it or when replacing FRUs.
- Remove all adapter cards, except for the factory-installed modem adapter card and any other IBM Personal Computer factory-installed adapter cards.
- Disconnect all drives except:

- 3.5-in. diskette drive
- Hard disk drive
- IBM Personal Computer factory-installed devices (such as a CD-ROM drive)
- Ensure that all power cords and cables are connected properly.
- Ensure that the monitor brightness and contrast controls are not turned down.
- Power on the system unit.

NOTE: Some monitors have a detachable system I/O signal cable between the monitor and the system unit. In this case, check this signal cable before replacing the unit. See “Monitor Port Signals” on page 135 for pin identification.

- Ensure correct monitor refresh rate.
- Note any symptoms, messages, error codes, or beeps.
- Make sure that there are no diskettes or CDs in the drives.

002 - DOES AN IBM LOGO SCREEN APPEAR? (YES, READ AHEAD. NO, GO TO STEP 004.)

- Insert diagnostics diskette in the diskette drive.

003 - DOES SYSTEM LOAD THE DIAGNOSTICS PROGRAM FROM THE DISKETTE DRIVE? (YES, READ AHEAD. NO, GO TO STEP 004.)

- Follow the instructions on the screen and select Utility from the diagnostics program menu.
- Select Tech Support Form from the menu, press **F5** to execute, then generate a system configuration report.
- Compare the system configuration list with the actual devices installed in system.

NOTE: If necessary, remove the machine cover and visually compare the devices installed in system to those shown in the system configuration report.

- Go to step 006.

004 - DO ANY MESSAGES, ERROR CODES, OR SYMPTOMS APPEAR? (YES, READ AHEAD. NO, GO TO STEP 005)

- Go to “Index of Symptoms, Messages, Error Codes, or Beeps” on page 32.
- End.

005 -

- If the keyboard responds incorrectly, go to “Keyboard” on page 60.
- If monitor problems appear, such as jittering, shifting, or being out of focus, go to “Monitor” on page 66.

006 - DOES THE SYSTEM CONFIGURATION REPORT CORRECTLY IDENTIFY THE DEVICES INSTALLED IN SYSTEM? (YES, READ AHEAD. NO, GO TO STEP 007.)

- Select Diagnostics from the diagnostics program menu.
- Select and execute **All Tests**.
 - Go to step 008.

007 -

- The system configuration report shows only those devices supported by the diagnostics diskette.
- If a device is missing from the list and is not factory installed, refer to the service manual provided for that device.

008 - DO THE DIAGNOSTICS FINISH WITHOUT ANY ERRORS? (YES, READ AHEAD. NO, GO TO STEP 009.)

- If the Diagnostics \ All Tests did not detect a failure but the system still indicates a failure:
 - Check all adapter card jumper settings.
 - Check all adapter card switch settings.
 - Check all adapter card cables and connectors. Make sure that all of the above are set correctly and show the correct voltages and continuity. Replace any defective cables or adapter cards. See “Parts/Test Point Locations” on page 111.
 - Run the Diagnostics \ All Tests again.

- If an error or other symptom is displayed, go to “Index of Symptoms, Messages, Error Codes, or Beeps” on page 32.
- If no error can be detected or the symptom is intermittent, go to “Undetermined Problems” on page 68.
- End

009 -

- If the last test stops and you cannot continue, first make sure all switches, power connectors, cables, and jumpers are set correctly and show the correct voltages and continuity.
- Take note of any messages, error codes, beeps, or new symptoms. Go to “Index of Symptoms, Messages, Error Codes, or Beeps” on page 32.
- If there is no error symptom or the error symptom is intermittent, go to “Undetermined Problems” on page 68.

Index of Symptoms, Messages, Error Codes, or Beeps

How to Use Error Messages: Use the messages, error codes, and beeps combinations that occur to diagnose failures. If more than one failure occurs, begin the diagnosis from the first failure that appeared. The cause of the first failure can result in false messages, error codes, or beeps. If you did not receive any messages, error codes, or beeps, see if the symptom is listed in “Table 2-3 Error Symptoms List” on page 38.

CAUTION: When you have deemed it necessary to replace a FRU, and have done so, you must run a total system check to ensure that no other activity has been affected by the change. This system check can be done through the diagnostics program (Select Diagnostics, then select and execute All Tests from PC-Doctor).

POST: Some diagnostic aids are resident in the machine, such as the Power-On Self Test (POST). The machine performs the POST each time it is powered on. Use this information throughout the diagnostic procedures. The POST is a series of system checks and initializations that verify the correct operation of the base system.

After a successful POST, the system attempts to load the operating system. The system can be customized for different startup (boot) methods by the BIOS Configuration/Setup Utility. See “BIOS Configuration/Setup Utility” on page 12.

The system's default startup sequence automatically looks for the operating system files in the hard disk if these files are not found in the diskette.

WARNING: Remember that POST does not test all areas, but only those that allow the system to operate well enough to run the diagnostics program.

Table 2-1 lists BIOS error codes, messages, and their possible causes. Table 2-2 lists BIOS beeps and their possible causes. Table 2-3 lists error symptoms and their possible causes. The most likely cause is listed first. Make sure you complete all items in the cause or

“Action/FRU” column. When servicing a system, always begin with “Start” on page 27.

If you are unable to correct the problem using these two index tables, go to “Undetermined Problems” on page 68.

NOTE:

1. If an error message and incorrect audio response occur, diagnose the error message first.
2. If you cannot run the diagnostics program tests but did receive a POST error code and message, use “Table 2-1 POST Error Codes and Messages List” on page 34 to diagnose system problems.
3. If you cannot run the diagnostics program tests but did receive POST error beeps, use See “Table 2-2 BIOS Error Beeps List” on page 37 to diagnose system problems.
4. If you did not receive any error message, look for a description of your error symptoms in “Table 2-3 Error Symptoms List” on page 38.

IMPORTANT: Check all power supply voltages, switch, and jumper settings before you replace the system board. Also check the power supply voltages if you have a “system no-power” condition.

5. If you are unable to correct the problem by using the “BIOS Error Codes, Messages, And Beeps List” table and “Error Symptoms List” table, go to “Undetermined Problems” on page 68.

Table 2-1 POST Error Codes and Messages List

NOTE: To diagnose a problem, first find the BIOS error messages or codes in left column. If directed to a check procedure, replace the FRU indicated in the check procedure. If no check procedure is indicated, the first Action/FRU listed in right column is the most likely cause.

BIOS Error Codes, Messages	Action/FRU
0200 Failure Fixed Disk	<ol style="list-style-type: none"> 1. Check to see if fixed disk is attached properly. 2. Run Setup. Find out if the fixed disk type is correctly identified. 3. Check the indicated disk, by trying to fix another one.
0210 Stuck Key	<ol style="list-style-type: none"> 1. Check keyboard 2. Check system board
0211 Keyboard Error	<ol style="list-style-type: none"> 1. Re-connect keyboard 2. Enter Configuration/ Setup Utility and load the default settings 3. Check keyboard 4. Check system board
0212 Keyboard Controller Failed	<ol style="list-style-type: none"> 1. Check keyboard controller
0230 Shadow RAM Failed at Offset: nnnn 0231 System RAM Failed at Offset: nnnn 0232 Extended RAM Failed at Offset: nnnn	<ol style="list-style-type: none"> 1. Insert the memory modules in the RIMM sockets properly, then reboot the system 2. Memory module. See "005 -" on page 59 to replace memory module 3. System board
0250 System Battery is Dead-Replace and Run SETUP	<ol style="list-style-type: none"> 1. Check system battery. If replaced, re-run Setup
0251 System CMOS Checksum Bad-Default Configuration Used	<ol style="list-style-type: none"> 1. Run Setup. Load the default settings, or enter Setup to key-in your own values. 2. Check system battery

Table 2-1 POST Error Codes and Messages List

NOTE: To diagnose a problem, first find the BIOS error messages or codes in left column. If directed to a check procedure, replace the FRU indicated in the check procedure. If no check procedure is indicated, the first Action/FRU listed in right column is the most likely cause.

BIOS Error Codes, Messages	Action/FRU
0260 System Timer Error 0270 Real Time Clock Error	1. Check system board
0271 Check Date and Time Settings	1. Run Setup. Reset the Real-Time clock.
0280 Previous Boot Incomplete-Default Configuration Used	1. Run Setup. Verify if the wait-state configuration is correct.
0281 Memory Size Found by POST Differed from CMOS	1. Check system battery
02B0 Diskette Drive A Error	1. Re-connect floppy disk drive 2. Enter Configuration/ Setup Utility and load the default settings. 3. Floppy disk drive 4. System board
02B1 Diskette Drive B Error	1. Re-connect floppy disk drive 2. Enter Configuration/ Setup Utility and load the default settings. 3. Floppy disk drive 4. System board
02B2 Incorrect Drive A Type-Run SETUP	1. Re-connect floppy disk drive 2. Enter Configuration/ Setup Utility and load the default settings. 3. Floppy disk drive 4. System board

Table 2-1 POST Error Codes and Messages List

NOTE: To diagnose a problem, first find the BIOS error messages or codes in left column. If directed to a check procedure, replace the FRU indicated in the check procedure. If no check procedure is indicated, the first Action/FRU listed in right column is the most likely cause.

BIOS Error Codes, Messages	Action/FRU
02B3 Incorrect Drive B Type-Run SETUP	<ol style="list-style-type: none"> 1. Re-connect floppy disk drive 2. Enter Configuration/ Setup Utility and load the default settings. 3. Floppy disk drive 4. System board
02D0 System Cache Error-Cache Disabled	<ol style="list-style-type: none"> 1. Replace processor
02F0 CPU ID:	<ol style="list-style-type: none"> 1. Check CPU
02F4 EISA CMOS Not Writeable	<ol style="list-style-type: none"> 1. Check EISA CMOS

Table 2-2 BIOS Error Beeps List

NOTE: To diagnose a problem, first find the BIOS beeps in left column. If directed to a check procedure, replace the FRU indicated in the check procedure. If no check procedure is indicated, the first Action/FRU listed in right column is the most likely cause.

BIOS Error Beeps	Action/FRU
1-2-2-3 BIOS ROM checksum	<ol style="list-style-type: none"> 1. Bootblock recovery 2. Check ROM 3. Check System board
1-3-1-1 Test DRAM refresh	<ol style="list-style-type: none"> 1. Check RIMM 2. Check system board.
1-3-1-3 Test 8742 Keyboard controller	<ol style="list-style-type: none"> 1. Check keyboard 2. Refresh BIOS 3. Check system board
1-3-4-1 RAM failure on address line	<ol style="list-style-type: none"> 1. Check RIMM
1-3-4-3 RAM failure on data	<ol style="list-style-type: none"> 1. Check RIMM
2-1-2-3 Check ROM copyright notice	<ol style="list-style-type: none"> 1. Bootblock recovery 2. Check system board
2-2-3-1 Test for unexpected interrupts	<ol style="list-style-type: none"> 1. Check components one by one
1-2 Checksum failure on option ROM	<ol style="list-style-type: none"> 1. Check video card 2. Bootblock recovery 3. Check system board

Table 2-3 Error Symptoms List

NOTE: To diagnose a problem, first find the error symptom in the left column. If directed to a check procedure, replace the FRU indicated in the check procedure. If no check procedure is indicated, the first Action/FRU listed in right column is the most likely cause.

Error Symptoms	Action/FRU
Processor / Processor Fan	
<p>NOTE: Normally, the processor fan should be operative, and the processor clock setting should be exactly set to match its speed requirement before diagnosing any processor problems.</p>	
<p>Processor fan does not run but power supply fan runs.</p>	<ol style="list-style-type: none"> 1. Ensure that the system is not in power saving mode and the "Stop CPU clock in sleep state" is not set to Yes. See "Power Management" on page 5. 2. With the system power on, measure the voltage of processor fan connector FN2. Its reading should be +12Vdc. See "System Board Jumpers and Connectors" on page 113. 3. Processor fan. 4. System board.
<p>Processor test failed.</p>	<ol style="list-style-type: none"> 1. Processor. 2. System board.
System Board and Memory	
<p>NOTE: Ensure that the memory modules are installed properly and the contact leads are clean before diagnosing any system problems.</p>	
<p>Memory test failed.</p>	<ol style="list-style-type: none"> 1. See "Memory" on page 59. 2. System board

Error Symptoms	Action/FRU
Incorrect memory size shown or repeated during POST.	<ol style="list-style-type: none"> 1. Insert the memory modules in the RIMM sockets properly, then reboot the system. 2. Memory module. See "005 -" on page 59 to replace memory module. 3. System board.
System works but fails to enter power saving mode when the Power Management Mode is set to [Enabled], and power saving timer set in BIOS has elapsed.	<ol style="list-style-type: none"> 1. Enter Configuration/ Setup Utility and load default settings. 2. In Windows ME or Windows 2K, check settings in Power Management Property of Control Panel. 3. Reload software from Recovery CD.
System hangs before system boot.	<ol style="list-style-type: none"> 1. See "Index of Symptoms, Messages, Error Codes, or Beeps" on page 32. 2. See "Undetermined Problems" on page 68
System hangs after system boot.	<ol style="list-style-type: none"> 1. Execute a system test ("Diagnostics / All Tests" in PC-Doctor diagnostics program) and set it to stop at "Halt on Error" to see the potential cause of the problem. 2. "Undetermined Problems" on page 68.
Blinking cursor only; system does not work.	<ol style="list-style-type: none"> 1. See "Start" on page 27. 2. Diskette/IDE drive connection/cables 3. Diskette/IDE disk drives 4. See "Undetermined Problems" on page 68 5. System board

Error Symptoms	Action/FRU
Diskette Drive	
<p>NOTE: Ensure that the diskette drive is configured correctly in Configuration/Setup Utility and its read/write head is clean before diagnosing any diskette drive problems.</p>	
Media and drive are mismatched.	<ol style="list-style-type: none"> 1. Ensure that the diskette drive is configured correctly in the Disk Drives of Configuration/Setup Utility. See "Hard Disk Drive" on page 4. 2. Ensure that the diskette drive is correctly formatted. 3. Diskette drive connection/cable 4. Diskette drive 5. System board
Diskette drive does not work.	<ol style="list-style-type: none"> 1. Ensure that the diskette drive is not set to [None] in the Disk Drives of Configuration/Setup Utility. See "Hard Disk Drive" on page 4. 2. Diskette drive power 3. Diskette drive connection/cable 4. Diskette drive 5. System board
Diskette drive read/write error.	<ol style="list-style-type: none"> 1. Diskette. 2. Ensure that the diskette drive is not set to [Write protect] in the Security Options of Configuration/Setup Utility. 3. Diskette drive cable. 4. Diskette drive. 5. System board.
Diskette drive LED comes on for more than 2 minutes when reading data.	<ol style="list-style-type: none"> 1. Diskette 2. Diskette drive connection/cable 3. Diskette drive 4. System board

Error Symptoms	Action/FRU
Diskette drive LED fails to light, and the drive is unable to access for more than 2 minutes.	<ol style="list-style-type: none"> 1. Diskette 2. Diskette drive power 3. Diskette drive connection/cable 4. Diskette drive 5. System board
Diskette drive test failed.	<ol style="list-style-type: none"> 1. Diskette 2. Diskette drive 3. Diskette drive cable 4. System board
Hard Disk Drive	
<p>NOTE: Ensure hard disk drive is configured correctly in Configuration/Setup Utility, and cables/jumpers are set correctly before diagnosing any hard disk drive problems.</p>	
Hard disk drive test failed.	<ol style="list-style-type: none"> 1. Enter Configuration/Setup Utility and Load default settings. 2. Hard disk drive cable. 3. Hard disk drive. 4. System board.
Hard disk drive format error.	<ol style="list-style-type: none"> 1. Enter Configuration/Setup Utility and Load default settings. 2. Hard disk drive cable. 3. Hard disk drive. 4. System board.
Hard disk drive write error.	<ol style="list-style-type: none"> 1. Enter Configuration/Setup Utility and Load default settings. 2. Hard disk drive.

Error Symptoms	Action/FRU
<p>Hard disk drive LED fails to light, but system operates normally.</p>	<ol style="list-style-type: none"> 1. With the system power on, measure the voltage of hard disk LED connector CN6. The reading should be: CN6 HDD Idle / Active pin-1 pin-1 +5Vdc/ -- pin-2 pin-2 +5Vdc/ 0Vdc pin-3 pin-3 +5Vdc/ 0Vdc pin-4 pin-4 +5Vdc/ -- 2. See "System Board Jumpers and Connectors" on page 113. 3. Hard drive LED cable.
CD/DVD-ROM Drive	
<p>NOTE: Ensure CD/DVD-ROM drive is configured correctly in Configuration/Setup Utility, and cables/jumpers are set correctly and its laser beam is clean before diagnosing any CD/DVD-ROM drive problems.</p>	
<p>CD/DVD-ROM drive LED flashes for more than 30 seconds before LED shutting off.</p> <p>Software asks to reinstall disc.</p> <p>Software displays a reading CD/DVD error.</p>	<ol style="list-style-type: none"> 1. CD/DVD may have dirt or foreign material on it. Check with a known good disc. 2. CD/DVD is not inserted properly. 3. CD/DVD is damaged.
<p>CD/DVD-ROM drive LED doesn't come on but works normally.</p>	<ol style="list-style-type: none"> 1. CD/DVD-ROM drive

Error Symptoms	Action/FRU
<p>CD/DVD-ROM drive cannot load or eject when the system is turned on and its eject button is pressed and held.</p>	<ol style="list-style-type: none"> 1. See “CD-ROM Emergency-exit <option 1>” on page 128 and “CD-ROM Emergency-exit <option 2>” on page 128. 2. Disconnect all cables from CD/DVD-ROM drive except power cable, then press eject button to try to unload the disk. 3. CD/DVD-ROM drive power. 4. CD/DVD-ROM drive
<p>CD/DVD-ROM drive does not read and there are no error codes or messages are displayed.</p>	<ol style="list-style-type: none"> 1. CD may have dirt or foreign material on it. Check with a known good disc. 2. Ensure that the CD/DVD-ROM driver is installed properly. See “CD/DVD-ROM Drive” on page 57. 3. CD/DVD-ROM drive.
<p>CD/DVD-ROM drive can play audio CD but no sound output.</p>	<ol style="list-style-type: none"> 1. Ensure that the headphone jack of the CD/DVD-ROM has an output, then check if the audio cable from CD/DVD-ROM drive to system board CN20 is connected properly. See “System Board Jumpers and Connectors” on page 113. 2. Turn up the sound volume. 3. Speaker power/ connection/cable. 4. CD/DVD-ROM drive.

Error Symptoms	Action/FRU
Real-Time Clock	
Real-time clock is inaccurate.	<ol style="list-style-type: none"> 1. Ensure that the information in the Date and Time of Configuration/Setup Utility is set correctly. 2. Load default settings. 3. CMOS battery. 4. System board
Audio	
Audio software program invokes but no sound comes from speakers.	<ol style="list-style-type: none"> 1. Speaker power/ connection/cable.
Modem	
Data/fax modem software program invokes but cannot receive/send data/fax	<ol style="list-style-type: none"> 1. See "Factory-Installed Modem Card" on page 52.
Fax modem software program invokes but has no sound output. (Data files are received normally; voice from modem cannot be produced, but system sound feature works normally.)	<ol style="list-style-type: none"> 1. Ensure that the modem voice-in cable from modem adapter card to system board CN21 is connected properly. See "System Board Jumpers and Connectors" on page 113. 2. "Factory-Installed Modem Card" on page 52.

Error Symptoms	Action/FRU
<p>Modem ring cannot wake up system from suspend mode.</p>	<ol style="list-style-type: none"> 1. Ensure the "Modem Wake-Up on Ring" in Configuration/Setup Utility is set to [Enabled]. "Power Management" on page 5. 2. If PCI modem card is used, reinsert the modem card to PCI slot firmly or replace modem card. 3. If ISA modem card is used, ensure the modem ring-in cable from the modem card to system board CN16 is connected properly. See "System Board Jumpers and Connectors" on page 113. 4. In Windows ensure that telephone application is configured correctly for your modem and set to receive messages and/or fax.
Video and Monitor	
<p>Video memory test failed. Video adapter failed.</p>	<ol style="list-style-type: none"> 1. Remove all non factory-installed cards. 2. Load default settings (if screen is readable). 3. System board
<p>Display problem:</p> <ul style="list-style-type: none"> - Incorrect colors - No high intensity - Missing, broken, or incorrect characters - Blank monitor(dark) - Blank monitor(bright) - Distorted image - Unreadable monitor - Other monitor problems 	<ol style="list-style-type: none"> 1. Monitor signal connection/cable. 2. Monitor 3. Video adapter card 4. System board

Error Symptoms	Action/FRU
Display changing colors.	<ol style="list-style-type: none"> 1. Monitor signal connection/cable 2. Monitor 3. System board
Display problem not listed above (including blank or illegible monitor).	<ol style="list-style-type: none"> 1. "Monitor" on page 66. 2. Load default settings (if screen is readable). 3. System board
Parallel/Serial Ports	
NOTE: Execute "Load BIOS Default Settings" in Configuration/Setup Utility to confirm ports' presence before diagnosing any parallel/serial ports problems.	
Serial or parallel port loop-back test failed.	<ol style="list-style-type: none"> 1. Make sure that the LPT# or COM# you test is the same as is set in Configuration/Setup Utility. 2. Loop-back. 3. System board.
Printing failed.	<ol style="list-style-type: none"> 1. Ensure that the printer driver is properly installed. 2. Refer to the service manual for the printer. 3. Printer. 4. Printer cable. 5. System board.
Printer problems.	<ol style="list-style-type: none"> 1. Refer to the service manual for the printer.
Joystick	
Game port does not respond or does not work.	<ol style="list-style-type: none"> 1. Connect a joystick to the game port, then execute "Interactive Test/Joystick" test in PC-Doctor diagnostics program. 2. System board.

Error Symptoms	Action/FRU
Diagnostic Program	
Diagnostics programs cannot be executed.	<ol style="list-style-type: none"> 1. Reboot the system from the diagnostics diskette. 2. Load default settings. 3. Diagnostics diskette. 4. Memory module. 5. System board.
Missing diagnostics file(s).	<ol style="list-style-type: none"> 1. Diagnostics diskette.
Keyboard	
Some or all keys on keyboard do not work.	<ol style="list-style-type: none"> 1. "Keyboard" on page 60.
Power Supply	
Pressing power switch does not turn off system. (Only unplugging power cord from electrical outlet can turn off system.)	<ol style="list-style-type: none"> 1. Power switch cable assembly 2. "Power Supply" on page 63
Pressing power switch does not turn on system.	<ol style="list-style-type: none"> 1. Power switch cable assembly.
Executing software shutdown from Windows2000, Windows ME, or Windows NT Start menu does not turn off system. (Only pressing power switch can turn off the system).	<ol style="list-style-type: none"> 1. Load default settings. 2. Reload software from Recovery CD.
No system power, or power supply fan is not running.	<ol style="list-style-type: none"> 1. "Power Supply" on page 63 2. System board.
Other Problems	
Any other problems.	<ol style="list-style-type: none"> 1. See "Undetermined Problems" on page 68

Troubleshooting

Failing Parts or Assemblies: The check procedures generally help you trace a problem to one part or assembly. The last step of the specific check procedure you are using indicates that a part or assembly is failing. You should inspect the part or assembly before you decide to replace it. It might be loose, dirty, or in need of a small repair. The check procedures might lead you to two, or even three, possible failing parts or assemblies. The parts that might be failing are listed in order of the most probable failure. Also, the FRU parts are defined as replaced units and are not repaired in the field.

Measuring Voltages: Some check procedure steps instruct you to measure voltages on cable plugs and electronic board connectors. If you are asked to measure voltage at several places on a plug or connector, a chart next to or near the instruction indicates the number of the plug or connector, the pin numbers you should measure, the signal name, and the correct voltage for the condition you are measuring. Measure the voltage only at the pins listed in the chart. Remember to set the meter on the correct scale and to put the meter leads in the correct position for the voltage you are asked to measure.

NOTE: Use frame ground as the ground reference. Attach the black (ground) lead of meter to frame ground, except where specified otherwise.

Factory-Installed Storage Devices

Use this check procedure to test any factory-installed drives, including Zip drives.

ATTENTION: The customer may have customized settings in the Configuration/Setup Utility (other than default settings) on the computer you are servicing. Running the Configuration/Setup Utility might alter those settings. Take note of the current settings and verify that the customer settings are in place when service is complete.

NOTE: If you cannot access the hard disk drive or load a diskette from Drive A or load a CD from the CD-ROM drive, make sure that the Configuration/Setup Utility has the startup sequence set with diskette, CD ROM, and hard disk drives.

001 - START

- Insert the diagnostics diskette into the diskette drive.
- Power-off then power-on the system unit.

002 - DO ANY POST MESSAGES, ERROR CODES, BEEPS, OR SYMPTOMS OCCUR? (YES, READ AHEAD. NO, GO TO STEP 003)

- Go to "Index of Symptoms, Messages, Error Codes, or Beeps" on page 32.
- End.

003 -

- Select Utility from the menu.
- Select and execute Tech Support Form from the menu to generate a system configuration report.
- Compare the system configuration list with the actual devices installed in system.

NOTE: If necessary, remove the cover and visually compare the devices installed in the system unit to those shown in the Tech Support Form.

004 - IF THE NUMBER OF DISKETTE, HARD DISK, OR CD-ROM DRIVE IS NOT CORRECT, READ AHEAD; OR GO TO STEP 005.

- Check the cable installation of all disk drives.(See "System Board Jumpers and Connectors" on page 113)
 - Diskette drive should be connected to the system board connector FLOPPY.
 - IDE Primary Channel Master and Slave Drives in Configuration/Setup Utility should be connected to the system board connector PRIMARY.
 - IDE Secondary Channel Master and Slave Drives in Configuration/Setup Utility should be connected to the system board connector SECONDARY.

NOTE: The CD-ROM drive that comes with system unit should be configured as IDE Secondary Channel Master device.

- Check all power supply voltages, switch, and jumper settings before you replace the system board. (See “System Board Jumpers and Connectors” on page 113)
- Check the power supply voltages if you have a “system no-power” condition. See “Power Supply Connectors and Voltages” on page 115.
- Check the hard disk and CD-ROM drives jumper settings. See “3.5-In. Hard Disk Drive Jumper Settings” on page 125. Check the voltages of all disk drive power connectors. See “Power Supply Connectors and Voltages” on page 115.
- Correct the parameter settings under Disk Drives in the Configuration/Setup Utility. See “Hard Disk Drive” on page 4.
 - In the Configuration/Setup Utility, check that the correct drive size is set for the flagged drive shown in the System Information.
- Enter Configuration/Setup Utility and load default settings.

If the problem remains, check the continuity on the drive and the cable and replace it if necessary. If that does not fix the problem, replace the system board.
- End.

005 -

- Select Diagnostics from the PC-Doctor diagnostics program main menu. Select and execute Floppy Disk Test if you want to test diskette drive. Select and execute Hard Disk Test if you want to test hard disk drive.
- Select Interactive Tests from the PC-Doctor diagnostics program main menu, then select and execute CD-ROM/DVD Test if you want to test CD-ROM drive.

- If the diagnostics program did not detect a failure, but the system still displays a failure:
 - If an error or other symptom appears, go to “Index of Symptoms, Messages, Error Codes, or Beeps” on page 32.
 - If no error can be detected or the symptom is intermittent, go to “Undetermined Problems” on page 68.
- End.

Factory-Installed Modem Card

NOTE: The factory-installed modem is a 56.6 Kbps modem with a cable of microphone-in and speaker-out from system board.

001 - START

- In Windows ME or Windows 2K Device Manager, ensure that the modem is not configured with a conflicting COM port and IRQ setting.
- Ensure that the communication software is configured with the correct COM and IRQ settings (same COM port and IRQ as the modem).
- Ensure that all communication parameters (baud rate, data, stop and parity bits) are properly configured and are identical on both sides.
- Connect the phone line to the LINE port of the modem card.
- Power off the system unit.

NOTE: Check the outside phone line by connecting a working telephone to the telephone wall jack. Listen for a dial tone to ensure that the phone line is good.

002 -

- Insert the diagnostics diskette into the diskette drive.
- Power on the system unit.
- Select Diagnostics menu.
- Select All Tests, then execute Modem test.

003 - DOES THE MODEM PASS THE TEST? (YES, READ AHEAD. NO, GO TO STEP 004.)

- Power off the system unit.
- Remove all adapter cards.
- Connect a hard disk drive with pre-loaded Windows ME or Windows 2K.
- Power on the system unit.
- Perform the following steps under Windows ME or Windows 2K.

NOTE: If an operating system other than Microsoft Windows ME or Windows 2K is installed, the

program screens and icons may differ from these instructions.

1. Start Microsoft Windows ME or Windows 2K.
2. Select the **Start** icon.
3. Select **Program**, then select **Accessories, Hyper Terminal**.
4. Select an on-line service station, dial and connect to it.

004 - CAN THE MODEM DIAL OUT AND CONNECT TO ANY BBS SUCCESSFULLY? (YES, READ AHEAD. NO, GO TO STEP 005.)

- The modem adapter functions normally.
- End.

005 -

- Ensure that Windows ME or Windows 2K is properly installed, then power off the system unit.
- Plug the modem adapter card into a different PCI expansion slot.
- Go to step 002.
- If the error symptom still remains, replace the modem adapter card.
- End.

Audio (Not Supported by Diagnostics Program)

IMPORTANT: Audio tests for the sound card cannot be carried out in the PC-Doctor DOS diagnostics program. It is, however, possible to carry out a dial tone test for the modem. While performing this check, you may need to enter and exit Microsoft Windows ME or Windows 2K several times. When instructed to select an icon or button, double click on the item with the mouse.

NOTE: For more information about using Microsoft Windows ME or Windows 2K, see the user's guide that came with the computer. If an operating system other than Microsoft Windows ME or Windows 2K is installed, the program screens and icons may differ from these instructions.

001 - START

- Power off the system unit.
- Remove all adapter cards.
- Connect a hard disk drive with pre-loaded Windows ME or Windows 2K.
- Power on the system unit.
- Load default settings in setup (audio may be disabled).

002 - DO ANY POST MESSAGES, ERROR CODES, BEEPS, OR SYMPTOMS APPEAR? (YES, READ AHEAD. NO, GO TO STEP 003)

- Go to "Index of Symptoms, Messages, Error Codes, or Beeps" on page 32.
- End.

003 - DO ANY MESSAGES OR ERROR CODES DISPLAY AFTER POST COMPLETES BUT BEFORE MICROSOFT Windows ME or Windows 2K STARTS? (YES, READ AHEAD. NO, GO TO STEP 004)

NOTE: If POST does not complete, answer this question "No."

- Ensure that Windows ME or Windows 2K is

properly installed.

- End.

004 -

- Perform the following under Windows ME or Windows 2K.

NOTE: If an operating system other than Microsoft Windows ME or Windows 2K is installed, the program screens and icons may differ from these instructions.

1. Start Microsoft Windows ME or Windows 2K.
2. Select the **Start** icon.
3. Select **Settings**, then select **Control Panel**.
4. Select the **Sound** icon.
5. In the Sound window, select chimes from the **Names** field. (To test other adapter card software, select an action from a menu in that software.)

005 - IS THE PREVIEW BUTTON, OR ACTION IN OTHER SOFTWARE, SELECTABLE ON THE SCREEN (SHOWN IN BLACK AND NOT GRAY)? (YES, GO TO STEP 006. NO, READ AHEAD.)

- Ensure that Windows ME or Windows 2K is properly installed.
- Go to step 001.

006 -

- Select the Preview button from the Sound window.

007 - DO YOU HEAR ANY SOUND FROM THE SPEAKER? (YES, READ AHEAD. NO, GO TO STEP 008.)

- The audio feature is functioning normally. Click Cancel to close the dialog box. Exit Microsoft Windows ME or Windows 2K.
- If the symptom remains or has changed, go to "Index of Symptoms, Messages, Error Codes, or Beeps" on page 32.
- End.

008 -

- Make sure that the volume control is not turned low.

- Make sure that the speaker and its adapter are not damaged.
- Make sure that the speaker is plugged in speak-out jack. See “System Board Jumpers and Connectors” on page 113.
- If the error cannot be resolved, replace the system board.
- End.

CD/DVD-ROM Drive

001 - START

- Insert the diagnostics diskette into the diskette drive and ensure that there is no CD/DVD in the CD/DVD-ROM drive.
- Select **Interactive Tests** menu, then select and execute **CD/DVD-ROM Test**.

002 - DO YOU SEE A MESSAGE “NO CD/DVD-ROM DRIVE OR MSCDEX DEVICE DRIVER INSTALLED.”? (YES, READ AHEAD. NO, GO TO 003.)

- Exit the diagnostics program and power off the system.
- Check and ensure that the CD/DVD-ROM drive power cable and audio and data cables are not damaged and are connected properly.
- Check and ensure that the CD/DVD-ROM drive driver is loaded correctly.
- Load default settings.

003 - DO THE TESTS OF OPEN/CLOSE TRAY BY DIAGNOSTICS PROGRAM AND BY DEPRESSING CD/DVD-ROM DRIVE BUTTON WORK? (YES, READ AHEAD. NO, GO TO STEP 006.)

- Load a known good data CD/DVD into the CD/DVD-ROM drive and try to read its content by typing DIR at DOS prompt.

004 - CAN A CD/DVD BE READ FROM THE CD/DVD-ROM DRIVE? (YES, THEN THE CD/DVD-ROM DRIVE FUNCTIONS NORMALLY. NO, READ AHEAD.)

- Try reading the CD/DVD with a known good CD/DVD-ROM drive.

**005 - IS THE CD/DVD STILL NOT READABLE?
(YES, READ AHEAD. NO, GO TO STEP 006.)**

- Replace system board.
- End.

006 -

- Replace CD/DVD-ROM drive.
- End.

Memory

001 - START

- Power off the system unit.
- Insert the diagnostics diskette into the diskette drive.
- Ensure that all RIMMs are installed correctly.
- Power on the system unit.
- Take note of any messages, error codes, or symptoms.

002 - DO YOU RECEIVE POST MEMORY ERROR MESSAGE? (YES, READ AHEAD. NO, GO TO STEP003)

- Enter Configuration/Setup Utility then reboot the system. Take note of any messages, error codes, or symptoms. If the error message remains, go to step 005.

003 -

- Follow the screen instructions to run the Memory test.

004 - DOES THE MEMORY TEST COMPLETE WITHOUT AN ERROR? (YES, READ AHEAD. NO, GO TO STEP005)

- The system memory is now functioning correctly. If you suspect an intermittent problem, run the Memory test again.
- End.

005 -

- Replace each RIMM, one at a time, with a known working RIMM of the same size and type.
- If the problem does not appear, it means that the last RIMM replaced is defective. If all RIMMs on the system board, have been replaced and the problem remains, replace system board.
- Go to step 001.

NOTE: If system board has no memory installed, you will hear L-L-S-S-S. (L: long beep, S: short beep) beeps during POST.

Keyboard

001 - START

- Power off system unit and ensure the keyboard plug is connected properly.

002 -

- Insert the diagnostics diskette into the diskette drive and power on the system unit.
- Select Interactive Tests menu, then execute Keyboard test.

003 - DOES THE KEYBOARD FUNCTION CORRECTLY? (YES, READ AHEAD. NO, GO TO STEP 004.)

- Keyboard is functioning normally.
- End.

004 - ARE THERE ANY STUCK KEYS OR ANY GRIME IN THE GAP OF KEYCAPS? (YES, READ AHEAD. NO, GO TO STEP 005.)

- Power off the system unit. Carefully remove the grime and solve the stuck keys problem.
- Go to step 001.

005 - ARE THERE ANY BROKEN PINS IN THE KEYBOARD PLUG? (YES, GO TO STEP 007. NO, READ AHEAD.)

- Try with a known good keyboard.

006 - DOES THE ERROR SYMPTOM STILL REMAIN? (YES, READ AHEAD. NO, GO TO STEP 007.)

- Replace the system board.
- End.

007 -

- Replace the keyboard.
- End.

Mouse

NOTE: A sticking key button can cause the mouse to operate incorrectly. If you suspect this, go to “Keyboard” on page 60.

001 - START

- Make sure that the mouse ball turns freely.
- Make sure that the mouse plug connects properly.

002 -

- Power off the system unit.
- Insert the diagnostics diskette into the diskette drive.
- Power on the system unit.
- Select Interactive Tests menu, then execute Mouse test.

003 - DO YOU SEE THE MOUSE CURSOR IN THE DIAGNOSTICS PROGRAM? (YES, READ AHEAD. NO, GO TO STEP 011)

- Test right (left) button and check if right (left) button works.

004 - DOES THE MOUSE BUTTON WORK? (YES, READ AHEAD. NO, GO TO STEP 007)

- Test mouse cursor movement.

005 - DOES THE MOUSE MOVE SMOOTHLY AND KEEP X AND Y COORDINATES CHANGED? (YES, READ AHEAD. NO, GO TO STEP 006)

- Mouse is functioning normally.
- End.

006 -

- Power off the system unit.
- Open mouse bottom cover and clean track ball.
- Go to step 002.

007

- Power off the system unit.
- Check the mouse plug.

008 - ARE THERE ANY BROKEN PINS IN THE MOUSE PLUG? (YES, GO TO STEP 010. NO, READ AHEAD.)

- Try with a known good mouse.

009 - DO THE ERROR SYMPTOMS STILL REMAIN? (YES, READ AHEAD. NO, GO TO STEP 010.)

- Replace the system board.
- End.

010 -

- Replace the mouse.
- End.

011 -

- Exit diagnostics program.
- Ensure that the mouse driver is properly installed.
- Go to step 002.

Power Supply

001 - START

- Power off (unplug) the system unit. Check the power cord for continuity. Replace if necessary.
- Check for the correct line voltage from the power outlet, and verify that the voltage selector switch (if present) is set to the correct voltage.
- Power on the system unit.

002 - DOES THE POWER SUPPLY FAN RUN? (YES, GO TO STEP 003. NO, GO TO STEP 004.)

003 - DOES THE SYSTEM FAIL TO SHUT OFF WHEN THE ON/OFF SWITCH IS PRESSED? (YES, READ AHEAD. NO, GO TO STEP 005.)


- You might have a damaged on/off switch cable assembly.
- Disconnect the on/off switch cable assembly connector from the power supply connector and take an ohm reading.
- Go to step 007.

004 -


- Disconnect the power cord from the back of the system unit.
- Disconnect all power and switch cable connectors from the system board and the power supply.
- Disconnect the power connectors to all drives.
- Connect any one of the power connector to system board or drive as power load for driving up power supply.
- Reconnect the power cord and turn on the power supply.

**005 - DOES THE POWER SUPPLY FAN RUN?
(YES, READ AHEAD. NO, GO TO STEP 009)**



- With the system powered on and the power supply fan running, check the voltages of the power supply connectors for the system board and all drive connectors, as shown in the following figures.

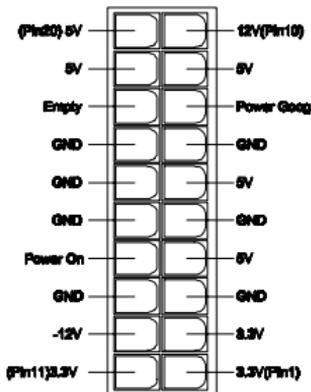

Pin-hole side view

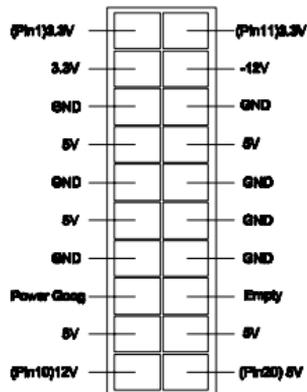

Cable side view

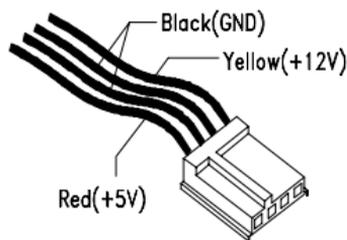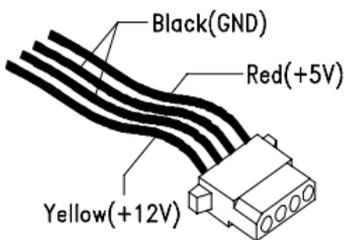

**006 - ARE THE VOLTAGES CORRECT AND DOES THE FAN RUN?
(YES, READ AHEAD. NO, GO TO STEP 009.)**

- The power supply is working normally.
- If you suspect the on/off switch cable assembly, see Step 003.
- If the fan continues to run when all connectors are plugged back in, go to See “Undetermined Problems” on page 68.
- If the fan stops running when a drive connector is plugged back in, go to “Start” on page 27.

007 - DO YOU HAVE AN OHM READING WHEN THE SWITCH IS PRESSED AND AN OPEN READING WHEN THE SWITCH IS RELEASED? (YES, READ AHEAD. NO, GO TO STEP 008.)

- Replace the on/off switch cable assembly.

008 -

- Replace the system board.
- End.

009 -

- Replace the power supply.
- End.

Monitor

First, set the system to VGA mode. To do this in Windows ME or Windows 2K, depress the F8 function key during startup. Safe mode (VGA) will be set for Windows ME or Windows 2K. Use the operating system's video setup to change the monitor resolution.

The monitors that come with the system are DDC2A/B or DDC1/2B+ (Display Data Channel) compliant. While starting Windows ME or Windows 2K, the DDC2 monitor passes resolution and frequency information to the system. The system interprets the data and sets up the proper refresh rate.

If the monitor type is set to the power saving mode, the screen remains black and the LED lights or flashes in amber color. When the monitor is turned on alone, or is turned on and connected to a powered-off system unit, the monitor LED blinks in amber color. Under the normal operating conditions, the LED lights in green color.

NOTE: Some monitors have a detachable system I/O signal cable between the monitor and the system unit. Check the line voltage, power cord, and continuity for the system I/O signal cable before replacing the monitor. See "Monitor Port Signals" on page 135 for pin identification.

001 - START

- Power off the system unit and monitor.
- Remove all adapter cards.
- Make sure that the monitor I/O signal cable is properly connected to the system unit and monitor.
- Make sure that the power cords are properly connected to the system unit and monitor, and that the line voltage is correct.
- Make sure that the monitor contrast and brightness controls are not turned too low.
- Make sure that the diagnostics diskette is in the diskette drive.
- Power on the monitor, and wait 20 seconds.
- Power on the system unit.

NOTE: If the monitor was not sold together with the system unit, you may need to refer to the service information provided with the monitor.

002 - IS THE SCREEN READABLE? (YES, READ AHEAD. NO, GO TO STEP 004)

NOTE: If the screen shows a blinking cursor with no memory count running, answer this question "No."

- Select Interactive Tests from the Main Menu.
- Select and execute Video test from the menu.
- Follow the prompts and perform the video test.
- Go to "Index of Symptoms, Messages, Error Codes, or Beeps" on page 32.
- You might have to adjust the monitor controls to obtain the best image.

003 - DOES THE MONITOR SUCCESSFULLY PASS ALL TESTS? (YES, READ AHEAD. NO, GO TO STEP 004)

- You have successfully completed the video diagnostics tests. If the problem remains, go to "Index of Symptoms, Messages, Error Codes, or Beeps" on page 32
- End.

004 -

- Power off the system unit.
- Remove the hard disk drive system cable.
- Power on the system unit.

005 - IS THE SCREEN STILL NOT READABLE?

- Replace the monitor. If the symptom remains, replace the system board.
- End.

Undetermined Problems

If an error code, error message or error beeps is present, go to “Index of Symptoms, Messages, Error Codes, or Beeps” on page 32. If you did not receive any messages, error codes, or beeps, see if the symptom is listed in “Table 2-3 Error Symptoms List” on page 38. If you still cannot solve the problem, continue with this check:

1. Check the power supply voltages (See “Power Supply Connectors and Voltages” on page 115). If the voltages are correct, return here and continue with the following steps:
2. Power off the system unit.
3. Perform the following checks, one by one, until you have isolated the problem FRU (refer to “Parts/ Test Point Locations” on page 111 for locations):
 - Load default settings in setup.
 - Check all system board jumper positions and switch settings.
 - Check all adapter card jumper positions.
 - Check all device jumper positions.
 - Check all cables and connectors for proper installation.
4. If the jumpers, switch, and voltage settings are correct, continue with the following steps:
 - Remove or disconnect the following, one at a time:
 - Non-IBM devices
 - External devices
 - Any adapter card (modem card or video card, if installed)
 - CD-ROM drive
 - Diskette drive
 - Hard disk drive
 - RIMM
 - Processor
 - System board
5. Power on the system unit.
6. Repeat steps 2 through 5 until you find the failing device or adapter.
7. If software related, reload software from Recovery CD.

8. If the symptom changes, go to “Index of Symptoms, Messages, Error Codes, or Beeps” on page 32 or to the check procedure for the last item tested.

Replace the last item tested if the system operates normally after removing the last item.

Diagnostic Aids

Introduction	72
Power-On Self Test	73
Diagnostic Diskette	75
Using the Diagnostic Diskette	75
Using Diagnostic Program from Recovery CD	76
Diagnostics Program Features	77

Introduction

This section explains the diagnostic aids, power-on self test (POST) and diagnostics program (PC-Doctor), that are available for troubleshooting problems on the system.

Power-On Self Test

Each time you power-on the system, the power-on self test (POST) is initiated. Several items are tested during POST, but are for the most part transparent to the user.

POST checks the following:

- CPU
- Cache Memory
- Hard Diskette Drive(s)
- Mouse
- Memory Size
- Memory Speed
- CD-ROM
- BIOS Version

To start POST, turn on the monitor and then the system unit. The following will happen:

1. The IBM Personal Computer logo will appear on the screen.
2. At this time one of two hot-keys may be used. The F1 key will cause the system Configuration/Setup Utility menu to appear. The Esc key will switch the graphical IBM logo screen to the traditional text-based system startup screen, which displays information of BIOS version, CPU, Hard Diskette Drive(s), CD-ROM, Mouse and system memory.
3. If an error is detected during POST, the IBM logo screen will automatically switch to the text-based screen and display the error message or code with a beep. Depending on the criticality of the POST error, the system may halt and/or display the message "Press <F1> to enter to the Setup or <Esc> to continue..."
4. During the POST, press <F12>, a Boot Menu will appear. You can decide Boot options here or in system Configuration/Setup Utility menu, Boot sub-menu.

If this message appears, pressing the **Esc** key will allow the system to attempt to proceed despite the reported error; pressing **F1** will cause the system Configuration/Setup Utility menu to appear.

5. If no keyboard keys are pressed, and if POST is completed without errors, the system will then proceed with the loading of WindowsME, 2000, NT or other operating system from a hard disk drive or diskette drive A or CD-ROM drive, depending on the Start options selected in the Configuration/ Setup Utility.

If any errors are detected by POST, there will be an error message accompanied with an error code shown on display screen and a beep. See “Index of Symptoms, Messages, Error Codes, or Beeps” on page 32 to find the most likely cause and countermeasure.

Diagnostic Diskette

WARNING: This manual is intended to test the IBM Personal Computer Type 6832 and 6833 machine type only. Testing devices which are not included with the original product package, including other IBM products, prototype cards, or modifying hardware settings may give false errors and invalid system responses. The diagnostics not specifically made for this model may also report incorrect errors and information.

The diagnostics program comes on a diskette along with this book. This version of PC-Doctor diagnostics program, developed by Watergate for IBM, is the primary method of testing the computer. You can use it to test the IBM components of the system and some external devices. The amount of time required to test components depends on the number of components installed and selected. The more devices you have attached to your system and selected in PC-Doctor, the longer the testing will take.

Using the Diagnostic Diskette

1. Power-off the system unit.
2. Insert diagnostic diskette in drive A.
3. Power-on the system unit.

NOTE: Do not press **F1** during POST. If any POST errors appear after POST, make a note of the errors.

4. DOS should load. During boot, verify that each driver loads successfully. For drivers that do not load successfully, verify that the device driver is associated with it and is installed properly.
5. Diagnostics program (PC-Doctor) will load, then follow the screen instructions to operate.

Using Diagnostic Program from Recovery CD

1. Insert the Personal Computer recovery CD into the CD-ROM drive then restart computer.
2. Press **F1** while POST to enter Configuration/Setup Utility menu. Select and enter Boot Sub-Menu, set the first priority of boot sequence to CD-ROM. Save and exit from Configuration/Setup Utility.
3. When screen displays IBM Recovery Program menu, choose "Run Diagnostics" to execute diagnostic program.
4. Follow the instructions on the screen to operate the diagnostics program.

Diagnostics Program Features

Diagnostics program (PC-Doctor) DOS version includes the following features:

Table 3- 1 Diagnostic Program Main Menu Selections

Main Menu Selections	Submenu Selections
Diagnostics	<ul style="list-style-type: none">• Run Normal Test• Run Quick Test• CPU/Coprocessor• System board• Video Adapter• Serial Ports• Parallel Ports• Fixed Disks• Diskette Drive• Other Devices• Zip Drive• HiFD Drive• SCSI Fixed Disk• LS-120 Drive• CD-ROM/DVD Drive• Memory Test-Full• Memory Test-Quick
Interactive Tests	<ul style="list-style-type: none">• Keyboard• Video• Internal Speaker• Mouse• Joystick Test• Diskette• System Load• Printer Test• SCSI Test• CD-ROM/DVD Test• Stereo Speaker
Hardware Info	<ul style="list-style-type: none">• System Configuration• Memory Contents• IRQ and DMA Use• Device Drivers• COM and LPT Ports• Physical Disk Drives• Logical Disk Drives

Table 3- 1 Diagnostic Program Main Menu Selections
(Continued)

Main Menu Selections	Submenu Selections
Hardware Info	<ul style="list-style-type: none"> • VGA Information • Software Interrupts • SCSI Devices • I/O Use • IDE Drive Info • PCI Information • PNPISA Information • SMBIOS Information • DIMM/RIMM Info • Asset EEPROM Info
Utility	<ul style="list-style-type: none"> • Run External Test • Surface Scan Hard Disk • Benchmark System • DOS Shell • Tech. Support Form • Select Languages • View Test Log • Print Log • Save Log • Full Erase Hard Drive • Quick Erase Hard Drive • Asset EEPROM Backup • View Stored Results
Quit	<ul style="list-style-type: none"> • Exit Diagnostics • Park HD • Reboot • About

Diagnostics program (PC-Doctor) Windows version includes the following features:

Table 3- 1 Diagnostic Program Main Menu Selections

Main Menu Selections	Submenu Selections
Diagnostics	<ul style="list-style-type: none">• CPU Test• Hard Drive Test• Floppy Test• LS-120 Drive Test• CD-ROM/DVD Test• ZIP Drive Test• Memory Test• PCI Test• Video Test• AGP Test• Modem Test• SCSI Test• IR Driver Test• PCMCIA Test• SMART Test• SMART Test-Extended• USB Test• CMOS Test• Keyboard Test• AVI Video Test• Microphone Test• Audio Test• Mouse Test• Monitor Test• Printer Test• Joystick Test

Table 3- 1 Diagnostic Program Main Menu Selections (Continued)

Main Menu Selections	Submenu Selections
System Information	<ul style="list-style-type: none"> • System Info • VGA Info • Drive Info • IDE Info • SMART Info • PCI Info • DMI Info • PC Card Info • Plug and Play • Multimedia Info • Memory Info • Module Info • Modem Info • Task Info • Virtual Drivers • COM Class Info • OLE Class Info • Class Info • SCSI Info • Extension Info • Interrupts • Statistics • USB Info
Tools	<ul style="list-style-type: none"> • MS Defrag • MS System Monitor • MS Resource Meter • MS Scandisk

Repair Information

Removals and Replacements	82
Handling ESD-Sensitive Parts	83
Cover	86
Bay Panels	88
Bay 1 and 2- 5.25-In. Bay (Internal or External Access)	89
Bay 3 - 3.5-In. Bay (Internal or External Access)	90
Bay 4 - 3.5-In. Bay (External Access for Diskette Drive)	91
Front Panel	95
Power Supply	96
AGP Card	99
Adapter Cards	100
Memory(RIMM)	101
Intel Pentium 4 Willamette Processor	104
System Backup Battery	106
Indicator LED and Cable	107
System Board	108

Removals and Replacements

BEFORE REMOVING ANY FRU, POWER-OFF THE COMPUTER, UNPLUG ALL POWER CORDS FROM ELECTRICAL OUTLETS, THEN DISCONNECT ANY INTERCONNECTING CABLES.

ATTENTION: The system board, processors, adapter cards, DIMMs, and upgrade processors can be damaged by electrostatic discharge. Use an electrostatic discharge (ESD) strap to establish personal grounding. If you don't have an ESD strap, establish personal grounding by touching a ground point with one hand before touching the static-sensitive FRUs.

The arrows in the removals and replacements procedures show the direction of movement to remove a field-replaceable unit (FRU), to turn a screw, or the direction to press a tab to release the FRU.

Begin all removals by removing the cover (and rear cover, if applicable).

When other FRUs must be removed prior to removing the failing FRU, they are listed at the top of the page. Go to the removal procedure for each FRU listed, remove the FRU, and then continue with the removal of the failing FRU.

To replace a FRU, reverse the removal procedure and follow any notes that pertain to replacement.


Before disconnecting any cables, note their location and orientation. Reinstall any new FRUs with cabling in their original location.

Handling ESD-Sensitive Parts

Many electronic parts are sensitive to electrostatic discharge (ESD). To prevent damage when working with ESD-sensitive parts, observe the following instructions. Do these in addition to taking all the usual precautions, such as switching off the power and unplugging the power cord.

- Keep the ESD-sensitive part in its original shipping container (or special ESD bag) until you are ready to install the part.
- Make the fewest possible movements with your body to prevent an increase of static electricity from clothing fibers, carpets, and furniture.
- Put the ESD wrist strap on your wrist. Ensure the machine is turned off. Connect the wrist strap to the serial bracket mounting screw. This discharges any static electricity in your body to the machine frame.
- Hold the ESD-sensitive part by its edge connector shroud (cover). Do not touch its pins. If you are removing a plug-able module, use the correct tools.
- Do not place the ESD-sensitive part on the machine cover or on a metal table. If you need to put down the ESD-sensitive part for any reason, put it into its original container.
- Machine covers and metal tables are electrical grounds. They increase the risk of damage because they make a discharge path from your body through the ESD-sensitive part. (Large metal objects can be discharge paths without being grounded.)
- Prevent ESD-sensitive parts from being accidentally touched by other persons. Reinstall machine covers when you are not working on the machine.
- If possible, keep all ESD-sensitive parts in a grounded metal cabinet.
- Be extra careful when working with ESD-sensitive parts while cold-weather heating is being used. Low humidity increases static electricity.

Identifying the Parts of the System Unit

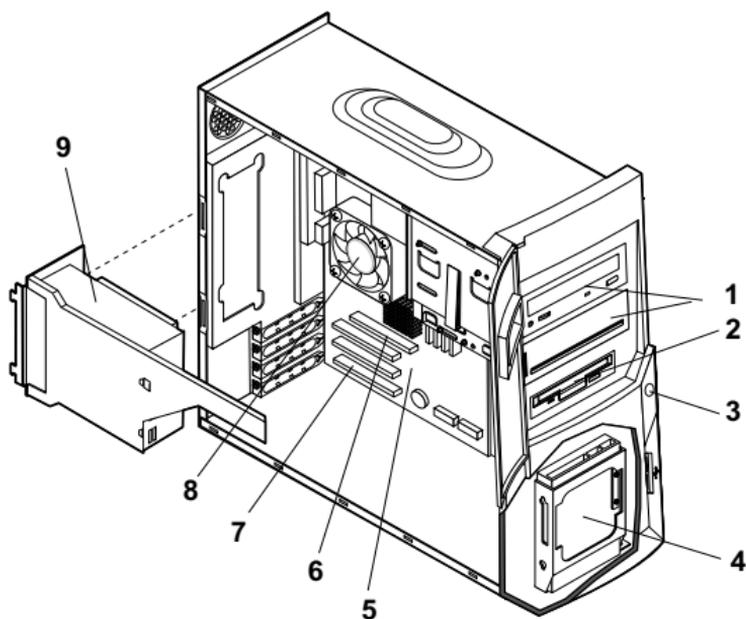

This computer system has four bays that can hold 5.25-inch and 3.5-inch drives. Additional devices can be installed in the empty bays.

Diskette drives in this unit use the standard diskette advanced technology (AT) interface. Hard disk drives in this unit use an integrated drive electronics (IDE) AT interface. This computer supports the American National Standards Institute (ANSI) standard for AT attachment disk drives.

It also has interface slots for installation of additional cards devices. Industry Standard Architecture (ISA) and Peripheral Component Interconnect (PCI) adapter cards are both supported.

1. **Bay 1 and 2.**

These two drive bays can hold a 5.25-inch half high drive or a 5.25-inch slim drive. A 3.5-inch drive can be accommodated with additional brackets. This bay can hold a CD-ROM, DVD-ROM, diskette, hard disk, tape, or Zip drive.

2. **Bay 3.**

This drive bay can hold a 3.5-inch slim drive, such as a diskette, hard disk, tape, or Zip drive.

3. **Power Button.**

4. **Bay 4.**

This drive bay can hold a 3.5-inch diskette drive, such as hard diskette drive.

5. System board.

The system board is the main circuit board in your computer. It contains the processor, also known as the central processing unit (CPU), and the system battery. It also contains sockets for memory modules, connectors for adapter cards, and connectors for the cables that carry data to and from drives.

6. AGP card connector.

AGP card connector is socket on the system board into which VGA card is installed.

7. Adapter card connectors.

Adapter card connectors are sockets on the system board into which adapter cards are installed. Your system board has three PCI adapter card connectors.

8. Fan and heatsink.


Fan and heatsink are mounted on processor for thermal control.

9. Power supply.


The power supply provides the electricity that is used by the other hardware components in your computer. This model may come with a 200W power supply.

Cover

- Disconnect the system unit power cord.
- Remove the 3 screws at the back of the tower.

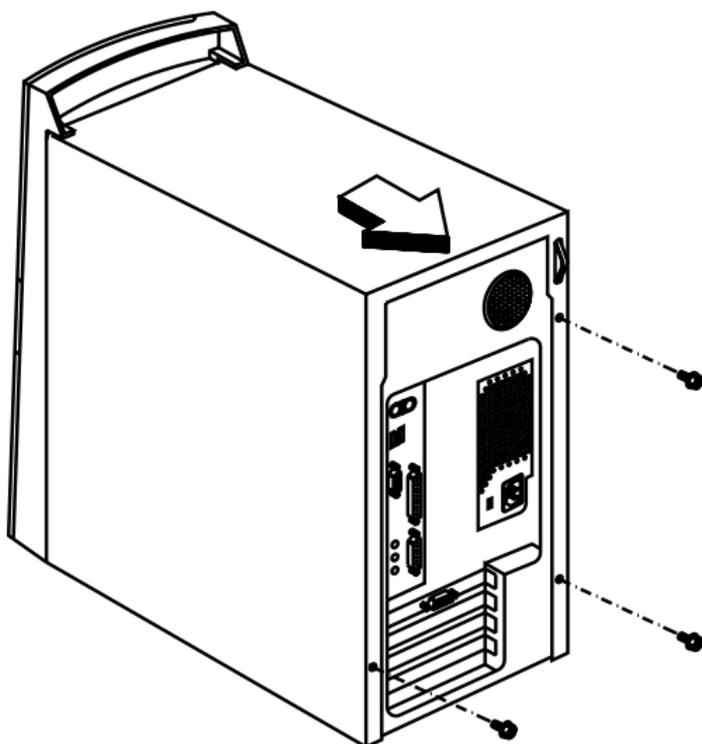

- Insert a screwdriver under one of the tabs on the back of the cover and gently pry the tower cover so that it separates from the tower.
- Slide the cover back about half inch (or 1.25 centimeters).
- Lift the cover up by the top front and back edges, pulling the sides out and away from the tower.

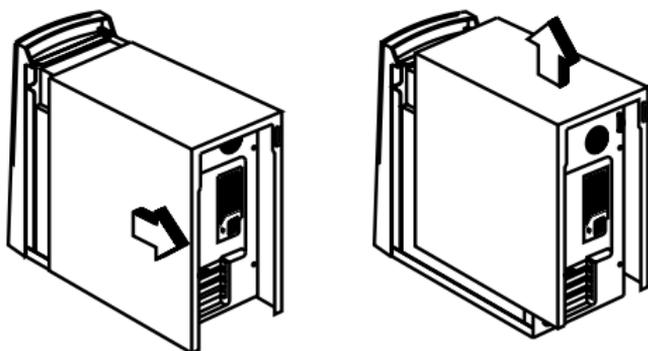

NOTE: To prevent the tower from tipping over, you may want to lay the tower on its side on a work surface, such as a table.

- Touch the bare metal frame of the system to dissipate any static electricity from your body (do not touch any of the components inside the frame until you have done this). Do not touch any component(s) with a voltage warning label.

NOTE: Replacing the Cover

- To replace the tower cover, lower the cover down over the tower, pressing in on the sides so the hooks inside the cover fit over the bottom ledge of the tower. Slide the cover forward into place. Secure the tower cover by replacing the screws you removed.


CAUTION: When you replace the cover, there are hooks inside the cover that help fit it to the tower.

Bay Panels

If you remove a drive from a bay and you do not intend to install a new drive immediately, reinstall the bay panel on the empty exposed drive bay.

Follow these steps to remove the plastic bay panel from the front of the system unit cover.

- Insert a flat-blade screwdriver into the slot on the bay panel in the drive bay into which you are installing the drive. Gently pry the bay panel loose from the drive bay.

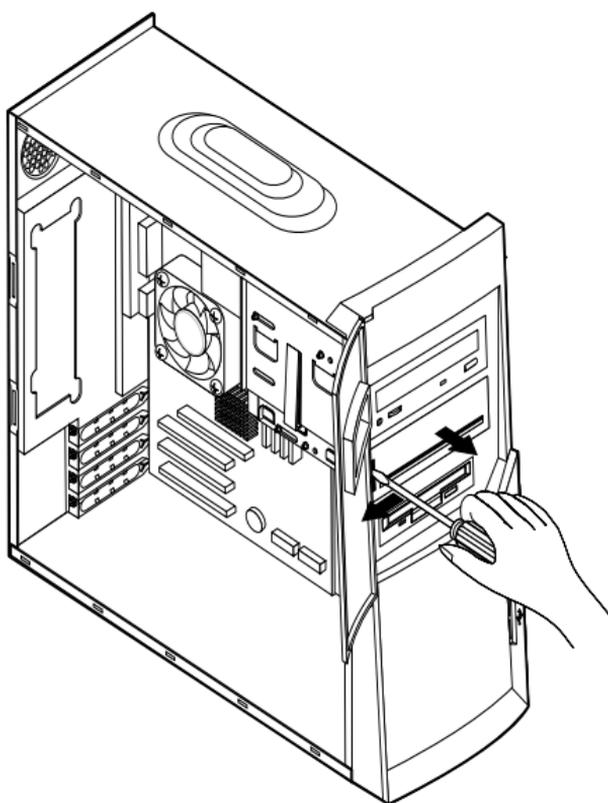


NOTE: Replace the EMI Bay Panel

- Replace the EMI bay cover.
- Insert a bay panel into the opening at the front of the system cover, aligning the panel latches with the sides of the unit.
- Push the panel back until you hear the latches click into place.


Bay 1 and 2- 5.25-In. Bay (Internal or External Access)

- Disconnect any cable on the drive (note location and orientation of cables).
- Remove the screws.
- Pull out the drive.

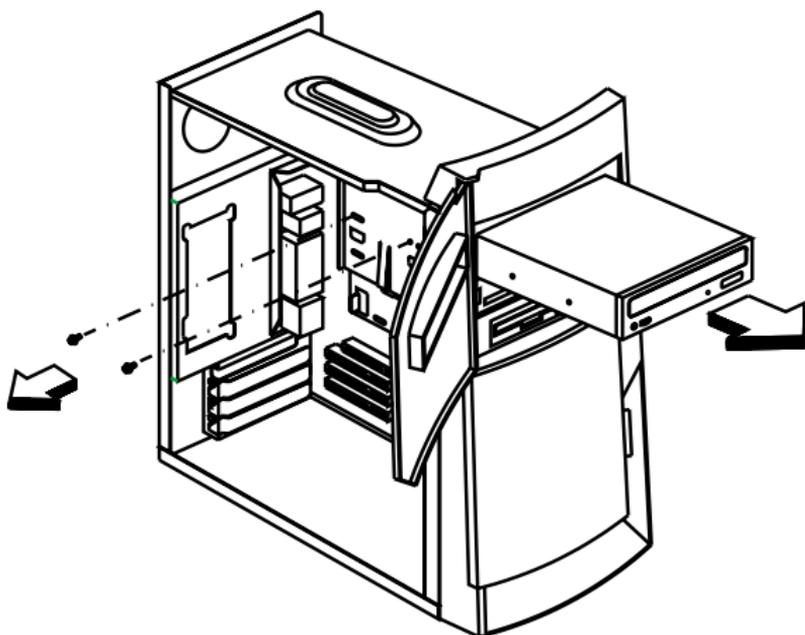


Bay 3 - 3.5-In. Bay (Internal or External Access)

- Disconnect any cable on the drive (note location and orientation of cables).
- Remove the screws.
- Pull out the drive.

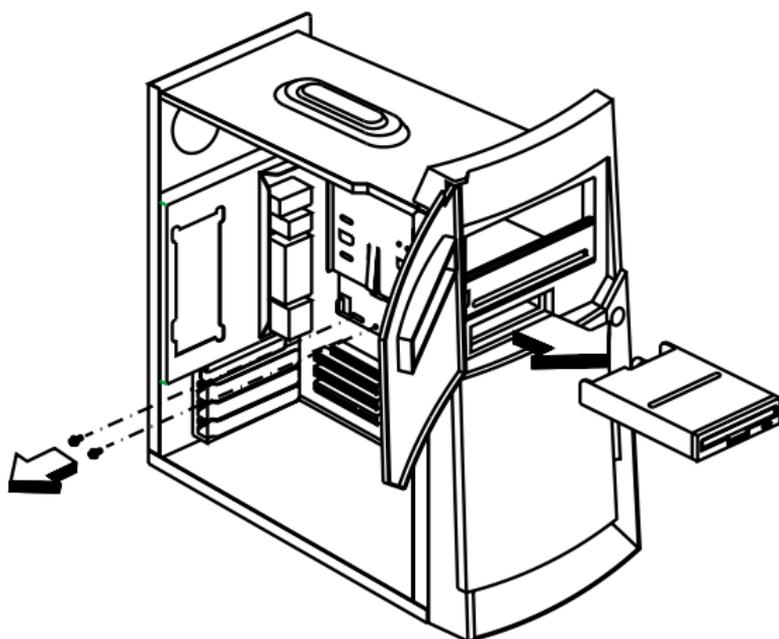


Bay 4 - 3.5-In. Bay (External Access for Diskette Drive)


- Disconnect the cables (note location of cables).

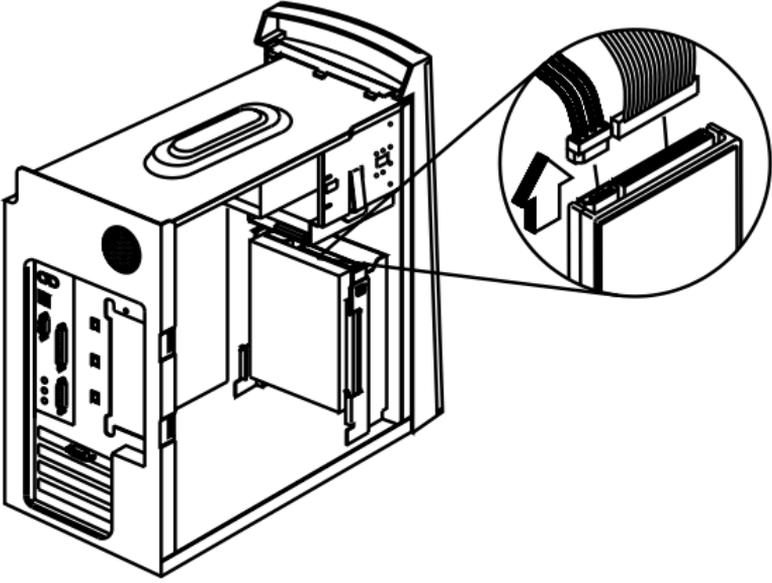

- Remove the two screws that secure the drive cage; then pull up and remove the drive cage from the computer as shown.

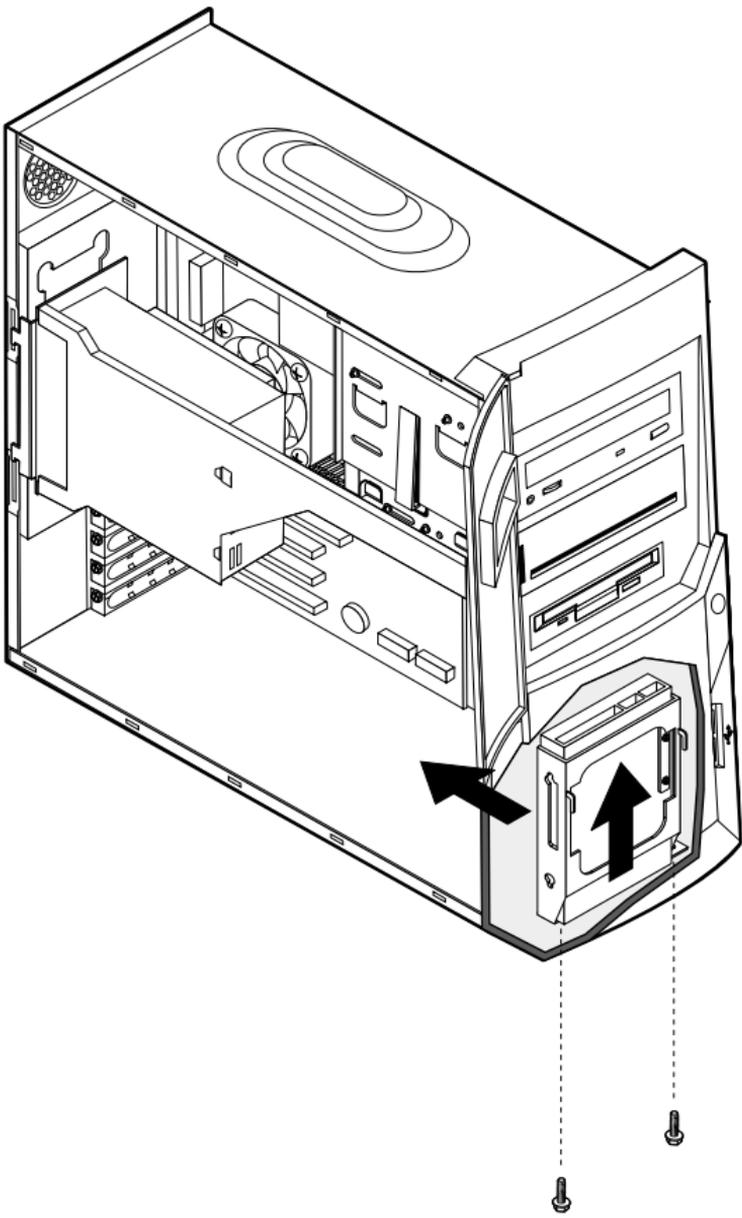


- Remove the screws located on both sides of the drive.

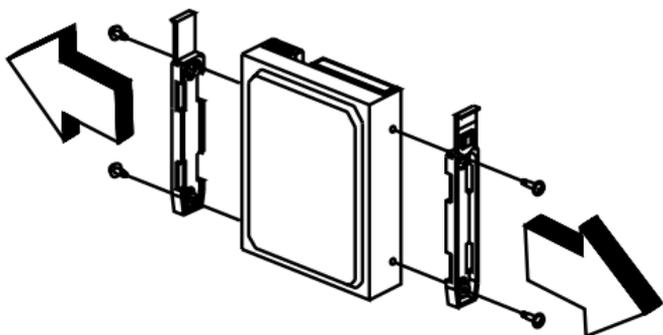


NOTE: Reinstall the 3.5-in Drive Frame

- Slide the drive into the drive cage and secure it with four screws. Then connect the power and signal cables.

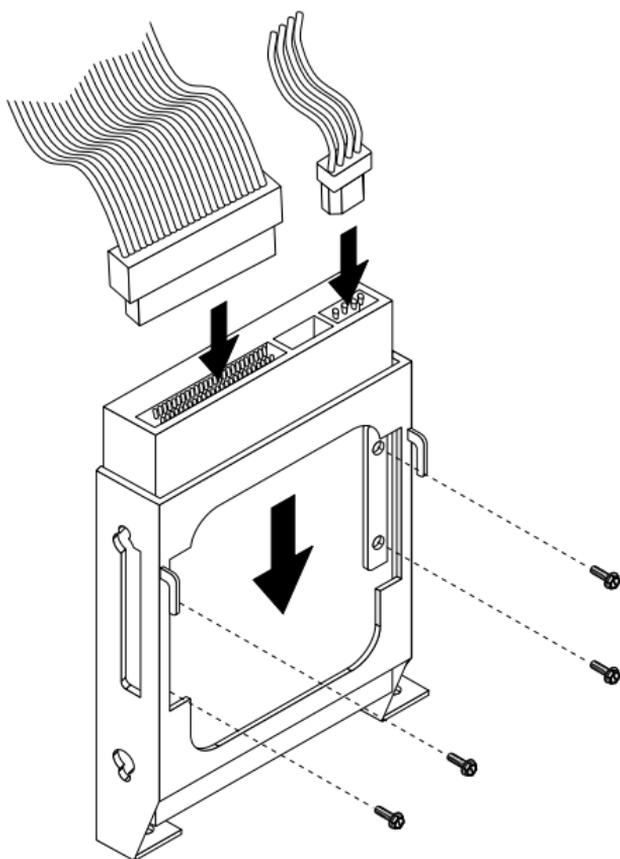


- Reinstall the drive cage back into place.

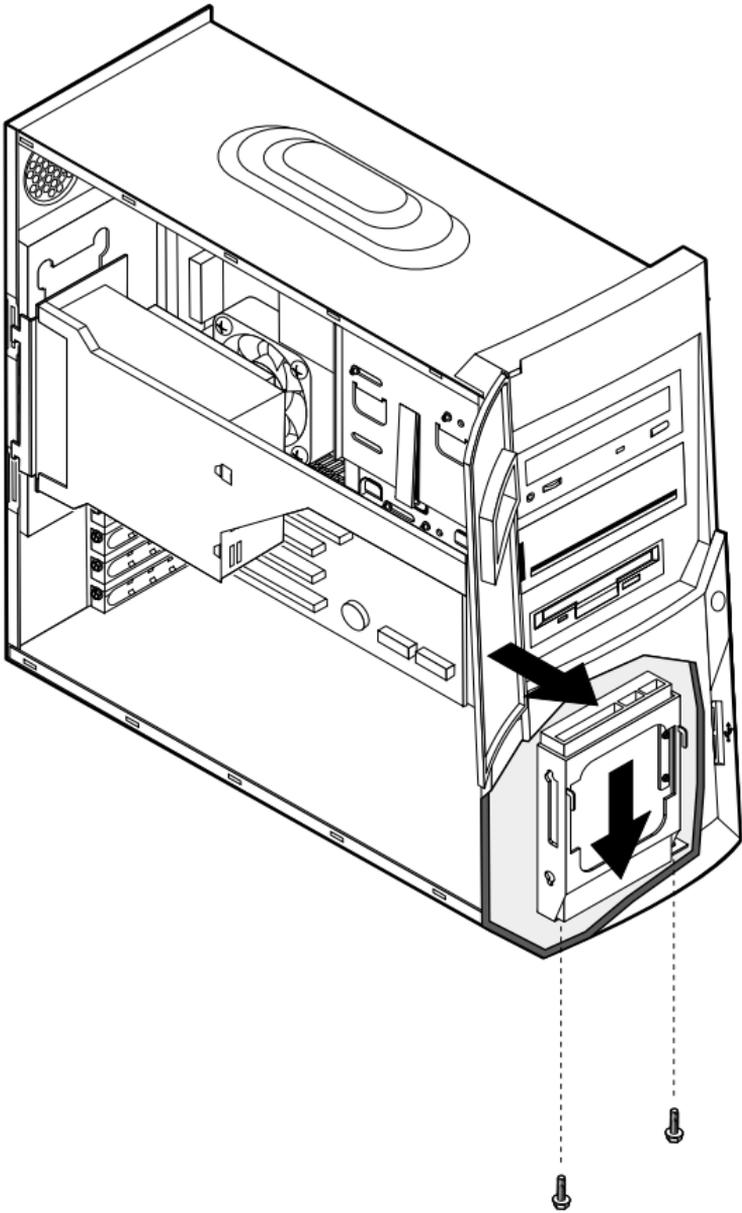


Front Panel

- Release the latch that holds the front panel.
- Gently remove the front panel from the tower.

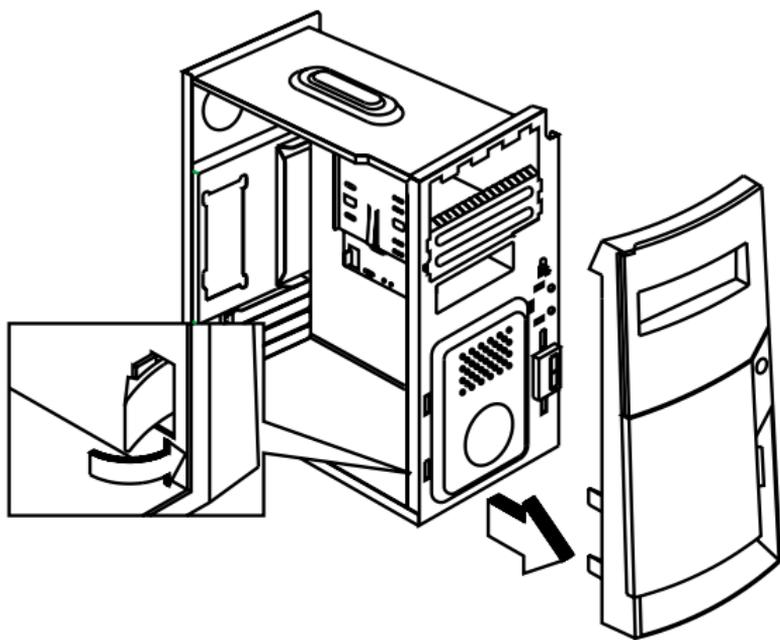


Power Supply


- Disconnect all cables necessary before removal (note location of cables).
- Remove the screw in the back as shown.

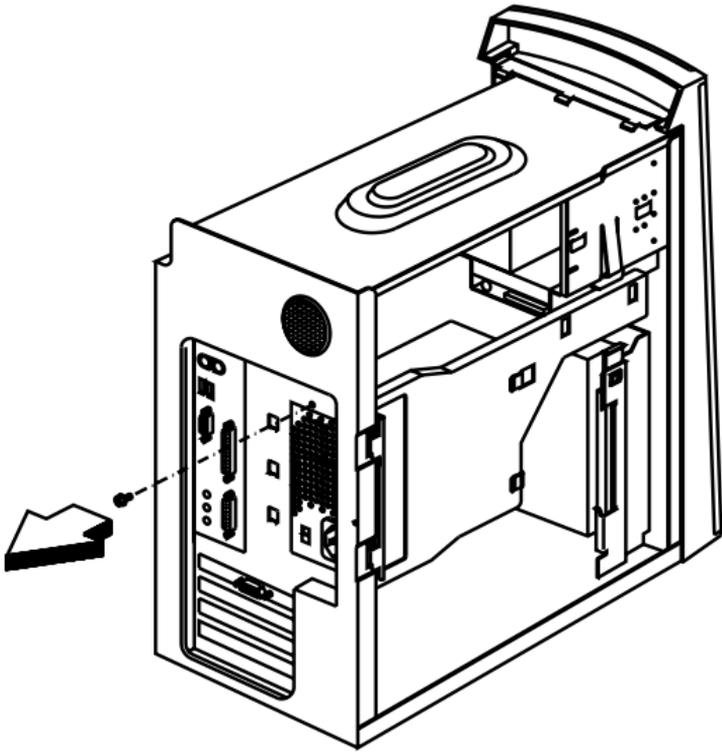


- Release the latch secured the bracket.

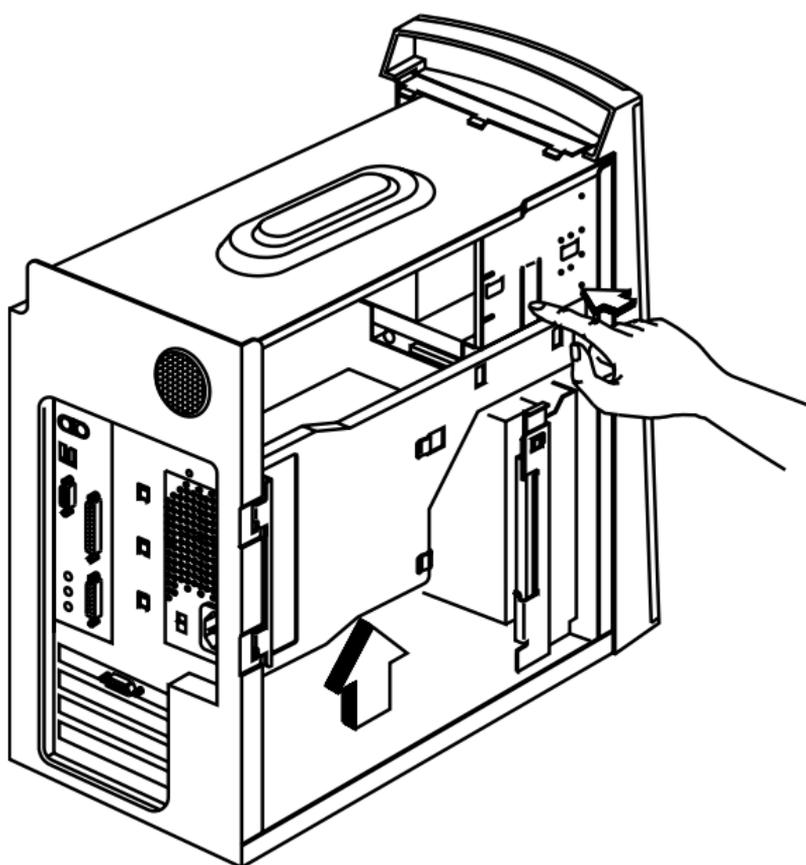

- Remove the power supply bracket from the system.

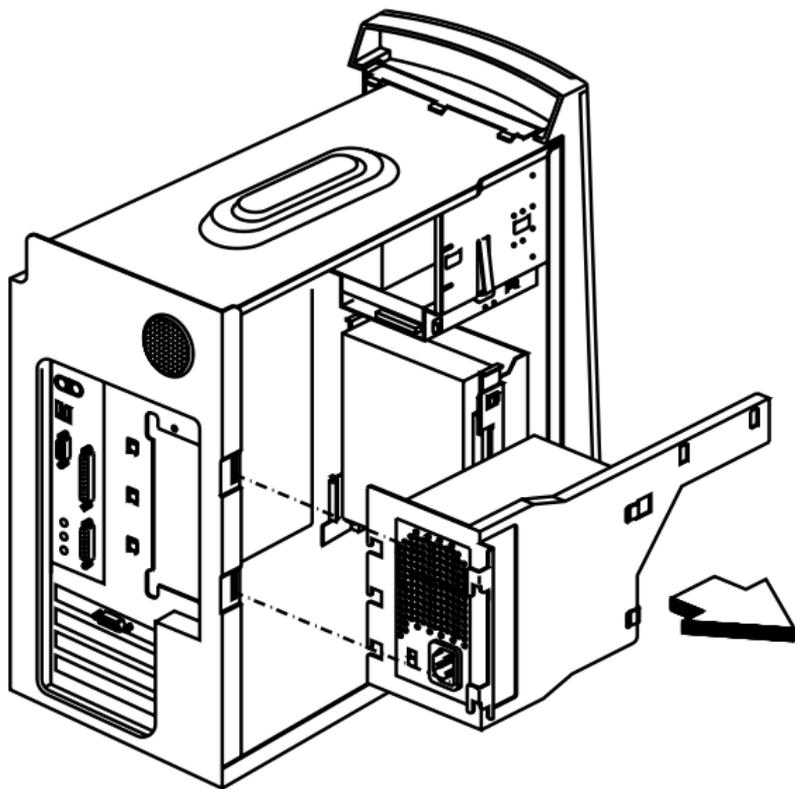


- Remove the four screws in the bracket. Pull out the power supply gently.

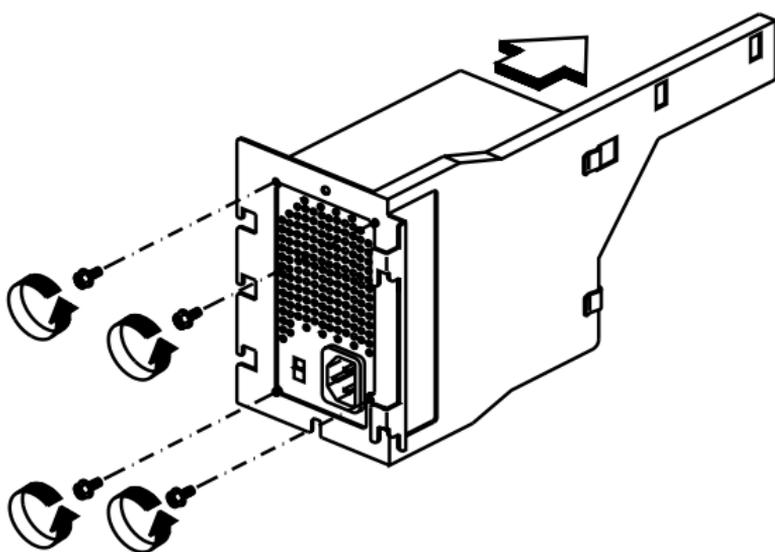

AGP Card

NOTE: Before removing an AGP card, note the location of the AGP card and any cables.

- Position the system unit such that the card is accessible to you.
- If the AGP card has cables, disconnect them. Be sure to take note where those cables are connected and how they are oriented. You will need to reconnect those cables when you reinstall the card.
- Remove the AGP card screw.
- Release the latch, and carefully pull the AGP card straight out of the slot so that the card does not bend.

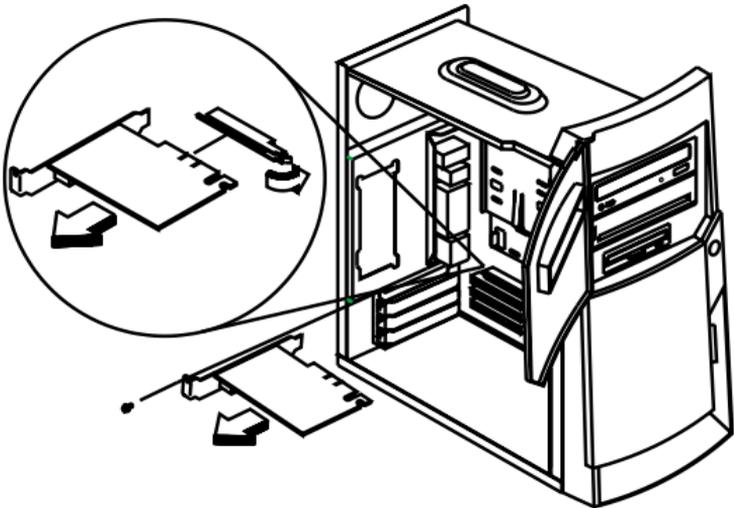


Adapter Cards

NOTE: 1. Before removing an adapter card, note the location of the adapter card and any cables. When removing an adapter card, install the replacement card in the same slot as the one you removed.

2. If necessary, remove cards from the adjacent slots of the failed card.

- Position the system unit such that the card is accessible to you.
- If the adapter card has cables, disconnect them. Be sure to take note where those cables are connected and how they are oriented. You will need to reconnect those cables when you reinstall the card.
- Remove the adapter card screw.
- Carefully pull the adapter card straight out of the slot so that the card does not bend.

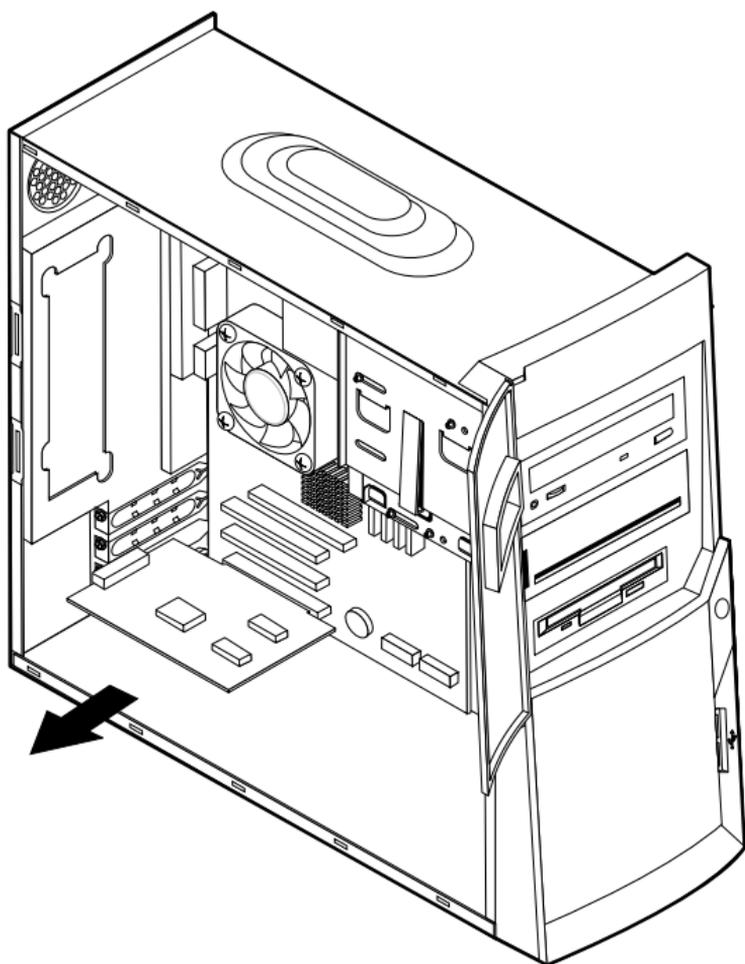

Memory(RIMM)

Your computer has four connectors for Rambus in-line memory modules (RIMMs) that provide up to a maximum of 1.5 GB of system memory.

The IBM-installed RIMMs that come with your computer are ECC (error checking and correction) Rambus dynamic random access memory (RDRAM) modules.

When installing or replacing RIMMs, take the following information into consideration:

- Rambus memory is divided into two channels (channel A and B). RIMM connectors 1 and 3 are channel A, and RIMM connectors 2 and 4 are channel B.
- Each channel must contain the same amount of memory.
- Each RIMM connector supports a maximum of 512 MB of memory.
- Any connector that does not have a RIMM installed must have a continuity RIMM (C-RIMM), a module that looks like a RIMM but has no memory on it. A C-RIMM is used to continue the connection on a RIMM connector that does not have memory installed in it.
- Install only ECC RIMMs to enable ECC. If you use ECC and non-ECC memory together, it will function as non-ECC memory.
- RIMM connectors do not support dual in-line memory modules (DIMMs).
- Use only PC600 or PC800 RIMMs.



NOTE: If you use PC600 and PC800 RIMMs together, all memory will function at the speed of the slowest RIMM.

Removing a RIMM or C-RIMM

To remove a RIMM or C-RIMM:

1. To locate the RIMM connectors inside your computer.

2. At both ends of the RIMM connector on the system board, push outward on the retaining clips until the module is loosened. Lift the RIMM or C-RIMM out of the connector.

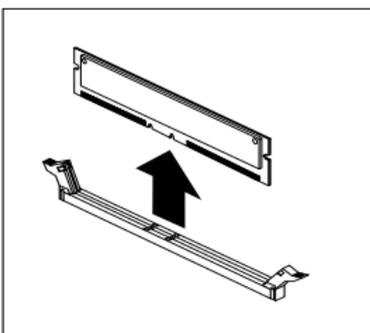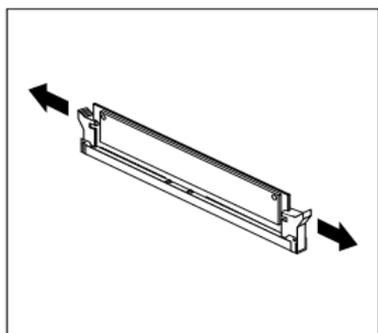



NOTE: Be careful not to push too hard on the retaining clips, because the RIMM or C-RIMM might eject too quickly.

3. Store the RIMM or C-RIMM in a static-protective package. Do not discard or lose this part. It might be needed later if you change your memory configuration.



Installing a RIMM or C-RIMM

To install a RIMM or C-RIMM:

1. Touch the static-protective package containing the RIMM to any unpainted metal surface in the computer, and then remove the RIMM or C-RIMM.
2. If the retaining clips are not already open, open them.

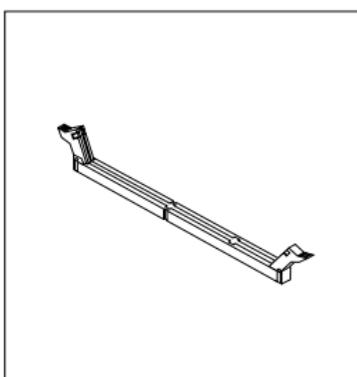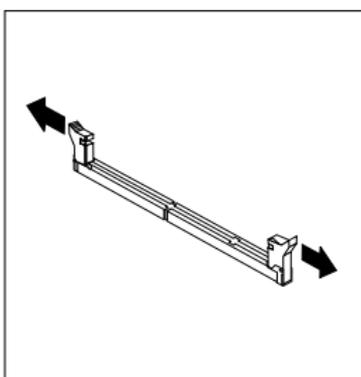

3. Position the RIMM or C-RIMM above the connector so that the two notches on the bottom edge of the module align properly with the empty connector.
4. Firmly push the module straight down into the connector until the retaining clips pop up and fit snugly around both ends of the module.

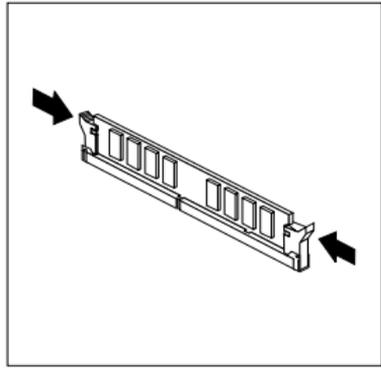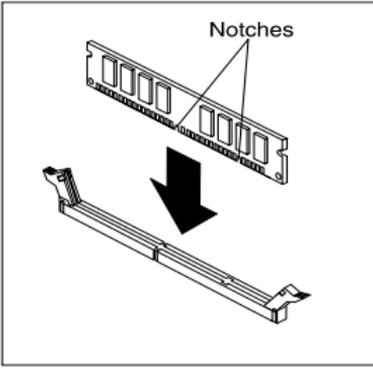



Intel Pentium 4 Willamette Processor

NOTE: Determine the type of processor you are installing and make sure the jumpers are set correctly. Run the Configuration/Setup Utility after correctly installing a processor.

CAUTION: Processors are sensitive to static discharge.

- Remove adapter cards if applicable.
- Detach the heat sink cable from the fan connector.
- Remove the fan sink by pressing the release tabs (rectangular end) and lifting up fan sink from the Processor.

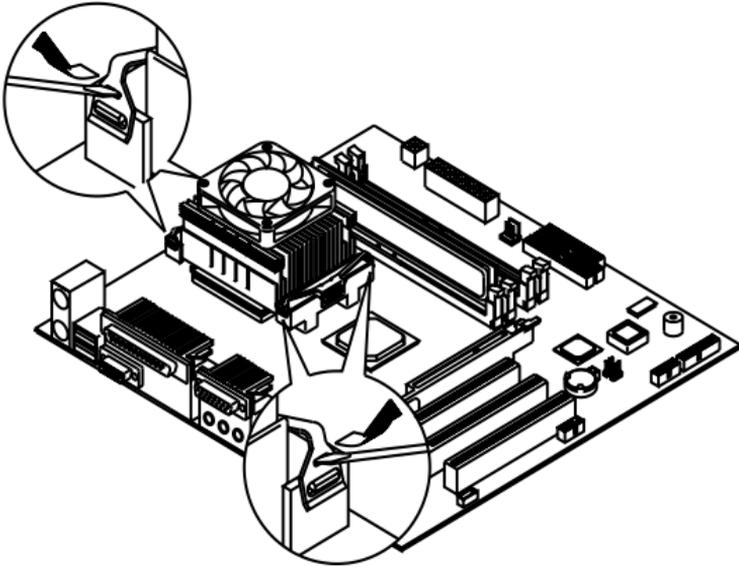

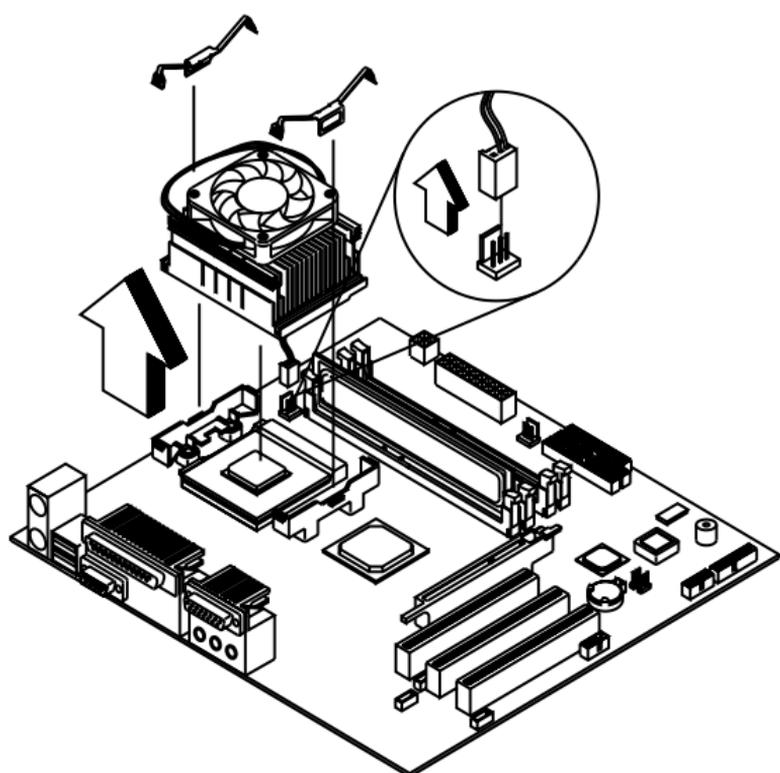


- Lift the processor out of the socket.

System Backup Battery

CAUTION: All BIOS configuration settings will be lost when the backup battery is removed!

ATTENTION: Be careful when removing the backup battery. If the metal lever is damaged or broken, the system board must be replaced.

- Gently pull the metal lever away from the backup battery.
- Lift the backup battery out.

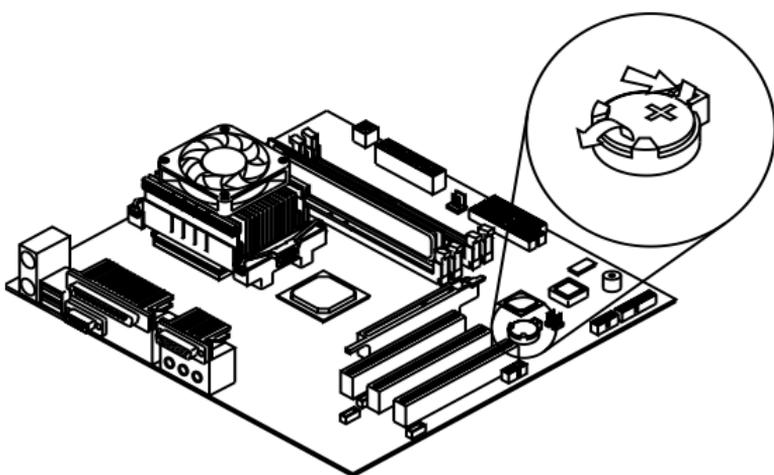


IMPORTANT: Make sure to insert the battery with the positive side facing up. A plus(+) sign indicates the positive side.

- If you replace the system battery, you need to reset the system date and time. You can perform this task from the Windows 2000, NT, ME desktop or from the Configuration/Setup Utility. To reset the system date and time in the Configuration/Setup Utility, select the Main Menu.


Indicator LED and Cable

- Disconnect the LED and cable from the system board.
- Push in on the indicator LED and remove from the chassis.

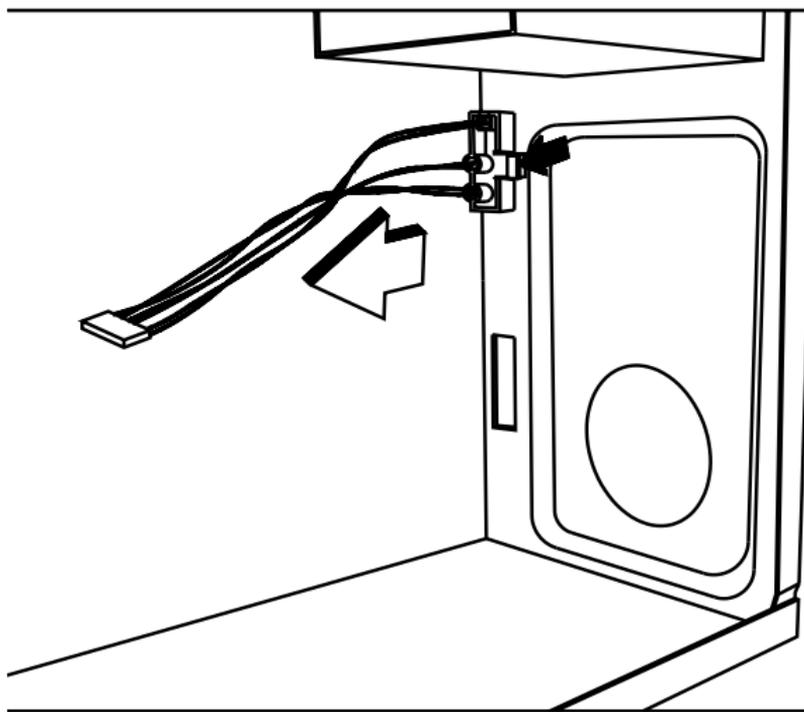


System Board

- Remove all adapter cards.
- Disconnect all cables connected to the system board. Note the location and orientation of all cables.
- Remove the seven screws securing the system board to the chassis.

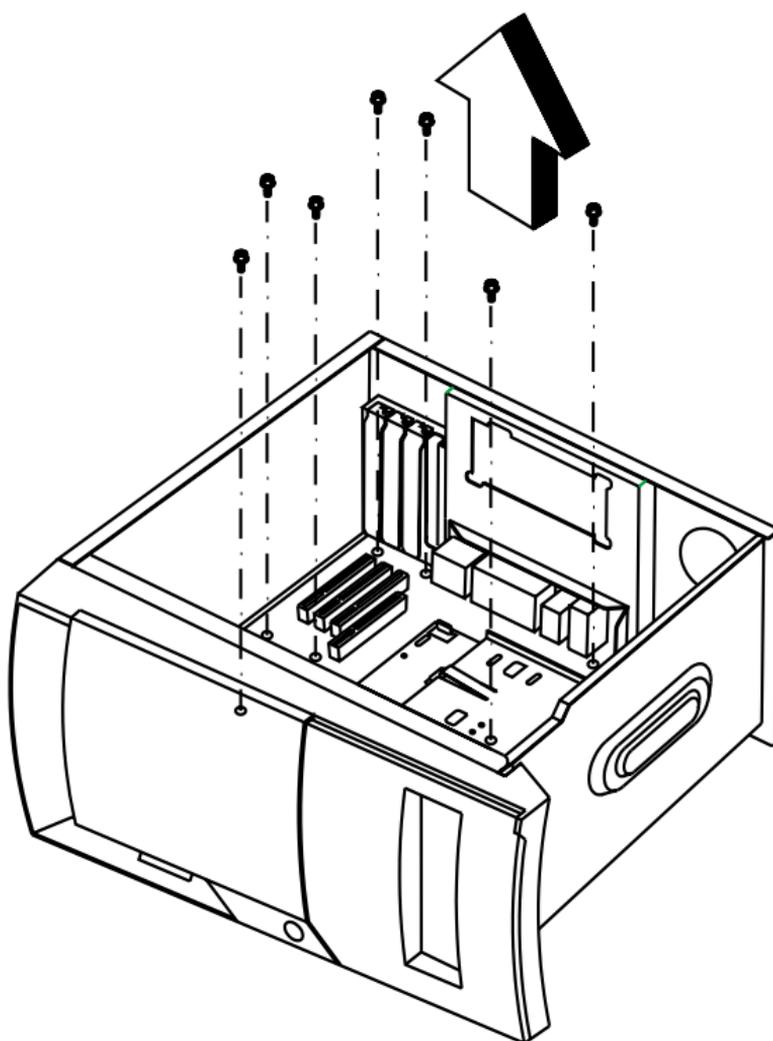

- Lift the system board to remove from chassis.
- Remove memory (RIMM) if applicable.
- Remove processor if necessary.
- Remove the four screws securing the brackets to the system board.

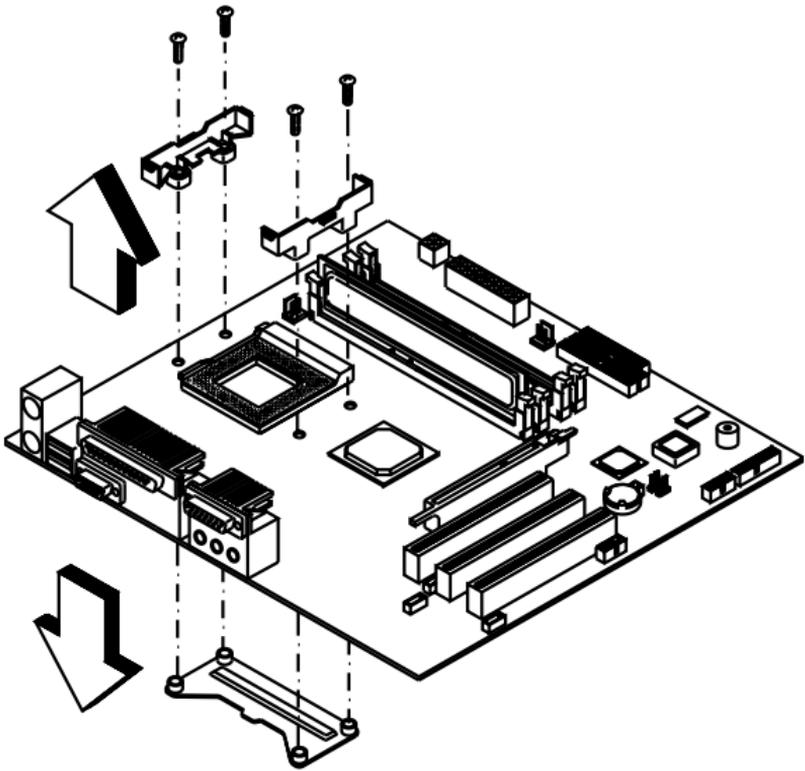

NOTE: System Board Installation

- Before reinstallation, position the housing on its side. When installing a new system board, push the board to the rear and align it with the front locating pin. Visually verify that the board is aligned properly, then press the board down.
- Be sure to reinstall the processor, DIMMs, I/O port bracket onto the new system board if applicable.
- After installing the system board, secure with original screws.
- Change all jumper settings to match those of the original board.
- Reinstall other components into the machine i.e. drives, power supply, cables, etc.
- Upgrade the BIOS version on the new system board using the BIOS upgrade utility.
- Change the Machine Type and Serial Number in the BIOS to match the original planar BIOS settings.
- Reboot the system and run the Configuration/ Setup Utility.


Parts/Test Point Locations

Introduction	112
System Board Jumpers and Connectors	113
Power Supply Connectors and Voltages	115
Network Cards	118
Factory-Installed Modem Card Layout	119
Video Cards	120
Nvidia TNT2 M64, 32MB	120
Nvidia GeForce2 GTS Pro NV15, 64MB	121
ATI RADEON, 32MB (US)	121
ATI RADEON, 32MB (EMEA)	122
1394 Card	124
3.5-In. Hard Disk Drive Jumper Settings	125
CD-ROM Drive	127
CD-ROM Drive Rear Panel Connectors and Jumpers	129
CD-ROM R/W Drive	130
CD-ROM R/W Drive Rear Panel Connectors and Jumpers	131
DVD-ROM Drive	132
DVD-ROM Drive Rear Panel Connectors and Jumpers	133
RIMM Configurations	134
System Board Connector Pin Signals	135
Monitor Port Signals	135
Serial Port Signals	135
Parallel Port Signals	136
Mouse Port Signals	136
Keyboard Port Signals	136
Diskette Drive Cable Connector Signals	137
IDE Cable Connector Signals	138

Introduction

This chapter contains system board layouts and jumper settings. It is useful when you are asked to measure voltages. Use this information to help you locate parts such as electronic boards, connectors, pin numbers, and test points. This chapter also contains jumper settings for the hard disk drive, CD-ROM, and the connector information for modem adapter card.

System Board Jumpers and Connectors

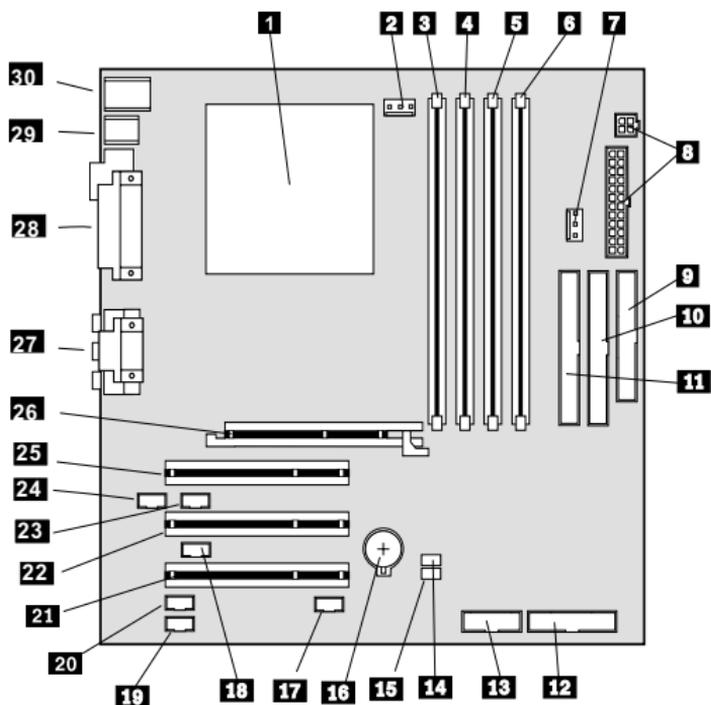

NOTE: The blackened pin of a jumper represents pin 1.

System Board Jumper Settings

Jumper/Settings	Function
JP20	CMOS Setup
1-2	*Normal
2-3	Clear CMOS

Jumper/Settings	Function
COM2F	COM2 Detection
1-2	*Disable
2-3	Enable

System Board Connector Functions

Connector	Function	Connect to...
1	Processor connector	Processor
2	Fan connector	Processor fan

System Board Connector Functions

3,4,5,6	System memory module connectors	Memory
7	Fan connector	System fan
8	Power supply connector	Power supply
9	Diskette drive connector	Diskette drive
10	Primary IDE connector	Hard Disk Drive
11	Secondary IDE connector	CD-ROM
12	Front panel LED connectors	LED cables
13	Front USB connectors	USB connectors
14	CMOS setup	
15	COM2 detection	
16	System battery connector	System battery
17	Second serial port header	Serial devices
18	Wake-on-LAN connector	LAN card
19	CD-in connector	CD-ROM
20	Modem Wake-On-Ring connector	Modem
21, 22, 25	PCI slots PCI3: I ² C bus slot	Adapter cards
23	Audio connectors	
24	Audio input from video	
26	AGP video card connector	VGA card
27	Game and audio connectors	Game and audio devices
28	Parallel and serial connectors	Printer, parallel and serial devices
29	USB connectors	USB device
30	PS/2 keyboard and mouse connectors	Keyboard and mouse


NOTE: The white corner of the jumper block represents pin 1.

Power Supply Connectors and Voltages


Refer to the following figures when checking for voltages on power supply cable connectors.

When checking voltages, the power supply fan must be running. To power-on the power supply without using the on/off switch, use a screwdriver or other tool to short the connector, or use a connection (jumper) to short the black and green wires of the 20-pin and 4-pin connectors on power supply.

20-pin Power Connector

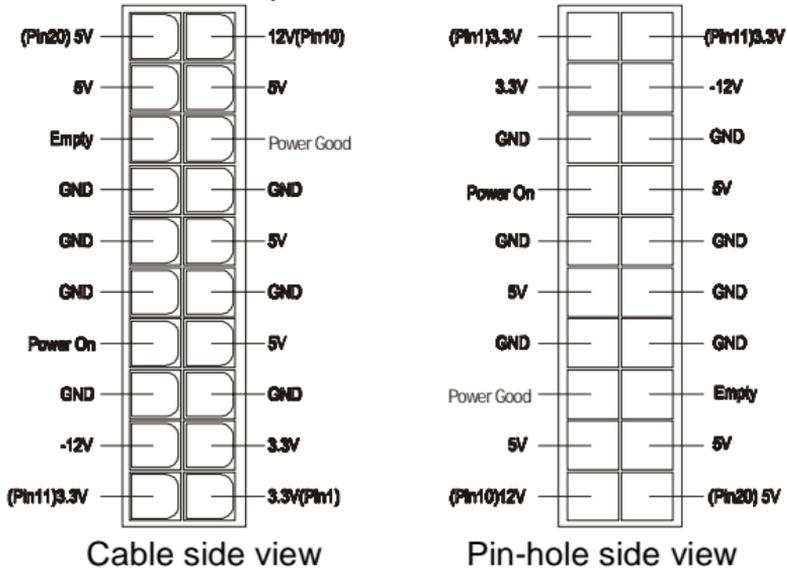

+12V Power Connector

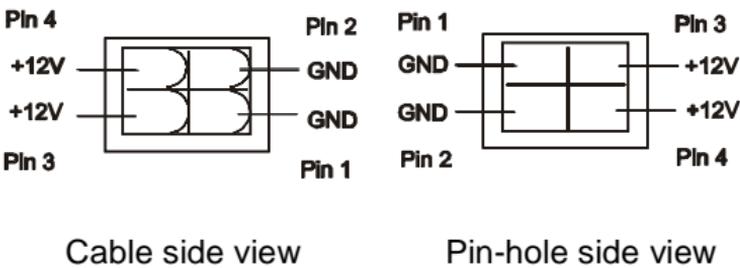



Power Supply Output Pin Assignment

Pin	Voltage	Cable Color
1	+3.3Vdc	Orange
2	+3.3Vdc	Orange
3	Ground	Black
4	Power-on	Red

Power Supply Output Pin Assignment (Continued)

Pin	Voltage	Cable Color
5	Ground	Black
6	+5Vdc	Red
7	Ground	Black
8	Power Good	Gray
9	+5Vdc	Purple
10	+12Vdc	Yellow
11	+3.3Vdc	Orange
12	-12Vdc	Blue
13	Ground	Black
14	+5Vdc	Green
15	Ground	Black
16	Ground	Black
17	Ground	Black
18	no connect	no connect
19	+5Vdc	Red
20	+5Vdc	Red
+12V Power Connector		
1	Ground	Black
2	Ground	Black
3	+12Vdc	Yellow
4	+12Vdc	Yellow

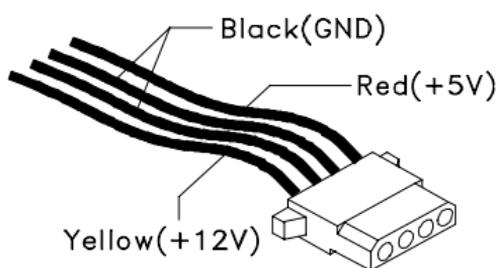

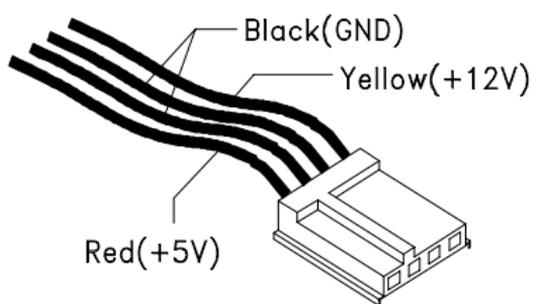


Network Cards


NOTE: While transferring the data, "Act" LED light to indicate a ready state and the link indicators "10 Link" or "100 Link" specify the current line transmission speed. Depending on the 10Base-T/100Base-T connections to unshielded twisted-pair(10Base-T, UTP) or unshielded twisted-pair(100Base-T, Category 5), the transmission speed will be auto-detected.

The RJ-45 connector is used.


Accton

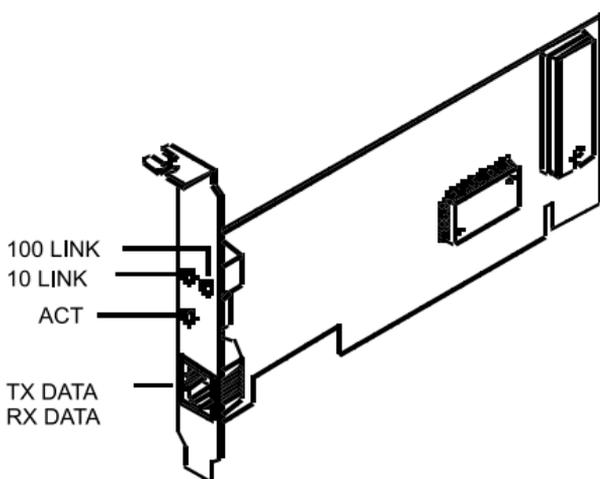

Factory-Installed Modem Card Layout

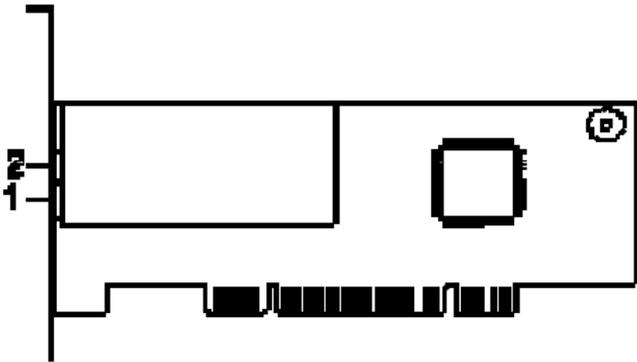

GVC Factory-Installed Modem Card Connector

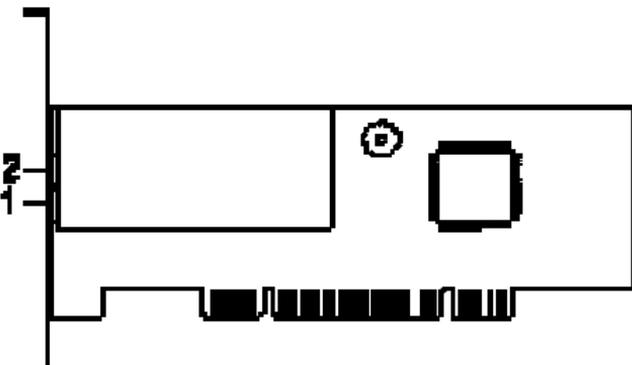


ASKEY Factory-Installed Modem Card Connector Functions


Item	Function	Connect to...
1	Telephone	Telephone set
2	Line Some modem adapters may come without this jack.	Telephone line

Video Cards


Nvidia TNT2 M64, 32MB

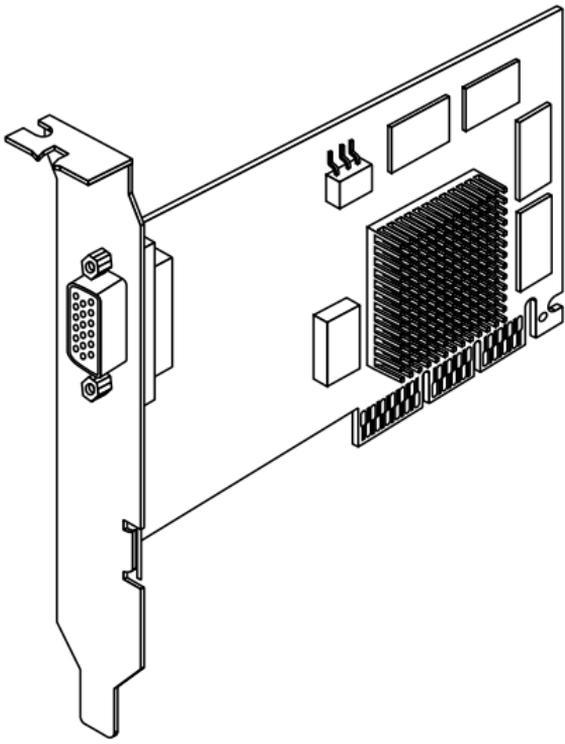


Nvidia GeForce2 GTS Pro NV15, 64MB

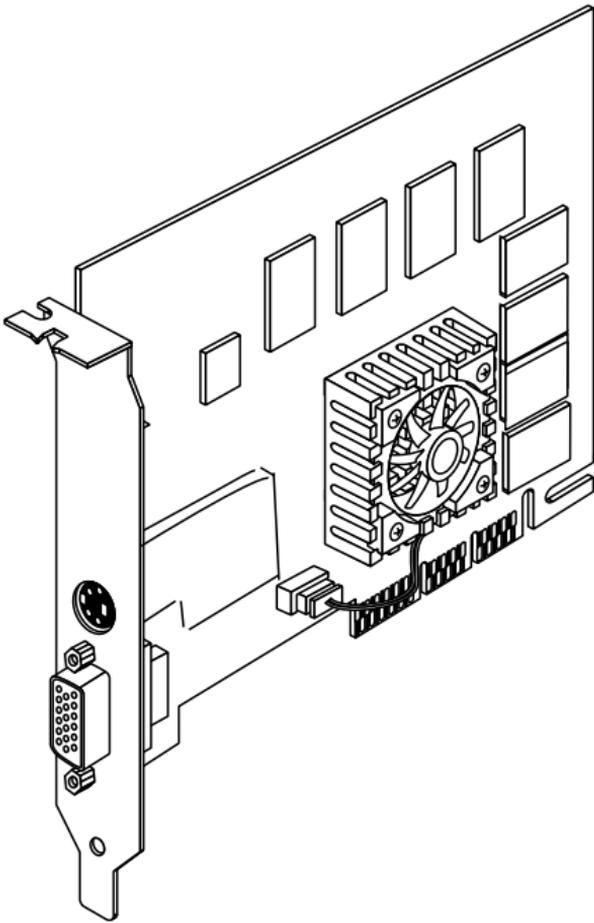

ATI RADEON, 32MB (US)

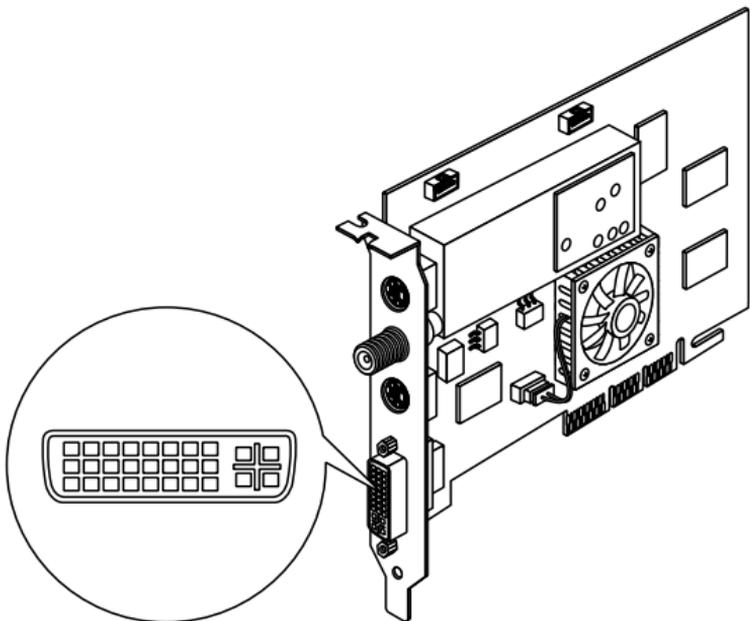

ATI RADEON, 32MB (EMEA)

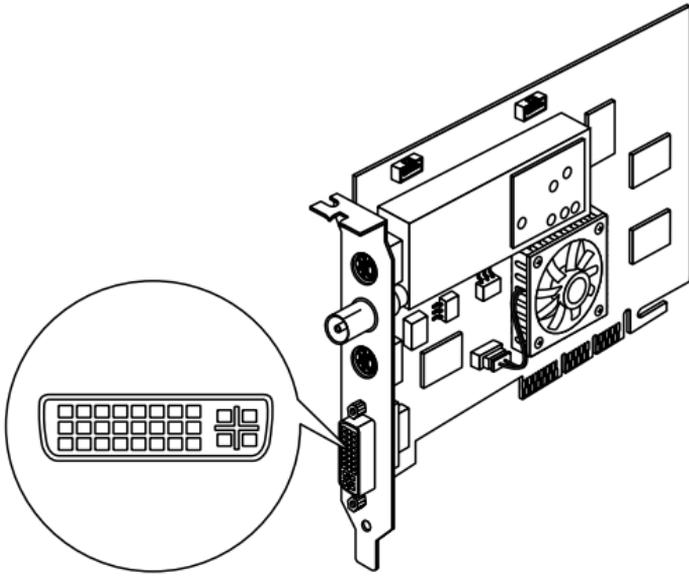


P&D-D Signal Pin Assignments

Pin	Signal	Pin	Signal
1	TMDS Data2 +	16	USB data +
2	TMDS Data2 -	17	USB data -
3	TMDS Data2 return	18	1394 outer shield (optional) & Charge Power return ²
4	Unused	19	1394 Vg
5	Unused	20	1394 Vp
6	Unused	21	TMDS Data0 +
7	TMDS Clock return	22	TMDS Data0 -
8	Charge power ¹ +	23	TMDS Data0 return
9	1394 pair A, data -	24	Unused
10	1394 pair A, data +	25	DDC return
11	TMDS Data1 +	26	DDC data (SDA)
12	TMDS Data1 -	27	DDC clock (SCL)
13	TMDS Data1 return	28	+5 VDC
14	TMDS Clock +	29	1394 pair B, Clock +
15	TMDS Clock -	30	1394 pair B, Clock -

¹ Optional output from monitor.


² Note: The IEEE-1394 internal cable bundle needs an outer shield to minimize internal crosstalk within the cable construction. The outer EMI containment shield for the IEEE-1394 function will be provided by the overall P&D cable shield. If the internal bundle shield for IEEE-1394 is required, this may be terminated to pin #18. It is recommended that this implementation be evaluated in the case where both Charge Power return and the IEEE-1394 internal cable bundle shield will be commoned to pin #18.

1394 Card

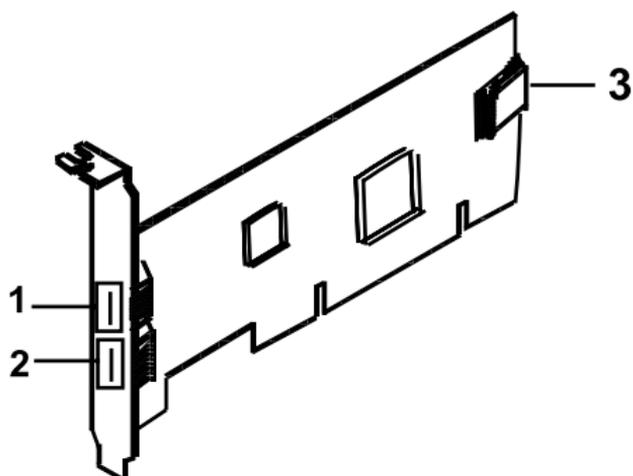

Item	Function	Connect to...
1	1394 devices connector	1394 devices
2	1394 devices connector	1394 devices
3	1394 devices connector	1394 devices


3.5-In. Hard Disk Drive Jumper Settings

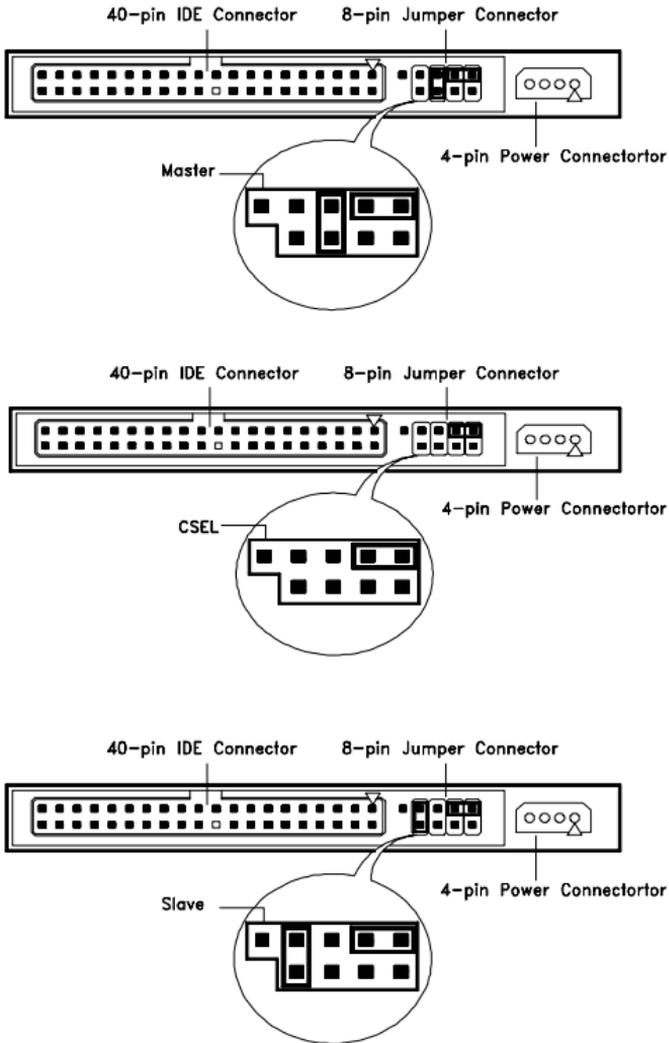

3.5-In IBM Hard Disk

The configuration of the following jumpers control the drive's mode of operation:


- Master
- Slave
- CSEL - Cable Select

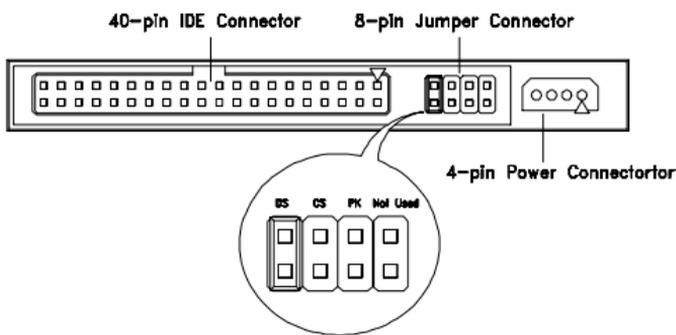

3.5-In Quantum Fireball Series Hard Disk

The configuration of the following jumpers control the drive's mode of operation:

- DS - Drive Select (For Master only)
- CS - Cable Select
- PK - Park, used as a place to store a jumper

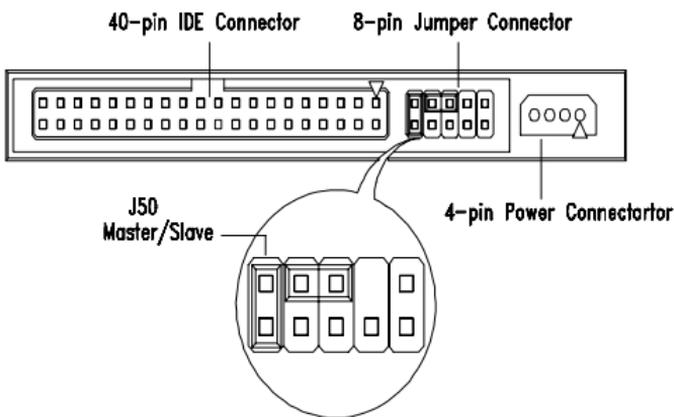

3.5-In Maxtor Hard Disk


3.5-In Maxtor Hard Disk Drive Jumper Settings

J50	Description
On	Drive configured as Master or Drive configured as Master, with an attached Slave
Off	Drive configured as Slave.

CD-ROM Drive

ATTENTION: Either <option 1> or <option 2> CD-ROM drive may come with your machine. Their front panel buttons, indicators and emergency eject method may be different.


Lite-on

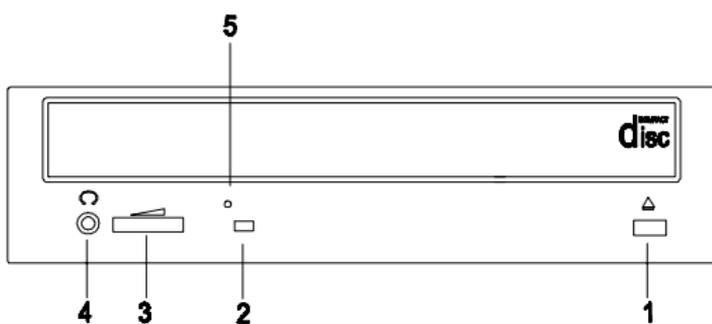

CD-ROM Front Panel Introduction

Item	Description
1	Load / eject button
2	Headphone jack
3	Power-on / busy indicator, lights up in green color while disc is set in ready state; lights up and flashes in amber color during data read or seek operation.
4	Headphone volume control
5	Emergency eject hole. See CD-ROM Emergency-exit <option 1> below. Disc tray and emergency eject See CD-ROM Emergency-exit <option 2> below.


CD-ROM Emergency-exit <option 1>

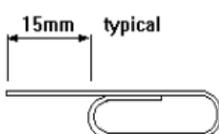

If for any reason the tray does not eject automatically, insert and press an eject-bar inside the emergency eject hole to manually eject the tray. A straightened paper clip with a diameter of 1.2 mm (typical) can be used as an eject-bar.


ATTENTION: Make sure to turn off the power before manual disc eject operation.

CD-ROM Emergency-exit <option 2>

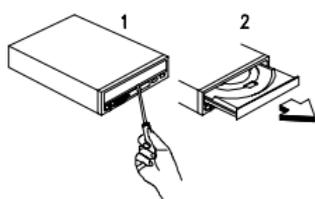

Locate the bottom edge of the disc tray. Gently pry the disk tray open with a screwdriver. When the disc tray opens, simply remove the disc from the CD-ROM drive.

CD-ROM Drive Rear Panel Connectors and Jumpers

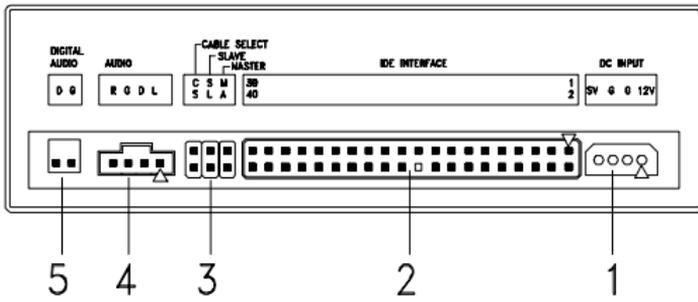

NOTE: CD-ROM drives may come with item no. 5 (digital audio output) connectors.


CD-ROM Drive Rear Panel Connectors and Jumpers

Item	Function	Connect to...
1	Power supply connector	Power supply
2	Interface connector	System board CN12: IDE 2
3	Configuration jumper. <u>CS</u> <u>SL</u> <u>MA</u> <u>Description</u> -- -- On Master -- On -- Slave. On -- -- Cable select	--
4	Audio line out connector	System board
5	Digital audio output	--

CD-ROM R/W Drive

ATTENTION: Either <option 1> or <option 2> CD-ROM R/W drive may come with your Personal Computer. Their front panel buttons, indicators and emergency eject methods may be different.


LG

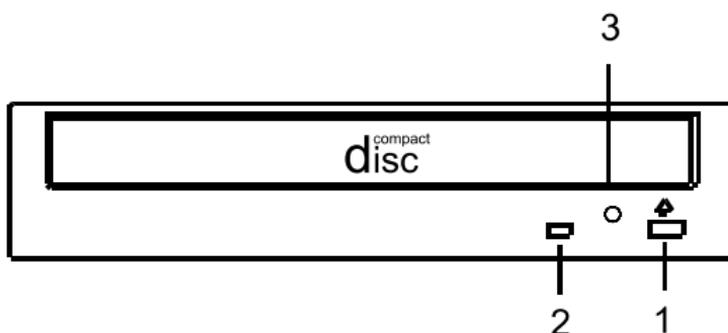

CD-ROM R/W Front Panel Introduction

Item	Description
1	Load / eject button
2	Power-on / busy indicator, lights up in green color while disc is in ready state; lights up and flashes in amber color during data read or seek operation.
3	Emergency eject hole. See "CD-ROM Emergency-exit <option 1>" on page 128 Disc tray and emergency eject See "CD-ROM Emergency-exit <option 2>" on page 128

CD-ROM R/W Drive Rear Panel Connectors and Jumpers

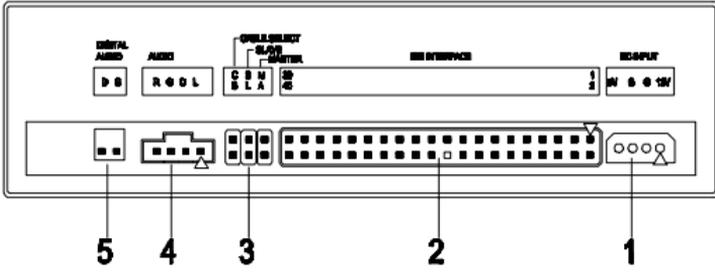

NOTE: CD-ROM R/W drives may come with item no. 5 (digital audio output and testing jumper) connectors.

CD-ROM R/W Drive Rear Panel Connectors and Jumpers

Item	Function	Connect to...
1	Power supply connector	Power supply
2	Interface connector	System board
3	Configuration jumper. <u>CS</u> <u>SL</u> <u>MA</u> <u>Description</u> -- -- On Master -- On -- Slave. On -- -- Cable select	--
4	Audio line out connector	Depends on sound card
5	Digital audio output	--

DVD-ROM Drive


Front Panel and Emergency-Exit



DVD-ROM Front Panel Introduction

Item	Description
1	Open/Close Button
2	Disc Indicator
3	Headphone Volume Control
4	Headphone Jack
5	Emergency eject hole. See "CD-ROM Emergency-exit <option 1>" on page 128. Disc tray and emergency eject See "CD-ROM Emergency-exit <option 2>" on page 128

DVD-ROM Drive Rear Panel Connectors and Jumpers

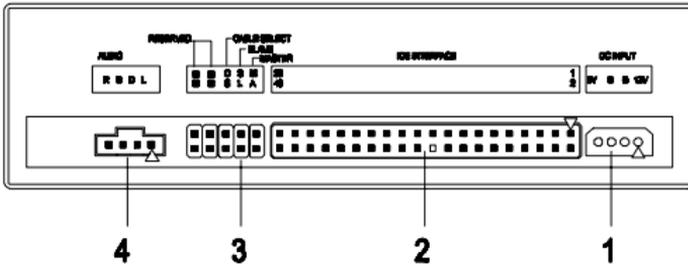

DVD-ROM Drive Rear Panel Connectors and Jumpers

Item	Function	Connect to...																								
1	Power connector	Power supply																								
2	IDE Interface connector	System board CN12																								
3	Configuration jumper. <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>RD^a</th> <th>RD</th> <th>CS</th> <th>SL</th> <th>MA</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>--</td> <td>--</td> <td>--</td> <td>--</td> <td>On</td> <td>Master</td> </tr> <tr> <td>--</td> <td>--</td> <td>--</td> <td>On</td> <td>--</td> <td>Slave.</td> </tr> <tr> <td>--</td> <td>--</td> <td>On</td> <td>--</td> <td>--</td> <td>Cable select</td> </tr> </tbody> </table>	RD ^a	RD	CS	SL	MA	Description	--	--	--	--	On	Master	--	--	--	On	--	Slave.	--	--	On	--	--	Cable select	--
RD ^a	RD	CS	SL	MA	Description																					
--	--	--	--	On	Master																					
--	--	--	On	--	Slave.																					
--	--	On	--	--	Cable select																					
4	Audio Out	Depended on sound card																								

- a. RD -- Configuration jumper (RD indicates Reserved)

RIMM Configurations

The 6832 and 6833 system board has four DIMM sockets. A maximum of 1.5GB memory may be installed. You can install 64MB, 128MB, 256MB or 512MB PC-600/ PC-800 RIMM in any sockets and with any combinations.

NOTE: RIMMs must be installed in pairs. Make sure that the RIMM pairs are the same size, speed, and function.

System Board Connector Pin Signals

Monitor Port Signals

Pin	Signal Name	I/O	Pin	Signal Name	I/O
1	Red Video	O	9	+5 V dc	
2	Green Video	O	10	Synch Ground	
3	Blue Video	O	11	Monitor ID Bit 0	
4	Monitor ID Bit 2	I	12	SDA	I
5	Synch Ground		13	Horizontal Synch	O
6	Red Ground		14	Vertical Synch	O
7	Green Ground		15	SCL	I
8	Blue Ground				

Serial Port Signals

Pin	Signal Name	I/O	Pin	Signal Name	I/O
1	Data Carrier Detect	I	6	Data Set Ready	I
2	Receive Data	I	7	Request To Send	O
3	Transmit Data	O	8	Clear To Send	I
4	Data Terminal Ready	O	9	Ring Indicator	I
5	Signal Ground				

Parallel Port Signals

Pin	Signal Name	I/O	Pin	Signal Name	I/O
1	Strobe	O	14	Auto Feed	N/A
2	Data Bit 0	I/O	15	Error	I
3	Data Bit 1	I/O	16	Initialize	O
4	Data Bit 2	I/O	17	Select (In)	O
5	Data Bit 3	I/O	18	Ground	P
6	Data Bit 4	I/O	19	Ground	Power
7	Data Bit 5	I/O	20	Ground	Power
8	Data Bit 6	I/O	21	Ground	Power
9	Data Bit 7	I/O	22	Ground	Power
10	Acknowledge	I	23	Ground	Power
11	Busy	I	24	Ground	Power
12	Paper Empty	I	25	Ground	Power
13	Select	O	--	--	--

Mouse Port Signals

Pin	Signal Name	I/O	Pin	Signal Name	I/O
1	Mouse Data	I/O	4	+5 V dc	Power
2	No Connection	--	5	Mouse Clock	I/O
3	Ground	Power	6	No Connection	--

Keyboard Port Signals

Pin	Signal Name	I/O	Pin	Signal Name	I/O
1	Data	I/O	4	+5 V dc	Power
2	No Connection		5	Clock	I/O
3	Ground	Power	6	No Connection	--

Diskette Drive Cable Connector Signals

Pin	Signal Name	I/O	Pin	Signal Name	I/O
1	Ground		18	Direction	O
2	Density Select	O	19	Ground	
3	No Connection		20	Step	O
4	No Connection		21	Ground	
5	Ground		22	Write Data	O
6	No Connection		23	Ground	
7	Ground		24	Write Enable	O
8	Index	I	25	Ground	
9	Ground		26	Track 0I	I
10	Motor Enable 0	O	27	Ground	
11	Ground		28	Write Protect	I
12	Drive Select 1	O	29	Ground	
13	Ground		30	Read Data	I
14	Drive Select 0	O	31	Ground	
15	Ground		32	Select Head 1	O
16	Motor Enable 1	O	33	Ground	
17	Ground		34	Diskette Change	I

IDE Cable Connector Signals

Pin	Signal Name	I/O	Pin	Signal Name	I/O
1	Host Reset	O	21	No Connection	
2	Ground		22	Ground	
3	Host Data 7	I/O	23	Host IOW	O
4	Host Data 8	I/O	24	Ground	Power
5	Host Data 6	I/O	25	Host IOR	O
6	Host Data 9	I/O	26	Ground	Power
7	Host Data 5	I/O	27	I/O Channel Ready	I
8	Host Data 10	I/O	28	No Connection	
9	Host Data 4	I/O	29	No Connection	
10	Host Data 11	I/O	30	Ground	Power
11	Host Data 3	I/O	31	Host IRQ	I
12	Host Data 12	I/O	32	No Connection	
13	Host Data 2	I/O	33	Host A1	O
14	Host Data 13	I/O	34	No Connection	
15	Host Data 1	I/O	35	Host A0	O
16	Host Data 14	I/O	36	Host A2	O
17	Host Data 0	I/O	37	Host CS0	O
18	Host Data 15	I/O	38	Host CS1	O
19	Ground	Power	39	ACTIVE bar	I
20	No Connection		40	Ground	Power

Safety Inspection Guide

General Guidelines 140

General Guidelines

The purpose of this Safety Inspection Guide is to help you identify possible unsafe conditions on machines that are being inspected for a Maintenance Agreement. Each machine has necessary functions items installed to provide the operators and service personnel with an acceptable level of safety. This guide lists only these items. Good judgment should be used to identify possible safety conditions not covered by this Safety Inspection Guide.

If any unsafe conditions are present, you must find out how serious the hazard is and if you can continue before you correct the hazard.

All current IBM Personal Computer service supplements outlining feature/model changes, along with the machine history, should be reviewed.

Check the following items:

- Damaged, missing, or changed parts, especially in the area of the On/Off switch and the power supply.
- Damaged, missing, or changed covers.
- Possible safety exposure from any non-IBM attachments.

6832 Parts Catalog

Abbreviations	142
System Assembly	143
Assembly 1: System Unit	143
Assembly 2: Diskette and Hard Drive	145
Assembly 3: CD/DVD-ROM Drive, Adapter Card and Speaker	146
Assembly 4: Power Cord	148
Assembly 5: Keyboard and Mouse	149
Assembly 6: Recovery CD	151


Abbreviations

In this chapter, the following abbreviations are used to identify country and language version:

Country	Language Version
AT	Austria
AU	Australia
BD	Belgium - Dutch
BF	Belgium - French
CA	Canada
CE	Canada - English
CF	Canada - French
CN	China
DK	Denmark - Danish
FI	Finland - Finnish
FR	France
GE	Germany
HK	Hong Kong
IT	Italy
JP	Japan
LS	LA-Spanish
ND	Netherlands - Dutch
NL	Netherlands - Dutch
NO	Norway - Norwegian
SF	Swiss - French
SG	Swiss - German
SP	Spain
SW	Sweden - Swedish
TW	Taiwan
UK	United Kingdom
US	United States
SZ	Switzerland

System Assembly


Assembly 1: System Unit

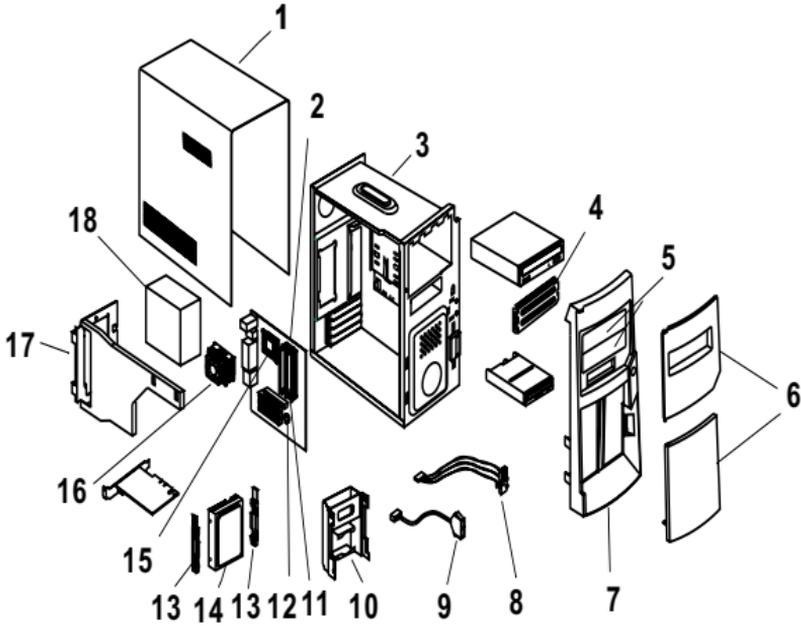

Asm-Index	FRU Number	Description
1-1	19K7810	Top Cover, Black
1-2	24P6088	SYSTEM BOARD W/O MEM/PROC
1-2	22P2508	SYSTEM BOARD W/O MEM/PROC
1-3	19K7811	CHASSIS ASM
1-4	20L3073	EMC SHIELD FOR 5.25" BAY
1-5	09N1749	BLANK BEZEL 5.25" BAY - BLACK
1-6	19K7859	DOOR ASM Blue (EMEA/JAPAN)
1-6	19K7817	DOOR ASM Black (US/CAN/LA)
1-7	19K7860	FRONT BEZEL ASM Blue (EMEA/JAPAN)
1-7	19K7818	FRONT BEZEL ASM Black (US/CAN/LA)
1-8	19K7813	POWER BUTTON
1-8	19K7858	LED/POWER SWITCH ASM
1-9	24P6091	DUAL USB CABLE
1-10	00N5194	HARDFILE MOUNTING BRACKET


Asm-Index	FRU Number	Description
1-11	20L0280	MEMORY 64MB PC800 NP RIMM
1-11	20L0281	MEMORY 128MB PC800 NP RIMM
1-12	33F8354	LITHIUM BATTERY
1-14	37L2501	60MM FAN ASM
1-15	06P2219	1300MHz PROCESSOR
1-15	06P2223	1400MHz PROCESSOR
1-15	06P7776	1500MHz PROCESSOR
1-15	23P1483	133/1700/256MHZ PROCESSOR
1-16	22P2452	PROCESSOR SCREW KIT AND CLIPS
1-16	10K1692	PROCESSOR HEATSINK
1-17	37L2502	POWER SUPPLY BRACKET
1-18	24P6086	200W POWER SUPPLY
1-18	24P6087	200W POWER SUPPLY - JAPAN & EMEA
1-NS	22P6849	IEEE 1394 PCI ADAPTER
1-NS	24P6089	'P4 THERMAL RETENTION BRACKET ASM
1-NS	24P6092	EMC PLANAR SHIELD
1-NS	19K5331	DASD RAIL KIT
1-NS	31P4101	GAME/AUDIO PORT PLUG KIT
1-NS	09N5764	MISC. HARDWARE KIT
1-NS	03K9655	FOOT (4)

Assembly 2: Diskette and Hard Drive

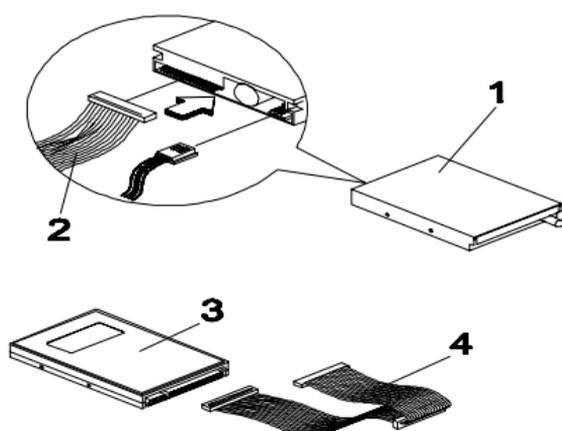

Asm-Index	FRU Number	Description
2-1	76H4091	3.5" 1.44MB DISKETTE DRIVE
2-1	75H9552	3.5" 1.44MB DISKT DRIVE - JAPAN
2-2	01K1513	CABLE DISKETTE DRIVE
2-3	19K1560	20GB HARDFILE EIDE 5400rpm
2-3	19K1568	40GB HARDFILE EIDE 7200rpm
2-3	19K1570	60GB HARDFILE EIDE 7200rpm
2-3	06P5237	80GB HARDFILE ATA-100 5400rpm
2-4	37L4525	CABLE HARDFILE - ATA

Assembly 3: CD/DVD-ROM Drive, Adapter Card and Speaker

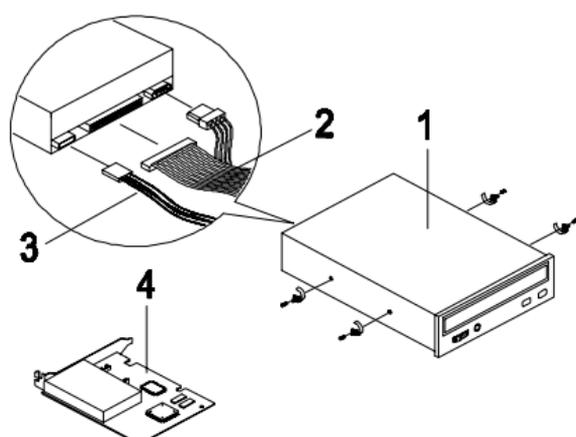


Asm-Index	FRU Number	Description
3-1	19K1531	CD-ROM DRIVE - 48x Black Primary
3-1	06P5161	12x8x32x CDROM READ/WRITE BLACK
3-1	09N0911	DVD-ROM 16x40x
3-1	06P5289	COMBO DVD/CDRW
3-2	37L5098	CABLE HARDFILE - ATA (2-Drop)
3-2	24P6090	CDROM AUDIO CABLE
3-3	19K7990	CREATIVE SOUNDBLASTER AUDIO
3-4	19K2963	MODEM Universal
3-4	19K2965	MODEM Domestic
3-4	19K4309	ACCTON ENET CARD
3-NS	09N5033	32MB NVIDIA TNT2 M64 4X AGP
3-NS	22P1390	NVidia AGP4/64mb NV15 PRO
3-NS	19K5340	16MB NVIDIA TNT2 VIDEO CARD
3-NS	22P1063	ATI RADEON 32mb VIDEO CARD (for US)
3-NS	06P7133	ATI RADEON 32mb VIDEO CARD (for EMEA)
3-NS	06P7131	ATI AUDIO/ VIDEO CABLE ASM's
3-NS	10K2603	LCA SPEAKERS - BLACK
3-NS	10K2587	LCA SPEAKER BRICK - US/ TAIWAN/CAN

Asm-Index	FRU Number	Description
3-NS	19K3659	3PC SPEAKER SET US
3-NS	22P2251	3PC SPEAKER SET EMEA
3-NS	22P2252	3PC SPEAKER SET UK

Assembly 4: Power Cord

Asm-Index	FRU Number	Description
4-NS	14F0033	ARABIC
4-NS	93F2365	AUSTRALIAN
4-NS	1339520	BELGIAN
4-NS	1339520	BULGARIAN
4-NS	93F2364	CANADIAN
4-NS	1339520	CZECHOSLOVAKIAN
4-NS	13F9997	DENMARK
4-NS	1339520	FINLAND
4-NS	1339520	FRANCE
4-NS	1339520	GERMAN
4-NS	1339520	HUNGARIAN
4-NS	14F0087	ISRAEL
4-NS	14F0069	'ITALIAN
4-NS	6952301	LATIN AMERICAN
4-NS	1339520	NETHERLANDS
4-NS	93F2365	NEW ZEALAND
4-NS	1339520	NORWEGIAN
4-NS	1339520	POLISH
4-NS	1339520	PORTUGUESE
4-NS	1339520	SERBIAN
4-NS	1339520	SLOVAKIAN
4-NS	14F0015	SOUTH AFRICAN
4-NS	1339520	SPANISH
4-NS	1339520	SWISS
4-NS	14F0051	SWISS - FRENCH/GERMAN
4-NS	93F2364	US ENGLISH
4-NS	14F0033	UK - IRELAND
4-NS	1339520	YUGOSLAVIAN
4-NS	14F0069	CHILE
4-NS	36L8880	ARGENTINA, PARAGUAY, & URUAGUAY

Assembly 5: Keyboard and Mouse

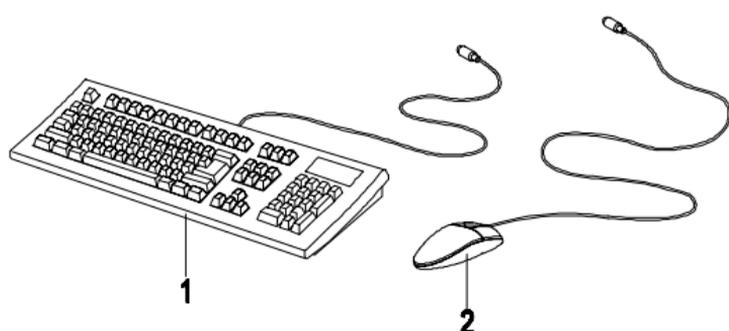

Asm-Index	FRU Number	Description
5-1	19K1910	US ENGLISH
5-1	19K1921	FRENCH CANADIAN 058
5-1	19K1920	FRENCH CANADIAN 445
5-1	19K1930	'LA/SPANISH
5-1	19K1948	BRAZIL/PORTUGAL
5-1	19K1911	ARABIC
5-1	19K1912	BELGIUM FRENCH
5-1	19K1913	BELGIUM - UK
5-1	19K1914	BULGARIAN
5-1	19K1915	CHINESE/US
5-1	19K1916	CZECH
5-1	19K1917	DANISH
5-1	19K1918	DUTCH
5-1	19K1919	FRENCH
5-1	19K1922	GERMAN
5-1	19K1923	GREEK
5-1	19K1924	HEBREW
5-1	19K1925	HUNGARIAN
5-1	19K1926	ICELAND
5-1	19K1927	ITALIAN
5-1	19K1928	JAPANESE
5-1	19K1908	JAPANESE Platinum Mist Silver
5-1	19K1929	KOREAN
5-1	19K1931	NORWEGIAN
5-1	19K1932	POLISH

Asm-Index	FRU Number	Description
5-1	19K1933	PORTUGUESE
5-1	19K1934	ROMANIAN
5-1	19K1935	RUSSIAN
5-1	19K1936	RUSSIAN/CY
5-1	19K1937	SERBIAN/CYRILIC
5-1	19K1938	SLOVAK
5-1	19K1939	SPANISH
5-1	19K1940	SWEDISH /FINLAND
5-1	19K1941	SWISS - FRENCH/GERMAN
5-1	19K1942	THAILAND
5-1	19K1943	TURKISH 440
5-1	19K1944	TURKISH 179
5-1	19K1945	UK ENGLISH
5-1	19K1946	US INTERNATIONAL
5-1	19K1947	YUGOSLAV/LATIN
5-2	28L1868	MOUSE - Scrollpoint Black
5-2	09N5537	MOUSE - Scroll Point II, Black

Assembly 6: Recovery CD

Asm-Index	FRU Number	Description
6-NS	25P5728	WinME US
6-NS	25P5729	WinME UK
6-NS	25P5730	WinME AP
6-NS	25P5731	WinME French
6-NS	25P5732	WinME German
6-NS	25P5733	WinME CanFrench
6-NS	25P5734	WinME Swedish
6-NS	25P5735	WinME Dutch
6-NS	25P5736	WinME Norwegian
6-NS	25P5737	WinME Danish
6-NS	25P5738	WinME Italian
6-NS	25P5739	WinME Finnish

6833 Parts Catalog

Abbreviations	154
System Assembly	155
Assembly 1: System Unit	155
Assembly 2: Diskette and Hard Drive	157
Assembly 3: CD/DVD-ROM Drive, Adapter Card and Speaker	158
Assembly 4: Power Cord	159
Assembly 5: Keyboard and Mouse	160
Assembly 6: Recovery CD	162


Abbreviations

In this chapter, the following abbreviations are used to identify country and language version:

Country	Language Version
AT	Austria
AU	Australia
BD	Belgium - Dutch
BF	Belgium - French
CA	Canada
CE	Canada - English
CF	Canada - French
CN	China
DK	Denmark - Danish
FI	Finland - Finnish
FR	France
GE	Germany
HK	Hong Kong
IT	Italy
JP	Japan
LS	LA-Spanish
ND	Netherlands - Dutch
NL	Netherlands - Dutch
NO	Norway - Norwegian
SF	Swiss - French
SG	Swiss - German
SP	Spain
SW	Sweden - Swedish
TW	Taiwan
UK	United Kingdom
US	United States
SZ	Switzerland

System Assembly


Assembly 1: System Unit

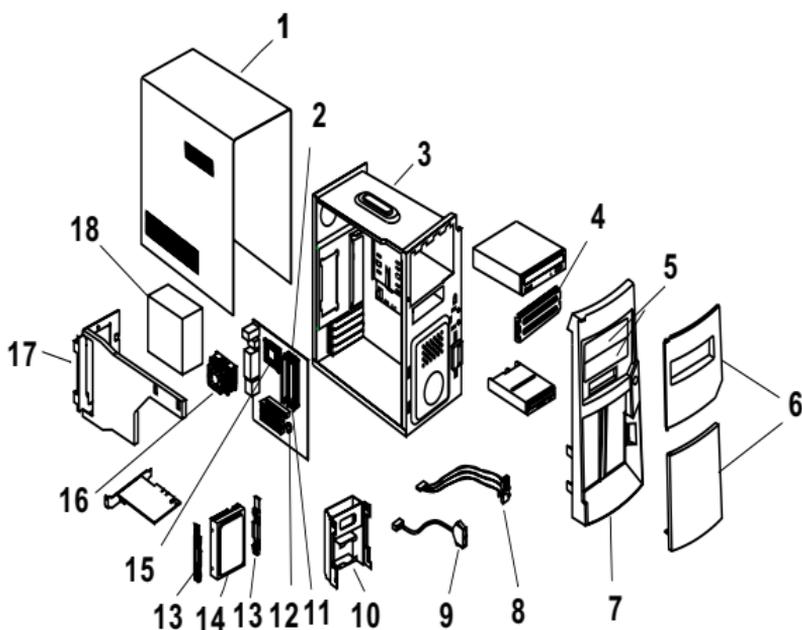

Asm-Index	FRU Number	Description
1-1	19K7810	TOP COVER, BLACK
1-2	24P6088	SYSTEM BOARD W/O MEM/PROC
1-2	22P2508	SYSTEM BOARD W/O MEM/PROC
1-3	19K7811	CHASSIS ASM
1-4	20L3073	EMC SHIELD FOR 5.25" BAY
1-5	09N1749	BLANK BEZEL 5.25" BAY - BLACK
1-6	19K7859	DOOR ASM Blue (EMEA/JAPAN)
1-6	19K7817	DOOR ASM Black (US/CAN/LA)
1-7	19K7860	FRONT BEZEL ASM Blue (EMEA/JAPAN)
1-7	19K7818	FRONT BEZEL ASM Black (US/CAN/LA)
1-8	19K7813	POWER BUTTON
1-8	19K7858	LED/POWER SWITCH ASM
1-9	24P6091	DUAL USB CABLE
1-10	37L2501	HARDFILE MOUNTING BRACKET


Asm-Index	FRU Number	Description
1-11	20L0281	MEMORY 128MB PC800 NP RIMM
1-11	33L3098	256MB PC600 MEMORY ECC RIMM
1-12	33F8354	LITHIUM BATTERY
1-14	00N5194	60MM FAN ASM
1-15	06P2219	1300MHz PROCESSOR
1-15	06P2223	1400MHz PROCESSOR
1-15	06P7776	1500MHz PROCESSOR
1-15	23P1483	1700MHz PROCESSOR
1-16	22P2452	PROCESSOR SCREW KIT AND CLIPS
1-16	10K1692	PROCESSOR HEATSINK
1-17	37L2502	POWER SUPPLY BRACKET
1-18	24P6086	200W POWER SUPPLY
1-18	24P6087	200W POWER SUPPLY - JAPAN & EMEA
1-NS	24P6089	'P4 THERMAL RETENTION BRACKET ASM
1-NS	24P6092	EMC PLANAR SHIELD
1-NS	19K5331	DASD RAIL KIT
1-NS	31P4101	GAME/AUDIO PORT PLUG KIT
1-NS	09N5764	MISC. HARDWARE KIT
1-NS	03K9655	FOOT (4)

Assembly 2: Diskette and Hard Drive

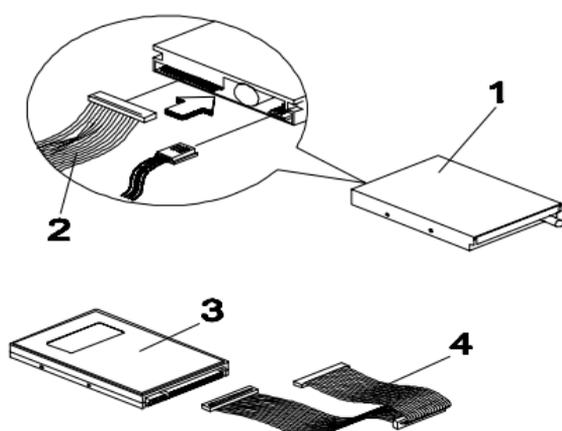

Asm-Index	FRU Number	Description
2-1	76H4091	3.5" 1.44MB DISKETTE DRIVE
2-1	75H9552	3.5" 1.44MB DISKT DRIVE - JAPAN
2-2	01K1513	CABLE DISKETTE DRIVE
2-3	19K1560	20GB HARDFILE EIDE 5400rpm
2-3	19K1568	40GB HARDFILE EIDE 7200rpm
2-3	19K1570	60GB HARDFILE EIDE 7200rpm
2-3	06P5237	80GB HARDFILE ATA-100, 5400rpm
2-4	37L4525	CABLE HARDFILE - ATA

Assembly 3: CD/DVD-ROM Drive, Adapter Card and Speaker

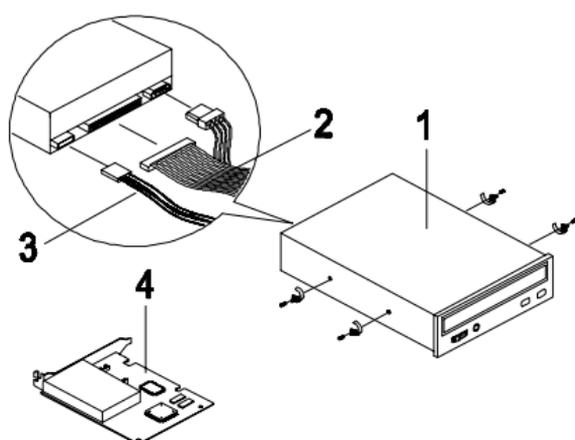


Asm-Index	FRU Number	Description
3-1	19K1531	CD-ROM DRIVE - 48x Black Primary
3-1	06P5161	12x8x32x CDROM READ/WRITE BLACK
3-1	09N0911	DVD-ROM 16x40x
3-2	37L5098	CABLE HARDFILE - ATA (2-Drop)
3-2	24P6090	CDROM AUDIO CABLE
3-4	19K4309	ACCTON ENET CARD
3-NS	09N5033	32MB NVIDIA TNT2 M64 4X AGP
3-NS	19K5340	16MB NVIDIA TNT2 VIDEO CARD / M64 4X/16MB VMEM AGP

Assembly 4: Power Cord

Asm-Index	FRU Number	Description
4-NS	14F0033	ARABIC
4-NS	93F2365	AUSTRALIAN
4-NS	1339520	BELGIAN
4-NS	1339520	BULGARIAN
4-NS	93F2364	CANADIAN
4-NS	1339520	CZECHOSLOVAKIAN
4-NS	13F9997	DENMARK
4-NS	1339520	FINLAND
4-NS	1339520	FRANCE
4-NS	1339520	GERMAN
4-NS	1339520	HUNGARIAN
4-NS	14F0087	ISRAEL
4-NS	14F0069	'ITALIAN
4-NS	6952301	LATIN AMERICAN
4-NS	1339520	NETHERLANDS
4-NS	93F2365	NEW ZEALAND
4-NS	1339520	NORWEGIAN
4-NS	1339520	POLISH
4-NS	1339520	PORTUGUESE
4-NS	1339520	SERBIAN
4-NS	1339520	SLOVAKIAN
4-NS	14F0015	SOUTH AFRICAN
4-NS	1339520	SPANISH
4-NS	1339520	SWISS
4-NS	14F0051	SWISS - FRENCH/GERMAN
4-NS	93F2364	US ENGLISH
4-NS	14F0033	UK - IRELAND
4-NS	1339520	YUGOSLAVIAN
4-NS	14F0069	CHILE
4-NS	36L8880	ARGENTINA, PARAGUAY, & URUAGUAY

Assembly 5: Keyboard and Mouse

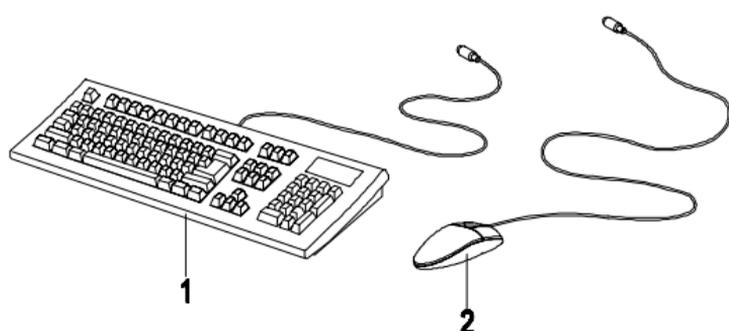

Asm-Index	FRU Number	Description
5-1	37L2551	US ENGLISH
5-1	37L0913	FRENCH CANADIAN 058
5-1	37L2552	FRENCH CANADIAN 445
5-1	37L2553	'LA/SPANISH
5-1	37L2554	BRAZIL/PORTUGAL
5-1	37L2555	ARABIC
5-1	37L2556	BELGIUM FRENCH
5-1	37L2557	BELGIUM - UK
5-1	37L2558	BULGARIAN
5-1	37L2559	CZECH
5-1	37L2560	DANISH
5-1	37L2561	DUTCH
5-1	37L2562	FRENCH
5-1	37L2563	GERMAN
5-1	37L2564	GREEK
5-1	37L2565	HEBREW
5-1	37L2566	HUNGARIAN
5-1	37L2567	ICELAND
5-1	37L2568	ITALIAN
5-1	37L2569	NORWEGIAN
5-1	37L2570	POLISH
5-1	37L2571	PORTUGUESE
5-1	37L2572	ROMANIAN
5-1	37L2573	RUSSIAN
5-1	37L2574	SERBIAN - CYR

Asm-Index	FRU Number	Description
5-1	37L2575	SLOVAK
5-1	37L2576	SPANISH
5-1	37L2577	SWEDISH /FINLAND
5-1	37L2578	SWISS - FRENCH/GERMAN
5-1	37L2579	TURKISH - ID 179
5-1	37L2580	TURKISH - ID 440
5-1	37L2581	UK ENGLISH
5-1	37L2582	YUGOSLAVIAN
5-1	37L2583	UK ENGLISH (ISO)
5-1	37L2584	JAPANESE
5-1	37L2585	CHINESE
5-1	28L1905	KOREAN
5-1	37L2587	THAILAND
5-2	76H5080	MOUSE - 2 Button Black

Assembly 6: Recovery CD

Asm-Index	FRU Number	Description
6-NS	25P5740	W2K/NT US
6-NS	25P5741	W2K/NT UK
6-NS	25P5742	W2K/NT AP
6-NS	25P5743	W2K/NT French
6-NS	25P5744	W2K/NT German
6-NS	25P5745	W2K/NT CanFrench
6-NS	25P5746	W2K/NT Swedish
6-NS	25P5747	W2K/NT Dutch
6-NS	25P5748	W2K/NT Norwegian
6-NS	25P5749	W2K/NT Danish
6-NS	25P5750	W2K/NT Italian
6-NS	25P5751	W2K/NT Finnish

6832 Appendix A. FRU Number List

FRU Number	Asm-Index	Page
00N5194	1-10	143
01K1513	2-2	145
03K9655	1-NS	144
06P2219	1-15	144
06P2223	1-15	144
06P5161	3-1	146
06P5237	2-3	145
06P5289	3-1	146
06P7131	3-NS	146
06P7133	3-NS	146
06P7776	1-15	144
09N0911	3-1	146
09N1749	1-5	143
09N5033	3-NS	146
09N5537	5-2	150
09N5764	1-NS	144
10K1692	1-16	144
10K2587	3-NS	146
10K2603	3-NS	146
13F9997	4-NS	148
1339520	4-NS	148

FRU Number	Asm-Index	Page
1339520	4-NS	148
1339520	4-NS	148
1339520	4-NS	148
14F0015	4-NS	148
14F0033	4-NS	148
14F0033	4-NS	148
14F0051	4-NS	148
14F0069	4-NS	148
14F0069	4-NS	148
14F0087	4-NS	148
19K1531	3-1	146
19K1560	2-3	145
19K1568	2-3	145
19K1570	2-3	145
19K1908	5-1	149
19K1910	5-1	149
19K1911	5-1	149
19K1912	5-1	149
19K1913	5-1	149
19K1914	5-1	149
19K1915	5-1	149
19K1916	5-1	149
19K1917	5-1	149
19K1918	5-1	149
19K1919	5-1	149
19K1920	5-1	149
19K1921	5-1	149
19K1922	5-1	149
19K1923	5-1	149
19K1924	5-1	149
19K1925	5-1	149
19K1926	5-1	149
19K1927	5-1	149
19K1928	5-1	149
19K1929	5-1	149
19K1930	5-1	149

FRU Number	Asm-Index	Page
19K1931	5-1	149
19K1932	5-1	149
19K1933	5-1	150
19K1934	5-1	150
19K1935	5-1	150
19K1936	5-1	150
19K1937	5-1	150
19K1938	5-1	150
19K1939	5-1	150
19K1940	5-1	150
19K1941	5-1	150
19K1942	5-1	150
19K1943	5-1	150
19K1944	5-1	150
19K1945	5-1	150
19K1946	5-1	150
19K1947	5-1	150
19K1948	5-1	149
19K2963	3-4	146
19K2965	3-4	146
19K3659	3-NS	147
19K4309	3-4	146
19K5331	1-NS	144
19K5340	3-NS	146
19K7810	1-1	143
19K7811	1-3	143
19K7813	1-8	143
19K7817	1-6	143
19K7818	1-7	143
19K7858	1-8	143
19K7859	1-6	143
19K7860	1-7	143
19K7990	3-3	146
20L0280	1-11	144
20L0281	1-11	144
20L3073	1-4	143

FRU Number	Asm-Index	Page
22P1063	3-NS	146
22P1390	3-NS	146
22P2251	3-NS	147
22P2252	3-NS	147
22P2452	1-16	144
22P2508	1-2	143
22P6849	1-NS	144
23P1483	1-15	144
24P6086	1-18	144
24P6087	1-18	144
24P6088	1-2	143
24P6089	1-NS	144
24P6090	3-2	146
24P6091	1-NS	143
24P6092	1-NS	144
25P5728	6-NS	151
25P5729	6-NS	151
25P5730	6-NS	151
25P5731	6-NS	151
25P5732	6-NS	151
25P5733	6-NS	151
25P5734	6-NS	151
25P5735	6-NS	151
25P5736	6-NS	151
25P5737	6-NS	151
25P5738	6-NS	151
25P5739	6-NS	151
28L1868	5-2	150
31P4101	1-NS	144
33F8354	1-12	144
36L8880	4-NS	148
37L2501	1-14	144
37L2502	1-17	144
37L4525	2-4	145
37L5098	3-2	146
6952301	4-NS	148

FRU Number	Asm-Index	Page
76H4091	2-1	145
75H9552	2-1	145
93F2364	4-NS	148
93F2364	4-NS	148
93F2365	4-NS	148
93F2365	4-NS	148

FRU Number	Asm-Index	Page
14F0051	4-NS	159
14F0069	4-NS	159
14F0069	4-NS	159
14F0087	4-NS	159
19K1531	3-1	158
19K1560	2-3	157
19K1568	2-3	157
19K4309	3-4	158
19K5331	1-NS	156
19K5340	3-NS	158
19K7810	1-1	155
19K7811	1-3	155
19K7813	1-8	155
19K7817	1-6	155
19K7818	1-7	155
19K7858	1-8	155
19K7859	1-6	155
19K7860	1-7	155
20L0281	1-11	156
20L3073	1-4	155
22P2452	1-16	156
22P2508	1-2	155
23P1483	1-15	156
24P6086	1-18	156
24P6087	1-18	156
24P6088	1-2	155
24P6089	1-NS	156
24P6090	3-2	158
24P6091	1-9	155
24P6092	1-NS	156
25P5740	6-NS	162
25P5741	6-NS	162
25P5742	6-NS	162
25P5743	6-NS	162
25P5744	6-NS	162
25P5745	6-NS	162

FRU Number	Asm-Index	Page
25P5746	6-NS	162
25P5747	6-NS	162
25P5748	6-NS	162
25P5749	6-NS	162
25P5750	6-NS	162
5P5751	6-NS	162X
28L1905	5-1	161
31P4101	1-NS	156
33F8354	1-12	156
33L3098	1-11	156
36L8880	4-NS	159
37L0913	5-1	160
37L2501	1-10	155
37L2502	1-17	156
37L2551	5-1	160
37L2552	5-1	160
37L2553	5-1	160
37L2554	5-1	160
37L2555	5-1	160
37L2556	5-1	160
37L2557	5-1	160
37L2558	5-1	160
37L2559	5-1	160
37L2560	5-1	160
37L2561	5-1	160
37L2562	5-1	160
37L2563	5-1	160
37L2564	5-1	160
37L2565	5-1	160
37L2566	5-1	160
37L2567	5-1	160
37L2568	5-1	160
37L2569	5-1	160
37L2570	5-1	160
37L2571	5-1	160
37L2572	5-1	160

FRU Number	Asm-Index	Page
37L2573	5-1	160
37L2574	5-1	160
37L2575	5-1	161
37L2576	5-1	161
37L2577	5-1	161
37L2578	5-1	161
37L2579	5-1	161
37L2580	5-1	161
37L2581	5-1	161
37L2582	5-1	161
37L2583	5-1	161
37L2584	5-1	161
37L2585	5-1	161
37L2587	5-1	161
37L4525	2-4	157
37L5098	3-2	158
6952301	4-NS	159
76H4091	2-1	157
75H9552	2-1	157
76H5080	5-2	161
93F2364	4-NS	159
93F2364	4-NS	159
93F2365	4-NS	159
93F2365	4-NS	159

Appendix B. Online Support Information

This section describes online technical support services available to help repair the Personal Computer.

This section covers:

- IBM PC Company Fax-Back Service (US and Canada only)
- IBM Online HelpCenter on America Online
- IBM useful sites on the World Wide Web (WWW)

Online technical support offers convenient and valuable information when you need it. IBM offers support areas on several online services where you can work with IBM technicians for solutions to your questions, download key files, and access database information for the personal computer.

The IBM PC Company offers online resources including several Internet World Wide Web sites, the IBM Online HelpCenter support areas, and a Fax-Back service.

The IBM PC Company Automated Fax-Back System offers a variety of IBM computer-related articles. To access this service, call 800-IBM-3395.

Technical support is offered through the IBM Online Help Centers on America Online.

IBM online support areas on all of the services can assist with your technical questions. These areas offer message boards monitored by IBM technicians, databases of computer-related solutions, and file libraries.

You can reach the IBM Online Help Center on America Online using keyword: **IBM Connection**. For information about America Online, please call (800) 827-6364 (U.S. and Canada only). America Online has limited international availability.

To access the IBM PC Company Internet sites, you will need to acquire Internet access. Please check with your local Internet provider for more information. (Members of AOL can reach these sites through the Internet capabilities of the services.)

Here are some useful IBM Internet addresses for Personal Computer information:

<http://www.ibm.com/pc>

PC Company Home Page

<http://www.ibm.com/pc/us/netvista>

Netvista Home Page

<http://www.ibm.com/support>

IBM Support Site

Index

A

AGP 3

Audio

 Check Procedure, 54

B

BIOS

 Flash Update Procedure, 11

BIOS Setup Utility 12

 Disk Drives, 16

 Main Menu, 12

C

CD/DVD-ROM Drive

 Check Procedure, 57

CD-ROM Drive

 Connectors and Jumpers, 129

 Emergency-exit , 128

 Emergency-exit , 128

 Front Panel , 128, 130

Check Procedures, 26

CMOS Reset, 9

D

Dimension, 23

Diskette Drive, 4

 Cable Connector Signals, 137

DVD-ROM Drive

 Front Panel, 132

DVD-ROM Drive, 5

E

Electrical input, 23

Environment, 23

Error Beeps List, 37

Error Beeps, 26, 32

Error Codes and Messages List, 34

Error Codes, 26, 32

Error Messages, 32

Error Symptoms List, 38

Error Symptoms, 32

ESD, 83

External Ports, 4

H

Hard Disk Drive

 Cable Connector Signals, 138

Hard Disk Drive, 4

Hardware Interfaces, 7

I

IDE Cable Connector Signals, 138

Internal Cabling, 6

K

Keyboard, 6

 Check Procedure, 60

 Port Signals, 136

M

Memory, 3

 Check Procedure, 59

 DIMM Configurations, 134

Modem

 Factory-Installed Modem Card Connector, 119

 Factory-Installed Modem Card Layout, 119

Monitor

 Check Procedure, 66

 Port Signals, 135

Mouse

 Check Procedure, 61

 Port Signals, 136

Mouse, 6

Multimedia, 5

O

Online Support Information, 169

Operating Requirements, 24

P

Parallel Port

 Port Signals, 136

Password, 10

Port Signals

 Keyboard, 136

 Monitor, 135

 Mouse, 136

 Parallel Port, 136

POST, 32, 73

- Power consumption, 23
- Power Management, 5
- Power Supply
 - Check Procedure, 63
 - Connector Pin Assignment, 115
 - Connectors and Voltages, 115
- Power Supply, 6
- Processors, 3

R

- Removals and Replacements, 82
 - Adapter Card, 99
 - Bay 1, 5.25-In. Bay, 89
 - Bay 3, 3.5-In. Bay, 90
 - Bay 4, 3.5-In. Bay, 91
 - Bay Panels, 88
 - Cover, 86
 - ESD-Sensitive Parts, 83
 - LED and Cable, 107
 - Memory(DIMM), 101
 - Power Supply, 96
 - System Board, 108

S

- Safety Information, viii
- System Backup Battery, 106
- System Board
 - Connectors, 113
 - Jumper Settings, 113
- System Unit, 143, 153

T

- Troubleshooting, 48

U

- Undetermined Problems
 - Check Procedure, 68

V

- Video Cards, 120
- Voltage Supply
 - Switch Settings, vii

W

- Weight, 23



Printed in U.S.A.

International Business Machines Corporation
Old Orchard Road,
Armonk, New York 10504

Part Number: 24P2919