

Rack Installation Instructions

Review the documentation that comes with your rack cabinet for safety and cabling information. Before installing your server in a rack cabinet, review the following guidelines:

- Two or more people are required to install the device in a rack cabinet.
- Ensure that the room air temperature is below 35°C (95°F).
- Do not block any air vents; usually 15 cm (6 in.) of space provides proper airflow.
- Do not leave open spaces above or below an installed server in your rack cabinet. To help prevent damage to server components, always install a blank filler panel to cover the open space and to help ensure proper air circulation.
- Install your server only in a rack cabinet with perforated doors.
- Plan the device installation starting from the bottom of the rack cabinet.
- Install the heaviest device in the bottom of the rack cabinet.
- Do not extend more than one device out of the rack cabinet at the same time.
- Remove the rack doors and side panels to provide easier access during installation.
- Connect the server to a properly grounded outlet.
- Do not overload the power outlet when installing multiple devices in the rack cabinet.
- Install your server in a rack that meets the following requirements:
 - Minimum depth of 70 mm (2.76 in.) between the front mounting flange and inside of the front door.
 - Minimum depth of 157 mm (6.18 in.) between the rear mounting flange and inside of the rear door.
 - Minimum depth of 718 mm (28.27 in.) and maximum depth of 762 mm (30 in.) between the front and rear mounting flanges to support the use of the cable-management arm.



Use safe practices when lifting.



≥18 kg (39.7 lb)



≥32 kg (70.5 lb)



≥55 kg (121.2 lb)




Do not place any object on top of rack-mounted devices.





Note: Cage nuts and clip nuts are not required to install your server in a rack cabinet. Use 5.5 mm flat-head screws to install the slide rails in a taped-hole rack, if necessary.

The following illustration shows the items that come with your server that you need to install the server in your rack cabinet. If any items are missing or damaged, contact your place of purchase.

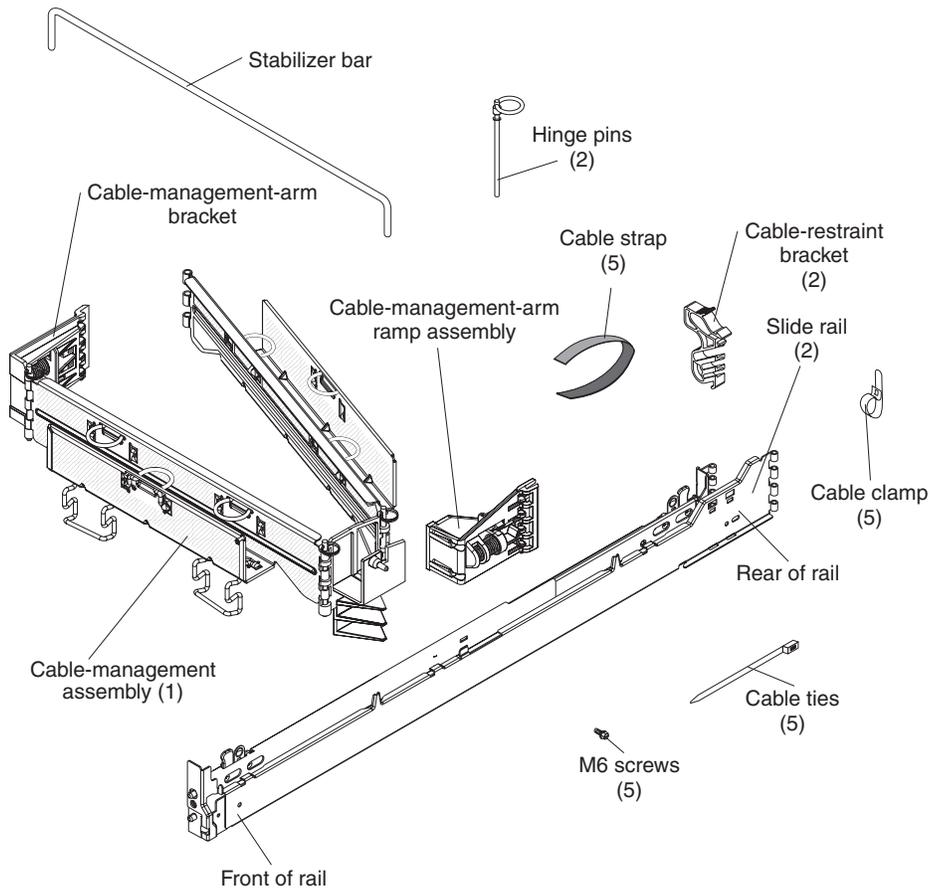


Use the following illustration of the front and rear rack-mounting flanges, or the template that comes in the rack installation kit, to determine the appropriate rack-mounting holes for installing the slide rails.

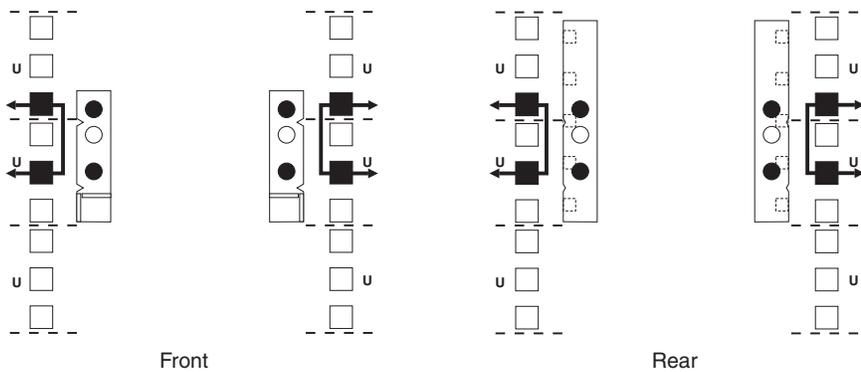

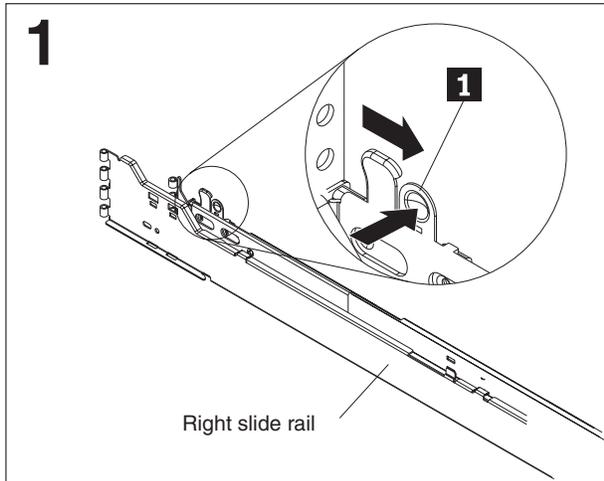


Push outward on the slide-rail latch **1**; then, pull the latch back to open the slide rail. The latch will catch to stay open. Open the other end of the slide rail; then, do the same for the other slide rail.
Note: The slide rails are marked “Left” and “Right”.

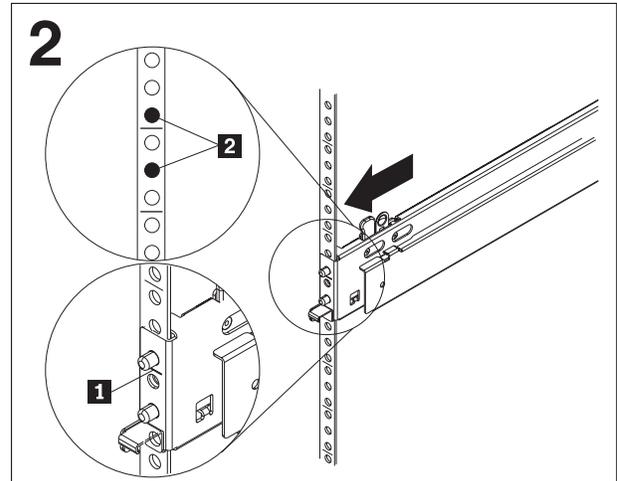


Align the left slide rail with the front mounting flange. Align the score mark **1** with the line between the top two 1-U installation positions. Push outward on the slide-rail latch to close the latch and secure the slide rail. Do the same for the right front slide rail. Align the slide rail with the rear mounting flange. Close the latches to secure the rear of both slide rails.

Note: Make sure that the slide rails are securely seated on the mounting flanges. When secure, the slide rail pins **2** protrude through the mounting flanges and the slide rails.

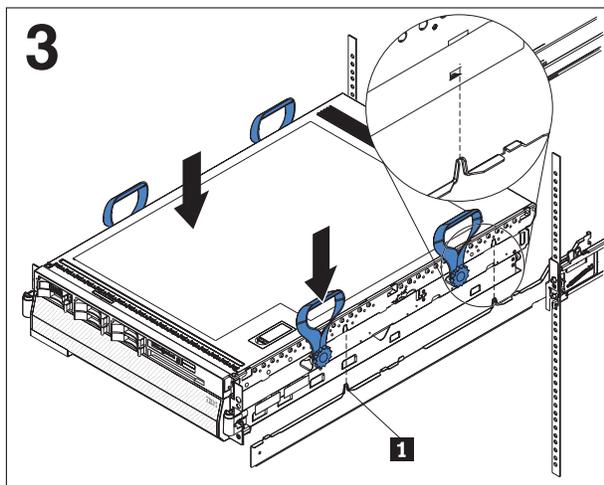


Extend the slide rails fully from the rack until the slide rails lock. Align the tabs on the slide rails **1** with the matching inserts on the server and lower the server onto the slide rails.

Note: Make sure that each slide-rail tab is inserted in the matching insert on the server and that the server is resting on the top edge of the slide rails.

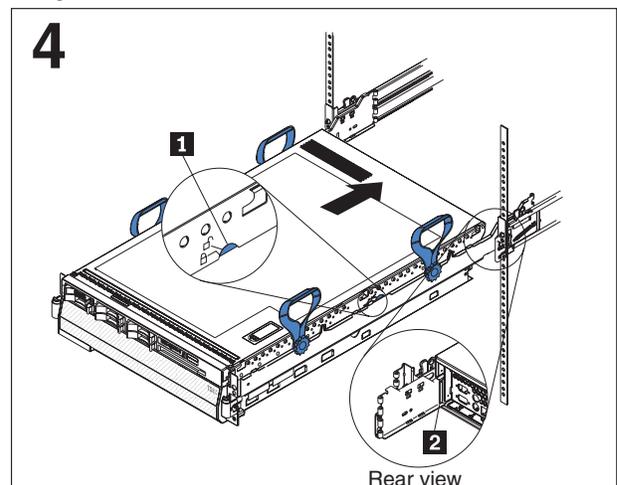


Carefully slide the server along the slide rails approximately one inch toward the rack to lock the server on the slide rails.


Note: When locked in position, a blue indicator **1** is visible on each side of the server. Make sure that the server is securely attached to the slide rail hooks **2**. To remove the server from the rack, lift up on the indicator and slide the server forward; then, use the handles to lift the server out of the rack.

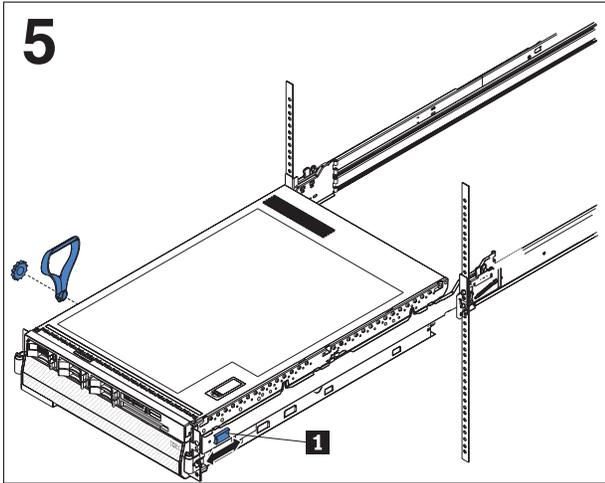


Remove the blue handles; then, slide the blue latches **1** on the slide rails in either direction and slide the server into the rack until it extends approximately 4 inches.

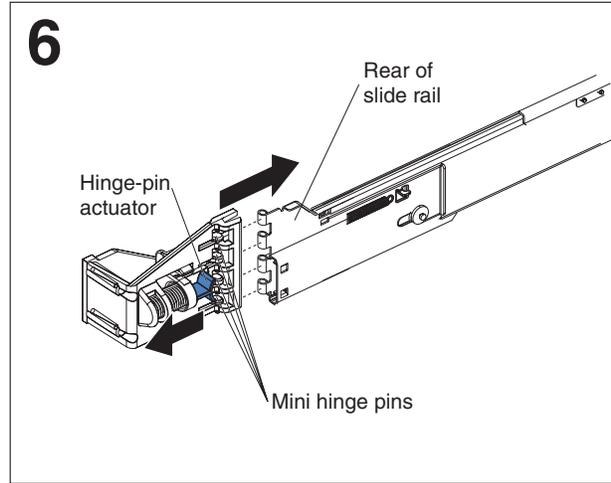


Pull back on the blue hinge-pin actuator on the ramp assembly and place the mini hinge pins of the ramp assembly into the matching hinges of the right slide rail. Push the hinge-pin actuator forward to securely engage the hinge pins.

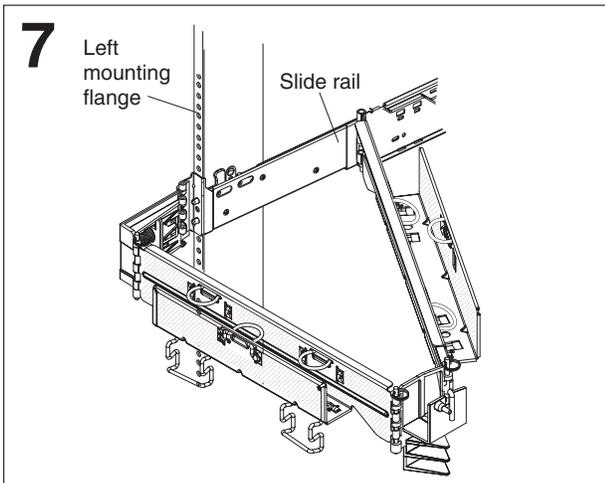

Repeat the previous procedure to attach the cable-management assembly to the left slide rail.

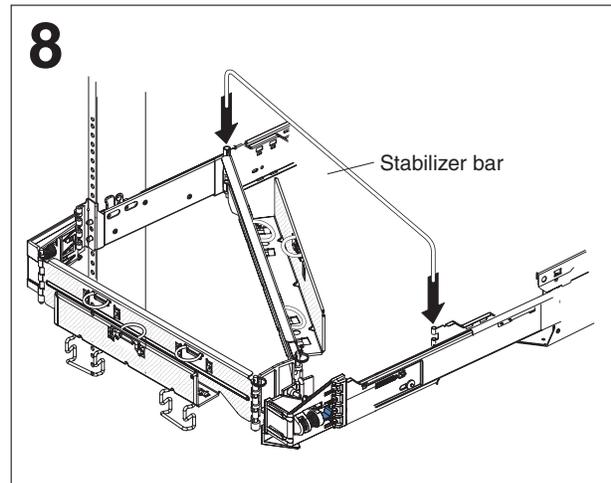


Attach the free end of the cable-management assembly to the slide rail with one end of the stabilizing bar. Attach the other side of the stabilizing bar to the right slide rail.

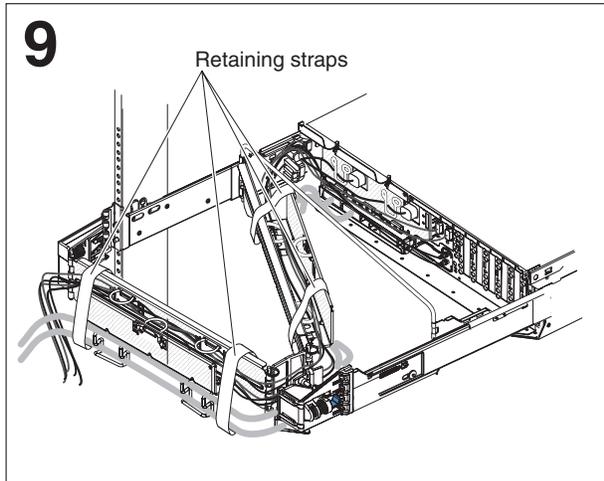


Route the SMP Expansion cables through the wire-form clips.

Attach the power cords and other cables to the rear of the server (including keyboard, monitor, and mouse, if required). First, route the power cords in the trough of the cable-management assembly; then, route the remaining cables.

Secure all cables with retaining straps.

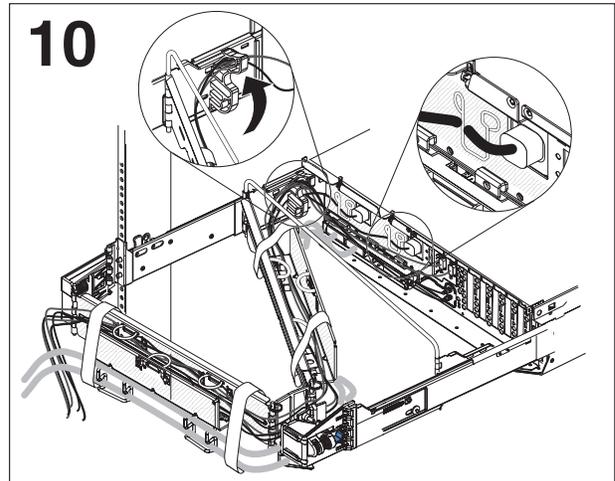

Secure the cables across the rear of the server. Pull the server out of the rack; then, pull the SMP Expansion cables taut from the rear of the server and tighten the retaining straps.

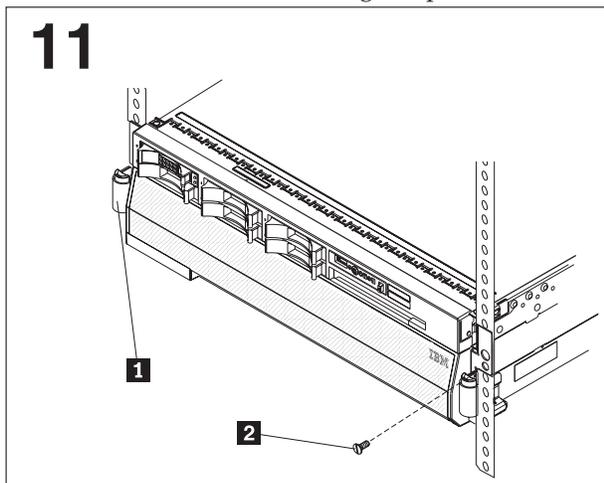

Slide the server into the rack cabinet until the release latches **1** lock into place. To slide the server out of the rack, press on the release latches.

Note: Insert the optional M6 screws **2** in both sides of the front and rear of the server when moving the rack cabinet, or if you install the rack cabinet in a vibration-prone area.

To remove the server from the rack, reverse these instructions. After you remove the cables from the rear of the server, you might find it easier to separate the cable-management arm from the server, keeping the cables in the cable-management arm, before you remove the server from the rack. To separate the cable-management arm from the server, pull back on the hinge-pin actuators. Store this information with your server documentation for future use.

First Edition (June 2005)

Part number: 25R3490

Printed in the U.S.A.

IBM is a trademark of the IBM Corporation in the United States, other countries, or both.

© Copyright International Business Machines Corporation 2005. All rights reserved.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

(1P) P/N: 25R3490

