



Netfinity 10/100 Ethernet Adapters



# Installation Guide



Netfinity 10/100 Ethernet Adapters



# Installation Guide

**Note**

Before using this information and the product it supports, be sure to read "Safety Information" on page viii and "Appendix J. Notices" on page 43.

**Second Edition (July 1999)**

**The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law:** INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or program(s) described in this publication at any time.

It is possible that this publication may contain reference to, or information about, IBM products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that IBM intends to announce such IBM products, programming, or services in your country.

Requests for technical information about IBM products should be made to your IBM Authorized Dealer or your IBM Marketing Representative.

A form for readers' comments appears at the back of this publication. If the form has been removed, address your comments to:

Department CGF  
Design & Information Development  
IBM Corporation  
PO Box 12195  
RESEARCH TRIANGLE PARK NC 27709-9990  
USA

You can also submit comments online at:

<http://www.networking.ibm.com/support/feedback.nsf/docsoverall1>

When you send information to IBM, you grant IBM a nonexclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

---

# Contents

<b>About This Manual</b> . . . . .	vii
Who Should Read This Manual . . . . .	vii
How This Manual Is Organized . . . . .	vii
Related Information . . . . .	vii
Year 2000 . . . . .	viii
Safety Information . . . . .	viii
Telecommunications Safety Requirements in the United Kingdom. . . . .	xiii
Statement of Compliance with the United Kingdom Telecommunications Act 1984 . . . . .	xiii
<b>Chapter 1. Installing the Adapter Hardware</b> . . . . .	1
Installing the Adapter . . . . .	1
Using the Correct Adapter Cable . . . . .	2
Connecting the Wake On LAN Cable . . . . .	3
Connecting the 2-Way Wake on LAN Cable . . . . .	3
Using Wake On LAN . . . . .	5
<b>Chapter 2. Configuring Your Adapter</b> . . . . .	7
Making a Setup Diskette . . . . .	7
Configuring the Adapter and Installing the Drivers. . . . .	7
Novell NetWare 5.0 . . . . .	7
Novell NetWare 4.1x . . . . .	8
Windows 95 . . . . .	8
Windows 98 . . . . .	9
Windows NT Automatic Configuration . . . . .	10
Adding an Adapter when Installing Windows NT . . . . .	10
Windows NT Version 4.0 . . . . .	11
Windows NT Version 3.51 . . . . .	11
Windows NT Troubleshooting . . . . .	11
DOS and Windows 3.1 Setup for Novell NetWare DOS ODI Clients . . . . .	12
Responder Testing on the Network (Optional) . . . . .	13
NetWare 3.11, 3.12, Client 32, UNIX, Banyan VINES, and Other Operating Systems . . . . .	13
<b>Appendix A. IBMSet: An Overview</b> . . . . .	15
Note about Adapter DOS Diagnostics . . . . .	15
<b>Appendix B. Duplex Mode (Optional)</b> . . . . .	17
Manually Configuring for Full Duplex . . . . .	17
Setting Full Duplex in DOS, ODI, NDIS 2.01 Clients . . . . .	17
Setting Full Duplex in NetWare Servers . . . . .	18
Setting Full Duplex in Windows 95 and Windows 98. . . . .	18
Setting Full Duplex in Other Operating Systems . . . . .	18
<b>Appendix C. Virtual LANs</b> . . . . .	19
Creating a Virtual LAN. . . . .	19
General Configuration Notes . . . . .	19
Joining a VLAN from Windows NT 4.0 . . . . .	19
Joining a VLAN from NetWare 4.1x or 5.0 . . . . .	20
<b>Appendix D. Teaming Options</b> . . . . .	21
General Configuration Notes . . . . .	21
Setting Up Adapter Fault Tolerance . . . . .	21

Setting Adapter Fault Tolerance in Windows NT 4.0 . . . . .	22
Configuring Properties . . . . .	22
Deleting a Team . . . . .	22
Setting Adapter Fault Tolerance in NetWare . . . . .	22
Deleting a Team . . . . .	23
Setting Adaptive Load Balancing . . . . .	23
Setting Adaptive Load Balancing in Windows NT 4.0 . . . . .	23
Deleting a Team . . . . .	24
Setting Adapter Load Balancing in NetWare . . . . .	24
Deleting a Team . . . . .	25
Setting Cisco Fast EtherChannel . . . . .	25
Setting Fast EtherChannel in Windows NT 4.0 . . . . .	25
Deleting a Team . . . . .	25
Setting Fast EtherChannel in NetWare . . . . .	26
Deleting a Team . . . . .	26
Teaming Options Supported by Operating System and Protocol . . . . .	20
<b>Appendix E. Hot Plug Support . . . . .</b>	<b>29</b>
Hot Add . . . . .	29
Hot Swap . . . . .	29
<b>Appendix F. Troubleshooting and Testing the Adapter . . . . .</b>	<b>31</b>
Problem Symptoms and Corrective Actions . . . . .	31
The adapter cannot connect to the network . . . . .	31
SETUP.EXE reports the adapter is "Not enabled by BIOS" . . . . .	32
The computer hangs when the drivers are loaded. . . . .	32
Diagnostics pass, but the connection fails or errors occur . . . . .	32
The LNK LED does not light . . . . .	32
The ACT LED does not light . . . . .	32
The adapter stops working without apparent cause . . . . .	32
The Wake on LAN feature is not working . . . . .	32
The LNK LED does not light when you connect the power . . . . .	33
Testing the Adapter Using the Diagnostics . . . . .	33
IBM Product Support . . . . .	33
Web Sites for Software Updates . . . . .	33
<b>Appendix G. Priority Packet: An Overview . . . . .</b>	<b>35</b>
Prioritizing Network Traffic . . . . .	35
IEEE 802.1p Tagging . . . . .	35
High Priority Queue . . . . .	36
<b>Appendix H. PCI Installation Tips . . . . .</b>	<b>37</b>
Removing an Existing Adapter in Windows 95 . . . . .	38
Push Installation for Windows 95 . . . . .	38
Fast Ethernet Wiring . . . . .	38
Boot Agent . . . . .	38
Configuration . . . . .	39
Troubleshooting Boot Agent . . . . .	39
<b>Appendix I. Adapter Specifications . . . . .</b>	<b>41</b>
<b>Appendix J. Notices . . . . .</b>	<b>43</b>
Safety Notices. . . . .	43
Telecommunications Safety Requirements in the United Kingdom. . . . .	43
Statement of Compliance with the United Kingdom Telecommunications Act 1984 . . . . .	44

Electronic Emission Notices for Category 5 Data Grade Cables. . . . .	44
Federal Communications Commission (FCC) Statement . . . . .	44
Industry Canada Class B Emission Compliance Statement . . . . .	45
Avis de conformité aux normes d'Industrie Canada . . . . .	45
European Norm (EN) Statement . . . . .	45
Hinweis zur Elektromagnetischen Verträglichkeit (EMVG) . . . . .	45
Japanese Voluntary Control Council for Interference (VCCI) Statement . . . . .	45
Korean Class B Communication Statement . . . . .	45
Electronic Emission Notices for Category 3 and 4 Data Grade Cables . . . . .	46
Federal Communications Commission (FCC) Statement . . . . .	46
Industry Canada Class A Emission Compliance Statement . . . . .	46
Avis de conformité aux normes d'Industrie Canada . . . . .	46
European Norm (EN) Statement . . . . .	46
Japanese Voluntary Control Council for Interference (VCCI) Statement . . . . .	47
<b>Korean Class A Communications Statement</b> . . . . .	47
Taiwanese Class A Warning Statement. . . . .	48
Trademarks. . . . .	48
<b>Index</b> . . . . .	51



---

## About This Manual

This manual contains the information you need to install and use your adapter.

Also on this CD-ROM are the installation aids and device drivers for the adapter.

---

## Who Should Read This Manual

This manual is intended for use by network administrators and other end-users of the Netfinity 10/100 Ethernet Adapter.

---

## How This Manual Is Organized

“Chapter 1. Installing the Adapter Hardware” on page 1 describes the procedure for installing the adapter into your computer.

“Chapter 2. Configuring Your Adapter” on page 7 describes the procedure for software installation for a number of network operating environments.

“Appendix A. IBMSet: An Overview” on page 15 describes the IBMSet configuration utility.

“Appendix B. Duplex Mode (Optional)” on page 17 describes the duplexing performance option.

“Appendix C. Virtual LANs” on page 19 describes using a Virtual LAN.

“Appendix D. Teaming Options” on page 21 describes choosing and setting up teaming options.

“Appendix E. Hot Plug Support” on page 29 describes the function of hot plugging Ethernet adapters.

“Appendix F. Troubleshooting and Testing the Adapter” on page 31 describes troubleshooting procedures and how to contact IBM product support.

“Appendix G. Priority Packet: An Overview” on page 35 describes this traffic-prioritization utility.

“Appendix H. PCI Installation Tips” on page 37 lists common situations in which manual installation of PCI is warranted.

“Appendix I. Adapter Specifications” on page 41 lists the specifications of the adapter.

“Appendix J. Notices” on page 43 lists the legal notices that are required for the Netfinity 10/100 Ethernet Adapter.

---

## Related Information

For additional information such as software updates, troubleshooting tips, and installation notes, refer to the Web at:

[www.networking.ibm.com](http://www.networking.ibm.com)

Refer the readme files on the CD-ROM for more information. Use one of the following methods:

- Automatic online help from the CD-ROM autorun program
- Go to the \info directory and open the files with any text editor
- From a DOS prompt, enter **setup /readme**

## Year 2000

This product is Year 2000 ready. When used in accordance with its associated documentation, it is capable of correctly processing, providing and/or receiving date data within and between the 20th and 21st centuries, provided all other products (for example, software, hardware and firmware) used with the product properly exchange accurate date data with it.

---

## Safety Information



**Danger:** Before you begin to install this product, read the safety information in *Caution: Safety Information—Read This First*, SD21-0030. This booklet describes safe procedures for cabling and plugging in electrical equipment.



**Gevaar:** Voordat u begint met de installatie van dit produkt, moet u eerst de veiligheidsinstructies lezen in de brochure *PAS OP! Veiligheidsinstructies—Lees dit eerst*, SD21-0030. Hierin wordt beschreven hoe u elektrische apparatuur op een veilige manier moet bekabelen en aansluiten.



**Perigo:** Antes de começar a instalar este produto, leia as informações de segurança contidas em *Cuidado: Informações Sobre Segurança—Leia Isto Primeiro*, SD21-0030. Esse folheto descreve procedimentos de segurança para a instalação de cabos e conexões em equipamentos elétricos.



危險：安裝本產品之前，請先閱讀  
"Caution: Safety Information—Read  
This First" SD21-0030 手冊中所提  
供的安全注意事項。這本手冊將會說明  
使用電器設備的纜線及電源的安全程序。



Opasnost: Prije nego što počnete sa instalacijom produkta, pročítajte naputak o pravilima o sigurnom rukovanju u Upozorenje: Pravila o sigurnom rukovanju - Prvo pročítaj ovo, SD21-0030. Ovaj privitak opisuje sigurnosne postupke za priključivanje kabela i priključivanje na električno napajanje.



**Upozornění:** než zahájíte instalaci tohoto produktu, přečtěte si nejprve bezpečnostní informace v pokynech „Bezpečnostní informace“ č. 21-0030. Tato brožurka popisuje bezpečnostní opatření pro kabeláž a zapojení elektrického zařízení.



**Fare!** Før du installerer dette produkt, skal du læse sikkerhedsforskrifterne i *NB: Sikkerhedsforskrifter—Læs dette først* SD21-0030. Vejledningen beskriver den fremgangsmåde, du skal bruge ved tilslutning af kabler og udstyr.



**Gevaar** Voordat u begint met het installeren van dit produkt, dient u eerst de veiligheidsrichtlijnen te lezen die zijn vermeld in de publikatie *Caution: Safety Information - Read This First*, SD21-0030. In dit boekje vindt u veilige procedures voor het aansluiten van elektrische apparatuur.



**VAARA:** Ennen kuin aloitat tämän tuotteen asennuksen, lue julkaisussa *Varoitus: Turvaohjeet—Lue tämä ensin*, SD21-0030, olevat turvaohjeet. Tässä kirjasessa on ohjeet siitä, miten sähkölaitteet kaapeloidaan ja kytketään turvallisesti.



**Danger :** Avant d'installer le présent produit, consultez le livret *Attention : Informations pour la sécurité — Lisez-moi d'abord*, SD21-0030, qui décrit les procédures à respecter pour effectuer les opérations de câblage et brancher les équipements électriques en toute sécurité.



**Vorsicht:** Bevor mit der Installation des Produktes begonnen wird, die Sicherheitshinweise in *Achtung: Sicherheitsinformationen—Bitte zuerst*, IBM Form SD21-0030, lesen. Diese Veröffentlichung beschreibt die Sicherheitsvorkehrungen für das Verkabeln und Anschließen elektrischer Geräte.



**Κίνδυνος:** Πριν ξεκινήσετε την εγκατάσταση αυτού του προϊόντος, διαβάστε τις πληροφορίες ασφάλειας στο φυλλάδιο *Caution: Safety Information—Read this first*, SD21-0030. Στο φυλλάδιο αυτό περιγράφονται οι ασφαλείς διαδικασίες για την καλωδίωση των ηλεκτρικών συσκευών και τη σύνδεσή τους στην πρίζα.



**Vigyázat:** Mielőtt megkezdi a berendezés üzembe helyezését, olvassa el a *Caution: Safety Information—Read This First*, SD21-0030 könyvecskében leírt biztonsági információkat. Ez a könyv leírja, milyen biztonsági intézkedéseket kell megtenni az elektromos berendezés huzalozásakor illetve csatlakoztatásakor.



**Pericolo:** prima di iniziare l'installazione di questo prodotto, leggere le informazioni relative alla sicurezza riportate nell'opuscolo *Attenzione: Informazioni di sicurezza — Prime informazioni da leggere* in cui sono descritte le procedure per il cablaggio ed il collegamento di apparecchiature elettriche.



危険： 導入作業を開始する前に、安全に関する小冊子SD21-0030 の「最初にお読みください」(Read This First)の項をお読みください。この小冊子は、電気機器の安全な配線と接続の手順について説明しています。



위험: 이 제품을 설치하기 전에 반드시  
"주의: 안전 정보-시작하기 전에"  
(SD21-0030) 에 있는 안전 정보를  
읽으십시오.



#### ОПАСНОСТ

Пред да почнете да го инсталирате овој продукт, прочитајте ја информацијата за безбедност:  
"Предупредување: Информација за безбедност: Прочитајте го прво ова", SD21-0030.  
Оваа брошура опишува безбедносни процедури за каблирање и вклучување на електрична опрема.



**Fare:** Før du begynner å installere dette produktet, må du lese sikkerhetsinformasjonen i *Advarsel: Sikkerhetsinformasjon — Les dette først*, SD21-0030 som beskriver sikkerhetsrutinene for kabling og tilkobling av elektrisk utstyr.



Uwaga:  
Przed rozpoczęciem instalacji produktu należy zapoznać się z instrukcją:  
"Caution: Safety Information - Read This First", SD21-0030.  
Zawiera ona warunki bezpieczeństwa przy podłączeniu do sieci elektrycznej i eksploatacji.



**Perigo:** Antes de iniciar a instalação deste produto, leia as informações de segurança *Cuidado: Informações de Segurança — Leia Primeiro*, SD21-0030. Este documento descreve como efectuar, de um modo seguro, as ligações eléctricas dos equipamentos.



**ОСТОРОЖНО:** Прежде чем установить этот продукт, прочтите Инструкцию по технике безопасности в документе "Внимание: Инструкция по технике безопасности -- Прочтите в первую очередь", SD21-0030. В этой брошюре описаны безопасные способы кабирования и подключения электрического оборудования.



**Nebezpečnosť:** Pred inštaláciou výrobku si prečítajte bezpečnostné predpisy v Výstraha: Bezpečnostné predpisy - Prečítaj ako prvé, SD21-0030. V tejto brožúrke sú opísané bezpečnostné postupy pre pripojenie elektrických zariadení.



**Pozor:** Preden začnete z inštalácijskega produkta preberite poglavje: "Opozorilo: Informacije o varnem rokovanju-preberi pred uporabo," SD21-0030. To poglavje opisuje pravilne postopke za kabliranje.



**Peligro:** Antes de empezar a instalar este producto, lea la información de seguridad en *Atención: Información de Seguridad — Lea Esto Primero*, SD21-0030. Este documento describe los procedimientos de seguridad para cablear y enchufar equipos eléctricos.



**Varning — livsfara:** Innan du börjar installera den här produkten bör du läsa säkerhetsinformationen i dokumentet *Varning: Säkerhetsföreskrifter— Läs detta först*, SD21-0030. Där beskrivs hur du på ett säkert sätt ansluter elektrisk utrustning.



危險：

開始安裝此產品之前，請先閱讀安全資訊。

注意：

請先閱讀 - 安全資訊 SD21-0030

此冊子說明插接電器設備之電纜線的安全程序。

## **Telecommunications Safety Requirements in the United Kingdom**

This IBM product is made to high safety standards. It complies inherently with telecommunications safety standard BS 6301. It is not designed to provide protection from excessive voltages appearing externally at its interfaces. Therefore, when this product is connected to a public telecommunications network via any other equipment, and you connect to this product items not supplied by IBM United Kingdom Ltd., you must comply with mandatory telecommunications safety requirements.

### **Statement of Compliance with the United Kingdom Telecommunications Act 1984**

This apparatus is approved under approval number NS/G/1234/J/100003 for indirect connections to the public telecommunications systems in the United Kingdom.



---

## Chapter 1. Installing the Adapter Hardware

This chapter contains information to assist you in installing the IBM Netfinity® 10/100 Ethernet Adapter. Topics include:

- "Installing the Adapter"
- "Using the Correct Adapter Cable" on page 2

---

### Installing the Adapter

1. In the manual provided with your computer, locate the instructions for installing an adapter. Be sure to follow any safety instructions in that manual.
2. Switch OFF the computer and all connected devices.

**Note:** In the U.K., by law, the telephone line cable (if connected) must be disconnected before the power cord.

3. Remove the power cord from the outlet.
4. Remove all cables from your computer to the connected devices.

**Note:** Make sure that you label the cables for correct reconnection later.

5. Follow the instructions provided in your computer manual for removing the cover or otherwise accessing the adapter slots.
6. Remove the screw and cover for the appropriate PCI Busmaster-capable expansion slot. (Refer to your computer manual.) Keep the cover to use again if you remove the adapter.

If you plan to use the adapter for Wake on LAN®, go to "Connecting the Wake On LAN Cable" on page 3.

If you do not plan to use Wake on LAN, continue here with the following step.

7. Place the adapter in the slot.

**Note:** Most PCI slots in computers are Busmaster-enabled, but some are not. If you have configuration problems, refer to your computer manual.

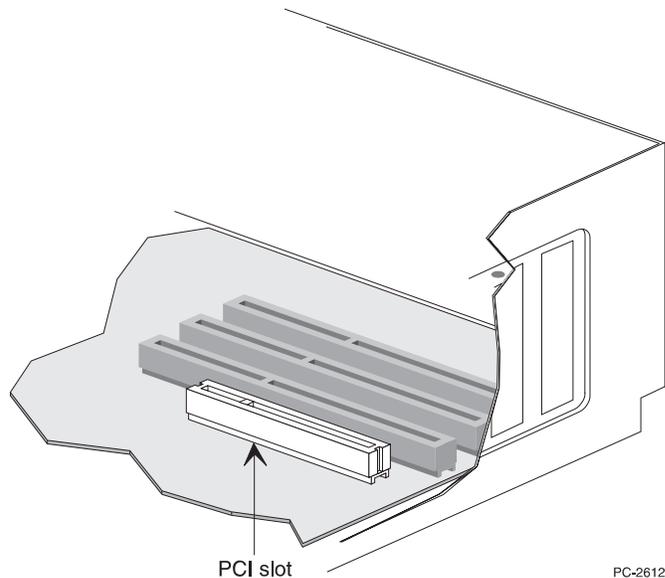


Figure 1. PCI Slot Illustration

8. Push the adapter into the slot until the adapter is seated firmly. Secure the adapter bracket with a screw.
9. If you are installing more than one adapter, repeat steps 6, 7, and 8 for each adapter you want to install.  
Otherwise, continue with step 10.

**Note:** In the U.K., by law, the power cord must be connected before the telephone line cable.

10. Replace the cover on the computer, connect the cables to the connected devices, connect the signal cables to the receptacles, and then connect the power cord to the outlet.
11. Connect a twisted-pair Ethernet Category 5 cable to the adapter and to your Ethernet outlet. See "Using the Correct Adapter Cable" for more information.
12. Switch ON the connected devices and the computer.

If you want to run the adapter diagnostics at this point, see "Testing the Adapter Using the Diagnostics" on page 33 for details.

---

## Using the Correct Adapter Cable

To operate your network reliably at 100 Mbps, you must use Category 5 data grade cables with this adapter. Although Category 3 or 4 might appear to work, you might experience intermittent loss of data. For more information, refer to the Hardware Specifications and Cabling topic on the IBM Installation and Drivers CD-ROM or diskette. For 10 Mbps, you can use Category 3, 4, or 5 cabling.

**Residential Use:** If you are using this adapter in a residential environment, you **must** use Category 5 data-grade cables for either 10 Mbps or 100 Mbps (see emission notices in "Appendix J. Notices" on page 43).

**Note:** The adapter Ethernet address is printed on a sticker on the edge of the adapter as shown in Figure 2.

The Ethernet address is sometimes called the *Node address* or the *MAC address*. This unique, 12-digit hexadecimal address was stored in the adapter memory at the factory.

You can use this address to match the adapter to the slot number when configuring multiple adapters.

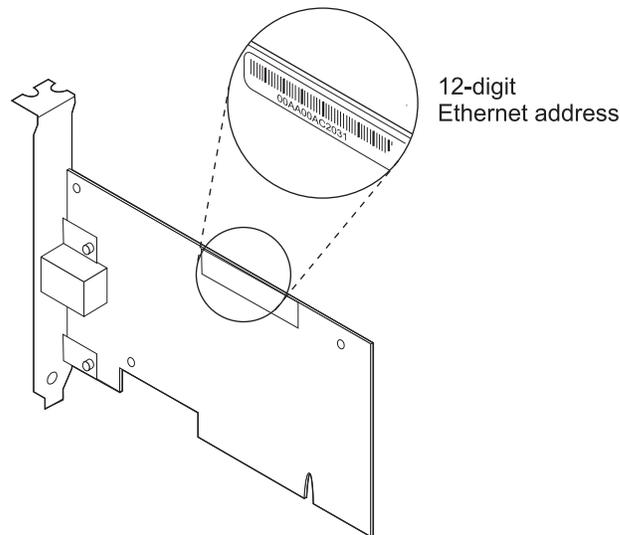


Figure 2. Ethernet Address Location

---

## Connecting the Wake On LAN Cable


For the Wake On LAN feature to work correctly, the adapter must be connected to a continuous power source. This allows the Netfinity 10/100 Ethernet Adapter to monitor the network even when the computer is switched off.

**Attention:** Switch off and unplug power to the computer before installing the WOL cable. Failure to do so could damage the adapter or computer. The WOL connector on your motherboard is live when the computer is plugged in to a power outlet. Likewise, always unplug the computer prior to removing an adapter from the computer.

Your adapter is shipped with the 08L2559 2-way Wake on LAN cable.

## Connecting the 2-Way Wake on LAN Cable

1. Make sure that your computer is unplugged from the power outlet.
2. Locate the Wake On LAN 3-pin connector on the adapter. Attach one end of the cable to the adapter as shown in Figure 3 on page 4. Note that the connector is notched so as to prevent incorrect attachment. Also note that you can use either end of the cable, because the two ends are identical.

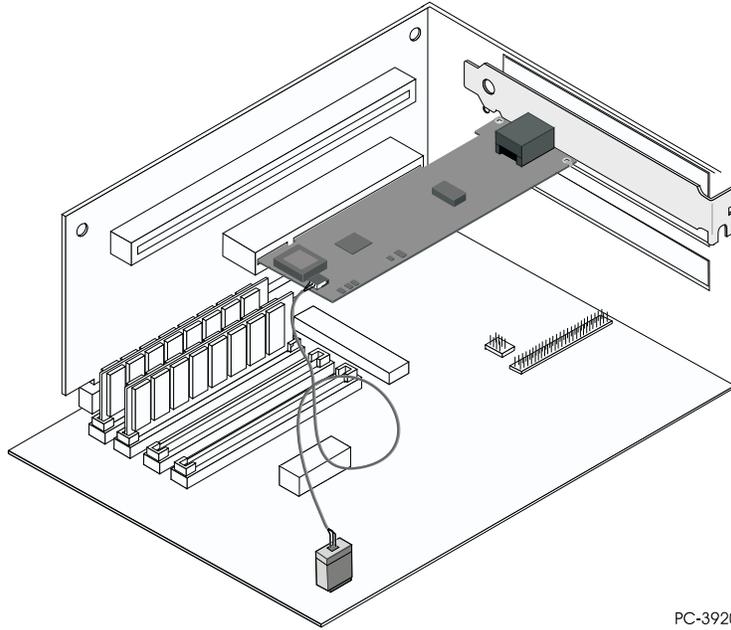

PC-3920

Figure 3. Connecting the 2-Way Wake On LAN Cable

3. Place the adapter in the slot.

**Note:** Most PCI slots in computers are Busmaster-enabled, but some are not. If you have configuration problems, refer to your computer manual.

4. Push the adapter into the slot until the adapter is seated firmly. Secure the adapter bracket with a screw.
5. Locate the Wake On LAN connector on your system board. The location varies, depending on the vendor and model. The connector is usually located near other power connectors, such as the LED connectors.
6. Connect the other end of the cable to the connector on the system board as shown in Figure 3.
7. Some computers might require you to change a setting in the BIOS or setup program to enable the Wake On LAN feature. Check your computer manual or contact your dealer for more information.
8. If you are installing more than one adapter, repeat steps 6, 7, and 8 on page 2 for each adapter that you want to install. Otherwise, continue with step 9.

**Note:** In the U.K., by law, the power cord must be connected before the telephone line cable.

9. Replace the cover on the computer, connect the cables to the connected devices, connect the signal cables to the receptacles, and then connect the power cord to the outlet.
10. Connect a twisted-pair Ethernet Category 5 cable to the adapter and to your Ethernet outlet. See "Using the Correct Adapter Cable" on page 2 for more information.
11. Switch ON the connected devices and the computer.

---

## Using Wake On LAN

The Wake on LAN feature can be disabled or enabled using your system configuration utility. Refer to your computer documentation for details.

Power for the Netfinity 10/100 Ethernet Adapter is always ON when the computer is connected to ac power, regardless of the computer ON/OFF switch. When the computer power is OFF, this adapter constantly monitors the LAN for the wake-up frame that requests power to be applied to the computer.

The wake-up frame can be a broadcast or an individually-addressed frame. The following data is required and can occur anywhere in the data portion of the wake-up frame.

- 6 bytes of X'FF', followed by
- 48-bit universally administered address (UAA or MAC address) of the adapter to be woken up, repeated eight or more times. Eight repetitions are required; more than eight are acceptable.

If you are not familiar with Wake on LAN operation, you can refer to the following documents on the Web:

- *Wake on LAN* at [www.pc.ibm.com/infobrf/iblan.html](http://www.pc.ibm.com/infobrf/iblan.html)
- *Wake up to Wake on LAN* at [www.networking.ibm.com/eji/ejiwake.html](http://www.networking.ibm.com/eji/ejiwake.html)

For more details about Wake on LAN cables and IBM Wake on LAN computer systems, read WOLCABLE.TXT and WOL-INFO.TXT help files in the \INFO\GENERAL directory on the IBM Installation and Drivers CD-ROM or diskette.

See "Appendix F. Troubleshooting and Testing the Adapter" on page 31 for general troubleshooting and a listing of common problems and solutions for Wake On LAN operability.



---

## Chapter 2. Configuring Your Adapter

This chapter describes how to make a setup diskette, if needed, and how to configure the adapter and install the drivers in many different LAN environments.

---

### Making a Setup Diskette

If you need to use a diskette to install the Netfinity 10/100 Ethernet Adapter drivers, use MAKEMS.BAT (for Microsoft® operating systems) or MAKENW.BAT (for NetWare operating systems), located in the \MAKEDISK directory on this CD-ROM. The format for the command is: **d:\makedisk\makems.bat d: a:**

In the example above, d: is your CD-ROM drive and a: is your diskette drive.

---

### Configuring the Adapter and Installing the Drivers

#### Novell NetWare 5.0

**Note:** For Novell NetWare 4.1x, see “Novell NetWare 4.1x” on page 8. For versions 3.11 and 3.12, refer to the readme files on this CD-ROM. For DOS ODI, see “DOS and Windows 3.1 Setup for Novell NetWare DOS ODI Clients” on page 12.

1. From the NetWare console, type **load nwconfig** and press **Enter**.
2. From the Configuration Options screen, select **Driver options** and press **Enter**.
3. Select **Configure network drivers** and press **Enter**. If any drivers are already loaded, a list of them appears.
4. Choose **Select an additional driver** and press **Enter**. A list of drivers appears.
5. Insert the IBM Installation and Drivers CD-ROM or diskette and press **Insert** to install an unlisted driver.
6. Specify the correct path to your media if necessary by pressing **F3**. Press **Enter** to search the diskette or CD-ROM. To install from the CD, type CD volume name :\NetWare server name. For example, **IBM100S31:\NWSERVER**.
7. Highlight the Netfinity 10/100 Ethernet Adapter and press **Enter** to select it.
8. The next panels ask for frame and protocol types. Use the arrow keys to select specific items or choose the defaults. Select **Save parameters and load driver** to continue.
9. To install an additional adapter, press **Esc** to go back to select an adapter to install. Then, repeat steps 7 through 9 for each additional adapter that you want to install.
10. To complete the driver installation process, go back to the Installation Options panel by pressing the **Esc** key until you see it.
11. Select **Exit** to return to the console prompt.

**Note:** If the adapter cannot transmit or receive following the installation, you might need to modify the frame type in the AUTOEXEC.NCF file.

## Novell NetWare 4.1x

For Novell NetWare 3.11 and 3.12, refer to the readme files. For DOS ODI, see “DOS and Windows 3.1 Setup for Novell NetWare DOS ODI Clients” on page 12.

**Note:** Prior to installing, either load DOS or NetWare drivers for your computer's CD-ROM drive or create a diskette from the CD-ROM on a different computer.

1. From the NetWare console, type **load install** and press **Enter**.
2. From the Installation Options panel, select **Driver options** and press **Enter**.
3. Select **Configure network drivers** and press **Enter**. If any drivers are already loaded, a list of them appears.
4. Choose **Select an additional driver** and press **Enter**. A list of drivers appears.
5. Insert the IBM Installation and Drivers CD-ROM or diskette and press **Insert** to install an unlisted driver.
6. If necessary, specify the correct path to your media by pressing **F3**. Press **Enter** to search the diskette or CD-ROM.
7. The driver name is displayed: Netfinity 10/100 Ethernet Adapter. Press **Enter** to select it.
8. The next panels enable you to specify frame and protocol types. Use the arrow keys to select specific items or choose the defaults. Select **Save parameters and load driver** to continue.
9. To install an additional adapter, press **Esc** to go back to **Select an adapter to install**. Then, repeat steps 7 through 9 for each additional adapter that you want to install.
10. To complete the driver installation process, go back to the Installation Options panel by pressing **Esc** until you see it.
11. Select **Exit** to return to the console prompt.

**Note:** If the adapter cannot transmit or receive following the installation, you may need to modify the frame type in the AUTOEXEC.NCF file.

## Windows 95

### Windows 95 Automatic Configuration

PCI computers automatically detect and configure PCI-compliant adapters while booting. The BIOS automatically sets the adapter IRQ level and I/O address each time you start your computer.

Start your computer to automatically configure the adapter. Resource configuration is complete when Windows® 95 starts.

If your computer displays an error while booting, it might require additional configuration steps. See “Appendix H. PCI Installation Tips” on page 37 for more information.

### Installing Network Drivers from Diskette

Have your Windows 95 installation CD-ROM or diskettes available, because you will be prompted for them when you install the new adapter.

1. After you put the adapter in the computer and connect the cable, start Windows 95. You will see the New Hardware Found dialog box.

**Note:** If this box does not appear and Windows 95 starts normally, you might need to manually add the adapter. Refer to the MS.TXT readme file in the \MS directory for more information.

2. Click **Driver from disk provided by hardware manufacturer**, then click **OK**. You will see the Install From Disk dialog box.
3. Insert the IBM Installation and Drivers CD-ROM or diskette.
4. Specify D:\ (or the appropriate drive letter for the CD-ROM drive) or A:\ (for diskette) as the path and then click **OK**.
5. Follow the prompts for any Windows 95 installation diskettes and restart the computer when prompted.

**Note:** If you installed from the CD-ROM, the installation files are typically located at D:\Win95, where D is your CD-ROM drive.

After restarting Windows 95, connect to your network by double-clicking **Network Neighborhood** on the desktop.

## Windows Troubleshooting

If you cannot connect to a server or if Windows 95 or Windows 98 reports an error after you double-click **Network Neighborhood**, try the suggestions here first and then see “Appendix F. Troubleshooting and Testing the Adapter” on page 31 if necessary.

- Make sure that you are using the drivers that are on the CD-ROM that ships with this adapter.
- Make sure that the driver is loaded and that the protocols are bound. Check the Device Properties list for trouble indicators (an X or ! symbol).
- Test the adapter with the IBMSet advanced configuration utility that was installed on your system when you installed the Netfinity 10/100 Ethernet Adapter. To start IBMSet, double-click **IBMSet** in the Windows control panel. To run diagnostics, select the adapter and click **Diagnostics**, then click **Run Tests**. For additional information, click **Help** in the IBMSet window.
- Check with your LAN administrator. You might need to install additional networking software.

## Windows 98

### Windows 98 Automatic Configuration

PCI computers automatically detect and configure PCI-compliant adapters while booting. The BIOS automatically sets the adapter IRQ level and I/O address each time you start your computer.

Start your computer to automatically configure the adapter. Resource configuration is complete when Windows 98 starts.

If your computer displays an error while booting, it might require additional steps to configure. See “Appendix H. PCI Installation Tips” on page 37 for more information.

## Install Network Drivers from Diskette

1. After you put the adapter in the computer and connect the cable, start Windows 98. You will see the New Hardware Found dialog box.

**Note:** If this box does not appear and Windows 98 starts normally, you might need to manually add the adapter. See “Manually Installing the Network Drivers”.

2. When prompted, insert the IBM Installation and Drivers CD-ROM or diskette.
3. Specify D:\ (or the appropriate drive letter for the CD-ROM drive) or A:\ (for diskette drive) as the path, then click **OK**.
4. Restart the system when prompted.

## Manually Installing the Network Drivers

1. After you put the adapter in the computer and connect the cable, start Windows 98.
2. Double-click **System** in the Control Panel.
3. Click **Device Manager**.
4. Double-click **Network Adapters** in the list area.
5. Double-click the Netfinity 10/100 Ethernet Adapter. The Update Device Driver Wizard appears.
6. Select **Search for a better driver than the one your device is using now**. Make sure that the IBM Installation and Drivers CD-ROM or diskette is in the drive, and click **Next**.
7. Select the drive that contains the IBM Configuration and Drivers disk and click **Next**.
8. Select **Choose the updated driver (Recommended)** and continue to click **Next** at each dialog box until the driver files are copied.
9. When Windows has finished copying drivers, click **Close** and restart your computer.

**Note:** For troubleshooting information, see “Windows Troubleshooting” on page 9.

## Windows NT Automatic Configuration

PCI computers automatically detect and configure PCI-compliant adapters while booting. The adapter IRQ level and I/O address are automatically set by the BIOS each time you start your computer.

Start your computer to automatically configure the adapter. Configuration is complete when Windows NT<sup>®</sup> starts or when the DOS prompt appears.

If your computer displays an error while booting, it might require additional steps to configure. See “Appendix H. PCI Installation Tips” on page 37 for more information.

## Adding an Adapter when Installing Windows NT

The IBM driver that ships with Windows NT 4.0 is an older driver which does not support Netfinity 10/100 Ethernet Adapter. Therefore, if you want to install the Netfinity 10/100 Ethernet Adapter software while installing Windows NT, you need to either install the adapter after the Windows NT installation is complete or install the adapter software from a installation diskette created from the IBM Installation and Drivers CD (using the MAKEMS.BAT file on the root of the CD).

While running the MAKEMS.BAT batch file, you might see an error message indicating that a >CAT file could not be copied. Ignore this message.

## Windows NT Version 4.0

After you have put the adapter in the computer, connected the cables, and started Windows NT, install the correct drivers by performing the following steps.

1. Double-click **Network** in the Control Panel.
2. Click **Adapters**.
3. Click **Add**. You will see a list of adapters.
4. Do not select an adapter from this list. Instead, insert the IBM Installation and Drivers CD-ROM or diskette into the appropriate drive and click **Have Disk**.
5. Specify the appropriate drive in the dialog box and click **OK**. Then follow the prompts to complete installation. When the adapter is added you will see a new adapter listed in the Network adapter list.
6. Click **Close** to finish.
7. Restart Windows NT when prompted.

## Windows NT Version 3.51

After you have put the adapter in the computer, connected the cables, and started Windows NT, install the correct drivers.

1. Double-click **Network** in the Control Panel.
2. Click **Add Adapter**.
3. When the list of adapters appears, scroll to the end of the list and select **<Other> Requires disk from manufacturer** and then click **Continue**.
4. Insert the IBM Installation and Drivers CD-ROM or diskette in the appropriate drive, specify that drive, and click **OK**.
5. Select **Netfinity 10/100 Ethernet Adapter** and click **OK**. Drivers and utilities are then installed.
6. The TCP/IP Configuration dialog box appears. Enter the appropriate information and click **OK**. Remove the installation disk.
7. When prompted, restart Windows NT.

**Note:** For troubleshooting information, see “Windows NT Troubleshooting”.

## Windows NT Troubleshooting

If Windows NT reports an error or you cannot connect to the network, try the suggestions here first, then see “Appendix F. Troubleshooting and Testing the Adapter” on page 31 if necessary.

- Make sure that you use the drivers for this adapter. Drivers are located on the IBM Installation and Drivers CD-ROM or diskette.
- Make sure that the driver is loaded and that the protocols are bound. Check the settings in the Control Panel Network/Bindings dialog box.
- Check the Windows NT Event Viewer for error messages.
- If you are attaching to a NetWare network, check your frame type and verify that NetWare client or server software has been installed.
- Test the adapter with the IBMSet advanced configuration utility that was installed on your system when you installed the Netfinity 10/100 Ethernet Adapter. To start

IBMSet, double-click **IBMSet** in the Windows control panel. To run diagnostics, select the adapter and click the **Diagnostics** tab, then click **Run Tests**. For additional information, click **Help** in the IBMSet window.

- Check with your LAN administrator - you might need to install supplemental networking software.

## DOS and Windows 3.1 Setup for Novell NetWare DOS ODI Clients

**Note:** If you are using Windows 95 and Windows 98, see the previous sections on Windows 95 and Windows 98. If you are using NetWare Client 32, refer to the NetWare readme files in the \NETWARE directory.

### DOS and Windows 3.1 Automatic Configuration

PCI computers automatically detect and configure PCI-compliant adapters while booting. The BIOS sets the adapter IRQ level and I/O memory address automatically each time you start your computer.

Start your computer in order to automatically configure the adapter. Resource configuration is complete when the DOS prompt appears. You can now continue with the following procedure.

If your computer displays an error while booting, it might require additional steps to configure a PCI adapter. See “Appendix H. PCI Installation Tips” on page 37 for more information.

### Run Setup to Install Network Drivers

Setup can automatically install NetWare DOS ODI client drivers or display a readme file with installation instructions for other network operating system drivers.

1. If your computer already has network drivers installed, restart the computer without loading them. If the drivers are loaded from the AUTOEXEC.BAT or CONFIG.SYS file, type REM in front of each line that loads a network driver. Or, with DOS 6.x or later, press **F5** as DOS starts, to bypass the drivers.
2. Insert the IBM Installation and Drivers CD-ROM or diskette in a drive, switch to that drive, and at the DOS prompt, type **setup** and press **Enter**.
3. Select the adapter from the menu.
4. Select **Automatic Setup** from the Main menu. Then follow the instructions on the panel. If you want to test the adapter with a responder on the network, see “Responder Testing on the Network (Optional)” on page 13.

Setup displays the adapter configuration and then runs a series of diagnostic tests that make sure that the adapter and network are functioning correctly. If Setup finds a problem, it displays the results and some possible solutions.

5. When Setup finishes the tests, you will see the Install Network Drivers panel.
6. Select the driver that you want to install. Setup can install a NetWare client driver for you. If you want to install other drivers, Setup displays a readme file with installation instructions.

To set duplexing options, see “Appendix B. Duplex Mode (Optional)” on page 17.

### Troubleshooting

If you cannot connect to a server, first try the suggestions here and then see “Appendix F. Troubleshooting and Testing the Adapter” on page 31.

- Make sure that you are using the drivers for this adapter (for example, IBMFEODI.COM).
- If you are replacing an existing adapter, make sure that the LINK statement in your NET.CFG is correct for the new adapter. For example, the LINK statement for a NetWare client is LINK DRIVER IBMFEODI.
- Verify that the frame type in your NET.CFG file matches your network.
- Test the adapter by running diagnostics in Setup. Additional testing is available by using a responder. See “Responder Testing on the Network (Optional)”.
- Check the readme files.

## Responder Testing on the Network (Optional)

Setup can test the adapter more thoroughly if there is a responder on the network while you run the tests.

1. Go to a computer on the network with a comparable PCI adapter installed.
2. Run the appropriate configuration program for the installed adapter and set it up as a responder.
3. Return to the computer that has the new adapter. Run Setup and test the adapter by running diagnostics.

---

## NetWare 3.11, 3.12, Client 32, UNIX, Banyan VINES, and Other Operating Systems

Refer to the online documents. On a DOS computer, view the appropriate readme file for information on installing your network driver.

To view the readme files, insert the IBM Installation and Drivers CD-ROM or diskette into a drive, switch to that drive, and enter **setup /readme**



---

## Appendix A. IBMSet: An Overview

When you install the Netfinity 10/100 Ethernet Adapter Windows drivers, an advanced configuration utility called IBMSet is also installed. If you are running Windows NT, Windows 95, or Windows 98, you can easily test hardware and set standard and advanced adapter features with IBMSet.

IBMSet runs when you click on the **Adapter Icon** at the lower right hand corner of the Windows task bar or when you highlight an adapter and click **Properties** in the Network control panel.

From the IBMSet panel as shown in Figure 4, you can view the following information:

- View adapter parameters such as MAC Address and IP Address
- View Network Link status such as speed, duplex mode, and activity
- Check the device driver level used for the adapter
- Obtain IBM Web support information



Figure 4. IBMSet Panel

---

### Note about Adapter DOS Diagnostics

Besides the Adapter Hardware Test feature available with IBMSet, you can also run adapter diagnostics from DOS with SETUP.EXE. With the CD-ROM or driver diskette in the drive, from a DOS prompt enter **setup**.



---

## Appendix B. Duplex Mode (Optional)

Duplexing is a performance option that lets you choose how the adapter sends and receives data packets over the network. The adapter can operate at full duplex only when connected to a full-duplex 10BASE-T or 100BASE-TX switch, or to another full-duplex adapter.

The possible settings for duplexing are:

- Auto (requires a full-duplex adapter or switch with auto-negotiation capability). The adapter negotiates with the switch to send and receive packets at the highest rate. This is the default setting. If the switch does not provide auto-negotiation, the adapter runs at half duplex.
- Full duplex (requires a full-duplex switch or adapter). The adapter can send and receive packets at the same time. This mode can increase adapter performance capability. If the full-duplex switch provides autonegotiation, the adapter runs at full duplex. If the full-duplex switch does not provide auto-negotiation, you need to set the adapter duplex mode manually (see the following sections), because it defaults to half duplex.
- Half duplex. The adapter performs one operation at a time; it either sends or receives.

**Note:** If an adapter is running at 100 Mbps and half duplex, your potential bandwidth is higher than if you run it at 10 Mbps and full duplex.

---

### Manually Configuring for Full Duplex

If your switch supports auto-negotiation with the N-way standard, duplex configuration is automatic and no action is required on your part. However, many currently-installed switches do not support auto-negotiation. Check with your network system administrator to verify whether your switch supports this feature. Most installations will require manual configuration to change to full duplex.

Configuration is specific to the driver that you are loading for your network operating system.

To set up the duplex mode, see the section that corresponds to your operating system.

**Attention:** Adapter performance may suffer or your adapter may not operate if your switch does not support full duplex and you configure the adapter to full duplex. The switch settings must always agree with the adapter.

Also, make sure that you always set the speed when you configure duplex.

### Setting Full Duplex in DOS, ODI, NDIS 2.01 Clients

For each adapter, edit the NET.CFG or PROTOCOL.INI file. If you edit the NET.CFG file, add the following keywords to the Link Driver section. For the PROTOCOL.INI file, add the keywords anywhere:

```
FORCEDUPLEX 2  
SPEED 100 (or 10 if 10BASE-T)
```

## Setting Full Duplex in NetWare Servers

For each adapter in AUTOEXEC.NCF, edit the LOAD command and add the following options (you must include the equal sign for servers):

```
FORCEDUPLEX=2  
SPEED=100 (or 10 if 10BASE-T)
```

For more information, refer to the readme file for NetWare computers.

## Setting Full Duplex in Windows 95 and Windows 98

While running Windows 95 or Windows 98:

1. Double-click **IBMSet** from the Control Panel.
2. Click **Settings**.
3. In the Network Speed list box, click **10** or **100**, according to the speed of your network.
4. In the Duplex Mode list box, click **Full**.
5. Click **OK**.
6. Restart Windows.

## Setting Full Duplex in Other Operating Systems

Refer to the OTHER.TXT readme file in the \OTHER directory on the IBM Installation and Drivers CD-ROM or diskette. Open the file with any text editor.

---

## Appendix C. Virtual LANs

The appendix describes how to set up a virtual LAN (VLAN).

---

### Creating a Virtual LAN

A virtual LAN (VLAN) is a logical grouping of network devices put together as a LAN regardless of their physical grouping or collision domains. VLANs lets a user see and access only specified network segments. This increases network performance and improves network security.

VLANs offer the ability to group users and devices together into logical workgroups. This can simplify network administration when connecting clients to servers that are geographically dispersed across the building, campus, or enterprise network.

Typically, VLANs consist of co-workers within the same department but in different locations, groups of users running the same protocol, or a cross-functional team working on a joint project.

Normally, VLANs are configured at the switch and any computer can be a member of one VLAN per installed network adapter. The Netfinity 10/100 Ethernet Adapter supersedes this by communicating directly with the switch, allowing multiple VLANs on a single network adapter (up to 64 VLANs).

To set up VLAN membership, your adapter must be attached to a switch that has VLAN capability. You also need to use Windows NT 4.0 or later, or Novell NetWare 4.1x or later.

For more information about VLANs, refer to the switch documentation or the VLAN readme files on the IBM Installation and Drivers CD.

### General Configuration Notes

- Windows NT versions prior to 4.0 do not support VLANs.
- VLANs require NT 4.0 with Service Pack 3.0 and the NDIS driver hotfix from Microsoft.
- In Windows NT, VLANs cannot be implemented on adapters that have been configured for teaming options. NetWare can support teaming options and VLANs on the same adapters.

### Joining a VLAN from Windows NT 4.0

1. Create a VLAN on the switch. Use the parameters you assign there to join the VLAN from the server. Refer to your switch documentation for more information.
2. Double-click the Network icon in Control Panel window.
3. On the Adapters tab, select the adapter you want to be on the VLAN and select **Properties**.
4. In IBMSet, select **Join VLAN**. Note that VLANs cannot be assigned to adapters that are already defined to have an adapter teaming option.
5. Enter the VLAN ID and VLAN name. The VLAN ID must match the VLAN ID of the switch. The ID range is from 1 to 1000. The VLAN name is for information only and does not need to match the name on the switch.

6. Select Join VLAN. Repeat steps 3 through 5 for each VLAN you want the server to join. The VLANs you add are listed on the Adapters tab.
7. Select **Close** and restart the computer.

## Joining a VLAN from NetWare 4.1x or 5.0

1. Create a VLAN on the switch. Refer to your switch documentation for more information.
2. Add a load statement to your AUTOEXEC.NCF file. You can copy and customize sample load statements from the EXAMPLES.TXT file on the IBM Configuration and Drivers diskette. When you have finished, restart your server.

For example :

```
;- Load LAN driver on the adapter
load cibmfe vlanmode=1 slot=a frame=ethernet_802.2

;- Create virtual adapters, assign VLAN IDs to each
load=vlan vlanid=10 bindtoslot=a name=eng
frame=ethernet_802.2

;- Bind ipx to virtual adapters. Note: Do not bind
;- protocols to the CE100SW driver
bind ipx to eng net=2
```

Where :

### **vlanmode**

Specifies if VLANs are enabled. Specify 1 to enable VLANs or 0 to disable. The default is disable (0).

**slot** Specifies the number of the PCI slot in which your adapter is installed (for example, slot a). If you do not know the slot number, load the driver without specifying a number. NetWare prompts you with available PCI slot numbers.

**frame** Specifies the type of frames being used by your computer's network segment.

**vlanid** Specifies a unique numeric identifier that matches the VLAN ID for the VLAN created on the switch. Valid ID range is from 1 to 1000.

**name** Specifies a name for the VLAN. This is for informational purposes only and does not have to match the VLAN name on the switch.

---

## Appendix D. Teaming Options

The Netfinity 10/100 Ethernet Adapter provides the following options, called *teaming options*, which increase throughput and fault tolerance when running with Windows NT 4.0 or NetWare 4.1x or later:

### Adapter Fault Tolerance (AFT)

Provides automatic redundancy for your adapter. If the primary adapter fails, the secondary adapter takes over. Adapter Fault Tolerance supports from 2 to 4 adapters per team.

### Adapter Load Balancing (ALB)

Allows balancing the transmission data flow among two to four adapters. ALB also includes the AFT option. ALB can be used with any 100BASE-TX switch.

### Cisco Fast EtherChannel (FEC)

Creates a team of two or four adapters to increase transmission and reception throughput. FEC also includes the AFT option. FEC can only be used with a switch that has FEC capability.

---

## General Configuration Notes

- Windows NT versions prior to 4.0 do not support adapter teaming options.
- Adapter teaming options require Windows NT 4.0 with Service Pack 4 or Service Pack 3.0 and the NDIS driver hotfix from Microsoft.
- In Windows NT, teaming options cannot be implemented on adapters that have been configured for VLANs. NetWare can support teaming options and VLANs on the same adapters.

---

## Setting Up Adapter Fault Tolerance

**Note:** Use the procedure in this section if you are setting up AFT only. If you setting ALB or FEC, use the procedures in those sections. The AFT option runs automatically when you run ALB or FCE.

Adapter Fault Tolerance (AFT) provides the safety of an additional backup link between the server and buffered repeater or switch. If you have a buffered repeater, switch port, cable, or adapter failure, you can maintain uninterrupted network performance through an adapter team.

AFT is implemented with a *primary* adapter and one or more backup, or *secondary* adapters. During normal operation, the secondary adapters have their transmit function disabled. If the link to the primary adapter fails, the link to the secondary takes over automatically.

To use AFT, you must have at least two Netfinity 10/100 Ethernet Adapters or one Netfinity 10/100 Ethernet Adapter and one IBM Netfinity Gigabit adapter installed in your server and linked to the same network. When teaming a Netfinity Gigabit adapter with a Netfinity 10/100 adapter, ensure that the 10/100 adapter is in AFT mode.

---

## Setting Adapter Fault Tolerance in Windows NT 4.0

For software requirements, see "General Configuration Notes" on page 21.

1. Double-click the **Network** icon on the Control Panel.
2. On the Adapters tab, select a Netfinity 10/100 Ethernet Adapter that will be in the team and select **Properties**.
3. In the IBMSet window, select the **Adapter Teaming** tab.
4. Select **Add Adapter to a Team**.
5. The Teaming Wizard starts. Follow the wizard steps for assigning adapters to a team. AFT supports up to four Netfinity 10/100 or Netfinity Gigabit adapters per team, in any combination. Note that you can specify a Preferred Primary adapter, which in most cases should be your highest bandwidth adapter. Refer to the IBMSet Help for more information.
6. Select **OK**, and then select **Close** to finish. When prompted, restart your computer.

## Configuring Properties

The default AFT properties are suitable for most applications. To change them, use the following procedure:

1. Run IBMSet
2. On the adapter list, select the desired AFT team.
3. Select the **Advanced Settings** tab.
4. Adjust parameters as required. Select **Help** for more information.

## Deleting a Team

**Note:** The frame type for each adapter in the team reverts to Auto when a team is deleted.

1. Double-Click the **Network** icon on the Control Panel.
2. On the Adapters tab, select the AFT team to be deleted.
3. Select **Remove**. A confirmation box is displayed. Select **Yes** to confirm deletion.
4. Select **Close**. Restart Windows NT when prompted.

---

## Setting Adapter Fault Tolerance in NetWare

1. Copy the following lines from the EXAMPLES.TXT (on the IBM Configuration and Drivers diskette) and paste them into the appropriate files. These commands assume the IBMAFT.NLM and CIBMFE.LAN files are in the system directory (SYS:SYSTEM) of your server. (Files must be copied from the IBM Configuration and Drivers diskette to your server's hard drive.)

**Note:** The Adapter Fault Tolerance driver (IBMAFT.NLM) must be loaded before the Netfinity 10/100 Ethernet Adapter, CIBMFE.LAN, or any other LAN driver.

Copy the following lines into the STARTUP.NCF file.

```
;- Load Adapter Fault Tolerance  
load ibmaft
```

Copy the following lines into the AUTOEXEC.NCF file.

```

;- Load LAN Driver on 1st Adapter
load cibmfe slot=a frame=ethernet_802.2 name=pri_802.2

;- Load LAN Driver on 2nd Adapter
load cibmfe slot=b frame=ethernet_802.2 name=sec_802.2

;- Bind ipx to 1st Adapter. Note: Do not bind protocols to
;- 2nd adapter
bind ipx pri_802.2 net=2

;- Set the 2nd Adapter to be a Fault Tolerant Partner to
;- the 1st adapter
aft bind a b

```

Where:

- slot** Specifies the slot where your Netfinity 10/100 Ethernet Adapter is installed. If you do not know the slot number, load the driver without it. NetWare will prompt you with available PCI device numbers.
- a** Specifies the primary adapter's slot number.
- b** Specifies the secondary's slot number.
- frame** Specifies the frame type of the computer's network segment. The frame type must be the same for the primary and all secondary adapters.

Note that you can specify a Preferred Primary adapter, which in most cases will be the adapter with the greatest bandwidth. Refer to the NW411.TXT file on your CD for more information.

2. Modify the lines to match your server's requirements.
3. Save the AUTOEXEC.NCF file and restart your computer.

## Deleting a Team

To delete a team in AFT or ALB mode, comment out the preceding lines and restart the server.

---

## Setting Adaptive Load Balancing

Adaptive Load Balancing (ALB) is a simple and effective way to balance the transmission load of your server among two to four Netfinity 10/100 Ethernet Adapters. Using ALB you can group your Netfinity 10/100 Ethernet Adapters into teams. The ALB software continuously analyzes transmit loading on each adapter and balances the rate across the adapters as needed. Adapter teams configured for ALB also provide the benefits of AFT. Received data is not load balanced.

**Note:** For maximum benefit, ALB should not be used under NetBEUI and some IPX environments. For a list of supported IPX environments, see "Teaming Options Supported by Operating System and Protocol" on page 26.

To use ALB, your adapters must be configured to your server as a team and be linked to the same network.

---

## Setting Adaptive Load Balancing in Windows NT 4.0

1. Double-click the **Network** icon on the Control Panel.

2. On the Adapters tab, select a Netfinity 10/100 Ethernet Adapter that will be in the team and select **Properties**.
3. In the IBMSet window, select the **Adapter Teaming** tab.
4. Select **Add Adapter to a Team**.
5. The Teaming Wizard starts. Follow the wizard steps for assigning adapters to a team. Note that you can specify a Preferred Primary adapter, which in most cases should be your adapter with the greatest bandwidth. Refer to the IBMSet Help for more information.
6. Select **OK**, and then select **Close** to finish. When prompted, restart your computer.

## Deleting a Team

**Note:** The frame type for each adapter in the team reverts to Auto when a team is deleted.

1. Double-Click the **Network** icon on the Control Panel.
2. On the Adapters tab, select the ALB team to be deleted.
3. Select **Remove**. A confirmation box is displayed. Select **Yes** to confirm deletion.
4. Select **Close**. Restart Windows NT when prompted.

---

## Setting Adapter Load Balancing in NetWare

1. Copy the following lines from the EXAMPLES.TXT (on the IBM Configuration and Drivers diskette) and paste them into the appropriate files. These commands assume the IBMAFT.NLM and CIBMFE.LAN files are in the system directory (SYS:SYSTEM) of your server. (Files must be copied from the IBM Configuration and Drivers diskette to your server's hard drive.)

**Note:** The Adapter Load Balancing driver (IBMAFT.NLM) must be loaded before the Netfinity 10/100 Ethernet Adapter, CIBMFE.LAN, or any other LAN driver.

Copy the following lines into the STARTUP.NCF file.

```
;- Load Adapter Load Balancing
load ibmaft
```

Copy the following lines into the AUTOEXEC.NCF file.

```
;- Load LAN Driver on 1st Adapter
load cibmfe slot=a frame=ethernet_802.2 name=pri_802.2
```

```
;- Load LAN Driver on 2nd Adapter
load cibmfe slot=b frame=ethernet_802.2 name=sec_802.2
```

```
;- Bind ipx to 1st Adapter.
bind ipx pri_802.2 net=2
```

```
;- Set the 2nd Adapter to be a Load Balancing Partner to
;- the 1st adapter
aft balance a b
```

Where:

**slot** Specifies the slot where your Netfinity 10/100 Ethernet Adapter is installed. If you do not know the slot number, load the driver without it. NetWare will prompt you with available PCI device numbers.

- a** Specifies the primary adapter's slot number.
  - b** Specifies the secondary's slot number.
  - frame** Specifies the frame type of the computer's network segment.
2. Modify the lines to match your server's requirements.
  3. Save the AUTOEXEC.NCF file and restart your computer.

## Deleting a Team

To delete a team in AFT or ALB mode, comment out the preceding lines and restart the server.

---

## Setting Cisco Fast EtherChannel

Fast EtherChannel (FEC) is a performance technology developed by Cisco Systems, Inc. to increase throughput between switches. FEC increases your servers throughput. Unlike ALB, FEC can be configured to increase both transmission and reception channels between your server and switch. FEC works only with FEC-enabled Cisco switches such as the Catalyst 5000 series. With FEC, as you add adapters to your server, you can group them in teams to provide up to 800 Mbps at full duplex, with a maximum of four Netfinity 10/100 Ethernet Adapters. The FEC software continuously analyzes loading on each adapter and balances network traffic across adapters as needed. Adapter teams configured for FEC also provide the benefits of AFT.

To use FEC, you must have two or four Netfinity 10/100 Ethernet Adapters configured to your server as an FEC team and be linked to the same FEC-enabled Cisco switch.

---

## Setting Fast EtherChannel in Windows NT 4.0

1. Double-click the **Network** icon on the Control Panel.
2. On the Adapters tab, select a Netfinity 10/100 Ethernet Adapter that will be in the team and select **Properties**. (Do not select an adapter that is on a VLAN.)
3. In the IBMSet window, select the **Adapter Teaming** tab.
4. Select **Add Adapter to a Team**.
5. The Teaming Wizard starts. Follow the wizard steps for assigning adapters to a team. Note that you can specify a Preferred Primary adapter, which in most cases should be your adapter with the greatest bandwidth. Refer to the IBMSet Help for more information.
6. Select **OK**, and then select **Close** to finish. When prompted, restart your computer.

## Deleting a Team

1. Double-Click the **Network** icon on the Control Panel.
2. On the Adapters tab, select the FEC team to be deleted.
3. Select **Remove**. A confirmation box is displayed. Select **Yes** to confirm deletion.
4. Select **Close**. Restart Windows NT when prompted.

---

## Setting Fast EtherChannel in NetWare

1. Copy the following lines from the EXAMPLES.TXT (on the IBM Configuration and Drivers diskette) and paste them into the appropriate files. These commands assume the IBMAFT.NLM and CIBMFE.LAN files are in the system directory (SYS:SYSTEM) of your server. (Files must be copied from the IBM Configuration and Drivers diskette to your server's hard drive.)

**Note:** The Fast EtherChannel driver (IBMAFT.NLM) must be loaded before the Netfinity 10/100 Ethernet Adapter, CIBMFE.LAN, or any other LAN driver.

Copy the following lines into the STARTUP.NCF file.

```
;- Load Fast EtherChannel  
load ibmaft
```

Copy the following lines into the AUTOEXEC.NCF file.

```
;- Load LAN Driver on 1st Adapter  
load cibmfe slot=a frame=ethernet_802.2 name=pri_802.2
```

```
;- Load LAN Driver on 2nd Adapter  
load cibmfe slot=b frame=ethernet_802.2 name=sec_802.2
```

```
;- Bind ipx to 1st Adapter.  
bind ipx pri_802.2 net=2
```

```
;- Set the 2nd Adapter to be a Fast EtherChannel Partner to  
;- the 1st adapter  
aft fec a b
```

Where:

**slot** Specifies the slot where your Netfinity 10/100 Ethernet Adapter is installed. If you do not know the slot number, load the driver without it. NetWare will prompt you with available PCI device numbers.

**a** Specifies the primary adapter's slot number.

**b** Specifies the secondary's slot number.

**frame** Specifies the frame type of the computer's network segment.

2. Modify the lines to match your server's requirements.
3. Save the AUTOEXEC.NCF file and restart your computer.

## Deleting a Team

To delete a team, comment out the preceding lines and restart the server.

---

## Teaming Options Supported by Operating System and Protocol

Option	Windows NT 4.0	NetWare 4.11
AFT	IP, NetBEUI, IPX(NCP), IPX(NetBIOS)	IP, IPX(NCP)
ALB	IP, IPX(NCP)	IP, IPX(NCP)
FEC	IP, NetBEUI, IPX(NCP), IPX(NetBIOS)	IP, IPX(NCP)

**Note:** Only NCP (NetWare Core Protocol) IPX packets are load-balanced. Under FEC, all protocols can be load-balanced.

---



---

## Appendix E. Hot Plug Support

The IBM Netfinity 10/100 Ethernet Adapters are enabled for use in selected servers equipped with hot plug capability, including IBM Netfinity Hot Plug capable-servers, running Windows NT 4.0 and NetWare 5.0, 4.2, or 4.1x.

For NetWare Hot Plug, make sure you have the latest NetWare support pack before setting up hot plug. Refer to your server's documentation for more information on setting up and using NetWare Hot Plug.

For Windows NT 4.0 Hot Plug with IBM Netfinity Hot Plug capable-servers, the IBM Netfinity 10/100 Ethernet Adapters, at this time, support the **Hot Add** and **Hot Swap** functions.

---

### Hot Add

With the server running, an adapter can be installed to an open hot plug PCI slot without having to shutdown and reboot the server. Multiple adapters can be hot added to multiple open hot plug PCI slots.

---

### Hot Swap

With the server running and with an adapter fault tolerant team in place( also known as a fail-over team), if one of the adapters in the team fails, you can swap the failing adapter with a new adapter without having to shut down or reboot the server.

For details on how to set up and run IBM Hot Plug, follow the Readme and instructions in the Hotplug directory of the Installation and Drivers CD shipped with the adapter

You can also visit the IBM Support web site at:

<http://www.networking.ibm.com/support>

**Notes:**

1. If you replace an adapter in a hot plug slot, do not place the removed adapter back into the same network until the server has rebooted. The two adapters may have the same Ethernet address and create a resource conflict.
2. Hot Swap is only for replacing a failing adapter in an existing adapter team in your server. If you form a new adapter team, the server will have to be rebooted for Hot Swap to work with the new adapter team.



---

## Appendix F. Troubleshooting and Testing the Adapter

The appendix describes corrective actions for a number of common problems. It also describes how to test the adapter using the diagnostics.

---

### Problem Symptoms and Corrective Actions

#### The adapter cannot connect to the network

1. **Make sure that the cable is installed correctly.**

The network cable must be securely attached at both RJ-45 connections (adapter and hub). The maximum allowable distance from adapter to the hub is 100 m (328 ft). If the cable is attached and the distance is within acceptable limits but the problem persists, try a different cable.

If you are directly connecting two computers without a hub or switch, use a crossover cable.

2. **Check the LED lights on the adapter.**

The adapter has two diagnostic LEDs, one on each side of the cable connector. These lights help you to determine whether there is a problem with the connector, cable, switch, or hub.

LED	Indication	Meaning
ACT/LNK	On	<ul style="list-style-type: none"><li>• The adapter and switch are receiving power.</li><li>• The cable connection between the switch and adapter is good.</li></ul>
	Off	This can be due to <b>one</b> of the following causes: <ul style="list-style-type: none"><li>• The adapter is not sending or receiving network data.</li><li>• The adapter and switch are not receiving power.</li><li>• The cable connection between the switch and adapter is faulty.</li><li>• You have a driver configuration problem.</li></ul>
	Flashing	The adapter is sending or receiving network data. The frequency of the flashes varies with the amount of network traffic.
100	On	The adapter is operating at 100 Mbps.
	Off	The adapter is operating at 10 Mbps.

3. **Make sure that you are using the correct drivers.**

Make sure that you are using the drivers that come with this adapter (for example, IBMFEODI.DOS). Drivers that support previous versions of this adapter do not support this version of the adapter.

4. **Make sure that the switch port and the adapter have the same duplex setting.**

If you configured the adapter for full duplex, make sure that the switch port is also configured for full duplex. Setting the wrong duplex mode can degrade performance, cause data loss, or result in lost connections.

## **SETUP.EXE reports the adapter is “Not enabled by BIOS”**

The PCI BIOS is not configuring the adapter correctly. See “Appendix H. PCI Installation Tips” on page 37.

## **The computer hangs when the drivers are loaded**

1. Change the PCI BIOS interrupt settings. See “Appendix H. PCI Installation Tips” on page 37 for more information.
2. If you are using EMM386, make sure that it is Version 4.49 or higher (this version ships with MS-DOS 6.22 or higher).

## **Diagnostics pass, but the connection fails or errors occur**

1. For 100 Mbps:
  - a. Use Category 5 cabling and make sure that the network cable is securely attached.
  - b. Connect to a 100BASE-TX hub/switch (not 100BASE-T4).
2. For NetWare, make sure you specify the correct frame type in your NET.CFG file.
3. Make sure the duplex mode setting on the adapter matches the setting on the switch.

## **The LNK LED does not light**

1. Make sure that you loaded the network drivers.
2. Check all connections at the adapter and the switch.
3. Try another port on the switch.
4. Make sure that the duplex mode setting on the adapter matches the setting on the switch.
5. Make sure that you have the correct type of cable between the adapter and the hub. 100BASE-TX requires two pairs. Some hubs require a crossover cable while others require a straight-through cable.

## **The ACT LED does not light**

1. Make sure that you loaded the correct network drivers.
2. The network may be idle. Try accessing a server.
3. The adapter is not transmitting or receiving data. Try another adapter.
4. Make sure that you are using two-pair cable for TX wiring.

## **The adapter stops working without apparent cause**

1. Run the diagnostics.
2. Try reseating the adapter in its slot, or try a different slot if necessary.
3. The network driver files may be corrupt or missing. Remove the drivers and then reinstall them.

## **The Wake on LAN feature is not working**

1. Make sure that the WOL cable is attached and that power is being applied to the computer.

2. Check the BIOS for its WOL setting. Some computers may need to be configured for WOL. For IBM WOL PC systems, make sure that the WOL option in the BIOS is set to ENABLED.
3. Make sure the network cable is fully attached to the adapter.

## The LNK LED does not light when you connect the power

1. Make sure that the WOL cable is attached and power is applied to the computer.
2. Make sure that the network cable is attached at both ends.

---

## Testing the Adapter Using the Diagnostics

Test the adapter by running diagnostics.

- For DOS or Windows 3.1, run Setup on the IBM Installation and Drivers CD-ROM or diskette.
- For Windows NT, Windows 95, or Windows 98, run IBMSet by double-clicking **IBMSet** in the Windows control panel.

To run diagnostics, select the adapter, click **Diagnostics**, and then click **Run Tests**. For additional information, click **Help** in the IBMSet window.

---

## IBM Product Support

The following IBM product support is available:

- Internet Service  
You can use the Internet to download software updates, troubleshooting tips, installation notes, and more. Contact the IBM Networking Web site at:  
[www.networking.ibm.com/support](http://www.networking.ibm.com/support)
- IBM Product Support
  - 1 800 772-2227 for IBM HelpCenter®
  - 1 800 237-5511 for IBM Support Services
  - 1 800 565-3344 for HelpPC (Canada)

---

## Web Sites for Software Updates

You can download the necessary Microsoft and Novell software updates from the following sites:

- **Microsoft Service Pack 4:**  
<ftp://ftp.microsoft.com/bussys/winnt/winnt-public/fixes/usa/nt40/ussp4/>
- **Microsoft Service Pack 3:**  
<ftp://ftp.microsoft.com/bussys/winnt/winnt-public/fixes/usa/nt40/ussp3/>
- **Microsoft NDIS Driver Hotfix:**  
<ftp://ftp.microsoft.com/bussys/winnt/winnt-public/fixes/usa/nt40/hotfixes-postsp3/ndis-fix/>
- **Novell Support Pack 6 for NetWare 4.11 or Support Pack 1 for NetWare 5.0:**  
<http://support.novell.com/misc/pat1st.htm>



---

## Appendix G. Priority Packet: An Overview

Priority Packet is a traffic-prioritization utility that enables you to set up filters to process high-priority traffic before normal traffic. Using Priority Packet, you can set up filters to give priority to critical applications or users.

Priority Packet is available on the IBM Networking Web site at:  
[www.networking.ibm.com/support](http://www.networking.ibm.com/support)

---

### Prioritizing Network Traffic

Priority Packet lets you set up priority filters to send information from critical nodes or applications with an indicated priority. By prioritizing traffic at the host or entry point of the network, network devices can base forwarding decisions on priority information defined in the packet.

Priority Packet prioritizes traffic based on priority filters. These are parameters you assign to outgoing (transmit) packets. Using the Priority Filter Wizard, you can set up predefined or custom priority filters based on a node (MAC) address, Ethernet type, or by various properties of the protocol and port. Priority Packet provides two different methods for prioritizing traffic: IEEE 802.1p tagging and High Priority Queue.

---

### IEEE 802.1p Tagging

IEEE 802.1p is a new IEEE standard for tagging, or adding additional bytes of information to, packets with different priority levels. Packets are tagged with 4 additional bytes, which increase the packet size and indicate a priority level. When these packets are sent out on the network, the higher priority packets are transferred first. Priority packet tagging (also known as Traffic Class Expediting) allows the adapter to work with other elements of the network (such as switches and routers) to deliver priority packets first. 802.1p tagging enables you to assign specific priority levels from 0 (low) to 7 (high).

Using the IEEE 802.1p standard for packet tagging, you can assign values to packets based on their priority. This method requires a network infrastructure that supports packet tagging. The routing devices receiving and transferring these packets on your network must support 802.1p for tagging to be effective.

After you set up the priority filter in Priority Packet, you must launch IBMSet and select **802.1p/802.1Q Tagging** on the Advanced tab.

**Attention:** IEEE 802.1p tagging increases the size of the packets it tags. Some hubs and switches will not recognize the larger packets and will drop them. Check your hub or switch documentation to see if they support 802.1p. (You can configure the switch to strip the tags from the packets and send it on to the next destination as normal traffic.) If these devices do not support 802.1p or if you are not sure, use High Priority Queue (HPQ) to prioritize network traffic.

The requirements for effectively using IEEE 802.1p tagging are:

- The other devices receiving and routing 802.1p tagged packets must support 802.1p.

- The adapters on these devices must support 802.1p (adapters using the Intel 82558 or higher Ethernet controller). All Netfinity 10/100 Ethernet Adapters support 802.1p.
- The adapter cannot be assigned to an adapter team.
- If you are setting up VLANs and packet tagging on the same adapter, 802.1p/802.1Q Tagging must be Enabled on the IBMSet Advanced tab.

---

## High Priority Queue

If your network infrastructure devices do not support IEEE 802.1p or you are not sure, you can still define filters and send packets as high priority. While High Priority Queue (HPQ) does not provide the precise priority levels of 802.1p tagging, it does assign traffic as either high or low priority and sends high priority packets first. Therefore, if there are multiple applications on a system sending packets, the packets from the application with a filter are sent out first. HPQ does not change network routing, nor does it add any information to the packets.

To assign HPQ, you can specify it using Priority Packet when you create or assign a filter.

To effectively use HPQ tagging, the adapter cannot be assigned to an adapter team.

For more information on Priority Packet, refer to the related white papers on IBM's Networking Web site at

[www.networking.ibm.com/support](http://www.networking.ibm.com/support)

---

## Appendix H. PCI Installation Tips

PCI computers are designed to configure add-in cards automatically each time the computer starts. Your PCI computer sets the I/O address and IRQ level for your network adapter when the computer starts. These values cannot be changed by IBM adapter software. If you experience a problem when the computer starts, you might need to follow additional configuration steps.

On some computers, manual configuration is possible through the computer's PCI BIOS setup utility. Refer to your computer documentation. You might need to verify or change some BIOS settings.

Some common PCI solutions are listed here.

- Busmaster-enabled slots. On some computers, not all slots are busmaster enabled by default. Check your BIOS PCI bus setting. It will be set to either Busmaster or Non-busmastered. Select **Busmaster**.
- Reserve interrupts (IRQs) and/or memory addresses for ISA adapters. This prevents PCI cards from trying to use the same settings that ISA cards are using. Check your PCI BIOS setup program. There might be IRQ options such as Enable for ISA, Reserve for ISA, or Disable for PCI. This option is sometimes in the Plug and Play area of the BIOS setup.
- Enable the PCI slot. In some PCI computers, you must use the PCI BIOS setup program to enable the PCI slot. This is especially common in PCI computers with the PhoenixBIOS.
- Update your PCI BIOS. An updated PCI system BIOS can correct some PCI configuration problems. Contact your computer manufacturer to see if an updated BIOS version is available for your computer.
- Configure the slot for level-triggered interrupts. The slot that the adapter is using must be configured for level-triggered interrupts rather than edge-triggered interrupts. Check your PCI BIOS Setup program.

Here are some examples of PCI BIOS setup program parameters:

**PCI slot #:**

Slot where the adapter is installed

**Master:**

ENABLED

**Slave:** ENABLED

**Latency timer:**

40

**Interrupt:**

Choose an IRQ from the list

**Edge-level:**

Level

The exact wording of these parameters varies with different computers.

---

## Removing an Existing Adapter in Windows 95

If you are replacing an existing adapter with a Netfinity 10/100 Ethernet Adapter, follow these steps before physically removing the adapter:

1. Double-click **My Computer**.
2. Double-click **Control Panel**.
3. Double-click **System**.
4. Click **Device Manager**.
5. Double-click **Network Adapters**.
6. Select the adapter driver listed below the Network Adapters group and click **Remove**.
7. Click **OK**.
8. Follow the instructions in "Chapter 1. Installing the Adapter Hardware" on page 1.

---

## Push Installation for Windows 95

If you are a LAN administrator setting up server-based push installation of Windows 95 as defined in Microsoft Windows 95 Resource Kit, you will need to follow additional steps for this adapter. Refer to the Push Installation for Windows 95 readme file on the IBM Support Web site.

---

## Fast Ethernet Wiring

The 100BASE-TX specification supports 100-Mbps transmission over two pairs of Category 5 twisted-pair Ethernet wiring. One pair is for transmit operations and the other for receive operations. Segment lengths are limited to 100 meters with 100BASE-TX for signal timing reasons. This complies with the EIA 568 wiring standard.

---

## Boot Agent

The Boot Agent is a utility program that is stored in a flash memory chip on the adapter, allowing the adapter to remotely boot the system from the network using either of two methods.

- The default method is PXE, a remote boot procedure defined by the Wired for Management specifications and used by powerful network management programs, such as IBM LAN Client Control Manager or Intel LANDesk Management suite.
- The alternate method is RPL, an established industry standard historically utilized for remote booting of diskless workstations from network operating systems such as NetWare and Windows NT Server.

Computers do not need to be Wake on LAN enabled to use this feature, and the feature will work with or without the 3-pin auxiliary power connector attached.

## Configuration

When the computer is first powered-on, the Boot Agent will execute and display the following message:

```
Initializing Boot Agent Version 2.0  
Press Ctrl+S to enter the Setup Program
```

By default, this message will display for 2 seconds, after which the agent will attempt to boot from a local drive. If the attempt to boot from a local drive fails, the agent will attempt to boot remotely.

To change the configuration of the Boot Agent, press **Ctrl+S** during the time that this message is displayed. This will bring up the Boot Agent configuration panel.

There are five configurable parameters. Follow the on-screen instructions to select, change and save the different parameters. The different parameters are explained below, with the default parameter listed first.

### Boot Protocol

Selections are PXE and RPL. Select PXE for use with Wired for Management-compliant network management programs, such as IBM LAN Client Control Manager or Intel LANDesk Management Suite. Select RPL for legacy-style remote booting.

### PnP/BEV Boot

Selections are Disable and Enable. Select **Disable** for normal remote boot operation. Select **Enable** if you want to use the computer BIOS boot sequence instead of the Boot Agent.

### Default Boot

Selections are Local and Network. If you select Local, the Boot Agent will attempt to boot from a local drive first, then attempt to boot from the network if local boot fails. If you select Network, the Boot Agent will attempt to boot from the network first.

### Local Boot

Selections are Enable and Disable. If you select Enable, the system will be able to boot from a local drive (diskette drive or hard drive). If you select Disable, the system will not be able to boot from a local drive. This will be true regardless of the Default Boot setting.

### Prompt Time

Selections are 2, 3, 5, and 8. The number represents the amount of time in seconds during which the following message is displayed every time the system is booted:

```
Initializing Boot Agent Version 2.0 - Press Setup Program
```

## Troubleshooting Boot Agent

If you do not see the message Initializing Boot Agent Version 2.0, check the following:

In the computer setup, check for the boot device sequence. If **Boot Agent** or **Network** is listed, move it ahead of the hard drive in the boot sequence.

Some computers require manual intervention to execute the Boot Agent. Look for an informational note on the computer monitor after power-on that instructs you about executing a network boot.

---

## Appendix I. Adapter Specifications

Compatibility	PCI v2.2 systems
Media (cable) Connectors and Wiring	<ul style="list-style-type: none"><li>• RJ-45</li><li>• Use Category 5 cabling at 100 Mbps</li><li>• Supports 100BASE-TX Fast Ethernet</li></ul>
Data Rate Mode	10 or 100 Mbps
Interrupt Levels	PCI: INTA
SRAM Transsmmit/Receive Buffer	6 KB
Power Requirements	1.06 Watts at 5.0 V dc
Isolation Voltage	200 V rms
Operating Temperature	0 to 55 degrees C
Humidity	10% to 90% non-condensing
Diagnostic LEDs	Activity/Link, 100 Mbps
Diagnostic Software	<ul style="list-style-type: none"><li>• On-board</li><li>• IBMSet, Setup</li><li>• Responder</li></ul>
Compliance & Certification	<ul style="list-style-type: none"><li>• Safety - UL</li><li>• FCC Class B</li><li>• CE &amp; Immunity</li><li>• C-tick (Australian)</li></ul>



---

## Appendix J. Notices

This information was developed for products and services offered in the U.S.A. IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area.

References in this publication to IBM products, programs, or services do not imply that IBM intends to make these available in all countries in which IBM operates. Any reference to an IBM product, program, or service is not intended to state or imply that only IBM's product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any of IBM's; intellectual property rights may be used instead of the IBM product, program, or service. Evaluation and verification of operation in conjunction with other products, except those expressly designated by IBM, are the user's responsibility.

IBM may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

IBM Director of Licensing  
IBM Corporation  
North Castle Drive  
Armonk, NY 10504-1785  
U.S.A.

For license inquiries regarding double-byte (DBCS) information, contact the IBM Intellectual Property Department in your country or send inquiries, in writing, to:

IBM World Trade Asia Corporation  
Licensing  
2-31 Roppongi 3-chome, Minato-ku  
Tokyo 106, Japan

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

---

## Safety Notices

### Telecommunications Safety Requirements in the United Kingdom

This IBM product is made to high safety standards. It complies inherently with telecommunications safety standard BS 6301. It is not designed to provide protection from excessive voltages appearing externally at its interfaces. Therefore, when this product is connected to a public telecommunications network via any other equipment, and you connect to this product items not supplied by IBM United Kingdom Ltd., you must comply with mandatory telecommunications safety requirements.

## Statement of Compliance with the United Kingdom Telecommunications Act 1984

This apparatus is approved under approval number NS/G/1234/J/100003 for indirect connections to the public telecommunications systems in the United Kingdom.

---

### Electronic Emission Notices for Category 5 Data Grade Cables

**IBM 10/100 EtherJet PCI Adapter** — P/N 34L0801

**IBM 10/100 EtherJet PCI Adapter with Wake on LAN** — P/N 34L0201

**IBM 10/100 EtherJet PCI Management Adapter** — P/N 34L1201

**IBM Netfinity 10/100 Ethernet Adapter** — P/N 34L1501 and P/N 34L0901

### Federal Communications Commission (FCC) Statement

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an IBM authorized dealer or service representative for help.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM authorized dealers. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

International Business Machines Corporation  
New Orchard Road  
Armonk, NY 10504  
Telephone - 19195432193

## Industry Canada Class B Emission Compliance Statement

This Class B digital apparatus complies with Canadian ICES-003.

## Avis de conformité aux normes d'Industrie Canada

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## European Norm (EN) Statement

This product is in conformity with the protection requirements of EC Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility.

IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

Properly shielded and grounded cables and connectors must be used in order to reduce the potential for causing interference to radio and TV communications and to other electrical or electronic equipment. IBM cannot accept responsibility for any interference caused by using other than recommended cables and connectors.

## Hinweis zur Elektromagnetischen Verträglichkeit (EMVG)

Dieses Gerät ist berechtigt in Übereinstimmung mit dem deutschen EMVG vom 9. Nov. 92 das EG-Konformitätszeichen zu führen.

Der Aussteller der Konformitätserklärung ist die

IBM Deutschland Informationssysteme GmbH  
70548 Stuttgart

Dieses Gerät erfüllt die Bedingungen der EN 55022 Klasse B.

## Japanese Voluntary Control Council for Interference (VCCI) Statement

This product is a Class B Information Technology Equipment and conforms to the standards set by the Voluntary Control Council for Interference by Technology Equipment (VCCI). This product is aimed to be used in a domestic environment. When used near a radio or TV receiver, it may become the cause of radio interference. Read the instructions for correct handling.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づきクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。  
取扱説明書に従って正しい取り扱いをして下さい。

## Korean Class B Communication Statement

Please note that this device has been certified for residential use and may be used in any environment.

---

## **Electronic Emission Notices for Category 3 and 4 Data Grade Cables**

### **Federal Communications Commission (FCC) Statement**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **Industry Canada Class A Emission Compliance Statement**

This Class A digital apparatus complies with Canadian ICES-003.

### **Avis de conformité aux normes d'Industrie Canada**

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

### **European Norm (EN) Statement**

This product is in conformity with the protection requirements of EC Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility.

IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to CISPR 22/European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM authorized dealers. IBM is not responsible for any radio or television interference

caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment.

**Attention:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

**Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) vom 30. August 1995 (bzw. der EMC EG Richtlinie 89/336).**

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Konformitätserklärung nach Paragraph 5 des EMVG ist die IBM Deutschland Informationssysteme GmbH, 70548 Stuttgart.

Informationen in Hinsicht EMVG Paragraph 3 Abs. (2) 2:

EN 55022 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden: "Warnung: dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen und dafür aufzukommen."

EN 50082-1 Hinweis: "Wird dieses Gerät in einer industriellen Umgebung betrieben (wie in EN 50082-2 festgelegt), dann kann es dabei eventuell gestört werden. In solch einem Fall ist der Abstand bzw. die Abschirmung zu der industriellen Störquelle zu vergrößern."

Anmerkung: Um die Einhaltung des EMVG sicherzustellen, sind die Geräte, wie in den IBM Handbüchern angegeben, zu installieren und zu betreiben.

## Japanese Voluntary Control Council for Interference (VCCI) Statement

This product is a Class A Information Technology Equipment and conforms to the standards set by the Voluntary Control Council for Interference by Technology Equipment (VCCI). In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づきクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

## Korean Class A Communications Statement

Please note that this device has been certified for business use with regard to electromagnetic interference. If you find this is not suitable for your use, you may exchange it for one of residential use.

## Taiwanese Class A Warning Statement

警告使用者：  
這是甲類的資訊產品，在  
居住的環境中使用時，可  
能會造成射頻干擾，在這  
種情況下，使用者會被要  
求採取某些適當的對策。

---

## Trademarks

The following terms are trademarks of the IBM Corporation in the United States or other countries or both:

HelpCenter  
IBM  
Netfinity

Operating System/2  
Wake on LAN  
b

Intel and LANDesk are trademarks of Intel Corporation in the United States, or other countries, or both.

Microsoft, Windows, Windows NT, and the Windows logo are trademarks or registered trademarks of Microsoft Corporation.

UNIX is a registered trademark in the United States, other countries, or both and is licensed exclusively through X/Open Company Limited.

Other company, product and service names may be trademarks or service marks of other companies.

International Business Machines Corporation

Armonk, New York, 10504

### Statement of Limited Warranty

*The warranties provided by IBM in this Statement of Limited Warranty apply only to Machines you originally purchase for your use, and not for resale, from IBM or an IBM authorized reseller. The term "Machine" means an IBM machine, its features, conversions, upgrades, elements, or accessories, or any combination of them. Machines are subject to these terms only if purchased in the United States or Puerto Rico, or Canada, and located in the country of purchase. If you have any questions, contact IBM or your reseller.*

**Machine** Netfinity 10/100 Ethernet Adapter

**Warranty Period\*** Lifetime

*\*Elements and accessories are warranted for three months. Contact your place of purchase for warranty service information.*

### **Production Status**

Each Machine is manufactured from new parts, or new and serviceable used parts (which perform like new parts). In some cases, the Machine may not be new and may have been previously installed. Regardless of the Machine's production status, IBM's warranty terms apply.

### **The IBM Warranty**

IBM warrants that each Machine 1) is free from defects in materials and workmanship and 2) conforms to IBM's Official Published Specifications. IBM calculates the expiration of the warranty period from the Machine's Date of Installation. The date on your receipt is the Date of Installation, unless IBM or your reseller informs you otherwise. During the warranty period, IBM or your reseller will provide warranty service under the type of service designated for the Machine and will manage and install engineering changes that apply to the Machine. IBM or your reseller will specify the type of service.

For a feature, conversion, or upgrade, IBM or your reseller may require that the Machine on which it is installed be 1) the designated, serial-numbered Machine and 2) at an engineering-change level compatible with the feature, conversion, or upgrade. Some of these transactions (called "Net-Priced" transactions) may include additional parts and associated replacement parts that are provided on an exchange basis. All removed parts become the property of IBM and must be returned to IBM.

Replacement parts assume the remaining warranty of the parts they replace.

If a Machine does not function as warranted during the warranty period, IBM in its sole discretion will repair, replace it (with a Machine that is at least functionally equivalent), or refund the purchase price. To obtain coverage under the warranty you may be required to present proof of purchase.

This warranty is non-transferable by the end-user customer.

### **Warranty Service**

To obtain warranty service for the Machine, you should contact your reseller or call IBM. In the United States, call IBM at **1-800-772-2227**. In Canada, call IBM at **1-800-565-3344**. You may be required to present proof of purchase.

Depending on the Machine, the service may be 1) a "Repair" service at your location (called "On-site") or at one of IBM's or a reseller's service locations (called "Carry-in") or 2) an "Exchange" service, either On-site or Carry-in.

When a type of service involves the exchange of a Machine or part, the item IBM or your reseller replaces becomes its property and the replacement becomes yours. The replacement may not be new, but will be in good working order and at least functionally equivalent to the item replaced.

It is your responsibility to:

1. obtain authorization from the owner (for example, your lessor) to have IBM or your reseller service a Machine that you do not own;
2. where applicable, before service is provided —
  - a. follow the problem determination, problem analysis, and service request procedures that IBM or your reseller provide,
  - b. secure all programs, data, and funds contained in a Machine,
  - c. inform IBM or your reseller of changes in a Machine's location, and
  - d. for a Machine with exchange service, remove all features, parts, options, alterations, and attachments not under warranty service. Also, the Machine must be free of any legal obligations or restrictions that prevent its exchange; and
3. be responsible for loss of, or damage to, a Machine in transit when you are responsible for the transportation charges.

### **Extent of Warranty**

IBM does not warrant uninterrupted or error-free operation of a Machine.

Misuse, accident, modification, unsuitable physical or operating environment, improper maintenance by you, or failure caused by a product for which IBM is not responsible may void the warranties.

THESE WARRANTIES REPLACE ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HOWEVER, SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD.

In Canada, warranties include both warranties and conditions.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

### **Limitation of Liability**

Circumstances may arise where, because of a default on IBM's part (including fundamental breach) or other liability (including negligence and misrepresentation), you are entitled to recover damages from IBM. In each such instance, regardless of the basis on which you are entitled to claim damages, IBM is liable only for:

1. bodily injury (including death), and damage to real property and tangible personal property; and
2. the amount of any other actual loss or damage, up to the greater of \$100,000 or the charge for the Machine that is the subject of the claim.

Under no circumstances is IBM liable for any of the following:

1. third-party claims against you for losses or damages (other than those under the first item listed above);
2. loss of, or damage to, your records or data; or
3. economic consequential damages (including lost profits or savings) or incidental damages, even if IBM is informed of their possibility.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction.

---

# Index

## A

- adapter 2
- adapter, adding when installing Windows NT 10
- adapter, fault tolerance 21
- adapter configuration 7
- adapter installation 1
- adapter specifications 41
- address, adapter 3

## B

- Banyan VINES 13
- boot agent 38

## C

- cable 2
  - connecting to the adapter 2, 4
- cabling 1
- Client 32 13
- configuration, adapter 7
- connecting the adapter cable 2, 4

## D

- diagnostics, testing the adapter with 33
- DOS Setup for Novell NetWare 12
- duplex mode 17

## E

- Ethernet address 3
- expansion slot 1

## F

- fast Ethernet wiring 38
- fault tolerance 21
- full duplex, manually configuring 17

## H

- high priority queue 36
- hot plug 29
  - hot add 29
  - hot swap 29

## I

- IBMSet 15
- IEEE 802.1p 35
- inserting the adapter 1
- installation, Novell NetWare 4.1x 8
- installation, Windows 95 8
- installation, Windows 98 9
- installation, Windows NT 3.51 11
- installation, Windows NT 4.0 11

- installation, Windows NT automatic 10
- installation tips, PCI 37

## L

- label, Ethernet address 3

## M

- MAC address 3

## N

- NetWare 3.11 13
- NetWare 3.12 13
- node address 3
- notices
  - electronic emission 43
  - electronic emission notices 46
  - European Norm (EN) statement 46
  - Japanese VCCI statement 47
  - Korean communications statement 47
  - safety viii, 43
  - Taiwanese warning statement 48
  - trademarks 48
- Novell NetWare 4.1x installation 8
- Novell NetWare 5.0 7

## O

- options, teaming 21

## P

- PCI installation tips 37
- placing the adapter 1
- prioritizing network traffic 35
- priority packet 35
- priority packet tagging 35
- push installation for Windows 95 38

## R

- related publications vii
- removing an adapter in Windows 95 38
- responder testing 13

## S

- safety notices viii, 43
- setup diskette 7
- specifications, adapter 41
- statement of limited warranty 48

## T

- teaming option, fault tolerance 21
- teaming options 21

- testing 31
- testing the adapter using diagnostics 33
- trademarks 48
- traffic class expediting 35
- troubleshooting 31
- troubleshooting, Windows NT 11

## U

- UNIX 13

## V

- virtual LANs 19

## W

- Wake On LAN
  - using 5
- Wake On LAN cable
  - connecting 3
- warranty 48
- Windows 3.1 Setup for Novell NetWare 12
- Windows 95, push installation for 38
- Windows 95, removing an adapter in 38
- Windows 95 installation 8
- Windows 98 installation 9
- Windows NT 3.51 installation 11
- Windows NT 4.0 installation 11
- Windows NT automatic installation 10
- Windows NT troubleshooting 11
- wiring, fast Ethernet 38

## Y

- Y2K vii





Printed in the United States of America  
on recycled paper containing 10%  
recovered post-consumer fiber.