

A U T O N E T I C S

A DIVISION OF NORTH AMERICAN AVIATION, INC.
INDUSTRIAL PRODUCTS
3400 E. 70th Street, Long Beach 5, Calif.

May 2, 1961

RECOMP TECHNICAL BULLETIN #19

TITLE: Operation of Perry Canister

PURPOSE: To facilitate recirculation of tape, and eliminate the catching of tape by hand.


EFFECTIVE DATE: May 2, 1961.

CONTENTS: The following steps should be followed when using the Perry Canister.


1. Place tape in canister with label down and with feed holes positioned as in sketch A.
2. Pull approximately five folds out at bottom of canister.
3. Thread tape down below rollers and through guide on left side.
4. Place tape over bar directly above photoreader.
5. Insert tape in photoreader with approximately two folds in canister.
6. Press tape fill or verify button.

* Important: All newly punched tape must be firmly squeezed at ends to insure good folds. On new tape it is also desirable to run tape through the photoreader using tape advance the first time. This serves two purposes: (1) it conditions the tape, and (2) it assures the operator of the tapes folding ability. Tapes with creases between folds should be reduplicated.

(A)

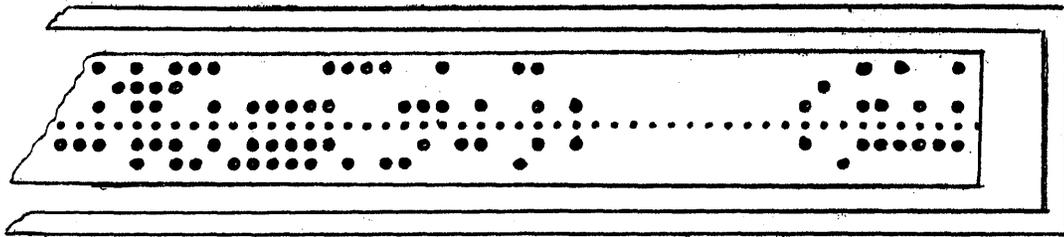

(B)

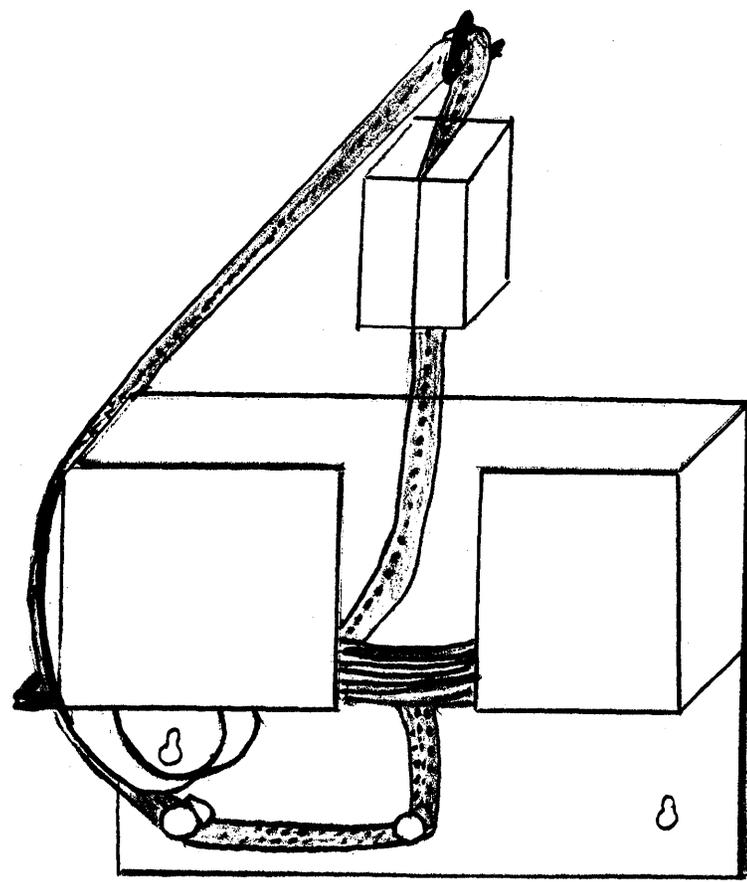

INFORMATION TO: All Concerned
WRITTEN BY: R. N. Perry
Programming and Training
Autonetics Industrial Products