


Digital Equipment Corporation
Maynard, Massachusetts

digital

PDP-15 Systems
Programmer's Reference Manual

FP15

Floating Point Processor

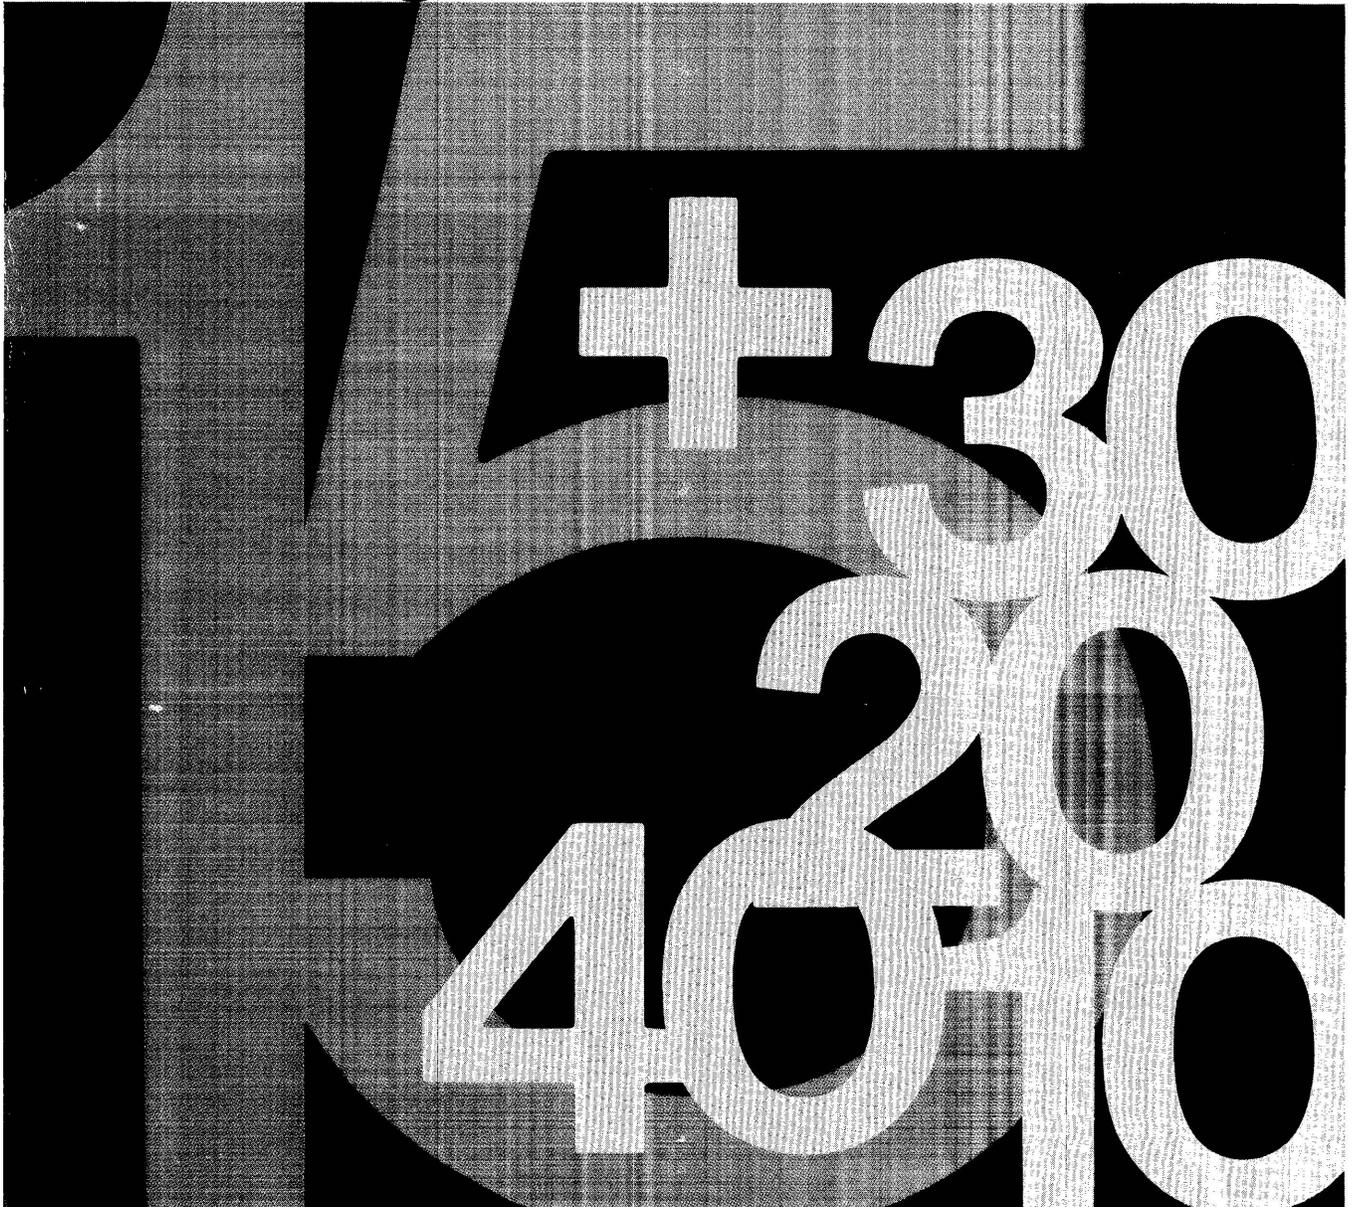

94-003/084/36

PDP-15 SYSTEMS
FP15 FLOATING POINT PROCESSOR
PROGRAMMER'S REFERENCE MANUAL

1st Edition April 1971

Copyright © 1971 by Digital Equipment Corporation

The material in this manual is for information purposes and is subject to change without notice.

The following are trademarks of Digital Equipment Corporation, Maynard, Massachusetts:

| | |
|-----------|--------------|
| DEC | PDP |
| FLIP CHIP | FOCAL |
| DIGITAL | COMPUTER LAB |

CONTENTS

| | Page |
|---------------------------------------|---|
| CHAPTER 1 INTRODUCTION | |
| 1.1 | General 1-1 |
| 1.2 | Floating-Point Arithmetic 1-1 |
| 1.2.1 | Floating-Point Addition and Subtraction 1-2 |
| 1.2.2 | Floating-Point Multiplication and Division 1-2 |
| CHAPTER 2 FP15 FUNCTIONAL DESCRIPTION | |
| 2.1 | Introduction 2-1 |
| 2.2 | FP15 Simplified Block Diagram Discussion 2-1 |
| 2.3 | Instruction and Address Formats 2-3 |
| 2.4 | Data Formats 2-5 |
| 2.5 | Data Transfer to FP15 from Memory - Integer Format 2-5 |
| 2.6 | Data Transfer to FP15 from Memory - Floating-Point Format 2-5 |
| CHAPTER 3 FP15 ARITHMETIC | |
| 3.1 | Introduction 3-1 |
| 3.2 | Guard Bit and Rounding 3-1 |
| 3.3 | Interrupt Handling 3-2 |
| 3.3.1 | Memory Protect Trap 3-3 |
| CHAPTER 4 INSTRUCTION SET | |
| 4.1 | Introduction 4-1 |
| 4.2 | FPU Instruction Set 4-6 |
| 4.2.1 | Integer Subtract 4-6 |
| 4.2.2 | Floating-Point Subtract 4-7 |
| 4.2.3 | Integer Reverse Subtract 4-8 |
| 4.2.4 | Floating Point Reverse Subtract 4-8 |
| 4.2.5 | Integer Multiply 4-9 |
| 4.2.6 | Floating Point Multiply 4-10 |
| 4.2.7 | Integer Divide 4-11 |
| 4.2.8 | Floating Point Divide 4-11 |
| 4.2.9 | Integer Reverse Divide 4-12 |
| 4.2.10 | Floating Point Reverse Divide 4-12 |

CONTENTS (Cont)

| | Page |
|--|------|
| 4.2.11 Integer Load | 4-13 |
| 4.2.12 Floating Point Load | 4-13 |
| 4.2.13 Integer Store | 4-14 |
| 4.2.14 Floating Point Store | 4-14 |
| 4.2.15 Load and Float | 4-16 |
| 4.2.16 Float (FMA) | 4-16 |
| 4.2.17 Load and Fix | 4-17 |
| 4.2.18 Fix EPA (FMA) | 4-17 |
| 4.2.19 Load FMQ (Integer) | 4-18 |
| 4.2.20 Load FMQ (Floating Point) | 4-18 |
| 4.2.21 Swap FMA and FMQ | 4-19 |
| 4.2.22 Load JEA (Jump Exit Address) | 4-19 |
| 4.2.23 Store JEA (Jump Exit Address) | 4-20 |
| 4.2.24 Integer Add | 4-20 |
| 4.2.25 Floating Point Add | 4-20 |
| 4.2.26 Branch | 4-21 |
| 4.2.27 Modify FMA | 4-22 |
| 4.2.28 Floating Point Test | 4-23 |
| 4.3 Worst-Case Timing | 4-23 |
| | |
| CHAPTER 5 DIAGNOSTIC INSTRUCTIONS | |
| 5.1 Introduction | 5-1 |
| 5.2 Debreak | 5-1 |
| 5.3 Diagnostic Mode On, Diagnostic Mode Off | 5-1 |
| 5.4 Diagnostic Read, Step and Read | 5-2 |
| 5.4.1 Diagnostic Read | 5-2 |
| 5.4.2 Diagnostic Step and Read | 5-3 |
| | |
| CHAPTER 6 FP15 PROGRAMMING EXAMPLES | |
| 6.1 Introduction | 6-1 |
| 6.2 Single-Precision Integer | 6-1 |
| 6.3 Double-Precision Integer Programming Example | 6-2 |
| 6.4 Single-Precision Floating Point | 6-3 |
| 6.5 Double-Precision Floating Point | 6-4 |

ILLUSTRATIONS

| Figure No. | Title | Art No. | Page |
|------------|--|---------|------|
| 1-1 | Floating-Point Representation | 15-0560 | 1-1 |
| 2-1 | FP15 Simplified Diagram | 15-0550 | 2-2 |
| 2-2 | Floating-Point Instruction Format | 15-0562 | 2-4 |
| 2-3 | Floating-Point Address Format | 15-0551 | 2-4 |
| 2-4 | Single-Precision Integer Format | 15-0555 | 2-5 |
| 2-5 | Extended Integer Format | 15-0556 | 2-5 |
| 2-6 | Single-Precision Floating-Point Format | 15-0557 | 2-6 |
| 2-7 | Loading of Single-Precision Floating Point | 15-0552 | 2-6 |
| 2-8 | Double-Precision Floating-Point Format | 15-0554 | 2-7 |
| 3-1 | Handling of Negative Integers | 15-0559 | 3-1 |
| 3-2 | Handling of Guard Bit During Round Request | 15-0561 | 3-2 |

TABLES

| Table No. | Title | Page |
|-----------|--------------------------|------|
| 4-1 | FP15 Instruction Summary | 4-2 |

1.2.1 Floating-Point Addition and Subtraction

For floating-point addition and subtraction operations, the exponents must be aligned or equal; if they are not aligned, the mantissa with the smaller exponent is shifted right until they are. Each shift to the right is accompanied by an increment of the exponent value. When the exponents are aligned or equal, the mantissa can be added or subtracted, whichever the case may be. The exponent value indicates the number of places the binary point is to be moved to obtain the actual representation of the number.

The example below shows the number 7_{10} added to the number 40_{10} , as is done in floating-point representation. Note that the exponents are first aligned and then the mantissas are added; the exponent value dictates the final location of the binary point.

Example:

$$\begin{array}{r}
 0.10 \overset{5}{\text{---}} 100 \overset{0}{\text{---}} 000 \quad 000 \quad 000 \quad 000 \quad \times 2^6 = 50_8 = 40_{10} \\
 0.11 \overset{7}{\text{---}} 100 \quad 000 \quad 000 \quad 000 \quad 000 \quad \times 2^3 = 7_8 = 7_{10}
 \end{array}$$

- a. To align exponents, shift mantissa with smaller exponent three places to the right, and increment exponent by 3.

$$\begin{array}{r}
 \phantom{40_{10}} \\
 0.10 \quad 100 \quad 7 \quad 000 \quad 000 \quad 000 \quad 000 \quad \times 2^6 = 50_8 = 40_{10} \\
 0.00 \quad 011 \quad 100 \quad 000 \quad 000 \quad 000 \quad 000 \quad \times 2^6 = 7_8 = 7_{10} \\
 \hline
 0.10 \quad 111 \quad 100 \quad 000 \quad 000 \quad 000 \quad 000 \quad \times 2^6 = 57_8 = 47_{10}
 \end{array}$$

- b. Move binary point six places to the right.

$$0.10 \overset{5}{\text{---}} 111 \overset{7}{\text{---}} 1.00 \quad 000 \quad 000 \quad 000$$

1.2.2 Floating-Point Multiplication and Division

For floating-point multiplication, the mantissas are multiplied and the exponents are added. For floating-point division, one mantissa is divided by the other and the exponents are subtracted. There is no requirement to align the binary point in multiplication or division.

The following example shows the number 7_{10} multiplied by the number 5_{10} . A 9-bit register is assumed for simplicity.

CHAPTER 2

FP15 FUNCTIONAL DESCRIPTION

2.1 INTRODUCTION

This chapter describes the simplified block diagram of the FP15, and its associated addresses and word formats.


2.2 FP15 SIMPLIFIED BLOCK DIAGRAM DISCUSSION

Figure 2-1 shows a simplified block diagram of the FP15 Floating-Point Processor. The FP15 is in parallel with the CPU on the memory bus, and monitors each instruction fetched by the CPU from core. If bits 00 through 05 of the instruction are equal to 71₈, it is recognized as a floating-point instruction; the CPU treats the instruction as an NOP. The FP15 takes control of memory, inhibits the CPU, and then simulates the CPU by completing the normal interface between CPU and memory. After the floating-point instruction has been executed, the CPU is enabled and both the CPU and FP15 are free to monitor the next instruction.

Functionally, the FP15 contains a memory buffer register and two operand registers. The memory buffer register provides temporary storage for all words transferred to the FP15. One operand register consists of an 18-bit exponent register (EPA), a 35-bit mantissa register (FMA), and a 1-bit sign register (A SIGN). This operand register is referred to as the floating-point accumulator. An additional 35-bit register designated the FMQ serves as an extension to the floating-point accumulator.

A second operand register consists of an 18-bit exponent register (EPB), a 35-bit mantissa register (FMB), and a 1-bit sign register (B SIGN). This second operand register, EPB/B SIGN/FMB, serves as a temporary accumulator to hold the argument fetched from core.

The exponent registers store the exponents associated with floating-point numbers and are not used during integer operations. Basically, if two numbers (integer or floating-point) are to be manipulated, one number is loaded in the floating-point accumulator by a Load type instruction. The second number is usually loaded in the temporary accumulator [EPB (B SIGN) FMB] by an instruction specifying an arithmetic operation. Both numbers are gated into a 36-bit adder, where the arithmetic operation is

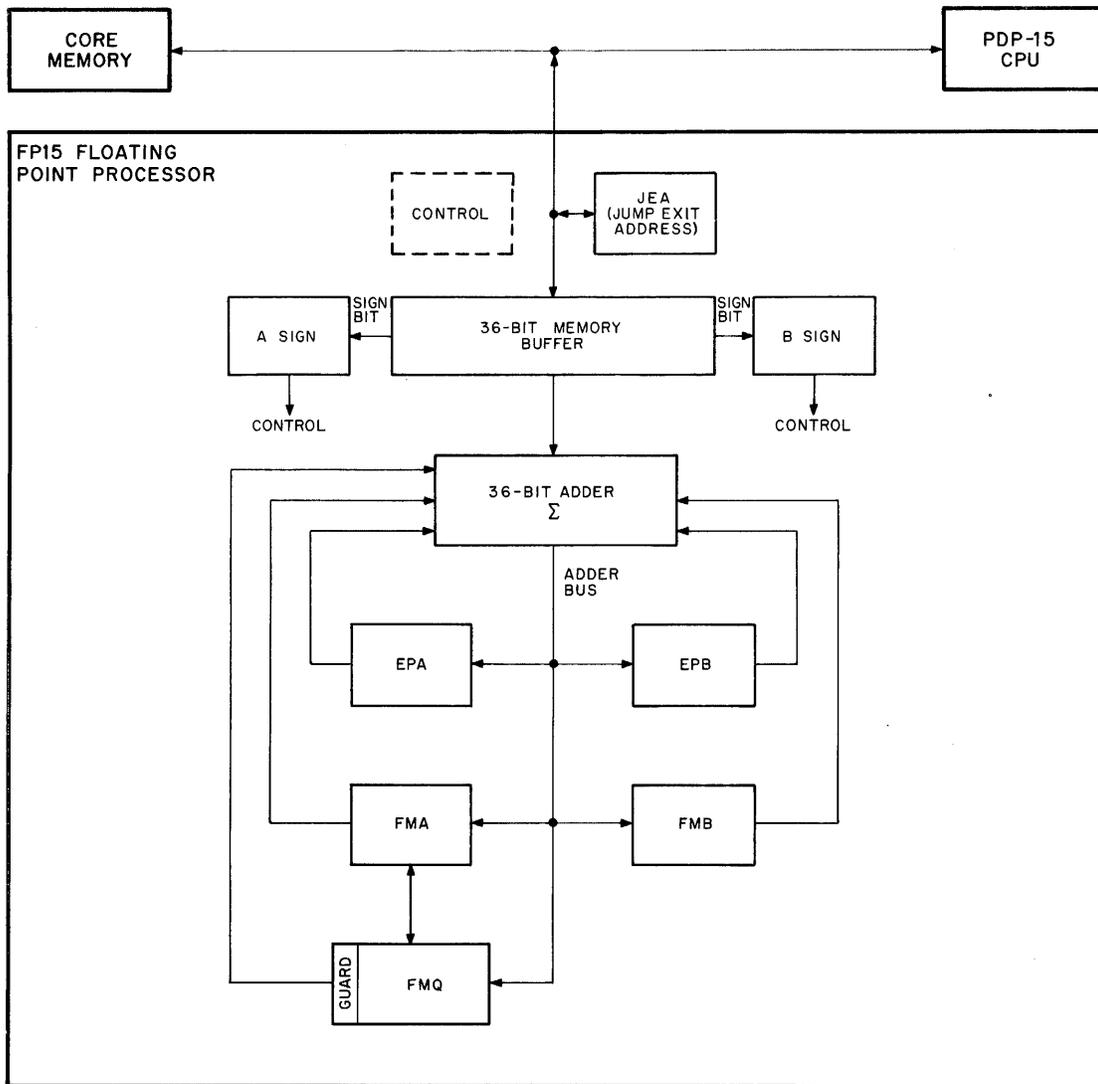

15-0550

Figure 2-1 FP15 Simplified Diagram

performed. The result is then transferred to the floating-point accumulator. The major registers are described below:

Memory Buffer Register - A 36-bit register which provides the FP15/memory interface. All data transferred into the FP pass through this register.

Adder - A 36-bit arithmetic logic unit (ALU) which serves as the central point in the FP15 and performs all arithmetic and logic operations. The output of the adder is connected to all major registers via an adder bus.

A SIGN - A 1-bit register used to store the polarity of the associated operand (A mantissa).

EPA - An 18-bit register used to store the 2's complement of the exponent associated with the mantissa loaded in the FMA. The most significant bit of the EPA represents the sign of the exponent; in single-precision floating arithmetic, the most significant bit of the exponent is bit 09. It is, therefore, necessary to extend the value of this bit from bits 00 through 08. If bit 09 is a 1, bits 00 through 08 in the EPA are forced to 1s, and if bit 09 is a 0, bits 00 through 08 in the EPA are forced to 0s. The EPA and FMA serve as the floating-point accumulator.

FMA - A 35-bit register used to store the integer in integer arithmetic, or the mantissa in floating-point arithmetic. The binary point is located between bit 00 and bit 01 of the FMA.


FMQ - A 35-bit extension of the FMA register used during multiplication and division operations.

B SIGN - A 1-bit register used to store the polarity of the associated operand (B mantissa).

EPB - An 18-bit register used to store the exponent associated with the mantissa in the FMB. The most significant bit of the EPB represents the sign of the exponent. In single-precision arithmetic, where the most significant bit in the EPB is bit 09, the value of this bit is extended to bits 00 through 08 (refer to EPA register). The EPB and FMB serve as a temporary accumulator to store the argument fetched from core. The EPB is a dynamic register, and is therefore not directly accessible by software.

FMB - A 35-bit register used to store the integer in integer arithmetic or the mantissa argument in floating-point arithmetic. The binary point is located between the most significant bit (bit 00) and bit 01 of the FMB. The FMB is a dynamic register and is therefore not directly accessible by software.


JEA (JMS Exit Address) - A 17-bit register used to store two status bits and a 15-bit base exit address for floating-point interrupts. When an interrupt condition (overflow, underflow, abnormal division, or memory protect violation) occurs in the FP15, the base exit address (a unique address for each type of interrupt) is returned. This indicates a service routine associated with the interrupt. The guard bit is used in rounding operations; for a more detailed description, refer to Paragraph 3.3 (Interrupt Handling).

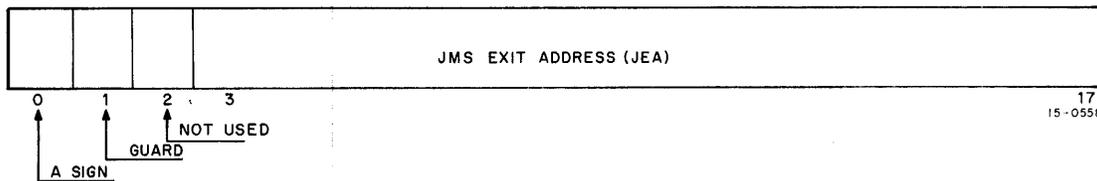

2.3 INSTRUCTION AND ADDRESS FORMATS


Floating-point instructions consist of two 18-bit words: an instruction word with a 71 code (see Figure 2-2), followed by an address word (see Figure 2-3). The instruction word specifies type of operation, type of precision, and data format. The address word specifies direct or indirect addressing and contains the address of the memory operand, if direct, or the address of a word containing the address of the memory operand, if indirect. Each instruction received from memory is monitored by both the FP15 and

CPU. An instruction with an octal code of 71 in bits 00 through 05 is recognized as a floating-point instruction.

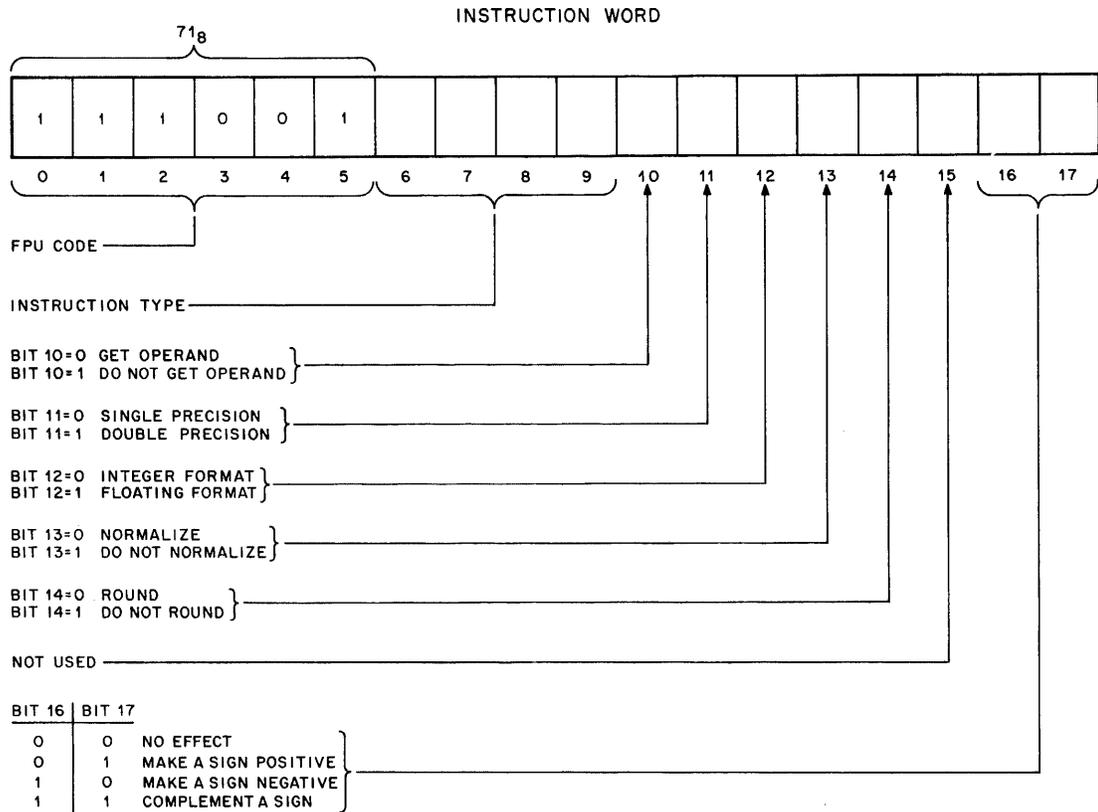

15-0562

Figure 2-2 Floating-Point Instruction Format

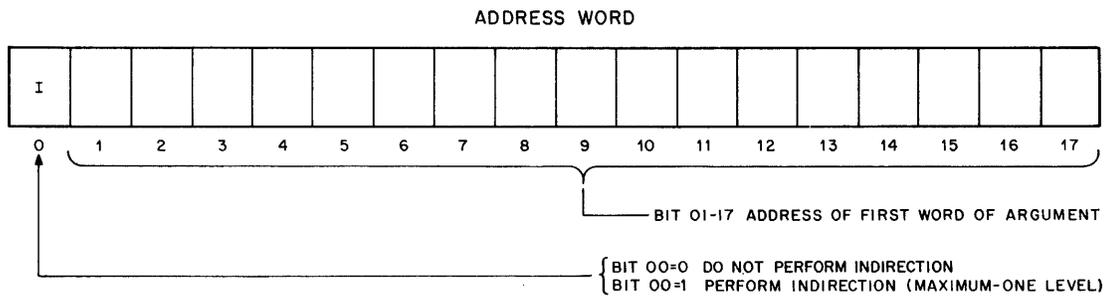

15-0551

Figure 2-3 Floating-Point Address Format

2.4 DATA FORMATS

The single- and double-precision floating point and single-precision integer data formats are identical to those in the existing PDP-15 floating-point software. Extended (double-precision) integer format is not presently supported by the PDP-15 software. The above formats are shown in Figures 2-4, 2-5, 2-6, and 2-7.

2.5 DATA TRANSFER TO FP15 FROM MEMORY - INTEGER FORMAT

For single-precision integer words, the 18-bit 2's complement operand is loaded from memory into bits 18 through 35 of the FMA. The value of bit 18 (sign bit) is loaded into the remaining bit positions (bits 17 through 00) to extend the sign bit.

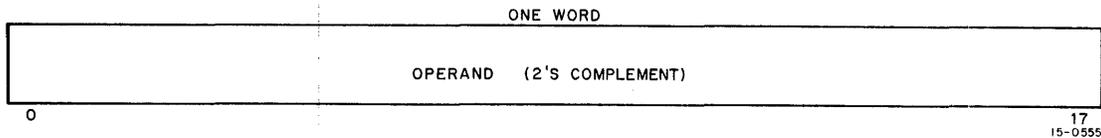


Figure 2-4 Single-Precision Integer Format

For extended integer words, the high-order operand from memory is loaded into bits 00 through 17 of the FMA, and the low-order operand is loaded into bits 18 through 35.

All integers loaded into the floating-point processor are converted to 36-bit sign and magnitude numbers.

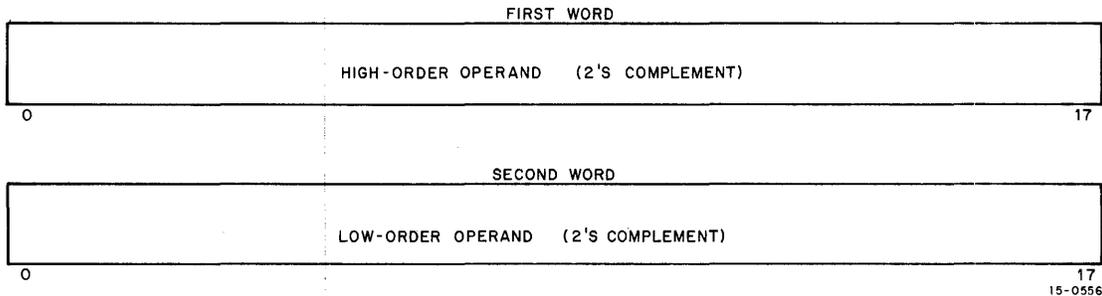


Figure 2-5 Extended Integer Format

2.6 DATA TRANSFER TO FP15 FROM MEMORY - FLOATING-POINT FORMAT

For single-precision floating-point words, the first word from memory consists of nine bits of low-order mantissa and nine bits of exponent. The nine bits of mantissa are loaded into bits 18 through 26 of the FMA, and bits 27 through 35 are zeroed. The nine bits of exponent in 2's complement form are loaded

into bits 09 through 17 of the EPA, with bit 09 representing the sign bit. The unloaded portion of the EPA register (bits 00 through 08) is loaded with the value of bit 09. If this bit is a 1, 1s are placed in bit positions 00 through 08, and if the bit is a 0, 0s are placed in bit positions 00 through 08. This extends the sign bit to bit positions 00 (the bit normally reserved for sign of the exponent value). The second word from memory is loaded into bits 00 through 17 of the FMA and represents the 18 bits of high-order mantissa. Figure 2-7 shows the loading of single-precision floating-point words from memory. The first word is 044022, and the second is 212346.

Note that the EPA and bits 18 through 26 of the FMA are loaded by the first word, and bits 00 through 17 of the FMA are loaded with the second word.

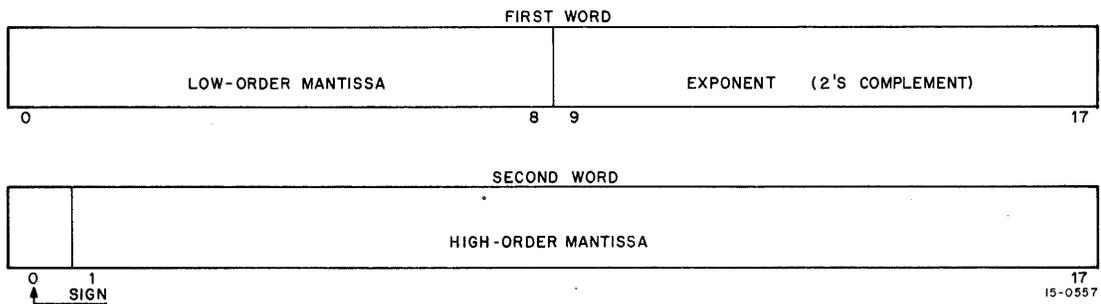


Figure 2-6 Single-Precision Floating-Point Format

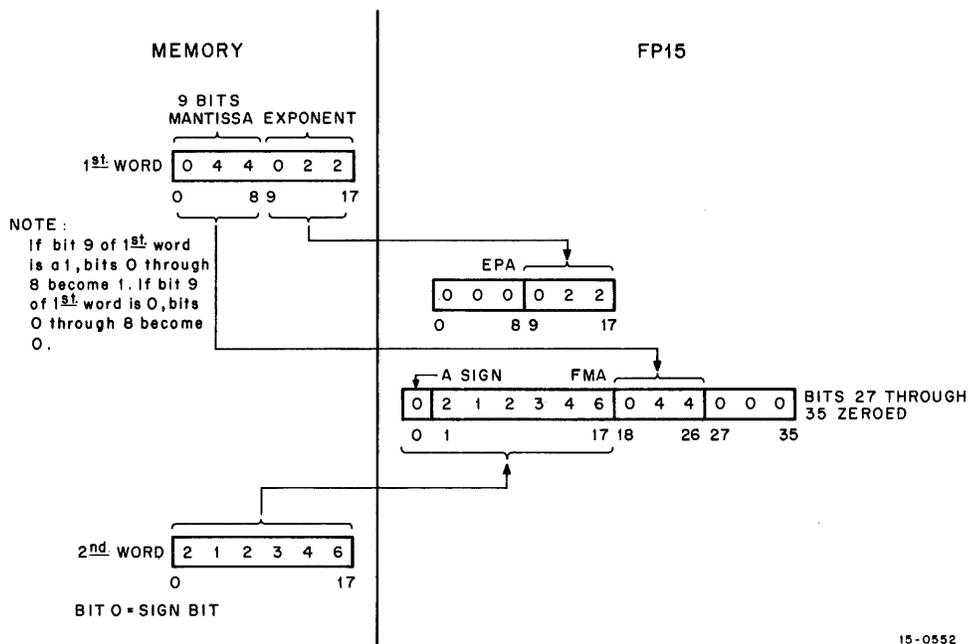


Figure 2-7 Loading of Single-Precision Floating Point

For double-precision floating-point words, the 18-bit 2's complement exponent is first loaded into the EPA, the 18-bit high-order mantissa is loaded into A SIGN and bits 01 through 17 of the FMA, and the low-order mantissa is loaded into bits 18 through 35 of the FMA. All 36 bits of the FMA are loaded at one time.

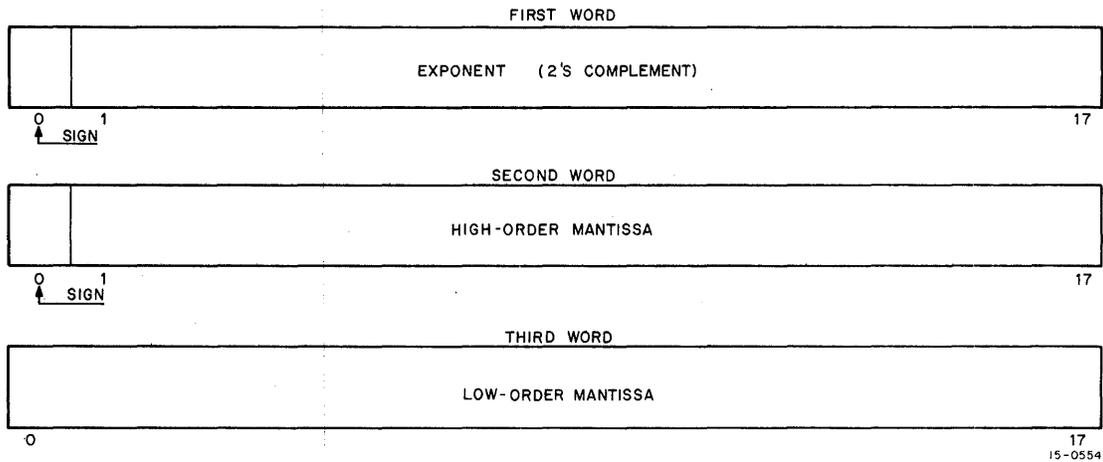


Figure 2-8 Double-Precision Floating-Point Format


CHAPTER 3

FP15 ARITHMETIC

3.1 INTRODUCTION

Negative integers are stored in memory as 2's complement numbers. Such operands are converted to sign and magnitude format when transferred to the FMA or FMB in the FP15. Load and reverse arithmetic instructions transfer operands to the FMA, while arithmetic instructions transfer operands to the FMB. Positive integers and floating-point numbers stored in memory require no conversion, as they are already in sign and magnitude format.

As an example of how negative integers are handled, consider the integer designated as negative 2. This number is stored in memory as 777776_8 . When transferred to the FMA, for example, the number is converted to 000002_8 with a negative sign (1), as shown in Figure 3-1.

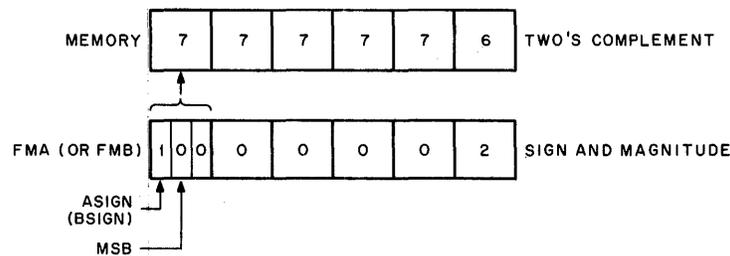

15-0559

Figure 3-1 Handling of Negative Integers

Negative integers in sign and magnitude format in the FP15 are converted to two's complement format prior to being stored in memory by a STORE instruction.

3.2 GUARD BIT AND ROUNDING

The FP15 has an internal guard bit that is used under certain conditions to determine whether the FMA is to be rounded. The guard bit is set independent of any request for rounding. When set, and rounding is requested, it adds +1 to the least significant bit of the FMA. The guard bit is cleared at the beginning of all instructions except Floating-Point Test, Load JEA, Store JEA, and Branch.

During alignment of the mantissas in floating-point addition and subtraction, bits shifted out of the FMA or FMB are shifted into the FMQ. If rounding is requested, and FMQ 01 is a 1, the mantissa that is being aligned is rounded. Further, if the addition or subtraction produced a carry out of the most significant stage of the adder, the adder is right-shifted and the exponent is incremented. This returns the true number to the FMA (see Figure 3-2). The least significant bit shifted out of the FMA is not shifted into the FMQ, but is shifted into a guard bit. If rounding is requested, and the guard bit is set, +1 is added to the least significant bit of the FMA.

For floating-point multiplication and division operations, the guard bit is set if FMQ 01 is on a 1. If rounding is requested, and the guard bit is set, +1 is added to the least significant bit of the FMA.

For a Fix instruction, the bits in the FMA and FMQ are right-shifted. If, upon completion of the shifting process, FMQ 01 is on a 1, the guard bit is set. If rounding is requested, and the guard bit is set, +1 is added to the least significant bit of the FMA.

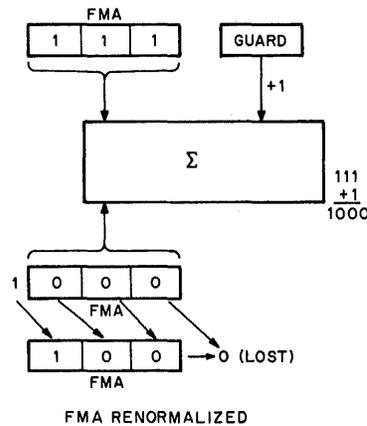


Figure 3-2 Handling of Guard Bit During Round Request

In single precision floating-point arithmetic, after numbers are loaded into the FP15 they are handled as double-precision numbers - 18-bits of exponent and 35-bits of mantissa. Due to this, +1 is added to bit 35 of the floating-point accumulator during arithmetic operations when rounding is performed. When rounding takes place in the single-precision floating STORE instruction, however, +1 is added to bit 26 of the FMA if bit 27 is a one. Bits 27-35 are then cleared.

3.3 INTERRUPT HANDLING

The FP15 can cause an interrupt under the following conditions:

Overflow - Occurs when the final magnitude of an arithmetic operation exceeds the maximum number that can be represented by the FP15. Overflow can occur with both integer and floating-point numbers.

Underflow - Occurs when the final magnitude of an arithmetic operation is less than the minimum number which can be represented by the FP15. Underflow applies to floating-point numbers only.

Abnormal Divide - Occurs when division by an unnormalized operand is attempted on either integer or floating-point numbers (0 represents a special case of the unnormalized operand).

Memory Protect Trap - Occurs when the system is in user mode and a memory protect violation or non-existent memory reference has been made by the FPU.

Prior to starting FP15 floating-point operation, the 15-bit JEA register is loaded with an address representing a core location to which the FP15 can exit when a particular error condition (overflow, underflow, abnormal divide, or memory protect trap) is detected. When one of these conditions is detected, the FP15 forces the CPU to execute a JMS to a location specified by the JEA plus a fixed constant, N. This location is the entry point to a specific routine associated with the error condition. If the interrupt exception is overflow, the CPU will execute a JMS to the JEA address; if the exception is underflow, the CPU will execute a JMS to the JEA address +2; if abnormal divide, the CPU will execute a JMS to the JEA +4; and if memory protect trap, the CPU will execute a JMS to the JEA address +6. The JEA is a 15-bit register which holds the exit address as follows:

| | | |
|--------------|----------|-------------------------|
| EXIT ADDRESS | 0 | |
| +1 | JMP OVR | /GO TO OVERFLOW |
| +2 | 0 | |
| +3 | JMP UND | /GO TO UNDERFLOW |
| +4 | 0 | |
| +5 | JMP DIV | /GO TO DIVIDE |
| +6 | 0 | |
| +7 | JMP TRAP | /GO TO MEMORY VIOLATION |

NOTE

To determine the data mode on an interrupt exception, it is necessary to examine the instruction that was being executed. The address which was stored, due to the JMS instruction, is equal to the location of the original instruction +3.

3.3.1 Memory Protect Trap

When a memory protect violation occurs during a floating-point instruction, the FP15 forces the CPU to execute a JMS to the location specified by JEA +6 (as previously described), no trap will occur, user mode will remain on, and no modification of core above or below the boundary will occur.

An example of this is shown below, where, upon occurrence of a memory protect violation, a JMS to location JEA +6 occurs and the PC points to A+3.

Example:

| | | | |
|-----|----------|-------------|----------------|
| | 1000 DAC | LOC (JEA+6) | 1004 |
| A | 1001 DAD | +7 | JMP MP Service |
| A+1 | 1002 400 | | |
| A+2 | 1003 | | |
| A+3 | 1004 | | |

An exception to the above occurs if the JEA points to an address above or below the protect boundaries and a floating-point memory violation occurs. In this case, the CPU will trap and service the attempted boundary violation, and the PC will point to A+3.

CHAPTER 4

INSTRUCTION SET

4.1 INTRODUCTION

Table 4-1 is a summary of all FP15 Floating-Point instructions by categories. Following this table is a description of the FP15 instruction set. The mnemonic, instruction type, execution time, and octal code are provided for each instruction, followed by a general description of its operation. The instructions which can cause interrupt exceptions (underflow, overflow, abnormal division, or memory trap) are specified. Section 4.3 discusses worst-case timing.

The XCT of any FP15 instruction is permissible, and the address associated with the FP15 instruction is contained in the location following the XCT. The EXEC switch will not execute a FP15 instruction; a NOP will occur. SING TIME, SING STEP, or SING INST switches will not stop the execution of a FP15 instruction.

The instruction modifiers, formats, and operations of the FP15 instruction set are designated by the following characters:

MODIFIERS

- UR - unrounded
- UN - unnormalized
- UU - unrounded and unnormalized

FORMATS

- I - single precision integer
- E - extended (double-precision) integer
- F - single-precision floating point
- D - double-precision floating point

OPERATIONS

- AD - Add
- SB - Subtract
- RS - Reverse Subtract
- MP - Multiply
- DV - Divide
- RD - Reverse Divide
- ST - Store
- LF - Load and Float
- LD - Load

OPERATIONS (Cont)

- FL - Float
- LX - Load and Fix
- FX - Fix
- LQ - Load FMQ
- SWQ - Swap

Generally, the FP15 instructions are in the following format:



For example, if an unrounded, unnormalized, double-precision floating point Add instruction is specified, the mnemonic is specified as UUDAD; where the UU is the modifier, D is the format, and AD is the operation. Modify FMA instructions, branch instructions, and diagnostic instructions do not follow this general pattern.

All the FP15 instructions (except Floating-Point Test, Branch, Load or Store JEA, and diagnostic instructions) can be microprogrammed with bits 16 and 17 of the instruction word as described below:

| Bit 16 | Bit 17 | | |
|--------|--------|----------------------|---|
| 0 | 0 | No effect | } |
| 0 | 1 | Make A SIGN positive | |
| 1 | 0 | Make A SIGN negative | |
| 1 | 1 | Complement A SIGN | |

Not used in FP test, Load or Store JEA, Branch on condition, and diagnostic instructions.

For example, the instruction 710540 specifies double-precision floating-point subtraction. If desired to make A SIGN negative, the instruction would be specified as 710542.

Table 4-1
FP15 Instruction Summary

| Mnemonic | Instruction Type | Octal Code |
|----------|--|------------|
| FPT | Floating-Point Test | 710314 |
| ISB | Single Integer Subtract | 710400 |
| ESB | Extended Integer Subtract | 710500 |
| FSB | Single-Precision Float Subtract | 710440 |
| URFSB | Unrounded, Single-Precision Float Subtract | 710450 |
| UNFSB | Unnormalized, Single-Precision Float Subtract | 710460 |
| UUFBS | Unrounded, Unnormalized, Single-Precision Float Subtract | 710470 |

Table 4-1 (Cont)
FP15 Instruction Summary

| Mnemonic | Instruction Type | Octal Code |
|----------|--|------------|
| DSB | Double-Precision Float Subtract | 710540 |
| URDSB | Unrounded, Double-Precision, Float Subtract | 710550 |
| UNDSB | Unnormalized, Double-Precision Float Subtract | 710560 |
| UUDSB | Unrounded, Unnormalized, Double-Precision Float Subtract | 710570 |
| IRS | Single Integer Reverse Subtract | 711000 |
| ERS | Extended Integer Reverse Subtract | 711100 |
| FRS | Single-Precision Float Reverse Subtract | 711040 |
| URFRS | Unrounded, Single-Precision Float Reverse Subtract | 711050 |
| UNFRS | Unnormalized, Single-Precision Float Reverse Subtract | 711060 |
| UUFRS | Unrounded, Unnormalized, Single-Precision Float Reverse Subtract | 711070 |
| DRS | Double-Precision Float Reverse Subtract | 711140 |
| URDRS | Unrounded, Double-Precision Float Reverse Subtract | 711150 |
| UNDRS | Unnormalized, Double-Precision Float Reverse Subtract | 711160 |
| UUDRS | Unrounded, Unnormalized, Double-Precision Float Reverse Subtract | 711170 |
| IMP | Single Integer Multiply | 711400 |
| EMP | Extended Integer Multiply | 711500 |
| FMP | Single-Precision Float Multiply | 711440 |
| URFMP | Unrounded, Single-Precision Float Multiply | 711450 |
| UNFMP | Unnormalized, Single-Precision Float Multiply | 711460 |
| UUFMP | Unrounded, Unnormalized, Single-Precision Float Multiply | 711470 |
| DMP | Double-Precision Float Multiply | 711540 |
| URDMP | Unrounded, Double-Precision Float Multiply | 711550 |
| UNDMP | Unnormalized, Double-Precision Float Multiply | 711560 |
| UUDMP | Unrounded, Unnormalized, Double-Precision Float Multiply | 711570 |
| IDV | Single-Precision Integer Divide | 712000 |
| EDV | Extended Integer Divide | 712100 |
| FDV | Single-Precision Float Divide | 712040 |
| URFDV | Unrounded, Single-Precision Float Divide | 712050 |
| DDV | Double-Precision Float Divide | 712140 |
| URDDV | Unrounded, Double-Precision Float Divide | 712150 |
| IRD | Single-Precision Integer Reverse Divide | 712400 |

Table 4-1 (Cont)
FP15 Instruction Summary

| Mnemonic | Instruction Type | Octal Code |
|----------|---|------------|
| ERD | Extended Integer Reverse Divide | 712500 |
| FRD | Single-Precision Float Reverse Divide | 712440 |
| URFRD | Unrounded, Single-Precision Float Reverse Divide | 712450 |
| DRD | Double-Precision Float Reverse Divide | 712540 |
| URDRD | Unrounded, Double-Precision Float Reverse Divide | 712550 |
| ILD | Single-Precision Integer Load | 713000 |
| ELD | Extended Integer Load | 713100 |
| FLD | Single-Precision Float Load | 713050 |
| UNFLD | Unnormalized, Single-Precision Float Load | 713070 |
| DLD | Double-Precision Float Load | 713150 |
| UNDLD | Unnormalized, Double-Precision Float Load | 713170 |
| IST | Single-Precision Integer Store | 713600 |
| EST | Extended Integer Store | 713700 |
| FST | Single-Precision Float Store | 713640 |
| URFST | Unrounded, Single-Precision Float Store | 713650 |
| UNFST | Unnormalized, Single-Precision Float Store | 713660 |
| UUFST | Unrounded, Unnormalized, Single-Precision Float Store | 713670 |
| DST | Double-Precision Float Store | 713750 |
| UNDST | Unnormalized, Double-Precision Float Store | 713770 |
| ILF | Single-Precision Integer Load and Float | 714010 |
| UNILF | Unnormalized, Single-Precision Integer Load and Float | 714030 |
| ELF | Extended Integer Load and Float | 714110 |
| UNELF | Unnormalized, Extended Integer Load and Float | 714130 |
| FLA | Float FMA | 714210 |
| UNFLA | Unnormalized Float FMA | 714230 |
| FLX | Single-Precision Float Load and Fix | 714460 |
| URFLX | Unrounded, Single-Precision Float Load and Fix | 714470 |
| DLX | Double-Precision Float Load and Fix | 714560 |
| URDLX | Unrounded, Double-Precision Float Load and Fix | 714570 |
| FXA | Fix EPA, FMA | 714660 |
| URFXA | Unrounded, Fix EPA, FMA | 714670 |
| ILQ | Single-Precision Integer Load FMQ | 715000 |

Table 4-1 (Cont)
FP15 Instruction Summary

| Mnemonic | Instruction Type | Octal Code |
|----------|---|------------|
| ELQ | Extended Integer Load FMQ | 715100 |
| FLQ | Single-Precision Float Load FMQ | 715050 |
| UNFLQ | Unnormalized, Single-Precision Float FMQ | 715070 |
| DLQ | Double-Precision Float Load FMQ | 715150 |
| UNDLQ | Unnormalized, Double-Precision Float Load FMQ | 715170 |
| SWQ | Swap FMA and FMQ | 715250 |
| UNSWQ | Unnormalized, Swap FMA and FMQ | 715270 |
| LJE | Load JEA Register | 715400 |
| SJE | Store JEA Register | 715600 |
| IAD | Single-Precision Integer Add | 716000 |
| EAD | Extended Integer Add | 716100 |
| FAD | Single-Precision Float Add | 716040 |
| URFAD | Unrounded, Single-Precision Float Add | 716050 |
| UNFAD | Unnormalized, Single-Precision Float Add | 716060 |
| UUFAD | Unrounded, Unnormalized, Single-Precision Float Add | 716070 |
| DAD | Double-Precision Float Add | 716140 |
| URDAD | Unrounded, Double-Precision Float Add | 716150 |
| UNDAD | Unnormalized, Double-Precision Float Add | 716160 |
| UUDAD | Unrounded, Unnormalized, Double-Precision Float Add | 716170 |
| BZA | Branch on 0 FMA | 716601 |
| BMA | Branch on Minus FMA | 716602 |
| BLE | Branch if FMA ≤ 0 | 716603 |
| BPA | Branch on positive FMA | 716604 |
| BRU | Branch Unconditional | 716606 |
| BNA | Branch on non-zero FMA | 716610 |
| BAC | Branch if GUARD bit is Set | 716620 |
| FZR | Zero EPA (A SIGN) FMA | 711200 |
| FAB | Make A SIGN positive (Absolute Value) | 713271 |
| FNG | Make A SIGN negative | 713272 |
| FCM | Complement A SIGN | 713273 |
| FNM | Normalize EPA (A SIGN) FMA | 713250 |
| DMF | Diagnostic Mode Off | 717200 |

Table 4-1 (Cont)
FP15 Instruction Summary

| Mnemonic | Instruction Type | Octal Code |
|----------|------------------------------------|------------|
| DMN | Diagnostic Mode On | 717300 |
| DRR | Diagnostic Read Registers | 710000 |
| DSR | Diagnostic Step and Read Registers | 710100+n |
| DBK | Debreak | 703304 |

4.2 FPU INSTRUCTION SET

4.2.1 Integer Subtract

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|---------------------------|---------------------------------|-------------------|
| ISB | Single Integer Subtract | 6.2 | 710400 |
| ESB | Extended Integer Subtract | 7.3 | 710500 |

The argument is transferred from memory to the (B SIGN) FMB. The content of (B SIGN) FMB is subtracted from the content of (A SIGN) FMA, and the difference is placed in (A SIGN) FMA. If the difference is 0, EPA and A SIGN are zeroed. The FMQ is zeroed at the beginning of the instruction.

Interrupt Exception: Overflow - An overflow interrupt will occur if the subtraction generates a magnitude greater than $2^{35} - 1$. The result left in the FMA is modulo 2^{35} . The A SIGN is the sign of the result, as if no overflow occurred.

Example (DBL Precision):

| | | | |
|--------------------|------------------|--------------------------------|-----------------------------------|
| | A SIGN (1) FMA = | 3 7 7 7 7 7 7 7 7 7 7 7 | |
| | B SIGN (0) FMB = | 0 0 0 0 0 0 0 0 0 0 0 7 | |
| RESULT | A SIGN (1) | <u>4 0 0 0 0 0 0 0 0 0 0 6</u> | |
| RESULT LEFT IN FMA | | 0 0 0 0 0 0 0 0 0 0 0 6 | followed by overflow interrupt |

4.2.2 Floating-Point Subtract

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|---------------------------------------|---------------------------------|-------------------|
| FSB | Sng. Float Subtract | 8.4 | 710440 |
| URFSB | Unround, Sng. Float Subtract | 8.4 | 710450 |
| UNFSB | Unnorm., Sng. Float Subtract | 8.3 | 710460 |
| UUFSB | Unround, Unnorm., Sng. Float Subtract | 8.3 | 710470 |
| DSB | Dbl. Float Subtract | 11.2 | 710540 |
| URDSB | Unround, Dbl. Float Subtract | 11.2 | 710550 |
| UNDSB | Unnorm., Dbl. Float Subtract | 11.2 | 710560 |
| UUDSB | Unround, Unnorm., Dbl. Float Subtract | 11.2 | 710570 |

The argument is transferred to EPB (B SIGN) FMB [exponent to EPB and mantissa to (B SIGN) FMB]. The mantissas in the FMA and FMB are aligned by finding the difference between the EPA and EPB, and right-shifting the mantissa with the smaller exponent until the number of shifts equals the exponent difference. Bits shifted out of the mantissa with the smaller exponent are shifted into the FMQ, which is cleared at the beginning of the instruction. The bits shifted into the FMQ are retained there. When the mantissas are aligned, the FMB mantissa (fraction) is subtracted from the FMA mantissa and the difference placed in (A SIGN) FMA. If a carry occurs out of the most significant bit of the FMA, the difference is shifted right one place and the exponent incremented by 1. The least significant bit (LSB) of the FMA is not shifted into the FMQ but into a guard bit to be saved for rounding (see Paragraph 3.2).

Rounding - Rounding can occur at two times: once after the align, and then after the subtract. After the align, if rounding is requested and FMQ 01 is a 1, +1 is added to the least significant bit of the FMA (bit 35). After the subtract, if rounding is requested and the guard bit is set, +1 is added to the least significant bit of the FMA (bit 35).

Normalizing - If the most significant bit of the FMA is not a 1 after the subtract and normalize is requested, the FMA is shifted left until the most significant bit (MSB) contains a 1 (up to a maximum of 35 shifts). The FMA is a 35-bit register and, if a number contained therein is shifted more than 35 times and is still not normalized, that number was equal to 0 and cannot be normalized (0s are shifted into the least significant positions of the FMA). For each left shift, the exponent is decremented by 1.

Interrupt Exception: Underflow - If the exponent of the result is less than $400000_8 (-2^{17})$, it cannot be correctly represented in the EPA, and an underflow interrupt exception occurs. The contents of the (A SIGN) FMA are correct. The correct exponent is $-2^{18} + \text{EPA}$.

Interrupt Exception: Overflow - If the exponent of the result is greater than $377777_8 (2^{17} - 1)$, it cannot be represented correctly in the EPA and an overflow interrupt exception occurs. The contents of A SIGN (FMA) are correct; the correct exponent is $2^{18} + \text{EPA}$.

4.2.3 Integer Reverse Subtract

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------------|---------------------------------|-------------------|
| IRS | Sng. Integer Reverse Subtract | 6.2 | 711000 |
| ERS | Ext. Integer Reverse Subtract | 7.3 | 711100 |

The argument is transferred from memory to the FMB. The contents of the FMA are subtracted from the argument in the FMB and the difference is placed in the FMA. If the difference is 0, EPA and A SIGN are zeroed. The contents of the FMQ are zeroed at the beginning of the instruction.

Interrupt Exception: Overflow - An overflow interrupt will occur if the subtraction generates a magnitude greater than $2^{35} - 1$. The result left in the FMA is modulo 2^{35} . The A SIGN is the sign of the result, as if no overflow occurred.

4.2.4 Floating Point Reverse Subtract

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|---|---------------------------------|-------------------|
| FRS | Sng. Float Reverse Subtract | 8.6 | 711040 |
| URFRS | Unround, Sng. Float. Reverse Subtract | 8.6 | 711050 |
| UNFRS | Unnorm., Sng. Float Reverse Subtract | 8.5 | 711060 |
| UUFRS | Unround, Unnorm., Sng. Float Reverse Subtract | 8.5 | 711070 |
| DRS | Dbl. Float Reverse Subtract | 11.6 | 711140 |
| URDRS | Unround, Dbl. Float Reverse Subtract | 11.6 | 711150 |
| UNDRS | Unnorm., Dbl. Float Reverse Subtract | 11.2 | 711160 |
| UUDRS | Unround, Unnorm., Dbl. Float Reverse Subtract | 11.2 | 711170 |

The argument is transferred to EPB (B SIGN) FMB [exponent to EPB and mantissa to (B SIGN) FMB]. The mantissas in the FMA and FMB are aligned by finding the difference between the EPA and EPB and right-shifting the mantissa with the smaller exponent until the number of shifts equal the exponent difference. Bits shifted out of the mantissa with the smaller exponent are shifted into the FMQ, which is cleared at the beginning of the instruction. The bits shifted into the FMQ are retained. When the

mantissas are aligned, the FMA mantissa (fraction) is subtracted from the FMB mantissa and the difference placed in (A SIGN) FMA. If a carry occurs out of the most significant bit of the FMA, the difference is shifted right one place and the exponent incremented by 1. The LSB of the FMA is not shifted into the FMQ, but into the guard bit to be saved for rounding (see Paragraph 3.2).

Rounding - Rounding can occur at two times: once after the align, and then after the subtract. After the align, if rounding is requested and FMQ 01 is a 1, +1 is added to the least significant bit of the FMA (bit 35). After the subtract, if rounding is requested and the guard bit is set, +1 is added to the least significant bit of the FMA (bit 35).

Normalizing - If the most significant bit of the FMA is not a 1 after the subtract and normalize is requested, the FMA is shifted left (up to a maximum of 35 shifts) until the MSB contains a 1. Zeros are shifted into the least significant positions of the FMA. For each left shift, the exponent is decremented by 1.

Interrupt Exception: Underflow - If the exponent of the result is less than $400000_8 (-2^{17})$, it cannot be correctly represented in the EPA and an underflow interrupt exception occurs. The contents of the A SIGN (FMA) are correct; the correct exponent is $-2^{18} + \text{EPA}$.

Interrupt Exception: Overflow - If the exponent of the result is greater than $377777_8 (2^{17} - 1)$, it cannot be correctly represented in the EPA, and an overflow interrupt exception occurs. The contents of A SIGN (FMA) are correct; the correct exponent is $2^{18} + \text{EPA}$.

4.2.5 Integer Multiply

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|--|-------------------|
| IMP | Sng. Integer Multiply | 14.1 | 711400 |
| EMP | Ext. Integer Multiply | 17.0 | 711500 |

The multiplicand argument is transferred to the (B SIGN) FMB. The multiplier is contained in the (A SIGN) FMA. The product is retained in the (A SIGN) FMA and FMQ with the low-order bits in the FMA (the former contents of the FMQ are lost). The FMQ can be accessed through the Load FMQ instruction.

Interrupt Exception: Overflow - An overflow interrupt exception occurs if the magnitude of the product is greater than $2^{35} - 1$; that is, if any of the high-order 35-bits of the product are in 1s. The A SIGN is the sign of the result, as if no overflow occurred.

4.2.6 Floating Point Multiply

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|---------------------------------------|---------------------------------|-------------------|
| FMP | Sng. Float Multiply | 16.6 | 711440 |
| URFMP | Unround, Sng. Float Multiply | 16.6 | 711450 |
| UNFMP | Unnorm., Sng. Float Multiply | 16.2 | 711460 |
| UUFMP | Unround, Unnorm., Sng. Float Multiply | 16.2 | 711470 |
| DMP | Dbl. Float Multiply | 18.6 | 711540 |
| URDMP | Unround, Dbl. Float Multiply | 18.6 | 711550 |
| UNDMP | Unnorm., Dbl. Float Multiply | 18.2 | 711560 |
| UUDMP | Unround, Unnorm., Dbl. Float Multiply | 18.2 | 711570 |

The multiplicand is transferred to the EPB (B SIGN) FMB, and the multiplier is contained in the EPA (A SIGN) FMA. The product is retained in the EPA (A SIGN) FMA and FMQ; the former contents of the FMQ are lost. The FMA retains the high-order bits, and the FMQ retains the low-order bits. For multiplication, the EPA and EPB are added together, with the sum retained in the EPA.

Rounding - If rounding is requested and the most significant bit of the FMQ is a 1, the guard bit is set (see Paragraph 3.2) and +1 is added to the least significant bit of the FMA. If this addition produces a carry out of the most significant bit of the FMA, the FMA is right-shifted by 1 and the EPA is incremented by 1.

Normalizing - If the most significant bit of the FMA is not a 1 and normalize is requested, the FMA and FMQ are shifted left as one 70-bit register until the most significant bit of the FMA is a 1, not to exceed a maximum of 35 shifts. For each left shift, the EPA is decremented.

Interrupt Exception: Underflow - If the exponent of the result is less than $400000_8 (-2^{17})$, it cannot be correctly represented in the EPA and an underflow interrupt exception occurs. The contents of the A SIGN (FMA) are correct; the correct exponent is $-2^{18} + \text{EPA}$.

Interrupt Exception: Overflow - If the exponent of the result is greater than $377777_8 (2^{17} - 1)$, it cannot be correctly represented in the EPA, and an overflow interrupt exception occurs. The contents of A SIGN (FMA) are correct; the correct exponent is $2^{18} + \text{EPA}$.

4.2.7 Integer Divide

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|---------------------------------|-------------------|
| IDV | Sng. Integer Divide | 11.8 | 712000 |
| EDV | Ext. Integer Divide | 14.4 | 712100 |

The divisor argument is transferred to the (B SIGN) FMB, and the dividend is contained in the (A SIGN) FMA. The quotient is retained in the (A SIGN) FMA and the remainder is left in the FMQ, replacing the previous contents of the FMQ. Integer division is whole number division; if the dividend is less than the divisor, indicating a fractional number, the quotient is 0.

Interrupt Exception: Abnormal Divide - If the divisor is 0, an abnormal interrupt exception occurs because division by 0 is not possible. Execution of the Divide instruction is aborted immediately; the programmer cannot rely on the contents of the registers after the instruction is aborted.

4.2.8 Floating Point Divide

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|----------------------------|---------------------------------|-------------------|
| FDV | Sng. Float Divide | 15.6 | 712040 |
| URFDV | Unround, Sng. Float Divide | 15.6 | 712050 |
| DDV | Dbl. Float Divide | 18.3 | 712140 |
| URDDV | Unround, Dbl. Float Divide | 18.3 | 712150 |

The divisor argument is transferred to the EPB (B SIGN) FMB and is divided into the dividend in the EPA (A SIGN) FMA. The dividend is normalized prior to the actual divide. The 35-bit quotient is normalized and is retained in the FMA. The previous contents of the FMQ is lost and the remainder is retained in this register.

Normalize - For floating-point division, the dividend is normalized. The quotient is left in normalized form.

Rounding - If rounding is requested, and the most significant bit of the FMQ is a 1, the guard bit is set and +1 is added to FMA bit 35. If this addition produces a carry into the MSB of the FMA, the FMA is right-shifted one place and the EPA incremented by 1.

Interrupt Exception: Underflow - If the exponent of the result is less than 400000_8 (-2^{17}), it cannot be correctly represented in the EPA and an underflow interrupt exception occurs. The contents of the A SIGN (FMA) are correct. The FMQ retains the remainder, and the correct exponent is $-2^{18} + \text{EPA}$.

Interrupt Exception: Abnormal Divide - If the divisor is unnormalized (or 0) an abnormal divide interrupt exception occurs. Execution of the Divide instruction is aborted immediately. The programmer cannot rely on the contents of the registers after the instruction is aborted.

Interrupt Exception: Overflow - If the exponent of the result is greater than 377777_8 ($2^{17} - 1$), it cannot be correctly represented in the EPA and an overflow interrupt exception occurs. The contents of A SIGN (FMA) are correct. The FMQ retains the remainder; the correct exponent is $2^{18} + \text{EPA}$.

4.2.9 Integer Reverse Divide

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-----------------------------|--|-------------------|
| IRD | Sng. Integer Reverse Divide | 11.8 | 712400 |
| ERD | Ext. Integer Reverse Divide | 14.4 | 712500 |

The dividend argument is transferred to the (B SIGN) FMB and is divided by the contents of (A SIGN) FMA. The quotient is retained in the (A SIGN) FMA. The previous contents of the FMQ is lost and the remainder is left in this register. Integer division is whole number division; if the dividend is less than the divisor, indicating a fractional number, the quotient is 0.

Interrupt Exception: Abnormal Divide - If the divisor is 0, an abnormal divide interrupt exception occurs because division by 0 is not possible. Execution of the Divide instruction is aborted immediately; the programmer cannot rely on the contents of the registers after the instruction is aborted.

4.2.10 Floating Point Reverse Divide

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|------------------------------------|--|-------------------|
| FRD | Sng. Float Reverse Divide | 15.6 | 712440 |
| URFRD | Unround, Sng. Float Reverse Divide | 15.6 | 712450 |
| DRD | Dbl. Float Reverse Divide | 18.3 | 712540 |
| URDRD | Unround, Dbl. Float Reverse Divide | 18.3 | 712550 |

The dividend argument is transferred to the EPB (B SIGN) FMB and is divided by the divisor contained in EPA (A SIGN) FMA. The dividend is normalized prior to the actual divide. The 35-bit quotient is automatically normalized and is retained in the FMA. The previous contents of the FMQ are lost and the remainder is retained in this register. For floating-point reverse division, the dividend and divisor are normalized. If rounding is requested, and the most significant bit of the FMQ is a 1, the guard bit is set (see Paragraph 3.2) and +1 is added to FMA bit 35. If this addition produces a carry into the MSB of the FMA, the FMA is right-shifted one place and the EPA incremented by 1.

Interrupt Exception: Underflow - If the exponent of the result is less than $400000_8 (-2^{17})$, it cannot be correctly represented in the EPA and an underflow interrupt exception occurs. The contents of the A SIGN (FMA) are correct; the correct exponent is $-2^{18} + \text{EPA}$.

Interrupt Exception: Abnormal Divide - If the divisor is unnormalized (or 0), an abnormal divide interrupt exception occurs. Execution of the Divide instruction is aborted immediately. The programmer cannot rely on the contents of the registers after the instruction is aborted.

Interrupt Exception: Overflow - If the exponent of the result is greater than $377777_8 (2^{17} - 1)$, it cannot be correctly represented in the EPA and an overflow interrupt exception occurs. The contents of A SIGN (FMA) are correct; the correct exponent is $2^{18} + \text{EPA}$.

4.2.11 Integer Load

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|--|-------------------|
| ILD | Sng. Integer Load | 6.6 | 713000 |
| ELD | Ext. Integer Load | 7.8 | 713100 |

The argument is transferred from memory to the (A SIGN) FMA. The contents of the FMQ remain unchanged.

4.2.12 Floating Point Load

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|--------------------------|--|-------------------|
| FLD | Sng. Float Load | 8.3 | 713050 |
| UNFLD | Unnorm., Sng. Float Load | 7.9 | 713070 |
| DLD | Dbl. Float Load | 9.5 | 713150 |
| UNDL D | Unnorm., Dbl. Float Load | 9.3 | 713170 |

The argument is transferred from memory to the EPA (A SIGN) FMA. The contents of the FMQ remain unchanged.

Normalize - If the most significant bit of the FMA is not a 1 and normalize is requested, the FMA is shifted left (up to a maximum of 35 shifts) until the most significant bit is a 1. 0s are shifted into the least significant positions of the FMA. For each left shift, the EPA is decremented.

Interrupt Exception: Underflow - If the exponent of the result due to normalizing is less than 400000_8 (-2^{17}), it cannot be correctly represented in the EPA and an underflow interrupt exception occurs. The contents of the A SIGN (FMA) are correct; the correct exponent is $-2^{18} + \text{EPA}$.

4.2.13 Integer Store

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|---------------------------------|-------------------|
| IST | Sng. Integer Store | 6.6 | 713600 |
| EST | Ext. Integer Store | 7.8 | 713700 |

The FMA is stored in the location specified by the argument address. For single-precision integer format, the A SIGN and bits 19 through 35 of the FMA are stored in 2's complement format at the argument address.

For extended-precision integer format, the first word consists of A SIGN and bits 01 through 17 of the FMA; the second word consists of bits 18 through 35 of the FMA. Both words are stored in 2's complement format, starting at the argument address. No interrupt exceptions occur during extended integer store; the contents of the FMQ remain unchanged.

Interrupt Exception: Overflow (Single Precision) - If the magnitude of the number in the FMA is greater than 377777_8 ($2^{17} - 1$), an overflow interrupt exception occurs. The STORE instruction is aborted prior to the write into memory. The (A SIGN) FMA and contents of the FMQ remain unchanged.

4.2.14 Floating Point Store

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|---------------------------|---------------------------------|-------------------|
| FST | Sng. Float Store | 7.9 | 713640 |
| URFST | Unround, Sng. Float Store | 7.9 | 713650 |
| UNFST | Unnorm., Sng. Float Store | 7.7 | 713660 |

(Continued on next page)

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|------------------------------------|---------------------------------|-------------------|
| UUFST | Unround, Unnorm., Sng. Float Store | 7.7 | 713670 |
| DST | Dbl. Float Store | 9.1 | 713750 |
| UNDST | Unnorm., Dbl. Float Store | 8.9 | 713770 |

For single-precision floating-point format, the first word is stored in 2's complement format at the argument address, and consists of bits 9 through 17 in the EPA register, and bits 18 through 26 in the FMA. The second word consists of A SIGN and bits 01 through 17 of the FMA, and is stored in the argument address plus one.

For double-precision floating-point format, the first word is stored in 2's complement format at the argument address, and consists of EPA bits 0 through 17. A SIGN and FMA bits 1 through 17 comprise the second word, which is stored in sign and magnitude format at the argument address plus one. FMA bits 18 through 35 comprise the third word, which is stored at the argument address plus two.

Normalize - If normalize is requested and the most significant bit of the FMA is not a 1, the FMA is shifted left (up to a maximum of 35 shifts) until the most significant bit is a 1 (0s are shifted into the least significant bits). For each left shift, the EPA is decremented by 1.

Rounding - If rounding is requested in single-precision store, and bit 27 is a 1, +1 is added to FMA bit 26. If bit 27 is a 0, rounding has no effect. Bits 27 through 35 are then zeroed. If a carry occurs out of the most significant bit of the FMA as a result of rounding, the FMA is shifted right one place and the EPA is incremented. Rounding is not done on double-precision floating-point store instructions since it occurs during the arithmetic operation.

Interrupt Exception: Overflow - If the EPA in a single-precision store is greater than $2^8 - 1$, an overflow will occur. The store instruction is aborted prior to the write into memory; the contents of the EPA/A SIGN/FMA are not changed.

Interrupt Exception: Underflow - If the exponent of the result due to normalization is less than 400000_8 (-2^{17}), it cannot be correctly represented in the EPA, and an underflow interrupt exception occurs. The contents of the A SIGN (FMA) are correct; the correct exponent is $-2^{18} + \text{EPA}$.

Also, if the number in the EPA is less than -2^8 on a single-precision store, an underflow interrupt will occur. The store instruction is aborted prior to the write into memory; the contents of EPA (A SIGN) FMA are unchanged.

4.2.15 Load and Float

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|--------------------------------------|---------------------------------|-------------------|
| ILF | Sng. Integer, Load and Float | 11.2 | 714010 |
| UNILF | Unnorm., Sng. Integer Load and Float | 6.6 | 714030 |
| ELF | Ext. Integer, Load and Float | 11.0 | 714110 |
| UNELF | Unnorm., Ext. Integer Load and Float | 7.9 | 714130 |

The Load and Float instruction converts integer format to floating-point format. The integer argument is first transferred from memory to the (A SIGN) FMA. The EPA is loaded with 35_{10} , which effectively relocates the binary point from the right of the integer to a point between the sign bit and most significant bit of the FMA. The integer is consequently converted to a floating-point number; the contents of the FMQ remain unchanged.

Normalize - If the most significant bit of the FMA is not a 1 and normalize is requested, the FMA is shifted left (up to a maximum of 35 shifts) until the most significant bit is a 1 (0s are shifted into the least significant bits of the FMA). For every left-shift of the FMA, the EPA is decremented.

Interrupt Exception: None

4.2.16 Float (FMA)

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|---------------------------------|-------------------|
| FLA | Float FMA | 8.2 | 714210 |
| UNFLA | Unnorm., Float FMA | 5.3 | 714230 |

The Float FMA instruction converts integer format to floating-point format. The integer argument is already contained in (A SIGN) FMA; the second word (address) of this instruction is not used and can have any value.

The EPA is loaded with 35_{10} , which effectively relocates the binary point to the left of the number. The integer number is consequently converted to a floating-point number; the contents of the FMQ remain unchanged.

Normalize - If the most significant bit of the FMA is not a 1, and normalize is requested, the FMA is shifted left (up to a maximum of 35 shifts) until the most significant bit is a 1; 0s are shifted into the least significant bits of the FMA. For every left shift of the FMA, the EPA is decremented.

Interrupt Exception: None

4.2.17 Load and Fix

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|----------------------------------|---------------------------------|-------------------|
| FLX | Sng. Prec. Load and Fix | 11.0 | 714460 |
| URFLX | Unround, Sng. Prec. Load and Fix | 11.0 | 714470 |
| DLX | Dbl. Prec. Load and Fix | 12.4 | 714560 |
| URDLX | Unround, Dbl. Prec. Load and Fix | 12.4 | 714570 |

The Fix instruction converts floating-point format to integer format. The argument is transferred from memory to the EPA (A SIGN) FMA in floating-point format. The FMA and FMQ are shifted right 35 minus EPA places. For example, if the EPA is 10, the FMA is shifted right 25 places. The least significant bits shifted out of the FMA are shifted into the most significant bit of the FMQ. The EPA retains its original contents; if the EPA is negative, the number in the FMA is fractional and cannot be converted to an integer. As a result, the A SIGN and FMA are zeroed. The original contents of the FMQ are lost and the FMQ retains the bits shifted in during the Fix instruction.

Rounding - If rounding is requested and the most significant bit of the FMQ is a 1, the guard bit is set (see Paragraph 3.2) and +1 is added to the least significant bit of the FMA (bit 35).

Interrupt Exception: Overflow - If the EPA is greater than 35_{10} , an overflow interrupt will occur, because the FMA does not have enough bits to represent an integer magnitude greater than 35 bits. The EPA (A SIGN) FMA remains unchanged.

4.2.18 Fix EPA (FMA)

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|---------------------------------|-------------------|
| FXA | Fix EPA, FMA | 8.3 | 714660 |
| URFXA | Unround, Fix EPA, FMA | 8.3 | 714670 |

The Fix EPA (FMA) instruction converts the EPA (FMA) from floating-point format to integer format. The second word (address) of this instruction is not used, and can have any value.

The FMA and FMQ are shifted right 35 minus EPA places. The least significant bits shifted out of the FMA are shifted into the most significant bit of the FMQ. The EPA retains its original contents. If the EPA is negative, the number in the FMA is fractional and cannot be converted to integer; as a

result, the A SIGN and FMA are zeroed. The original contents of the FMQ are lost, and the FMQ retains the bits shifted in during the Fix instruction.

Rounding - If rounding is requested and the most significant bit of the FMQ is a 1, the guard bit is set (see Paragraph 3.2), and +1 is added to the least significant bit of the FMA (bit 35).

Interrupt Exception: Overflow - If the EPA is greater than 35₁₀, an overflow interrupt will occur, because the FMA does not have enough bits to represent an integer magnitude greater than 35 bits. The EPA (A SIGN) FMA remain unchanged.

4.2.19 Load FMQ (Integer)

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|------------------|-------------------|
| ILQ | Sng. Integer Load FMQ | 6.6 | 715000 |
| ELQ | Ext. Integer Load FMQ | 7.9 | 715100 |

The integer argument is transferred from memory to the (A SIGN) FMA. The contents of the FMA and FMQ are swapped; A SIGN remains unchanged.

Interrupt Exception: None

4.2.20 Load FMQ (Floating Point)

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|------------------------------|------------------|-------------------|
| FLQ | Sng. Float Load FMQ | 14.0 | 715050 |
| UNFLQ | Unnorm., Sng. Float Load FMQ | 7.9 | 715070 |
| DLQ | Dbl. Float Load FMQ | 9.5 | 715150 |
| UNDLQ | Unnorm., Dbl. Float Load FMQ | 9.3 | 715170 |

The floating-point argument is transferred from memory to the EPA (A SIGN) FMA.

The contents of the FMA and FMQ are swapped; normalize, if specified, occurs after the swap.

Normalize - If normalize is requested and the most significant bit of the FMA is not a 1, the FMA and FMQ are shifted left (up to a maximum of 35 shifts) until the most significant bit is a 1. Zeros are shifted into the least significant positions of the FMQ; FMQ 01 is shifted into FMA 35. For every left shift of the FMA, the EPA is decremented.

Interrupt Exception: Underflow - If the exponent of the result is less than $400000_8 (-2^{17})$, it cannot be correctly represented in the EPA, and an underflow interrupt exception occurs. The contents of the A SIGN (FMA) are correct; the correct exponent is $-2^{18} + \text{EPA}$.

4.2.21 Swap FMA and FMQ

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|---------------------------|--|-------------------|
| SWQ | Swap FMA and FMQ | 5.5 | 715250 |
| UNSWQ | Unnorm., Swap FMA and FMQ | 5.3 | 715270 |

No argument is transferred to the floating-point processor for a Swap instruction; the contents of the FMA are swapped with the contents of the FMQ. Normalize, if specified, occurs after the swap. The second word (address) of this instruction is not used and can have any value.

Normalize - If normalize is requested and the most significant bit of the FMA is not a 1, the FMA is shifted left (up to a maximum of 35 shifts) until the most significant bit is a 1. Zeros are shifted into the least significant positions of the FMQ; FMQ 01 is shifted into FMA 01. For every left shift of the FMA, the EPA is decremented.

Interrupt Exception: Underflow - If the exponent of the result is less than $400000_8 (-2^{17})$, it cannot be correctly represented in the EPA and an underflow interrupt exception occurs. The contents of the A SIGN (FMA) are correct. The correct exponent is $-2^{18} + \text{EPA}$.

4.2.22 Load JEA (Jump Exit Address)

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|--|-------------------|
| LJE | Load JEA Register | 6.6 | 715400 |

The Load JEA instruction causes the 15-bit JEA register to be loaded from bits 3 through 17 of the argument in memory. The instruction is not protected, and any user can issue it (in user mode) without causing a memory protect trap. The guard bit is loaded from bit 1 of the argument, and the A SIGN will remain unchanged regardless of the contents of bit 0 of the argument.

Interrupt Exception: None

4.2.23 Store JEA (Jump Exit Address)

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|---------------------------------|-------------------|
| SJE | Store JEA Register | 6.6 | 715600 |

The contents of the 15-bit JEA register are stored as bits 03 through 17 in memory at the argument address; the contents of the FMQ remain unchanged. The A SIGN is stored as bit 00 and the guard bit as bit 01 in memory at the argument address.

Interrupt Exception: None

4.2.24 Integer Add

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|---------------------------------|-------------------|
| IAD | Sng. Integer Add | 6.6 | 716000 |
| EAD | Ext. Integer Add | 7.9 | 716100 |

The argument is transferred from memory to the (B SIGN) FMB. The contents of (B SIGN) FMB is added to the contents of (A SIGN) FMA, and the sum retained in (A SIGN) FMA. The contents of the FMQ are zeroed at the beginning of the instruction.

Interrupt Exception: Overflow - An overflow interrupt will occur if the addition generates a magnitude greater than $2^{35}-1$. The result left in the FMA is modulo 2^{35} . The A SIGN is the sign of the result as if no overflow occurred.

4.2.25 Floating Point Add

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-----------------------------------|---------------------------------|-------------------|
| FAD | Sng. Float. Add | 8.2 | 716040 |
| URFAD | Unround, Sng. Float. Add | 8.2 | 716050 |
| UNFAD | Unnorm., Sng. Float. Add | 8.3 | 716060 |
| UUFAD | Unround, Unnorm., Sng. Float. Add | 8.3 | 716070 |
| DAD | Dbl. Float. Add | 9.3 | 716140 |
| URDAD | Unround, Dbl. Float. Add | 9.3 | 716150 |
| UNDAD | Unnorm., Dbl. Float. Add | 9.3 | 716160 |
| UUDAD | Unround, Unnorm., Dbl. Float. Add | 9.3 | 716170 |

The argument is transferred to EPB (B SIGN) FMB [exponent to EPB and mantissa to (B SIGN) FMB]. The mantissa in FMA and FMB are aligned by finding the difference between EPA and EPB, and right-shifting the mantissa with the smaller exponent until the number of shifts equals the exponent difference. Bits shifted out of the register containing the mantissa with the smaller exponent are shifted into the FMQ, which is cleared at the beginning of the instruction. These bits are retained in the FMQ. When the mantissas are aligned, the FMB mantissa is added to the FMA mantissa, and the sum placed in (A SIGN) FMA. If a carry occurs out of the most significant bit of the FMA, the difference is shifted right one place and the exponent incremented by 1. The LSB of the FMA is not shifted into the FMQ, but is shifted into a guard bit to be saved for rounding (see Paragraph 3.2).

Rounding - Rounding can occur at two times, once after the align, and again after the addition takes place. After the align, if rounding is requested and FMQ 01 is a 1, +1 is added to the least significant bit of the FMA (bit 35). After the addition, if rounding is requested and the guard bit is set, +1 is added to the least significant bit of the FMA (bit 35).

Normalize - If the most significant bit of the FMA is not a 1 after the addition, and normalize is requested, the FMA is shifted left until the MSB contains a 1 (up to a maximum of 35 shifts). Zeros are shifted into the least significant positions of the FMA. For each left shift, the exponent is decremented.

Interrupt Exception: Underflow - If the exponent of the result is less than $400000_8 (-2^{17})$, it cannot be correctly represented in the EPA and an underflow interrupt exception occurs. The contents of the A SIGN (FMA) are correct; the correct exponent is $-2^{18} + \text{EPA}$.

Interrupt Exception: Overflow - If the exponent of the result is greater than $377777_8 (2^{17} - 1)$, it cannot be correctly represented in the EPA and an overflow interrupt exception occurs. The contents of A SIGN (FMA) are correct; the correct exponent is $2^{18} + \text{EPA}$.

4.2.26 Branch

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|---|---------------------------------|-------------------|
| BZA | Branch if FMA zero | 5.2 | 716601 |
| BMA | Branch if FMA negative | 5.2 | 716602 |
| BLE | Branch if FMA ≤ 0 | 5.2 | 716603 |
| BPA | Branch if FMA positive | 5.2 | 716604 |
| BRU | Branch unconditional | 5.2 | 716606 |
| BNA | Branch if FMA non-zero | 5.2 | 716610 |
| BAC | Branch if guard bit is set (see Paragraph 3.2) | 5.2 | 716620 |

The Branch instruction provides conditional alteration of the sequence of program execution, and does not affect the FMQ. The instruction includes a Test Mask to test the status of the FP15. The Test Mask is contained in bits 13 through 17 of the first word of the FP15 instruction. These bits may be microprogrammed to test for more than one condition. Microprogramming produces an ORed condition of the bits that are set.

If any one of the tests is made and is successful, a program branch is made. For example, if the programmer sets bit 17 to a 1, and the FMA is 0, a branch is made. If bit 17 is not set, and the FMA is 0, no branch is made. The second word of the two-word FP instruction is the branching address (if direct) or is a pointer to the branching address (if indirect). However, the branching address for both indirect and direct addressing allows transfer within the current memory block of 32K only, because bits 01 and 02 of that branching address are ignored.

Example:

A mask of 04_8 (bit 15 = 1) tests for the $FMA \geq 0$. If the test is successful, bits 03 through 17 of the branching address are placed in bits 03 through 17 of the program counter in the CPU. If the test is unsuccessful, the program continues sequentially.

Bits 16 and 17 of the Branch on Condition instruction do not modify A SIGN.

Program Interruption: If the branch address causes a memory trap, the CPU (not the FPU) is flagged. As in a memory trap on a CPU JMP instruction, the user cannot immediately determine the branching address.

4.2.27 Modify FMA

All FP15 floating-point instructions except Load or Store JEA, Branch, FT Test and diagnostic instructions can be microprogrammed to modify the FMA. The second word (address) of this class instructions is not used and can have any value. The contents of the FMQ remain unchanged.

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|---------------------------------------|---------------------------------|-------------------|
| FZR | Zero EPA (A SIGN) FMA | 5.2 | 711200 |
| FAB | Make A SIGN positive (absolute value) | 5.2 | 713271 |
| FNG | Make A SIGN negative | 5.2 | 713272 |
| FCM | Complement A SIGN | 5.2 | 713273 |
| FNM | Normalize EPA (A SIGN) FMA | 8.4 | 713250 |

Interrupt Exception: Underflow - The only possible interrupt exception for this class of instructions is an underflow interrupt as a result of normalize EPA (A SIGN) FMA. If the exponent of the result is less than $400000_8 (-2^{17})$, an underflow interrupt occurs. The resultant exponent cannot be correctly represented in the EPA; the correct exponent is $-2^{18} + \text{EPA}$. The contents of (A SIGN) FMA are correct.

4.2.28 Floating Point Test

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|--|-------------------|
| FPT | Floating Point Test | 5 | 710314 |

This instruction tests the presence of the FP15 Floating-Point Processor in the system. If the FP15 is installed, 710314 is an NOP for the FP15 and the PDP-15; the PDP-15 continues from PC +2. If the FP15 is not installed, a normal IORS is executed in the PDP-15 and the PDP-15 continues from PC +1.

Interrupt Exception: None

4.3 WORST-CASE TIMING

The floating point execution times used throughout this manual are considered typical times, i.e., they are measured times using normalized numbers. They should be considered the average time to perform the instruction. The user should not encounter times greater than the worst case times listed below. These worst case times include indirection, normalized arithmetic on unnormalized numbers and memory relocate. Worst case times are: 24 μs for add and subtract; 26 μs for multiply; 27 μs for divide; 18 μs for load; and 17 μs for store.

CHAPTER 5

DIAGNOSTIC INSTRUCTIONS

5.1 INTRODUCTION

The FP15 instruction repertoire includes additional instructions used for diagnostic purposes in simulating actual floating-point instructions; these instructions are described below.

NOTE

Diagnostic instructions cannot be executed in User Mode.

5.2 DEBREAK

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|---------------------------------|-------------------|
| DBK | Debreak | | 703304 |

The Debreak instruction in the PDP-15 is normally used in an active API routine to return the routine to its preassigned priority level, after the need for its temporary raising (by ISA or CAL) has been satisfied. The Debreak is used as a clear instruction in the FP15.

If an FP15 is connected to the memory bus and is in maintenance mode, when the DBK is issued, the FP15 will be forced out of this mode and all major cycle states will be zeroed. The contents of the FMQ remain unchanged.

Interrupt Exception: None

5.3 DIAGNOSTIC MODE ON, DIAGNOSTIC MODE OFF

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|-------------------------|---------------------------------|-------------------|
| DMN | Diagnostic Mode On | 5.3 | 717300 |
| DMF | Diagnostic Mode Off | 16.1 | 717200 |

On execution of an Diagnostic Mode On instruction (during non-user mode), the FP15 leaves the normal mode and enters a special maintenance mode. In this mode, the next floating-point instruction executed stops in Phase 3, Time State 3 of the FETCH cycle. Control is returned to the Central Processor; any non-floating point instruction may now be fetched and executed. The contents of the FMQ remain unchanged.

In the FP15, the only two modes of operation are the Normal Mode and the Diagnostic Mode. If the Central Processor is in User Mode, the FP15 is prevented from entering Diagnostic Mode because the Diagnostic Mode On instruction is handled as a no-operation. If it is desired to check out instructions in User Mode, this can be accomplished by first putting the FP15 in Diagnostic Mode during Non-user Mode, and then changing the CPU from Non-user Mode to User Mode.

The Diagnostic Mode Off instruction returns the FP15 from Diagnostic Mode to the Normal Mode (see Diagnostic).

Interrupt Exception: None

5.4 DIAGNOSTIC READ, STEP AND READ

| <u>Mnemonic</u> | <u>Instruction Type</u> | <u>Time (μs)</u> | <u>Octal Code</u> |
|-----------------|------------------------------------|---------------------------------|------------------------------------|
| DRR | Diagnostic Read Registers | 16.1 | 710000 |
| DSR | Diagnostic Step and Read Registers | 17.6 | 710100 + N where $0 < N < 77_8$ |

5.4.1 Diagnostic Read

After entering Diagnostic Mode, the next FP15 instruction executed stops in Phase 3, Time State 3 of the FETCH cycle. Control is returned to the Central Processor, leaving the FP15 instruction only partially completed. The next FP15 instruction is normally Diagnostic Read or Diagnostic Step and Read.

If it is desired to abort the partially completed instruction and return the FP15 to Normal Mode, a De-break Clear (DBK) (703304) instruction should be issued.

The diagnostic Read instruction causes sixteen 18-bit words to be transferred from the FP15 to memory, starting at the argument address. The words are transferred in the following order:

1. BMB 00-17 (Buffered Memory Buffer)
2. BMB 18-35
3. SC 0-5 and IR 06-17 (Shift Counter and Instruction Register)
4. EPA 00-17
5. A SIGN and FMA 01-17
6. FMA 18-35
7. EPB 00-17
8. B SIGN and FMB 01-17
9. FMB 18-35
10. B SIGN and FMQ 01-17
11. FMQ 18-35
12. ADD 00-17 (Adder)
13. ADD 18-35
14. JEA 00-17

| | | |
|----------|---|---------------------|
| 00 ASIGN | } | (Jump Exit Address) |
| 01 GUARD | | |
| 02 Blank | | |
15. STA 00-17 (See Note below)
16. AR 00-17 (Address Register)

NOTE

The STA 00-17 is a status word comprised of the following information:

| | |
|-----------|--|
| STA 00 | FP15 BUSY |
| STA 01 | FETCH CYCLE |
| STA 02 | OPAND CYCLE |
| STA 03 | EXP CYCLE |
| STA 04 | FUN CYCLE |
| STA 05 | NOR CYCLE |
| STA 06 | WRITE CYCLE |
| STA 07 | INT1 |
| STA 08 | INT2 |
| STA 09 | TIME STATE 1 |
| STA 10 | TIME STATE 2 |
| STA 11 | TIME STATE 3 |
| STA 12-17 | DIR 12-17 (Diagnostic Instruction Register) |

The Diagnostic Read instruction leaves the partially completed instruction unchanged; control is returned to the CPU after the sixteen 18-bit words have been transferred. The Diagnostic Read instruction may be executed indefinitely without affecting the partially completed instruction. Any non-floating point instruction or instructions may be fetched and executed when control is returned to the Central Processor.

5.4.2 Diagnostic Step and Read

The Diagnostic Step and Read instruction restarts the partially completed instruction and allows execution of the instruction to continue until $N+1$ steps are completed. At this point, execution ceases, the sixteen 18-bit words are transferred from the FP15 to memory, and control is then returned to the

Central Processor. The original instruction may or may not be completed, depending on the instruction and operand values, which will determine the number of steps to be executed. One step is counted at each of the following times:

| | |
|-----------------|---|
| FETCH * T3 * P3 | |
| FETCH * T3 * P3 | (if indirection) |
| OPAND * T3 * P3 | (if operand fetch) |
| OPAND * T3 * P3 | } Depends on data format (1, 2, or 3 words) |
| OPAND * T3 * P3 | |
| EXP * T1 * P3 | |
| EXP * T2 * P3 | (FMA and FMB aligned - 1 step count for every align shift) |
| EXP * T3 * P3 | |
| FUN * T1 * P3 | |
| FUN * T2 * P3 | (FMA and FMB are multiplied or divided here - 1 step count per shift. FMA also fixed here - 1 step count per every fix shift) |
| FUN * T3 * P3 | |
| NOR * T1 * P3 | (FMA normalized here - 1 step count per every normalize shift) |
| NOR * T2 * P3 | |
| NOR * T3 * P3 | |
| WRITE * T3 * P3 | (if a store type) |
| WRITE * T3 * P3 | (if a store type) |
| WRITE * T3 * P3 | (if a store type) |
| INT2 * T3 * P3 | (if BRANCH or INTERRUPT EXCEPTION) |

The Diagnostic Step and Read instruction may be utilized to finish the partially completed instruction. The last step to be counted in the partially completed instruction is NOR * T3 * P3. Exceptions to this are the Store, Store JEA and Branch instructions.

The last step to be counted in the Store and Store JEA instruction is WRITE * T3 * P3, and the last step to be counted in the Branch instruction is INT2.

When the last step is counted (regardless of whether the diagnostic has sequenced through N+1 steps or not), the FP15 instruction stops, the sixteen 18-bit words are transferred from the FP15 to memory, and then control is returned to the CPU. The original instruction, however, is still not complete at this point; one more step is required to clear FP BUSY. The cycle and time states in the FP15 stop and the sixteen 18-bit words are transferred to memory. Control is then returned to the CPU. When FP BUSY is no longer true, the next FP15 instruction causes FP BUSY to be true and also causes the floating-point processor to stop in Phase 3, Time State 3 of the FETCH cycle. Control is again returned to the CPU. A new FP15 non-diagnostic instruction is recognized only if FP BUSY is not true. Thus, in order for Diagnostic Mode Off to be effective, FP BUSY must not be true. When Diagnostic Mode Off is recognized, the FP15 returns to Normal Mode. For both Diagnostic Read and Diagnostic Step and Read, the contents of the FMQ remain unchanged.

CHAPTER 6

FP15 PROGRAMMING EXAMPLES

6.1 INTRODUCTION

The following four examples provide an illustration of how the FP15 can be programmed to accomplish various integer and floating-point operations. An example for each data format is presented (single-precision integer, extended integer, single-precision floating-point, and double-precision floating-point). Each example also contains all arithmetic operations (add, subtract, multiply, and divide).

6.2 SINGLE-PRECISION INTEGER

This program performs the following arithmetic operation.

$$\frac{(A + B) C - D}{E}, \text{ where}$$

A = 000212
 B = 000121
 C = 000222
 D = 700000
 E = 000005
 ILD = 713000
 IAD = 716000
 IMP = 711400
 ISB = 710400
 IDV = 712000
 IST = 713600

NOTE

In the example shown, NUMD (700000) is a negative number and is loaded into the FP15 in 2's complement format, and is added to the quantity (A+B) C.

| | | | |
|--------|--------|----------|-------------------|
| 000200 | | .LOC 200 | |
| 000200 | 340217 | TAD ARG | /CPU INSTRUCTION |
| 000201 | 040220 | DAC TEMP | /CPU INSTRUCTION |
| 000202 | 713000 | ILD | /LOAD NUMA |
| 000203 | 000221 | NUMA | /ADDRESS OF NUMA |
| 000204 | 716000 | IAD | /ADD NUMB TO NUMA |

| | | | | |
|--------|--------|------|--------|-------------------|
| 000205 | 000222 | | NUMB | /ADDRESS OF NUMB |
| 000206 | 711400 | | IMP | /MULTIPLY BY NUMC |
| 000207 | 000223 | | NUMC | /ADDRESS OF NUMC |
| 000210 | 710400 | | ISB | /SUBTRACT NUMD |
| 000211 | 000224 | | NUMD | /ADDRESS OF NUMD |
| 000212 | 712000 | | IDV | /DIVIDE BY NUME |
| 000213 | 000225 | | NUME | /ADDRESS OF NUME |
| 000214 | 713600 | | IST | /STORE RESULT IN |
| 000215 | 000226 | | PERM | /000226 |
| 000216 | 740040 | | HLT | |
| 000217 | 222222 | ARGA | 222222 | /STORAGE |
| 000220 | 000000 | TEMP | 000000 | /STORAGE |
| 000221 | 000212 | NUMA | 000212 | /NUMA |
| 000222 | 000121 | NUMB | 000121 | /NUMB |
| 000223 | 000222 | NUMC | 000222 | /NUMC |
| 000224 | 700000 | NUMD | 700000 | /NUMD |
| 000225 | 000005 | NUME | 5 | /NUME |
| 000226 | 031224 | PERM | 031224 | /STORAGE |

6.3 DOUBLE-PRECISION INTEGER PROGRAMMING EXAMPLE

This program performs the following arithmetic operation:

$$\frac{(A+B)C - D}{E}, \text{ where}$$

A = 004444444444
 B = 002222222222
 C = 000000000011
 D = 055555555554
 E = 000002222222
 ELD = 713100
 EAD = 716100
 EMP = 711500
 ESB = 710500
 EDV = 712100
 EST = 713700

| | | | |
|--------|--------|----------|-----------------------|
| 000600 | | .LOC 600 | |
| 000600 | 340617 | TAD DECI | /CPU INSTRUCTION |
| 000601 | 040620 | DAC PERM | /CPU INSTRUCTION |
| 000602 | 713100 | ELD | /LOAD NUMA IN F.P. AC |
| 000603 | 000621 | NUMA | /ADDRESS OF NUMA |
| 000604 | 716100 | EAD | /ADD NUMB |
| 000605 | 000623 | NUMB | /ADDRESS OF NUMB |
| 000606 | 711500 | EMP | /MULTIPLY NUMC |
| 000607 | 000625 | NUMC | /ADDRESS OF NUMC |
| 000610 | 710500 | ESB | /SUBTRACT NUMD |
| 000611 | 000627 | NUMD | /ADDRESS OF NUMD |
| 000612 | 712100 | EDV | /DIVIDE BY NUME |
| 000613 | 000631 | NUME | /ADDRESS OF NUME |
| 000614 | 713700 | EST | /STORE RESULT IN |

| | | | | |
|--------|--------|------|--------|---------------------|
| 000615 | 000633 | | ANSW | /000633 |
| 000616 | 740040 | | HLT | |
| 000617 | 333333 | DECI | | /STORAGE |
| 000620 | 000000 | PERM | 000000 | /STORAGE |
| 000621 | 004444 | NUMA | 004444 | /HIGH ORDER OPERAND |
| 000622 | 444444 | | 444444 | /LOW ORDER OPERAND |
| 000623 | 002222 | NUMB | 002222 | /HIGH ORDER OPERAND |
| 000624 | 222222 | | 222222 | /LOW ORDER OPERAND |
| 000625 | 000000 | NUMC | 000000 | /HIGH ORDER OPERAND |
| 000626 | 000011 | | 000011 | /LOW ORDER OPERAND |
| 000627 | 055555 | NUMD | 055555 | /HIGH ORDER OPERAND |
| 000630 | 555554 | | 555554 | /LOW ORDER OPERAND |
| 000631 | 000002 | NUME | 000002 | /HIGH ORDER OPERAND |
| 000632 | 222222 | | 222222 | /LOW ORDER OPERAND |
| 000633 | 000000 | ANSW | 000000 | /HIGH ORDER OPERAND |
| 000634 | 007000 | | 007000 | /LOW ORDER OPERAND |

6.4 SINGLE-PRECISION FLOATING POINT

This program performs the following arithmetic operations.

$$\frac{(A + B) C - D}{E} = \text{where}$$

$$A = 2^5 \times 000111_8$$

$$B = 2^5 \times 111000_8$$

$$C = 2^2 \times 333000_8$$

$$D = 2^7 \times 000222_8$$

$$E = 2^2 \times 222000_8$$

FLD = 713050

FAD = 716040

FMP = 711440

FSB = 710440

FDV = 712040

FST = 713640

| | | | |
|--------|--------|----------|-----------------------|
| 000101 | | .LOC 101 | |
| 000101 | 340120 | TAD ARG | /CPU INSTRUCTION |
| 000102 | 040121 | DAC TEMP | /CPU INSTRUCTION |
| 000103 | 713050 | FLD | /LOAD NUMA IN F.P. AC |
| 000104 | 000122 | NUMA | /ADDRESS OF NUMA |
| 000105 | 716040 | FAD | /ADD NUMB |
| 000106 | 000124 | NUMB | /ADDRESS OF NUMB |
| 000107 | 711440 | FMP | /MULTIPLY BY NUMC |
| 000110 | 000126 | NUMC | /ADDRESS OF NUMC |
| 000111 | 710440 | FSB | /SUBTRACT NUMD |
| 000112 | 000130 | NUMD | /ADDRESS OF NUMD |
| 000113 | 712040 | FDV | /DIVIDE BY NUME |
| 000114 | 000132 | NUME | /ADDRESS OF NUME |
| 000115 | 713640 | FST | /STORE RESULT |

| | | | | |
|--------|--------|--------|--------|------------------------|
| 000116 | 000134 | | PERM | /ADDRESS OF RESULT |
| 000117 | 740040 | | HLT | /CPU INSTRUCTION |
| 000120 | 000000 | ARGA | 0 | /STORAGE |
| 000121 | 000000 | TEMP | 0 | /STORAGE |
| 000122 | 000005 | } NUMA | 5 | /EXPONENT OF NUMA |
| 000123 | 000111 | | 000111 | /MANTISSA OF NUMA |
| 000124 | 000005 | } NUMB | 5 | /EXPONENT OF NUMB |
| 000125 | 111000 | | 111000 | /MANTISSA OF NUMB |
| 000126 | 000002 | } NUMC | 2 | /EXPONENT OF NUMC |
| 000127 | 333000 | | 333000 | /MANTISSA OF NUMC |
| 000130 | 000007 | } NUMD | 7 | /EXPONENT OF NUMD |
| 000131 | 000222 | | 000222 | /MANTISSA OF NUMD |
| 000132 | 000002 | } NUME | 2 | /EXPONENT OF NUME |
| 000133 | 222000 | | 222000 | /MANTISSA OF NUME |
| 000134 | 000004 | PERM | 4 | /RESULT - EXPONENT = 4 |
| 000135 | 332333 | | 332333 | /MANTISSA = .332333 |

$$\text{Answer} = 2^4 \times .332333000 = 15.51554_8$$

6.5 DOUBLE-PRECISION FLOATING POINT

This program performs the following arithmetic operations.

$$\frac{(A + B) C - D}{E}, \text{ where}$$

$$A = 2^0 \times 373737111111$$

$$B = 2^0 \times 000000303030$$

$$C = 2^2 \times 222222010101$$

$$D = 2^3 \times 020202101010$$

$$E = 2^2 \times 313131212121$$

UUDLD = 713170

UUDAD = 716170

UUDMP = 711570

URDSB = 710550

URDDV = 712150

UUDST = 713770

| | | | |
|--------|--------|-----------|-----------------------|
| 000076 | | .LOC 76 | |
| 000076 | 020700 | LAC TEMP1 | /CPU INSTRUCTION |
| 000077 | 040701 | DAC TEMP2 | /CPU INSTRUCTION |
| 000100 | 713170 | UUDLD | /LOAD NUMA IN F.P. AC |
| 000101 | 000117 | NUMA | /ADDRESS OF NUMA |
| 000102 | 716170 | UUDAD | /ADD NUMB |
| 000103 | 000122 | NUMB | /ADDRESS OF NUMB |
| 000104 | 711570 | UUDMP | /MULTIPLY NUMC |
| 000105 | 000125 | NUMC | /ADDRESS OF NUMC |

| | | | | |
|--------|--------|--------|--------|------------------|
| 000106 | 710550 | | URDSB | /SUBTRACT NUMD |
| 000107 | 000130 | | NUMD | /ADDRESS OF NUMD |
| 000110 | 712150 | | URDDV | /DIVIDE BY NUME |
| 000111 | 000133 | | NUME | /ADDRESS OF NUME |
| 000112 | 713770 | | UUDST | /STORE RESULT |
| 000113 | 000136 | | PERM | /IN ADDRESS 136 |
| 000114 | 740040 | | HLT | /PROGRAM HLT |
| 000115 | 777777 | TEMP1 | 777777 | /STORAGE |
| 000116 | 000000 | TEMP2 | 000000 | /STORAGE |
| 000117 | 000000 | } NUMA | 0 | /EXPONENT A |
| 000120 | 373737 | | 0 | /HIGH MANTISSA |
| 000121 | 111111 | } NUMB | 111111 | /LOW MANTISSA |
| 000122 | 000000 | | 0 | /EXPONENT B |
| 000123 | 303030 | 0 | 303030 | /HIGH MANTISSA |
| 000124 | 101010 | } NUMC | 101010 | /LOW MANTISSA |
| 000125 | 000002 | | 2 | 000002 |
| 000126 | 222222 | 2 | 222222 | /HIGH MANTISSA |
| 000127 | 010101 | } NUMD | 010101 | /LOW MANTISSA |
| 000130 | 000003 | | 3 | 000003 |
| 000131 | 020202 | 3 | 020202 | /HIGH MANTISSA |
| 000132 | 101010 | } NUME | 101010 | /LOW MANTISSA |
| 000133 | 000002 | | 2 | 000002 |
| 000134 | 313131 | 2 | 313131 | /HIGH MANTISSA |
| 000135 | 212121 | } PERM | 212121 | /LOW MANTISSA |
| 000136 | 000001 | | 1 | 000001 |
| 000137 | 214335 | 1 | 214335 | /STORE MANTISSA |
| 000140 | 635572 | | 635572 | /HIGH AND LOW |

$$\text{Answer} = 2^4 \times .214335635572 = 10.6156716675_8$$

**Digital Equipment Corporation
Maynard, Massachusetts**

digital