

System 35 Desktop Computer

Assembly Execution ROM



HEWLETT-PACKARD

HEWLETT  PACKARD


Warranty Statement

Hewlett-Packard products are warranted against defects in materials and workmanship. For Hewlett-Packard Desktop Computer Division products sold in the U.S.A. and Canada, this warranty applies for ninety (90) days from date of delivery.* Hewlett-Packard will, at its option, repair or replace equipment which proves to be defective during the warranty period. This warranty includes labor, parts, and surface travel costs, if any. Equipment returned to Hewlett-Packard for repair must be shipped freight prepaid. Repairs necessitated by misuse of the equipment, or by hardware, software, or interfacing not provided by Hewlett-Packard are not covered by this warranty.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES.

*For other countries, contact your local Sales and Service Office to determine warranty terms.

Assembly Execution ROM

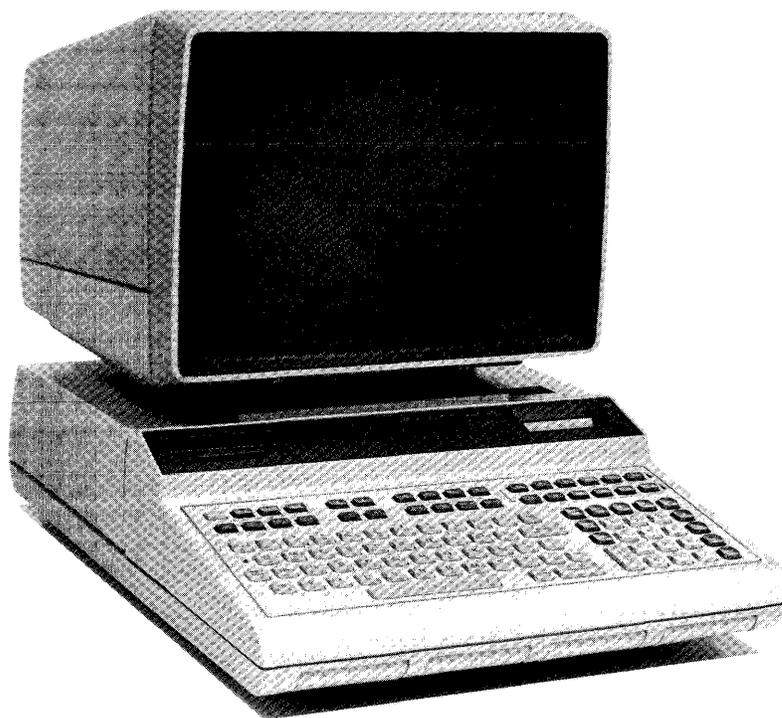

HP 9835A Desktop Computer

Hewlett-Packard Desktop Computer Division
3404 East Harmony Road, Fort Collins, Colorado 80525
(For World-wide Sales and Service Offices see back of manual.)
Copyright by Hewlett-Packard Company 1978

Manual Map

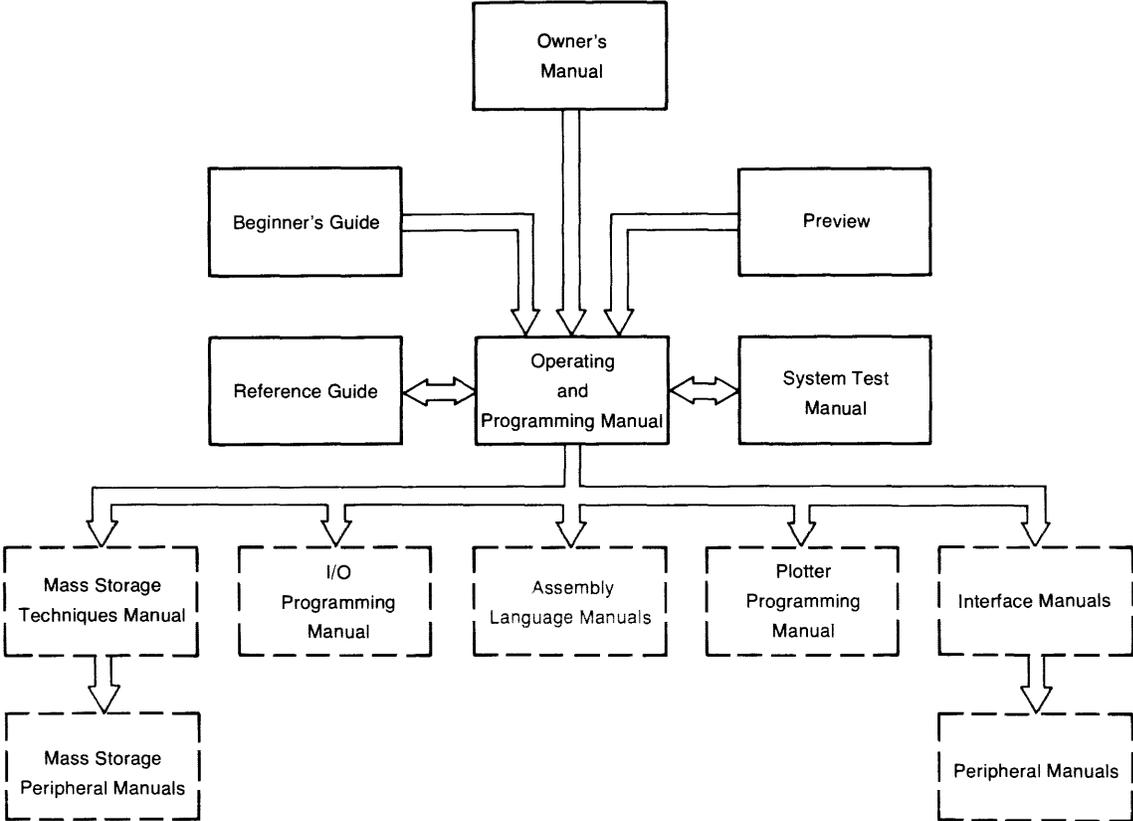


Table of Contents

Chapter 1: General Information	1
Purpose of the ROM	1
Buzzwords	2
ROM Installation	3
Chapter 2: Modules, Routines, and Such	5
Modules vs. Routines	6
Names	6
Overview	6
Setting Aside Memory	8
Retrieving Modules	11
Storing Modules	12
Accessing Routines	13
Chapter 3: Handling Interrupts	15
Branching on Interrupts	16
Prioritizing Interrupts	18
Environmental Considerations	20
Disabling Interrupt Branching	21
Chapter 4: Errors and Error Processing	23
Appendix A: Error Messages	25
Appendix B: Maintenance	31
Index	34

Chapter 1

General Information

The Assembly Execution Read Only Memory (ROM) has been provided to you so that you can load and execute assembly language programs which have been written using the Assembly Development ROM.

It is assumed throughout this manual that you are familiar with the basic operation and language of the 9835A/B. It is not necessary, however, that you be in any way familiar with the Assembly Development ROM itself in order to use the Assembly Execution ROM or this manual. All of the capabilities provided by the Assembly Execution ROM are in the form of BASIC language extensions and are used as any other BASIC statement may be.

Purpose of the ROM

The Assembly Execution ROM (HP part number 98338A) is used to load, store, and execute assembly language routines written using the Assembly Development ROM.

The routines are provided by HP in some instances, or are created by others. Instructions for the effective use of the routines themselves are the responsibility of the people (the “authors”) who developed those routines. Thus, when calling a routine (or even deciding which routine to call) consult the documentation provided by the authors of the routine.

Buzzwords

During the course of the discussion in this manual, phrases are used which are in common circulation in the computer industry. While the meaning of most are either well-known or deducible from the context, there are a few which may be new to the user not exposed to assemblers before —

bit — the most elementary unit of computer information. It can assume one of two possible states, usually designated as “0” or “1”.

byte — a group of 8 binary digits (bits) operated upon as a unit.

interrupt service routine (ISR) — an assembly language routine intended to perform a certain action, or set of actions, when the computer receives a request from an external device. An “active” ISR is one which is currently enabled for a given device.

word — two bytes, or a group of 16 binary digits (bits) operated upon as a unit.

Fundamental Syntax

The syntax conventions used in this manual are those used in the Operating and Programming Manual for the 9835A/B (HP part number 09835-90000) —

<code>dot matrix</code>	All syntax items displayed in dot matrix should appear within your program as shown.
[]	Items contained in brackets are optional items.
...	Ellipses mean that the previous item may be repeated indefinitely.


In addition, the following convention is employed through the Assembly Language series of manuals —

{ }	Items contained in braces are items considered as units. The names inside the braces are descriptive of the function intended for the item. Whenever an item enclosed in braces appears in the text, the notation refers to the same notation within an earlier syntax.
-----	---

ROM Installation

Use of the statements described in this manual is not possible until the Assembly Execution ROM has been installed. The installation is a simple process.

There are several ROM drawers for the computer: one on the right side of the machine and four in the front. Each drawer in the front holds up to four ROMs, and the one on the side holds up to 14. ROMs may be placed in any ROM slot in any drawer.

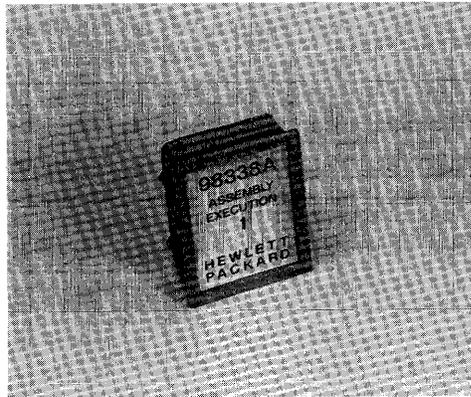

The Assembly Execution ROM

To add the Assembly Execution ROM, turn off the computer and remove a ROM drawer (by pulling outwards on it until it is completely separated from the computer). Insert the Assembly Execution ROM by orienting it so that its label reads the same way as the others in the drawer¹ (if any) and insert it vertically in one of the unused slots. Make sure that it slides in all the way to the bottom of the connector. There are small raised ribs on both sides of each ROM which fit into recesses in the slot; if they don't fit, you have not oriented the ROM correctly.

After inserting the ROM, re-insert the drawer in the machine (by pushing on it until it is flush with the outside cover of the machine). With this done, you are now ready to begin using assembly language routines.

¹ When holding the drawer with its front towards you, the ROM is oriented correctly when you can read the label right side up.

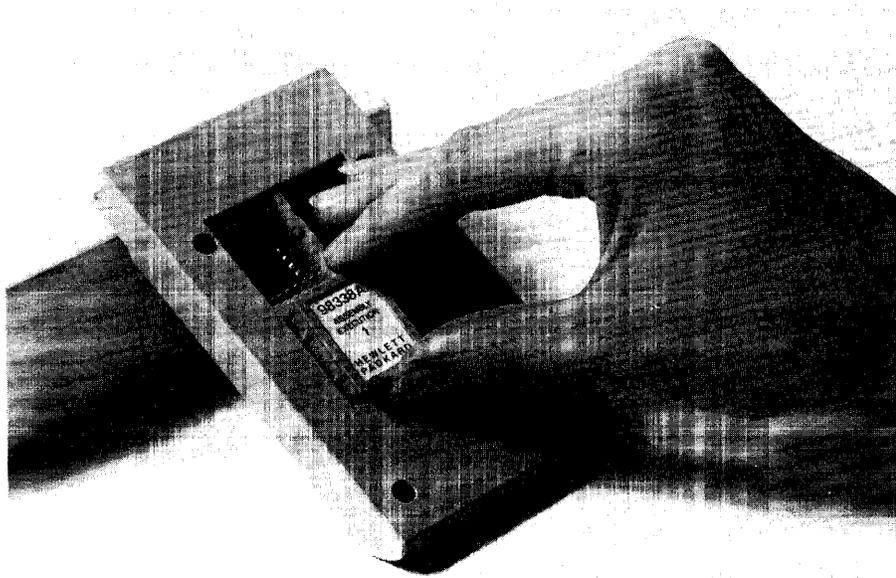


Figure 1. Installing the Assembly Execution ROM

Chapter 2

Modules, Routines, and Such

There are three basic activities associated with using assembled routines and modules. First, there is the need to retrieve them from wherever they may be stored (including providing a place for them to be kept while they are resident in the memory of the machine). Second, there is the actual **use** of a module, or of the routines which it contains. And third, there is the occasional requirement to store, or re-store a module on mass storage (including, perhaps, the need to free up the space in memory it previously occupied).

This chapter deals with these activities. It demonstrates how you can, within a BASIC program (or from the keyboard), use modules which have been previously created. The fundamental statements involved are —

ICOM	used to set aside memory to hold modules and routines
ILOAD	used to retrieve modules from mass storage
ICALL	used to access routines like a subprogram
ISTORE	used to save modules on mass storage
IDDELETE	used to free up space in memory for other modules

Modules vs. Routines

What is the difference between a “module” and a “routine”?

First, a **routine** is a program intended for your use. It is callable, like a subprogram, once it is in memory.

Second, a **module** is a collection of one or more routines which are closely associated to one another and are considered as a unit. One or more modules may be stored on a file on mass storage.

Names

Routines, modules, and files all have names. The names given them may or may not bear some significance to one another; that depends upon the authors of the routines, and you.

The names of routines and modules are given to them by the authors of the routines. The documentation provided you should indicate the names with which you need to be concerned. You may not change these names.

The naming of files is flexible. Originally, the names were assigned by the authors of the routines. They may have been subsequently changed by others. In addition, **you** may change them, depending upon your own needs and desires. Conventions for file names and methods for file manipulation can be found in the Operating and Programming Manual (HP part number 09835-90000) and in the Mass Storage Techniques manual (HP part number 09835-90070).

Overview

To briefly sketch the functional relationships of modules and routines, please refer to Figure 2 on the facing page.

Modules are stored in files and may be retrieved and placed in memory using the “ILOAD” command. When the ILOAD command is executed all of the modules in the file are loaded into the memory. Note that many files can be loaded, with many modules each.

Alternatively, modules which are already in memory may be stored into a single file using the “ISTORE” command. When the ISTORE command is executed, the designated modules are stored away into an OPRM file (for tape cartridges) or an ASMB file (on non-tape mass storage media). After storage, the modules are still in memory. They may be removed (i.e., the space they occupy in memory is “freed up”) by using the “IDELETE” command.

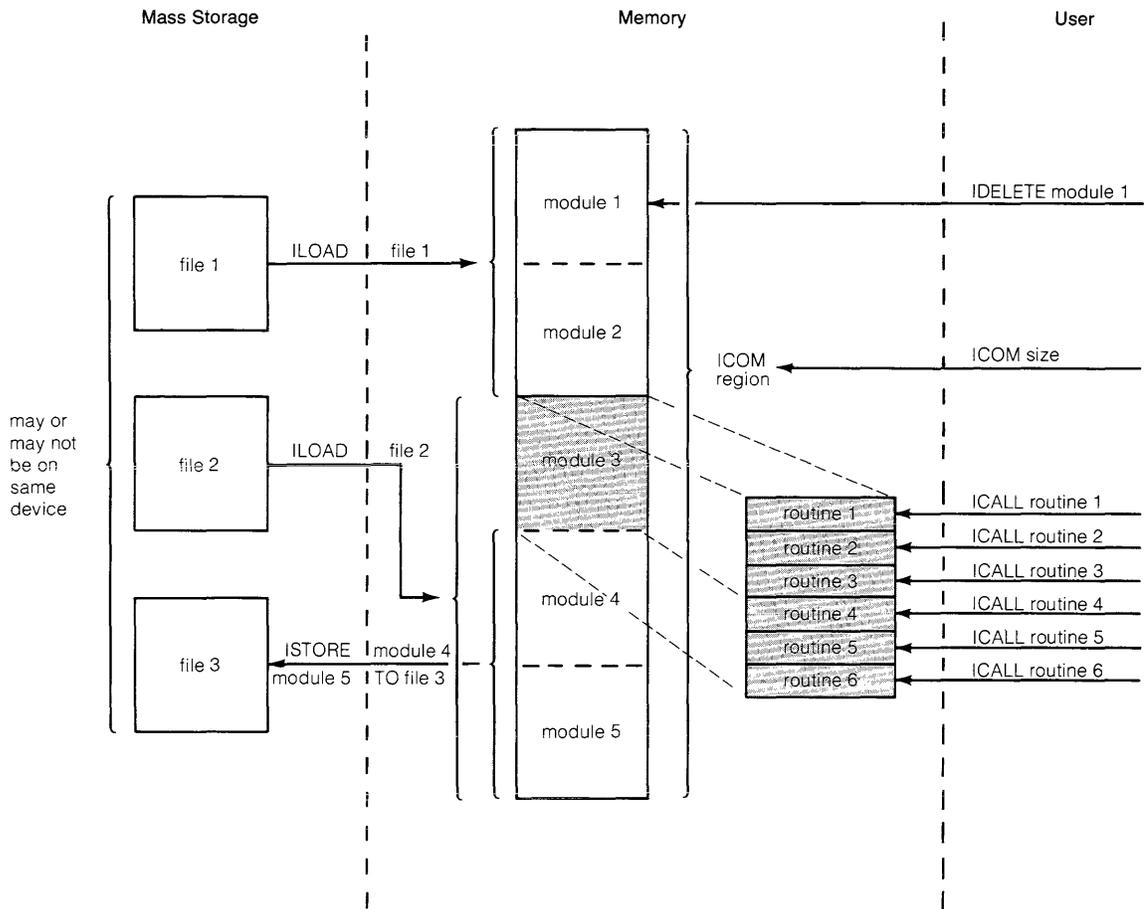


Figure 2. Overview of Routines and Modules

The area of memory where the modules are stored is called the “ICOM region”. It is a particular contiguous area which must be large enough to hold **all** of the modules which you want to have in memory at any one time.

Each module contains one or more routines for your use. The number varies, depending upon what the author of the routines has provided you. Your access to the routines is through the ICALL statement, which is very similar to the CALL statement used for subprograms. The ICALL statement may have parameters (arguments) which you need to “pass” (send down) to the routine itself. What these parameters, if any, may be, and what meaning they hold depends upon what the author had in mind. You can find out that information in the documentation provided with the routine itself.

Setting Aside Memory

As indicated by Figure 2, you cannot load a module until there is an ICOM region into which to load it.

The statement to use to create an ICOM region is —

```
ICOM {size}
```

where {size} is an integer constant indicating the number of words to be used to form the ICOM region. The maximum size is 32 718 words.

The ICOM statement is a “declaration”, that is, it can only be included as a line in a BASIC program, and cannot be executed from the keyboard. This is similar to a DIM or COM statement. The actual region is created when the program is run.

Once created, the ICOM region remains in existence until it is explicitly destroyed. But it is possible to change the size by using another ICOM statement later.

The order in which modules appear in the ICOM region is determined by the order in which they are loaded using the ILOAD statement discussed in the next section.

In most cases, the space which is freed up by reducing the size of the ICOM region, is returned to your available memory space. Sometimes, however, it is not returned, depending upon the status of common (the area created by the COM statements executed to that point) and other option ROMs. The space will be returned whenever —

- There was never common in existence; or,
- SCRATCH C has been executed on existing common and no COM statement has been executed since then; and,
- The requirements of another option ROM, which may be present, do not interfere.

There may be any number of ICOM statements in a program. The current size of the ICOM region is determined by the **last** one which appears in the program when the  key is pressed (or the command RUN is executed). The region continues to exist even if you load in another program which contains no ICOM statements. All ICOM statements must appear in the **main** program only, not in any subprogram.

For example, suppose you have a program with the following statements in it —

```

20   ICOM 984
   *
   *
   *
300  ICOM 492
   *
   *
   *
610  ICOM 2000
   *
   *
   *

```

Upon pressing  the ICOM region would be 2 000 words long. This is because line 610 is the final ICOM appearance.

ALL ICOM statements in a program must appear **before** ANY COM statement. This is to assure that the ICOM region is allocated before the common is allocated.

If, after running this program, you loaded in another program with no ICOM statements in it at all, the ICOM region is still there (with the full 2 000 words).

There are only two ways to completely eliminate an ICOM region —

- Execute SCRATCH A.
- Execute ICOM 0 in a program.

After either of these, the region is no longer in existence. If there are any modules in the region, they disappear as well. If any of those modules contain an active interrupt service routine, you get an error (number 193) if you try to eliminate the region using ICOM 0. The documentation provided on the routines you have loaded should tell you if there are any such active ISRs.

The ICOM 0 procedure can be used in a program to assure that all previous modules are deleted. For example, the following sequence —

```

20   ICOM 0
25   ICOM 2000

```


assures that an ICOM region of precisely 2 000 words is in existence at the running of the program, and one completely clear of any previously loaded modules.

When you are altering the size of the ICOM region, the new size specified becomes the size of the region from the moment of running the program. If the size being requested is **larger** than that which already exists, the additional space needed is requested from the operating system. If the space is available, everything proceeds uneventfully. If the space is **not** available, an error (number 2) results. To make the space available, one of the following procedures must be followed —

- Execute SCRATCH A.
- Execute SCRATCH C.

Each procedure has its separate effects, and the course selected should be determined by your circumstances at the time. Consult the Operating and Programming Manual for details of the other effects of each of these commands.

If the size being requested is smaller, modules are deleted if they no longer fit into the smaller region. For example, suppose the following situation existed —

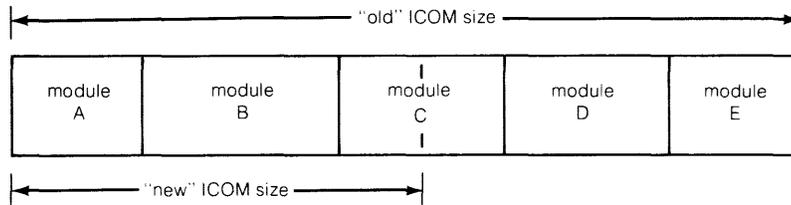

Upon execution of the new ICOM statement, the modules E, D, and C are deleted. None of those modules may contain an active interrupt service routine or an error results (number 193). The documentation provided on the routines should tell you if there are any active ISRs.

Retrieving Modules

Modules are stored in files on mass media as Option ROM (OPRM) or Assembly (ASMB) types of files. On tape media, they are stored in the OPRM type and on non-tape media they are stored in the ASMB type. The two file types are equivalent.¹

To retrieve a module, or modules, from mass storage, identify the file name of the file containing the module. Combine the name with the mass storage unit specifier (MSUS) of the device to form a file specifier.² Then execute the statement —

```
ILOAD {file specifier}
```

This retrieves ALL the modules in the file and stores them in the ICOM region.

If there are modules already loaded in the ICOM region, these additional modules are added to them (NOT written over them). If an existing module in the ICOM area has the same name as one of the modules being loaded, the existing module is deleted and the loaded version takes its place.

If you do not want all the modules in a given file, but instead just a few, you can purge the unwanted ones from the ICOM region using the IDELETE statement —

```
IDELETE {module name} [, {module name} [, ...]]
```

For example, if you had loaded a file which had the routines Larry, Pat, Ed, and Piper, and you want to keep only Larry, then you execute the statements —

```
IDELETE Pat
IDELETE Ed
IDELETE Piper
```

or, more simply —

```
IDELETE Pat,Ed,Piper
```

¹ Some OPRM-type files are not assembly language files, but are created by other option ROMs available on the System 35. However, for those that are assembler files, they are exactly equivalent to the ASMB-type.

² For a full discussion of file specifiers, consult the Operating and Programming Manual or the Mass Storage Techniques manual.

Deletions do not have to be done immediately after loading. They can be done at any time. After the IDELETE has been executed, the portion of the ICOM region which it previously occupied is made available for use in loading another module. The space is NOT returned to the generally available memory; that action is done with an ICOM statement with a smaller size.

Whenever a module is deleted, other modules are moved, as necessary, to take up any slack space in the ICOM region. This is done so that all of the free space in the region is at the end. If a module is being deleted, or being moved as above, and it contains an active interrupt service routine, an error results (number 193). The documentation provided on the routines should tell you if there are any active ISRs.

Of course, to use the IDELETE statement, you must be aware of the module names. Your source for finding these names must be the documentation provided by the authors of the modules.

If you desire at any time to delete **all** of the modules in your ICOM region, you can do so by executing either of the following statements —

```
IDELETE ALL
IDELETE
```

Storing Modules

Sometimes you may desire to move modules in the opposite direction — from memory to mass storage. This is done with the ISTORE statement. The statement has the form —

```
ISTORE {module name} [, {module name} [, ...] ] ; {file specifier}
```

A {module name} must be the name of a module currently stored in the ICOM region. Upon execution of the statement, a file with the name and MSUS given in the {file specifier} is created and the modules named are stored in the file, in the order listed.

The file created by an ISTORE statement is an OPRM or ASMB type, as appropriate to the medium involved. The file can then be used in ILOAD statements at a later time.

In the case that you might want to store **all** of the routines currently in the ICOM region into a particular file, you should use either of the following statements —

```
ISTORE ALL ; {file specifier}
ISTORE ; {file specifier}
```

Accessing Routines

A module may contain one or more routines for your use. Which routines a given module contains should be documented by the author of those routines. Once the module has been loaded, all of its routines are immediately available to you through the ICALL statement. This statement has the form —

```
ICALL {routine name} [ ( {argument} [, {argument} [, ...]] ) ]
```

This ICALL is very much like the CALL of a subprogram in BASIC. If there are arguments required by the routine, the requirements for them should be detailed in the documentation for the routine provided by the routine's author. It is necessary, when using arguments, that you follow the rules for them laid down by the author of the routine.

Thus, for example, if an author stated the following —

“The SORT routine requires one argument, the array identifier of the string array to be sorted.”

then the ICALL statement to be used would probably look something like this —

```
ICALL Sort (Temp$(*))
```

Upon execution of the ICALL statement, execution transfers to the routine named. Upon completion of execution of the routine, control is returned to the BASIC statement following the ICALL. This is identical in effect to the CALL statement in BASIC.

Chapter 3

Handling Interrupts

An “interrupt” is a request for service from an external device connected to the computer through an interface card. The actual type of service being requested depends upon the device. For instance, some devices send interrupts when they have some information they want your program to take, other devices send them when they want some information from your program. How you handle them depends upon what the device wants.

An assembly language routine which you are using may have the capability of handling interrupts from external devices. It may also inform your BASIC program of special conditions detected during the processing of an interrupt, e.g., end of interrupt service, input data error, etc. You, in turn, may take this information and cause a branch to another part of your program.

To determine whether the routine you are using handles interrupts, you should consult the documentation provided with the routine by the authors of the routine. The documentation should tell you what kind of interrupts to expect and what kind of special processing (“handling”) may be required, if any, on the part of your program.

Branching on Interrupts

Since interrupts are a program-independent occurrence, the handling of an interrupt is sometimes a reason for causing the program to suspend whatever it is doing and do something else (i.e., “branch”). Like the ON KEY statement (see the 9835A/B Operating and Programming Manual), there are three ways these branches can be taken —

```
ON INT # {select code} [, {priority} ] CALL {subprogram name}
ON INT # {select code} [, {priority} ] GOSUB {line identifier}
ON INT # {select code} [, {priority} ] GOTO {line identifier}
```

These statements are provided by the ROM in order to allow the assembly language routine to signal your BASIC program that a special condition has arisen and to indicate where it came from. When you have executed an ON INT statement and an interrupt occurs, the following sequence ensues —

1. Execution of the currently executing BASIC line is immediately suspended.
2. The assembly language routine assigned to the interrupting select code services the interrupt.
3. If the assembly language ISR is so programmed, it signals BASIC that an interrupt occurred on the select code of the routine’s choosing (which may not be the one where the interrupt actually occurred).
4. Execution of the BASIC line resumes where it left off and finishes (provided there are no further interrupts, in which case, steps 1 through 3 are repeated).
5. Upon completion of the BASIC line, the ON INT for the select code with the assembly language ISR defined interrupt is honored and the branch indicated for it (be it a CALL, GOSUB, or GOTO) is taken.

In the GOTO version, the branch is “absolute”, which is to say that your program will go to the line indicated and pick up its execution there, forgetting where it was before. This has the effect of an “abortive” type of branch, and should be used only when you want the program to resume execution at some pre-determined point after handling the interrupt, without regard to where the program was before the interrupt occurred.

In the CALL and GOSUB versions, the branch is only temporary. After the subprogram or subroutine has been executed and the SUBEXIT, SUBEND, or RETURN (as appropriate) has been executed, then the program will return to the line following the one where it was interrupted. This is the same as if the CALL or GOSUB was in between the interrupted line and the one following it.

The {line identifier} and {subprogram name} in the CALL, GOSUB, and GOTO statements are the same as elsewhere in BASIC, except that a CALL may not have any parameters.

The {select code} you specify with the statement restricts the branching action to occurring only when the assembly language triggers the ON INT condition for that select code. The interrupt may have occurred in actuality on any select code and the assembly language routine may decide under some circumstances to have triggered the ON INT with some other select code value. This can be a way of allowing more than one branch for interrupts from a single interrupting device.

As an example —

```
100 ON INT #2 GOSUB Take_reading  
110 ON INT #7 GOSUB Take_reading  
120 ON INT #12 CALL Process_data
```

Should anywhere in the program an interrupt occur, causing the assembly language routine to indicate select codes 2 or 7, the subroutine “Take_reading” would be performed and then resume program execution at the point of interruption. Should an interrupt be received from select code 12, then the subprogram “Process_data” would be performed.

Prioritizing Interrupts

Since more than one interrupt may occur while a single BASIC statement is executing, it is possible that by the time the line finishes you may have a number of ON INT branches waiting to be executed. In such situations you may want to assure that some ON INT branches are taken before others, or that you finish one routine (caused by an ON INT GOSUB or ON INT CALL) before you start another. This can be achieved by using the {priority} option of the ON INT statement, thereby “prioritizing” the branching caused by interrupts.*

There is a “system priority” number for ordering this interrupt branching. For an ON INT to be honored at the end of a BASIC line, its priority must be greater than the current system priority.

Initially, the system priority is set to 0. When a BASIC line finishes, and there is at least one ON INT branch pending which is greater than the system priority, then the system will take the branch associated with the ON INT with the greatest {priority}. The values assigned to {priority} may be any integer numeric expression from 1 to 15. If {priority} is omitted, 1 is assumed.

If the ON INT branch to be executed is a GOTO, then the system priority level is unchanged. But if the branch to be executed is a GOSUB or a CALL, then the system priority level is changed to the priority level of the ON INT. Whenever the subroutine or subprogram is finished executing, then the previous system priority level is restored.

Thus, with the GOSUB and CALL versions, there are two effects involving priorities —

- The subroutine or subprogram is not allowed to execute until its priority is the highest one pending.
- Whenever the subroutine or subprogram is executing, it locks out any other interrupting branches unless they have a higher priority.

With the GOTO version there are also two effects, slightly differing —

- The branch is not taken until it has the highest priority of all pending branches.
- The execution of the branch does not lock out any other branches, so that at the end of the line to which it branches, if there are other pending branches, the highest one of those will then be executed.

* This “prioritizing” also holds between the various types of end-of-line branch statements that have the priority parameter. Thus an ON KEY with high priority will be executed before an ON INT with low priority.

For example, suppose there are these four statements in effect —

```

ON INT #4,1 GOTO Routine_4
ON INT #5,9 GOSUB Routine_5
ON INT #6,5 GOTO 1000
ON INT #7,15 GOSUB Routine_7
    
```

and also suppose that at the end of some BASIC line in the program, an interrupt had been received from all four of the interfaces involved. Then the process of dealing with them would proceed like this —

EVENT	NEXT ACTION	SYSTEM PRIORITY
Reaches end of current BASIC line	GOSUB Routine_7	Changes from 0 to 15
Finishes Routine_7	GOSUB Routine_5	Changes from 15 to 9

Suppose at this point another interrupt is received from select code 7.

EVENT	NEXT ACTION	SYSTEM PRIORITY
Reaches end of current BASIC line in Routine_5	GOSUB Routine_7	Changes from 9 to 15
Finishes Routine_7	Returns to interrupted point in Routine_5	Changes from 15 to 9
Finishes Routine_5	GOTO 1000	Changes from 9 to 0
Finishes with line 1000	GOTO Routine_4	Stays at 0

Environmental Considerations

Changes in program environment, i.e., calling a subprogram or returning from one, can affect whether an ON INT is in effect or not.

The CALL version of an ON INT is **always** in effect, whether in the main program or in any subprogram.

In the GOSUB or GOTO versions, the statement is in effect **only** in the same program environment. This is to say that if you have executed an ON INT statement in your main program, then it is effective only while your program is executing part of the main program. The instant the program goes into a subprogram (through a CALL statement), the statement is no longer effective until the execution returns to the main. Similarly, if you define an ON INT in a subprogram, it is effective only while the program is executing that subprogram.

A side-effect occurs here when you use the CALL version of an ON INT. By calling the subprogram with an ON INT, you have the effect of locking out the other interrupts, except those which are executed in the subprogram itself and other CALL versions. This is regardless of priority. In the priority example in the previous section, if the ON INT#5 had been a CALL instead of a GOSUB, then the second interrupt from select code 7 would not have been acknowledged until the subprogram had finished.

Since recursive calls of subprograms are possible, it is also possible that many calls to the same subprogram may be stacked up because an interrupt from a different select code with a CALL version of an ON INT in effect may be received while processing the CALL caused by a previous interrupt.

Disabling Interrupt Branching

The branching enabled by an ON INT statement can be disabled using an OFF INT statement for the same select code. It is effective for the ON INT statement within the same program environment (main program or subprogram) or for the CALL versions of the ON INT within any environment.

The statement has the form —

```
OFF INT # {select code}
```

where {select code} is a numeric expression for any valid interface select code between 1 and 14, inclusive.

The effect of the OFF INT statement is to disable the ON INT for that select code within the current environment. If there is no ON INT statement currently in effect for the select code, then the OFF INT will have no effect.

Disable and Enable work the same way for the ON INT statements as they do for the ON KEY statements.

Chapter 4

Errors and Error Processing

While you are using or accessing an assembly language routine, it is possible that an error may occur which is associated with your attempts to use the routine. It is intended that this chapter give some guidance as to how certain errors can be handled. It is not a definitive checklist of what can go wrong, nor is it an exhaustive treatment of the means to correct the difficulties which are listed. Rather it is meant as a reference for **some** of the things which can go wrong, what might cause them, and how to deal with them. Each programmer has a unique method of approaching the problem of error processing and there is no way to anticipate all of them. Even so, the following should offer some assistance in identifying the source of an error.

Not every machine error is covered here — only those directly related to accessing and using assembly language routines. A complete listing of error messages can be found in Appendix A.

The following list is of the messages you may receive should there be an assembly language-related problem of some sort. Possible corrective actions are included in the discussion of each error.

- ERROR 1 ROM missing, or configuration error. To operate the System 35, all system ROMs and the Assembly Execution ROM must be in place. Perform the system test if the problem persists.
- ERROR 2 Memory overflow. You may have specified an ICOM which is too large for your current available space. Things to try to get things to fit: select a smaller ICOM size; execute SCRATCH C (if no important data remains in common), delete modules and reduce the ICOM size; segment your program. The error may also be caused by trying to load modules which are too large for the current ICOM region.
- ERROR 190 No ICOM region found. You have failed to create the ICOM region, or have inadvertently deleted it. Program an ICOM statement of adequate size and re-run the program.

- ERROR 191 Module not found. The module indicated in an ISTORE statement is not currently resident in the ICOM region. Check your module names used in the statement to find the one which is missing.
- ERROR 193 Attempt to move or delete module containing an active interrupt service routine. This is the result of trying to reduce the size of the ICOM region (or to eliminate it), or trying to delete a module, when one of the affected modules has an active interrupt service routine. The only ways to allow the action to take place are to SCRATCH A (which affects a number of other things), to press  , or to inactivate the ISR. To inactivate the ISR, consult the routine's documentation.
- ERROR 194 Address out of range in IDUMP statement. The range of addresses is - 32768 to + 32767. Check particularly the values of any variables used.
- ERROR 195 Routine not found. You may have specified the wrong routine name or failed to load the correct module. Double check the documentation indicating the location and name of the routine.
- ERROR 196 Unsatisfied externals. You may not have loaded all of the modules necessary to run the routine. Double check the routine's documentation for the other resources you may need. May be an error in the programming of the module, in which case check with the routine's author.
- ERROR 197 Missing COM statement. The routine you have called is expecting to find or place some of its data in common, and you have not provided the COM statement required. Check the documentation for the routine to determine the common requirements.
- ERROR 198 Common area does not correspond to module requirements. The routine you have called is expecting to find or place some of its data in common, but your COM statement does not match up the variables correctly in either type or size. Check the documentation for the routine to determine the common requirements.
- ERROR 199 Insufficient number of items in BASIC COM declarations. The routine you have called is expecting to find or place some of its data in common, but your COM statement does not provide enough variables to satisfy the routine's needs. Check the documentation for the routine to determine the common requirements.

Appendix **A**

Error Messages

1	Missing ROM; or configuration error
2	Memory overflow; or subprogram larger than block of memory
3	Line not found or not in current program segment
4	Improper return
5	Abnormal program termination; no <code>END</code> or <code>STOP</code> statement
6	Improper <code>FOR/NEXT</code> matching
7	Undefined function or subroutine
8	Improper parameter matching
9	Improper number of parameters
10	String value required
11	Numeric value required
12	Attempt to redeclare variable
13	Array dimensions not specified
14	Multiple <code>OPTION BASE</code> statements or <code>OPTION BASE</code> statement preceded by variable declarative statements
15	Invalid bounds on array dimension or string length in memory allocation statement
16	Dimensions are improper or inconsistent; or more than 32 767 elements in an array
17	Subscript out of range
18	Substring out of range or string too long
19	Improper value

20	Integer precision overflow
21	Short precision overflow
22	Real precision overflow
23	Intermediate result overflow
24	TAN ($n\pi/2$), when n is odd
25	Magnitude of argument of ASN or ACS is greater than 1
26	Zero raised to negative power
27	Negative base raised to non-integer power
28	LOG or LGT of negative number
29	LOG or LGT of zero
30	SQR of negative number
31	Division by zero; or X MOD Y with Y = 0
32	String does not represent valid number; or string response when numeric data required
33	Improper argument for NUM, CHR\$, or RPT\$ function
34	Referenced line is not IMAGE statement
35	Improper format string
36	Out of DATA
37	EDIT string longer than 160 characters
38	I/O function not allowed
39	Function subprogram not allowed
40	Improper replace, delete or REN command
41	First line number greater than second
42	Attempt to replace or delete a busy line or subprogram
43	Matrix not square
44	Illegal operand in matrix transpose or matrix multiply
45	Nested keyboard entry statements

46	No binary in memory for STORE BIN; or no program in memory for SAVE
47	Subprogram COM declaration is not consistent with main program
48	Recursion in single-line function
49	Line specified in ON declaration not found
50	File number less than 1 or greater than 10
51	File not currently assigned
52	Improper mass storage unit specifier
53	Improper file name
54	Duplicate file name
55	Directory overflow
56	File name is undefined
57	Mass Storage ROM is missing
58	Improper file type
59	Physical or logical end-of-file found
60	Physical or logical end-of-record found in random mode
61	Defined record size is too small for data item
62	File is protected or wrong protect code specified
63	The number of physical records is greater than 32 767
64	Medium overflow (out of user storage space)
65	Incorrect data type
66	Excessive rejected tracks during a mass storage initialization
67	Mass storage parameter less than or equal to 0
68	Invalid line number in GET or LINK operation
69–79	(See Mass Storage ROM errors)
80	Cartridge out; or door open
81	Mass storage device failure
82	Mass storage device not present

83	Mass storage medium is write protected
84	Record not found
85	Mass storage medium is not initialized
86	Not a compatible tape cartridge
87	Record address error; or information can't be read
88	Read data error
89	Check read error
90	Mass storage system error
91-99	(See Mass Storage ROM errors)
100	Item in PRINT USING list is string but IMAGE specifier is numeric
101	Item in PRINT USING list is numeric but IMAGE specifier is string
102	Numeric field specifier wider than printer width
103	Item in PRINT USING list has no corresponding IMAGE specifier
104-109	(Unused)
110-119	(See Plotter ROM errors)
120-183	(Unused)
184-199	(See Assembly Language ROM errors)

System Error octal number; octal number

This error indicates an error in the machine's firmware system; it is a fatal error. If reset does not bring control back, the machine must be turned off, then on again. If the problem persists, contact your Sales and Service Office.

Mass Storage ROM Errors

69	Format switch off
70	Not a disk interface
71	Disk interface power off
72	Incorrect controller address; or controller power off
73	Incorrect device type in mass storage unit specifier
74	Drive missing or power off
75	Disk system error
76	Incorrect unit code in mass storage unit specifier
77-79	(Unused)
91-99	(Unused)

Plotter ROM Errors

110	Plotter type specification not recognized
111	Plotter has not been specified
112	(Unused)
113	LIMIT specifications out of range
114-119	(Unused)

Assembly Language ROM Errors

- 184 Improper argument in `OCTAL` or `DECIMAL` function.
- 185 Break Table overflow.
- 186 Undefined label or subprogram name used in `IBREAK` statement.
- 187 Attempt to write into protected memory; or, attempt to execute instruction not in `ICOM` region.
- 188 Label used in an assembled location not found.
- 189 Doubly-defined entry point or routine.
- 190 Missing `ICOM` statement.
- 191 Module not found.
- 192 Errors in assembly.
- 193 Attempt to move or delete module containing an active interrupt service routine.
- 194 Address out of range in `IDUMP` statement.
- 195 Routine not found.
- 196 Unsatisfied externals.
- 197 Missing `COM` statement.
- 198 Common area does not correspond to module requirements.
- 199 Insufficient number of items in `BASIC COM` declarations.

Appendix **B**

Maintenance

Maintenance Agreements

Service is an important factor when you buy Hewlett-Packard equipment. If you are to get maximum use from your equipment, it must be in good working order. An HP Maintenance Agreement is the best way to keep your equipment in optimum running condition.

Consider these important advantages —

- **Fixed Cost** — The cost is the same regardless of the number of calls, so it is a figure that you can budget.
- **Priority Service** — Your Maintenance Agreement assures that you receive priority treatment, within an agreed-upon response time.
- **On-Site Service** — There is no need to package your equipment and return it to HP. Fast and efficient modular replacement at your location saves you both time and money.
- **A Complete Package** — A single charge covers labor, parts, and transportation.
- **Regular Maintenance** — Periodic visits are included, per factory recommendations, to keep your equipment in optimum operating condition.
- **Individualized Agreements** — Each Maintenance Agreement is tailored to support your equipment configuration and your requirements.

After considering these advantages, we are sure you will see that a Maintenance Agreement is an important and cost-effective investment.

For more information, please contact your local HP Sales and Service Office. A list follows.

SALES & SERVICE OFFICES

AFRICA, ASIA, AUSTRALIA

ANGOLA
Telectra
Empresa Técnica de Equipamentos
Eléctricos, S.A.R.L.
R. Barbosa Rodrigues, 42-1-DT.
Caxa Postal, 6487
Luanda
Tel: 35515/6
Cable: TELECTRA Luanda
P.O. Box 8947

AUSTRALIA
Hewlett-Packard Australia Pty. Ltd.
31-41 Joseph Street
Blackburn, Victoria 3130
P.O. Box 36
Doncaster East, Victoria 3109
Tel: 898351
Cable: HEWPARD Melbourne
Hewlett-Packard Australia Pty. Ltd.
31 Bridge Street
Pymble
New South Wales, 2073
Tel: 4496566
Tel: 21561
Cable: HEWPARD Sydney
Hewlett-Packard Australia Pty. Ltd.
153 Greenhill Road
Parkside, S.A., 5063
Tel: 2725911
Tel: 82536
Cable: HEWPARD Adelaide
Hewlett-Packard Australia Pty. Ltd.
141 Stirling Highway
Nedlands, W.A. 6009
Tel: 3865455
Tel: 93859
Cable: HEWPARD Perth
Hewlett-Packard Australia Pty. Ltd.
12 Wollongong Street
Fyshwick, A.C.T. 2809
Tel: 804244
Tel: 62650
Cable: HEWPARD Canberra
Hewlett-Packard Australia Pty. Ltd.
5th Floor
Teachers Union Building
495-499 Boundary Street
Spring Hill, Queensland 4000
Tel: 2281544
Cable: HEWPARD Brisbane

BANGLADESH
The General Electric Co. of Bangladesh Ltd.
Magnet House 72
Dilkusha Commercial Area
Moti Hill, Dacca 2
Tel: 52415, 252419
Tel: 734
Cable: GECDAC Dacca

ETHIOPIA
Abdella Abdulmaik
P.O. Box 2635
Addis Ababa
Tel: 11 93 40

GUAM
Medical Only
Guam Medical Supply, Inc.
Suite C, Airport Plaza
P.O. Box 8947
Tamuning 96911
Tel: 646-4513
Cable: EARMED Guam

HONG KONG
Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Connaught Road, C.
Hong Kong
Tel: 5-45564
Tel: 74766 SCHMC HX

INDIA
Blue Star Ltd.
Kastur Buildings
Jansadeh Tala Rd
Bombay 400 020
Tel: 29 50 21
Tel: 011-2156
Cable: BLUEFROST
Blue Star Ltd.
Sahar
414/2 Vir Savarika Marg
Prabhadevi
Bombay 400 025
Tel: 45 78 87
Cable: 011-4093
Hewlett-Packard Australia Pty. Ltd.
Blue Star Ltd.
Band Box House
Prabhadevi
Bombay 400 025
Tel: 45 73 01
Tel: 011-3751
Cable: BLUESTAR
Blue Star Ltd.
Bhavdip
Stadium Road
Ahmedabad 380 014
Tel: 4280
Cable: BLUEFROST
Blue Star Ltd.
7 Hare Street
P.O. Box 506
Calcutta 700 001
Tel: 23-0131
Tel: 021-7655
Cable: BLUESTAR
Blue Star Ltd.
Bhandari House
7th & 8th Floor
1/1 Nehru Place
New Delhi 110 024
Tel: 534170 & 535156
Tel: 031-2463
Cable: BLUESTAR

Blue Star Ltd.
Blue Star House
11/11A Magarath Road
Bangalore 560 025
Tel: 55688
Tel: 043-430
Cable: BLUESTAR
Blue Star Ltd.
Meekshi Mandiram
xxx/1678 Mahatma Gandhi Rd.
Cochin 682 016
Tel: 32069 32161 32282
Cable: 0685-514
Cable: BLUESTAR
Blue Star Ltd.
1-1-1171
Sarajini Devi Road
Secunderabad 500 003
Tel: 70126, 70127
Tel: 015-459
Cable: BLUEFROST
Blue Star Ltd.
234 Kodambakkam High Road
Madras 600 034
Tel: 82058
Tel: 041-379
Cable: BLUESTAR

INDONESIA
BERCA Indonesia P.T.
P.O. Box 496AJkt.
Jin Abdul Muhs 62
Jakarta
Tel: 349255, 349886
Tel: 46748 BERSIL IA
Cable: BERSAL
BERCA Indonesia P.T.
P.O. Box 174Sby.
23 Jln. Jemari
Surabaya
Tel: 42027
Cable: BERCAcon

ISRAEL
Electronics Engineering Div.
of Motorola Israel Ltd.
16, Kremetski Street
P.O. Box 25016
Tel-Aviv
Tel: 38973
Tel: 33569, 34164
Cable: BASTEL Tel-Aviv

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 4th Floor
4-20, Nishinakajima 5-chome
Yodogawa-ku, Osaka-shi
Osaka 532
Tel: 06-304-6021
Tel: 523-3624
Yokogawa-Hewlett-Packard Ltd.
29-21, Takaido-Higashi 3-chome
Suginami-ku, Tokyo 168
Tel: 03-331-6111
Tel: 232-2024 YHP-Tokyo
Cable: YHPMARKET TOK 23 724

Yokogawa-Hewlett-Packard Ltd.
Nakamo Building
24 Kami Sasajima-cho
Nakamura-ku, Nagoya, 450
Tel: 052 571-5171
Yokogawa-Hewlett-Packard Ltd.
Tanigawa Building
2-24-1 Tsuruya-cho
Kanagawa-ku
Yokohama, 221
Tel: 045-312-1252
Tel: 085-514
Tel: 382-3204 YHP YOK
Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Building
105, 1-chome, San-no-maru
Mito, Ibaragi 310
Tel: 0292-25-7470
Yokogawa-Hewlett-Packard Ltd.
Inoue Building
1348-3, Asahi-cho, 1-chome
Atsugi, Kanagawa 243
Tel: 0462-24-0452
Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi
Kumagaya Building
4th Floor
Kumagaya, Saitama 360
Tel: 0485-24-6563

KENYA
Advanced Communications Ltd.
P.O. Box 30070
Nairobi
Tel: 331955
Tel: 22639
Medical Only
International Aeradio (E.A.) Ltd.
P.O. Box 19012
Nairobi Airport
Nairobi
Tel: 336055/6
Tel: 22201/2301
Cable: INTAERIO Nairobi
Medical Only
International Aeradio (E.A.) Ltd.
P.O. Box 95221
Mombasa
KOREA
Samsung Electronics Co., Ltd.
15th Floor, Daeyoung Bldg.,
25-5, 1-KA
Chong Moo-Ro, Chung-Ku,
Seoul
Tel: (23) 6811, 778-3401/2/3/4
Tel: 22575

MALAYSIA
Hewlett-Packard Sales SDN BHD
Suite 2.21/2.22
Bangunan Angkasa Raya
Jalan Ampang
Kuala Lumpur
Tel: 23320/27491

Protel Engineering
P.O. Box 197
Lot 259, Satok Road
Kuching, Sarawak
Tel: 53544
Cable: PROTELENG

MOZAMBIQUE
A.N. Goncalves, Ltd.
162, 1^o Apr. 14 Av. D. Luis
Caxa Postal 107
Maputo
Tel: 27091, 27114
Tel: 6-203 NEGON Mo
Cable: NEGON

NEW GUINEA
Hewlett-Packard Australia Pty. Ltd.
Development Bank Building
Ground Floor
Ward Strip
Port Moresby, Paupua
Tel: 258933

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPACK Wellington
Pty. Ltd.
Hewlett-Packard (N.Z.) Ltd.
Palakura Professional Centre
35/2 Paturanga Highway
Paikauranga
Tel: 569-651
Cable: HEWPACK Auckland
Analytical/Medical Only
Medical Supplies N.Z. Ltd.
Scientific Division
79 Carlton Gore Road, Newmarket
P.O. Box 1234
Auckland
Tel: 75-289
Cable: DENTAL Auckland
Analytical/Medical Only
Medical Supplies N.Z. Ltd.
Christchurch
303 Great King Street
P.O. Box 233
Dunedin
Tel: 88-817
Cable: DENTAL Dunedin

NIGERIA
The Electronics Instrumentations Ltd.
N68/770 Oyo Road
Oluseun House
P.M.B. 5402
Ibadan
Tel: 461577
Tel: 31231 TEL NG
Cable: THETIEL Ibadan

MOZAMBIQUE
A.N. Goncalves, Ltd.
162, 1^o Apr. 14 Av. D. Luis
Caxa Postal 107
Maputo
Tel: 27091, 27114
Tel: 6-203 NEGON Mo
Cable: NEGON

NEW GUINEA
Hewlett-Packard Australia Pty. Ltd.
Development Bank Building
Ground Floor
Ward Strip
Port Moresby, Paupua
Tel: 258933

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, Wellington 3
P.O. Box 9443
Courtenay Place
Wellington
Tel: 877-199
Cable: HEWPACK Wellington
Pty. Ltd.
Hewlett-Packard (N.Z.) Ltd.
Palakura Professional Centre
35/2 Paturanga Highway
Paikauranga
Tel: 569-651
Cable: HEWPACK Auckland
Analytical/Medical Only
Medical Supplies N.Z. Ltd.
Scientific Division
79 Carlton Gore Road, Newmarket
P.O. Box 1234
Auckland
Tel: 75-289
Cable: DENTAL Auckland
Analytical/Medical Only
Medical Supplies N.Z. Ltd.
Christchurch
303 Great King Street
P.O. Box 233
Dunedin
Tel: 88-817
Cable: DENTAL Dunedin

Hewlett-Packard South Africa (Pty.) Ltd.
P.O. Box 120
Howard Place, Cape Province, 7450
Pine Park Centre, Forest Drive,
Pinelands, Cape Province, 7405
Tel: 53-7955 thu 9
Tel: 57-0006

SRI LANKA
Metropolitan Agencies Ltd.
239/8 Union Place
Colombo 2
Tel: 35947
Tel: 1377METROLD CE
Cable: METROLD

SUDAN
Radison Trade
P.O. Box 921
Khartoum
Tel: 44048
Tel: 375
Cable: THETIEL Ibadan

TAIWAN
Hewlett-Packard Far East Ltd.
Taiwan Branch
39 Chung Hsiao West Road
Section 1, 7th Floor
Taipei
Tel: 3819160-9, 314101
Cable: HEWPACK TAIPEI
Hewlett-Packard Far East Ltd.
Taiwan Branch
68-2 Chung Cheng 3rd. Road
Keelung
Tel: 511027, 512927
Tel: 2854
Cable: COOPERATOR Karachi
Mushko & Company, Ltd.
38B, Satellite Town
Karachi-3
Tel: 511027, 512927
Tel: 2854
Cable: COOPERATOR Karachi
Mushko & Company, Ltd.
38B, Satellite Town
Karachi-3
Tel: 511027, 512927
Tel: 2854
Cable: COOPERATOR Karachi
Mushko & Company, Ltd.
38B, Satellite Town
Karachi-3
Tel: 511027, 512927
Tel: 2854
Cable: COOPERATOR Karachi

PHILIPPINES
The Online Advanced Systems Corporation
Rico House
Amorsolo cor. Herrera Str.
Legaspi Village, Makati
P.O. Box 1510
Metro Manila
Tel: 85-35-81, 85-34-91, 85-32-21
Tel: 3274 ONLINE
Cable: HEWPACK Auckland

RHODESIA
Field Technical Sales
45 Kelvin Road North
P.O. Box 3458
Salisbury
Tel: 705231 (5 lines)
Tel: RH 422
Cable: HEWPACK, Singapore

SINGAPORE
Hewlett-Packard Singapore (Pte.) Ltd.
1150 Depot Road
Alexandra P.O. Box 58
Singapore 4
Tel: 270-2355
Cable: HPSG RS 21486
Cable: HEWPACK, Singapore

SOUTH AFRICA
Hewlett-Packard South Africa (Pty.) Ltd.
Private Bag Wandywood,
Sandton, Transvaal, 2144
Hewlett-Packard Centre
Daphne Street, Wandywood,
Sandton, 2144
Tel: 802-1040/8
Tel: 88-817
Cable: HEWPACK Johannesburg

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11620A - 168th Street
Edmonton T5M 3T9
Tel: (403) 452-3670
TWX: 610-631-2431

Hewlett-Packard (Canada) Ltd.
210,7220 Fisher St. S.E.
Calgary T2H 2H8
Tel: (403) 253-2713
TWX: 610-821-6141

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
Richmond V6X 2W7
Tel: (604) 270-2277
TWX: 610-925-5059

MANITOBA
Hewlett-Packard (Canada) Ltd.
380-550 Century St.
Winnipeg R3H 0Y1
Tel: (204) 786-7601
TWX: 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
800 Windmill Road
Dartmouth B3B 1L1
Tel: (902) 469-7820
TWX: 610-671-4482

ONTARIO
Hewlett-Packard (Canada) Ltd.
1020 Morrison Dr.
Ottawa K2H 9K7
Tel: (613) 820-6483
TWX: 610-563-1636
Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
Mississauga L4V 1M8
Tel: (416) 678-9430
TWX: 610-492-4246
Hewlett-Packard (Canada) Ltd.
552 Newbold Street
London N6E 2S5
Tel: (519) 686-9181

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Blvd.
Gréville Hdfst. 3-5
P.O. Box 155
Lima 1
Tel: 41-4325
Tel: Pub. Booth 25424 SISIDORO
Cable: ELMED Lima

FOR CANADIAN AREAS NOT LISTED, CONTACT:
Hewlett-Packard Intercontinental Ltd.
Palo Alto, California 94304
Tel: (415) 856-1501
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Tel: 034-8300, 034-8493

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina S.A.
Av. Leandro N. Alem 822 - 12°
1001 Buenos Aires
Tel: 31-6063, 4,5,6
Tel: 122443 AR GIGY
Cable: HEWPACKARG
Biotron S.A. C.I. y M.
Bolívar 177
1066 Buenos Aires
Tel: 30-4846, 34-9356, 34-0460,
33-2863
Tel: 011-7595
Cable: Biotron Barrios
BOLIVIA
Casa Kavin S.A.
Calle Potosí 1130
P.O. Box 500
La Paz
Tel: 41530, 53221
Tel: CWC BX 5298, ITT 3560082
Cable: KAVLIN

Hewlett-Packard do Brasil
I.e.C. Ltda.
Bolívar 177
90000-Porto Alegre-RS
Tel: (0512) 22-2998, 22-5621
Cable: HEWPACK Porto Alegre
Hewlett-Packard do Brasil
I.e.C. Ltda.
Av. Epitacio Pessoa, 4664
Lagoa
20000-Rio de Janeiro-RJ
Tel: (021) 21-9095 HPBR-BR
Tel: 341552
Cable: HEWPACK
Rio de Janeiro

BRAZIL
Hewlett-Packard do Brasil
I.e.C. Ltda.
Alameda Rio Negro, 750
Alphaville
06400 Barueri SP
Tel: 3128-3222
Cable: HEWPACK Sao Paulo

COLUMBIA
Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-75
Apartado Aéreo 6287
Bogotá, I.D.E.
Tel: 269-8877
Tel: 44400
Cable: AARIS Bogotá
Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 63 No. 49-A-31
Apartado 54098
Medellin
Tel: 304475

COSTA RICA
Ciencia Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
San José
Tel: 24-38-20, 24-06-19
Tel: 24-067 GALGUR CR
Cable: GALGUR

ECUADOR
Computadoras y Equipos
Electrónicos del Ecuador
P.O. Box 6423 CCI
Eloy Alfaro No. 1824,3°Piso
Quito
Tel: 453 482
Tel: 2548 CYEDE ED
Cable: CYEDE-Quito
Medical Only
Hospital S.A.
Casilla 3590
Riobles 625
Quito
Tel: 545-250
Cable: HOSPITALAR-Quito

EL SALVADOR
IPESA
Bulevar de los Heroes 11-48
San Salvador
Tel: 252787

GUATEMALA
IPESA
Avenida Reforma 3-48,
Zona 9
Guatemala City
Tel: 315627 314786, 66471-5, ext. 9
Tel: 4192 Teletro Gu

MEXICO
Hewlett-Packard Mexicana,
S.A. de C.V.
Av. Penitenciar Sur No. 6501
Tepepan, Xochimilco
Mexico 23, D.F.
Tel: 905-676-4600
Tel: 017-74-507
Hewlett-Packard Mexicana,
S.A. de C.V.
Ave. Constitución No. 2184
Monterrey, N.L.
Tel: 48-71-32, 48-71-84
Tel: 038-410
Cable: ROTERAN Managua

NICARAGUA
Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 25114, 23412, 23454, 22400
Cable: ROTERAN Managua

PANAMA
Electrónico Baboa, S.A.
Apartado 4929
Panama 5
Calle Samuel Lewis
Edificio de Correo 370
Ciudad de Panama
Tel: 40-2700
Tel: 3483103 Curundo,
Canal Zone
Cable: ELECTRON Panama

PERU
Compañía Electro Médica S.A.
Los Flamencos 145
San Isidro Casilla 1030
Lima 1
Tel: 41-4325
Tel: Pub. Booth 25424 SISIDORO
Cable: ELMED Lima

SURINAME
Surtel Radio Holland N.V.
Caracas 105
Los Pluces Norte
3a Transal
Edificio Segre
Caracas 107
Tel: 239-4133 (20 lines)
Tel: 25146 HEWPACK
Cable: HEWPACK Caracas

TRINIDAD & TOBAGO
CARTEL
Caribbean Telecoms Ltd.
P.O. Box 732
69 Frederick Street
Port-of-Spain
Tel: 62-53068

URUGUAY
Pablo Ferrando S.A. C. e.
Avenida Italia 2877
Carrasco
Montevideo
Tel: 40-2700
Tel: 702 Public Booth Para
Canal Zone
Cable: RADIUM Montevideo

VENEZUELA
Hewlett-Packard de Venezuela
C.A.
P.O. Box 50933
Caracas 105
Los Pluces Norte
3a Transal
Edificio Segre
Caracas 107
Tel: 239-4133 (20 lines)
Tel: 25146 HEWPACK
Cable: HEWPACK Caracas

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard Inter-Americas
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 856-1501
TWX: 910-373-1260
Cable: HEWPACK Palo Alto
Tel: 034-8300, 034-8493

EUROPE, NORTH AFRICA AND MIDDLE EAST

AUSTRIA
Hewlett-Packard Ges. m. B. H.
Handelskai 52
P.O. Box 7
A-1205 Vienna
Tel: 351621-27
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

BAHRAIN
Medical Only
Wael Pharmacy
P.O. Box 648
Bahrain
Tel: 54985, 56123
Telex: 8550 WAEI GJ
Cable: WAEHPHARM

Analytical Only
Al Hamidiya Trading
and Contracting
P.O. Box 20074
Manama
Tel: 259978, 259958
Telex: 8895 KALDIA GJ

BELGIUM
Hewlett-Packard Benelux
S.A. N.V.
Avenue du Col-Vert, 1,
(Groenkaaglaan)
B-1170 Brussels
Tel: (02) 660 50 50
Cable: PALOBEN Brussels
Telex: 23-494 paloben bru

CYPRUS
Kyronics
19 Georgios Xenopoulos Street
P.O. Box 1152
Nicosia
Tel: 45628/29
Cable: Kyronics Pandeis
Telex: 3018

CZECHOSLOVAKIA
Vývojova a Provozni Zakladna
Vyzkumnych Ustav u Bechovicich
CSSR-25097 Bechovice u Prahy
Tel: 89 93 41
Telex: 12133

DDR
Entwicklungsabteilung der TU Dresden
Forschungsinstitut Meinsberg
DDR-7305
Waldheim/Meinsberg
Tel: 37 867
Telex: 518741
Export Contact AG Zurich
Guenther Forger
Schlegelstrasse 15
1040 Berlin
Tel: 42-74-12
Telex: 111889

DENMARK
Hewlett-Packard A/S
Datavej 52
DK-3460 Birkerød
Tel: (02) 81 66 40
Cable: HEWPAK AS
Telex: 37409 hpas dk

Hewlett-Packard A/S
Nawle
DK-8600 Silkeborg
Tel: (06) 82 71 66
Telex: 37409 hpas dk
Cable: HEWPAK AS

EGYPT
I. E.A.
International Engineering Associates
24 Hussein Hegazi Street
Kasr-el-Aini
Cairo
Tel: 23 829
Telex: 63830
Cable: INTENGASSO

SAMITRO
Sami Amin Trading Office
18 Abdel Aziz Gawish
Abdine-Cairo
D-2000 Hamburg
Tel: (040) 24 13 93

GERMAN FEDERAL REPUBLIC
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Bernar Strasse 117
Postfach 560 140
D-6000 Frankfurt 56
Tel: (0611) 50-04-
Cable: HEWPAKSA Frankfurt
Telex: 04 13249 hpfm d

Hewlett-Packard GmbH
Technisches Büro Böblingen
Herrenberger Strasse 110
D-7030 Böblingen, Württemberg
Tel: (0703) 667
Cable: HEWPAK Böblingen
Telex: 07265739 bbn

Hewlett-Packard GmbH
Technisches Büro Düsseldorf
Emanuel-Lutze-Str. 1 (Seestern)
D-4000 Düsseldorf
Tel: (021) 59711
Telex: 085-866 533 hpdd d

Hewlett-Packard GmbH
Cardiac Services Büro Hamburg
Wendensstrasse 23
D-2000 Hamburg
Tel: (040) 24 13 93

ALABAMA
P.O. Box 4207
8230 Whitesburg Dr.
Huntsville 35802
Tel: (205) 881-4591
8933 E. Roebuck Blvd.
Birmingham 35206
Tel: (205) 836-2203/2

ARIZONA
2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361
2424 East Aragon Rd.
Tucson 85706
Tel: (602) 889-4661

ARKANSAS
Medical Service Only
P.O. Box 5646
Brady Station
Little Rock 72215
Tel: (501) 376-1844

CALIFORNIA
1579 W. Shaw Ave.
Fresno 93711
Tel: (209) 224-0582
1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000
3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
Tel: (818) 499-2671
5400 West Rosecrans Blvd.
P.O. Box 92105
World Way Postal Center
Los Angeles 90009
Tel: (213) 776-7500
Tel: (213) 910-325-6608
"Los Angeles"
Tel: (213) 776-7500
3003 Scott Boulevard
Santa Clara 95050
Tel: (408) 988-7000
"Ridgester"
Tel: (714) 446-6165
646 W. North Market Blvd
Sacramento 95834
Tel: (916) 929-7222

CONNECTICUT
12 Lunar Drive
New Haven 06525
Tel: (203) 389-8551
TWX: 710-465-2029

FLORIDA
P.O. Box 24210
2727 N.W. 62nd Street
Ft. Lauderdale 33309
Tel: (904) 973-2600
4428 Emerson Street
Unit 103
Jacksonville 32207
Tel: (904) 725-6333
P.O. Box 13910
6177 Lake Ellenor Dr.
Orlando 32809
Tel: (407) 859-2900
P.O. Box 12826
Suite 5, Bldg. 1
Office Park North
Pensacola 32575
Tel: (904) 476-8422

GEORGIA
P.O. Box 105005
450 Interstate North Parkway
Atlanta 30348
Tel: (404) 955-1500
Medical Service Only
"Augusta"
30903
P.O. Box 2103
1172 N. Davis Drive
Warner Robins 31098
Tel: (912) 922-0449

HAWAII
2875 So. King Street
Honolulu 96826
Tel: (808) 955-4455

FINLAND
Hewlett-Packard Oy
Nahkahuoneentuntti 5
P.O. Box 6
SF-00211 Helsinki 21
Tel: (90) 6923031

FRANCE
Hewlett-Packard France
Avenue des Tropiques
Les Ulis
Boite Postale No. 6
91401 Orsay-Cedex
Tel: (1) 907 78 25
TWX: 800048F

Hewlett-Packard France
Chemin des Mouilles
B.P. 162
69130 Ecully
Tel: (79) 33 81 25,
310617F

Hewlett-Packard France
Pénicente de la Cèprière
11001 Toulouse-Le Mirail
Tel: (61) 40 11 12
TWX: 510957F

Hewlett-Packard France
Ligouras
Bureau de vente de Marseilles
Place Rouée de Villeneuve
1300 Aix-en-Provence
Tel: (42) 59 41 02
Hewlett-Packard France
Avenue de la Bourgette
35100 Rennes
Tel: (99) 51 42 44
TWX: 740912F

Hewlett-Packard France
Rue du Canal de la Marne
67300 Schiltheim
Tel: (88) 83 08 10
TWX: 890141F

Hewlett-Packard France
Immeuble péricentre
Rue van Gogh
59650 Villeneuve D Ascq
Tel: (20) 91 41 25
TWX: 160124F

Hewlett-Packard France
Bureau de Vente
Centre d'affaires Paris-Nord
Bâtiment Ampère
Rue de la Commune de Paris
B.P. 300
93153 Le Blanc Mesnil Cédex
Tel: (01) 931 88 50

Hewlett-Packard France
Av. du Kennedy
33700 Merignac
Tel: (56) 97 22 69

Hewlett-Packard France
"France-Evry", immeuble Lorraine
191035 Evry-Cedex
Tel: 077 96 60

Hewlett-Packard France
60, Rue de Metz
57130 Jouy sur Arches
Tel: (07) 69 45 32

ICELAND
Medical Only
Elding Trading Company Inc.
Hafnarvegur 1, Toggvagatu
P.O. Box 895
IS-Reykjavik
Tel: 1 58 20/1 63 03
Cable: ELIDING Reykjavik

IRAN
Hewlett-Packard Iran Ltd.
No. 13, Fourteenth St.
Mir Emad Avenue
P.O. Box 41/2419
Tehran
Tel: 851082-5
Telex: 213405 hewp ir

IRELAND
Hewlett-Packard Ltd.
King Street Lane
Winninagh, Wokingham
Berks. RG11 5AR
GB-England
Tel: (0734) 78 47 74
Telex: 847178
Cable: Hewpie London

Hewlett-Packard Ltd.
2C Avonbeg Industrial Estate
Long Mile Road
Dunmurry, Eire
Tel: (01) 514322
Telex: 30439

Medical Only
Cardiac Services (Ireland) Ltd.
Kilmore Road
Armagh
Tel: (028) 348-6666

INDIANA
7301 North Shadeland Ave.
Indianapolis 46250
Tel: (317) 842-1000
TWX: 810-260-1797

IOWA
1415 Heinz Road
Iowa City 52240
Tel: (319) 338-9466

KENTUCKY
Medical Only
3901 Atkinson Dr.
Suite 407 Atkinson Square
Louisville 40218
Tel: (502) 456-1573

LOUISIANA
P.O. Box 1449
3229-39 Williams Boulevard
Kenner 70063
Tel: (504) 443-6201

MARYLAND
7121 Standard Drive
Parkway Industrial Center
Hanover 21076
Tel: (301) 796-7700
TWX: 710-882-1943

2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS
32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-9960
TWX: 710-326-6904

MICHIGAN
23855 Research Drive
Farmington Hills 48024
Tel: (313) 476-6400
724 West Avenue Ave.
Kalamazoo 49002
Tel: (606) 323-8362

Cable: HEWPAKSA Hamburg
Telex: 21 63 032 hpdd d

ITALY
Hewlett-Packard Italiana S.p.A.
Via Oltramarina 9
20063 Cernusco
Sul Naviglio (MI)
Tel: (2) 903691
Telex: 311046 HEWPAKIT

Hewlett-Packard Italiana S.p.A.
Via Tassinari 14
35100 Padova
Tel: (49) 664888
Telex: 41612 HEWPAKSI

Hewlett-Packard Italiana S.p.A.
Via G. Armetelli 10
1-01033 Torino
Tel: (06) 54 69 61
Telex: 61514
Cable: HEWPAKSI Roma

Hewlett-Packard Italiana S.p.A.
Corso Giovanni Lanza 94
I-10133 Torino
Tel: (011) 682245/659030

Medical/Calculators Only
Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43 G.C.
I-95126 Catania
Tel: (095) 37 05 04
Hewlett-Packard Italiana S.p.A.
Via Nuova San Rocco A.
Capodimonte, 62A
I-80131 Napoli
Tel: (081) 7913544

Hewlett-Packard Italiana S.p.A.
Via Mesa 9-6
I-40137 Bologna
Tel: (051) 307887/000040

JORDAN
Mouasher Cousins Co.
P.O. Box 1387
Amman
Tel: 24907/39907
Telex: SABO JU 1456
Cable: MOUASHERCO

KUWAIT
Al-Khaldiya Trading &
Contracting
P.O. Box 830-Safat
Kuwait
Tel: 42 4910/41 1726
Telex: 807 27 40

LUXEMBURG
Hewlett-Packard Benelux
S.A. N.V.
Avenue du Col-Vert, 1
(Groenkaaglaan)
B-1170 Brussels
Tel: (02) 660 50 50
Cable: PALOBEN Brussels
Telex: 23 494

MOROCCO
Dolbeau
81 rue Karachi
Casablanca
Tel: 204 82
Telex: 23051/22822
Cable: MATERIO

Gerp
3, rue d'Agadir
Casablanca
Tel: 272093/5
Telex: 23739
Cable: GEREP-CASA

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartlaan 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 20 21

NORWAY
Hewlett-Packard Norge A/S
Oslo
P.O. Box 34
1345 Osterass
Tel: (02) 1711 80
Telex: 16621 hpnas n

Hewlett-Packard Norge A/S
Nycomedlaan 114
5000 Bergen

NEW YORK
6 Automation Lane
S Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-444-4961
650 Perinton Hill Office Park
Fairport 14450
Tel: (716) 223-9950
TWX: 510-253-0092

MISSISSIPPI
1131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

MISSOURI
11311 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

MINNESOTA
2400 N. Prior Ave.
St. Paul 55113
Tel: (612) 636-0700
TWX: 910-687-2260

MISSOURI
11311 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

MISSOURI
11311 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

MISSOURI
11311 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

MISSOURI
11311 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

NEW YORK
6 Automation Lane
S Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-444-4961
650 Perinton Hill Office Park
Fairport 14450
Tel: (716) 223-9950
TWX: 510-253-0092

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW YORK
6 Automation Lane
S Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-444-4961
650 Perinton Hill Office Park
Fairport 14450
Tel: (716) 223-9950
TWX: 510-253-0092

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW YORK
6 Automation Lane
S Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-444-4961
650 Perinton Hill Office Park
Fairport 14450
Tel: (716) 223-9950
TWX: 510-253-0092

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW JERSEY
120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW YORK
6 Automation Lane
S Computer Park
Albany 12205
Tel: (518) 458-1550
TWX:

Subject Index

a

Assembly Development ROM
 see ROM, Assembly Development
 Assembly Execution ROM.....
 see ROM, Assembly Execution

b

Bit, defined 2
 Braces, use in syntax 2
 Brackets, use in syntax 2
 Buzzwords 2
 Byte, defined 2

c

CALL 16-21
 COM 8-9,24
 Common 8,24

d

Development ROM
 see ROM, Assembly Development
 Dot matrix, use in syntax 2

e

Ellipses, use in syntax 2
 Errors: 23-24
 Messages 25-30
 Execution ROM
 see ROM, Assembly Execution

f

Files: 6,7,11-12
 Names 6

g

GOSUB 16
 GOTO 16

i

ICALL 5,7,13
 ICOM:
 Region 7,8,12,23,24
 Statement 5,7,8,23
 IDELETE 5,7,8
 ILOAD 5,7,8,12
 ISTORE 5,6,7,12,23,24
 Index 34
 Installation, ROM 2
 Interface 15
 Interrupt service routine 10,16,24
 Interrupt service routine, defined 2
 Interrupts: 15-21
 Branches 16
 Branches, disabling 21
 Priorities 18

m

Maintenance agreements 31
 Mass storage 5-7,11-12
 Modules:
 Assembled 5-7
 Errors 23-24
 Names 6
 Retrieving 8-9
 Storing 12

n

Names:
 Files 6
 Modules 6
 Routines 6

O

OFF INT 21
 ON INT 16-21

R

RETURN 16
 ROM:
 Assembly Development 1
 Assembly Execution 1,3,4,23
 Drawers 3
 Errors 23
 Installation 2,3,4
 Option 8
 Routines:
 Accessing 7,12
 Assembled 1,5,6,7,24
 Interrupt service 10,16,24
 Interrupt service, defined 2
 Names 6

S

SCRATCH A 9,10,24
 SCRATCH C 8,10,23
 SUBEND 16
 SUBEXIT 16
 Sales and Service Offices 32
 Subprograms, BASIC 16,20
 Syntax, fundamental 2

W

Word, defined 2

Your Comments, Please...

Your comments assist us in improving the usefulness of our publications; they are an important part of the inputs used in preparing updates to the publications.

Please complete the questionnaire, fold it up and return it to us. Feel free to mark more than one box to a question and to make any additional comments. If you prefer not to give us your name just leave the last part, name and address, blank. All comments and suggestions become the property of HP.

Please do not use this form for questions about technical applications of your system or for requests for additional publications. Instead, please direct those inquiries or requests to your nearest HP Sales and Service Office.

Yourself

1. What are you involved in?

- | | | |
|--|---|--|
| <input type="radio"/> Accounting/Finance | <input type="radio"/> Interfacing and Control | <input type="radio"/> Purchasing |
| <input type="radio"/> Administration | <input type="radio"/> Laboratory Analysis | <input type="radio"/> Quality Control/Test |
| <input type="radio"/> Applications Engineering | <input type="radio"/> Long-Range Planning | <input type="radio"/> Research |
| <input type="radio"/> Applications Programming | <input type="radio"/> Maintenance | <input type="radio"/> Simulation |
| <input type="radio"/> Bioengineering | <input type="radio"/> Management, Corp./General | <input type="radio"/> Statistics |
| <input type="radio"/> Chemical Engineering | <input type="radio"/> Manufacturing/Production | <input type="radio"/> Systems Management |
| <input type="radio"/> Clinical Analysis | <input type="radio"/> Marketing/Sales | <input type="radio"/> Systems Programming |
| <input type="radio"/> Consulting | <input type="radio"/> Medical Diagnosis/Treatment | <input type="radio"/> Teaching |
| <input type="radio"/> Customer Service | <input type="radio"/> Methods Development | <input type="radio"/> Text Processing |
| <input type="radio"/> Data Processing | <input type="radio"/> Numerical Analysis | <input type="radio"/> Other |
| <input type="radio"/> Engineering Design/Development | <input type="radio"/> Process/Numerical Control | |

2. Which computer languages do you program with?

- | | | |
|-----------------------------|-------------------------------|------------------------------|
| <input type="radio"/> ALGOL | <input type="radio"/> COBOL | <input type="radio"/> PASCAL |
| <input type="radio"/> APL | <input type="radio"/> FORTRAN | <input type="radio"/> Other |
| <input type="radio"/> BASIC | <input type="radio"/> HPL | |

3. What is your major application of the equipment described in the manual?

- | | | |
|---|---|--|
| <input type="radio"/> Business Administration | <input type="radio"/> Education | <input type="radio"/> Engineering area |
| <input type="radio"/> Computer Simulation | <input type="radio"/> General Computation | <input type="radio"/> Other |
| <input type="radio"/> Data Acquisition | <input type="radio"/> Interfacing | |
| <input type="radio"/> Data Analysis | <input type="radio"/> Process Control | |

The Manual

- | | Yes | No |
|---|-----------------------|-----------------------|
| 4. Is the manual easy to use? | <input type="radio"/> | <input type="radio"/> |
| Is the manual easy to understand? | <input type="radio"/> | <input type="radio"/> |
| Can you find what you need? | <input type="radio"/> | <input type="radio"/> |
| Does the manual allow you to use your system effectively? | <input type="radio"/> | <input type="radio"/> |

5. How would you rate the:

	Excellent	Good	Adequate	Poor
areas covered	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
depth of coverage	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
examples	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
indexing	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
organization	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
overall manual	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

- | | Yes | No |
|--|-----------------------|-----------------------|
| 6. Do you feel you know enough about the System 35 to apply its capabilities to your job? | <input type="radio"/> | <input type="radio"/> |
| Did the manual give you adequate direction for finding information in other System 35 manuals? | <input type="radio"/> | <input type="radio"/> |

General Comments:

Name: _____
Address: _____

All comments and suggestions become the property of Hewlett-Packard.



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO. 37 LOVELAND, COLORADO

POSTAGE WILL BE PAID BY ADDRESSEE

HEWLETT-PACKARD COMPANY
ATTN: CONTROLLER DOCUMENTATION
DESKTOP COMPUTER DIVISION
3404 EAST HARMONY ROAD
FORT COLLINS, COLORADO 80525



Assembly Language ROM Errors

- 184 Improper argument in `OCTAL` or `DECIMAL` function.
- 185 Break Table overflow.
- 186 Undefined label or subprogram name used in `IBREAK` statement.
- 187 Attempt to write into protected memory; or, attempt to execute instruction not in `ICOM` region.
- 188 Label used in an assembled location not found.
- 189 Doubly-defined entry point or routine.
- 190 Missing `ICOM` statement.
- 191 Module not found.
- 192 Errors in assembly.
- 193 Attempt to move or delete module containing an active interrupt service routine.
- 194 Address out of range in `IDUMP` statement.
- 195 Routine not found.
- 196 Unsatisfied externals.
- 197 Missing `COM` statement.
- 198 Common area does not correspond to module requirements.
- 199 Insufficient number of items in `BASIC COM` declarations.

