

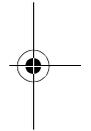



10/100 EtherJet CardBus Adapter

Installation and Planning Guide

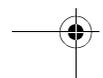

OPTIONS
by IBM

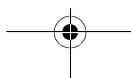

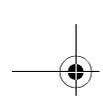

Note: Before using this information and the product it supports, be sure to read the general information in Appendix C.

Second Edition (June 1999)

The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law:

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the products and/or programs described in this publication at any time.

It is possible that this publication may contain reference to, or information about, IBM products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that IBM intends to announce such IBM products, programming, or services in your country.

Requests for technical information about IBM products should be made to your IBM Authorized Dealer or your IBM Marketing Representative.



A form for readers' comments appears at the back of this publication. If the form has been removed, address your comments to:

Department CGF
Design & Information Development
IBM Corporation
PO Box 12195
RESEARCH TRIANGLE PARK NC 27709-9990
USA

When you send information to IBM, you grant IBM a nonexclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

©Copyright International Business Machines Corporation 1998, 1999. All rights reserved.

Note to U.S. Government Users — Documentation related to restricted rights — Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

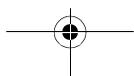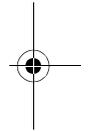

Contents

Protection and Security	vii
Safety Information	viii
About This Manual	xv
Who Should Read This Manual	xv
How This Manual Is Organized	xv
Additional Information	xvi
Chapter 1. Hardware Installation	
Viewing HELPDOCS.HLP	17
Before Installing Hardware	18
Verify Other Required Equipment	19
Determine System Requirements	19
Installing the Hardware	20
Inserting the EtherJet CardBus Adapter	20
Connecting the LAN Adapter Cable to the Card	21
Connecting the Network Cable to the LAN Adapter Cable	22
Power-Saving Mode	22
Chapter 2. Windows 95 and Windows 98 Installation	
Plug and Play Installation	23
Drivers Available	23
How to Create Diskettes for Software Installation	23
Installing under Windows 95 and Windows 98	24
Windows 95 and Windows 98 Troubleshooting	25
Manual Installation under Windows 95 Version 950b (OSR2) and Later	25
Windows 95 Driver Parameters Reference	28
Chapter 3. Windows NT Installation	
Drivers Available	31
Card and Socket Services Software	31
Which Driver to Use	32
Installing under NT 4.0	33
Installation under NT 4.0 Using Card and Socket Services	33
Installation under NT 4.0 without Card and Socket Services	34

Installing under NT 3.51	34
Removing the CardBus Adapter from NT 3.51	35
Windows NT Driver Parameters	35

Chapter 4. Diagnostics and Troubleshooting

Additional Sources of Information	39
LED Indicators	39
Diagnostic Self Test	40
Executing the MS-DOS/Windows 3.x Diagnostic Program (IBMCTEST.EXE)	40
Main Screen	41
Executing the Windows 95, 98, and NT Diagnostic Program (EJETDIAG.EXE)	41
Troubleshooting Checklist	42
Keyword Reference (All Drivers)	43

Appendix A. Product Support Services


Help Files	47
IBM Product Support	47
Warranty Service Procedures	47

Appendix B. Specifications



General Specifications	49
Ethernet Specifications	49











Appendix C. Notices


Notice to Users of Online Versions of This Book	51
Safety Notices	52
Telecommunications Safety Requirements in the United Kingdom	52
Statement of Compliance with the United Kingdom Telecommunications Act 1984	52
Electronic Emission Notices	52
Federal Communications Commission (FCC) Statement ..	52
Industry Canada Class B Emission Compliance Statement	54
Avis de conformité aux normes d'Industrie Canada	54
European Norm (EN) Statement	54
Japanese Voluntary Control Council for Interference (VCCI) Statement	55
Trademarks	55
Production Status	56
The IBM Warranty for Machines	56

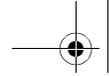

Warranty Service 57
 Extent of Warranty 58
 Limitation of Liability 59

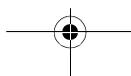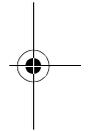

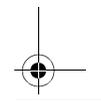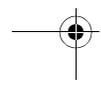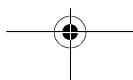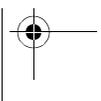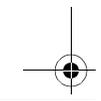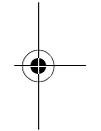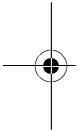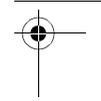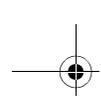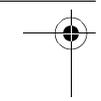

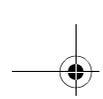

Protection and Security

You must label, when recorded on portable media, Additional Licenses Copies, Client Program Copies, copies made from them and their documentation with the program number, the copyright wording, and the copyright year as shown on the Program documentation. The label of an Additional License Copy, a Client Program Copy, or a copy made from it must also include the words:


Licensed Material - Property of IBM

IBM retains title to this copy and to any copy made from it.

You may not transfer possession of this copy to any third party.

The label on documentation must also include the words:

Reprint by permission of IBM.

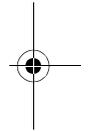

Safety Information



Danger: Before you begin to install this product, read the safety information in *Caution: Safety Information—Read This First*, SD21-0030. This booklet describes safe procedures for cabling and plugging in electrical equipment.



Gevarr: Voodrat u begint met de installatie van dit produkt, moet u eerst de veiligheidsinstructies lezen in de brochure *PAS OP! Veiligheidsinstructies—Lees dit eerst*, SD21-0030. Hierin wordt beschreven hoe u elektrische apparatuur op een veilige manier moet bekabelen en aansluiten



Danger: Avant de procéder à l'installation de ce produit, lisez d'abord les consignes de sécurité dans la brochure *ATTENTION: Consignes de sécurité—A lire au préalable*, SD21-0030. Cette brochure décrit les procédures pour câbler et connecter les appareils électriques en toute sécurité.



Perigo: Antes de começar a instalar deste produto, leia as informações de segurança contidas em *Cuidado: Informações Sobre Segurança—Leia Primeiro*, SD21-0030. Esse folheto descreve procedimentos de segurança para a instalação de cabos e conexões em equipamentos elétricos.



危險：安裝本產品之前，請先閱讀
"Caution: Safety Information—Read
This First" SD21-0030 手冊中所提
供的安全注意事項。這本手冊將會說明
使用電器設備的纜線及電源的安全程序。



Opasnost: Prije nego što počnete sa instalacijom produkta, pročitajte naputak o pravilima o sigurnom rukovanju u **Upozorenje: Pravila o sigurnom rukovanju - Prvo pročitaj ovo, SD21-0030.** Ovaj privitak opisuje sigurnosne postupke za priključivanje kabela i priključivanje na električno napajanje.



Upozornění: než zahájíte instalaci tohoto produktu, přečtěte si nejprve bezpečnostní informace v pokynech „Bezpečnostní informace“ č. SD21-0030. Tato brožurka popisuje bezpečnost opatření pro kabeláž a zapojení elektrického zařízení.



Fare! Før du installerer dette produkt, skal du læse sikkerhedsforskrifterne i *NB: Sikkerhedsforskrifter – Læs dette først, SD21-0030.* Vejledningen beskriver den fremgangsmåde, du skal bruge ved tilslutning af kabler og udstyr.



Gevarr: Voordat u begint met het installeren van dit produkt, dient u eerst de veiligheidsrichtlijnen te lezen die zijn vermeld in de publikatie *Caution: Safety Information - Read This first, SD21-0030.* In dit boekje vindt u veilige procedures voor het aansluiten van elektrische apparatuur.



VARRA: Ennen kuin aloitat tämän tuotteen asennuksen, lue julkaisussa *Varoitus: Turvaohjeet–Lue tämä ensin, SD21-0030,* olevat turvaohjeet. Tässä kirjasessa on ohjeet siitä, miten sähkölaitteet kaapeloidaan ja kytketään turvallisesti.



Danger : Avant d'installer le présent produit, consultez le livret *Attention : Informations pour la sécurité–Lisez-moi d'abord, SD21-0030,* qui décrit les procédures à respecter pour effectuer

les opérations de câblage et brancher les équipements électriques en toute sécurité.



Vorsicht: Bevor mit der Installation des Produktes begonnen wird, die Sicherheitshinweise in *Achtung: Sicherheitsinformationen—Bitte zuerst lesen*. IBM Form SD21-0030. Diese Veröffentlichung beschreibt die Sicherheitsvorkehrungen für das Verkabeln und Anschließen elektrischer Geräte.



Κίνδυνος: Πριν ξεκινήσετε την εγκατάσταση αυτού του προϊόντος, διαβάστε τις πληροφορίες ασφάλειας στο φυλλάδιο *Caution: Safety Information—Read this first*, SD21-0030. Στο φυλλάδιο αυτό περιγράφονται οι ασφαλείς διαδικασίες για την καλωδίωση των ηλεκτρικών συσκευών και τη σύνδεσή τους στην πρίζα.



Vigyázat: Mielőtt megkezdí a berendezés üzembe helyezését, olvassa el a *Caution: Safety Information—Read This First*, SD21-0030 könyvecskében leírt biztonsági információkat. Ez a könyv leírja, miyen biztonsági intézkedéseket kell megtenni az elektromos berendezés huzalozásakor illetve csatlakoztatásakor.



Pericolo: prima di iniziare l'installazione di questo prodotto, leggere le informazioni relative alla sicurezza riportate nell'opuscolo *Attenzione: Informazioni di sicurezza—Prime informazioni da leggere* in cui sono descritte le procedure per il cablaggio ed il collegamento di apparecchiature elettriche.



危険： 導入作業を開始する前に、安全に関する小冊子SD21-0030 の「最初にお読みください」(Read This First)の項をお読みください。この小冊子は、電気機器の安全な配線と接続の手順について説明しています。



위험： 이 제품을 설치하기 전에 반드시 "주의: 안전 정보-시작하기 전에" (SD21-0030) 에 있는 안전 정보를 읽으십시오.



ОПАСНОСТ

Пред да почнете да го инсталирате овој продукт, прочитајте ја информацијата за безбедност:
"Предупредување: Информација за безбедност: Прочитајте го прво ова", SD21-0030.
Оваа брошура опишува безбедносни процедури за каблирање и вклучување на електрична опрема.



Fare: Før du begynner å installere dette produktet, må du lese sikkerhetsinformasjonen i *Advarsel: Sikkerhetsinformasjon – Les dette først*, SD21-0030 som beskriver sikkerhetsrutinene for kabling og tilkobling av elektrisk utstyr.



Uwaga:
Przed rozpoczęciem instalacji produktu należy zapoznać się z instrukcją: "Caution: Safety Information - Read This First", SD21-0030.
Zawiera ona warunki bezpieczeństwa przy podłączeniu do sieci elektrycznej i eksploatacji.



Perigo: Antes de iniciar a instalação deste produto, leia as informações de segurança *Cuidado: Informações de Segurança–Leia Primeiro*, SD21-0030. Este documento descreve como efectuar, de um modo seguro, as ligações eléctricas dos equipamentos.



ОСТОРОЖНО: Прежде чем устанавливать этот продукт, прочтите Инструкцию по технике безопасности в документе "Внимание: Инструкция по технике безопасности -- Прочсть в первую очередь", SD21-0030. В этой брошюре описаны безопасные способы каблирования и подключения электрического оборудования.



Nebezpečnostvo: Pred inštaláciou výrobku si prečítajte bezpečnosté predpisy v
Výstraha: Bezpečnosté predpisy - Prečítaj ako prvé, SD21 - 0030. V tejto brožúrke sú opísané bezpečnosté postupy pre pripojenie elektrických zariadení.



Pozor: Preden začnete z inštalacijo tega produkta preberite poglavje: "Opozorilo: Informacije o varnem rokovanju-preberl pred uporabo," SD21-0030. To poglavje opisuje pravilne postopke za kabllranje,



Peligro: Antes de empezar a instalar este producto, lea la información de seguridad en *Atención: Información de Seguridad–Lea Esto Primero*, SD21-0030. Este documento describe los procedimientos de seguridad para cablear y enchufar equipos eléctricos.












Varning — livsfara: Innan du börjar installera den här produkten bör du läsa säkerhetsinformationen i dokumentet *Varning: Säkerhetsföreskrifter – Läs detta först*, SD21-0030. Där beskrivs hur du på ett säkert sätt ansluter elektrisk utrustning.



安裝此產品之前，請先閱讀安全資訊。

閱讀 - 安全資訊 SD21-0030

子說明插接電器設備之電纜線的安全程序。

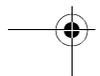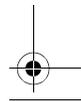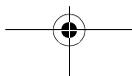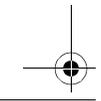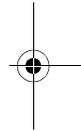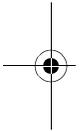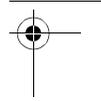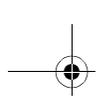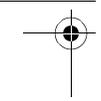

About This Manual

This manual contains instructions for installing and configuring the IBM 10/100 EtherJet CardBus Adapter under Microsoft Windows 95, Windows 98, and Windows NT and general diagnostics and troubleshooting information.


Who Should Read This Manual

This manual is intended for both the end-user and network administrator of the EtherJet CardBus Adapter.

How This Manual Is Organized

This manual contains the following chapters and appendixes:

- Chapter 1, "Hardware Installation," lists the equipment and system requirements and describes the hardware installation procedure.
- Chapter 2, "Windows 95 and Windows 98 Installation," provides information on the drivers supplied for installation under Windows 95.
- Chapter 3, "Windows NT Installation," provides information on the drivers supplied for installation under Windows NT.
- Chapter 4, "Diagnostics and Troubleshooting," contains supplementary diagnostics and troubleshooting information for the EtherJet CardBus Adapter.
- Appendix A, "Product Support Services," list the services available for the EtherJet CardBus Adapter.
- Appendix B, "Specifications," list the general and physical specifications for the EtherJet CardBus Adapter.
- Appendix C, "Notices," contains any notices associated with EtherJet CardBus Adapter.


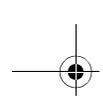


Additional Information

For information on IBM OS/2, 32-bit ODI drivers, and Windows 3.x, and supplementary information on Windows 95, see the Windows Help file **HELPDOCS.HLP** and **README.TXT** on the IBM CD-ROM.

For software updates and troubleshooting information, visit the IBM web site at:

<http://www.networking.ibm.com/support/ejetcardbus>

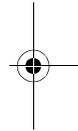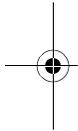

Chapter 1. Hardware Installation

Follow the instructions in this chapter to install the IBM 10/100 EtherJet CardBus Adapter hardware and network cabling. Then proceed to the software installation chapter for your operating system environment, as follows:

- Chapter 2, “Windows 95 and Windows 98 Installation”
- Chapter 3, “Windows NT Installation”
- Chapter 4, “Diagnostics and Troubleshooting”

The EtherJet CardBus Adapter provides access to both 10-Mbps and 100-Mbps networks with a single adapter cable, and auto-negotiates 10-Mbps or 100-Mbps network speed.

Notes:

1. Some computers may require that you configure the built-in system setup or BIOS to enable the use of CardBus adapters. Refer to your computer's User's Guide for configuration information.
2. Category 5 (data grade) unshielded twisted pair (UTP) cabling is required for 100 Mbps or Category 3 or 5 for 10 Mbps.

Viewing HELPDOCS.HLP

For information on Windows 3.x, IBM OS/2, and 32-bit ODI installation and troubleshooting, and supplementary information for other operating systems, see the Windows Help file HELPDOCS.HLP on the IBM CD-ROM.

You can view the HELPDOCS.HLP file in one of the following ways:

- From Windows 95, Windows 98, and Windows NT:
 1. Select the Helpdocs icon.
- From Windows 3.x:
 1. Click **File** from the Program Manager.
 2. Click **Run**.

3. In the **Run** window, enter `path\helpdocs.hlp`, where `path\` is the drive containing the IBM CD-ROM.
 4. Click **OK** to view the help file.
- From OS/2:
 1. Click **OS/2 System** icon.
 2. Click **Command Prompts** icon.
 3. Click **Win-OS/2 Full Screen** icon or **Windows/3.1** icon. This opens Windows' Program Manager.
 4. Click **File** from the Program Manager.
 5. Click **Run**.
 6. In the **Run** window, enter `path\helpdocs.hlp`, where `path\` is the drive containing the IBM CD-ROM.
 7. Click **OK** to view the help file.

Before Installing Hardware

Check that the package contains the following items, in addition to this publication:

- EtherJet CardBus Adapter
- LAN adapter cable with 16-pin PC Card connector at one end and a female RJ-45 connector at the other
- Software and online documentation on CD-ROM
- *Caution: Safety information—Read This First* booklet.

If any item is missing or damaged, contact your place of purchase.

Verify Other Required Equipment

To install the EtherJet CardBus Adapter, you need the following equipment:

1. A portable PC with a CardBus PC Card slot.
2. A local area network supporting 10- or 100-Mbps Ethernet, as required, and a network operating system supported by the EtherJet CardBus Adapter.

Note: Because the EtherJet CardBus Adapter automatically detects the speed of the network to which it is connected, it may be safely connected to either a 100BASE-TX or 10BASE-T network, as specified in items 3 and 4 below.

3. For connection to a 100BASE-TX 100-Mbps Ethernet network, a **Category 5** (data grade) unshielded twisted pair (UTP) network cable terminating in a male RJ-45 connector and connected to a 100-Mbps hub or switch.
4. For connection to a 10BASE-T twisted pair Ethernet network, a network cable terminating in a male RJ-45 connector and connected to a 10-Mbps hub or switch.

Determine System Requirements

During installation of the EtherJet CardBus Adapter hardware, the computer should be ON and your standard operating software should be loaded. If configured to do so, your system will detect the EtherJet CardBus Adapter. For details on how to install driver software, see the chapter for your operating system environment.

Note: The EtherJet CardBus Adapter hardware is compatible with Types II and III PC Card slots that support CardBus technology. Installation and removal procedures may vary on different computers.

Installing the Hardware

To install the EtherJet CardBus Adapter use the following instructions.

Inserting the EtherJet CardBus Adapter

1. Grasp the EtherJet CardBus Adapter by the edges with the IBM label facing upward and the wide PC Card connector next to the insert slot.
2. Insert the card into a CardBus slot and push it in until it is firmly seated.

Note: The EtherJet CardBus Adapter can be used only in CardBus-compliant PC Card slots.

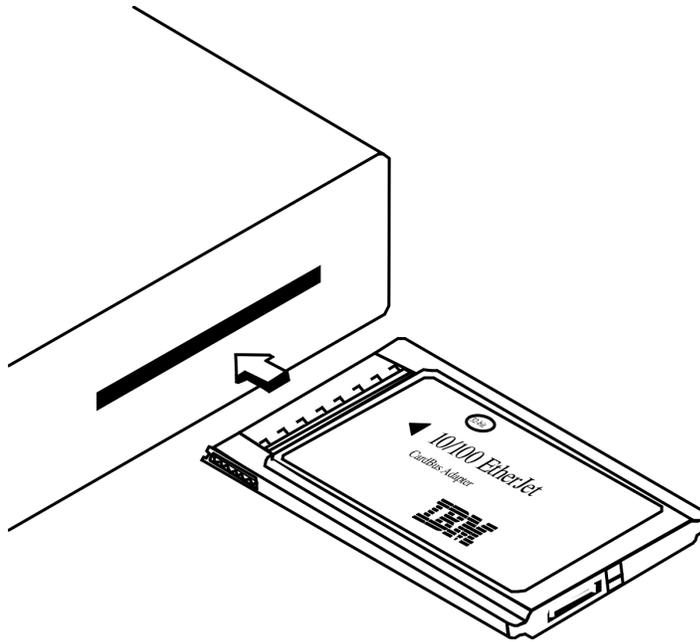


Figure 1-1. Inserting the EtherJet CardBus Adapter into the Computer

Connecting the LAN Adapter Cable to the Card

Attach the 16-pin connector at the end of the IBM adapter cable to the mating connector on the end of the EtherJet CardBus Adapter. Press the cable connector gently into the connector on the card until it is firmly in place. Do not force the connection.

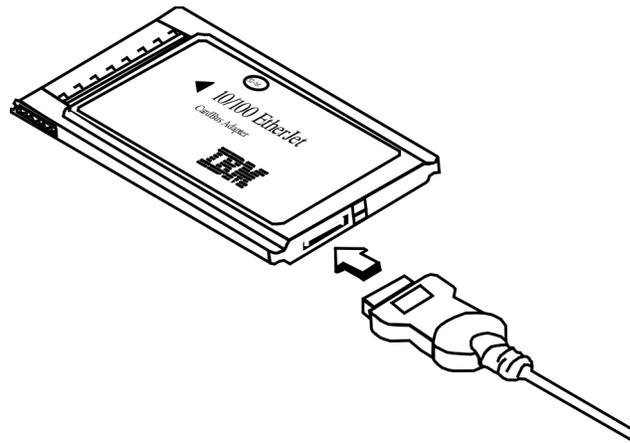


Figure 1-2. Connecting the LAN Adapter Cable to the EtherJet CardBus Adapter

Connecting the Network Cable to the LAN Adapter Cable

Plug the network cable into the female RJ-45 connector on the LAN adapter cable, as shown in the Figure 1-3.

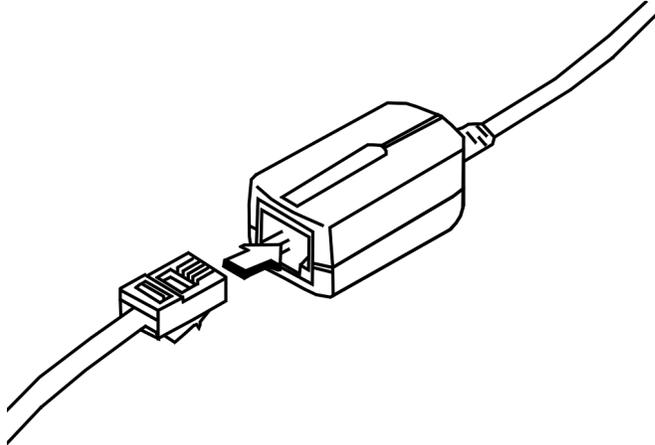


Figure 1-3. Connecting to the Network Cable to the LAN Adapter Cable

Power-Saving Mode

The EtherJet CardBus Adapter is designed for very low-power consumption, minimizing the computer's battery drain. The EtherJet CardBus Adapter automatically senses when the LAN cable is detached and reattached, and it goes in or out of a lower power mode accordingly. This maximizes battery life.

Chapter 2. Windows 95 and Windows 98 Installation

Plug and Play Installation

Most CardBus-enabled computers support plug and play installation of the EtherJet CardBus Adapter under Windows 95 and Windows 98. However, early versions of Windows 95 (950 or 950a) require manual installation. Both types of installation are described in this chapter. Troubleshooting and keyword information is also provided.

Drivers Available

The following drivers for Windows 98 and Windows 95 are supplied with the EtherJet CardBus Adapter:

- An NDIS3 driver (IBMC.SYS)
- An NDIS4 driver (IBMCN4.SYS)
- A 32-bit ODI driver (IBMC.LAN) with promiscuous support

To install the NDIS3 driver IBMC.SYS, use the procedures described in this chapter.

For NDIS4 instructions, see the README.TXT file on the IBM CD-ROM.

If your environment requires use of the 32-bit ODI client driver under Windows 95 (as indicated by your network administrator), see the Windows Help file HELPDOCS.HLP on the IBM CD-ROM.

How to Create Diskettes for Software Installation

To create a set of diskettes for use in installation, as an alternative to using the IBM CD-ROM, run MAKEDISK.BAT from the IBM CD-ROM to copy the required installation files to two blank diskettes.

Installing under Windows 95 and Windows 98

1. With Windows running, insert the EtherJet CardBus Adapter into the CardBus PC Card slot and connect cables as shown in Chapter 1, "Hardware Installation."

Plug and Play Installation (Versions 950b OSR2 and later)

2. If Windows 95 displays the New Hardware Found window, follow the instructions on the screen to complete the installation. No further steps are necessary.

If the New Hardware Found window does *not* appear, go to step 3.

Notes:

1. If the New Hardware Found window appears, but the EtherJet CardBus Adapter does not initialize or shows conflicts in Device Manager, see Windows 95 and Windows 98 Troubleshooting on page 2-3.
2. If you are installing on a Toshiba portable computer and the New Hardware Found window does not appear, see the Windows Help file HELPDOCS.HLP on the IBM CD-ROM for instructions.

Manual Installation (Windows 95 versions 950 or 950a)

3. Click **Start**, select Settings, then click **Control Panel**.
4. In the **Control Panel**, double-click **Network**.
5. In the Network window, Configuration tab, click **Add**.
6. In the Select Network Component Type window, double-click **Adapter**.
7. In the Select Network Adapter window, click **Have Disk**.
8. Insert the IBM CD-ROM.
9. Select path\ in the input box, where path\ is the drive containing the IBM CD-ROM and click **OK**.
10. Select **IBM 10/100 EtherJet CardBus Adapter Manual Load** and click **OK**.

11. In the Network window, click **OK**.

The IBM dialog box displays various settings. An asterisk (*) in any field indicates that the current setting is incorrect. Use the Up or Down arrow to adjust the setting until the asterisk disappears.

12. Click **OK**. The Copying Files window opens.
13. Insert your original Windows 95 or Windows 98 CD-ROM or diskette (identify the drive that holds the CD-ROM or diskette) and click **OK**. The System Settings window opens.

Note: If Windows 95 was preinstalled, the necessary files are located in the following directory:

`c:\windows\options\cabs`

14. Click **Yes** when prompted to restart the computer.

Notes

1. If you hear a Windows 95 "error" beep on reboot, ignore it.
2. For supplementary information on Windows 95 versions 950/950a, see the Windows Help file HELPDOCS.HLP on the IBM CD-ROM.

Windows 95 and Windows 98 Troubleshooting

The EtherJet CardBus Adapter is detected by Windows 95 Version 950b (OSR2), but does not initialize or shows errors in Device Manager.

The EtherJet CardBus Adapter may need to be installed manually under Windows 95 version 950b and later even if it was detected (as indicated by the message New Hardware Found). Manual installation instructions follow.

Manual Installation under Windows 95 Version 950b (OSR2) and Later

1. Click the **Start** button in the lower left corner of the screen.
2. Choose the menu item: **Settings**.

3. Choose the menu item: **Control Panel**.
4. Double-click the System icon.
5. In the System Properties window, view the Device Manager tab.
6. In the Device Manager window, click **PCMCIA socket**.
There will be two CardBus controllers listed under PCMCIA socket. "Top" and "bottom" designations may vary in different machines.
 - If the EtherJet CardBus Adapter is in the top slot, click the top CardBus controller to select it.
 - If the Adapter is in the bottom slot, click the bottom CardBus controller to select it (make a note of which slot the adapter was in).

7. Click **Properties**. Check the box **Disable** in this hardware profile.
8. Click **OK**. You will see a red X on the CardBus controller that was disabled.
9. Click **OK** on the Device Manager tab.
10. Open a DOS session in Windows 95 OSR2 and delete the following files:

```
\WINDOWS\INF\*.BIN  
\WINDOWS\INF\SX*.INF  
\WINDOWS\SYSTEM\IBMC.SYS
```

11. Rename the files CONFIG.SYS and AUTOEXEC.BAT to ensure that Windows 95 OSR2 runs in 32-bit protected mode.

Windows 95 OSR2 does not support the use of real-mode and protected-mode drivers simultaneously. This combination may cause unpredictable results. If these drivers are of mixed types, the computer might stall or the network might not work. The following commands can be used to rename the AUTOEXEC.BAT and CONFIG.SYS:

```
REN C:\AUTOEXEC.BAT C:\AUTOEXEC.XOX  
REN C:\CONFIG.SYS C:\CONFIG.XOX
```

12. Shut down Windows 95 OSR2 and power off the machine. Remove the EtherJet CardBus Adapter physically from the PC Card slot (make a note of whether the adapter was in the top or bottom PC Card slot).
13. Restart Windows 95 OSR2. When all disk drive activity has stopped, reinsert the Adapter in the PC Card slot from which you removed it in step 12.
14. Click **Start** button, select **Settings**, and then **Control Panel**. Double-click **Add New Hardware**. When asked, Do you want Windows to search for your new hardware?, select **NO** and click **Next**.
15. Select **Network adapters** and click **Next**. Under Manufacturers, select **IBM** and click the **Have Disk** button.
16. Insert the IBM CD-ROM and select path\ in the Input box, where path\ is the drive containing the IBM CD-ROM. Click **OK**.
17. Select **IBM 10/100 EtherJet CardBus Adapter manual load**, click **OK**, click **OK** again, click **Next**, and then **Finish**.
The PC Card (PCMCIA) Wizard appears. A copy of the Windows 95 OSR2 CAB files should already be on the machine.
18. When asked, Are you using a PC card to install Windows?, select **No**.
19. When asked, Do you want to review your system files ..?, select **No**. Click **Next** and then **Finish**.
20. Select **Yes** to shut down the computer. Windows 95 OSR2 will add the IBM Adapter in Device Manager and under Network components. Depending on the installation, you might be prompted for the Windows 95 OSR2 diskettes or CD-ROM to set up a basic Microsoft network.

Windows 95 OSR2 includes 32-bit Clients for:

1. Microsoft Networks
2. NetWare Networks

For instructions on installation of the 32-bit ODI driver, see the Windows Help file HELPDOCS.HLP on the IBM CD-ROM.

Windows 95 Driver Parameters Reference

IBMC.SYS (NDIS3) and IBMCN4.SYS (NDIS4) Driver Settings

IBMC.SYS is an NDIS3 driver. IBMCN4.SYS is an NDIS4 driver. Both conform to the Microsoft Network Driver Interface Specification (NDIS).

The files necessary for using IBMC.SYS with Windows 95 include:

NETIBMC.INF Installation file for Windows 95

IBMC.SYS NDIS3 driver for Windows 95






You can modify user-configurable parameters to the IBMC.SYS and IBMCN4.SYS drivers using the Network Control Panel built into Windows 95. This applet queries you for parameter selections and sets the corresponding parameters in the registry. The user-configurable parameters are as follows:

Parameter	Default	Valid Values	Reg. Value
DirectEnable	AutoDetect	OFF ON AutoDetect	1 2 0
EarlyTransmit	ON	OFF ON	0 1
InterruptStyle	0	AutoDetect PCI-IRQ ISA-IRQ	0 1 2
LineSpeed	Auto	AutoDetect 10 Mbps 100 Mbps	0 1 2
LineMode	0	AutoDetect Half-Duplex Full-Duplex	0 1 2
Network Address	See Network Administrators, note below.		
Socket	0	Autodetect 1, 2, 3, 4	0 0, 1, 2, 3, 4



Parameter	Default	Valid Values	Reg. Value
CableDetect	ON	On Off	1 0

For network administrators only: The network node address can be modified by specifying a value for Network Address such as 0080C7112233. If the user does **not** specify a Network Address, then the IBMC.SYS driver uses the network node address contained in the EtherJet CardBus Adapter Information Structure.

Note: For definitions of the keywords above, see the Keyword Reference in Chapter 4, "Diagnostics and Troubleshooting".

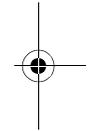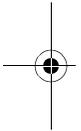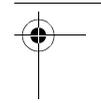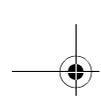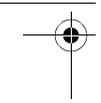

2-8 10/100 EtherJet CardBus Adapter

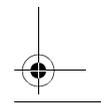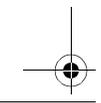

Chapter 3. Windows NT Installation

The EtherJet CardBus Adapter supports manual installation under Microsoft Windows NT 3.51 and NT 4.0. Plug and Play installation and hot swapping of CardBus adapters are not directly supported by Windows NT, but may be supported through third-party Card and Socket services software.

When the EtherJet CardBus Adapter is installed, the other PC Card slot is available for use by another PC Card.

Drivers Available

The following drivers for Windows NT are on the IBM CD-ROM:

- IBMC.SYS - NDIS3 driver
- IBMCNT.SYS - Card and Socket Services driver
- IBMCN4.SYS - NDIS4 driver

The NDIS3 driver IBMC.SYS and the IBMCNT.SYS driver are described in this chapter. For NDIS4 instructions, see the README.TXT file on the IBM CD-ROM.

Note: Before installing the EtherJet CardBus Adapter under Windows NT 4.0, see the README file on the IBM CD-ROM or visit the product Web site at:
<http://www.networking.ibm.com/support/ejtcadbuss>

Card and Socket Services Software

Some Windows NT 4.0 installations include third-party Card and Socket Services software designed to improve PC Card installation and to support hot swapping. In addition to the standard NDIS3 and NDIS4 drivers, IBM has developed IBMCNT.SYS to provide additional support for certain Card and Socket Services software.

The EtherJet CardBus Adapter supports the following Windows NT 4.0 Card and Socket Services software:

CardExecutive for NT 4.0 from Phoenix Technologies

Support for Phoenix CardExecutive is provided by the special Card and Socket Services driver IBMCNT.SYS.

CardWare for Windows NT 4.0 from Award Software

For instructions on using Award CardWare, see the README.TXT file on the IBM CD-ROM.

CardWizard for NT 4.0 from SystemSoft Corporation

Support for SystemSoft CardWizard is provided in the NDIS3 driver IBMC.SYS.

PC Card Controller for NT from Softex Incorporated

Softex PC Card Controller for NT provides functionality similar to Phoenix CardExecutive. If you are using Softex, follow the instructions for Phoenix CardExecutive.

Which Driver to Use

Use the following information to determine which driver to use in your environment.

IBMC.SYS

For use under NT 3.51 and 4.0 without Card and Socket Services, and for use under NT 4.0 with SystemSoft CardWizard for NT 4.0

IBMCNT.SYS

For use under NT 4.0 with Phoenix CardExecutive and Softex PC Card Controller for NT.

IBMCN4.SYS

See the README.TXT file on the IBM CD-ROM.

Installing under NT 4.0

Insert the EtherJet CardBus Adapter into the CardBus PC Card slot.

- **Adapter detected:** If the EtherJet CardBus Adapter is detected, go to the section "Installation under NT 4.0 Using Card and Socket Services."
- **Adapter not detected:** If the EtherJet CardBus Adapter is not detected, go to "Installation under NT 4.0 without Card and Socket Services."

Installation under NT 4.0 Using Card and Socket Services

1. Once the Card Services software has detected the adapter, follow the on screen installation instructions for your Card and Socket Services software. Use of default resource settings is recommended.
2. If the Card Services software includes a driver for the EtherJet CardBus Adapter, install that driver. To verify that you have the latest Windows 95, 98, and NT Network Drivers, visit the IBM web site. Otherwise, follow the guidelines below:
 - **SystemSoft CardWizard** Card Services software will display a CardWizard icon on the task bar when you insert the adapter. Use the driver **IBMC.SYS**, located in the root of the IBM CD-ROM.
 - **Phoenix CardExecutive** and **Softex PC Card Controller** use the driver **IBMCNT.SYS**, located in the \IBMCNT directory on the IBM CD-ROM. When the Card Services software prompts for the driver diskette, enter the path\IBMCNT, where path\ is the drive containing the IBM CD-ROM.
 - **Award CardWare** instructions are in the **README.TXT** file on the IBM CD-ROM.

Installation under NT 4.0 without Card and Socket Services

Use these instructions if the EtherJet CardBus Adapter was not detected upon insertion, indicating that no Card and Socket Services software is in use.

1. With the EtherJet CardBus Adapter in the PC Card slot, click **Start**, click **Settings**, and select **Control Panel**. The Control Panel opens.
2. Double-click the **Network** icon. The Network Settings window opens.
3. Click the **Adapters** tab. The Network Adapters window opens.
4. Click **Add**. The Select Network Adapter window opens.
5. Click **Have Disk** and insert and type path to the IBM CD-ROM.
6. Click **OK**. The Select OEM Option window opens.
7. Click **OK**. The Windows NT Setup window briefly displays.
8. EtherJet CardBus Adapter Settings window opens, displaying the default settings.
Note: In most circumstances, the default settings will operate the CardBus correctly. However, consult the README.TXT file on the IBM CD-ROM for the latest recommendations.
9. Click **OK**. The Network Settings window redisplay.
10. Click **Close**. If any dialog boxes appear related to setting up network protocols, click **Cancel** and contact your Network Administrator.
11. When the Network Settings Change window opens, click **Yes** to restart the computer.

Installing under NT 3.51

1. Insert the EtherJet CardBus Adapter.
2. Double-click the **Control Panel**. The Control Panel opens.
3. Double-click the **Network** icon. Network Settings opens.

4. Click **Add Adapter**. The Add Network Adapters window opens.
5. Scroll to select **Other (requires IBM CD-ROM from manufacturer)**.
6. Click **Continue**. The Insert Disk windows opens.
7. Insert the IBM CD-ROM.
8. Click **OK**. The Select OEM Option window opens.
9. Click **OK**.
10. The EtherJet CardBus Adapter Setup window opens, displaying the default settings.
11. Click **OK**. The Network Settings window reopens.
12. Click **OK**. The Network Settings Change window opens.
13. Click **Restart Now** to restart your computer.

Removing the CardBus Adapter from NT 3.51

1. Double-click the **Control Panel**. The Control Panel opens.
2. Double-click the **Network** icon. Network Settings opens.
3. Choose the **IBM 10/100 EtherJet CardBus Adapter**.
4. Click **Remove**.
5. Click **Yes** to confirm.

Windows NT Driver Parameters

IBM.CSYS, IBM.CNT.SYS, and IBM.CN4.SYS driver parameters can be modified using the Windows NT Network Control Panel. This applet uses the OEMSETNT.INF file to set the corresponding parameters in the registry.


Note: For definitions of the keywords listed, see the section Keyword Reference in Chapter 4, "Diagnostics and Troubleshooting".

Parameter	Default	Valid Values	Registry Value
DirectEnable	0	AutoDetect OFF ON	0 1 2
EarlyTransit	0	OFF ON	0 1
InterruptNumber	11	3 - 15	same
InterruptStyle	0	AutoDetect PCI IRQ ISA IRQ	0 1 2
IOBaseAddress	0xF800	0x1000-0xF800	same
LineMode	0	AutoDetect Half-Duplex Full-Duplex	0 1 2
LineSpeed	0	AutoDetect 10 Mbps 100Mbps	0 1 2
LinkIntegrity	1	OFF ON	0 1
MemoryMapped BaseAddress	5B80000	0xC0000- B000C000	same
Socket	0	AutoDetect 1 2 3	0 1 2 3
CableDetect	On	ON OFF	1 0


For network administrators only:






The network node address can be modified manually.

1. Using the Run command, type `regedit` and press **Return**.
2. Select HKEY_LOCAL_MACHINE, System, CurrentControlSet, Services, IBMC.
3. Click on the **Edit** menu, select **New**, press **String Value**.
4. Rename the new value Network Address (no spaces, case sensitive) and press **Enter**.




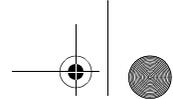


5. Then double click **NetworkAddress** and enter the 12 digit address (no spaces) in the "Value Data" box and click **OK**.

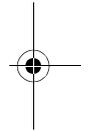

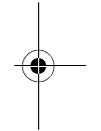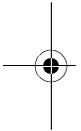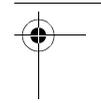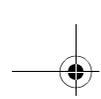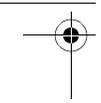

3-8 10/100 EtherJet CardBus Adapter

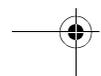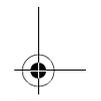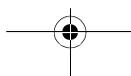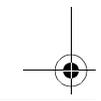

Chapter 4. Diagnostics and Troubleshooting

This chapter contains supplementary diagnostics and troubleshooting information for the EtherJet CardBus Adapter. For troubleshooting information specific to your operating environment, see the appropriate installation chapter. This supplementary information is intended for users or network administrators who are already familiar with the EtherJet CardBus Adapter and its user documentation, and who have run into difficulties after having completed the appropriate installation and troubleshooting procedures for their operating environment.

Note: For additional troubleshooting information, see the Windows Help file HELPDOCS.HLP on the IBM CD-ROM.

The following topics are covered in this chapter:

- LED Indicators
- Diagnostic Test
- Troubleshooting Checklist
- Keyword Reference (All Drivers)

Additional Sources of Information

Consult your computer and network documentation as needed. For the latest technical notes on the EtherJet CardBus Adapter, see the **README.TXT** file on the IBM CD-ROM.

See Appendix A for IBM support services access information.

LED Indicators

The LED indicators on the EtherJet CardBus Adapter media module operate under the following conditions: (1) the card is inserted into a PC Card slot and (2) connected to the network, (3) computer is powered on, and (4) network driver has been loaded.

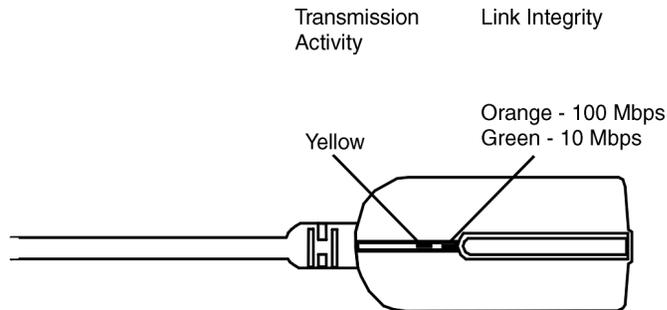


Figure 4-1. LAN Adapter Cable (100BASE-TX/10BASE-T)

Diagnostic Self Test

IBM provides both a DOS-based and Windows based self-test diagnostics program. The programs test several EtherJet Card-Bus Adapter functions. It also reports test results, the serial number of the unit, and the node address.

Program	For Use With	Diskette Found On
IBMCTEST.EXE	DOS, Win 3.X	IBM CD-ROM
EJETDIAG.EXE	Win 95, 98, NT	IBM CD-ROM

Note: IBMCTEST can be run only from the MS-DOS command line. It cannot be run from a DOS box within Windows.

Executing the MS-DOS/Windows 3.x Diagnostic Program (IBMCTEST.EXE)

Use the following steps to execute the self-test.

1. Install the EtherJet CardBus Adapter according to the instructions contained in Chapter 1.
2. Power down and restart the computer from MS-DOS. Do not load a network driver.

Note: Do not run IBMCTEST with a network driver loaded. Loading a network driver before running IBMCTEST may cause unpredictable results when exiting the test utility.

3. Type **IBMCTEST** at the MS-DOS prompt and press **Enter**.

Main Screen

The program consists of several function buttons and a view pane. Pressing or invoking a function will bring up the corresponding panel in the view pane. This view remains until another is selected. To exit IBMCTEST type **x** or push the **Exit** button.

When a function is active, the button appears to remain down or pushed. Once the button pops up, the function is completed and the screen is a passive results display.

Nine functions can be invoked by pushing the associated button on the main panel, using the highlighted letter indicated on the button, or the left mouse button. Online help is provided.

Note: Write down the EtherJet CardBus Adapter model and serial numbers for reference.

Executing the Windows 95, 98, and NT Diagnostic Program (EJETDIAG.EXE)

1. Make sure the EtherJet CardBus Adapter is installed and has been configured to work in your version of Windows.
2. Insert the IBM CD-ROM.
3. Select **File, Run**, path\EJETDIAG.EXE, where path\ is the drive containing the IBM CD-ROM.
4. Navigate through the diagnostic program by clicking on the appropriate tab. When finished, click **OK** to exit.

Troubleshooting Checklist

- For Windows 3.x installation and troubleshooting information, see HELPDOCS.HLP on the IBM CD-ROM.
- Review the README.TXT file on the IBM CD-ROM.
- Be sure you have the current drivers for your adapter. You can check the version numbers on the IBM web site at:
<http://www.networking.ibm.com/support/ejetcardbus>
- When loading drivers or running the test utility, keep the LAN adapter cable attached to the EtherJet CardBus Adapter.
- Under Novell, ensure that the FRAME TYPE you are using is the same as that of the file server. The server frame type should be specified as the first frame type in the NET.CFG.
- In a twisted pair environment, try plugging directly into the hub or concentrator.
- Plug in to a known working network connection.
- Try using the EtherJet CardBus Adapter on a different computer.
- Try another IBM adapter if available.
- If your computer has multiple PC Card sockets, move the adapter to another socket.
- If you have more than one PC Card device in your computer, remove the non-IBM PC Card devices.
- Test the IBM adapter without loading Card and Socket Services to prevent conflicts between the IBM adapter and Card and Socket Services. The interrupt, memory address location, and I/O address for Card and Socket service drivers must match the IBM configurations in NET.CFG or PROTOCOL.INI (if used).
- Make sure that the IBM interrupt, memory address, and I/O address do not conflict with other installed hardware (such as sound cards, CD-ROM drives, or PEN devices).
- Try loading the CardBus drivers at different memory locations (for example, C800, CC00, D400, D800).
- Try using different interrupt locations (for example, 9, 10, 11).

- Try using different port addresses (for example, 280, 290, 310, 320).

Keyword Reference (All Drivers)

Note: Configuration keywords for all EtherJet CardBus Adapter drivers are listed in alphabetical order. See the information on each operating system for keywords specific to that environment. For Windows 3.x, IBM OS/2, and 32-bit ODI, see the file HELPDOCS.HLP on the IBM CD-ROM.

CableDetect turns the cable detect feature on or off. When on, cable detect puts the adapter in a low power mode when it senses there is no LAN cable attached.

CACHE sets system cache line size on the CardBus bridge. Values are system-dependent and may include only 0 (cache disabled), 4, 8, 16, or 32. Changes could affect network performance.

DIRECTENABLE (32-bit NDIS3 Driver IBM.CSYS) forces method used by driver to determine if a EtherJet CardBus Adapter is present. Valid parameters are AutoDetect, Off, and On. AutoDetect allows the driver to determine if the CardBus bridge has already been set up by another enabler such as Socket and Card Services. If so, the driver will use the current configuration. On forces the driver to enable the CardBus bridge without checking its current state.

DRIVERNAME=IBMCS required as first item in the IBM section of the PROTOCOL.INI file for the IBM.CNDIS driver.

EARLYRECEIVE see NOEARLYRX.

EARLYTRANSMIT see NOEARLYTX.

ERT specifies Advanced Look-ahead Pipelining threshold. Valid settings are LOW, MEDIUM, and HIGH. Changing this value affects network performance, depending on the computer system.

INT, INTERRUPTNUMBER see IRQ.

INTERRUPTSTYLE (For 32-bit NDIS3 Driver IBM.CSYS only) forces the driver to use ISA IRQ routing or PCI IRQ routing. Some CardBus bridges have the capability of supporting both PCI and

ISA style IRQ routing. Valid parameters are AutoDetect, PCI-IRQ, and ISA-IRQ. The default keyword is AutoDetect.

IOADDRESS, IOBASEADDRESS specifies the base I/O address of the EtherJet CardBus Adapter I/O ports, in hexadecimal notation. The EtherJet CardBus Adapter requires 128 contiguous I/O addresses if run in I/O mode. If using memory-mapped I/O mode, no I/O ports are necessary. If this parameter is not specified the driver detects an I/O port automatically.

I/O PORT see IOADDRESS

IRQ specifies a hardware interrupt for the adapter. If PCI interrupts are used on the CardBus bridge, this parameter is ignored (unless the ISAIRQ keyword is used as an override). If this parameter is not specified the driver detects an IRQ automatically.

ISAIRQ use this keyword to force the driver to use ISA IRQ routing. Some CardBus bridges support both PCI and ISA style IRQ routing. The driver automatically determines the best choice for this option unless this keyword is used as an override.

LATENCY specifies the latency timer for the CardBus Bridge. This parameter affects the bus mastering capabilities of the EtherJet CardBus Adapter. Changing this parameter may affect system performance. The range is a decimal number from 1 to 255. The default is 32. The latency should be lowered if more than one peripheral device, such as a modem, is being used. If the EtherJet CardBus Adapter is the only peripheral being used, use a higher latency, such as 255.

LINEMODE (for 16-bit DOS drivers) selects either half-duplex or full-duplex mode for the network. Valid parameters are AUTO, HALF or FULL. Selecting full-duplex enables the EtherJet CardBus Adapter to send and receive data simultaneously when connected to a full-duplex hub. Default is AUTO.

LINEMODE (for 32-bit NDIS3 driver IBMC.SYS) selects either half-duplex or full-duplex mode for the network. Valid parameters are AutoDetect, Half Duplex, and Full-Duplex. Selecting full-duplex enables the EtherJet CardBus Adapter to send and receive data simultaneously when connected to a full-duplex hub. Default is keyword is AutoDetect.

LINESPEED (for 16-bit DOS drivers) forces operation to 10 or 100 Mbps. If the keyword is not present the line speed is automatically detected (default).

LINESPEED (for 32-bit NDIS3 driver IBMC.SYS) forces operation to 10 or 100 Mbps. Valid parameters are AutoDetect, 10 Mbps, and 100 Mbps. Default is AutoDetect.

LINKDISABLE disables link integrity for non-IEEE 10BASE-T networks such as StarLAN 10. Without this keyword in the driver command line, the driver defaults to link integrity ENABLED.

MEM, MEMORY specifies the host PC memory location for the IBM adapter in hexadecimal notation, when MODE MEMORY (memory-mapped I/O) is being used (see MODE). The memory block occupies 4 KB of host memory.

MODE when set to IO disables requests for memory-mapped mode on systems that only support an I/O-driven card. The MEMORY setting provides increased performance on computers that allow simultaneous availability of memory and I/O resources.

NETWORKADDRESS allows you to override adapter's unique network node address by specifying a different node address.

NOBURST disables burst mode reads on the EtherJet CardBus Adapter. Using this keyword forces the adapter to initiate a bus-master request for each read, negatively impacting performance.

NOCHECK disables verification of adapter resources. If the driver detection and verification code is causing problems when loading, this keyword can be used to turn the feature off.

NODEADDRESS see NETWORKADDRESS.

NOEARLYRX disables Advanced Look-ahead Pipelining features of the EtherJet CardBus Adapter. This keyword can be used to troubleshoot systems that have inexplicable network problems. Using this keyword could negatively impact performance.

NOEARLYTX disables early transmit capability of the EtherJet CardBus Adapter. This keyword can be used to troubleshoot systems with inexplicable network problems. Using this keyword could negatively impact performance.

NOLED turns off LED indicators to conserve power.

NOPREFETCH disables prefetching in memory-mapped I/O mode by turning off this capability on the CardBus bridge. Using this keyword could negatively impact performance.

NOWRITEPOST disables prefetching in memory-mapped I/O mode by turning off this capability on the CardBus bridge. Using this keyword could negatively impact performance.

PCIIRQ forces the driver to use PCI IRQ routing. Some CardBus bridges have the capability of supporting both PCI and ISA style IRQ routing. The driver automatically determines the best choice for this option unless this keyword is used as an override.

PORT (ODI driver) see IOADDRESS.

RXBUFFERSIZE sets size of the adapter receive packet buffer. This is a number in decimal in the range 1 - 30 for 16-bit drivers and 1 - 100 for the 32-bit ODI driver. Each packet adds approximately 1520 bytes to the resident size of the driver. The default is 15 packets.

SINT (Packet Driver) is a number from hexadecimal 60 to 80 designating a software interrupt. Default is 60.

SOCKET (16-bit DOS Drivers) identifies number of host computer PC Card slot into which the IBM CardBus adapter is inserted. If a socket number is specified, only the specified socket is checked for the IBM adapter. If no socket is specified, all sockets are searched until the IBM adapter is found.

SOCKET (For 32-bit NDIS3 Driver IBMC.SYS) identifies the number of the host computer's PC slot or socket into which the EtherJet CardBus Adapter is inserted. Valid parameters are AutoDetect, 1, 2, 3, and 4. If a socket number is specified, only the specified socket is checked for the EtherJet CardBus Adapter. The default keyword is AutoDetect, and the driver automatically checks all slots for the EtherJet CardBus Adapter.

TXBUFFERSIZE sets the size of the adapter transmit packet buffer. This is the number of transmit packets in decimal in the range 1 - 10 for 16-bit drivers and 1 - 100 for the 32-bit ODI driver. Each packet adds approximately 1520 bytes to the resident size of the driver. The default is 2 packets.

VERBOSE displays additional configuration information when the driver loads, including information about the CardBus controller on the PCI to CardBus bridge on the host computer.

Appendix A. Product Support Services

Help Files

The HELPDOCS.HLP file, contained on the IBM CD-ROM, provides detailed information about the EtherJet CardBus Adapter.

Topics include:

- Windows 95, 98, and NT
- IBM OS/2 Help
- 32-Bit OD1 Help
- Windows 3.x Help
- IBM Product Support

IBM Product Support

You can download the latest drivers, related code, technical tips, and product information from the 10/100 EtherJet CardBus Adapter Web site at:

<http://www.networking.ibm.com/support/ejetcardbus>

For more information regarding other IBM Networking Products go to the IBM Networking Home page:









<http://www.networking.ibm.com>

IBM Product Support

- 1 800 772-2227 for IBM HelpCenter
- 1 800 565-3344 for HelpPC (Canada)

Warranty Service Procedures

For details about warranty coverage and service, see Appendix C, "Notices".

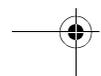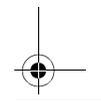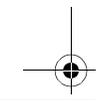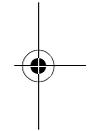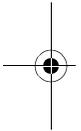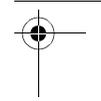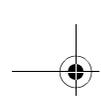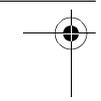

Appendix B. Specifications

General Specifications

Model EtherJet CardBus Adapter

Cable: 100BASE-TX-unshielded twisted pair for use on Category 5 (data grade) cabling; 10BASE-T-unshielded twisted pair (UTP) Category 3 or better cabling

Connector: RJ-45

Operating Distance: 328 ft (100 m)

Ethernet Specifications

Ethernet IEEE 802.3 for 10 Mbps, 802.3u for 100 Mbps

Type II CardBus PC Card

10/100 Mbps full-duplex

Size: 3.37 in (86 mm) x 2.13 in (54.0 mm) x 0.20 in (5.0 mm) excluding adapter cable and network connection

Weight: 0.85 oz (24 g)

Power Requirements:


10BASE-T 3.3 V dc, 50 mA idle, 105 mA active, 80 mA typical

100BASE-TX 3.3 V dc, 125 mA idle, 135mA active, 130mA typical

Power Management:

Supports ACPI, CardBus Power Management

Specification, Magic Packet, and Wake on LAN

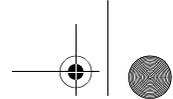

Temperature Range:

Operating: 32°F to 131°F (0°C to 55°C)



Storage: -4°F to 149°F (-20°C to 65°C)

Humidity: 95% max. noncondensing

LEDs: Link integrity, transmission activity

Certification: FCC Part 15, Class B

CE Mark (EN55022, Class B, EN50082)

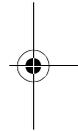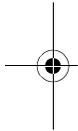

Appendix C. Notices

References in this publication to IBM products, programs, or services do not imply that IBM intends to make these available in all countries in which IBM operates. Any reference to an IBM product, program, or service in this publication is not intended to state or imply that only IBM's product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any of IBM's intellectual property rights may be used instead of the IBM product, program, or service. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by IBM, are the user's responsibility.

IBM may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to the IBM Director of Licensing, IBM Corporation, 500 Columbus Avenue, Thornwood NY 10594 USA.


Notice to Users of Online Versions of This Book

For online versions of this book, we authorize you to:

- Copy, modify, and print the documentation contained on the media, for use within your enterprise, provided you reproduce the copyright notice, all warning statements, and other required statements on each copy or partial copy.
- Transfer the original unaltered copy of the documentation when you transfer the related IBM product (which may be either machines you own, or programs, if the program's license terms permit a transfer). You must, at the same time, destroy all other copies of the documentation.

You are responsible for payment of any taxes, including personal property taxes, resulting from this authorization.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

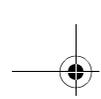

Some jurisdictions do not allow the exclusion of implied warranties, so the above exclusion may not apply to you.

Your failure to comply with the terms above terminates this authorization. Upon termination, you must destroy your machine-readable documentation.

Safety Notices

Telecommunications Safety Requirements in the United Kingdom

This IBM product is made to high safety standards. It complies inherently with telecommunications safety standard BS 6301. It is not designed to provide protection from excessive voltages appearing externally at its interfaces. Therefore, when this product is connected to a public telecommunications network via any other equipment, and you connect to this product items not supplied by IBM United Kingdom Ltd., you must comply with mandatory telecommunications safety requirements.



Statement of Compliance with the United Kingdom Telecommunications Act 1984

This apparatus is approved under approval number NS/G/1234/J/100003 for indirect connections to the public telecommunications systems in the United Kingdom.

Electronic Emission Notices

Federal Communications Commission (FCC) Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and

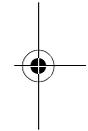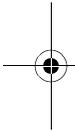

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an IBM authorized dealer or service representative for help.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM authorized dealers. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

International Business Machines Corporation
New Orchard Road
Armonk, NY 10504
Telephone 1-919-543-2193

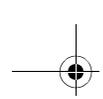

Industry Canada Class B Emission Compliance Statement

This Class B digital apparatus complies with Canadian ICES-003.

Avis de conformité aux normes d'Industrie Canada

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

European Norm (EN) Statement

This product is in conformity with the protection requirements of EU Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for an failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class B Information Technology Equipment according to CISPR 22/European Standard EN 55022. The limits for Class B equipment were derived for typical residential environments to provide reasonable protection against interference with licensed communication devices.



Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) vom 30. August 1995 (bzw. der EMC EG Richtlinie 89/336).

Dieses Gerät ist berechtigt in Übereinstimmung mit dem deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Konformitätserklärung nach Paragraph 5 des EMVG ist die IBM Deutschland Informationssysteme GmbH, 70548 Stuttgart.

Informationen in Hinsicht EMVG Paragraph 3 Abs. (2) 2:

Das Gerät erfüllt die Schutzanforderungen nach EN 50082-1 und EN 55022 Klasse B.

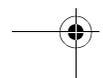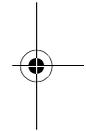

EN 50082-1 Hinweis

"Wird dieses Gerät in einer industriellen Umgebung betrieben (wie in EN 50082-2 festgelegt), dann kann es dabei eventuell gestört werden. In solch einem Fall ist der Abstand bzw. die Abschirmung zu der industriellen Störquelle zu vergrößern."

Anmerkung

Um die Einhaltung des EMVG sicherzustellen sind die Geräte, wie in den IBM Handbüchern angegeben, zu installieren und zu betreiben.

Japanese Voluntary Control Council for Interference (VCCI) Statement

This product is a Class B Information Technology Equipment and conforms to the standards set by the Voluntary Control Council for Interference by Technology Equipment (VCCI). This product is aimed to be used in a domestic environment. When used near a radio or TV receiver, it may become the cause of radio interference. Read the instructions for correct handling.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

Trademarks

The following terms are trademarks of the IBM Corporation in the United States or other countries or both:

Etherjet	OS/2
HelpCenter	SAA
HelpWare	Systems Application Architecture
IBM	ThinkPad
Operating System/2	Wake on LAN

LANDesk® is a trademark or registered trademark of Intel Corporation in the U.S. and other countries.

Microsoft, Windows, Windows NT, and the Windows 95 logo are trademarks or registered trademarks of Microsoft Corporation.

Other company, product and service names may be trademarks or service marks of other companies.



International Business Machines Corporation Armonk, NY 10504

Statement of Limited Warranty

The warranties provided by IBM in this Statement of Limited Warranty apply only to Machines you originally purchase for your use, and not for resale, from IBM or your reseller. The term "Machine" means an IBM machine, its features, conversions, upgrades, elements, or accessories, or any combination of them. Unless IBM specifies otherwise, the following warranties apply only in the country where you acquire the Machine. If you have any questions, contact IBM or your reseller

Machine IBM 10/100 EtherJet CardBus Ready Port Adapter with 56K Modem

Warranty Period*Lifetime

*Contact your place of purchase for warranty service information.

Production Status

Each Machine is manufactured from new parts, or new and used parts. In some cases, the Machine may not be new and may have been previously installed. Regardless of the Machine's production status, IBM's warranty terms apply.

The IBM Warranty for Machines

IBM warrants that each Machine 1) is free from defects in materials and workmanship and 2) conforms to IBM's Official Published Specifications. The warranty period for a Machine is a specified, fixed period commencing on its Date of Installation. The date on your receipt is the Date of Installation, unless IBM or your reseller informs you otherwise.

During the warranty period, IBM or your reseller, if authorized by IBM, will provide warranty service under the type of service design-

nated for the Machine and will manage and install engineering changes that apply to the Machine.

For IBM or your reseller to provide warranty service for a feature, conversion, or upgrade, IBM or your reseller may require that the Machine on which it is installed be 1) for certain Machines, the designated, serial-numbered Machine and 2) at an engineering-change level compatible with the feature, conversion, or upgrade. Many of these transactions involve the removal of parts and their return to IBM. You represent that all removed parts are genuine and unaltered. A part that replaces a removed part will assume the warranty service status of the replaced part.

If a Machine does not function as warranted during the warranty period, IBM or your reseller will repair it or replace it with one that is at least functionally equivalent, without charge. The replacement may not be new, but will be in good working order. If IBM or your reseller is unable to repair or replace the Machine, you may return it to your place of purchase and your money will be refunded.


If you transfer a Machine to another user, warranty service is available to that user for the remainder of the warranty period. You should give your proof of purchase and this Statement to the user. However, for Machines which have a lifetime warranty, this warranty is nontransferable.

Warranty Service

To obtain warranty service for the Machine, you should contact your reseller or call IBM. In the United States and Canada, call IBM at 1-800-IBM-SERV (1-800-426-7378). You may be required to present proof of purchase.

IBM or your reseller will provide certain types of repair and exchange service, either at your location or at IBM's or your reseller's service center, to restore a Machine to good working order.

When a type of service involves the exchange of a Machine or part, the item IBM or your reseller replaces becomes its property and the replacement becomes yours. You represent that all removed items are genuine and unaltered. The replacement may not be new, but will be in good working order and at least functionally equivalent to the item replaced. The replacement assumes the warranty service status of the replaced item. Before

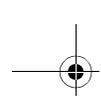

IBM or your reseller exchanges a Machine or part, you agree to remove all features, parts, options, alterations, and attachments not under warranty service. You also agree to ensure that the Machine is free of any legal obligations or restrictions that prevent its exchange.

You agree to:

1. obtain authorization from the owner to have IBM or your reseller service a Machine that you do not own;
and
2. where applicable, before service is provided—
 - a. follow the problem determination, problem analysis, and service request procedures that IBM or your reseller provide,
 - b. secure all programs, data, and funds contained in a Machine, and
 - c. inform IBM or your reseller of changes in a Machine's location.


IBM is responsible for loss of, or damage to, your Machine while it is 1) in IBM's possession or 2) in transit in those cases where IBM is responsible for the transportation charges.

Extent of Warranty

IBM does not warrant uninterrupted or error-free operation of a Machine.

The warranties may be voided by misuse, accident, modification, unsuitable physical or operating environment, improper maintenance by you, removal or alteration of Machine or parts identification labels, or failure caused by a product for which IBM is not responsible

THESE WARRANTIES REPLACE ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THESE WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF EXPRESS OR IMPLIED WARRANTIES, SO

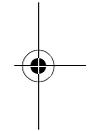






THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. IN THAT EVENT SUCH WARRANTIES ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD.

Limitation of Liability





Circumstances may arise where, because of a default on IBM's part or other liability you are entitled to recover damages from IBM. In each such instance, regardless of the basis on which you are entitled to claim damages from IBM (including fundamental breach, negligence, misrepresentation, or other contract or tort claim), IBM is liable only for:

1. damages for bodily injury (including death) and damage to real property and tangible personal property; and
2. the amount of any other actual direct damages or loss, up to the greater of U.S. \$100,000 or the charges (if recurring, 12 months' charges apply) for the Machine that is the subject of the claim.

UNDER NO CIRCUMSTANCES IS IBM LIABLE FOR ANY OF THE FOLLOWING: 1) THIRD-PARTY CLAIMS AGAINST YOU FOR LOSSES OR DAMAGES (OTHER THAN THOSE UNDER THE FIRST ITEM LISTED ABOVE); 2) LOSS OF, OR DAMAGE TO, YOUR RECORDS OR DATA; OR 3) SPECIAL, INCIDENTAL, OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), EVEN IF IBM OR YOUR RESELLER IS INFORMED OF THEIR POSSIBILITY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.

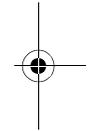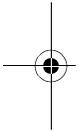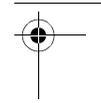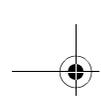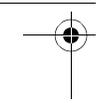

C-10 10/100 EtherJet CardBus Adapter

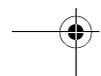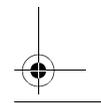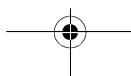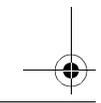

Index

Numerics

32-bit ODI driver. *See*
HELPDOCS

A

Auto-detection of PC Card 21
Auto-negotiation, Speed 17

C

Cabling
 Category 19
 Installation 17
CACHE 43
Card and Socket Services
 Software 31
CardBus Compliance 19
CardExecutive for NT 31
CardWare for NT 32
CardWizard for NT 32
Customer support 47

D

Diagnostics
 Introduction 39
 Self Test 40
DIRECTENABLE 43
Driver Parameters
 Windows NT 35
Driver parameters
 Windows 95 23
DRIVERNAME 43
Drivers Available
 Windows NT 31
Drivers available
 Windows 95 23

E

Electronic Emission Notices 52
Equipment, Required 19

European Norm (EN) Statement
54

Executing the MS-DOS/Windows
3.x Diagnostic Program
(IBMCTEST.EXE) 40
Executing the Windows 95, 98,
and NT Diagnostic Program
(EJETDIAG.EXE) 41

F

FCC Statement 52

H

Hardware Installation 17

I

IBM Installation Disk 17
installation 17
Installing
 Hardware 20
IOADDRESS 44
IOBASEADDRESS 44
IRQ 44

K

Keyword Reference 43

L

LAN Adapter Cable
 Connecting 21
LATENCY 44
LED Indicators 39
LINEMODE 44
LINESPEED 45

M

MEMORY 45
MODE 45

N

NDIS Drivers
 NDIS3 Driver 28, 31
 NDIS4 Driver 28, 31
 Parameters 28
 Windows 95 23
 Windows NT 31
Network Address 29, 36
Network Cable 22
Network Cabling 17
NETWORKADDRESS 45
Node Address 39
Notices 51

P

Package Contents 18
Parameters, Driver 43
PC Card Controller for NT 32
PC Card Slots 19
Plug and Play 33
PORT 46
Promiscuous Support 23

R

Required Equipment 19
RJ-45 Connector 19, 22

S

Safety 52
Self Test 40
Slots, PC Card 19
Sources of Information 39
Specifications
 Ethernet 49
 General 49
Support services 47

T

Telecommunications Safety 52
Trademarks 55
Troubleshooting
 Checklist 42
 Introduction 39

U

UTP 17

V

VCCI Statement 55
VERBOSE 46

W

Warranty 56
Windows 95
 Driver Parameters 28
 Installation 24
 Manual Installation 24
 OSR2 (v 950b) 25
 Troubleshooting 25
 Version 950/950a 24
Windows NT
 Card and Socket Services 31
 CardExecutive 31
 CardWizard 32
 PC Card Controller 32
 Removing the Adapter 35
Windows NT
 CardWare 32
 Driver Parameters 35
 Drivers 32
 Installation 31
 Network Address 36

Tell Us What You Think!

IBM 10/100 EtherJet CardBus Adapter
Installation and Planning Guide

We hope you find this publication useful, readable, and technically accurate, but only you can tell us! Your comments and suggestions will help us improve our technical publications. Please take a few minutes to let us know what you think by completing this form. If you are in the U.S.A., you can mail this form postage free or fax it to us at 1-800-253-3520. Elsewhere, your local IBM branch office or representative will forward your comments or you may mail them directly to us.

Overall, how satisfied are you with the information in this book?

Satisfied Dissatisfied

How satisfied are you that the information in this book is:

Satisfied Dissatisfied

Accurate	<input type="checkbox"/>	<input type="checkbox"/>
Complete	<input type="checkbox"/>	<input type="checkbox"/>
Easy to find	<input type="checkbox"/>	<input type="checkbox"/>
Easy to understand	<input type="checkbox"/>	<input type="checkbox"/>
Well organized	<input type="checkbox"/>	<input type="checkbox"/>
Applicable to your task	<input type="checkbox"/>	<input type="checkbox"/>

Specific comments or problems:

Please tell us how we can improve this book:

Thank you for your comments. If you would like a reply, provide the necessary information below.

Name

Address

Company or Organization

Phone Number





NO POSTAGE
NECESSARY IF
MAILED IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST-CLASS MAILPERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

Design & Information Development
Dept. CGF/Bldg. 656
International Business Machines Corporation
PO BOX 12195
RESEARCH TRIANGLE PARK NC 27709-9990

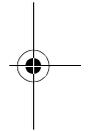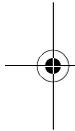

Fold and Tape

Please do not staple

Fold and Tape

Tell Us What You Think!

