



**COMMUNICATIONS CONTROL PROGRAM
VERSION 1
OPERATOR'S GUIDE**

**CONTROL DATA[®]
CYBER 170 SERIES
CYBER 70 SERIES MODELS 72, 73, 74
6000 SERIES COMPUTER SYSTEMS
CYBER 18 COMPUTER SYSTEMS
255X HOST COMMUNICATIONS PROCESSORS**



PREFACE

This manual describes the operating procedures necessary to permit an operator to control the Communications Control Program (CCP) Version 1.

The procedures are used by computer operators who are presumed to have some knowledge of the operating system hardware, its internal functions, and of programming. These

procedures are useful to system analysts in using the console.

CCP 1 supports the CONTROL DATA 2550-1 or 2550-2 Host Communications Processor (HCP).

The following manuals also contain additional information on CCP 1. These manuals are available through the Literature Distribution Services.

| <u>Publication</u> | <u>Publication Number</u> |
|------------------------------------|---------------------------|
| CCP 1 Reference Manual | 60470000 |
| CCP 1 Software Diagnostic Handbook | 60470200 |

This product is intended for use only as described in this document. Control Data cannot be responsible for the proper functioning of undescribed features or undefined parameters.



CONTENTS

| | | | |
|------------------------------|-----|------------------------------|------|
| 1. GENERAL INFORMATION | 1-1 | | |
| Introduction | 1-1 | Place line Out of Service | 2-5 |
| Equipment Specifications | 1-1 | Place Line In Service | 2-5 |
| Special Port Zero Functions | 1-1 | Start CLA Internal | |
| | | Loopback Test | 2-5 |
| | | Start Modem Loopback Test | 2-5 |
| | | Start External Loopback Test | 2-6 |
| | | Terminate Test | 2-6 |
| 2. OPERATING PROCEDURES | 2-1 | Diagnostic Test Responses | 2-6 |
| Introduction | 2-1 | Question if Supervisory | 2-10 |
| 2550 Load/Initialize | 2-1 | Activate Function | 2-10 |
| Host Failure | 2-1 | Deactivate Function | 2-10 |
| Suspension of 2550 Operation | 2-1 | Requeue | 2-10 |
| Control Statements Entry | 2-4 | Cancel | 2-10 |
| Console Commands | 2-4 | Use of the Manual Interrupt | 2-10 |
| Supervisory Function | 2-4 | Editing Console Input | 2-10 |
| Diagnostic Function | 2-4 | System Halts | 2-11 |

FIGURES

| | | | |
|------------------------------|-----|------------------------------|-----|
| 2-1 Loop Multiplexer Circuit | | 2-3 Maintenance Panel MASTER | |
| Card PWR ON/OFF Switch | | CLEAR Switch Location | 2-3 |
| Location | 2-2 | | |
| 2-2 CLA Circuit Card ON/OFF | | | |
| Switch Locations | 2-2 | | |

TABLES

| | | | |
|-------------------------------|-----|------------------------|------|
| 1-1 Memory Unit Options | 1-1 | 2-4 Data Compare Error | |
| 2-1 Modem Class | 2-6 | Response Code | |
| 2-2 Response Codes | 2-7 | Interpretation | 2-9 |
| 2-3 Error Code Interpretation | 2-8 | 2-5 Halt Codes | 2-11 |



GENERAL INFORMATION

1

INTRODUCTION

The Communications Control Program (CCP) is the online operating and support software for the 2550 Host Communications Processor (HCP). The HCP provides front-end communications functions for a CDC 6000/CYBER 70/170 Host Computer System. The host computer system operates under control of the NOS/BE operating system.

The 2550 HCP is designed to operate with little or no operator intervention and with most of the system under control of the CYBER host computer system. Some of the functions performed by the host include loading the CCP into the HCP, configuring the communications lines, reloading the HCP after system failure, and receiving and processing CE error and statistics messages.

The 2550 operator has on-line supervisory control that enables such functions as changing the routing of service and statistics messages and the initiation of on-line diagnostic programs.

EQUIPMENT SPECIFICATIONS

The CCP requires the following minimum equipment configuration of the 2550-1 or 2550-2 Host Communications Processor:

- 1 Multiplex Loop Interface Adapter (MLIA)
- 1 Loop Multiplexer
- 1 Cyclic Encoder Circuit Card
- 1 CYBER Communications Coupler
- 1 Communications Line Adapter (CLA) selected from the following types:

2560-1, -2, or -3
Synchronous CLA

2561-1 Asynchronous CLA

Memory unit options for the different configurations are shown in table 1-1.

SPECIAL PORT ZERO FUNCTIONS

Port number zero is logically associated with the Multiplex Loop Interface Adapter (MLIA), the local console, and the CYBER Communications Coupler. Therefore, no CLA should be assigned address zero.

TABLE 1-1. MEMORY UNIT OPTIONS

| System Configuration | Basic Memory | Expansion Memory |
|----------------------|--------------|-------------------------------------------------|
| 2550-1 (core) | 3 8K modules | 1 2554-8 8K-module |
| 2550-2 (core) | 4 8K modules | 1 thru 4 2554-8 8K modules |
| 2550-2 (MOS) | 1 32K module | 1 2554-16 16K-module or 1 2554-32 32K-module |



INTRODUCTION

Operating procedures for the CCP consist of loading and initializing the 2550 system, procedures associated with a host failure, suspension of 2550 operation, and entry of operator control statements (commands) through the local console keyboard.

2550 LOAD/INITIALIZE

The 2550 system is loaded and initialized by the host computer system. Therefore, few procedures associated with these functions are the concern of the 2550 operator. However, to prepare for such a downline load, the 2550 operator must:

1. Verify that ports (CLA addresses) to the communications network connections are correct.
2. On the loop multiplexer circuit card, set the power (PWR) switch to ON. See figure 2-1.
3. On the CLA circuit card, set the CLA ON/OFF switch to ON. See figure 2-2. Only those cards that are configured are affected.
4. Verify the local console is in the normal ON condition.

Upon successful completion of the downline load operation by the host, a message containing the CCP version, host identification number, and NPU identification number is output at the local console. The following is an example of that message format:

| | |
|----------|-----|
| CCP | 1.0 |
| HOST ID: | 00 |
| NPU ID: | 01 |

The host then configures the 2550 terminals and normal system operation begins.

If the downline load is unsuccessful, the host initiates and receives a dump of the 2550 memory, micromemory, and file registers. The initiation of another downline load attempt is under control of the host.

HOST FAILURE

If the 2550 should lose communication with the host because of host failure, the console and interactive terminals are sent a host-down message and input from the terminals is stopped. When communication with the host is restored, if the loss was of short duration caused by a temporary inability of the host to obtain control of the 2550 channel, a host-up message signals restoration of communication and system operation resumes unaffected by the temporary loss. Following longer or more serious losses of communication, however, the host may reload the 2550 processor and cause the system to operate as after the initial load operation.

SUSPENSION OF 2550 OPERATION

If it becomes necessary to stop operation of the 2550 system for any reason, momentarily press the MASTER CLEAR switch on the maintenance panel. See figure 2-3.

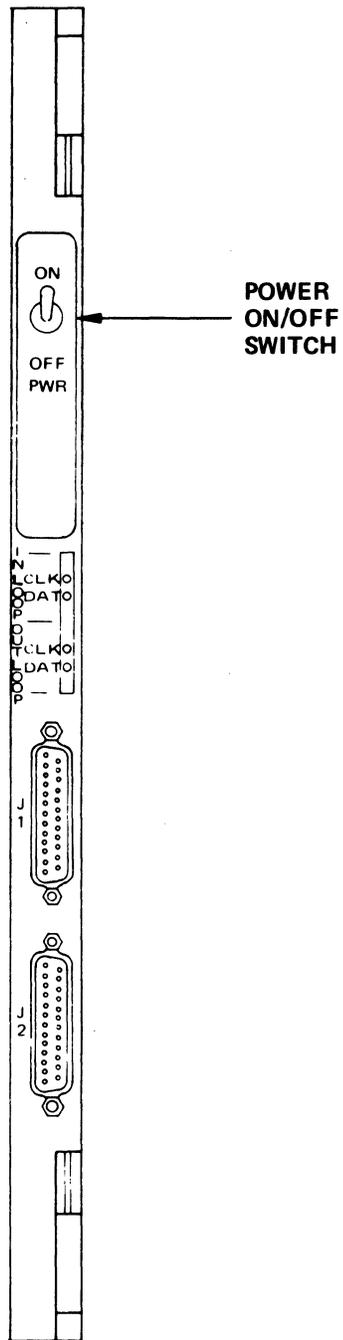


Figure 2-1. Loop Multiplexer Circuit Card PWR ON/OFF Switch Location

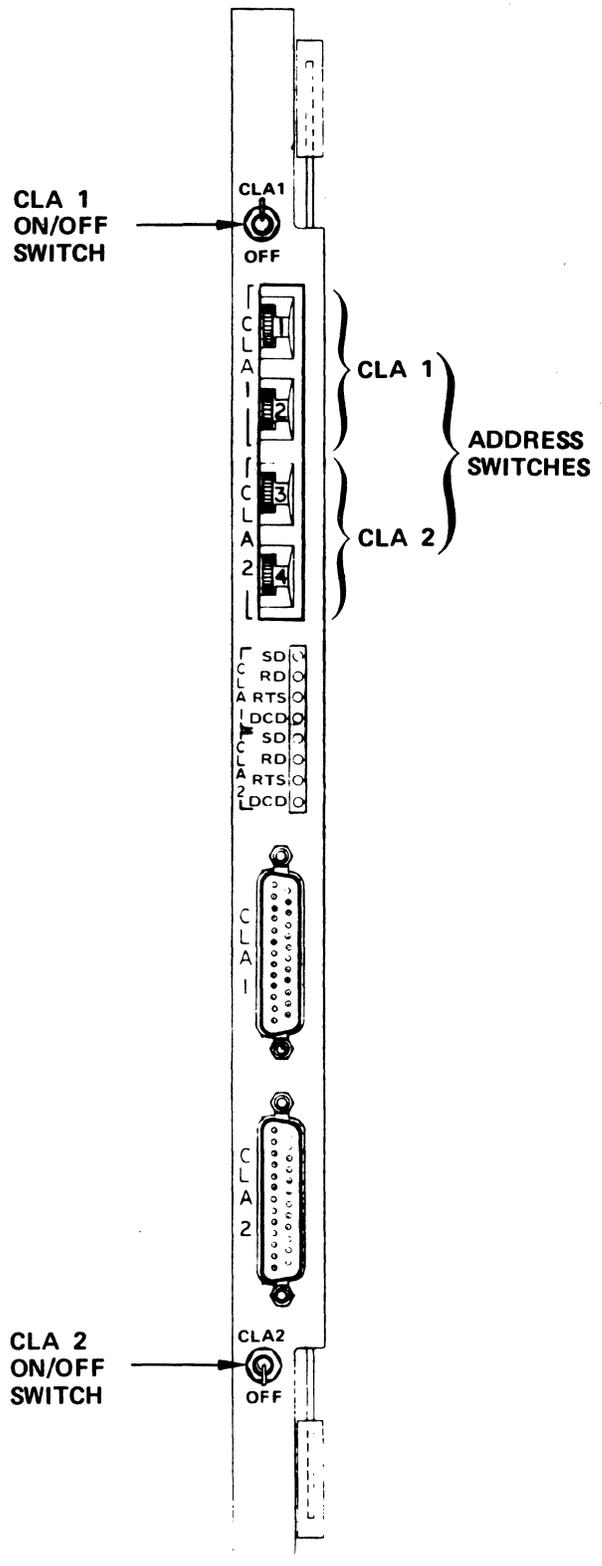


Figure 2-2. CLA Circuit Card On/Off Switch Locations

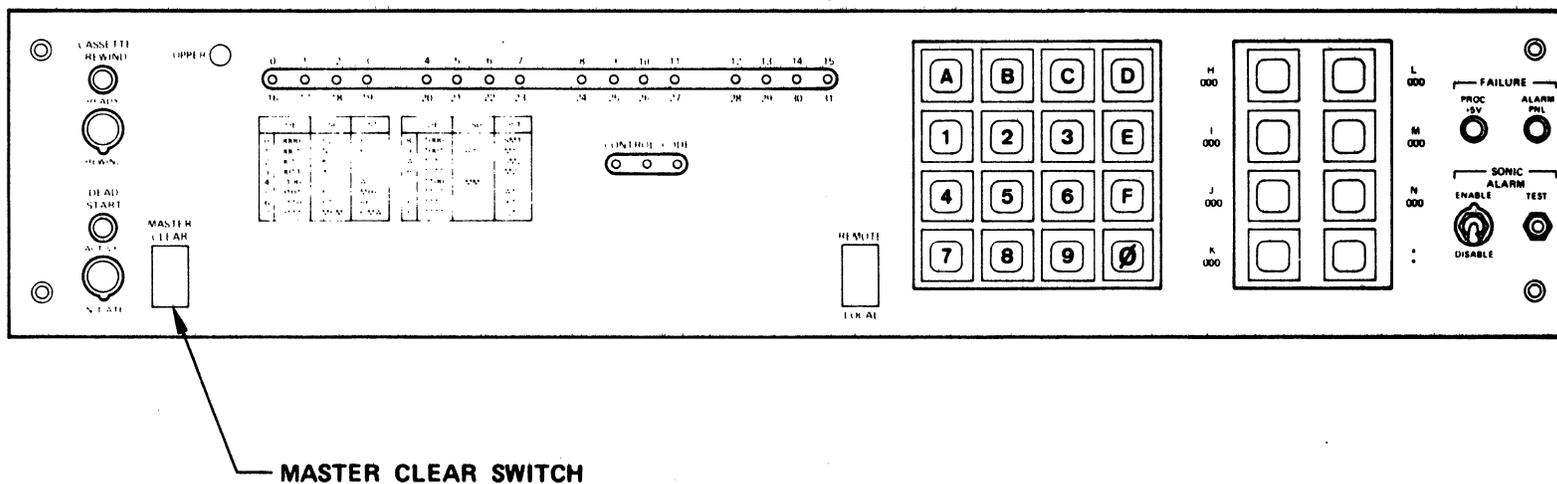


Figure 2-3. Maintenance Panel MASTER CLEAR Switch Location

CONTROL STATEMENTS ENTRY

Operator control statements (commands) are entered through the local console keyboard. These statements specify either supervisory or diagnostic functions that can be selectively activated or deactivated.

The NPU console can be in either the read or write mode, selected by the **G** (control G) character key on the console keyboard. Pressing the **G** key causes a manual interrupt that, in turn, causes the console to alternate between the read and write modes with the mode changing each time the key is pressed. To input operator control statements, the console must be in the read mode, and to output responses, the console must be in the write mode. All operator control statements start with a slash (/) character, and terminate with an EOT (control D) character. Each parameter within the control statement is separated by either a comma or a blank character. Any number of control statements can be entered before the write mode is activated to receive responses. When the write mode is activated, the following response is output at the console:

*WM

If an input error is made during entry of control statements, the console response is an echo of the input message followed by:

*ERR

Escape to the panel mode is activated by depressing the ESC (escape) key. Recovery to the console mode is completed by depressing the **@** (at sign or DLE) key.

CONSOLE COMMANDS

SUPERVISORY FUNCTION

The console command /SUP **D** causes the console to engage the supervisory function. While the supervisory function is active, the following

supervisory inputs can be entered if a change in routing is desired.

XY **D**

where X is message-type interpreted as follows:

- 0 = Upline error and statistics messages
- 1 = Other upline service messages
- 2 = Downline service messages
- 3 = Diagnostic response CE messages

Y specifies routing for messages indicated by X, as follows:

NOTE

**Indicates service messages to the console may cause system overload due to excessive print time.

0 = Discard all messages

**1 = Print all messages on NPU console

2 = Send all messages to host or service module

**3 = Send all messages to host or service module and also print on local console.

D indicates the control **D** key on the console keyboard.

Each message type can be individually designated by X and independently routed by Y, without regard to routing of other message types. The system default is the supervisory mode with all upline service messages sent to the host and all downline service messages sent to the service module.

DIAGNOSTIC FUNCTION

The console command /DIA **D** causes the console to engage the diagnostic

function. While the diagnostic function is active, the group of commands described in the following paragraphs are available. In those command formats, the terms used are interpreted as follows:

- DN - Destination node address. Two hexadecimal characters specifying the ID for the NPU
- SN - Source node address. Two hexadecimal characters specifying the ID for the host
- P - Port number. Two hexadecimal characters specifying the port associated with the line to be affected by the command
- CLA - CLA type
 - 00 if 2560-1 CLA
 - 01 if 2561-1 CLA
 - 02 if 2560-2 or 2560-3 CLA
- MDCL - Modem Class. See table 2-1.

NOTE

Although all input parameters for each command are shown as two hexadecimal characters, the leftmost character can be omitted if it is zero.

PLACE LINE OUT OF SERVICE

This command causes all activity on a specified line to terminate and must be entered prior to initiating any diagnostic test command. Servicing of other lines is not affected. The format of this command is as follows:

| | | | | | | | | |
|----|----|----|----|----|----|----|---|----|
| DN | SN | 00 | 40 | 03 | 00 | 00 | P | SP |
|----|----|----|----|----|----|----|---|----|

A line taken out of service can be reactivated by the place-line-in-service command.

PLACE LINE IN SERVICE

This command allows a line to be returned to operational service by an enable-line service message currently outstanding or subsequently issued by the host. System servicing of other lines is not affected by this command. The place-line-in-service command has the following format:

| | | | | | | | | |
|----|----|----|----|----|----|----|---|----|
| DN | SN | 00 | 40 | 03 | 01 | 00 | P | SP |
|----|----|----|----|----|----|----|---|----|

START CLA INTERNAL LOOPBACK TEST

This command initiates the CLA internal loopback test which consists of a CLA command test and a data verification test. The CLA command test verifies operation of the CLA as it relates to command functions. System servicing of other lines is not affected by this command. The command has the following format:

| | | | | | | | | | | |
|----|----|----|----|----|----|----|---|----|-----|----|
| DN | SN | 00 | 40 | 03 | 02 | 00 | P | SP | CLA | 00 |
|----|----|----|----|----|----|----|---|----|-----|----|

Any errors detected during the CLA test result in printout of a response service message with an appropriate error code at the local NPU console and termination of the test. To restart the test, re-enter the start-CLA-internal-loopback-test command at the local console.

START MODEM LOOPBACK TEST

If modem loopback is available, this command isolates problems occurring further out in the communications system. The test consists of a data verification test with limited analysis of modem control signals. System servicing of other lines is not affected by this command. The command has the following format:

| | | | | | | | | | | |
|----|----|----|----|----|----|----|---|----|-----|------|
| DN | SN | 00 | 40 | 03 | 02 | 01 | P | SP | CLA | MDCL |
|----|----|----|----|----|----|----|---|----|-----|------|

TABLE 2-1. MODEM CLASS

| Test Type | CLA Type | Max Modem Speed | MOD Class | MODEMS |
|-------------------|----------------------------|--------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|-------------------------------------------------------------------|
| INTERNAL LOOPBACK | ALL | N/A | 0 | N/A |
| EXTERNAL LOOPBACK | ALL | N/A | 0 | N/A |
| | 2560-1 2560-2 2560-3 | | | All Synchronous Modems with Loopback Capabilities i.e., 201B, 203 |
| MODEM LOOPBACK | 2561-1 | 100 110 120 133.3 150 300 600 800 1,050 1,200 1,600 2,400 4,800 9,600 | 2 3 4 5 6 7 8 9 A B D F 10 12 | 103, 113 202E, 202C, D, R, VADIC |

START EXTERNAL LOOPBACK TEST

This command provides for loopback of data external to the CLA. The test consists of a command and data verification test with the primary purpose of verifying operation of the line drivers and receivers. The loopback jumper plug (2560-1 External Test Connector for synchronous CLA or 2561-1 External Test Connector for asynchronous CLA) must be connected to the CLA to be tested before this command is entered at the console. System servicing of other lines is not affected by this command. The command has the following format:

| | | | | | | | | | | |
|----|----|----|----|----|----|----|---|----|-----|----|
| DN | SN | 00 | 40 | 03 | 02 | 02 | P | SP | CLA | 00 |
|----|----|----|----|----|----|----|---|----|-----|----|

TERMINATE TEST

This command, entered while a test is in progress, causes the test to

terminate at the end of the normal test cycle currently being executed. System servicing of other lines is not affected by this command. The command format is as follows:

| | | | | | | | | |
|----|----|----|----|----|----|----|---|----|
| DN | SN | 00 | 40 | 03 | 03 | 00 | P | SP |
|----|----|----|----|----|----|----|---|----|

DIAGNOSTIC TEST RESPONSES

The diagnostic test responses are output to the local console in the following standard format:

| | | | | | | | | | |
|----|----|----|----|----|----|----|------|---|----|
| DN | SN | 00 | 40 | 00 | 04 | 00 | RCEC | P | SP |
|----|----|----|----|----|----|----|------|---|----|

where RCEC is the response code or error code.

Response codes and error codes are interpreted in tables 2-2 through 2-4, respectively.

TABLE 2-2. RESPONSE CODES

| Response Code (hex) | Meaning | Remarks |
|---------------------|------------------------------------|--------------------------------------------------------------------------------------------------------|
| A0 | Line is out of service | Normal response to place-line-out-of-service command |
| A1 | Command rejected | System temporarily low on buffers |
| A2 | Line in service | Normal response to place-line-in-service command |
| A3 | Diagnostics in process | Response to place-line-in-service command if diagnostics still in process |
| A4 | Diagnostics started | Normal response to diagnostic-function command |
| A5 | Invalid line number or bad command | Invalid line number issued in command or command code (byte 5) is not valid |
| A6 | Invalid CLA type | Invalid CLA type issued in command |
| A7 | Invalid test mode | Invalid diagnostic test mode (byte 6) issued with command |
| A8 | Line not out of service | Response to place-line-in-service command if line specified was not out of service when command issued |
| A9 | Test already in process | Response to a diagnostic loopback test command if the test specified is already in process |
| AA | Invalid modem class | Invalid modem class issued in command |
| DD | Test completed, no errors | Normal response to a terminate-test command |
| DE | Diagnostic not in progress | Response to terminate-test command if not preceded by diagnostic command |

TABLE 2-3. ERROR CODE INTERPRETATION

| Error Code (hex) | Meaning |
|------------------|---------------------------------------------------------------------------------|
| AB | Unsolicited input detected |
| AC | Unsolicited output data demand detected |
| AD | Input loop error |
| AE | Output loop error |
| AF | Parity error |
| BO | Framing error |
| B1 | Data transfer overrun |
| B2 | Next character not available |
| B3 | No CLA status after CLA status was requested |
| B4 | Unsolicited CLA status |
| B5 | CLA status not cleared after input supervision on (ISON) was sent |
| B6 | No status after request to send (RTS) or input status request (ISR) was sent |
| B7 | No clear to send (CTS) after RTS |
| B8 | No status after data terminal ready (DTR) |
| B9 | No data set ready (DSR) after DTR |
| BA | No signal quality detect (SQD) after DTR |
| BB | No ring after DTR |
| BC | No status after secondary request to send (SRTS) |
| BD | No secondary received line signal detector (SRLSD) after SRTS |
| BE | No CLA status after local mode (LM) |
| BF | No data carrier detect (DCD) after LM |
| CO | Unsolicited status after originate mode (OM) |
| C1 | No status or improper operation of ring indicator (RI) after terminal busy (TB) |
| C2 | No status after new sync (NSYN) |
| C3 | Improper operation of DCD, RI, quality monitor (QM) after NSYN |
| C4 | No RI after RTS |
| C5 | Input data timeout during data verification test |
| DF | Unsolicited status after LM |

TABLE 2-4. DATA COMPARE ERROR RESPONSE CODE INTERPRETATION

| Error Code | CLA Type | Parity | Baud | Stop Bit |
|------------|----------|--------|-------|----------|
| C6 | SYNC | Even | - | - |
| C7 | SYNC | Odd | - | - |
| C8 | SYNC | No | - | - |
| C9 | ASYNC | Even | 40 | 1 |
| CA | ASYNC | Odd | 85.4 | 2 |
| CB | ASYNC | No | 100 | 1 |
| CC | ASYNC | Even | 110 | 2 |
| CD | ASYNC | Odd | 120 | 1 |
| CE | ASYNC | No | 133.3 | 2 |
| CF | ASYNC | Even | 150 | 1 |
| C0 | ASYNC | Odd | 300 | 2 |
| D1 | ASYNC | No | 600 | 1 |
| D2 | ASYNC | Even | 800 | 2 |
| D3 | ASYNC | Odd | 1,050 | 1 |
| D4 | ASYNC | No | 1,200 | 2 |
| D5 | ASYNC | Even | 1,600 | 1 |
| D6 | ASYNC | Odd | 1,600 | 2 |
| D7 | ASYNC | No | 2,400 | 1 |
| D8 | ASYNC | Even | 2,400 | 2 |
| D9 | ASYNC | Odd | 4,800 | 1 |
| DA | ASYNC | No | 9,600 | 2 |
| DB | ASYNC | Even | 9,600 | 1 |

QUESTION IF SUPERVISORY

The command /QIS causes the current console function (supervisory or diagnostic) to be printed at the console in the following format:

Q = XXX

where XXX is SUP or DIA

The purpose of /QIS is to allow the operator to determine if the console is in the supervisory or the diagnostic mode.

ACTIVATE FUNCTION

The command /ACT XXX activates either the supervisory or diagnostic function, as specified by XXX. XXX can equal either SUP or DIA. To activate the function does not select it as the current console function, but only prepares the function so that it may be selected if desired.

DEACTIVATE FUNCTION

The command /DEA XXX deactivates either the supervisory or diagnostic function as specified by XXX. XXX can equal either SUP or DIA. To deactivate a function means that it cannot be selected as a console function. This prevents entry of a designator.

REQUEUE

The command /REQ causes requeuing of a console output message that has been interrupted by a manual interrupt. The message will be output the next time the console enters the write mode.

CANCEL

The command /CAN cancels a console output message that has been interrupted by a manual interrupt.

USE OF THE MANUAL INTERRUPT

The manual interrupt is caused by pressing the **ⓐ** (control G) key on the console keyboard. This act causes the console to alternate between the read and write mode, with the mode changing each time the key is pressed.

If a manual interrupt occurs while output is in progress, the following applies:

1. A manual interrupt followed by /REQ causes the current output message to be requeued.
2. A manual interrupt followed by /CAN causes the current output message to be canceled and discarded.
3. A manual interrupt followed by any input other than the foregoing causes the interrupted output message to continue printing after return to the write mode (from the point at which it was interrupted).

EDITING CONSOLE INPUT


The following console editing standards apply to all console input:

1. Carriage returns (CR) and line feeds (LF) are ignored in that they are used as local characters only and can be used at any time while inputting.
2. Control shift N is replaced by CR.
3. Control shift M is replaced by LF.
4. Control C discards input. The response to a discarded input is the input message discarded followed by *ERR.
5. Data can be overwritten by using the backspace (+), with n backspaces causing n characters to be removed. Corrections can then be entered in place of the removed characters.

SYSTEM HALTS

When the 2550 software detects an inconsistency for which no recovery is planned, the system immediately halts execution and prints a system halt message at the console. The format for such messages is as follows:

*HALT XXXX XXXX

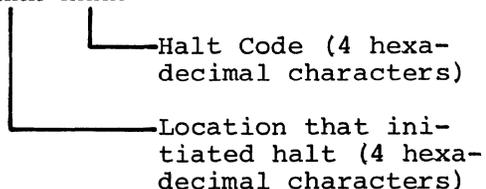

Each unrecoverable error has an associated halt code. These are described in table 2-5. When a system halt occurs, the host normally dumps the 2550 memory, micromemory, and file registers for use in analyzing the reason for the halt. For a discussion of operator actions in the event of a system halt, refer to the CCP 1 Diagnostic Handbook.

TABLE 2-5. HALT CODES


| Halt Code | Description | Remarks |
|-----------|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0000 | Not a valid halt code | |
| 0001 | Power Failure | Location 100 (hexadecimal) indicates location of instruction that would normally be executed after the power failure. |
| 0002 | Memory parity error detected | Location 100 (hexadecimal) indicates location of instruction that would normally be executed after the instruction in which the memory parity error was detected. |
| 0003 | Program protect bit error detected by 2550 | Location 100 (hexadecimal) indicates location of instruction that would normally be executed after the program protect fault. |
| 0004 | Interrupt count less than zero | |
| 0005 | Timal (base system timing services) worklist error | |
| 0006 | Active line control block (LCB) list error | |
| 0007 | No buffers left | |
| 0008 | Size error in stamp | |
| 0009 | Duplicate GET buffer | |

TABLE 2-5. HALT CODES (CONTD)

| Halt Code | Description | Remarks |
|-----------|------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| 000A | Duplicate RELEASE buffer | |
| 000B | Buffer chain error | |
| 000C | Buffer out of range | |
| 000D | Bad command, not type 1 or type 2 | |
| 000E | Bad coupler initialization status | Problem in downline load. Repeat load and, if failure occurs again, contact CE. |
| 000F | Attempted to clear an enabled line | |
| 0010 | Not used | |
| 0011 | Bad multiplex loop interface adapter (MLIA) initialization status | Problem in downline load. Repeat load and, if failure occurs again, contact CE. |
| 0012 | Duplicate CLA address detected | Check CLA addresses for duplicates. If correct, contact CE. |
| 0013 | Attempt to redefine an existing destination node (DN) directory entry | |
| 0014 | Attempt to redefine an existing connection number (CN) directory entry | |
| 0015 | Attempt to remove a nonexistent DN directory entry | |
| 0016 | Attempt to remove a nonexistent source node (SN) directory entry | |
| 0017 | Attempt to remove a nonexistent CN directory entry | |
| 0018 | Real time clock lost count | |
| 0019 | Illegal point of interface (POI) key | |
| 001A | Attempted to add zero connection number (CN) to directories | |
| 001B | Program selected to run is not in core memory | |
| 001C | Monitor did not run for specified (B2TIME/2) seconds | |
| 001D | Service module called with worklist empty | |

TABLE 2-5. HALT CODES (CONTD)

| Halt Code | Description | Remarks |
|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| 001E | Service module work code out of range | |
| 001F | Multiplex loop interface adapter (MLIA) failure | |
| 0020 | Pointer to read next loop cell from circular input buffer (CIB) exceeded present line frame pointer | |
| 0021 | Reserved for firmware use | |
| 0022 | | |
| 0023 | | |
| 0024 | | |
| 0025 | | |
| 0026 | | |
| 0027 | | |
| 0028 | Coupler alarm condition | Coupler detected memory parity error or program protect bit error during data transfer. |
| 0029 | No queue control block | |
| 002A | Bad line number from TIP | |
| 002B | Unknown TASKNR selected | Detected by Mode 4 TIP |
| 002C | Unknown block/CMD received | Detected by Mode 4 TIP |
| 002D | Improper multiplex subsystem operation | Detected by Mode 4 TIP |
| 002E | Improper Mode 4 TIP operation | Nonacceptable tasks |
| 002F | Control for disabled Mode 4 line | TIP attempting to run on disabled line |
| 0030 | Reserved for Mode 4 TIP | Not a valid halt |
| 0031 | Error in upline block handler (PNHDRBLD) | |
| 0032 | Not used | |
| 0033 | Illegal line status detected by CLA status handler (PTCLAS) | |
| 0034 | Illegal call to put n segments in queue (PBPTNSEG) or get n segments from queue (PTGTNSEG) where queue pointer type from TCB indicates data list queue | |
| 0035 | Attempt to queue output to NPU console in system without console | |
| 0036 | Directory change attempted with DN too large | |

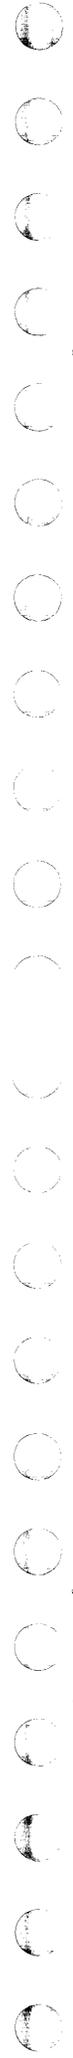

COMMENT SHEET

MANUAL TITLE Communications Control Program Version 1.0
- Software Operator's Guide

PUBLICATION NO. 60470100 REVISION B

FROM: NAME: _____

BUSINESS
ADDRESS: _____

COMMENTS:

CUT ALONG DOTTED LINE

STAPLE

STAPLE


FOLD

FOLD

PLACE
STAMP
HERE

CONTROL DATA CORPORATION


Technical Publications Department
3519 W. Warner Avenue
P. O. Box 5007
Santa Ana, California 92704

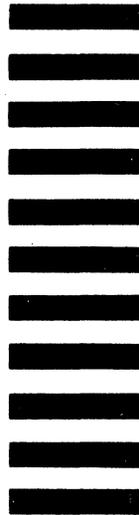

CUT ALONG LINE

FOLD

FOLD



CORPORATE HEADQUARTERS, P.O. BOX 3, MINNEAPOLIS, MINNESOTA 55440
SALES OFFICES AND SERVICE CENTERS IN MAJOR CITIES THROUGHOUT THE WORLD

LITHO IN U.S.A.



CONTROL DATA CORPORATION