



digital

SINPRE

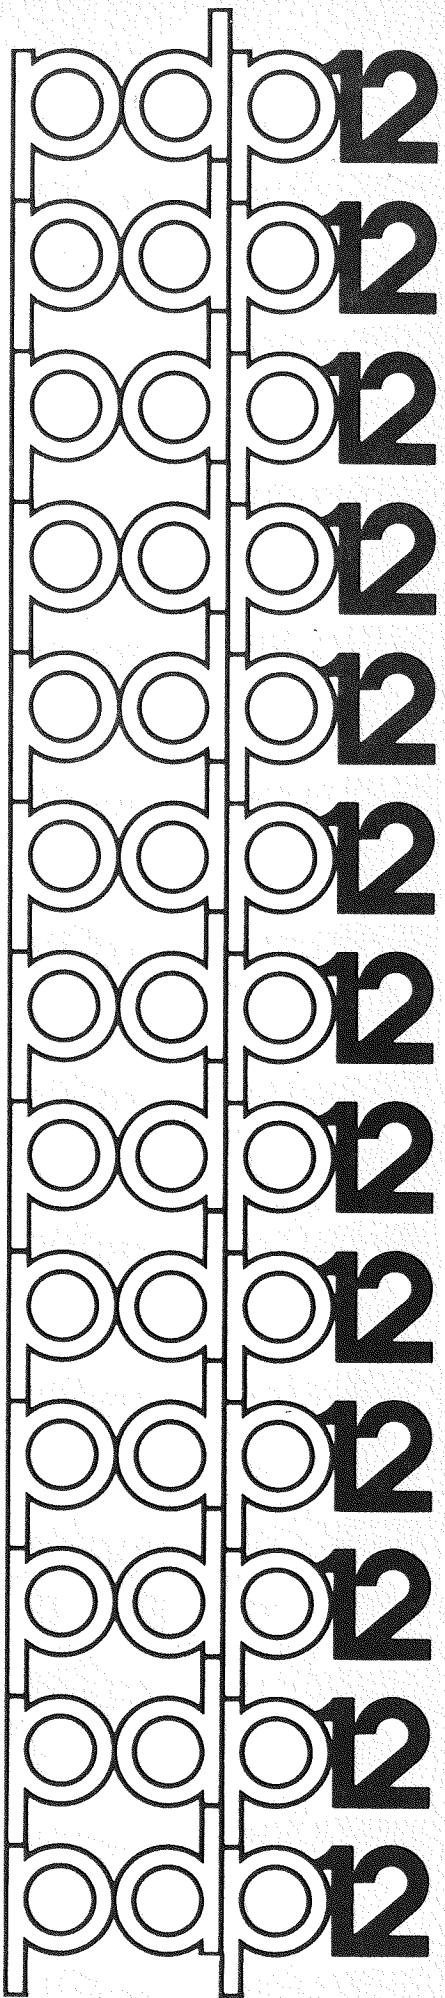

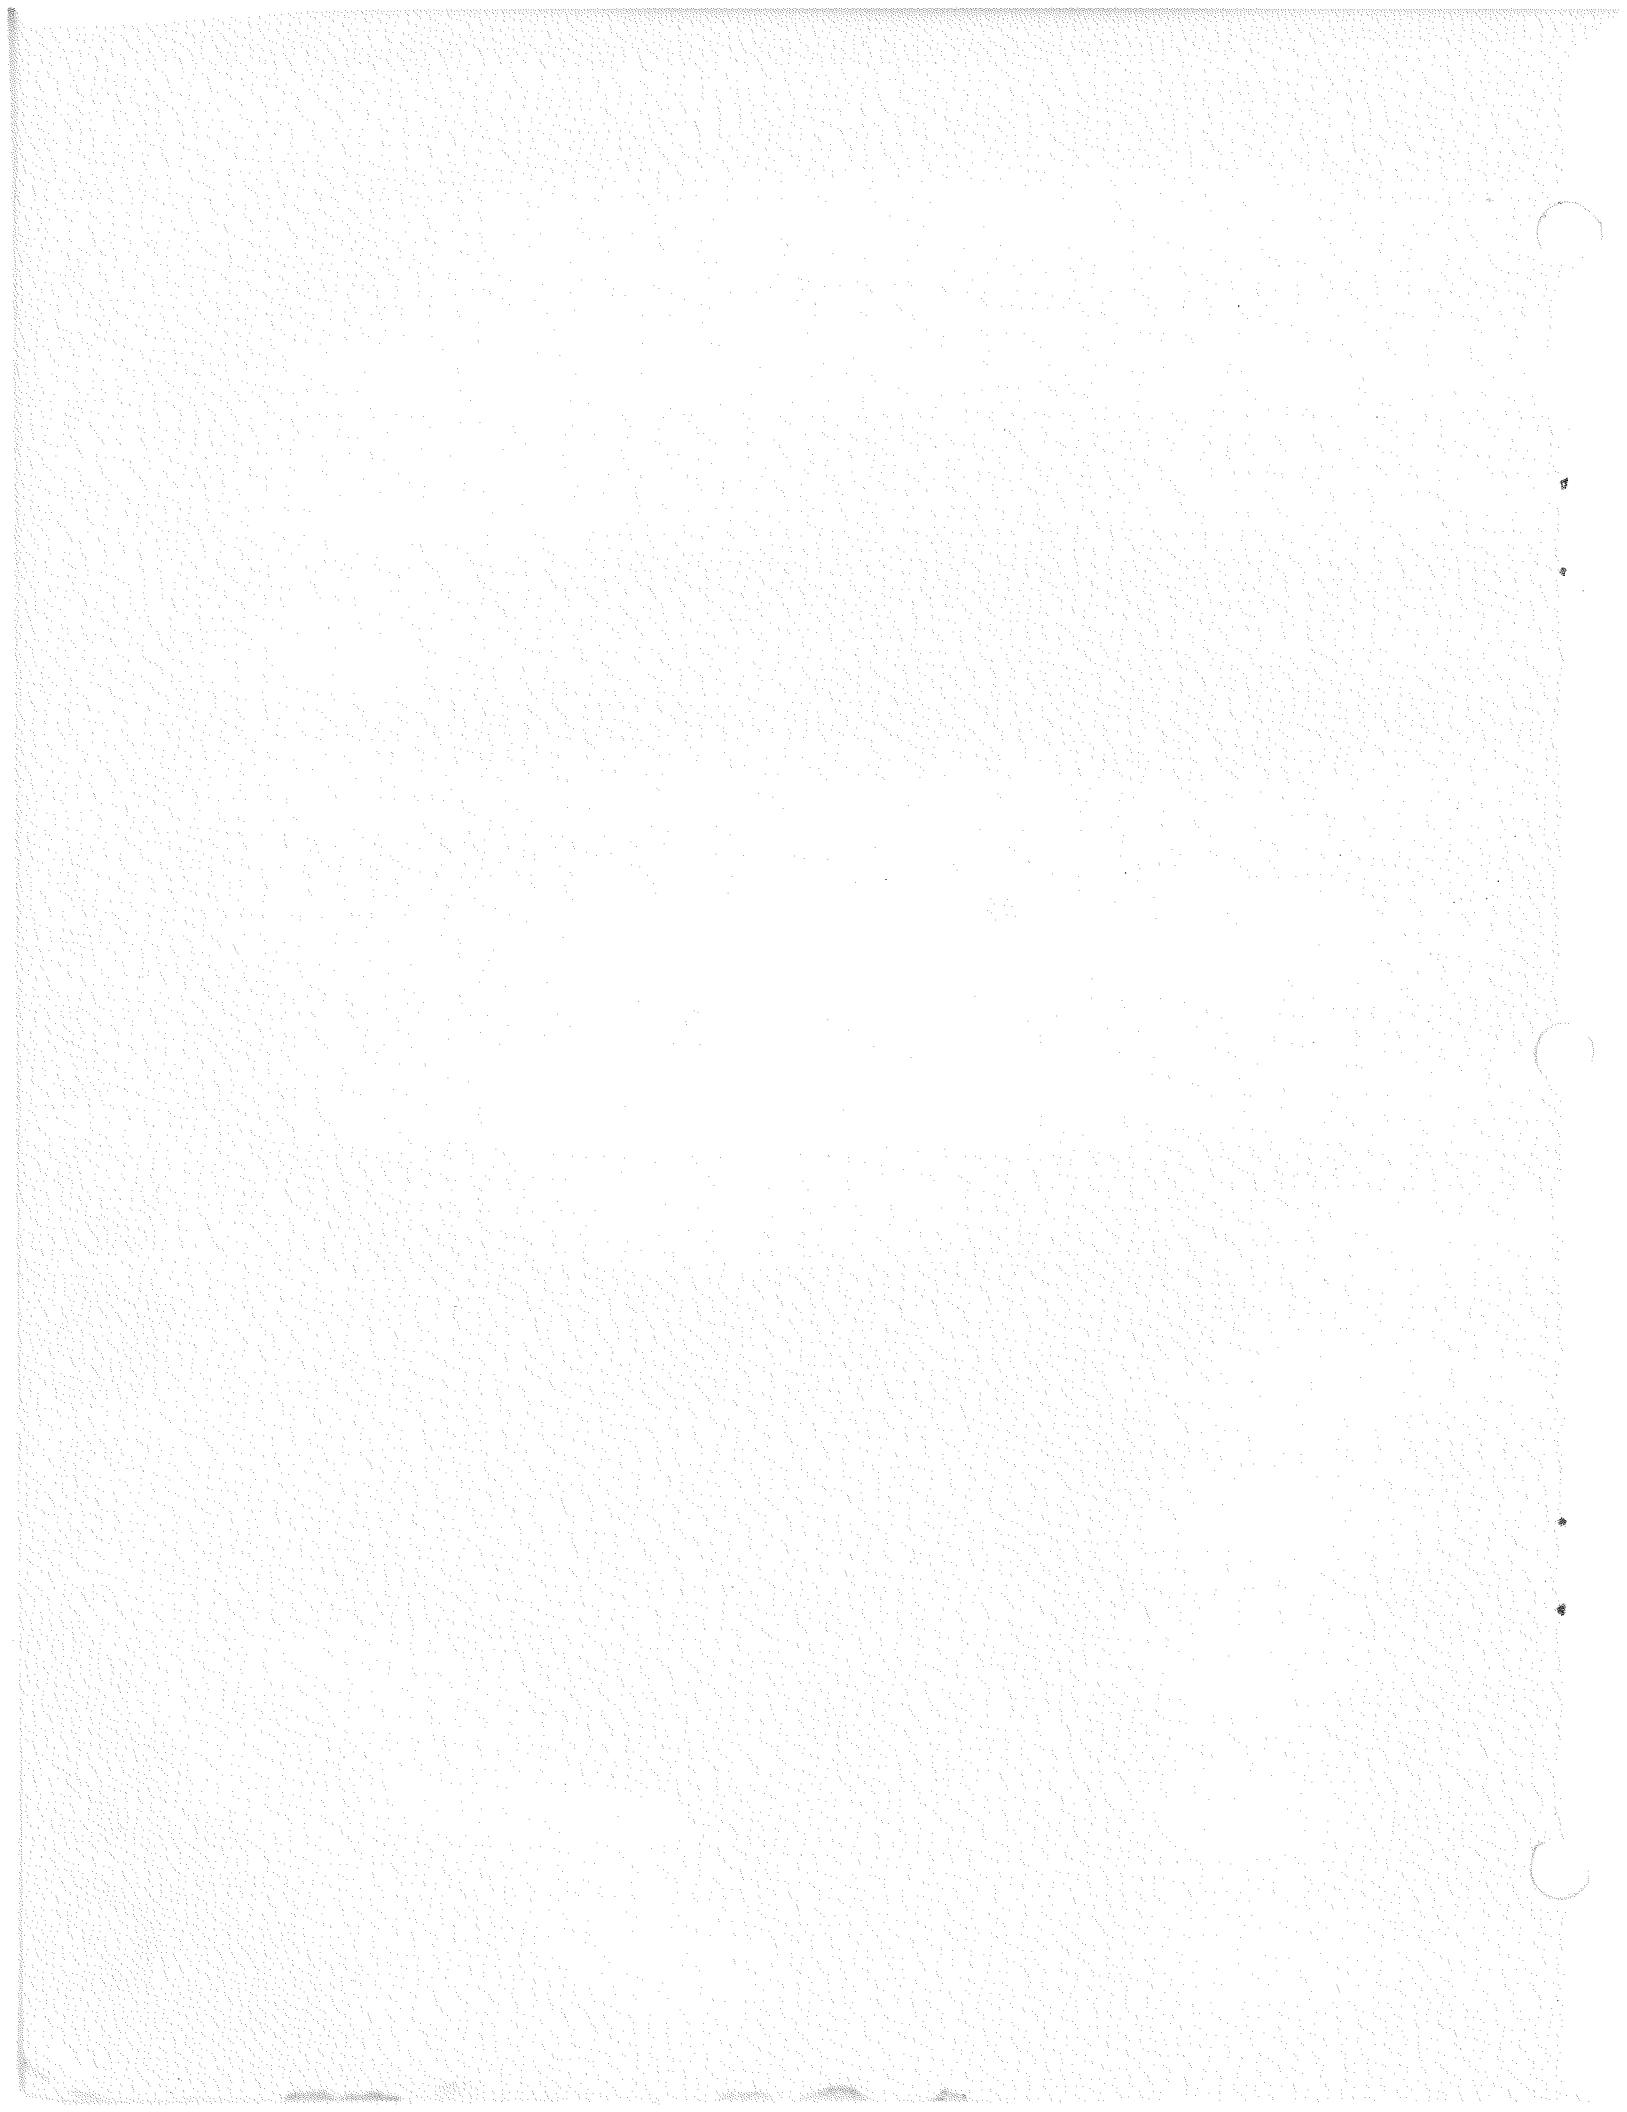

DEC-12-UW4A-D
June, 1970

Copyright (C) 1970 by Digital Equipment Corporation

The material in this handbook, including but not limited to instruction times and operating speeds, is for information purposes and is subject to change without notice.

The following are trademarks of Digital Equipment Corporation, Maynard, Massachusetts:

DEC	PDP
FLIP CHIP	FOCAL
DIGITAL	COMPUTER LAB

The equipment described herein is covered by patents and patents pending.

For additional copies order DEC-12-UW4A-D from Program Library, Digital Equipment Corporation, 146 Main Street, Maynard, Mass. 01754 Price \$5.00

TABLE OF CONTENTS

1.0	GENERAL DESCRIPTION	1
2.0	MINIMUM REQUIREMENTS	1
3.0	STARTING PROCEDURE	2
4.0	SETUP MODE	2
4.1	MESSAGE 1	3
4.2	MESSAGE 2	3
4.3	MESSAGE 3	3
4.4	MESSAGE 4	4
4.5	MESSAGE 5	4
5.0	ERROR CONDITIONS	5
APPENDIX A MODIFYING SINPRE		6

1.0 GENERAL DESCRIPTION

The SINPRE program will convert a LINCtape based double precision file¹, such as that from the Signal Averager program (DEC-12-UZ1A-D), into a LINCtape based single precision file.

The user is asked for the first and last tape block number of the double precision file and the tape unit number. The single precision file is defined by the first tape block number and the tape unit number.

The values of the double precision file are scaled to ± 8 bits (scope limits) by first searching the double precision file for the maximum absolute value. This value is then shifted right until it is within the required limits and the number of shifts is recorded. It should be noted that if the maximum double precision value is initially within the required limits, no shifting is performed. Now each value of the double precision file is shifted the above number of times and written in the output file as single precision numbers.

When the conversion is completed, the unfilled locations of the last single precision data block are filled with zeros and written on tape. The user then has the option to convert another file.

2.0 MINIMUM REQUIREMENTS

- A. PDP-12B with 4K of core.
- B. LAP6-DIAL² tape containing the SINPRE program.

¹The order of the double precision words is low/high.

²LAP6-DIAL is hereafter referred to as DIAL.

3.0 STARTING PROCEDURE

1. Load the DIAL tape with the SINPRE program. (Refer to the LAP6-DIAL Programmer's Reference Manual, DEC-12-SE2B-D.)
2. Load SINPRE by typing

→LO SINPRE, Ø

4.0 SETUP MODE

The SINPRE program displays a series of scope messages which the user answers by typing the appropriate characters on the keyboard. All scope messages are presented using the QANDA subroutine (refer to DEC-12-FISA-D). It is assumed that the user is familiar with the conventions of QANDA.

Any of the following conditions initialize the setup mode:

1. Loading SINPRE from DIAL.
2. Depressing Sense Switch Ø during Setup Mode.
3. Responding with R to message 5 (refer to section 4.5).
4. Pressing STOP, I/O PRESET and then START 2Ø when the program has been loaded from DIAL.

In the following messages, unfilled QANDA blanks are interpreted as zeros. Also, all leading zeros and trailing blanks are ignored.

For example:

1 _ _	=	1
_ _ _	=	ØØØ
ØØ1	=	1

4.1 MESSAGE 1

When the setup mode of SINPRE is initialized, the following message is displayed:

```
SINPRE  
CONVERT A DOUBLE PRECISION FILE  
TO A SINGLE PRECISION FILE  
TYPE C TO CONTINUE _
```

Typing C causes message 2 to be displayed.

4.2 MESSAGE 2

```
DOUBLE PRECISION FILE  
FIRST BLOCK _ _ _  
LAST BLOCK _ _ _  
UNIT _
```

The user is asked to define the double precision file that is to be converted.

FIRST BLOCK is the starting tape block of the double precision file; LAST BLOCK is the last tape block of the double precision file. Both must be octal and in the range 0-777 and the value of LAST BLOCK must be greater than or equal to FIRST BLOCK.

UNIT is a single digit octal number in the range 0-7 describing the tape unit on which the tape containing the double precision file is or will be mounted.

4.3 MESSAGE 3

```
SNGL PRECISION FILE  
FIRST BLOCK _ _ _  
UNIT _
```

Here the user is asked to describe the single precision file that is to be created from the double precision file.

FIRST BLOCK is the starting tape block of the single precision file. It must be octal and in the range 0-777.

UNIT is the single digit octal number in the range of 0-7 which describes the tape unit on which the single precision file is to be created.

The SINPRE program will not allow the single precision file to write over the double precision file. Therefore, if the double precision unit is equal to the single precision unit, the single precision FIRST BLOCK cannot be in the range double precision FIRST BLOCK to double precision LAST BLOCK. Other checks are made while the files are being converted.

4.4 MESSAGE 4

MOUNT TAPES
ON PROPER UNITS
TYPE C TO CONVERT _

At this time the user should check that the data tapes are mounted on the correct units and that the units are set to REMOTE and WRITE ENABLE. The requested conversion is performed after C and a terminator are typed.

CAUTION: DIAL is not protected if data is converted to that tape.

4.5 MESSAGE 5

After the specified double precision file has been converted, the following message is displayed:

REQUESTED DATA
HAS BEEN CONVERTED
TYPE R FOR ANOTHER JOB
REPLY _

Type R if another file is to be converted. Message 1 will be displayed.
Typing any other character will cause the program to halt.

If the program detects an error in the user's response to any of the above messages, the message is re-displayed. It should be noted that the program does not interrogate any of the replies to the displayed message until the message has been terminated according to the QANDA conventions. Also, the user may initialize setup mode at any time (while he is in the setup mode) by depressing Sense Switch Ø.

5.0 ERROR CONDITIONS

There are three error messages that can be printed out on the Teletype while the file is being converted. They are:

a. NO DATA

The SINPRE program assumes that zeros are used to fill the last block of the double precision file once the last data point has been accumulated. A search for the last data point is performed and if no non-zero values are found, the NO DATA diagnostic is printed on the console printer and the setup mode is initialized.

b. OUTPUT OVERFLOW

This diagnostic is printed on the console Teletype if the single precision file has reached block 777 of the tape before all double precision values have been converted. After the message is printed, setup mode is initialized.

c. DATA OVERFLOW

If the single precision and double precision files are defined to be on the same tape unit and if converted data (single pre-

cision) is about to be written over the first block of the double precision file, the DATA OVERFLOW diagnostic is printed and setup mode is initialized.

APPENDIX A. MODIFYING SINPRE

It is possible to revise SINPRE to (1) accept double precision words as high/low rather than the low/high convention for which it is programmed, and,

(2) to scale to ± 11 bits rather than ± 8 bits.


To implement these changes, the binary version of SINPRE must be revised using the PATCH program (DEC-12-YU2A). The revisions are as follows:


A. High/Low format


Change Location 530 to 3101
Change Location 535 to 3100
Change Location 614 to 3100
Change Location 616 to 3101


B. Scaling to ± 11 Bits


Change Location 105 to 4000
Change Location 264 to 0013

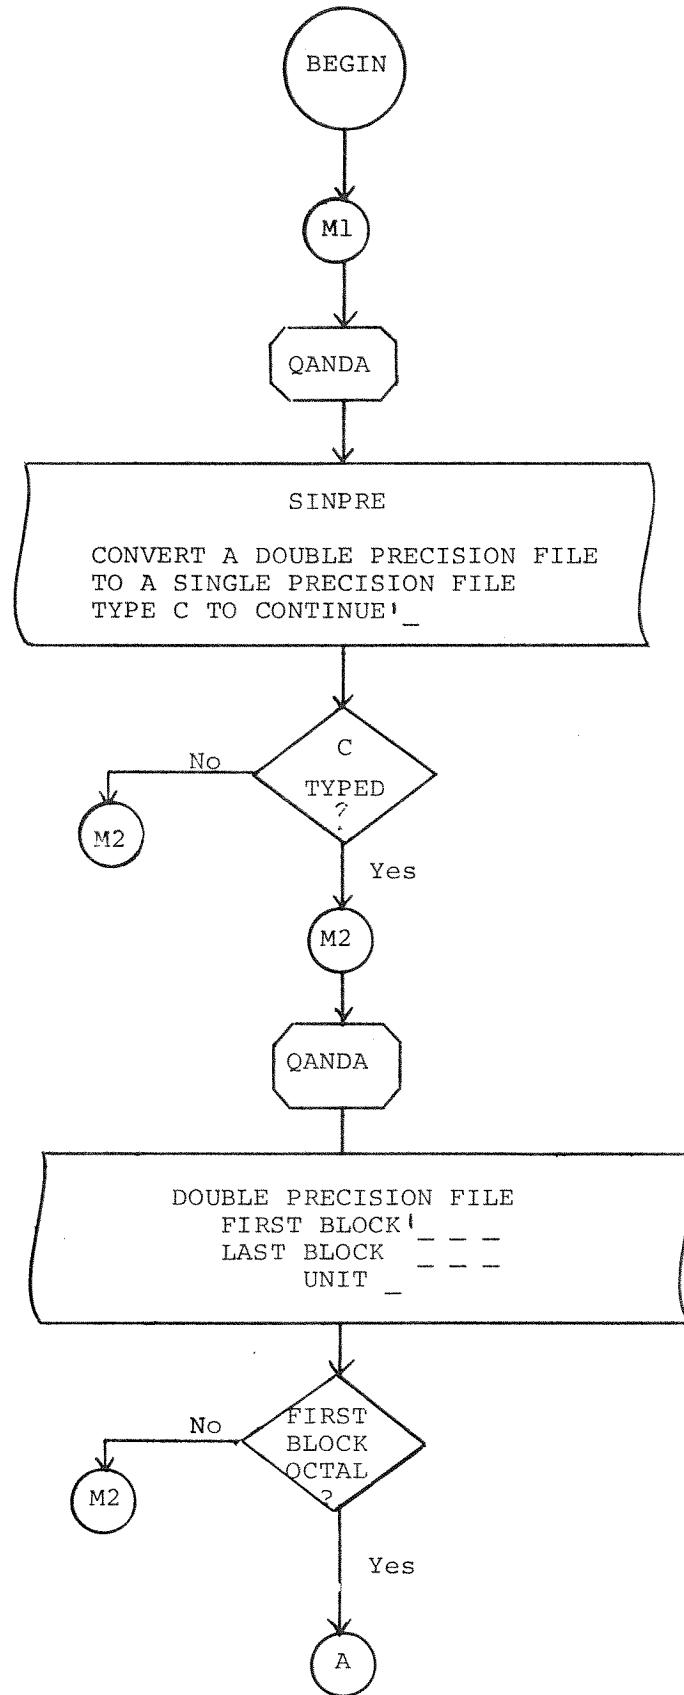


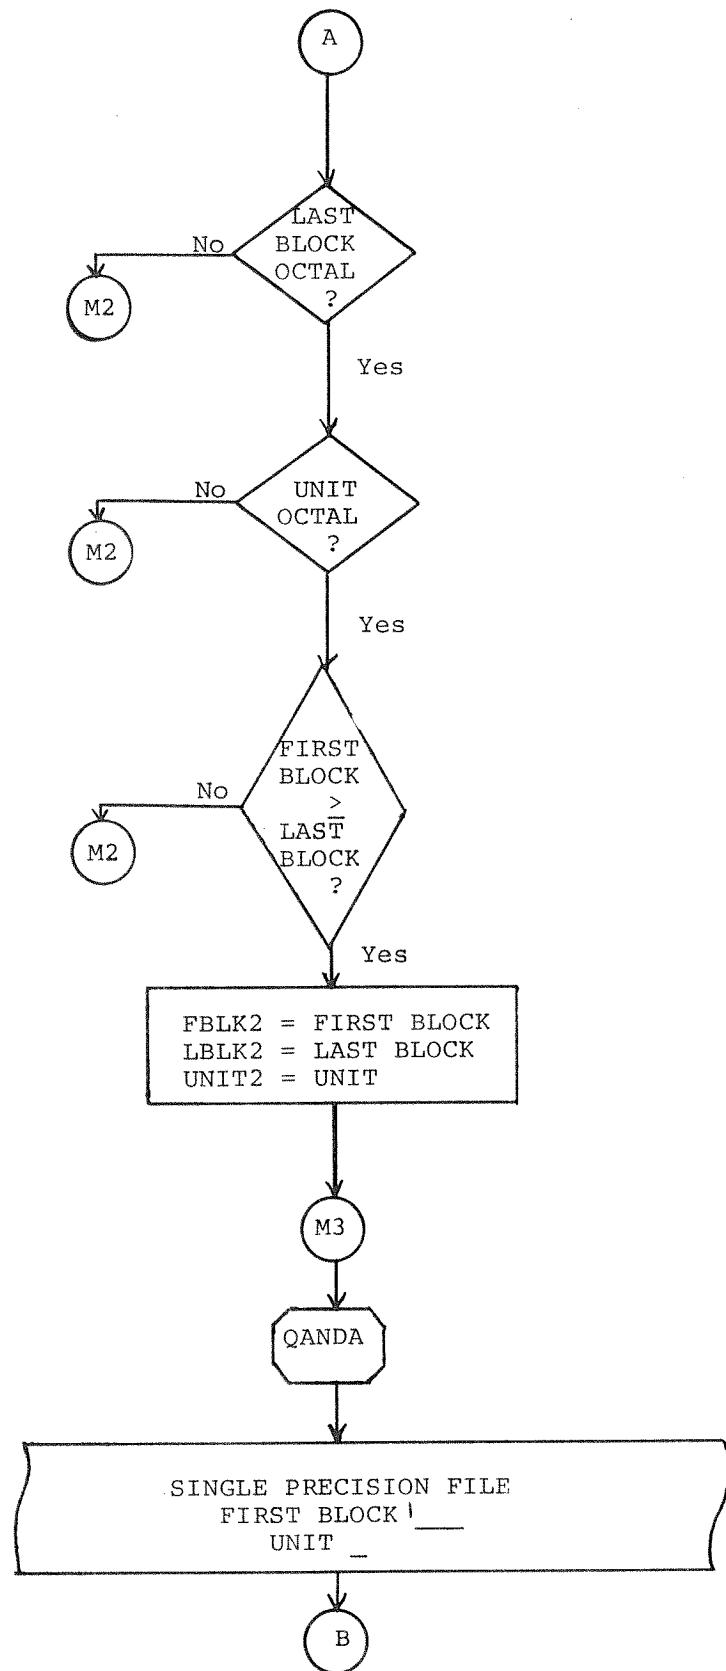


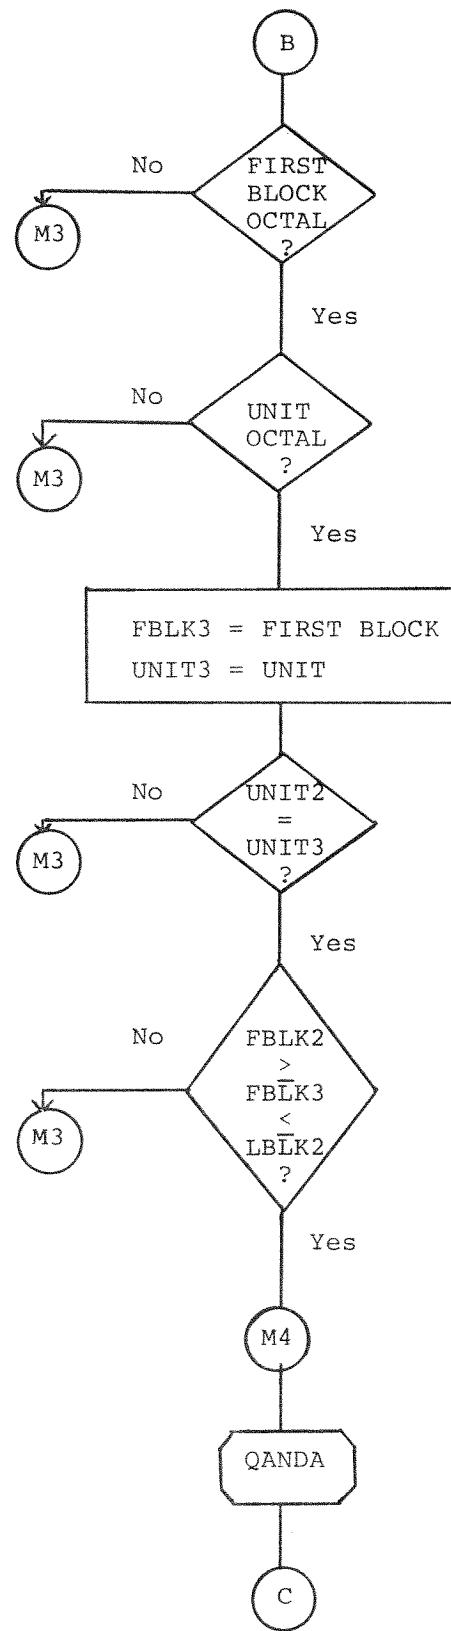

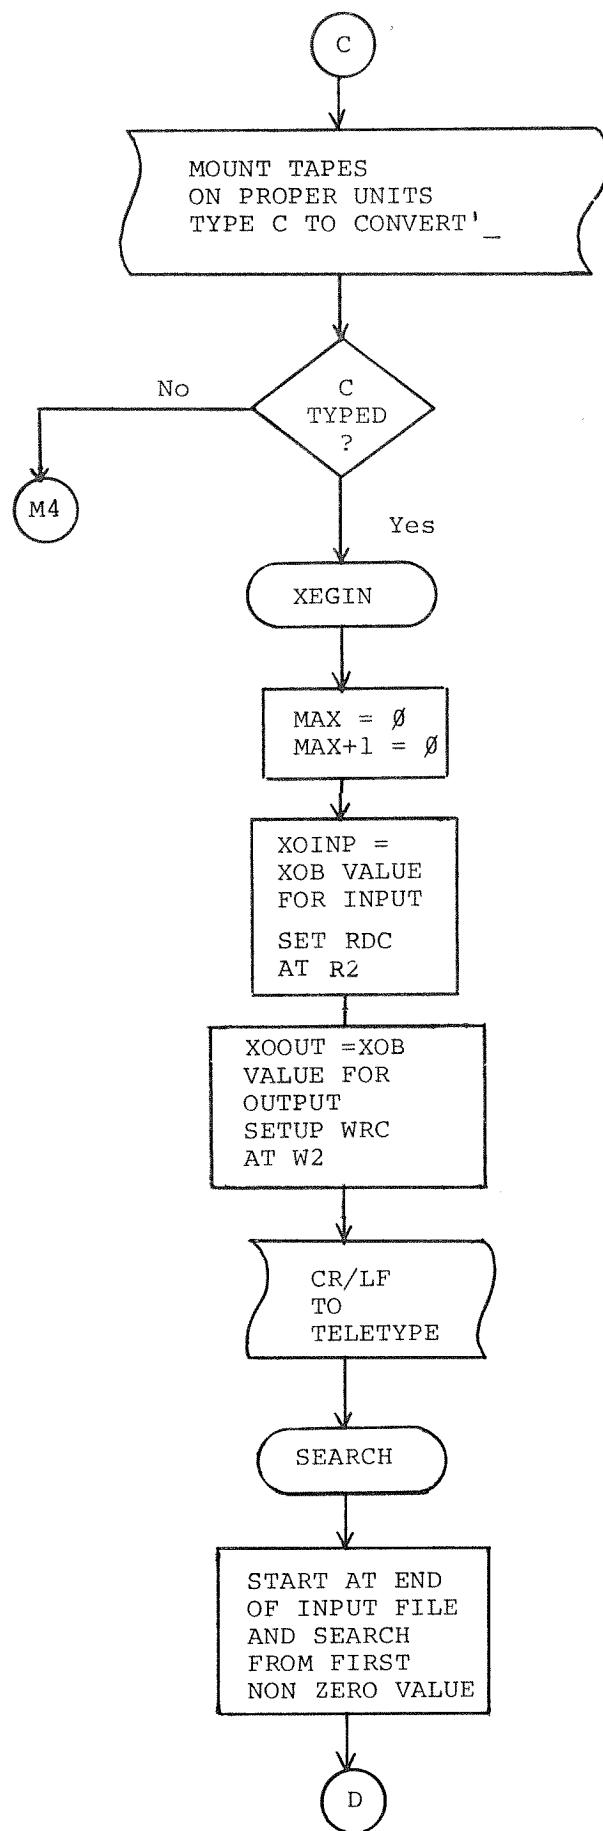

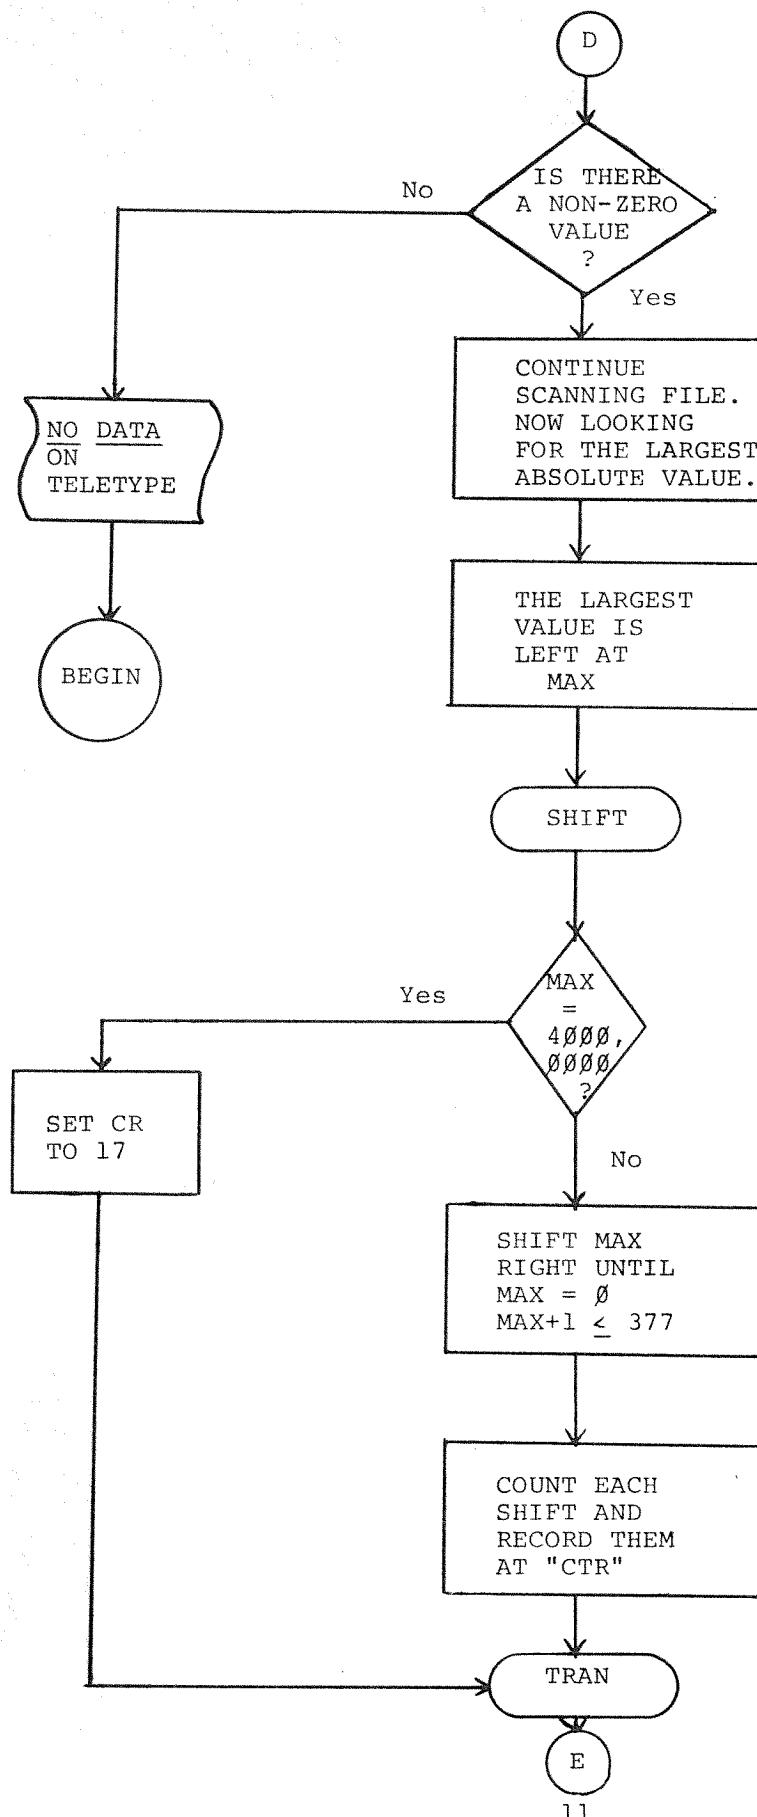

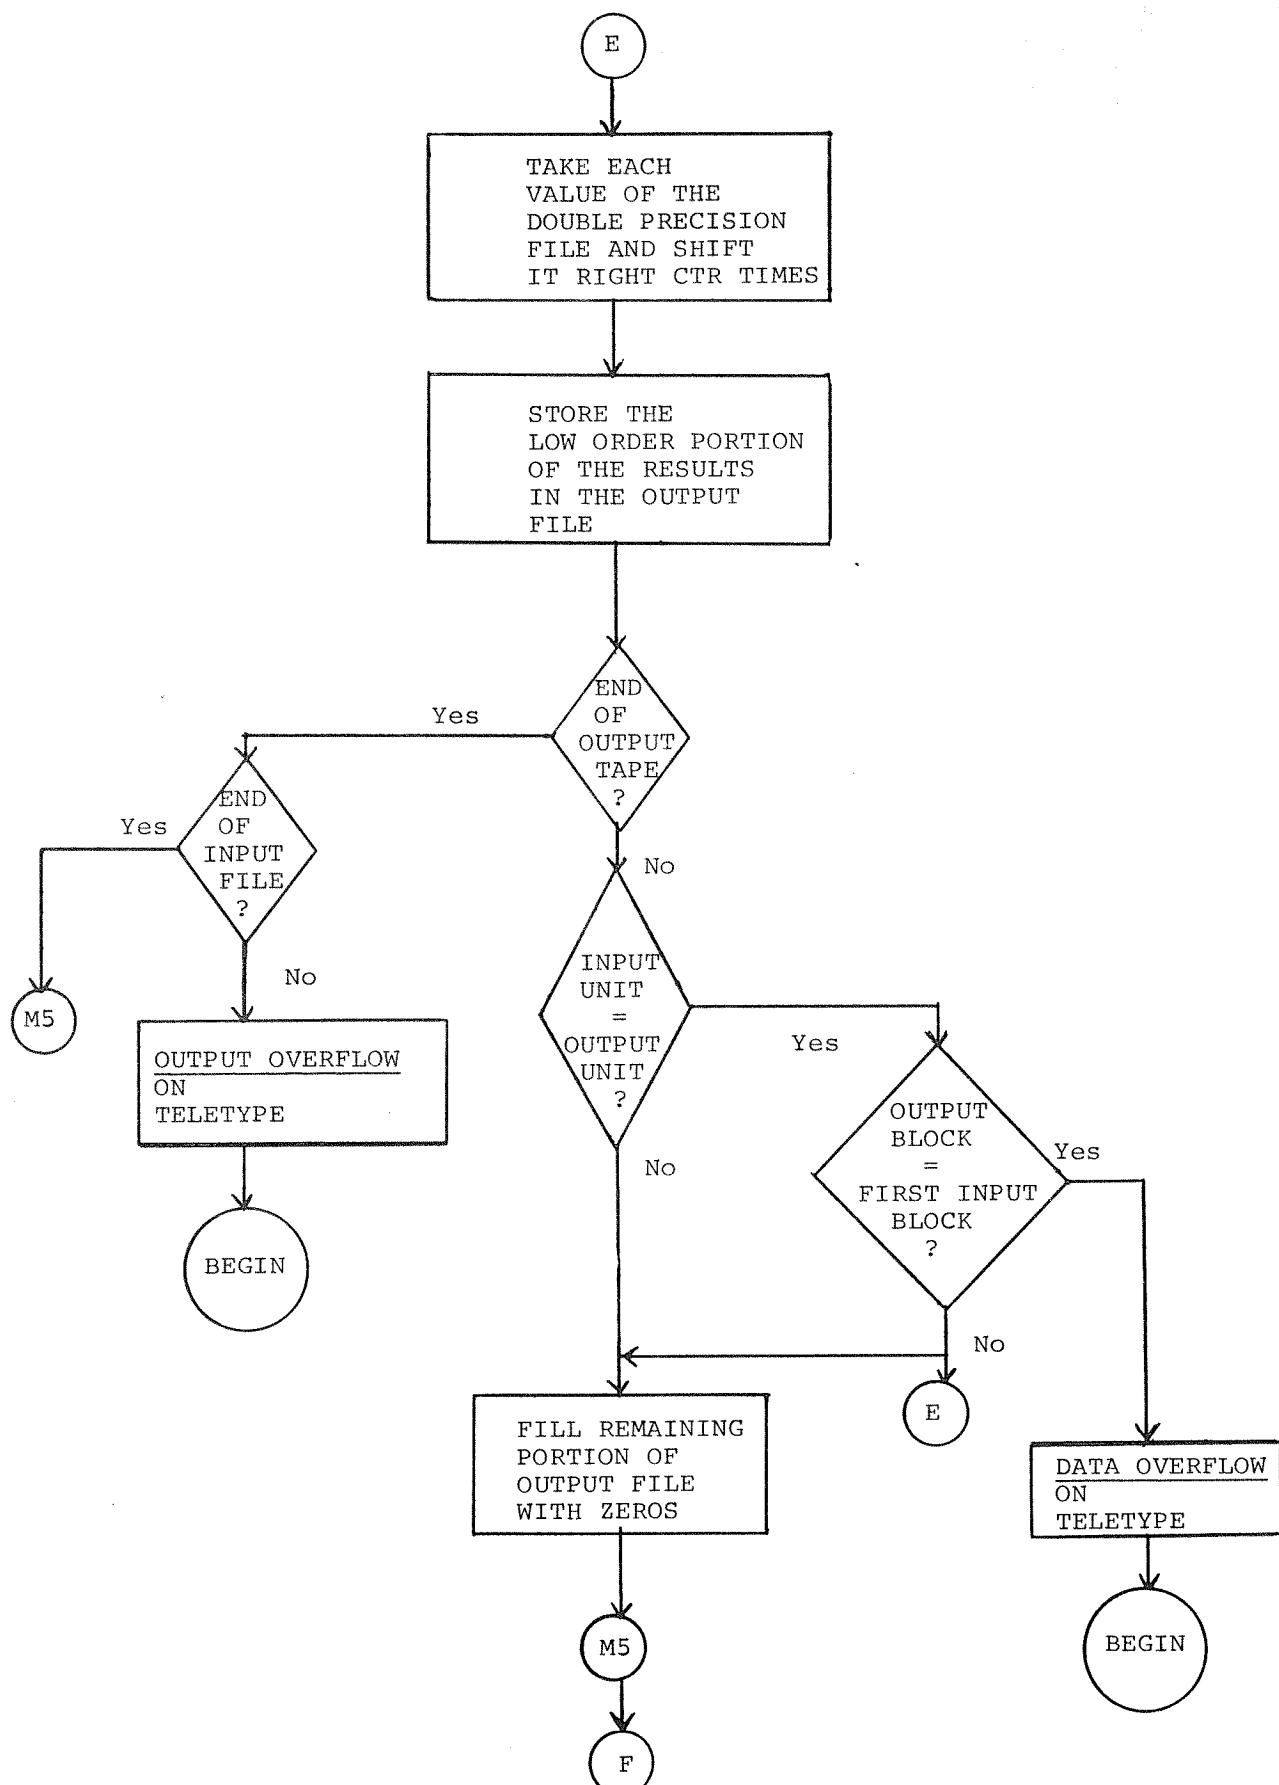

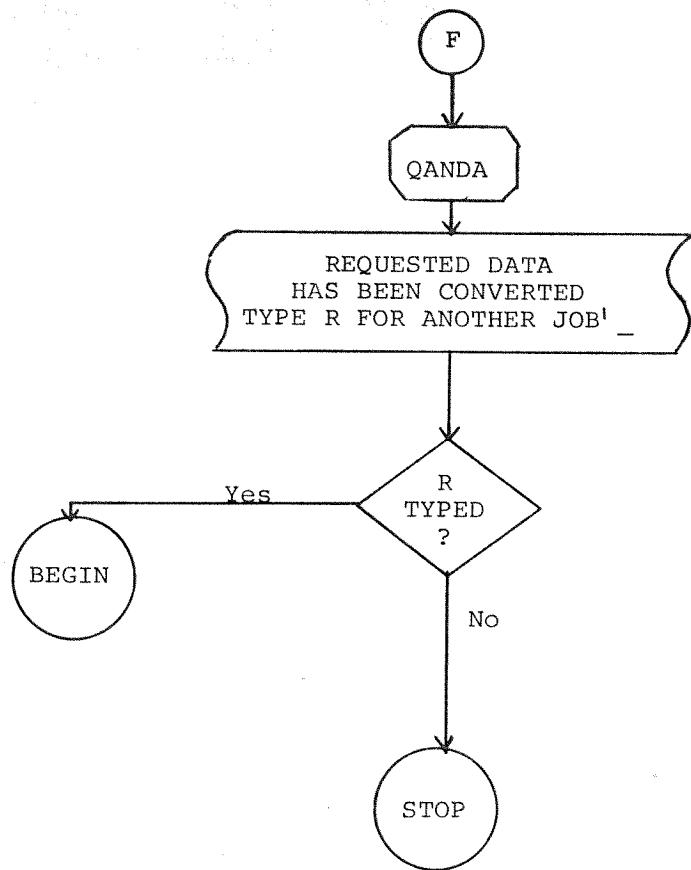

INDEX

Error Conditions, 5

Files, 1

High/Low Format, 6

Messages, 3

Minimum Requirements, 1

Modifying SINPRE, 6

Scaling, 1, 6

Setup Mode, 2

Starting Procedure, 2

0000 *20
0001 /SINPRE
0002 /PAGE 0
0003 PMODE
0004 *10
0005 0010 0000 XR0, 0
0006 0011 0001 XR1, 1
0007 0012 0002 XR2, 2
0010 *20
0011 0020 6141 LINC
0012 LMODE
0013 0021 0602 LIF 2
0014 0022 6020 JMP BEGIN
0015 PMODE
0016 *50
0017 0050 0000 FTB, 0
0020 0051 0000 LTB, 0
0021 0052 0000 ITU, 0
0022 0053 0000 OFTB, 0
0023 0054 0000 OTU, 0
0024 *70
0025 0070 0700 C700, 700
0026 0071 0704 C704, 704
0027 0072 0000 RTBLK, 0
0030 0073 0000 STSW, 0
0031 0074 2377 BBUFA, TBUF+377
0032 0075 2000 TBUFA, TBUF
0033 0076 0265 READA, READ
0034 0077 0304 WRITEA, WRITE
0035 0100 0000 INWORD, 0
0036 0101 0000 0
0037 0102 0000 MAX, 0
0040 0103 0000 0
0041 0104 0000 PTR, 0
0042 0105 7400 C7400, 7400
0043 0106 0000 CTR, 0
0044 0107 0000 OTBLK, 0
0045 0110 2377 OBUFA, OBUF=1
0046 0111 2777 OEND, OBUF+377
0047 0112 0000 TCTR, 0
0050 0113 0777 C777, 777
0051 0114 1000 TTYOA, TTYO
0052 0115 0010 C1X, 10
0053 0116 1015 CRLFA, CRLF
0054 0117 0736 ALDONE, DONEAL
0055 0120 0000 X0INP, 0
0056 0121 0000 X0OUT, 0
0057 0122 4000 C4X, 4000
0060 0123 5000 C5X, 5000
0061 0124 0323 RSTRTA, RSTRT
0062 0125 7400 M4X, =400
0063 *200
0064 0200 7500 XEGIN, CLA CLL
0065 0201 3102 DCA MAX
0066 0202 3103 DCA MAX+1
0067 0203 1052 TAD ITU
0070 0204 7110 CLL RAR
0071 0205 3120 DCA X0INP
0072 0206 1070 TAD C700
0073 0207 7430 SZL
0074 0210 1115 TAD C1X
0075 0211 3277 DCA R2

0076	0212	1054	TAD OTU
0077	0213	7110	CLL RAR
0100	0214	3121	DCA X00UT
0101	0215	1071	TAD C704
0102	0216	7430	SZL
0103	0217	1115	TAD C1X
0104	0220	3316	DCA W2
0105	0221	3106	DCA CTR
0106	0222	6046	TLS
0107	0223	4516	JMS I CRLFA
0110	0224	5625	JMP I .+1
0111	0225	0400	SRCH
0112			/
0113			/
0114			/THIS ROUTINE WILL SHIFT THE
0115			/MAX DP VALUE TO 8 BITS
0116			/THE NUMBER OF SHIFTS IS IN CTR
0117			/
0120			/
0121	0226	7300	SHIFT, CLA CLL
0122	0227	1102	TAD MAX
0123	0230	7004	RAL
0124	0231	7660	SZA SNL CLA
0125	0232	5241	JMP S3
0126	0233	1103	TAD MAX+1
0127	0234	7440	SZA
0130	0235	5241	JMP S3
0131	0236	1264	TAD C17X
0132	0237	3106	DCA CTR
0133	0240	5663	JMP I S4
0134	0241	7200	S3, CLA
0135	0242	1102	TAD MAX
0136	0243	7740	SZA CLA CLL
0137	0244	5253	JMP S1
0140	0245	1103	TAD MAX+1
0141	0246	0105	AND C7400
0142	0247	7650	SNA CLA
0143	0250	5663	JMP I S4
0144	0251	7100	CLL
0145	0252	5256	JMP S2
0146	0253	1102	S1, TAD MAX
0147	0254	7010	RAR
0150	0255	3102	DCA MAX
0151	0256	1103	S2, TAD MAX+1
0152	0257	7010	RAR
0153	0260	3103	DCA MAX+1
0154	0261	2106	ISZ CTR
0155	0262	5226	JMP SHIFT
0156	0263	0600	S4, TRAN
0157	0264	0017	C17X, 17
0160			/
0161			/
0162			/READ OR WRITE 1 BLOCK TO
0163			/THE SPECIFIED UNITS
0164			/
0165			/
0166	0265	0000	READ, Ø
0167	0266	1072	TAD RTBLK
0170	0267	0113	AND C777
0171	0270	1122	TAD C4X
0172	0271	3300	DCA R1
0173	0272	6141	LINC
0174			LMODE

0175	0273	2120	ADD X0INP
0176	0274	0001	AXO
0177	0275	0011	CLR
0200	0276	0641	LDF 1
0201	0277	0000 R2,	0
0202	0300	0000 R1,	0
0203	0301	0011	CLR
0204	0302	0002	PDP
0205			PMODE
0206	0303	5665	JMP I READ
0207	0304	0000 WRITE,	0
0210	0305	1107	TAD OTBLK
0211	0306	0113	AND C777
0212	0307	1123	TAD C5X
0213	0310	3317	DCA W1
0214	0311	6141	LINC
0215			LMODE
0216	0312	2121	ADD X0OUT
0217	0313	0001	AXO
0220	0314	0011	CLR
0221	0315	0641	LDF 1
0222	0316	0000 W2,	0
0223	0317	0000 W1,	0
0224	0320	0011	CLR
0225	0321	0002	PDP
0226			PMODE
0227	0322	5704	JMP I WRITE
0230			/
0231			/ ALL ERROR CONDITIONS END UP HERE
0232			/ RETURN TO MSG 1 OF SET UP
0233			/
0234	0323	6141	RSTRT, LINC
0235			LMODE
0236	0324	0602	LIF 2
0237	0325	6020	JMP BEGIN
0240			PMODE
0241			/
0242			/
0243			/
0244			/ SEARCH THE INPUT FILE FOR THE
0245			/ THE MAX VALUE (ABSOLUTE)
0246			/ IF A VALUE IS NEG. MAKE IT POS
0247			/ SEARCHES FROM THE END OF THE
0250			/ INPUT FILE AND SKIPS THE
0251			/ ENDING ZEROS
0252			/ THE MAX VALUE IS LEFT IN MAX
0253			*400
0254	0400	7200	SRCH, CLA
0255	0401	1051	TAD LTB
0256	0402	3072	DCA RTBLK
0257	0403	7001	IAC
0260	0404	3073	DCA STSW
0261	0405	7001 TAG1,	IAC
0262	0406	1074	TAD BBUFA
0263	0407	3104	DCA PTR
0264	0410	4476	JMS I READA
0265	0411	1073	TAD STSW
0266	0412	7650	SNA CLA
0267	0413	5244	JMP TAG2
0270	0414	4323 TAG4,	JMS GETWRD
0271	0415	1100	TAD INWORD
0272	0416	7640	SZA CLA
0273	0417	5241	JMP TAG3

0274 0420 1101 TAD INWORD+1
0275 0421 7640 SZA CLA
0276 0422 5241 JMP TAG3
0277 /
0300 /CHECK FOR TOP OF BUFFER
0301 /
0302 0423 1104 TAD PTR
0303 0424 7041 CIA
0304 0425 1075 TAD TBUFA
0305 0426 7710 SPA CLA
0306 0427 5214 JMP TAG4
0307 /
0310 /CHECK FOR START OF FILE
0311 /
0312 0430 1072 TAD RTBLK
0313 0431 7041 CIA
0314 0432 1050 TAD FTB
0315 0433 7650 SNA CLA
0316 0434 5317 JMP TAGA
0317 0435 7040 CMA
0320 0436 1072 TAD RTBLK
0321 0437 3072 DCA RTBLK
0322 0440 5205 JMP TAG1
0323 /
0324 /HERE AFTER FIRST NON ZERO VALUE
0325 /
0326 0441 2104 TAG3, ISZ PTR
0327 0442 2104 ISZ PTR
0330 0443 3073 DCA STSW
0331 /
0332 /NON ZERO VALUES
0333 /
0334 0444 4323 TAG2, JMS GETWRD
0335 0445 1100 TAD INWORD
0336 0446 7700 SMA CLA
0337 0447 5260 JMP TAG5
0340 /
0341 /IF NEG MAKE POS
0342 /
0343 0450 1100 TAD INWORD
0344 0451 7040 CMA
0345 0452 3100 DCA INWORD
0346 0453 1101 TAD INWORD+1
0347 0454 7041 CIA
0350 0455 7450 SNA
0351 0456 2100 ISZ INWORD
0352 0457 3101 DCA INWORD+1
0353 /
0354 /COMPARE TO MAX
0355 /
0356 0460 1102 TAG5, TAD MAX
0357 0461 7161 CLL CML CIA
0360 0462 1100 TAD INWORD
0361 0463 7530 SZL SPA
0362 0464 5300 JMP TAG6
0363 0465 7640 SZA CLA
0364 0466 5274 JMP FMAX
0365 0467 1103 TAD MAX+1
0366 0470 7141 CIA CLL
0367 0471 1101 TAD INWORD+1
0370 0472 7620 SNL CLA
0371 0473 5300 JMP TAG6
0372 /

```

0373          /REPLACE MAX IF INWORD
0374          /IS LARGER (OR EQUAL)
0375          /
0376      0474 1100 FMAX,    TAD INWORD
0377      0475 3102 DCA MAX
0400      0476 1101 TAD INWORD+1
0401      0477 3103 DCA MAX+1
0402          /
0403          /TOP OF BUFFER CHECK
0404          /
0405      0500 1104 TAG6,    TAD PTR
0406      0501 7041 CIA
0407      0502 1075 TAD TBUFA
0410      0503 7710 SPA CLA
0411      0504 5244 JMP TAG2
0412          /
0413          /END OF TAPE CHECK
0414          /
0415      0505 1072 TAD RTBLK
0416      0506 7041 CIA
0417      0507 1050 TAD FTB
0420      0510 7650 SNA CLA
0421          /
0422          /DONE IF END OF FILE
0423          /
0424      0511 5716 JMP I TAG7
0425      0512 7040 CMA
0426      0513 1072 TAD RTBLK
0427      0514 3072 DCA RTBLK
0430      0515 5205 JMP TAG1
0431      0516 0226 TAG7,    SHIFT
0432      0517 1322 TAGA,    TAD NDAT
0433      0520 4514 JMS I TTYOA
0434      0521 5524 JMP I RSTRTA
0435      0522 1032 NDAT,    NODAT=1
0436          /
0437          /DECREMENTS PTR AND LEAVES DP WORD
0440          /AT INWORD
0441          /
0442      0523 0000 GETWRD, 0
0443      0524 7040 CMA
0444      0525 1104 TAD PTR
0445      0526 3104 DCA PTR
0446      0527 1504 TAD I PTR
0447      0530 3100 DCA INWORD
0450      0531 7040 CMA
0451      0532 1104 TAD PTR
0452      0533 3104 DCA PTR
0453      0534 1504 TAD I PTR
0454      0535 3101 DCA INWORD+1
0455      0536 5723 JMP I GETWRD
0456          /
0457          /
0460          /TRANSLATES EACH VALUE OF THE
0461          /INPUT FILE TO A SINGLE PRECISION
0462          /NUMBER
0463          /IT CONSTRUCTS THE OUTPUT FILE
0464          /STARTING AT OFTB
0465          /DOES NOT LET THE OUTPUT FILE
0466          /OVERLAP THE INPUT FILE IF THE UNITS
0467          /ARE COMMON
0470          *600
0471      0600 7200 TRAN,    CLA

```

0472	0601	1050	TAD FTB	
0473	0602	3072	DCA RTBLK	
0474	0603	1053	TAD OFTB	
0475	0604	3107	DCA OTBLK	
0476	0605	1110	TAD OBUFA	
0477	0606	3012	DCA XR2	
0500	0607	4476	TR1,	JMS I READA
0501	0610	7040	CMA	
0502	0611	1075	TAD TBUFA	
0503	0612	3011	DCA XR1	
0504	0613	1411	TR2,	TAD I XR1
0505	0614	3101	DCA INWORD*1	
0506	0615	1411	TAD I XR1	
0507	0616	3100	DCA INWORD	
0510			/	
0511			/NO SHIFT IF CTR IS 0	
0512			/	
0513	0617	1106	TAD CTR	
0514	0620	7450	SNA	
0515	0621	5237	JMP TR6	
0516	0622	7041	CIA	
0517	0623	3112	DCA TCTR	
0520			/	
0521			/SHIFT RIGHT TCTR TIMES	
0522			/	
0523	0624	7100	TR3,	CLL
0524	0625	1100	TAD INWORD	
0525	0626	7510	SPA	
0526	0627	7120	STL	
0527	0630	7010	RAR	
0530	0631	3100	DCA INWORD	
0531	0632	1101	TAD INWORD*1	
0532	0633	7010	RAR	
0533	0634	3101	DCA INWORD*1	
0534	0635	2112	ISZ TCTR	
0535	0636	5224	JMP TR3	
0536			/	
0537			/LSB TO OUTPUT BUFFER	
0540			/	
0541	0637	1101	TR6,	TAD INWORD*1
0542	0640	3412	DCA I XR2	
0543			/	
0544			/CHECK OUTPUT BUFFER FULL	
0545			/	
0546	0641	1012	TAD XR2	
0547	0642	7041	CIA	
0550	0643	1111	TAD OEND	
0551	0644	7640	SZA CLA	
0552	0645	5310	JMP TR5	
0553	0646	4477	JMS I WRITEA	
0554	0647	2107	ISZ OTBLK	
0555	0650	1110	TAD OBUFA	
0556	0651	3012	DCA XR2	
0557			/	
0560			/CHECK TAPE LIMIT	
0561			/	
0562	0652	1107	TAD OTBLK	
0563	0653	7041	CIA	
0564	0654	1113	TAD C777	
0565	0655	7700	SMA CLA	
0566	0656	5273	JMP TR4	
0567			/	
0570			/NO MORE INPUT IF AT LIMIT	

0571
0572 0657 4320 JMS CIBF
0573 0660 7650 SNA CLA
0574 0661 5266 JMP ERROR
0575 0662 4327 JMS CIPT
0576 0663 7650 SNA CLA
0577 0664 5266 JMP ERROR
0600 0665 5517 JMP I ALDONE
0601 0666 1271 ERROR, TAD OUTOVA
0602 0667 4514 JMS I TTYOA
0603 0670 5524 JMP I RSTRTA
0604 0671 1043 OUTOVA, OUTOV=1
0605 0672 1064 DATOVA, DATOV=1
0606 /
0607 /CHECK FOR OVERFLOW IF UNITS
0610 /ARE EQUAL
0611 /
0612 0673 1052 TR4, TAD ITU
0613 0674 7041 CIA
0614 0675 1054 TAD OTU
0615 0676 7640 SZA CLA
0616 0677 5310 JMP TR5
0617 0700 1107 TAD OTBLK
0620 0701 7041 CIA
0621 0702 1050 TAD FTB
0622 0703 7640 SZA CLA
0623 0704 5310 JMP TR5
0624 0705 1272 TAD DATOVA
0625 0706 4514 JMS I TTYOA
0626 0707 5524 JMP I RSTRTA
0627 /
0630 /CHECK FOR END OF INPUT
0631 /
0632 0710 4320 TR5, JMS CIBF
0633 0711 7650 SNA CLA
0634 0712 5213 JMP TR2
0635 0713 4327 JMS CIPT
0636 0714 7640 SZA CLA
0637 0715 5517 JMP I ALDONE
0640 0716 2072 ISZ RTBLK
0641 0717 5207 JMP TR1
0642 /
0643 /
0644 /CHECK STATUS OF INPUT BUFFER
0645 /
0646 0720 0000 CIBF, 0
0647 0721 1011 TAD XR1
0650 0722 7041 CIA
0651 0723 1074 TAD BBUFA
0652 0724 7650 SNA CLA
0653 0725 7001 IAC
0654 0726 5720 JMP I CIBF
0655 /
0656 /
0657 /CHECK STATUS OF INPUT FILE
0660 /
0661 0727 0000 CIPT, 0
0662 0730 1072 TAD RTBLK
0663 0731 7041 CIA
0664 0732 1051 TAD LTB
0665 0733 7650 SNA CLA
0666 0734 7001 IAC
0667 0735 5727 JMP I CIPT

0670 /
0671 /
0672 /FILL REMAINING PORTION OF THE
0673 /OUTPUT BUFFER WITH ZEROS
0674 /THEN WRITE IT ON TAPE
0675 0736 1012 DONEAL, TAD XR2
0676 0737 7041 CIA
0677 0740 1111 TAD OEND
0700 0741 1125 TAD M4X
0701 0742 7650 SNA CLA
0702 0743 5353 JMP DONE1
0703 0744 3412 DONE2, DCA I XR2
0704 0745 1012 TAD XR2
0705 0746 7041 CIA
0706 0747 1111 TAD OEND
0707 0750 7640 SZA CLA
0710 0751 5344 JMP DONE2
0711 0752 4477 JMS I WRITEA
0712 0753 6141 DONE1, LINC
0713 /LMODE
0714 0754 0602 LIF 2
0715 0755 6216 JMP M5
0716 /
0717 /
0720 /
0721 PMODE
0722 *1000
0723 1000 0000 TTY0, 0
0724 1001 3010 DCA XR0
0725 1002 4215 JMS CRLF
0726 1003 6041 TT1, TSF
0727 1004 5203 JMP ,=1
0730 1005 1410 TAD I XR0
0731 1006 7450 SNA
0732 1007 5213 JMP TT2
0733 1010 6046 TLS
0734 1011 7200 CLA
0735 1012 5203 JMP TT1
0736 1013 4215 TT2, JMS CRLF
0737 1014 5600 JMP I TTY0
0740 1015 0000 CRLF, 0
0741 1016 1231 TAD CC
0742 1017 6041 TSF
0743 1020 5217 JMP ,=1
0744 1021 6046 TLS
0745 1022 7200 CLA
0746 1023 1232 TAD LF
0747 1024 6041 TSF
0750 1025 5224 JMP ,=1
0751 1026 6046 TLS
0752 1027 7200 CLA
0753 1030 5615 JMP I CRLF
0754 1031 0215 CC, 215
0755 1032 0212 LF, 212
0756 /
0757 /
0760 1033 0316 NODAT, 316
0761 1034 0317 317
0762 1035 0240 240
0763 1036 0304 304
0764 1037 0301 301
0765 1040 0324 324
0766 1041 0301 301

0767	1042	0207	207
0770	1043	0000	0
0771	1044	0317	OUTOV,
0772	1045	0325	317
0773	1046	0324	325
0774	1047	0320	324
0775	1050	0325	324
0776	1051	0324	324
0777	1052	0240	324
1000	1053	0317	317
1001	1054	0326	326
1002	1055	0305	305
1003	1056	0322	322
1004	1057	0306	306
1005	1060	0314	314
1006	1061	0317	317
1007	1062	0327	327
1010	1063	0207	207
1011	1064	0000	0
1012	1065	0304	DATOV,
1013	1066	0301	304
1014	1067	0324	301
1015	1070	0301	324
1016	1071	0240	301
1017	1072	0317	240
1020	1073	0326	317
1021	1074	0305	326
1022	1075	0322	305
1023	1076	0306	322
1024	1077	0314	306
1025	1100	0317	314
1026	1101	0327	317
1027	1102	0207	327
1030	1103	0000	207
1031			0
1032			/
1033			/INPUT FILE BUFFER
1034			*2000
1035	2000	0000	TBUF,
1036			0
1037			/
1040			/OUTPUT FILE BUFFER
1041			*2400
1042	2400	0000	OBUF,
1043			0
1044			LMODE
1045			SEGMENT 2
1046	0020	1020	*20
1047	0021	0020	BEGIN, LDA I
1050	0022	0004	20
1051	0023	0004	ESF
1052	0024	6033	SET IO PRESET
1053	0025	6050	JMP M1
1054	0026	6124	JMP M2
1055	0027	6201	JMP M3
1056			JMP M4
1057	4030	6216	PDP
1060	4031	0200	PMODE
1061			JMP I ,+1
1062	0032	5631	200
1063	0033	0057	LMODE
1064	0034	0000	JMP M5
1065	0035	6666	SET 17
			0
			M1,
			JMP QAINIT

1066	0036	0342	MESS1
1067	0037	0656	ANSWER
1070	0040	6322	JMP CHKSNS
1071	0041	0070	SET I 10
1072	0042	0656	ANSWER
1073	0043	1330	LDH I 10
1074	0044	1420	SHD I
1075	0045	0300	0300
1076	0046	6017	JMP 17
1077	0047	6035	JMP M1A
1100	0050	0057	M2,
1101	0051	0000	SET 17
1102	0052	6666	M2A,
1103	0053	0434	JMP QAINIT
1104	0054	0656	MESS2
1105	0055	6322	ANSWER
1106	0056	0070	JMP CHKSNS
1107	0057	0656	SET I 10
1110	0060	1020	ANSWER
1111	0061	0010	LDA I
1112	0062	1040	10
1113	0063	0266	STA
1114	0064	0017	MULWD
1115	0065	4260	COM
1116	0066	6231	STC UPLIM
1117	0067	0467	JMP CHAR
1120	0070	6052	SKP
1121	0071	1000	JMP M2A
1122	0072	0332	LDA
1123	0073	6325	OCTAC
1124	0074	4334	JMP ZERO
1125	0075	6231	STC FBLK2
1126	0076	0467	JMP CHAR
1127	0077	6052	SKP
1130	0100	1000	JMP M2A
1131	0101	0332	LDA
1132	0102	6325	OCTAC
1133	0103	4335	JMP ZERO
1134	0104	1000	STC LBLK2
1135	0105	0334	LDA
1136	0106	1120	FBLK2
1137	0107	7776	ADA I
1140	0110	0017	-1
1141	0111	2335	COM
1142	0112	0451	ADD LBLK2
1143	0113	6052	APO
1144	0114	6231	JMP M2A
1145	0115	0467	/LSTBLK>FSTBLK?
1146	0116	6052	JMP CHAR
1147	0117	1000	SKP
1150	0120	0332	JMP M2A
1151	0121	6325	/NO
1152	0122	4336	JMP CHAR
1153	0123	6017	/YES
1154	0124	0057	M3,
1155	0125	0000	SET 17
1156	0126	6666	M3A,
1157	0127	0503	JMP QAINIT
1160	0130	0656	MESS3
1161	0131	6322	ANSWER
1162	0132	0070	JMP CHKSNS
1163	0133	0656	SET I 10
1164	0134	6231	ANSWER
			JMP CHAR

1165	0135	0467	SKP	
1166	0136	6126	JMP M3A	
1167	0137	1000	LDA	
1170	0140	0332	OCTAC	
1171	0141	6325	JMP ZERO	
1172	0142	4337	STC FBLK3	/FIRST BLK TEMP
1173	0143	6231	JMP CHAR	
1174	0144	0467	SKP	
1175	0145	6126	JMP M3A	
1176	0146	1000	LDA	
1177	0147	0332	OCTAC	
1200	0150	6325	JMP ZERO	
1201	0151	1040	STA	
1202	0152	0340	UNIT3	/UNIT3 TEMP
1203	0153	1440	SAE	
1204	0154	0336	UNIT2	/UNIT3 = UNIT2?
1205	0155	6177	JMP OK	
1206	0156	1000	LDA	/YES
1207	0157	0334	FBLK2	
1210	0160	0017	COM	
1211	0161	2337	ADD FBLK3	
1212	0162	0470	AZE I	
1213	0163	6126	JMP M3A	
1214	0164	0451	APO	
1215	0165	6177	JMP OK	
1216	0166	1000	LDA	
1217	0167	0337	FBLK3	
1220	0170	0017	COM	
1221	0171	2335	ADD LBLK2	
1222	0172	0470	AZE I	
1223	0173	6126	JMP M3A	
1224	0174	0451	APO	
1225	0175	0467	SKP	/NO
1226	0176	6126	JMP M3A	/YES
1227	0177	6272	OK,	JMP CHARLY
1230	0200	6017		JMP 17
1231	0201	0057	M4,	SET 17
1232	0202	0000		0
1233	0203	6666	M4A,	JMP QAINIT
1234	0204	0541		MESS4
1235	0205	0656		ANSWER
1236	0206	6322		JMP CHKSNS
1237	0207	0070		SET I 10
1240	0210	0656		ANSWER
1241	0211	1330		LDH I 10
1242	0212	1420		SHD I
1243	0213	0300		0300
1244	0214	6017		JMP 17
1245	0215	6203		JMP M4A
1246	0216	6666	M5,	JMP QAINIT
1247	0217	0577		MESS5
1250	0220	0656		ANSWER
1251	0221	6741		JMP QARFSH
1252	0222	0070		SET I 10
1253	0223	0656		ANSWER
1254	0224	1330		LDH I 10
1255	0225	1420		SHD I
1256	0226	2200		2200
1257	0227	6020		JMP BEGIN
1260	0230	0000		HLT
1261	0231	0056	CHAR,	SET 16
1262	0232	0000		0
1263	0233	0011		CLR

1264	0234	4332	STC OCTAC	
1265	0235	1330	LOOP1, LDH I 10	
1266	0236	1420	SHD I	
1267	0237	7400	7400	/E 0 ANS,F,
1270	0240	6016	JMP 16	
1271	0241	1420	SHD I	
1272	0242	3400	3400	/E 0 M?
1273	0243	6016	JMP 16	
1274	0244	1420	SHD I	
1275	0245	0000	0	/A BLANK?
1276	0246	6235	JMP LOOP1	
1277	0247	1120	ADA I	
1300	0250	7717	-60	/A DIGIT?
1301	0251	1040	STA	
1302	0252	0333	NUM	
1303	0253	1120	ADA I	
1304	0254	0001	1	
1305	0255	0451	APO	/NUM IS NONNEG?
1306	0256	6320	JMP XIT	/SHOULD BE
1307	0257	1120	ADA I	
1310	0260	0000	UPLIM, 0	/IS NUM LESS
1311	0261	0471	APO I	/THAN 10?
1312	0262	6320	JMP XIT	/SHOULD BE
1313	0263	1000	LDA	
1314	0264	0332	OCTAC	
1315	0265	1260	MUL I	
1316	0266	0000	MULWD, 0	
1317	0267	2333	ADD NUM	
1320	0270	4332	STC OCTAC	
1321	0271	6235	JMP LOOP1	
1322	0272	1000	CHARLY, LDA	
1323	0273	0000	0	
1324	0274	4317	STC RTN1	
1325	0275	0055	SET 15	
1326	0276	0341	INPTR	
1327	0277	0640	LDF 0	
1330	0300	1000	LDA	
1331	0301	0334	FBLK2	
1332	0302	1075	STA I 15	
1333	0303	1000	LDA	
1334	0304	0335	LBLK2	
1335	0305	1075	STA I 15	
1336	0306	1000	LDA	
1337	0307	0336	UNIT2	
1340	0310	1075	STA I 15	
1341	0311	1000	LDA	
1342	0312	0337	FBLK3	
1343	0313	1075	STA I 15	
1344	0314	1000	LDA	
1345	0315	0340	UNIT3	
1346	0316	1075	STA I 15	
1347	0317	0000	RTN1, 0	
1350	0320	0236	XIT, XSK I 16	
1351	0321	6016	JMP 16	
1352	0322	0440	CHKSNS, SNS 0	
1353	0323	6741	JMP QARFSH	
1354	0324	6023	JMP START	
1355	0325	1460	ZERO, SAE I	
1356	0326	7777	7777	
1357	0327	0467	SKP	
1360	0330	0011	CLR	
1361	0331	6000	JMP 0	
1362	0332	0000	OCTAC, 0	

1363	0333	0000	NUM,	0
1364	0334	0000	FBLK2,	0
1365	0335	0000	LBLK2,	0
1366	0336	0000	UNIT2,	0
1367	0337	0000	FBLK3,	0
1370	0340	0000	UNIT3,	0
1371	0341	2047	INPTR,	2047
1372	0342	0640		
1372	0343	4040		
1372	0344	4040		
1372	0345	4040		
1372	0346	2311		
1372	0347	1620		
1372			MESS1,	TEXT ZF
1373	0350	2205		SINPRE
1373				
1374	0351	4347		
1374				
1375	0352	4347		
1375	0353	4310		
1375	0354	4040		
1375	0355	4040		
1375	0356	0317		
1375	0357	1626		
1375	0360	0522		
1375	0361	2440		
1375	0362	0140		
1375	0363	0417		
1375	0364	2502		
1375	0365	1405		
1375	0366	4020		
1375	0367	2205		
1375	0370	0311		
1375	0371	2311		
1375	0372	1716		
1375	0373	4006		
1375	0374	1114		
1375			H	CONVERT A DOUBLE PRECISION FILE
1376	0375	0543		
1376	0376	1040		
1376	0377	4040		
1376	0400	4040		
1376	0401	4040		
1376	0402	2417		
1376	0403	4001		
1376	0404	4023		
1376	0405	1116		
1376	0406	0714		
1376	0407	0540		
1376	0410	2022		
1376	0411	0503		
1376	0412	1123		
1376	0413	1117		
1376	0414	1640		
1376	0415	0611		
1376			H	TO A SINGLE PRECISION FILE
1377	0416	1405		
1377				
1400	0417	4347		
1400	0420	4306		
1400	0421	2431		
1400	0422	2005		
1400	0423	4003		

1400 0424 4024
1400 0425 1740
1400 0426 0317
1400 0427 1624
1400 0430 1116
1400 0431 2505
1400 0432 4074
1400 0433 6134

F TYPE C TO CONTINUE <1\z

1401 0434 0604
1401 0435 0214
1401 0436 0540
1401 0437 2022
1401 0440 0503
1401 0441 1123
1401 0442 1117
1401 0443 1640
1401 0444 0611

MESS2, TEXT ZFDBLE PRECISION FILE

1402 0445 1405
1402
1403 0446 4347
1403 0447 4306
1403 0450 4040
1403 0451 0611
1403 0452 2223
1403 0453 2440
1403 0454 0214
1403 0455 1703
1403 0456 1340

F FIRST BLOCK <3

1404 0457 7463
1404 0460 4306
1404 0461 4040
1404 0462 4014
1404 0463 0123
1404 0464 2440
1404 0465 0214
1404 0466 1703
1404 0467 1340

F LAST BLOCK <3

1405 0470 7463
1405 0471 4306
1405 0472 4040
1405 0473 4040
1405 0474 4040
1405 0475 4040
1405 0476 4025
1405 0477 1611
1405 0500 2440
1405 0501 7461
1405 0502 3400

F UNIT <1\z

1406 0503 0623
1406 0504 1607
1406 0505 1440
1406 0506 2022
1406 0507 0503
1406 0510 1123
1406 0511 1117
1406 0512 1640
1406 0513 0611

MESS3, TEXT ZFSNGL PRECISION FILE

1407 0514 1405
1407
1410 0515 4347
1410 0516 4306
1410 0517 4040
1410 0520 0611
1410 0521 2223
1410 0522 2440
1410 0523 0214
1410 0524 1703
1410 0525 1340

F FIRST BLOCK <3

1411 0526 7463
1411 0527 4306
1411 0530 4040
1411 0531 4040
1411 0532 4040
1411 0533 4040
1411 0534 4025
1411 0535 1611
1411 0536 2440
1411 0537 7461
1411 0540 3400
1411
1412 0541 0640
1412 0542 4040
1412 0543 4015
1412 0544 1725
1412 0545 1624
1412 0546 4024
1412 0547 0120

F UNIT <1\z MESS4, TEXT ZF MOUNT TAPES

1413 0550 0523
1413 0551 4306
1413 0552 4040
1413 0553 1716
1413 0554 4020
1413 0555 2217
1413 0556 2005
1413 0557 2240
1413 0560 2516
1413 0561 1124
1413
1414 0562 2343

F ON PROPER UNITS

1415 0563 4743
1415 0564 0624
1415 0565 3120
1415 0566 0540
1415 0567 0340
1415 0570 2417
1415 0571 4003
1415 0572 1716
1415 0573 2605
1415 0574 2224
1415 0575 4074
1415 0576 6134
1415

FTYPE C TO CONVERT <1\z

1416 0577 0640
1416 0600 4040
1416 0601 2205
1416 0602 2125
1416 0603 0523

1416	0604	2405	
1416	0605	0440	
1416	0606	0401	
1416			MESS5, TEXT ZF REQUESTED DATA
1417	0607	2401	
1417	0610	4306	
1417	0611	4010	
1417	0612	0123	
1417	0613	4002	
1417	0614	0505	
1417	0615	1640	
1417	0616	0317	
1417	0617	1626	
1417	0620	0522	
1417	0621	2405	
1417			F HAS BEEN CONVERTED
1420	0622	0443	
1420			
1421	0623	4743	
1421	0624	1040	
1421	0625	4040	
1421	0626	4040	
1421	0627	4040	
1421	0630	4040	
1421	0631	2431	
1421	0632	2005	
1421	0633	4022	
1421	0634	4006	
1421	0635	1722	
1421	0636	4001	
1421	0637	1617	
1421	0640	2410	
1421	0641	0522	
1421	0642	4012	
1421			H TYPE R FOR ANOTHER JOB
1422	0643	1702	
1422			
1423	0644	4347	
1423	0645	4306	
1423	0646	4040	
1423	0647	4040	
1423	0650	4040	
1423	0651	2205	
1423	0652	2014	
1423	0653	3140	
1423	0654	7461	
1423	0655	3400	
1423			F REPLY <1\Z
1424	0656	0000	ANSWER, 0
1425			*.+7
1426			NOLIST
2402	1554	0000	AAAEND, 0

0000 ERRORS

AAAEND 5554
ALDONE 0117
ANSWER 4656
BBUFA 0074
BEGIN 4020
CC 1031
CHAR 4231
CHARLY 4272

=

CHKSNS 4322
CIBF 0720
CIPT 0727
CRLF 1015
CRLFA 0116
CTR 0106
C1X 0115
C17X 0264
C4X 0122
C5X 0123
C700 0070
C704 0071
C7400 0105
C777 0113
DATOV 1065
DATOVA 0672
DONEAL 0736
DONE1 0753
DONE2 0744
ERROR 0666
FBLK2 4334
FBLK3 4337
FMAX 0474
FTB 0050
GETKBD 5407
GETWRD 0523
INPTR 4341
INWORD 0100
ITU 0052
LBLK2 4335
LF 1032
LOOP1 4235
LTB 0051
MAX 0102
MESS1 4342
MESS2 4434
MESS3 4503
MESS4 4541
MESS5 4577
MULWD 4266
M1 4033
M1A 4035
M2 4050
M2A 4052
M3 4124
M3A 4126
M4 4201
M4A 4203
M4X 0125
M5 4216
NDAT 0522
NODAT 1033
NUM 4333
OBUF 2400
OBUFA 0110
OCTAC 4332
OEND 0111
OFTB 0053
OK 4177
OTBLK 0107
OTU 0054
OUTOV 1044
OUTOVA 0671

PTR 0104
QAB 4672
QACA 4703
QACHAR 5543
QACKLF 5507
QACNTR 5472
QAD 4714
QAE 4736
QAEXIT 5523
QAF 5404
QAG 4750
QAH 5002
QAI 5017
QAINIT 4666
QAJ 5024
QAK 5173
QAKRB 6036
QAL 5063
QALEGL 5463
QAM 4767
QAN 5111
QAO 5117
QAP 5130
QAQ 5151
QARFSH 4741
QAT 5156
QATLS 6046
QATPE 5532
QATSF 6041
QATY 5424
QAU 5374
QAV 5204
QAW 5400
QAX 5312
QAY 5300
QAZ 5167
READ 0265
READA 0076
RSTRT 0323
RSTRTA 0124
RTBLK 0072
RTN1 4317
R1 0300
R2 0277
SHIFT 0226
SRCH 0400
START 4023
STSW 0073
S1 0253
S2 0256
S3 0241
S4 0263
TAGA 0517
TAG1 0405
TAG2 0444
TAG3 0441
TAG4 0414
TAG5 0460
TAG6 0500
TAG7 0516
TBUF 2000
TBUFA 0075
TCTR 0112

TRAN	0600
TR1	0607
TR2	0613
TR3	0624
TR4	0673
TR5	0710
TR6	0637
TTY0	1000
TTY0A	0114
TT1	1003
TT2	1013
UNIT2	4336
UNIT3	4340
UPLIM	4260
WRITE	0304
WRITEA	0077
W1	0317
W2	0316
XEGIN	0200
XIT	4320
XOINP	0120
XOOUT	0121
XR0	0010
XR1	0011
XR2	0012
ZERO	4325

READER'S COMMENTS

SINPRE
DEC-12-UW4A-D

Digital Equipment Corporation maintains a continuous effort to improve the quality and usefulness of its publications. To do this effectively we need user feedback – your critical evaluation of this manual.

Please comment on this manual's completeness, accuracy, organization, usability, and readability.

Did you find errors in this manual? _____

How can this manual be improved? _____

DEC also strives to keep its customers informed of current DEC software and publications. Thus, the following periodically distributed publications are available upon request. Please check the appropriate boxes for a current issue of the publication(s) desired.

- Software Manual Update, a quarterly collection of revisions to current software manuals.
- User's Bookshelf, a bibliography of current software manuals.
- Program Library Price List, a list of currently available software programs and manuals.

Please describe your position. _____

Name _____ Organization _____

Street _____ Department _____

City _____ State _____ Zip or Country _____

----- Fold Here -----

----- Do Not Tear - Fold Here and Staple -----

FIRST CLASS
PERMIT NO. 33
MAYNARD, MASS.

BUSINESS REPLY MAIL
NO POSTAGE STAMP NECESSARY IF MAILED IN THE UNITED STATES

Postage will be paid by:



Digital Equipment Corporation
Software Information Services
146 Main Street, Bldg. 3-5
Maynard, Massachusetts 01754

HOW TO OBTAIN SOFTWARE INFORMATION

Announcements for new and revised software, as well as programming notes, software problems, and documentation corrections are published by Software Information Service in the following newsletters.

Digital Software News for the PDP-8 Family
Digital Software News for the PDP-9/15 Family
PDP-6/PDP-10 Software Bulletin

These newsletters contain information applicable to software available from Digital's Program Library.

Please complete the card below to place your name on the newsletter mailing list.

Questions or problems concerning DEC Software should be reported to the Software Specialist at your nearest DEC regional or district sales office. In cases where no Software Specialist is available, please send a Software Trouble Report form with details of the problem to:

Software Information Service
Digital Equipment Corporation
146 Main Street, Bldg. 3-5
Maynard, Massachusetts 01754

These forms, which are available without charge from the Program Library, should be fully filled out and accompanied by teletype output as well as listings or tapes of the user program to facilitate a complete investigation. An answer will be sent to the individual and appropriate topics of general interest will be printed in the newsletter.

New and revised software and manuals, Software Trouble Report forms, and cumulative Software Manual Updates are available from the Program Library. When ordering, include the document number and a brief description of the program or manual requested. Revisions of programs and documents will be announced in the newsletters and a price list will be included twice yearly. Direct all inquiries and requests to:

Program Library
Digital Equipment Corporation
146 Main Street, Bldg. 3-5
Maynard, Massachusetts 01754

Digital Equipment Computer Users Society (DECUS) maintains a user Library and publishes a catalog of programs as well as the DECUSCOPE magazine for its members and non-members who request it. For further information please write to:

DECUS
Digital Equipment Corporation
146 Main Street
Maynard, Massachusetts 01754

Send Digital's software newsletters to:

Name _____

Company Name _____

Address _____

My computer is a

PDP-8/I

PDP-8/L

(zip code) _____

LINC-8

PDP-12

PDP-9

PDP-15

PDP-10

OTHER

Please specify _____

My system serial number is _____ (if known)

Fold Here

Do Not Tear - Fold Here and Staple


**FIRST CLASS
PERMIT NO. 33
MAYNARD, MASS.**

**BUSINESS REPLY MAIL
NO POSTAGE STAMP NECESSARY IF MAILED IN THE UNITED STATES**

Postage will be paid by:

digital

**Digital Equipment Corporation
Software Information Services
146 Main Street, Bldg. 3-5
Maynard, Massachusetts 01754**

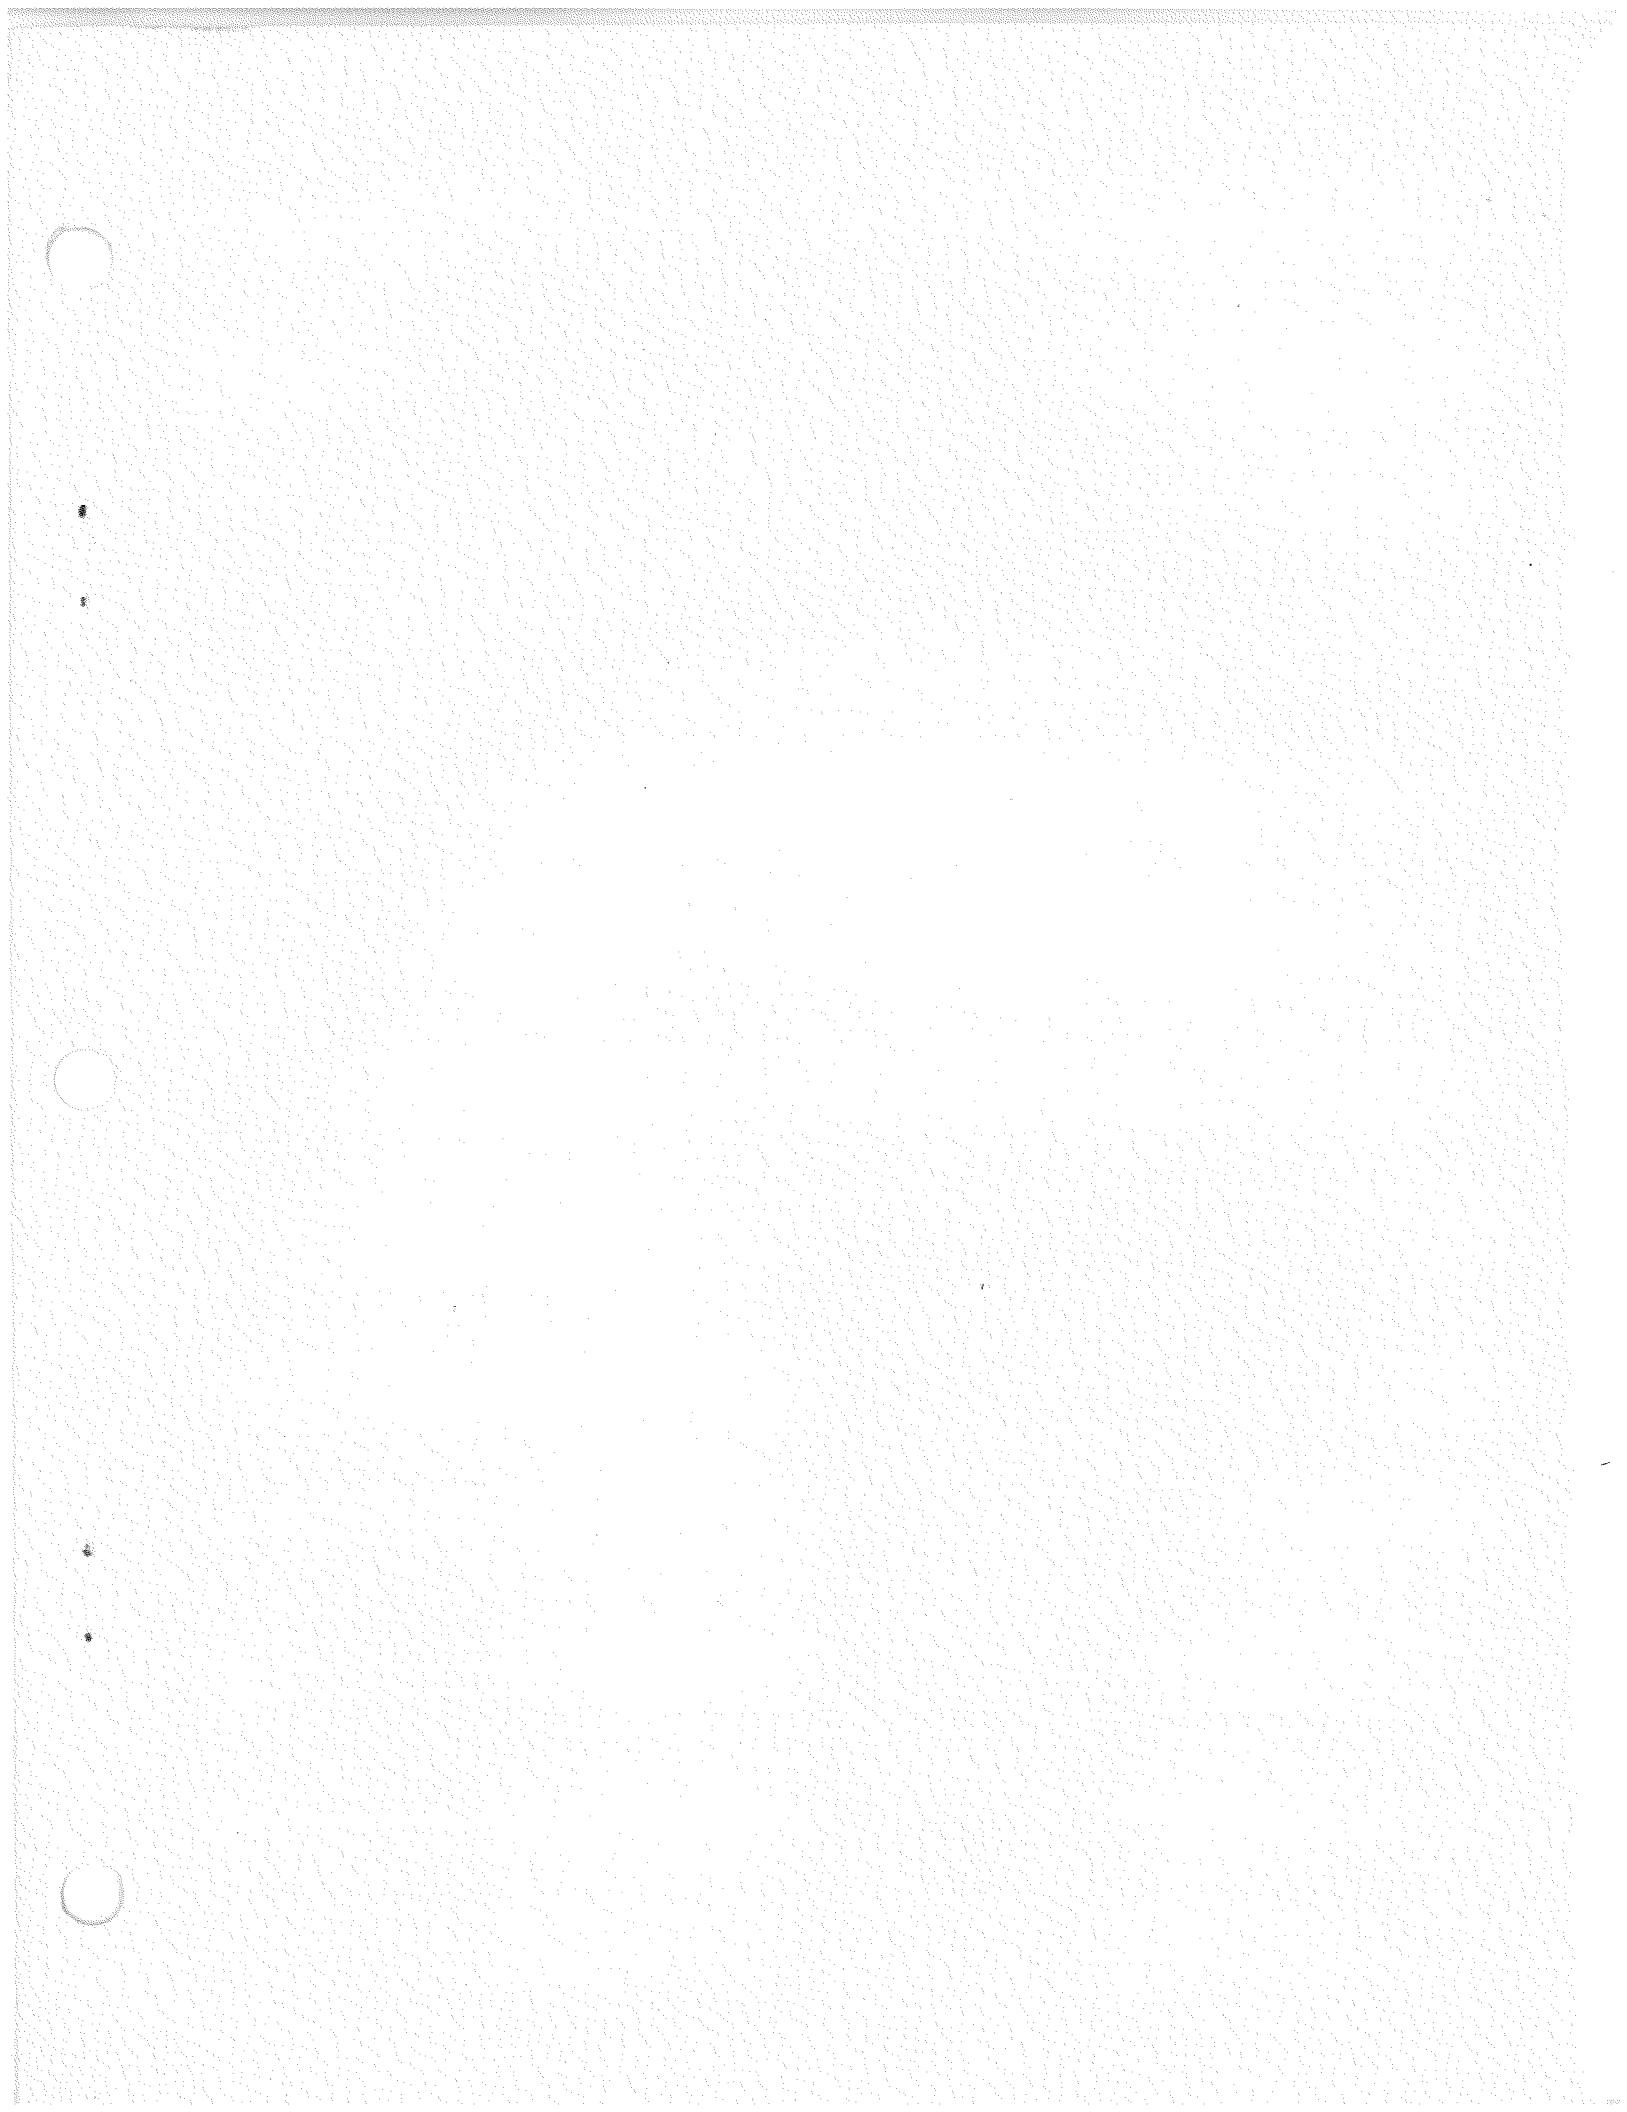

**Digital Equipment Corporation
Maynard, Massachusetts**

digital