

IDENTIFICATION

Product Code: DEC-12-ZR6A-D
Product Name: DIAL-MS Loader Program
Description:
Date Created: July 1, 1970
Maintainer: Software Services



LAP6-DIAL is an editor, filing system and assembler for use with the PDP-12 computer. The editor and filing portions are derived from the basic LINC program LAP6¹ by Mary Allen Wilkes of Washington University. The assembly portion is derived from several programs used for the PDP-8 computer including PAL-D².

The Digital Equipment Corporation wishes to express to the author, Mary Allen Wilkes (Clark), and the Computer Research Laboratory of Washington University, St. Louis, Missouri, its appreciation for the development set forth in LAP6 as well as its thanks for permission to use parts of the LAP6 program.

¹M. A. Wilkes, LAP6 Handbook, Computer Research Laboratory Tech. Rep. No. 2, Washington University, St. Louis, May 1, 1967.

²PAL-D Assembler Programmer's Reference Manual DEC-D8-ASAA-D.

1.0 OVERVIEW

The LAP6-DIAL-MS (hereafter referred to as DIAL-MS) Loader is the routine which transfers the user's binary program from tape or disk into the appropriate core locations. The loader has two sections: the first is the routine which ascertains whether the load is by name or from the Binary Working Area; the second part is a subroutine which looks up the name in the index and does the actual loading. If the file is not present, the Loader returns to the caller.

2.0 ENVIRONMENT

The DIAL-MS loader occupies blocks 54 and 55 of the DIAL systems unit (354-355 of tape unit \emptyset , if using a tape system). Upon giving a load command, the Editor reads these blocks into locations 4000-4777 of field l. An extension of the loader exists in locations 7600-7627 of field l and is referred to as the mini-loader; it is assembled as part of the DIAL-MS I/O routines. Its function will be described later in this manual.

3.0 OPERATION


The Loader starts at location 4020 of field l in LINCmode. It first checks to see if the Editor put a name of the program to be loaded in E6. If there is one present, it calls the load subroutine (LOAD) with a pointer to the name in the AC. If there is not a name present, the Loader loads into core the second block before the Binary Working Area. This is necessary because the routine will JMP into the load subroutine, which requires that a block has been read from the desired unit. Next, a header block is created in core consisting of all l's which will cause all 8K of the binary area to be loaded. The Loader then JMP's to location LOADC, which is in the middle of the LOAD subroutine, to load in the data pointed to by the bit map in core. The LOAD subroutine can be called from any field. The AC contains a pointer to a block of field \emptyset core locations. The first four words are the name of a program in DIAL format. The fifth is a unit number. The Loader reads in the index and searches for the desired name. If not present, it returns to the caller. If present, it reads in up to 17_8 blocks into


lower core (depending of course on the bit map for the program). Locations 7400-7777 of field 0, if they are to be read in, are read into 0-377 of field 1, then moved to 7400-7777 of field 0. (This avoids problems with the data break locations). Locations 10000-13777 are then read in, if the bit map indicates they are to be loaded. Now the Loader moves the starting information up from the header block to 7774 of field 1. (The I/O controller is now useless as far as the loader is concerned.) A mini-bit map is set up in location 7627 of field 1 which contains the information for loading into locations 14000-17377. It then moves the I/O handler (address contained in 7770) to 7630 of field 1. The next absolute block to be loaded is determined and added into the block correction factor (left in 7771 by the last call to the I/O handler¹). This information is left in 7610 (unit) and 7612 (next block). It then checks to see if locations 17400-17777 are to be loaded. If they are, it reads this information into 6400 of field 1, then moves the first 200 words to 7400-7577 followed by a JMP to 7600 of field 1. The mini-loader shifts bits out of the minimap to determine which blocks are to be loaded, then JMP's to 7774 of field 1 in LINC-mode.


4.0 FLOW DIAGRAM (Attached)


5.0 PROGRAM LISTING (Attached)

¹Refer to the BUILD Internal Description, DEC-12-ZR5A-D.


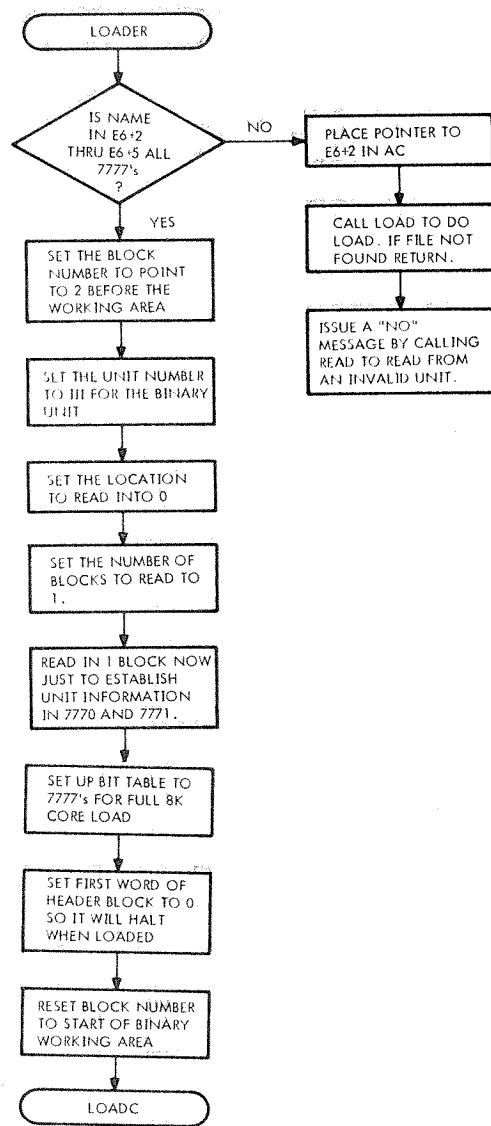


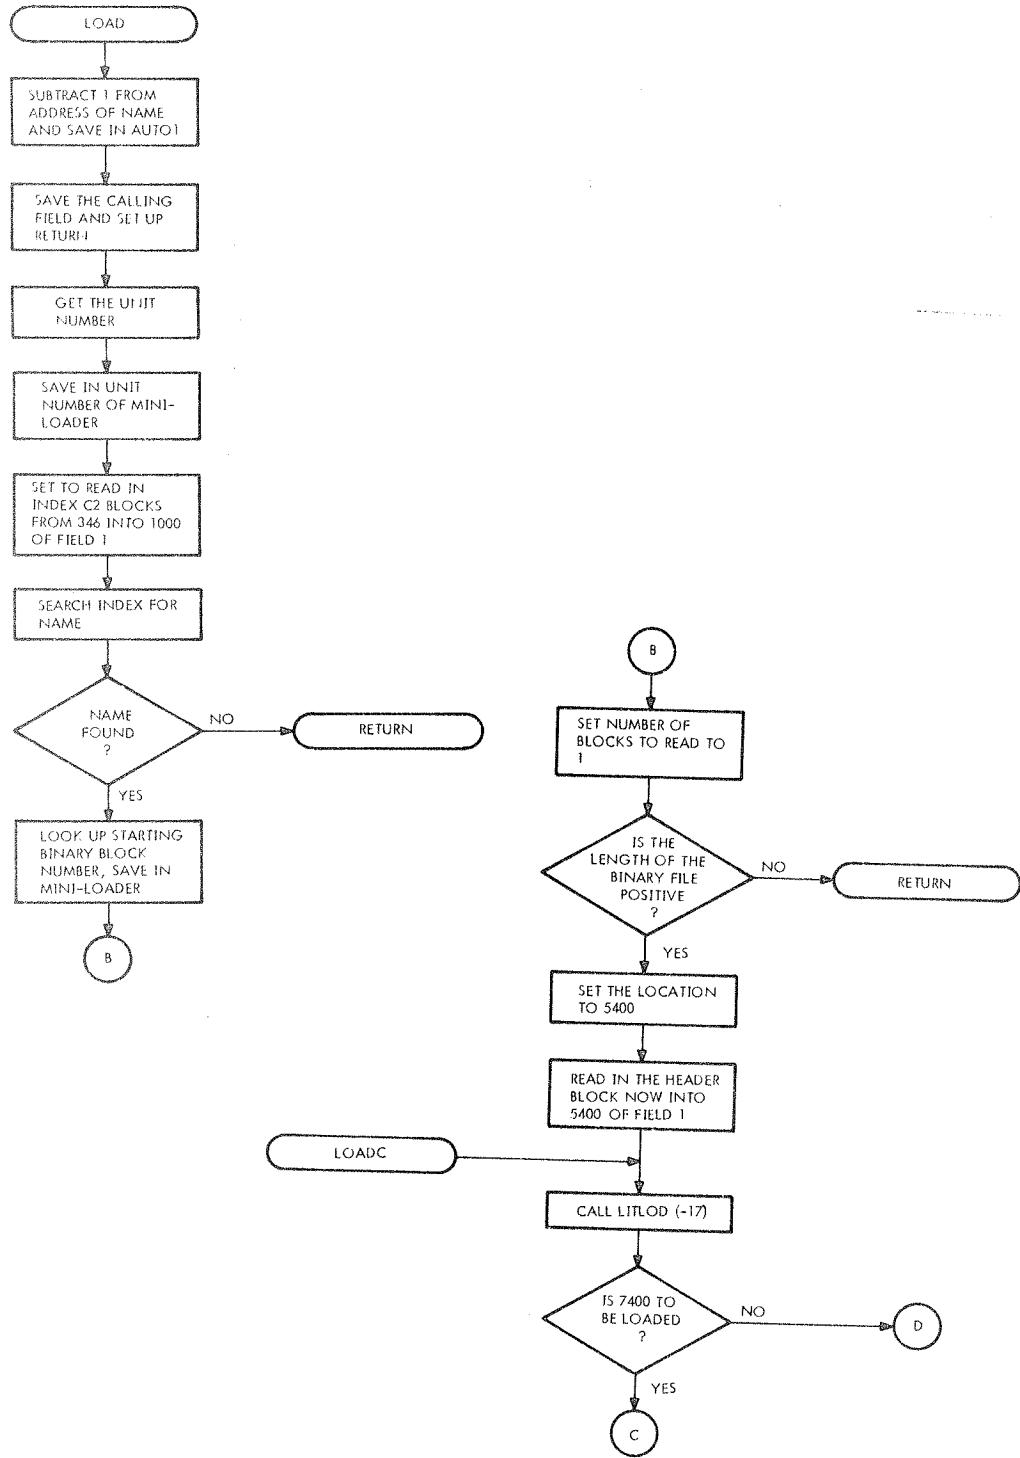

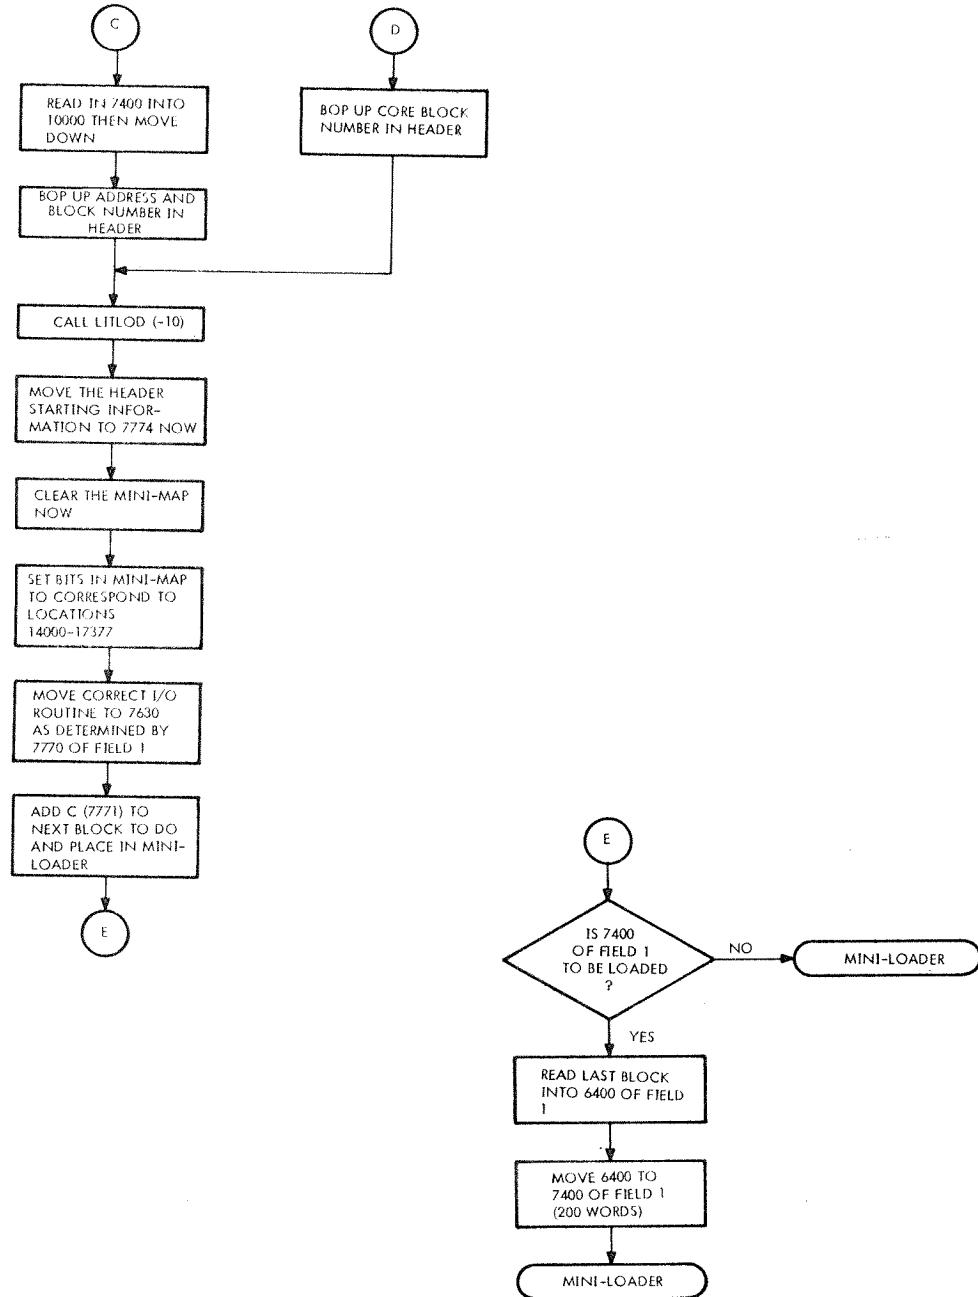

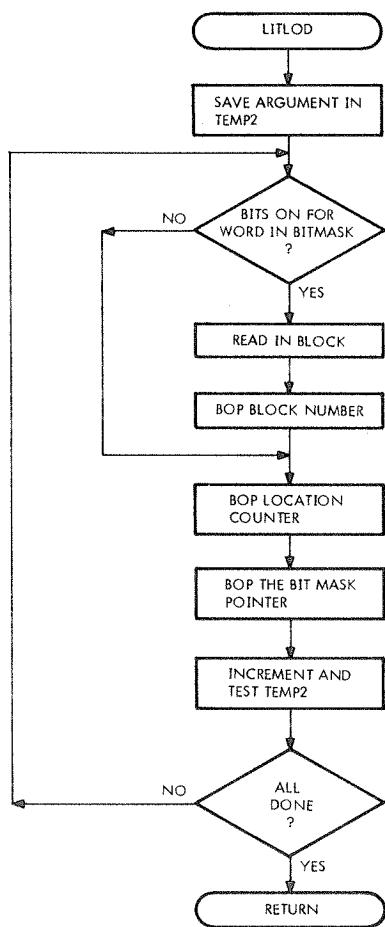

MINI-LOADER

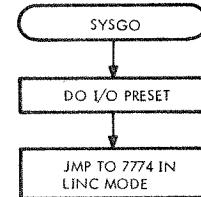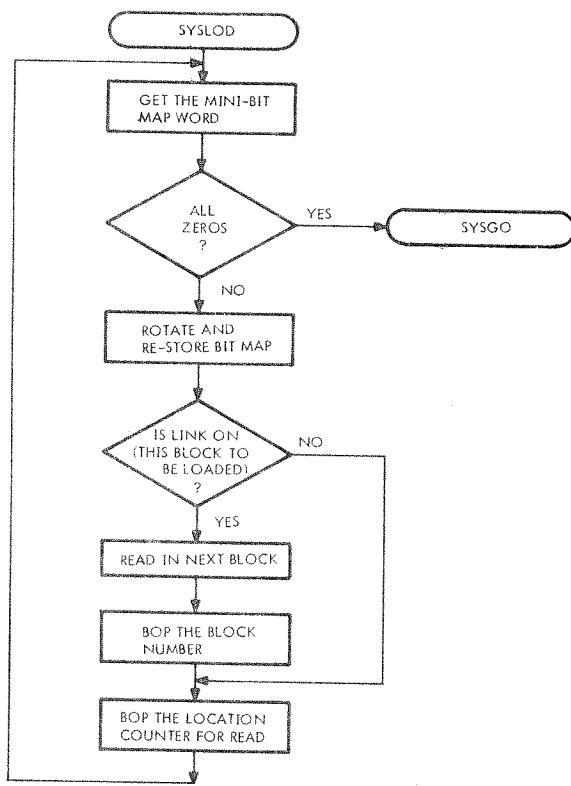

DISK-DIAL LOADER
/DISK-DIAL LOADER
0001 /COPYRIGHT 1970,
0002 //
0003 //
0004 //
0005 //
0006 //
0007 //
0008 //
0009 //
0010 //
0011 //
0012 //
0013 //
0014 //
EJECT

DIGITAL EQUIPMENT CORPORATION
MAYNARD, MASS., 01754

WRITTEN BY JACK BURNES

SEGMENT 6

* 4020 // THIS PROGRAM IS LOADED INTO THE UPPER FIELD OF MEMORY

0075
0076
0077
0100
0101
0102
0103
0104
0105
0106
0107
0110
0020
0021
0022
0023
0113
0114
0115
0116
0117
0120
0121
0122
0123
0124
0125
0126
0127
0130
0131
0132
0133
0134
0135
0136
0137
0140
0141
0142
0143
0144
0145
0146
0147
0150
0151
0152
0153
0154
0155
0156
0157
0160
0161
0162
0163
0164
0165
0166
0167
0170
0171

// JLOAD, LDF 1 // SET THE DATA FIELD TO LOWER CORE
// LDA 1 7777 // PREPARE TO CHECK FOR PRESENCE OF A NAME
// PDP // GET OVER INTO THE GOODY MODE
// PMODE // AND AND OUT AC WITH THE NAMES
// E6P2 // IF NO NAME THEN THE AC WILL STILL BE
// E6P3 // ALL 7775;"
// E6P4 // RESET TO UPPER FIELD POINTER
// E6P5 // PREPARE TO TEST NOW
// CMA // NOT. AC=0=NONAME=LOAD FROM WORKING AREA
// SNA CLA LOADWA // LOAD FROM THE WORKING AREA!
// 4031 040 // GET THE POINTER TO THE START OF THE NAME
// 4032 7650 // LOAD IT IN AND START IT, RETURN IF NOT
// 4033 5240 // FOUND, WELL GIVE A "NO" MESSAGE BY
// 4034 1265 // ISSUING A READ ON A NON-EXISTENT UNIT,
// 4035 4673 //
// 4036 4674 //
// 4037 4037 //
//
// 4040 1275 LOADWA, TAD WAM2
// 4041 3676 DCA I ALBLOCK
// 4042 1271 TAD A111
// 4043 3677 DCA I ALUNIT
// 4044 3700 DCA I ALLOC
// 4045 7201 CLA IAC
// 4046 3701 DCA I ALNUM
// 4047 4674 JMS I AREAD
// 4048 4674 LUNIT
// 4049 7610 TAD APBIT
// 4050 1502 DCA AUTO1
// 4052 3011 TAD AM40
// 4053 1272 TAD AUTO2
// 4054 3012 DCA CMA
// 4055 7240 CLA CMA
// 4056 3411 DCA I AUTO1
// 4057 2012 ISZ AUTO2
// 4058 4060 5255 JMP '-3
// 4061 3703 DCA I APTABLE
// 4062 1304 TAD AWA
// 4063 3676 DCA I ALBLOCK
// 4064 5705 DNP I ALOADC
//
// NOPE, DO SOME MORE!
// SET UP HEADER BLOCK TO HALT.
// NOW SET LBLOCK TO POINT TO THE FIRST BLOCK
// OF THE BINARY WORKING AREA
// NOW JUMP TO MIDDLE TO LOADER TO LOAD IN THE W.A.

/
0173 /
0174 4065 2373 E6P2,
0175 4066 2374 E6P3,
0176 4067 2375 E6P4,
0177 4070 2376 E6P5,
0200 4071 0111 A111,
0201 4072 7740 AM40,
0202 /
0203 /
0204 4073 4200 ALLOAD, LOAD
0205 4074 7774 AREAD, READ
0206 4075 7776 WAM2, WA=2
0207 4076 7612 ALBLOCK, LBLOCK
0210 4077 7610 ALUNIT, LUNIT
0211 4100 7611 ALLOC, LLOC
0212 4101 7613 ALNUM, LNUM
0213 4102 5737 APBIT, PTABLE+340-1
0214 4103 5400 APTABLE, PTABLE
0215 4104 0000 AWA, WA
0216 4105 4272 ALLOADC, LOADC
0217 /
0220 /
0221 //
0222 //
0223 //
0224 //
0225 //
0226 //
0227 //
0230 //
0231 //
0232 //
0233 //
0234 //
0235 //

EJECT

9289

```

        3746      DCA  I      BNLOC
        4266      JMS  I      BREAD
        4267      /      UNIT
        4270      0      LSIZE
        4271      2736      BLBLOCK

        0336      0342      /      LOADC,
        0337      0343      3740      DCA  I      BNLOC
        0340      0344      1325      TAD      BBTAB
        0341      0345      4273      DCA  I      BTTEMP
        0342      0346      4274      TAD      BM17
        0343      0347      4275      JMS  I      BLITL0D
        0344      0350      4276      TAD      BBTAB2
        0345      0351      4277      CMA  I      CLA
        0346      0352      4301      SZA  CLA      BNOL74
        0347      0353      4302      JMP  I      BNOL74
        0348      0354      5722      ISZ  I      BLLOC
        0349      0355      4303      CLA  CMA      CLA
        0350      0356      4304      7240      CLA  CMA      CHA
        0351      0357      4305      4730      CLA  CMA      BLITL0D
        0352      0360      4306      4723      JMS  I      BLMOVE
        0353      0361      4307      6211      CDF   I      10
        0354      0362      4310      0000      0000      CDF   I      0
        0355      0363      4311      6201      7400      4000
        0356      0364      4312      7400      4000      /400 WORDS=1 BLOCK
        0357      0365      4313      0400      4000      /-1: NOW RESET TO CONTINUE THE NORMAL LOAD
        0358      0366      4314      7240      CLA  CMA      /LOC NOW POINTS TO 10000 AGAIN
        0359      0367      4315      1740      TAD  I      BLLOC
        0360      0370      4316      3740      DCA  I      BLN4
        0361      0371      4317      5724      JMP  I      /SKIP PAST THE PHOONEY BOP
        0362      0372      /
        0363      0373      /
        0364      0374      /
        0365      0375      /
        0366      0376      /
        0367      0377      /
        0368      0400      /
        0369      0401      /
        0370      0402      /
        0371      0403      /
        0372      0404      /
        0373      0405      /
        0374      0406      /
        0375      0407      /
        0376      0410      /
        0377      0411      7777      BM1,
        0378      0412      4321      BM4,      -1
        0379      0413      4322      4400      BNOL74,      NOL74
        0380      0414      4323      7200      BMOVE,      MOVE
        0381      0415      4324      4402      BLN4,      LN4
        0382      0416      4325      5740      BBTAB,      PTABLE+340
        0383      0417      4326      4522      BTTEMP,      TEMP
        0384      0420      4327      7761      BM17,      -17
        0385      0421      4330      4504      BLITL0D,      LITL0D
        0386      0422      4331      5757      BBTAB2,      PTABLE+357
        0387      0423      4332      6203      BCIFCDF,      CIF CDF 0
        0388      0424      4333      4530      BLRET,      LRET
        0389      0425      4334      7610      BLUNIT,      LUNIT
        0390      0426      4335      0346      BINDX,      INDEX
        0391      0427      4336      7612      BLBLOCK,      LBLOCK
        0392      0430      3337      0022      BINCR2,      INCOR2
        0393      0431      4334      340      BLLOC,      LLLOC
        0394      0432      4341      7611      BNUM,      LNUM
        0395      0433      4342      7774      BREAD,

```

4340
0439
0438
0437
0436
0435
0434
0433
0432
0431
0430
0429
0428
0427
0426
0425
0424
0423
0422
0421
0420
0419
0418
0417
0416
0415
0414
0413
0412
0411
0410
0409
0408
0407
0406
0405
0404
0403
0402
0401
0400
0400

4340
0439
0438
0437
0436
0435
0434
0433
0432
0431
0430
0429
0428
0427
0426
0425
0424
0423
0422
0421
0420
0419
0418
0417
0416
0415
0414
0413
0412
0411
0410
0409
0408
0407
0406
0405
0404
0403
0402
0401
0400
0400

EJECT


```

        4504    0000    LITL0D, 0      TEMP2
        4505    3323    DCA      TAD I   TEMP
        4506    1722    TAD I   TEMP
        4507    7040    CMA      SZA CLA
        4510    7640    JMP     LITNO
        4511    5315    JMS I   CREAD
        4512    4741    LUNIT
        4513    7610    CLBLOCK
        4514    2735    ISZ I   CLLOC
        4515    2744    LITNO,
        4516    2322    ISZ I   TEMP
        4517    2323    ISZ     TEMP2
        4520    5306    JMP     LITL0D*2
        4521    5704    JMP I   LITL0D

        4522    0000    /TEMP2, 0
        4523    0000    /TEMP2, 0

        4524    2017    LBAD,  ISZ I   AUTO7
        4525    5742    /JMP I   CLOOP
        4526    1743    LBAD2, TAD I   CLOAD
        4527    3332    DCA      1*3
        4530    0000    LRET,  0
        4531    5732    JMP I   1*1
        4532    0000    GOTO2

        4524    2017    LBAD,  ISZ I   /BOP UP THE COUNT
        4525    5742    /JMP I   /NOT YET DONE, TRY NEXT NAME
        4526    1743    LBAD2, TAD I   /BINARY FILE NOT THERE,
        4527    3332    DCA      /RETURN TO CALLER
        4530    0000    LRET,  0   /SET UP TO HIS DATA FIELD
        4531    5732    JMP I   /CALLERS ADDRESS

```

/ / / /
0664 4533 7770 C7770, 7770
0665 0670 4534 7771 C7771, 7771
0666 0671 4535 7612 CLBLOCK, LBLOCK
0667 0672 4536 5777 CPTAB, PTABLE+377
0673 0673 4537 7600 CSYSLOAD, SYSLOAD
0674 0674 4538 0035 CSRTCH2, SR7CH2
0675 0675 4540 7774 CREAD, READ
0676 0676 4541 4232 CLOOP, LOOP
0677 0677 4542 4200 CLOAD, LOAD
0701 0701 4543 7611 CLLOC,
0702 0702 4544 7770 CM10,
0703 0703 4545 7200 CMOVE, MOVE
0704 0704 4546 7627 CTPOINT, TPOINT
0705 0705 4547 CM7, -7
0706 4550 7771 //
0707 //
0710 //
0711 //
0712 //
0713 //
0714 //
0715 //
0716 //
0717 //
0720 //
0721 //
0722 //
0723 //
0730 //
0724 //
0725 //
0726 //
0727 //
0733 //
0731 //
0732 //
0733 //
0734 //
0735 //
0736 //
0737 //
0740 //
EJECT ~

0741
0742
0743
0744
0745

111

C

C

NO ERRORS

SYMBOL	VALUE	DEF	REFERENCES
ALBLOC	76	0207	0135 0157
ALLOC	4100	0211	0140
ALNUM	4101	0212	0142
ALOAD	4073	0204	0126
ALOADC	4105	0216	0160
ALUNIT	4077	0210	0137
AM40	4072	0202	0147
APBIT	4102	0213	0145
APTABL	4103	0214	0155
AREAD	4074	0205	0143
AUTO1	0011	0035	0036 0037 0040 0041 0042 0043 0146 0152 0247 0255 0300
AUTO2	0012	0036	0153 0256 0260 0301 0313
AUTO3	0013	0037	0276 0302 0306 0316 0324 0325 0326 0330
AUTO4	0014	0040	
AUT05	0015	0041	0310 0321
AUT06	0016	0042	0645
AUT07	0017	0043	0274
AWA	4104	0215	0156
A111	4071	0201	0136
BBTAB	4325	0416	0344
BBTAB2	4331	0422	0350
BCIFCD	4332	0423	0251
BINCR1	4344	0435	0275
BINCR2	4337	0430	0265
INDEX	4335	0426	0263
BLBAD	4346	0437	0320
BLBAD2	4347	0440	0332
BLBLOC	4336	0427	0264 0327 0341
BLITL0	4330	0421	0347 0356
BLLOC	4340	0431	0266 0336
BLNUM	4341	0432	0343 0354 0366 0367
BLN4	4324	0415	0370
BLRET	4333	0424	0253
BLUNIT	4334	0425	0262
BMOVE	4323	0414	0357
BM1	4320	0411	0246
BM100	4343	0434	0273
BM17	4327	0420	0346
BM4	4321	0412	0307
BNOL74	4322	0413	0353
BPTAB2	4350	0441	0335
BREAD	4342	0433	0271 0337
BTEMP	4326	0417	0345
B7770	4345	0436	0304
CLBLOC	4535	0673	0552 0553 0631
CLLOC	4544	0702	0503 0632
CLOAD	4543	0701	0650
CLOOP	4542	0700	0646
CMOVE	4546	0704	0507 0543 0560 0600
CM10	4545	0703	0505
CM7	4550	0706	0517
CPTAB	4536	0674	0554
CREAD	4541	0677	0627
CSRTCH	4248	0676	0571
CSYSLO	4557	0675	0557 0606
CTP01N	4547	0705	0515 0527 0530 0532 0535 0540
C7770	4533	0671	0541
C7771	4534	0672	0551
E6	2371	0026	0175 0176 0177 0200
F6P2	4045	0175	0125 0125

SYMBOL	VALUE	DEF	REFERENCES
E6P4	4067	0117	
E6P5	4070	0120	
INCOR1	0777	0047	0435
INCOR2	0022	0050	0430
INDEX	0346	0046	0426
JBLLOAD	4020	0110	
LBA0	4524	0645	0437
LBA02	4526	0650	0440
LBLOCK2	4473	0576	0570
LBLOCK	7612	0033	0034
LITL0D	4504	0621	0421
LITNO	4515	0632	0626
LL0C	7611	0032	0033
LL0C2	4472	0575	0572
LL0OP	4243	0312	0322
LNL_P	4416	0521	0534
LNUM	7613	0034	0212
LNUM2	4474	0577	0432
LN4	4402	0505	0415
LOAD	4200	0245	0204
LOADC	4272	0343	0216
LOADWA	4040	0134	0124
LOOP	4232	0300	0700
LPOINT	4444	0547	0573
LRET	4530	0652	0424
LUNIT	7610	0031	0032
LUNIT2	4471	0574	0564
MOVE	7200	0051	0414
NOL74	4400	0502	0413
PTABLE	5400	0044	0213
PTAB2	0033	0045	0441
READ	7774	0027	0205
SRTCH1	6400	0055	0602
SRTCH2	0035	0056	0575
SYSL0D	7600	0053	0604
TEMP	4522	0641	0417
TEMP2	4523	0642	0520
TPOINT	7627	0052	0705
TREAD	7630	0054	0547
WA	0000	0030	0206
WAM2	4075	0206	0134