



M-520117  
ISSUE 4

**MICROLINE 82A  
STANDARD DOT-IMPACT  
MATRIX LINE PRINTER**

**Maintenance  
Manual**



M-520117  
ISSUE 4

# MICROLINE 82A STANDARD DOT-IMPACT MATRIX LINE PRINTER

## Maintenance Manual

### CONTENTS

	Page		Page
<b>1. INTRODUCTION</b> . . . . .	1	4.9	Line Space Change . . . . . 42
1.1 General . . . . .	1	4.10	Characters-Per-Line Change . . . . . 42
1.2 Components . . . . .	2	4.11	Select, Deselect Function . . . . . 43
<b>2. SPECIFICATIONS</b> . . . . .	4	4.12	Buffer Clear Function . . . . . 43
2.1 Print Specifications . . . . .	4	4.13	DEL Code . . . . . 43
2.2 Media Specifications . . . . .	7	4.14	Paper-End Function . . . . . 43
2.3 Ribbon Specifications . . . . .	8	4.15	Initial Reset Condition . . . . . 43
2.4 Interface Specifications . . . . .	9	4.16	Communication Function Selection . . . . . 44
<b>3. INSTALLATION PROCEDURE</b> . . . . .	17	4.17	Functions of Switches, Buttons, and Others . . . . . 44
3.1 Installation Procedure for Printer Operation . . . . .	17	<b>5. THEORY OF OPERATION</b> . . . . .	49
3.2 Functions of Operating Controls and LEDs . . . . .	20	5.1	Operation of the Mechanical Section . . . . . 49
3.3 Operating Procedures . . . . .	22	5.2	Operation of the Control Section . . . . . 58
3.4 Tractor Unit Mounting . . . . .	23	<b>6. MAINTENANCE</b> . . . . .	67
3.5 Roll Paper Stand Mounting . . . . .	25	6.1	Maintenance Precautions . . . . . 67
3.6 Ribbon Loading Procedure . . . . .	26	6.2	Cleaning . . . . . 67
3.7 Paper Loading Procedure . . . . .	27	6.3	Maintenance Tools . . . . . 68
3.8 Operational Precautions . . . . .	35	6.4	Disassembly, Reassembly and Adjusting Procedures . . . . . 68
<b>4. FUNCTIONS</b> . . . . .	36	6.5	Adjustment Procedures for Various Parts . . . . . 79
4.1 Function Codes . . . . .	36	6.6	Oiling . . . . . 82
4.2 Character Sets . . . . .	36	6.7	Maintenance Parts List . . . . . 88
4.3 Data Receiving and Printing System . . . . .	37	6.8	Troubleshooting Flow Charts . . . . . 94
4.4 Graphic Printing . . . . .	38	<b>7. CIRCUIT DIAGRAMS</b> . . . . .	107
4.5 Vertical Tab Function . . . . .	38		
4.6 Top-of-Form (TOF) . . . . .	40		
4.7 Character Pitch Selection . . . . .	41		
4.8 Enlarged Character Printing Function . . . . .	42		

CONTENTS (con.)		Page
<b>8.</b>	<b>TABLE OF COMPONENT PARTS</b>	<b>115</b>
Fig. 8-1	General Assembly Diagram	117
Fig. 8-2	Printer Unit	121
Fig. 8-3	Base Unit	123
Fig. 8-4	Platen Assembly	126
Fig. 8-5	Paper Out Assembly	128
Fig. 8-6	Ribbon Feed Mechanism	130
Fig. 8-7	Carriage Assembly	132
Fig. 8-8	Cover Unit	134
Fig. 8-9	Operation Panel Assembly	138
Fig. 8-10	LEPF Circuit Board	140
Fig. 8-11	Power Source Assembly	142
Fig. 8-12	LEPW-1/-2 Circuit Board	146
Fig. 8-13	LEPV Circuit Board	150
Fig. 8-14	Tractor Unit	158
Fig. 8-15	Sprocket Assembly (R)	160
Fig. 8-16	Sprocket Assembly (L)	162
Fig. 8-17	Roll Paper Stand Assembly	164

## APPENDICES

	Page
Appendix A	External Dimensions . . . . . 167
Appendix B	Character Set . . . . . 168
Appendix C	Local Test Pattern . . . . . 172
Appendix D	Character Example . . . . . 173
Appendix E	Dot Pattern . . . . . 175
Appendix F	Character Dot Dimensions . . . . . 180
Appendix G	Graphic Dot Dimensions . . . . . 182
Appendix H	Printing Format . . . . . 184

## 1. INTRODUCTION

This maintenance manual is prepared for the maintenance personnel in the field, describing the MICROLINE 82A (referred to as ML 82A hereafter) as to its specifications, operating theory, and maintenance and troubleshooting procedures.

### 1.1 General

The ML 82A is a desk top, serial dot-impact matrix, receive only printer. The design is particularly suited to personal computer applications.

The printer receives data line by line, and prints it out. It receives data even while it is printing so that the machine can print in both directions in the shortest distance. The printer employs an extra-small-sized print head, a simplified mechanism, and a microcomputer, so it is small in size and light in weight.

The main features are as follows:

- (1) High-speed printing with 120 characters/second
- (2) DESCENDER character printing possible
- (3) High printing quality by subdividing space motor
- (4) High throughput by bidirectional printing and shortest-distance printing
- (5) Equipped with FF, VT, TOF functions
- (6) Low noise
- (7) Small in size, light in weight
- (8) Low power consumption
- (9) Simple design
- (10) Graphic, reduced, and enlarged characters printable.

## 1.2 Components

### 1.2.1 Standard Printer Components

The basic printer consists of a print mechanism, function circuit board, operating section, power supply, and two covers.

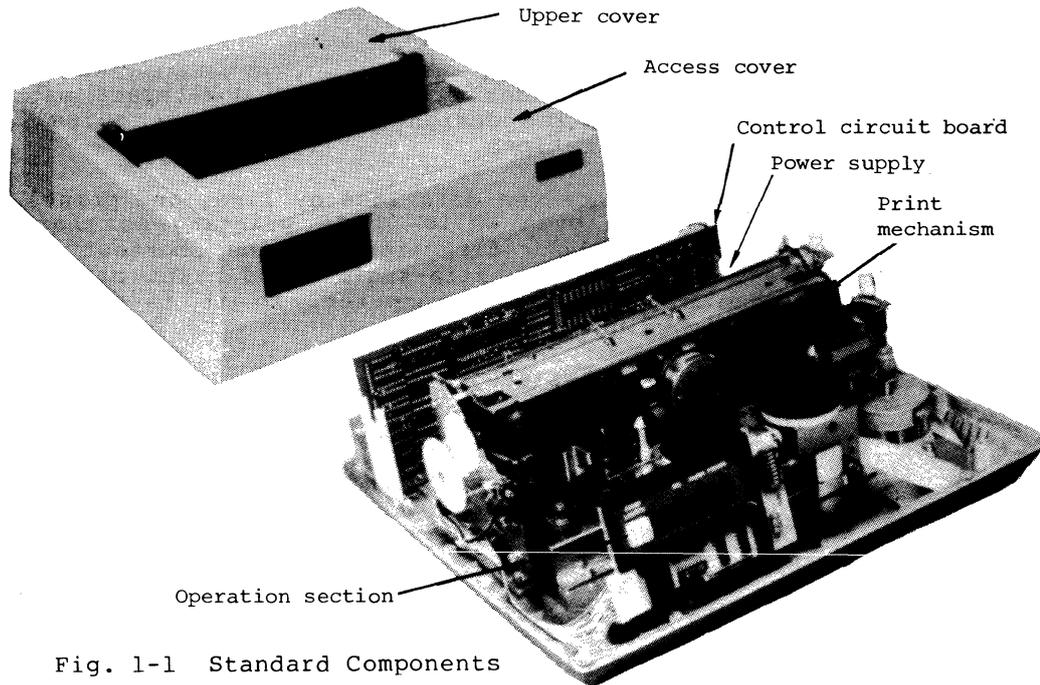


Fig. 1-1 Standard Components

### 1.2.2 Optional Printer Components

The optional printer components are:

- (1) Tractor unit (See Fig. 1-2)
- (2) Roll paper stand (See Fig. 1-3)
- (3) High-speed (H.S.) RS-232-C serial interface board
- (4) High-speed (H.S.) RS-232-C + current loop serial interface board
- (5) IEEE 488 parallel interface board

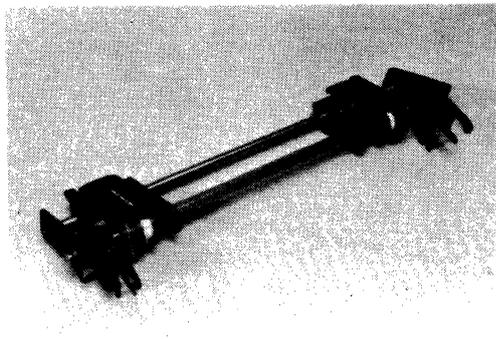


Fig. 1-2 Tractor Unit

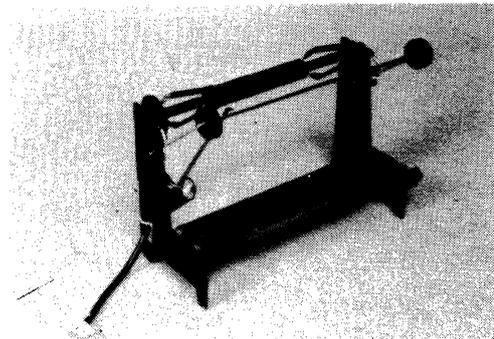


Fig. 1-3 Roll paper stand

1.2.3 Block Diagram

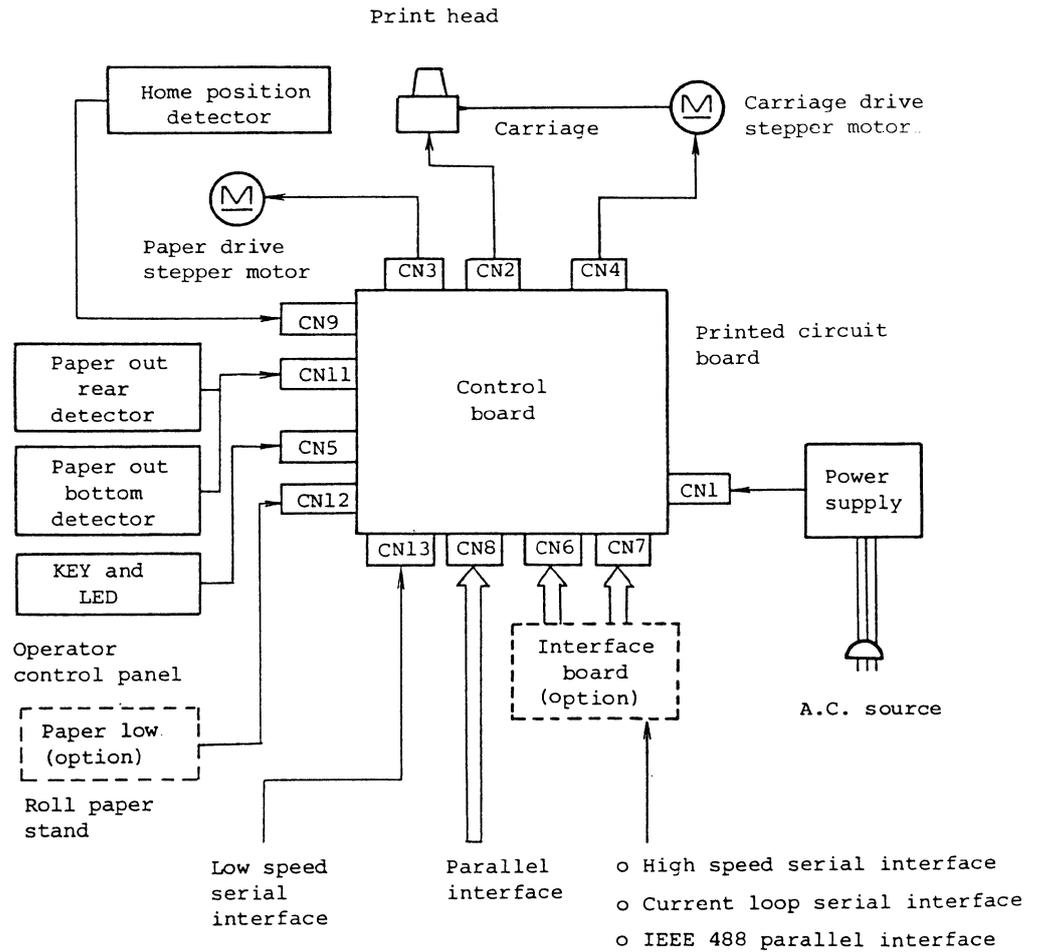


Fig. 1-4 Block Diagram



## 2. SPECIFICATIONS

### 2.1 Print Specifications

- (1) Print system: Dot-impact matrix
- (2) Printing direction: Bidirectional
- (3) Printing speed: 120 characters/second (10 CPI or 16.5 CPI)  
60 characters/second (5 CPI, 8.3 CPI)
- (4) Line printing speed: As shown in Table 2-1

Table 2-1

Unit: Lines/minute

No. of characters per line	5 CPI	8.3 CPI	10 CPI	16.5 CPI
132	-	-	-	47
80	-	-	73	72
40	73	72	123	120
20	123	120	187	180

Note: Graphic printing speed is about one fourth of the above figures.

#### (5) Kinds of printing

Alphanumeric characters and symbols: 94 (Lower-case English letters are included. SP, DEL unit not included.)

Note: "g", "j", "p", "q", "y", ",", ";" and "\_" are printed as DESCENDER characters shifted down by 2 dots for the 6 LPI mode. For the 8 LPI mode, however, these characters are printed as DESCENDER characters shifted down by 1 dot for USA model, and as ASCENDER characters for other area models. For other than the USA model, "ç" (French) is also dealt with as a descender character.

Graphic: 64

Dot matrix patterns are shown in Appendix E.

#### (6) Character composition

Basic matrix: 9 (hor.) x 9 (ver.) dots  
Characters: 9 x 7 dots  
Graphic: 6 x 12 dots (at 6 LPI)  
6 x 9 dots (at 8 LPI)

#### (7) Character size

Characters: As shown in Appendix F.  
Graphic: As shown in Appendix G.

#### (8) Character set

Standard: 10 kinds of character sets can be selected with the internal select switch. (Refer to paragraph 4.2.)



Option: Any character set is possible by replacing ROM for character generator at the place of use.

Character sets are shown in Appendix B.

- (9) Character-to-character space Changeable by function code (See paragraphs. 4.7 and 4.8)
- 5 CPI: 5.08 mm (0.200")
- 8.3 CPI: 3.05 mm (0.120")
- 10 CPI: 2.54 mm (0.100")
- 16.5 CPI: 1.52 mm (0.060")
- (10) Maximum number of characters per line: Changeable by function code as shown in Table 2-2. (See paragraph 4.10)

Table 2-2

Mode	5 CPI	8.3 CPI	10 CPI	16.5 CPI
Long line mode	40 characters	66 characters	80 characters	132 characters
Short line mode	32 characters	53 characters	64 characters	106 characters

- (11) Line space Changeable by function code (See par. 4.9)
- 6 LPI: 4.23 mm (0.167")
- 8 LPI: 3.175 mm (0.125")
- (12) Line change time
- 6 LPI: 115 ms
- 8 LPI: 95 ms
- (13) Line change speed: 2 inch/second (in case of VT, FF)
- (14) Paper feed control: (a) With TOF (Top-of-Form) function
- (b) With VT (Vertical Tabulation) function
- (15) Paper feed direction: Rear paper feed and bottom paper feed (Rear paper feed only for friction feed)
- (16) Paper feed system: (a) Friction feed system:
- (b) Fixed pin platen feed system: Platen for paper width of 241.3 mm (9.5") Paper cutting with the paper-tear-off bar possible
- (c) Tractor feed system: By mounting optional tractor unit, paper 76.2 mm (3.0") to 241.3 mm (9.5") wide can be loaded.



- (17) Column indicator: The paper-tear-off bar is equipped with a 2.54 mm (0.10") scale indicator.
- (18) Paper out: Rear paper feed: Detects the absence of paper about 50 mm (2.0") from the present printing line.  
Bottom paper feed: Detects the absence of paper about 25 mm (1") from the present printing line.
- (19) Paper low: (option) This function applies to roll paper only. When the roll has decreased to a diameter of 40+6 mm (1.575"), this function detects it and stops printing. (When optional roll paper stand is used.)
- (20) Paper-tear-off bar: Paper can be cut about 23.28 mm (0.916") above printing position. (This bar cannot be used when the optional tractor unit is mounted.)
- (21) Appearance (As shown in Appendix A)
- Outside dimensions: 361 mm (14.21") (W) x 328 mm (12.91") (D) x 133 mm (5.24") (H)  
(Not including the platen knob, roll paper stand, or tractor unit)

#### Weight

- Printer proper: Approx. 8.9 kg
- Tractor unit: (option) Approx. 0.5 kg
- Roll paper stand: (option) Approx. 0.5 kg
- (22) Input power: Single-phase a.c.
- a) 115 V  $\pm$  10%, 50/60 Hz  $\pm$  2%
- b) 220 or 240 V  $\pm$  10%,  
50/60 Hz  $\pm$  2%

#### NOTE

Specify either a) or b) in your order. 220 or 240 V can be selected with internal switch. (Refer to paragraph 4.17.4)

- (23) Power consumption: Approx. 90 VA maximum during operation; approx. 45 VA when not printing
- (24) Power cord: Approx. 2.3 m (7.7 ft) long (Plugs and cords meeting UL, CSA, and European standards are available.)
- (25) Insulation
- Insulation resistance: 5 M $\Omega$  or more when measuring between a.c. input and the frame by a 500 V d.c. megger

Dielectric strength: No damage is caused when the following voltage is impressed between the a.c. input line and the frame for one minute:

a) 115 V input type:  
1,000 V a.c. (50/60 Hz)

b) 220/240 V input type:  
1,500 V a.c. (50 Hz)

(26) Ambient temperature and relative humidity

	During operation	During non-operation	During storage
Temperature	5°C to 40°C	-10°C to 43°C	-40°C to 70°C
Humidity	20 to 90% RH	5 to 95% RH	5 to 95% RH

Note: 1) The equipment must be packaged during storage.

2) Packages must be kept free of dew.

(27) Vibration

During operation: Less than 0.3 G (10 Hz)

(28) Shock

During non-operation: Less than 3 G

(29) Noise

65 dB on the average as measured 1 meter from front of printer and 1 meter above the floor, when the printer is operating on a table 64 cm high. (This applies where characters are continuously printed with the printing test pattern in the printer, and average noise level measured by A-range FAST, at 10 CPI, 6 LPI. Graphics not included.)

## 2.2 Media Specifications

(1) Roll paper

Outside diameter: 128 mm maximum

Paper width: 208 mm to 216 mm

Core inside diameter: 25 mm

Ream: 45 to 55 kg (52 to 64 g/m<sup>2</sup>)

Multiple-part paper cannot be used.

A printing format is shown in Appendix H-1.

(2) Single sheet

Standard paper size is A4 (210 mm wide, 297 mm long), but paper up to 215.9 mm (8.5") wide can be used.

Ream: 45 to 55 kg (52 to 64 g/m<sup>2</sup>)

Multiple-part paper cannot be used.



A printing format is shown in Appendix H-2.

(3) Sprocket paper

(a) Paper width: 241.3 mm (9.5")  
 If optional tractor unit is mounted, paper ranging from 76.2 mm (3.0") to 241.3 mm (9.5") can be used.

(b) One-part papers

Ream: 45 to 55 kg (52 to 64 g/m<sup>2</sup>)

(c) Multiple-part paper

Type	Ream	Copy number	Remarks
Carbon-line paper	30 to 34 kg (35 to 40 g/m <sup>2</sup> )	Up to 4 copies including original	Up to 3 copies when using fixed-pin platen feed system (option at plant)
Pressure-sensitive paper			
Interleaf paper	45 kg (52 g/m <sup>2</sup> )	Up to 3 copies including original	
	30 kg (35 g/m <sup>2</sup> )	Up to 4 copies including original	When tractor unit is used.

Note: Paper thickness must be 0.28 mm (0.011") or less.

A printing format is shown in Appendix H-1.

NOTE

Two kinds of paper cannot be used simultaneously.

## 2.3 Ribbon Specifications

Genuine OKI ribbons are recommended. Other ribbons must meet the following specifications:

- (1) Spool: 2-inch standard spool (Underwood type)
- (2) Ribbon length: 11.5 m (12.5 yd) maximum
- (3) Ribbon width: 12.7 mm (0.5")
- (4) Ribbon thickness: 0.1 mm (0.004") maximum  
Nylon (40 denier x 40 denier)
- (5) Color (ink): Single color (black)
- (6) Eyelet: With reversing eyelets  
(Thickness: 2.4+0.3,  
Diameter: 7.8 mm)
- (7) Ink viscosity: Low viscosity  
(About 500+100 cp at 25°C (77°F))



(8) Ribbon life: 1.5 million to 2.0 million characters

The diagram number for the genuine OKI ribbon is 4LP-1322-5 (black).

## 2.4 Interface Specifications

The interface section of the printer can be used divided as shown below.

### (1) Standard

(a) Parallel interface (Centronics-compatible interface)

(b) Low speed (L.S.) serial interface

(Based on RS-232-C; 1,200 BPS or less, OKI SIMPLEX BUSY protocol)

(a) or (b) can be selected with DIP switch (SW8) on the front operating panel circuit board. (See Table 4-5.)

### (2) Options

(a) High-speed (H.S.) RS-232-C serial interface

(b) High-speed (H.S.) RS-232-C + current loop serial interface

(c) IEEE 488 parallel interface

### 2.4.1 Parallel Interface

#### (1) Connectors

Printer end: 36-pin receptacle, equivalent to 57-40360-12-D56 (Amphenol or Daiichi Electronics)

Cable end: 36-pin plug 57-30360, equivalent to (Amphenol or Daiichi Electronics), or plug 552274-1 (Amphenol) or equivalent cover 552073-1 (Amphenol)

The arrangement of connector pins is as shown in Fig. 2-1.

#### (2) Cable

Use a cable less than 5 meters in overall length. (A shielded cable composed of twisted paired wires is recommended for noise prevention.)

#### (3) Parallel interface signal

Pin No.	Signal	Direction	Description
1	<u>DATA</u> <u>STROBE</u>	To printer	Samples data from input device. Sampling effective at low level.
2	DATA BIT 1	} To printer	
3	DATA BIT 2		
4	DATA BIT 3		



Pin No.	Signal	Direction	Description
5	DATA BIT 4	To printer	Indicate input data. High level indicates "1" and low level "0".
6	DATA BIT 5		
7	DATA BIT 6		
8	DATA BIT 7		
9	DATA BIT 8		
10	<u>ACKNOWLEDGE</u>	From printer	Indicates character input completion, or function operation end at low level.
11	BUSY	From printer	Indicates data cannot be received at high level. Data can be input at low level.
12	PAPER END	From printer	High level indicates paper end.
13	SELECT	From printer	High level indicates the printer is ready for receiving data.
14, 16, 33	0V	-	Signal ground
17	CHASSIS GROUND	-	Frame ground
18	+5 V	From printer	+5 V supply (50 mA maximum)
19 to 30	0V	-	Twisted pair return (For pins 1 to 11)
31	<u>INPUT-PRIME</u>	To printer	Controller is initialized at low level. Pulse width more than 0.5 ms.
32	<u>FAULT</u>	From printer	This signal goes from high to low level when paper runs out.
15, 34, 35, 36	-	-	Unused





Fig. 2-1 Connector Pin Arrangement

- (4) Parallel interface levels
  - Low level: 0.0 to +0.8 V
  - High level: +2.4 to +5.0 V

(5) Parallel interface circuits


(a) Receiver



$R = 1\text{ k}\Omega$  (data lines,  $\overline{\text{I-PRIME}}$ )


$R = 470\Omega$  (DATA STROBE line)

(b) Driver



$1\text{ k}\Omega$   
+5 V (Open collector)

(6) Parallel interface timing chart

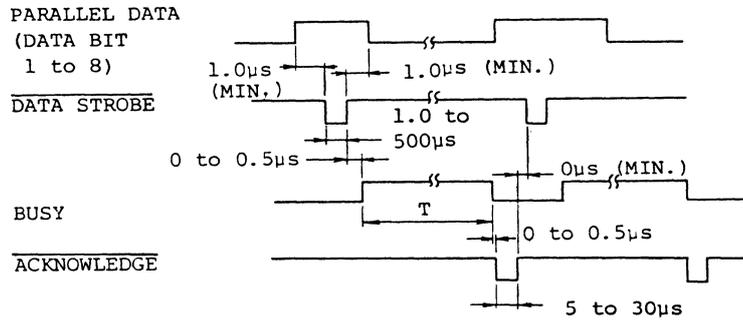

Note: T Minimum:  $150\mu\text{s}$   
Maximum: Printing, carriage return, and line spacing time

2.4.2 Low-speed (L.S.) Serial Interface

The L.S. serial interface can be connected to a start-stop synchronized serial circuit.

Refer to paragraph 5.2.4. (2) for precautions regarding the operation of the L.S. serial interface.

The specifications of the L.S. serial interface are as shown below.

(1) Connectors

Printer end: 25-pin receptacle, equivalent to DB-25S (Cannon)

Cable end: 25-pin plug, equivalent to DB-25P (Cannon)  
Shell, equivalent to DB-C2-J9 (Cannon)

The arrangement of connector pins is as shown in Fig. 2-2.

(2) Cable

Use a cable less than 15 m long. A shielded cable using twisted paired wires is recommended for noise prevention.

(3) Low-speed serial interface signals

Pin No.	Signal	Direction	Description
1	Protective Ground (PG)	-	Connected to printer frame (Frame ground)
3	Received Data (RD)	To printer	Printer received data signal
4	RTS	From printer	Fixed at mark
*6	Data Set Ready (DSR)	To printer	Signal notifying printer when spacing that data is ready to be transmitted.
7	Signal Ground (SG)	-	Signal ground
11	Supervisory Send Data (SSD)	From printer	Signals (equivalent to BUSY) indicating that printer is ready for operation and receiving data. (Refer to Table 4-7.)
20	Data Terminal Ready (DTR)	From Printer	(1) ON when power is supplied. (2) ON when the device is in select (ready for receiving). Switching of (1) and (2) can be made by jumper plug. (NOTE 2)
2, 5, 8 to 10, 12 to 19, 21 to 25	-	-	Unused

Note: 1) The printer output signals of DTR and SSD are unconditionally at high level (ready for receiving) for about 1 second after power is switched on and about 12 seconds after power is switched off, but are invalid for these durations.

2) DTR switching (LEPV-circuit board)

SP1	A side	Space (ON) under select condition
	B side	Space (ON) when power is supplied

3) Pin arrangement




Fig. 2-2 Connector Pin Arrangement (25 pins)


\*4) This printer does not monitor the DSR signal.

4) Connection of L.S. serial interface

Handling of SSD signal with L.S. RS-232-C interface differs depending on types of interface on the controller end. Handle the SSD signals as follows:


- a) When controller does not have BUSY signal input:

Note: When handling SSD signal under this mode, set SW1 of SSD signal polarity on LEPV- circuit board at ON.

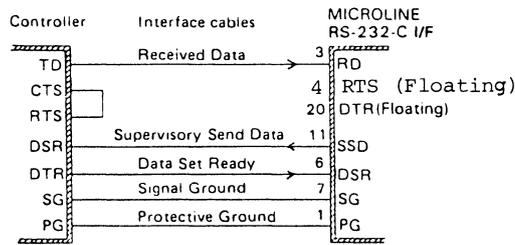


- b) When controller has BUSY signal input:

Note: When handling SSD signal under this mode, set the SW1 of SSD signal polarity setting on LEPV-circuit board according to the polarity of BUSY signal on controller end. When this is ignored, characters will be missed, and normal receiving becomes impossible.

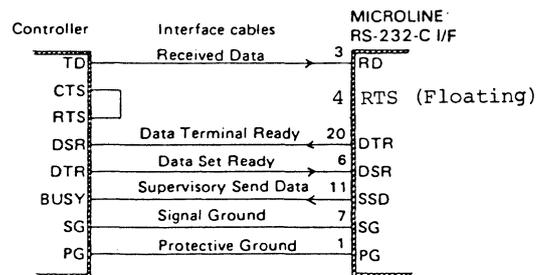


- c) Handling of unused signals

- i) When DTR signal is not used, make DTR signal floating:

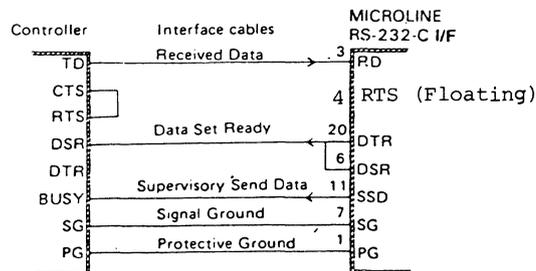



ii) When DSR signal is not used, connect DSR and DTR signals in the connector:

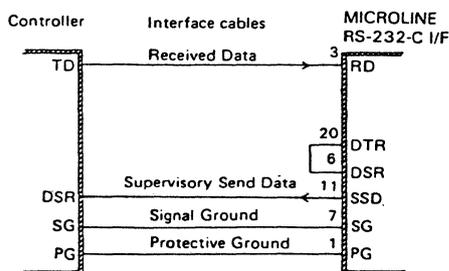


(4) L.S. serial interface levels

Mark (low level) = OFF = LOGIC "1": -25 to -3 V

Space (high level) = ON = LOGIC "0": +25 to +3 V

(5) L.S. serial interface circuit


(a) Receiving circuit

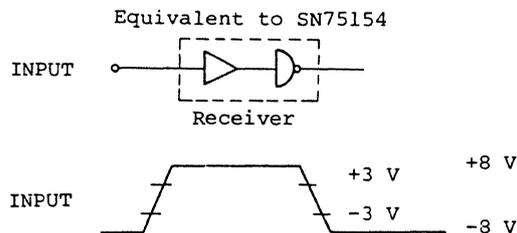

Note: 1) Maximum input voltage is ±25 V.

2) If input end power is OFF, the output of receiver becomes high (+2.4 V or more) at TTL level.

(b) Sending circuit

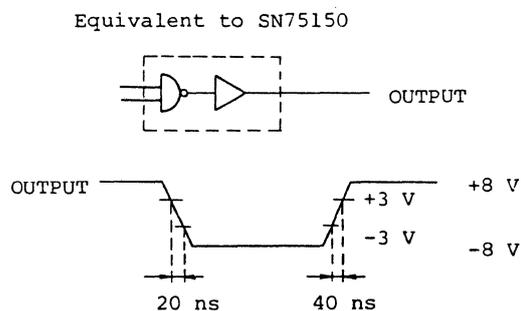

The above values apply for a drive source voltage of ±12 V, and a 7 k $\Omega$ , 15 pF load.

(6) Polarity of SSD signal

Selectable with the DIP switch SW1 on the control circuit board (LEPV-). (See Table 4-7.)

(7) Transmitting speed setting

Any of the transmitting speeds can be selected with DIP switches SW2 to SW4. (See Table 4-7.)

(8) Synchronization and data composition

(a) Start-stop synchronous system (ASYNCHRONOUS)

(b) Start bit length: 1 bit

(c) Stop bit length: 1 bit or 2 bits

(d) Code unit number: 8 bits or 7 bits


Selected by the DIP switch SW5 on the operating panel (See Table 4-5.)

(e) Parity bit: Existent or non-existent


For parity bit setting, use the DIP switch SW6 on the control circuit board. (See Table 4-7.)

(9) L.S. serial interface timing chart

(a) Receive start timing chart

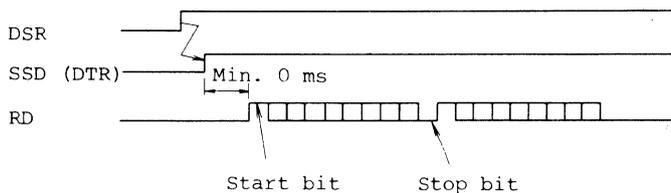

(b) Timing chart where the printer buffer is full

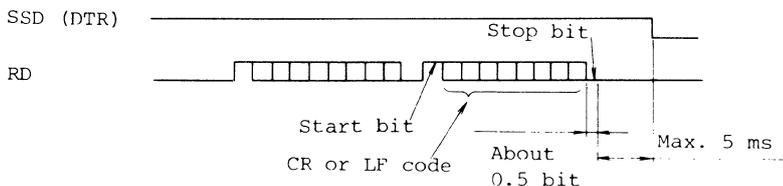

- Note:
- 1) The above diagram applies when DIP switch SW1, shown in Table 4-7, is ON. If SW1 is OFF, the SSD signal has the opposite polarity.
  - 2) A general formula showing the time of stopping the data transmission after sending the SSD signal from the printer end is shown below:

$$T = \frac{3,000}{B} (A + P + 2) + \frac{500}{B} - 5$$



where,


T: Time (ms) before stopping data, after  
sending SSD signal  
B: Transmitting speed (BPS)  
A: Code unit number (8 bits or 7 bits)  
P: Parity bit (with parity = 1, without  
parity = 0)

### 3. INSTALLATION PROCEDURE


#### 3.1 Installation Procedure for Printer Operation

- (1) Check the equipment for damage.
- (2) Remove the access cover by holding center of cover and pulling upward.

Access cover

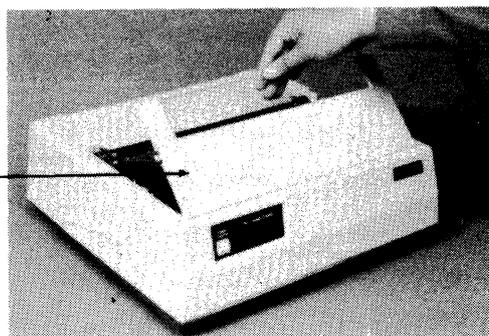

- (3) Remove fastener used to secure printhead during transportation.
- (4) Connect the interface cable to the back of the printer and to the external data system. (Refer to Figs. 3-1 and 3-2.) The a.c. power switch must be in the OFF position. Cover the unused connector with the blank plate.

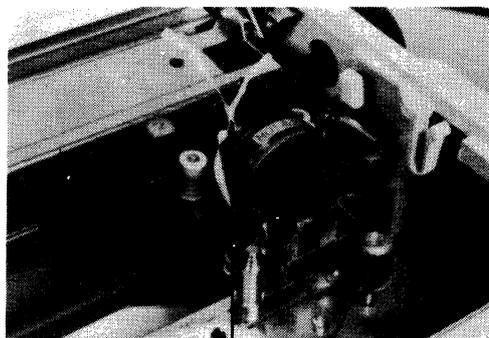

Fastener

#### NOTE

When the printer is shipped, the parallel interface is set. When used with low-speed serial interface, set the DIP switch SW8 on the front panel to ON. (Refer to Table 4-5.)

- (5) Install ribbon. Refer to paragraph 3.6 for detailed instructions.
- (6) Insert the paper and set to the first printing position. Refer to paragraph 3.7 for detailed instructions. When using sprocket paper, skip 16.5 mm (4 lines at 6 LPI) on each side of the perforated line.
- (7) Set the FORM LENGTH rotary switch located on the front panel to the desired length. (Refer to paragraph 3.3.1)
- (8) Turn the a.c. power switch to the OFF position and connect the a.c. input plug to an a.c. receptacle.
- (9) Turn the a.c. power switch to the ON position and verify that the POWER and SEL LEDS illuminates.

#### CAUTION

- 1) Set the power source voltage select switch according to the power used (for 200 V type only) Refer to paragraph 4.17.4.

- 2) Set the DIP switches for function selections according to paragraph 4.17.

Preparation for data reception from an external source is now complete.

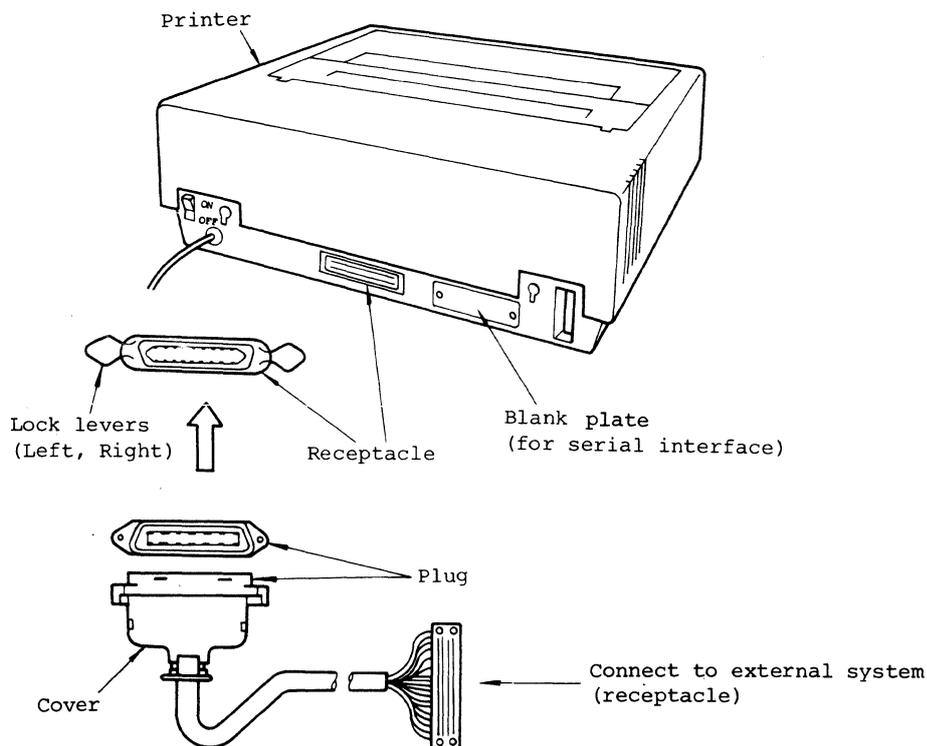


Fig. 3-1 Parallel Interface Connection Diagram

#### Parallel Interface Connectors and Cable Specifications

##### (1) Connectors

Printer end: 36-pin receptacle, equivalent to 57-40360-12-D56 (Amphenol)

Cable end: 36-pin plug, equivalent to 57-30360 (Amphenol)

Or plug equivalent to 552274-1 (AMP); cover equivalent to 552073-1 (AMP)

##### (2) Cable

Use a cable less than 5 meters long. A shielded cable using twisted pair conductors is desirable.

##### (3) Connector locks

After engaging the connectors, fasten them with locks.

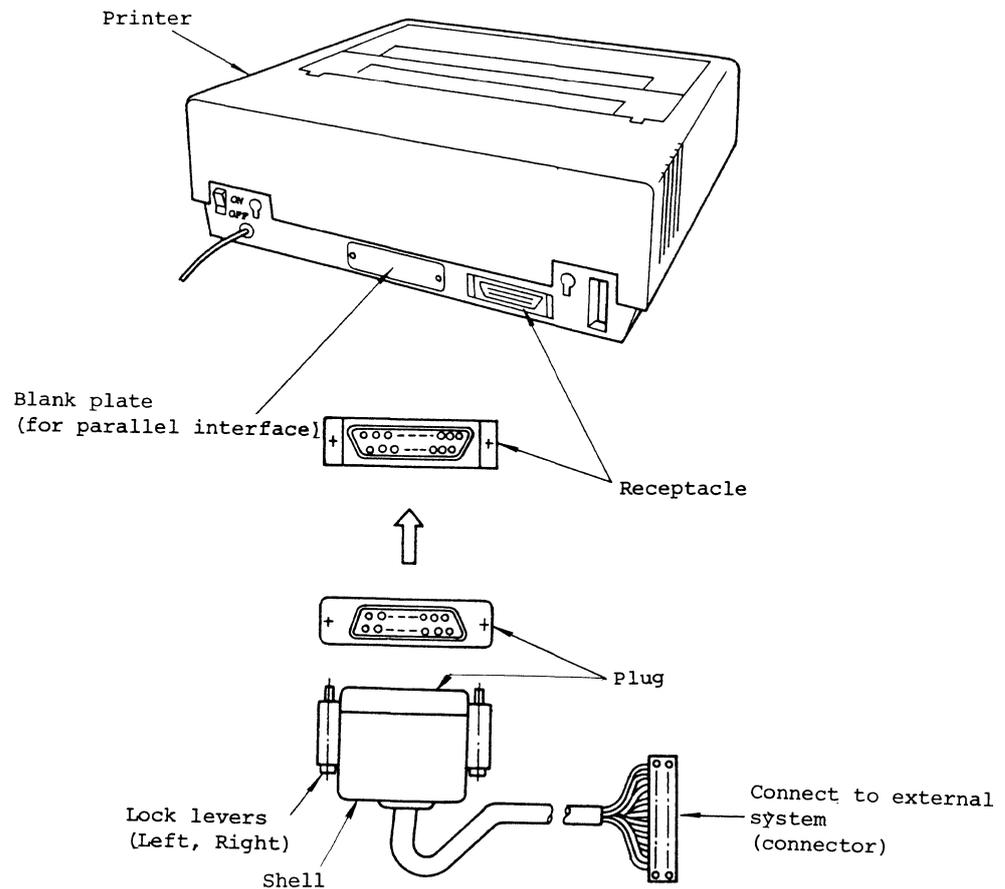


Fig. 3-2 Low Speed Serial Interface Connection Diagram

### Serial Interface Connectors and Cable Specifications

#### (1) Connectors

Printer end: 25-pin receptacle, equivalent to DB-25S (Cannon)

Cable end: 25-pin plug, equivalent to DB-25P (Cannon)  
Shell, equivalent to DB-C2-J9 (Cannon)

#### (2) Cable

Use a cable less than 15 meters long. A shielded cable using twisted pair conductors is desirable.

#### (3) Connector locks

After engaging the connectors, fasten them with locks.

### 3.2 Functions of Operating Controls and LEDs

The controls, LEDs and knobs necessary for operating the printer are shown below.

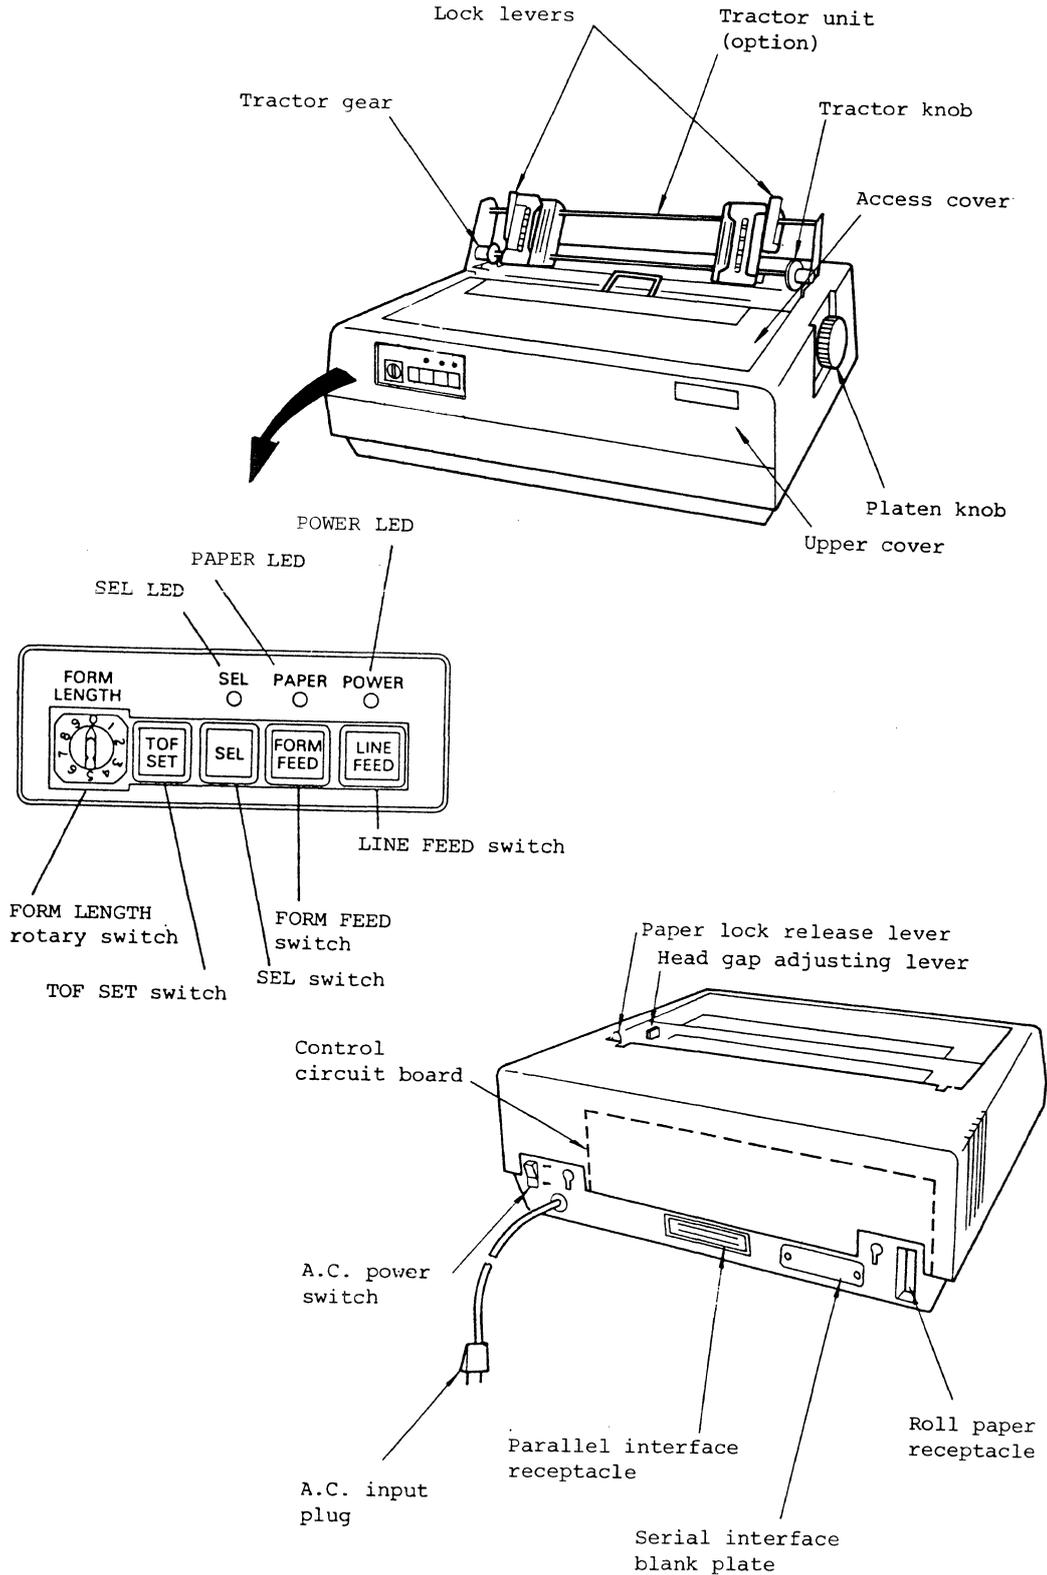


Fig. 3-3 Operating Controls, LEDs and Others

Table 3-1 Operating Switches and LEDs

Name	Type	Location	Description
A.C. power	Alternate switch	Back panel	Switching a.c. power ON and OFF
POWER	LED (red)	Front panel	Lights when power is switched ON.
PAPER	LED (red)	Front panel	Lights when paper has run out.
FORM LENGTH	Rotary switch	Front panel	Used for selecting page length.
TOF SET	Momentary switch	Front panel	Valid in deselect (off-line) condition. Paper is set to top-of-form (first printing line) when this switch is depressed. Before depressing switch, paper must be set to desired top-of-form.
SEL (Select)	Momentary switch	Front panel	When this switch is depressed the printer changes from deselect (off-line) to select (on-line) condition to be ready for receiving. If the printer had been in select condition, it will change to deselect.
SEL (Select)	LED (red)	Front panel	When the LED lights it indicates select condition, i.e. the printer is ready to receive data. When the light is not lit, it indicates deselect condition. The LED lights when the SEL switch is depressed or when a DC1 code is received or when power is switched ON. When the SEL switch is depressed again or when a DC3 is received or when paper has run out, the light goes out.
FORM FEED	Momentary switch	Front panel	Valid in deselect condition. When this switch is depressed, paper is fed to the next top-of-form position.

Table 3-1 (con.)

Name	Type	Location	Description
LINE FEED	Momentary switch	Front panel	Valid in deselect condition. When this switch is depressed, paper is fed one line upward. The LINE FEED switch is also used to start character test-pattern printing.
Paper lock release lever		Top of printer at right (further side)	Close when single paper is used; open when using sprocket paper. When the lever is pulled forward, paper is free.
Head gap adjusting lever		Top of printer at right (front side)	Select printing pressure according to paper type and thickness.
Platen knob		Right side of printer	Turned for manually feeding paper up or down.

### 3.3 Operating Procedures

#### 3.3.1 Setting page length

- (1) When the a.c. power switch is OFF;
  - (a) Turn the FORM LENGTH rotary switch to the desired page length,
  - (b) Adjust the first printing line,
  - (c) Push the power switch to the ON position,

The desired page length is now set.
- (2) When the a.c. power switch is ON;
  - (a) Push the SEL switch to extinguish the LED so the printer will be in deselect (off-line) mode,
  - (b) Turn the FORM LENGTH rotary switch to the desired page length,
  - (c) Adjust the paper to the first line,
  - (d) Push the TOF SET switch,
  - (e) Push the SEL switch again to light the LED so the desired page length will be set.

The desired page length is now set.

#### NOTE

Do not set the FORM LENGTH rotary switch within the numbered positions.



Table 3-2 FORM LENGTH Rotary Switch

Rotary switch position	Form length	6 LPI	8 LPI
0	3 inches	18 lines	24 lines
1	3.5 inches	21 lines	28 lines
2	4 inches	24 lines	32 lines
3	5.5 inches	33 lines	44 lines
4	6 inches	36 lines	48 lines
5	7 inches	42 lines	56 lines
6	8 inches	48 lines	64 lines
7	11 inches	66 lines	88 lines
8	12 inches	72 lines	96 lines
9	14 inches	84 lines	112 lines

3.3.2 Page Length Feed

- (1) If the printer is in the SELECT (on-line) state, depress the SEL switch to set the printer to the DESELECT (off-line) state. The SEL (on-line) LED goes off.
- (2) Push the FORM FEED switch. The paper is then fed by the previously selected FORM LENGTH.
- (3) Depress the SEL switch again to set the printer to the SELECT (on-line) state. The SEL (on-line) LED lights.

3.3.3 Line Feed

- (1) If the printer is in the SELECT (on-line) state, depress the SEL switch to set the printer to the DESELECT (off-line) state. The SEL (on-line) LED goes off.
- (2) Push the LINE FEED switch. The paper is then fed line-by-line.
- (3) Depress the SEL switch again to set the printer to the SELECT (on-line) state. The SEL (on-line) LED lights.

3.3.4 Character Test-Pattern Printing

- (1) Disconnect the interface cord.
- (2) Depress the a.c. power switch to OFF.
- (3) Depress the LINE FEED switch and hold.
- (4) Depress the a.c. power switch to ON.
- (5) Release the LINE FEED switch about 2 seconds later.

A continuous test pattern will be printed (see Appendix C). The printer automatically stops after printing the test pattern.

### 3.4 Tractor Unit Mounting (See Fig. 3-4.)

- (1) Remove the access cover.
- (2) Pull the printer's paper lock release lever to the open position.
- (3) Holding the tractor side-plates (left and right) of tractor unit with hands, engage the rear clamp levers with the paper-tear-off bar shaft.

Hold the tractor side plates on the right and left of the tractor unit with both hands, and engage the cutouts in the tractor side plates with the paper-tear-off bar shaft of the printer.

- (4) Pull the tractor unit toward you and slip the forward clamp levers onto the shaft of the platen bearing. Push down and snap in place.

#### 3.4.1 Tractor Unit Removal

Reverse the above procedure

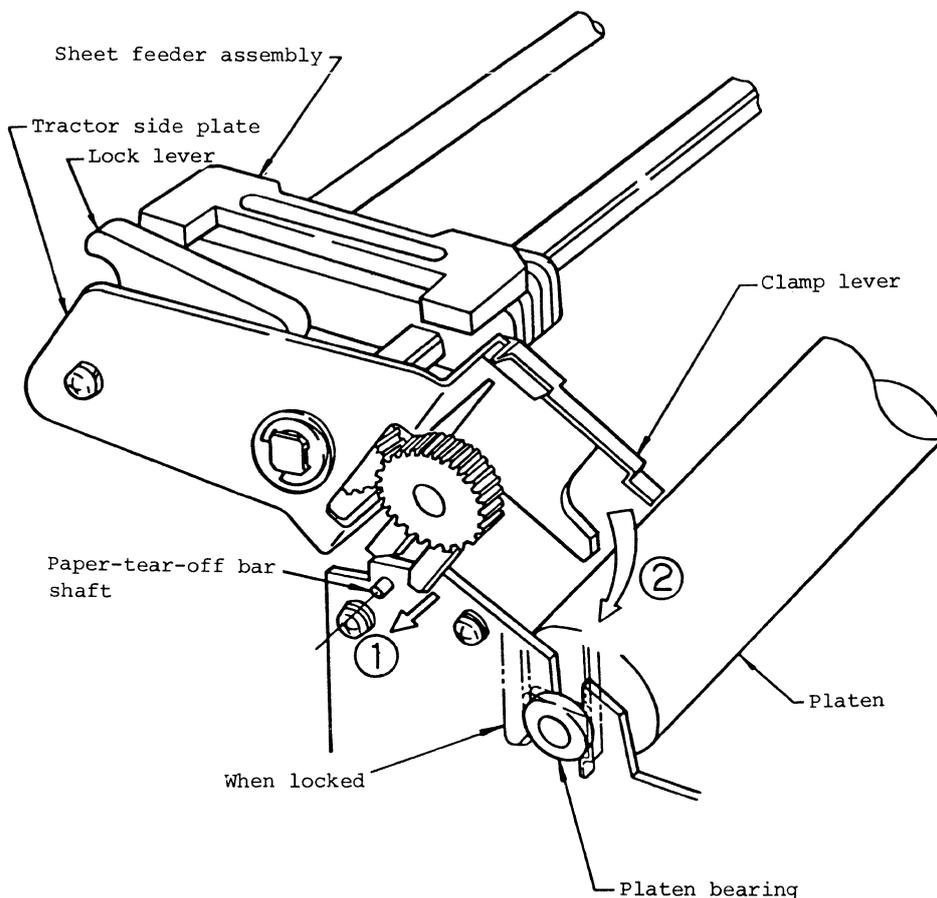


Fig. 3-4 Tractor Unit Mounting Method

### 3.5 Roll Paper Stand Mounting

- (1) Push the a.c. power switch to OFF.
- (2) Insert the roll paper stand's hooks into the hook catch holes on the back of the printer, and push them down to lock the roll paper stand to the printer.
- (3) Insert the plug on the left side of the roll paper stand into the receptacle in the left part of the back of the printer (for detecting paper low). The roll paper stand is now installed.

#### 3.5.1 Roll Paper Stand Removal

Reverse the above procedure


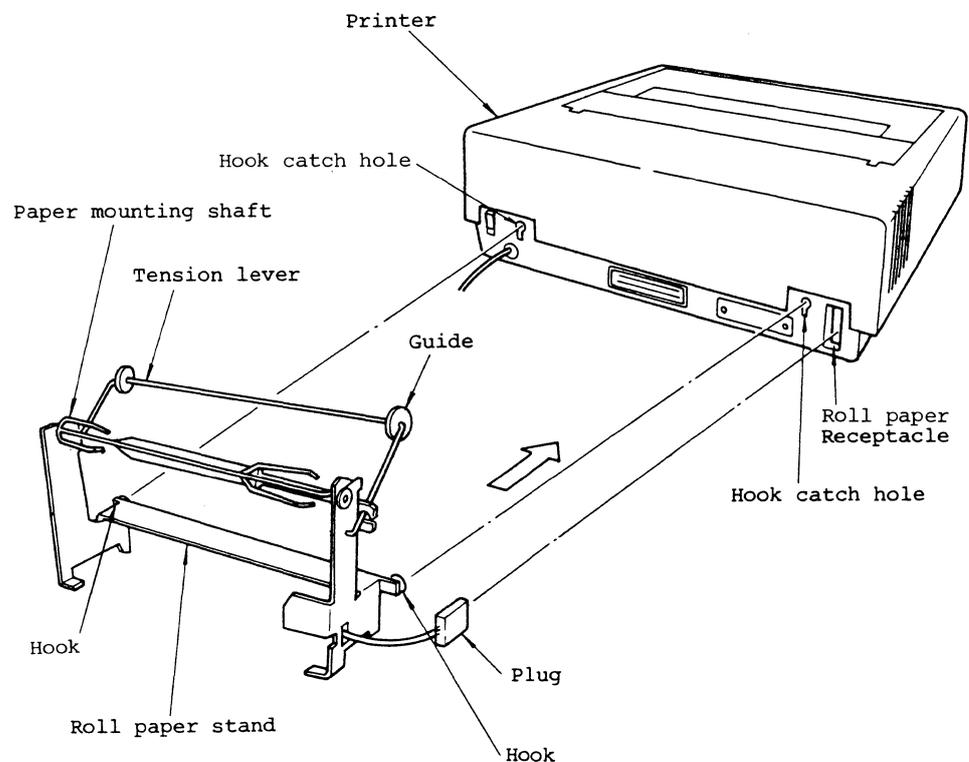



Fig. 3-5 Roll Paper Stand Mounting Method

### 3.6 Ribbon Loading Procedure

- (1) Remove the access cover.
- (2) Remove the used ribbon and discard.
- (3) Loosen the end of a new ribbon. Attach the end of the ribbon to the hook on the empty spool boss, and wind a few turns on the spool.

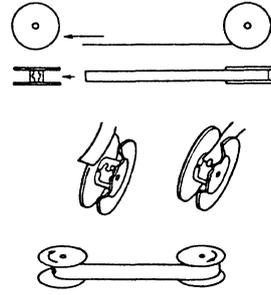

- (4) Mount one ribbon spool on the spool shaft. Make sure that the winding direction is as shown in Fig. 3-6, and that the ribbon drive pin is in the spool hole.

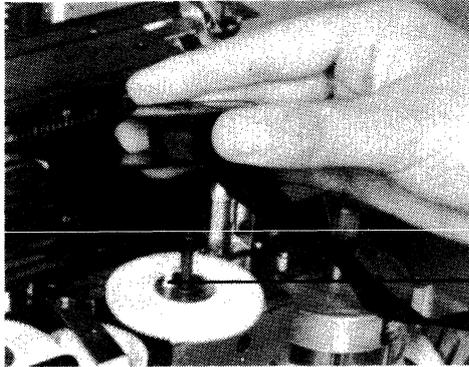

- (5) Thread the ribbon as shown in Fig. 3-6.

Ribbon spool → ribbon guide post → between eyelet control cam and eyelet detector lever → ribbon guide plate → ribbon guide → ribbon guide roller → between print head and ribbon protector → ribbon guide roller → ribbon guide → ribbon guide plate → between eyelet control cam and eyelet detector lever → ribbon guide post

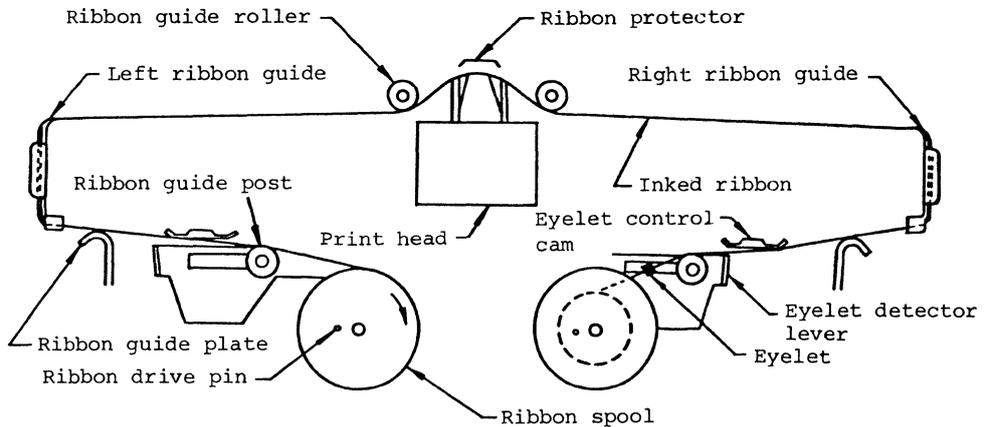


Fig. 3-6 Ribbon Loading Method

- (6) Place the other ribbon spool on the spool shaft, making sure that the ribbon drive pin fits into the hole in the ribbon spool. (Do not twist the ribbon.)
- (7) After the ribbon has been set in place, check that it is not loose. If the ribbon is loose, turn one of the ribbon spools by hand until it is no longer loose.
- (8) Check all the items from (1) to (7) above, to prevent faulty loading.
- (9) Replace the access cover.

NOTE

- 1) Be careful not to deform the ribbon protector when loading the ribbon.
- 2) Assure the ribbon change eyelet is on the spool side of the eyelet detector or lever. If it is not on the spool side, turn the ribbon spool manually to bring it to the spool side.

### 3.7 Paper Loading Procedure

Components related to paper loading are shown in Fig. 3-7.


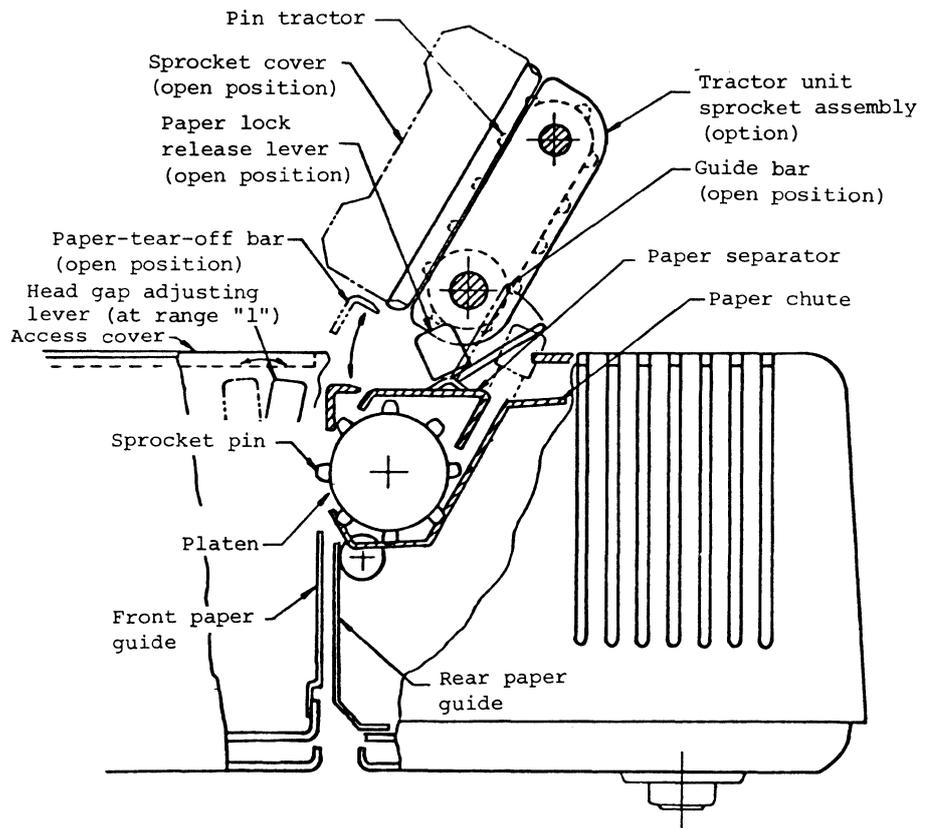


Fig. 3-7 Sprocket Paper Loading Method




### 3.7.1 Single Sheet Loading

- (1) Remove the access cover.
- (2) Set the head gap adjusting lever to the first position.
- (3) Pull the paper lock release lever to the open position.
- (4) Lift the paper-tear-off bar.

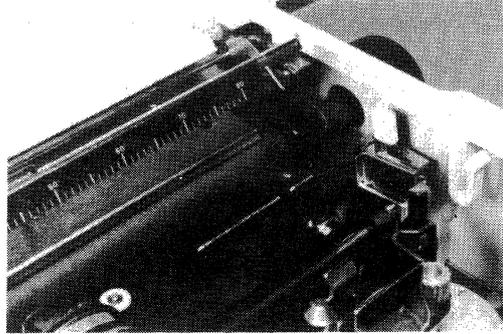

- (5) Insert the paper between the paper chute and the paper separator and appears the paper in front of the platen.

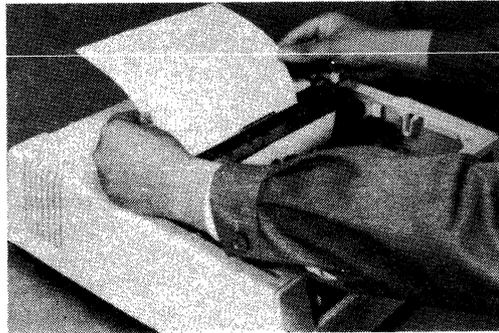

- (6) Tuck the paper under the paper-tear-off-bar and over the guide bar and lower the paper-tear-off bar.

Align the paper.


- (7) Push the paper lock release lever to the closed position.

- (8) Replace access cover.

The single-sheet paper loading procedure is now complete.


#### NOTE

Single-sheet paper cannot be used if the tractor unit is installed.

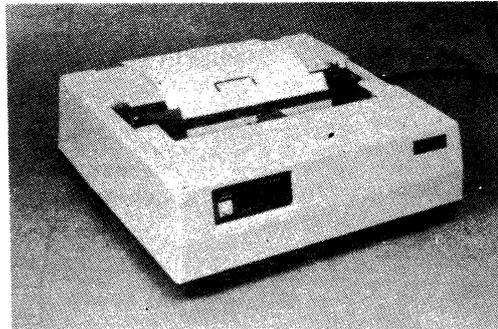


### 3.7.2 Roll Paper Loading


- (1) Remove access cover.
- (2) Insert paper mounting shaft into the roll paper tube. Ensure the paper is facing toward you.

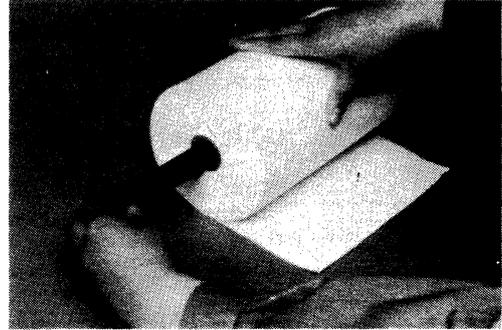


- (3) Set the roll paper on the paper stand.
- (4) Pull the paper lock release lever to the open position.
- (5) Lift the paper-tear-off bar.

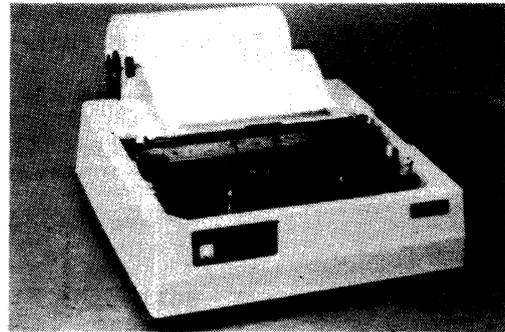

- (6) Set the head gap adjusting lever to the first position.

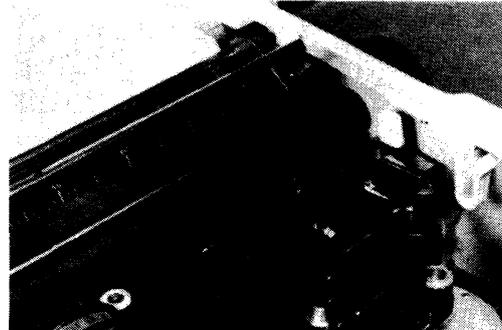

- (7) Insert the paper between the paper chute and paper separator and appears the paper in front of the platen.
- (8) Tuck the paper under the paper-tear-off bar and over the guide bar and lower the paper-tear-off bar.

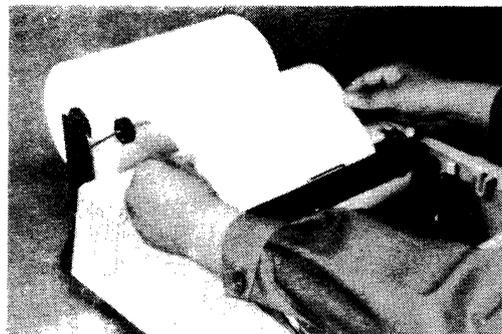


Align the paper.

- (9) Push the paper lock release lever to the closed position.
- (10) Adjust the roll paper stand's right and left paper guides between 0.5 mm and 1 mm away from the paper edges.
- (11) Replace access cover.

The roll-paper loading procedure is now complete.

NOTE

Roll paper cannot be used with the tractor unit installed.

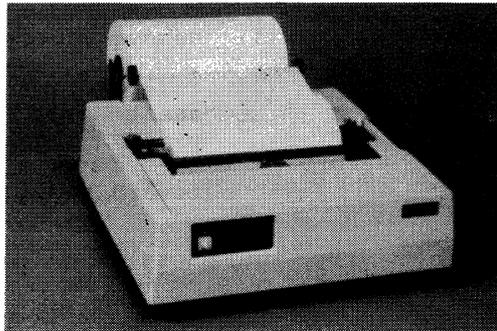


### 3.7.3 Sprocket paper loading without installed tractor unit.

(Remove the roll-paper stand before using sprocket paper.)


(See Fig. 3-8 for proper carton positioning.)

Sprocket paper is loaded as follows when the standard fixed-pin platen is installed:



- (1) Remove the access cover.
- (2) Pull the paper lock release lever to the OPEN position.
- (3) Lift the paper-tear-off bar.

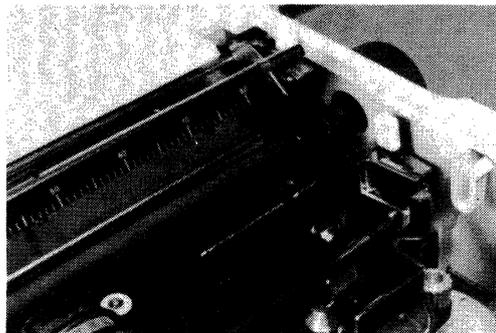

- (4) For rear paper feed, slide the paper between the paper chute and paper separator. Turn the platen knob until the paper appears in front of the platen. Fit the paper sprocket holes over the sprocket pins on either side of the platen.

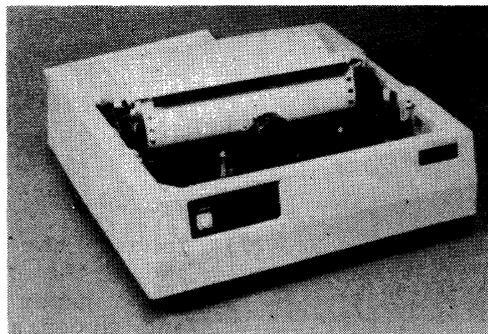

- (5) For bottom paper feed, slide the paper up from the bottom frame hole, between the front paper guide and the rear paper guide, and fit the paper sprocket holes over the sprocket pins on either side of the platen.
- (6) Lower the paper-tear-off bar.
- (7) Leave the paper lock release lever in the open position.
- (8) Turn the paper to the first printing line. Lightly pull the paper backwards to remove slack.

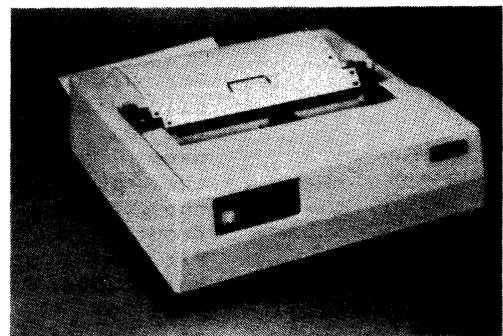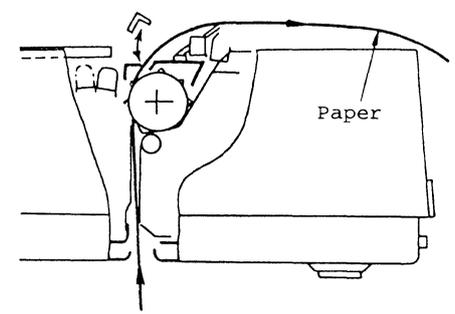

- (9) Set the head gap adjusting lever to either position 1 or 2, depending on the kind and the number of papers. (See Table 3-3.)

Table 3-3 Head Gap Adjusting Lever Positions

Head gap adjusting lever position	Type of paper	No. of sheets
1. Platen side (Gap between the platen and printing head is narrow)	One-part paper	1
	Pressure-sensitive or carbon-lined	2, 3
	Interleaf	2
2. Front side (Gap between the platen and printing head is wide)	Pressure-sensitive or carbon-lined	4
	Interleaf paper	3, 4

- (10) Replace access covers.

NOTE When using sprocket paper, keep the paper lock release lever at the open position.

### 3.7.4 Sprocket loading paper with installed tractor unit


(Remove the roll paper stand before using sprocket paper)

(See Fig. 3-8 for proper carton positioning.)



Sprocket paper with the width of 3 to 9.5 inches is loaded as follows when the tractor unit is installed:

- (1) Remove the access cover.


- (2) Lift the paper-tear-off bar.
- (3) Open the sprocket cover.

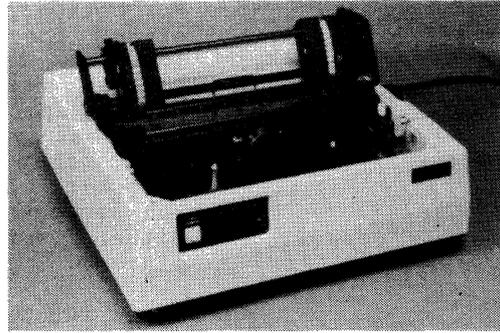

- (4) For rear paper feed, slide the paper between the paper chute and the paper separator. Turn the platen knob until the paper appears in front of the platen. Fit the paper sprocket holes over the sprocket pins of the platen and of the sprocket of the tractor. Should slack occur, push the tractor gear to the left. Keeping the idle gear disengaged, turn the tractor knob in the feed direction. Slack will disappear.

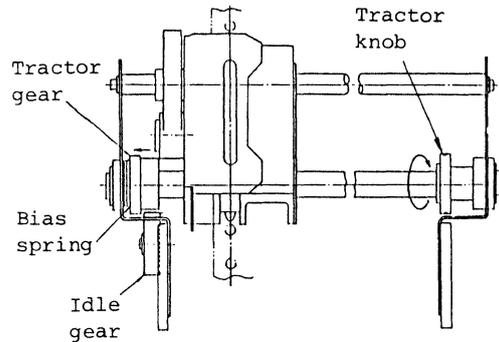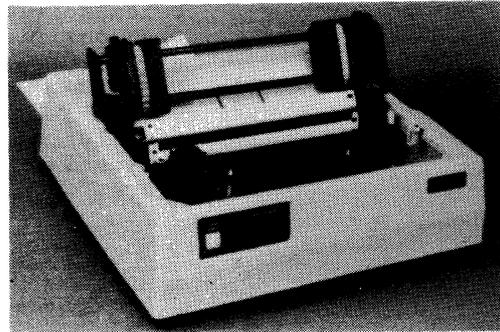

- (5) For bottom paper feed, slide the paper up from the bottom frame hole, between the front paper guide and the rear paper guide and fit the paper sprocket holes over the sprocket pins of the platen and of the sprocket on the tractor.

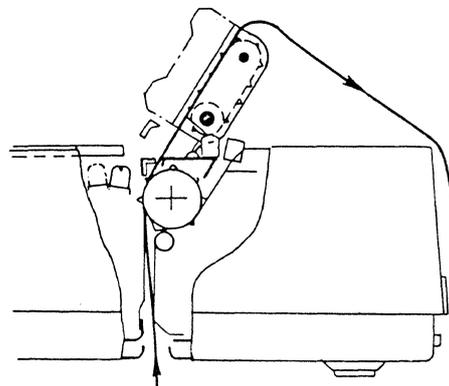

- (6) Close the sprocket cover.
- (7) Open the sprocket lock lever. Align the edges of the paper.
- (8) Close the sprocket lock lever.
- (9) Lower the paper-tear-off bar.
- (10) Turn the platen knob to adjust the paper to the first line. Lightly pull the paper backwards to remove slack.
- (11) Set the head gap adjusting lever to either position 1 or 2, depending on the kind and the number of papers (See Table 3-3.).
- (12) Replace access cover.

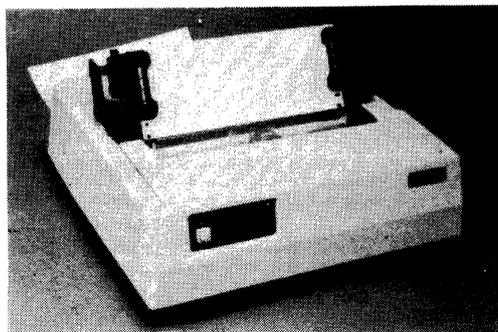


Fig. 3-8 details the positioning of the sprocket paper carton for rear paper feed and for bottom paper feed.


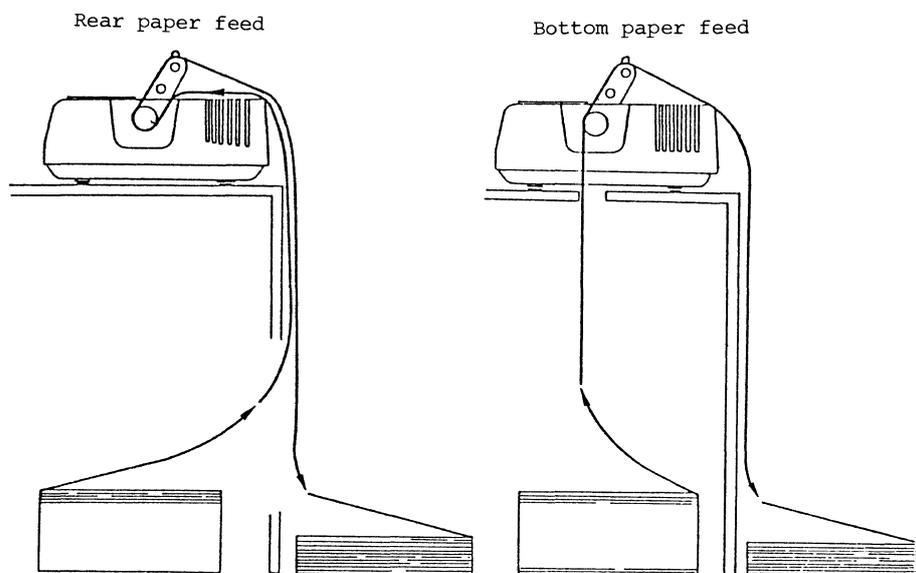



Fig. 3-8 Sprocket Paper Positioning

## NOTE

- 1) When disengaging the sprocket lock lever, put your thumb on the sprocket cover, and disengage the lock lever with your index finger.

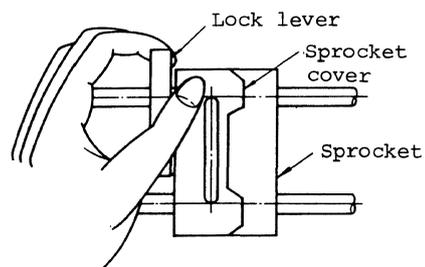

- 2) When locking the sprocket lock lever, push the lock lever with your thumb while holding the shaft with the other fingers.

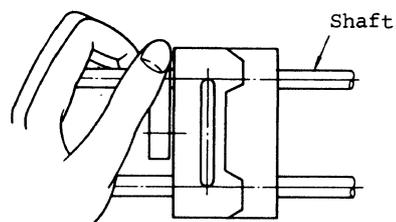

- 3) When using the tractor unit, keep the paper lock release lever set at the front (open) position.
- 4) It is possible to install the tractor unit by loading the paper in advance, and pulling it from the platen.

### 3.8 Operational Precautions

- (1) Ensure that a.c. power supply is in the OFF position before inserting a.c. plug into receptacle. Insert a.c. plug correctly.
- (2) Ensure that a.c. power supply switch is in the OFF position before inserting interface connectors.
- (3) Never print without paper.
- (4) Never print without ribbon. Never use extremely worn-out ribbon.
- (5) Remove the inked ribbon spool when transporting the printer.
- (6) If printer is unused or stored for a long period of time, open the paper lock release lever by pulling forward.
- (7) Align the platen knob with the detent, push it in, and lock it securely.
- (8) Never use fuses other than those specified.
- (9) The printhead is hot within hours of printing. Do not touch it directly.
- (10) Should printing operation stop, check PAPER LED for paper-out condition.
- (11) Do not leave the printer on or plugged-in without intentions to use the printer soon.
- (12) Do not expose the printer to excessively high or low temperatures, temperature variations, dust, or shock.
- (13) When cleaning the printer surfaces, use a small amount of diluted cleaning solution. Do not use organic detergents or abrasive cleansers.
- (14) Neither lean on nor place anything in the printer. If something should drop accidentally into the printer, immediately turn the AC POWER switch to OFF, and carefully remove the foreign object from the printer.



## 4. FUNCTIONS

### 4.1 Function Codes

This printer is controlled by the function codes shown in Table 4-1.

Table 4-1 Function Codes

Command	Function code		Description
	Decimal	Hexadecimal	
LF	10	0A	Moves paper up one line.
CR	13	0D	Returns carriage.
FF	12	0C	Feeds paper to the first line of next format (TOF: top-of-form)
VT Channel No.	11. 49 to 60	0B. 31 to 3C	Feeds paper to tab position of same channel number as set in VFU.
DC1	17	11	Sets the printer in select (on line) condition.
DC3	19	13	Releases the printer from select condition, and sets it in deselect (off-line) condition.
DC4	20	14	Loads tab position in VFU.
RS	30	1E	Designates 10 CPI.
GS	29	1D	Designates 16.5 CPI.
US	31	1F	Designates wider characters.
ESC, VT. 0.0 to 9.9	27.11 48.48 to 57.57	1B.0B 30.30 to 39.39	Directly skips as many as the designated number of lines
ESC.F. 0.0 to 9.9	27.70 48.48 to 57.57	1B.46 30.30 to 39.39	Designates the number of lines for page length.
ESC.5	27.53	1B.35	Sets TOF (first line of printing).
ESC.6	27.54	1B.36	Designates 6 LPI.
ESC.8	27.56	1B.38	Designates 8 LPI.
ESC.A	27.65	1B.41	Designates long line.
ESC.B	27.66	1B.42	Designates short line.
SO	14	0E	Shifts out character set in case of 7-bit code.
SI	15	0F	Shifts in character set in case of 7-bit code.
CAN	24	18	Clears buffer.

### 4.2 Character Sets

Any of the 10 kinds of character sets shown in Table 4-6 can be selected by combination of the DIP switches SW1 through SW4 on the operating panel circuit board.

Character and graphic allocations are as shown in Table 4-2. The optional character set can be selected by replacing the standard character generator with a character generator containing the desired characters.

Table 4-2

Kind	8 bits		7 bits	
	b8 = 0	b8 = 1	SI side	SO side
Standard (US ASCII to TRS-80)	Alphanumeric, symbols, lower case	Graphic	Alphanumeric, symbols, lower case	Graphic
Option	Characters (94) *	Characters (94)	Characters (94)	Characters (94)

\* SP and DEL not included

### 4.3 Data Receiving and Printing System

Conditions for printing start, carriage return, and line change are as follows:

- (1) CR only is received: Ignored
- (2) LF only is received: Line spacing only.
- (3) Data and LF are received: The printer prints data, moves the paper up one line, and automatically returns the carriage.
- (4) Data and CR are received: As shown in the table below.

DIP SW6 on operating panel	Operation
ON	After printing data, the printer moves the paper up one line, and returns the carriage automatically.
OFF	After printing data, the printer returns the carriage automatically, but does not move the paper up (except where graphic code is included, in which case the paper is moved up one line).

- (5) Data, CR, and LF are received: As shown in the table below.

DIP SW6 on operating panel	Operation
ON	After printing data, the printer returns the carriage automatically, and moves the paper up two lines.
OFF	After printing data, the printer returns the carriage automatically, and moves the paper up one line.

- (6) Data, LF, and CR are received: The printer prints data, moves the paper up one line, and automatically returns the carriage.
- (7) FF only is received: Form feed
- (8) VT and channel number are received: Vertical tab operation

- (9) Data and FF are received: Form feed after printing
- (10) Data, VT, and channel number are received: Vertical tab operation after data printing

NOTE

- 1) Any code not listed in the character set table is ignored.
- 2) The number of data characters is 80 or less (10 CPI), or 132 or less (16.5 CPI). See Table 4-4 for the number of characters per line.
- 3) If the number of data characters is more than can be printed in a line, that is 81 (10 CPI) or more, or 133 (16.5 CPI) or more, the excess characters are automatically carried over to the next line.
- 4) Only item (4) differs in cases where a graphic code is included in the input data.

#### 4.4 Graphic Printing

As shown in Fig. 4-1, a block is formed of character and line pitches, and divided into 6 minimum units. These units are combined to form graphic figures. Input code bits b1 to b6 are allocated to each of the 6 divided units. If any of these bits is "1", the units are printed.

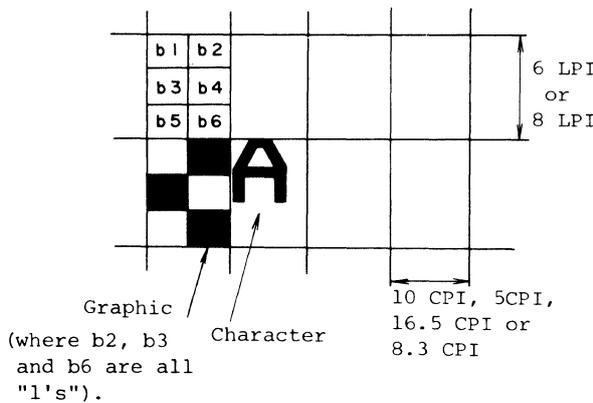


Fig. 4-1 Graphic Printing

In graphic printing, the number of vertical dots is 12 (6 LPI) or 9 (8 LPI) so that the line is changed twice to print the upper half and the lower half.

Mixed printing of graphic figures and characters is also possible the number of dots in each unit is as shown in Appendix G.

#### 4.5 Vertical Tab Function

This printer has an electronic VFU (vertical format unit), and 12 different formats are stored in the memory. (cleared by POWER OFF.)

#### 4.5.1 Vertical Tab Setting

The paper is fed to the tab position for the selected channel number according to the format loaded as mentioned in 4.5.2 as VT and channel number codes are received.

The channel numbers range from 1 to 12; the corresponding codes are as shown in Table 4-3.

Table 4-3


Channel No.	Code	Channel No.	Code
1	1	7	7
2	2	8	8
3	3	9	9
4	4	10	:
5	5	11	;
6	6	12	<

NOTE

- 1) If no format is loaded, or if the input channel number code is not listed in Table 4-3, it is ignored.
- 2) If a channel number not stored in the memory is selected, it is ignored.

#### 4.5.2 Format Loading Method


After switching the power on, input data in the format shown below, and set the tab.

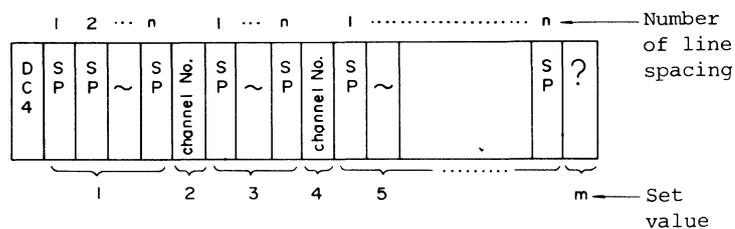

DC4 is the start code, and ? is the end code.

Input as many SP codes as required for the desired number of lines up to the tab positions, and select channel numbers for the tab positions. Because of the RAM capacity, the set value "m" must be 54 or less, and the number of line spacing "n" must be 128 or less.

[Example]

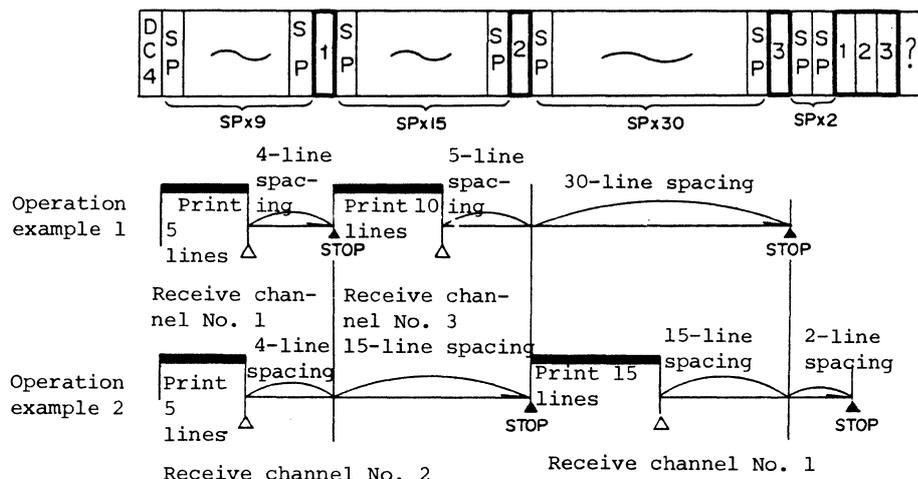

(1) Description of operation example 1

After printing 5 lines and receiving channel No. 1, the paper stops after spacing 4 (9 - 5) lines. Then, after printing 10 lines and receiving channel No. 3, the paper stops after spacing 35 (15 - 10 + 30) lines.

(2) Description of operation example 2

After printing 5 lines and receiving channel No. 2, the paper stops after spacing 19 (9 - 5 + 15) lines. Then, after printing 15 lines and receiving channel No. 1, the paper stops after spacing 17 (30 - 15 + 2) lines.

#### 4.5.3 Direct Skip Function

If any of the following function codes is received, the paper will be fed as many lines as the number selected.

ESC, VT, X1, X2

X1 and X2 are digits, 0 through 9, representing the number of lines to skipped. Any number from 0 to 99 can be selected by combination of X1 and X2.

## 4.6 Top-of-Form (TOF)

The top-of-form function refers to a function by which the printer, upon receiving the FF code after format length and top-of-form have been set as mentioned in 4.6.1 and 4.6.2, rapidly feeds the paper up to the top-of-form of the next format.

### 4.6.1 Format Length Setting

Select a format length (page length) with the rotary switch on the operating panel or by function codes.

(1) Selection with the rotary switch

Any of the 10 format lengths shown in Table 3-2 can be selected.

(2) Selection by Function Codes

A format length can be selected by inputting the following codes from the outside:

ESC, F, X1, X2

X1 and X2 are digits, 0 through 9, representing the number of lines per page. Any number from 0 to 99 can be selected by the combination of X1 and X2.

NOTE

- 1) The rotary switch is ineffective if function codes are used for format length selection. The rotary switch is made effective again by applying the function codes ESC, F, O, and O.
- 2) Immediately after power is switched on, the format length represented by the rotary switch position at that time is selected.

4.6.2 Top-of-Form (TOF) Position Setting.

The first printing line can be set by depressing the TOF SET switch or selecting the codes ESC and 5.

The paper position where the TOF switch is depressed or the specified codes are applied will be the top-of-form.

Format length is also selected at the same time, and remains unchanged until the switch is depressed again or the specified codes are applied.

Therefore, format length does not change only by switching the rotary switch.

NOTE

- 1) Immediately after power is switched on, the format length represented by the rotary switch position at that time is selected, and the paper position at that time is the TOF position.
- 2) If current pitch is changed before a page is finished, the number of lines is counted by the number of line spaces before changing until the top of form position is reached. It is from the next page that the count of lines at the newly selected line space pitch begins.

## 4.7 Character Pitch Selection

The number of characters per inch in a line can be changed by using the following function codes (this applies to both characters and graphics, and character width changes proportionately):

(1) RS: 10 CPI (Normal characters)

(2) GS: 16.5 CPI (Reduced characters)

Character pitch is changed by the function codes after a line, not halfway in a line.

If the function codes for character pitch change come continuously in a line, the last function code is valid.



#### 4.11 Select, Deselect Function

When SEL LED is off, depressing of SEL switch or receipt of DC1 code makes the SEL LED illuminate, and the printer is set in select condition. Subsequent input data for the line are printed.

When SEL LED is on, depressing of SEL switch or receipt of DC3 code makes the SEL LED turned off, and the printer is set in deselect (off-line) condition, and ignores input code other than DC1 code.

If the SEL switch is depressed or the DC3 code is received while the printer is printing out input data in a line, the printer becomes deselected (off-line) after inputting and printing the data to the end of that line.

##### NOTE

The printer is set in select (ready for receiving) condition when power is supplied.

#### 4.12 Buffer Clear Function

When the CAN code is received, the data before CAN code of the line being received is cleared.

The function code is executed, but enlarged character printing is released, and the 7-bit shift is changed to the SI side.

#### 4.13 DEL Code

The DEL code is either ignored or accepted for printing the mark DEL as selected with DIP switch SW7, as shown in Table 4-5. In case of the character sets TRS-80, the space for the DEL mark is left blank.

#### 4.14 Paper-End Function

A microswitch detects the paper out when it is about 50 mm (2") from the printing position, in case of rear paper feed. In case of bottom paper feed, paper out is detected at about 25 mm (1") from the printing position.

Due to input speed differences, etc., 3 to 5 lines can be printed after paper-end detection. After printing, a paper-end signal is sent to the interface, the PAPER LED lights, and the printer stops.

##### NOTE

When the optional roll paper stand is mounted, the paper low detection process and subsequent operations are the same as described above.

#### 4.15 Initial Reset Condition

The printer is set to the following initial conditions when the power is switched on, or as the I-PRIME signal is received from the parallel interface:

- (1) Printing pitch: 10 CPI
- (2) Line space pitch: 6 LPI

- (3) Number of characters per shift: Long line
- (4) Shift: SI (in case of 7 bits)
- (5) Select/deselect: Select (ready for receiving)  
Note: Not at paper-out or paper low.
- (6) Page length: Set at the position designated by rotary switch.

## 4.16 Communication Function Selection

The following functions of low speed (L.S.) serial interface can be selected.

### 4.16.1 SSD Signal Polarity Switching

SSD signal polarity can be switched to the mark (low-level) signal or space (high-level) signal with DIP switch SW1, as shown in Table 4-7.

### 4.16.2 Transmitting Speed Setting

Transmitting speeds of 110 BPS to 1200 BPS shown in Table 4-8 can be selected with DIP switches SW2 to SW4.

### 4.16.3 DTR Signal Switching

DTR signals can be switched by a jumper plug (SPI) according to the purpose of use, as follows: (Refer to Table 4-9.)

- (1) Space (ON) at the time of power on.
- (2) Space (ON) at the time of select (ready for receiving)

### 4.16.4 Code Bit Switching

By the DIP switch SW5, in Table 4-5, 8 or 7 bits can be selected.

### 4.16.5 Parity Bit Selection

By the DIP switch SW6 in Table 4-7, existence or non-existence of parity bit can be selected.

## 4.17 Functions of Switches, Buttons, and Others

Remove the upper cover for operation of these switches and buttons.

### 4.17.1 DIP Switches

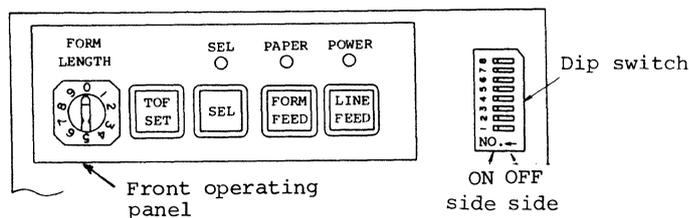


Fig. 4-2 DIP Switches on Operation Panel Circuit Board

Table 4-5 DIP Switches on Operation Panel Circuit Board

DIP Switch	ON	OFF
SW1	Character set See Table 4-6	
SW2		
SW3		
SW4		
SW5	7 bits	8 bits
SW6	As CR is received, printer prints, automatically returns carriage, and moves paper up one line.	As CR is received, printer prints, and automatically returns carriage.
SW7	As DEL code is received, printer prints ■.	Printer ignores DEL code.
SW8	Low-speed serial interface effective.	Parallel interface effective.

Table 4-6 Table of Character Sets

No.	SW1	DIP Switch			Kind
		SW2	SW3	SW4	
1					US ASCII
2	ON				Unused
3		ON			BRITISH
4	ON	ON			GERMAN
5			ON		FRENCH
6	ON		ON		SWEDISH
7		ON	ON		DANISH
8	ON	ON	ON		NORWEGIAN
9				ON	NETHERLANDISH
10	ON			ON	ITALIAN
11		ON		ON	TRS-80
12	ON	ON		ON	Unused
13			ON	ON	Unused
14	ON		ON	ON	Unused
15		ON	ON	ON	Unused
16	ON	ON	ON	ON	Option

Note: ON means that SW is in the ON position.

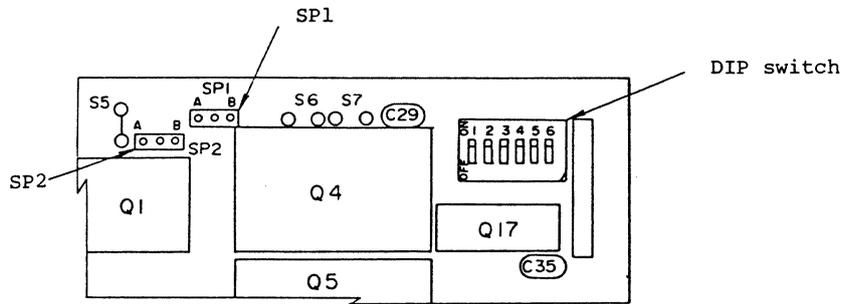


Fig. 4-3 DIP Switches and Jumper Plugs on Control Circuit Board

Table 4-7 DIP Switches (for L.S. serial interface) on Control Circuit Board

Switch	ON	OFF
SW1	SSD polarity (Space when ready, mark when busy).	SSD polarity (Mark when ready, space when busy).
SW2	Transmitting speed setting See Table 4-8.	
SW3		
SW4		
SW5	Unused	Unused
SW6	Parity	No parity

Table 4-8 Transmitting Speed Switching

DIP Switch			Transmitting Speed (bits/second)
SW2	SW3	SW4	
			110
ON			150
	ON		200
ON	ON		300
		ON	600
ON		ON	1200


Note: ON means that SW is in the ON position.

### 4.17.2 Jumper Plugs

Table 4-9

Direction Plug	Side A	Side B	Use
SP1	DTR signal is for space (ON) under select (ready for receiving) condition	DTR signal is for space (ON) after power on.	L.S. serial interface
SP2	Bit 8 supplied by external controller	Supplies grounding to DATA BIT-8	Parallel interface

Note: Selection of A or B side can be performed as follows:

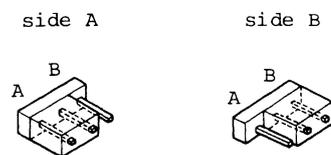

### 4.17.3 Breaker

A built-in breaker is mounted on the power source circuit board on the rear right of the printer, to protect the printer from the input current.


When the breaker trips, all operations of the printer halts. Check the causes and take appropriate measures, then, push the button and reset the breaker.

Power source voltage  
select switch


Breaker



(200 V Type)

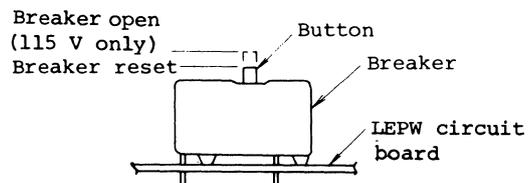

Breaker

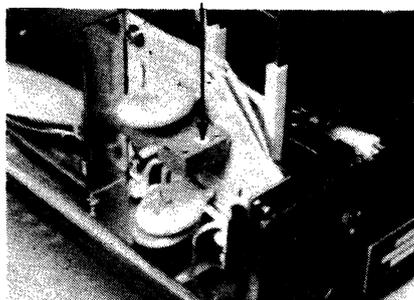

(For 115 V)

Fig. 4-4 Breaker, Power Source Voltage Selector Switch

#### 4.17.4 Power Source Voltage Selector Switch

A sliding switch for power source voltage selection is mounted on the power source circuit board on the rear right of the printer. Set the switch according to AC input voltage, as follows: (Refer to Figs. 4-4 and 4-5).

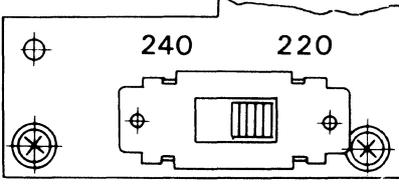
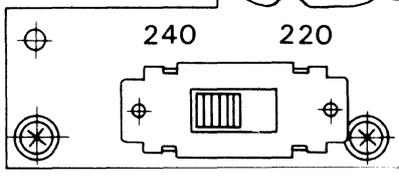
Type	Power source voltage select switch position	A.C. input voltage
200 v type		220 v
		230 v or 240 v

Fig. 4-5

## 5. THEORY OF OPERATION

### 5.1 Operation of the Mechanical Section

The mechanical section consists of the following:

- (a) Print head
- (b) Carriage assembly
- (c) Ribbon feed mechanism
- (d) Paper feed mechanism

#### 5.1.1 Mechanism and Operation of Print Head

The print head is a spring-loaded type, utilizing a permanent magnet, and can be easily removed and installed. It is mounted on the carriage which runs parallel to the platen. The print head is electrically connected to the circuit board at connector CN2.

The print head consists of the following (See Fig. 5-1):

- (a) Wire guide
  - (b) Yoke
  - (c) Armature assembly
  - (d) Spacer
  - (e) Magnet assembly
  - (f) Thermistor
- (1) Print head operation (See Fig. 5-1.)

When not operating, the armature is attracted by the permanent magnet, and an armature spring fixing the armature is bending by thickness of a spacer. Therefore, the print wire which is fixed to the armature is held retracted within the wire guide. When a character to be printed (Appendix B) is detected by the control circuit, a current flows to the coil which corresponds to that print wire. When the coil is energized, the magnetic flux generated by the permanent magnet between the armature and pole is nullified, and an attraction is disappeared. As a result, the print wire is driven toward the platen by force of the armature spring. The print wire fixed on the armature ejects from the tip of the wire guide to hit EP15 paper and the platen surface through an inked ribbon. Thus a dot is printed on the paper.

After printing the character, the magnetic flux of the permanent magnet attracts the armature again so the print wire is retracted into the wire guide.

The print head has a built-in thermistor to prevent the coil from overheating and burning in continuous printing in both directions for a long time. If the coil exceeds a specific temperature, the control circuit detects that signal, and switches the spacing from bidirectional to unidirectional printing until the coil temperature falls below that temperature. At the same time, printing is stopped for 0.7 second (1.4 seconds for Graphics) every time after printing one line.

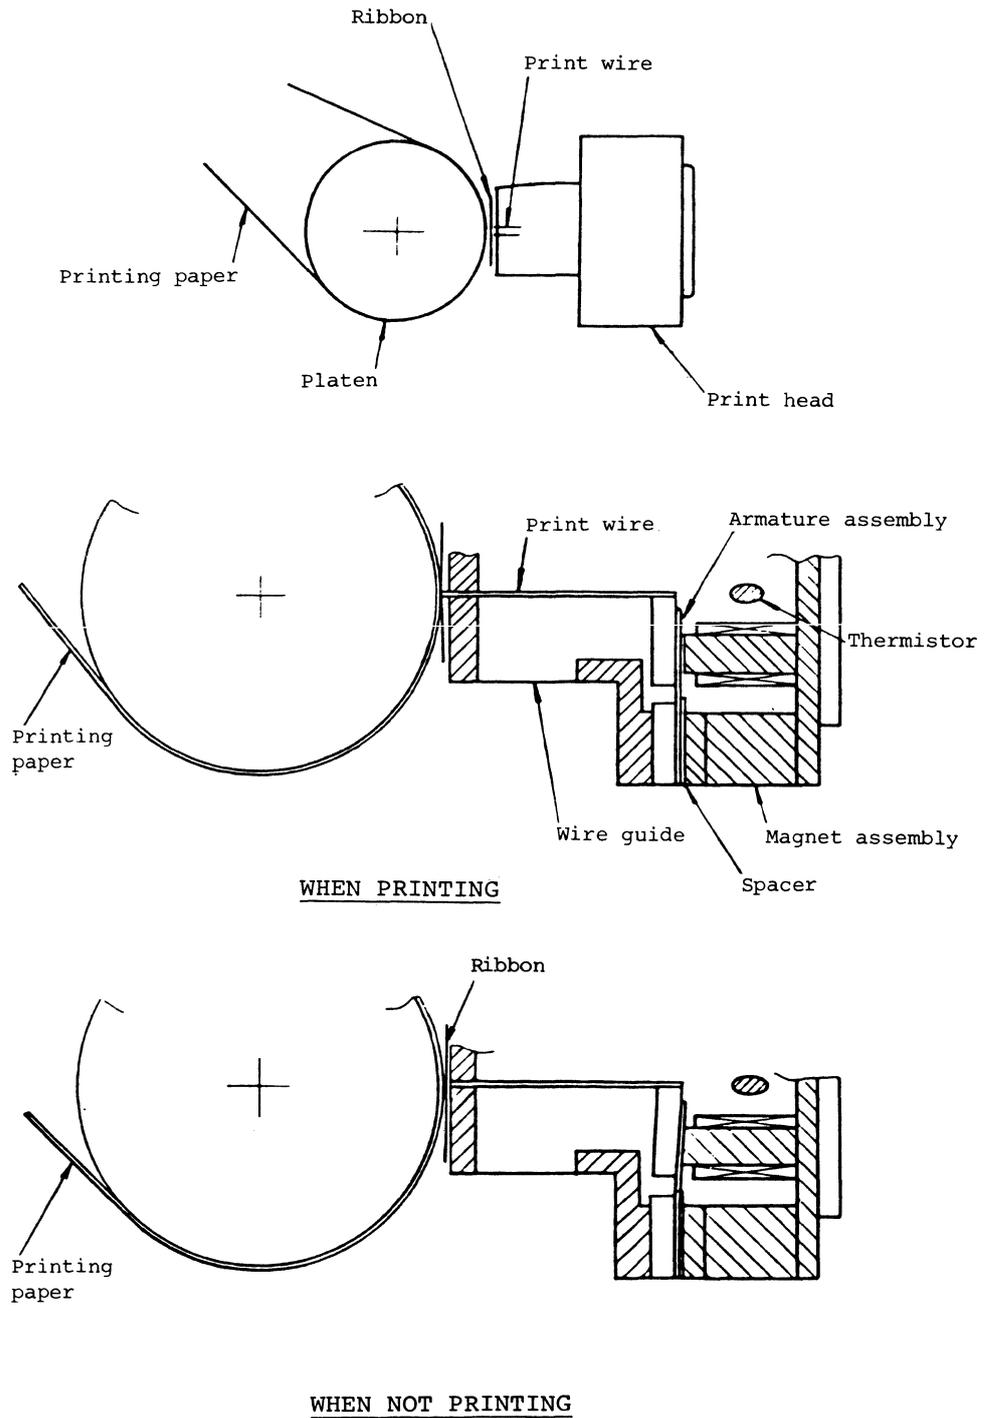


Fig. 5-1 Printing Mechanism

### 5.1.2 Space Mechanism and Operation

Spacing and carriage return are performed by driving the carriage, which is guided by two carriage shafts mounted parallel to the platen, by a stepper motor.

The space mechanism is composed of the following:

- (a) Stepper motor with synchro belt pulley
- (b) Synchro belt
- (c) Two carriage shafts
- (d) Carriage
- (e) Home sensor
- (f) Home sensor plate

(1) Spacing operation (See Fig. 5-2.)

The carriage with the print head mounted on it moves parallel to the platen along the upper and lower carriage shafts, and one end of the carriage frame is fixed to the synchro belt.

As the stepper motor turns clockwise, the carriage assembly is driven from left to right.

The spacing mechanism is so designed that, when the stepper motor turns 12 steps ( $21.6^\circ$ ), the carriage moves 2.54 mm (10 CPI).

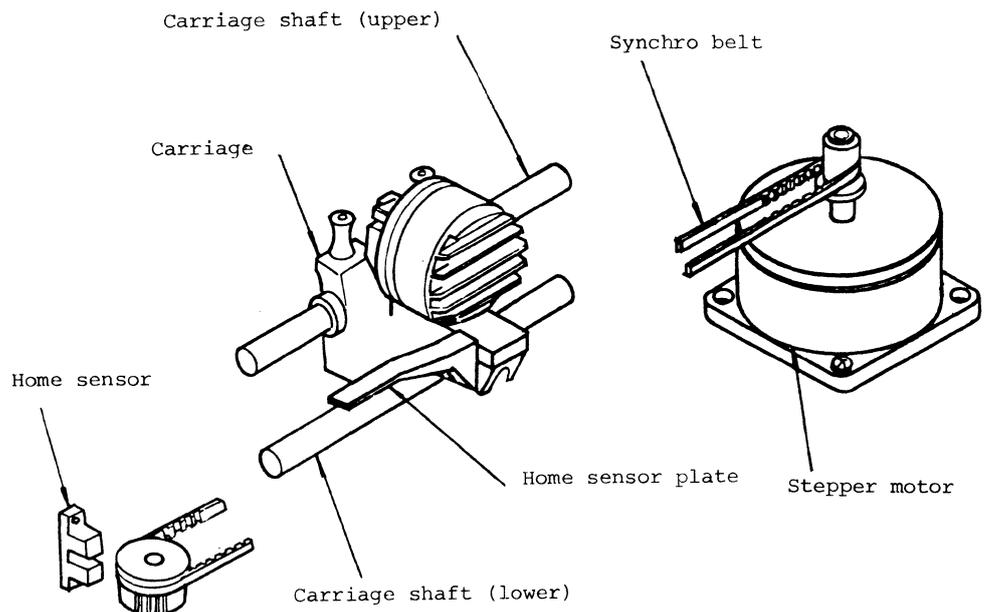


Fig. 5-2 Spacing Mechanism



(2) Carriage return operation

When the carriage return (CR) code is received, the stepper motor is driven counterclockwise by the signal from the control circuit. The carriage moves from right to left until the home sensor plate enters the opening in the home sensor.

The home sensor consists of an LED photodiode pair. When the home sensor plate enters the sensor, the light is interrupted and a signal is generated to stop the motor. When the stepper motor stops, the carriage stays at the start position until the next print line is ready to be printed.

5.1.3 Ribbon Feed Mechanism and Operation

The stepper motor for driving the carriage provides the power to feed the ribbon.

The ribbon feed mechanism consists of the following:

- (a) Ribbon drive gear
- (b) Ribbon gear
- (c) Ribbon spool gear
- (d) Ribbon change lever
- (e) Eyelet detector lever
- (f) Ribbon bracket

(1) Ribbon feed operation (See Fig. 5-3-(1), -(2).)

If the stepper motor runs clockwise (carriage moves from left to right) when the ribbon change lever is at the left, the ribbon drive gear runs clockwise via the drive belt. The ribbon gear rotates freely about the ribbon drive gear until it engages the left ribbon spool gear to turn the left ribbon spool clockwise, and feed the ribbon to the left.

When the stepper motor turns counterclockwise (carriage moves from right to left) as the CR signal is received, the ribbon gear rotates freely about the ribbon drive gear, and is disengaged from the ribbon spool via the elongated slot in the change lever, so the ribbon is no longer fed.


When the ribbon in the right ribbon spool runs short, the ribbon reverse eyelet on the right is caught between the eyelet control cam and the ribbon reverse arm to shift the ribbon reverse arm from left to right.

When the ribbon reverse arm shifts, the detent spring causes the ribbon change lever to turn from left to right. When the stepper motor runs clockwise (carriage moves from left to right), the ribbon gear rotates freely about the ribbon drive gear and is disengaged as previously described.


When the stepper motor is driven counterclockwise, the carriage moves from right to left by the CR signal. The ribbon gear engages the right ribbon spool gear to turn the right ribbon spool counterclockwise and thus feed the ribbon to the right.

When the ribbon in the left ribbon spool runs short, the ribbon reverse eyelet on the left is caught between the eyelet control cam and the eyelet detector to move the eyelet detector lever from right to left. When the eyelet detector lever shifts, the detent spring causes the ribbon change lever to turn from right to left.

The above-mentioned process is repeated to feed the ribbon.

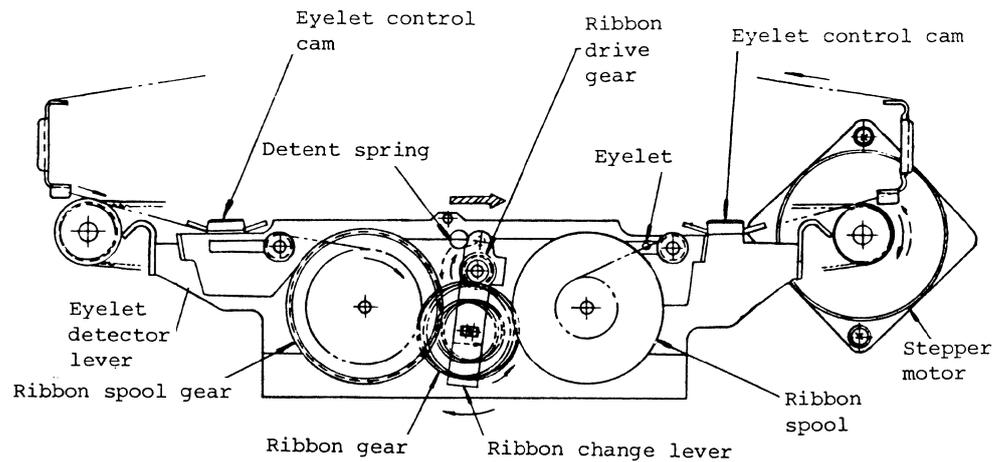

(1) Ribbon Feed to Left

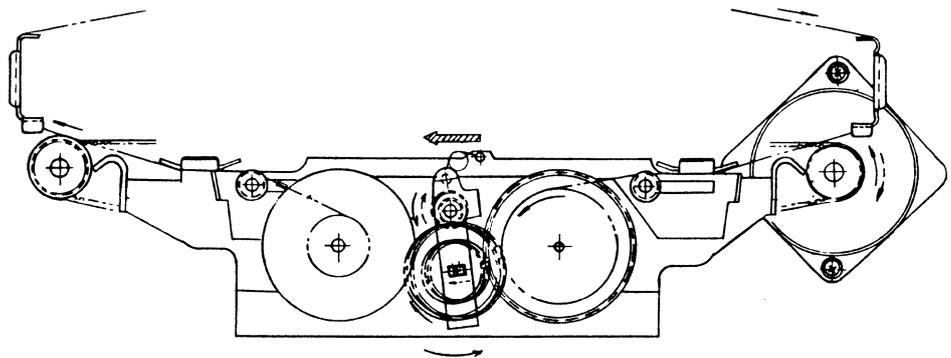

(2) Ribbon Feed to Right

Fig. 5-3 Ribbon Feed Mechanism

#### 5.1.4 Paper Feed Mechanism and Operation

The printed paper is moved up to the next line as the stepper motor runs to mesh the gears and rotate the fixed pin platen and tractor unit (option).

The paper feed mechanism consists of the following:

- (a) Stepper motor with gear
  - (b) Reduction gear
  - (c) Fixed pin platen
  - (d) Tractor unit (option)
- (1) Paper feed operation (See Fig. 5-4.)

The paper feed stepper motor is mounted on the left side frame, and its rotation is transmitted to the platen via the reduction gear. The rotation of the platen is also transferred to the tractor unit (option) via the transmission gear.

The mechanism is so designed that the paper is fed 4.23 mm (1/6 inch) (6 LPI) when the stepper motor advances 24 steps (180°).

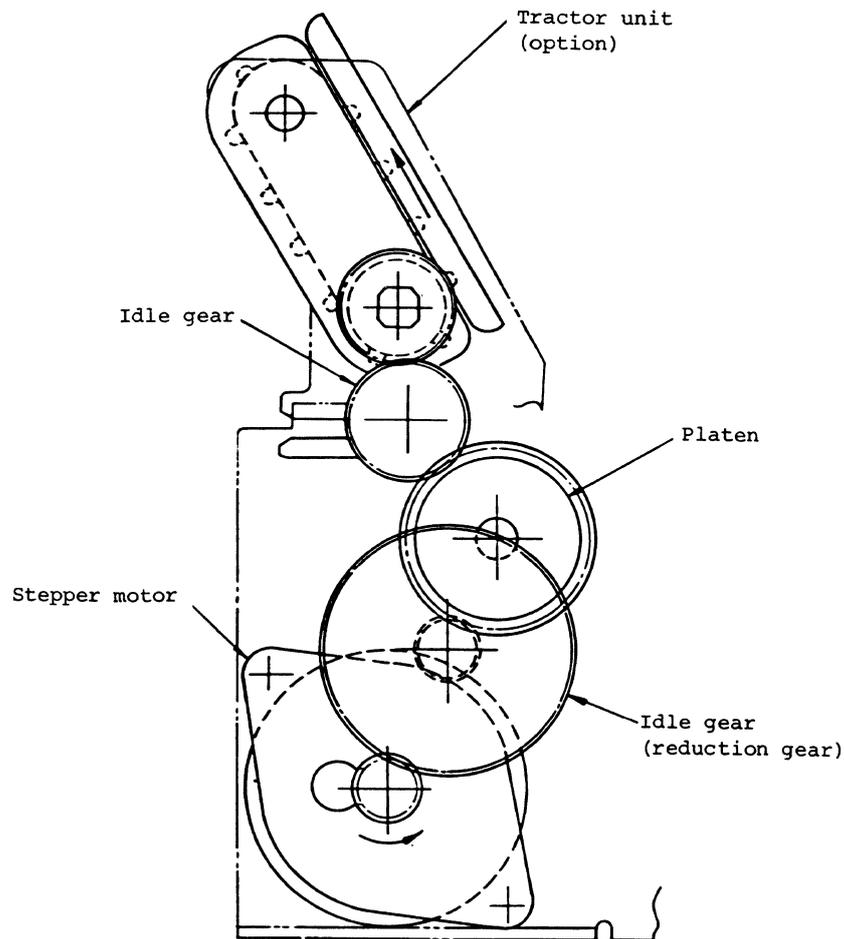


Fig. 5-4 Paper Feed Mechanism

5.1.5 Paper Lock Release Mechanism (See Fig. 5-5.)

When the paper lock release lever is moved forward (open position), the roller support shaft turns counterclockwise, and a gap is made between the pressure rollers and platen, allowing insertion of the paper.

When the paper lock release lever is moved backward (closed position), the roller support shaft turns clockwise, and the pressure rollers are pushed against the platen by the feed roller spring, so paper can be fed.

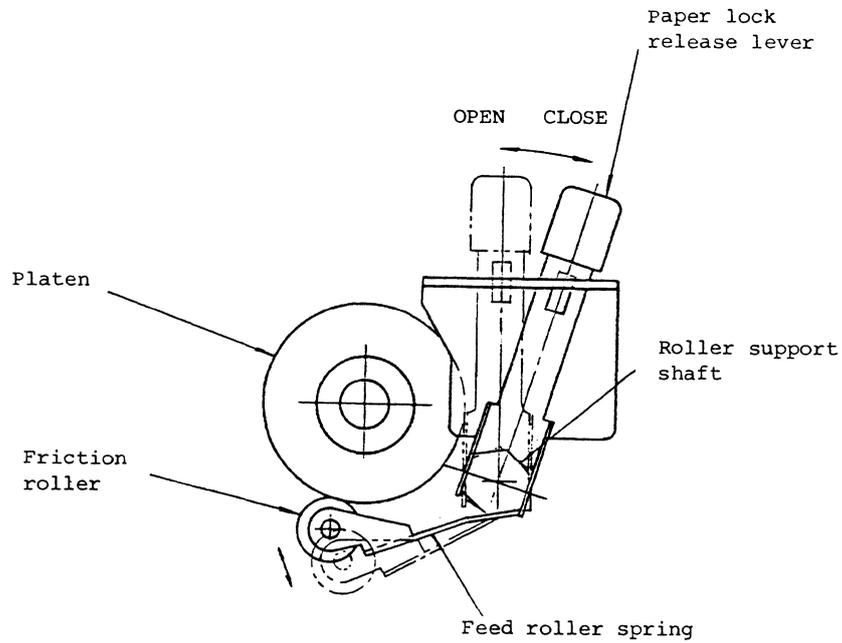


Fig. 5-5 Paper Lock Release Mechanism

### 5.1.6 Paper Out Detecting Mechanism (See Fig. 5-6.)

(1) In case of rear paper feed

When the paper is being inserted, the paper prevents the actuator of the microswitch from falling into the groove of the paper separator, and the microswitch is under OFF condition (microswitch is not pushed). When the paper is out, the actuator falls into the groove of the paper separator, and the microswitch becomes ON (microswitch is pushed), to detect paper out.

With the rear paper feed, paper out is detected with the remaining paper length of 50.8 mm (2 inches).

(2) In case of bottom paper feed

When the paper is being inserted, the paper prevents the actuator of the microswitch from falling into the hole of the front paper guide, and the microswitch is under OFF condition (microswitch is not pushed). When the paper is out, the actuator falls into the hole of the front paper guide, and the microswitch becomes ON (microswitch is pushed), to detect paper out.

With the bottom paper feed, paper out is detected with the remaining paper length of 25.4 mm (1 inch).

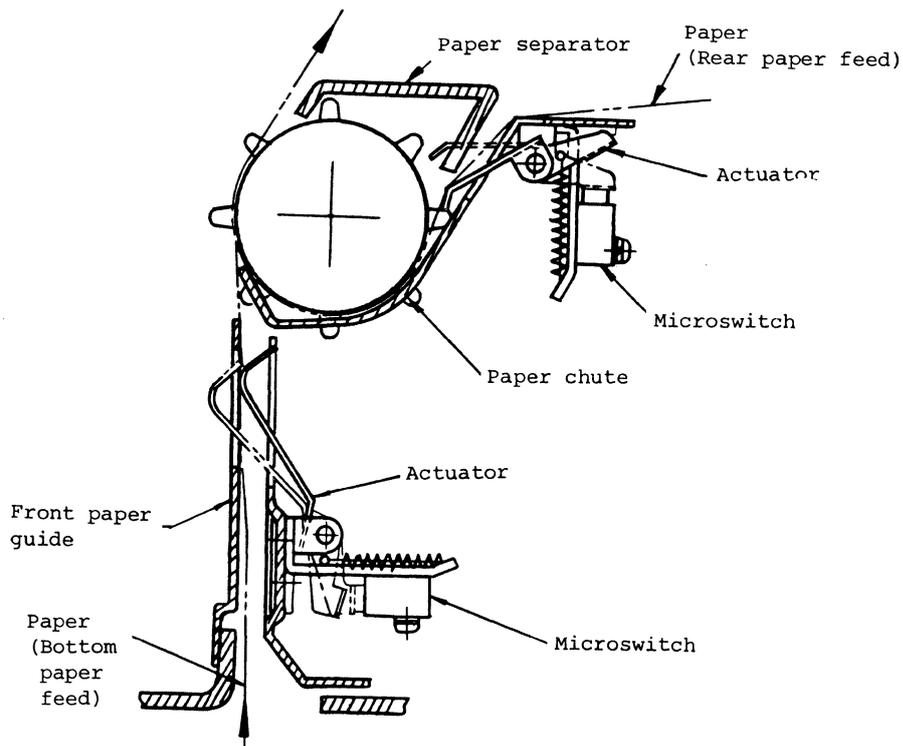


Fig. 5-6 Paper Out Detecting Mechanism

5.1.7 Head Gap Adjusting Mechanism (See Fig. 5-7.)

The head gap adjusting mechanism changes the gap between the platen and print head by turning the eccentric collars fixed to the both sides of the upper carriage shaft.

The eccentric collars are fitted into the side frame holes and the upper carriage shaft is fixed via eccentric-locking bolts. The head gap adjusting lever is fixed to the upper carriage shaft and can be locked in either of the two grooves of the head gap adjusting bracket.

As seen in Fig. 5-7, when the eccentric collar is turned clockwise, the upper carriage shaft comes closer to the platen, due to the eccentrics. When turned counterclockwise, it moves away from the platen.

When the eccentrics are adjusted to the proper head gap, the eccentric-locking bolts are tightened to maintain the gap.

Mechanically, shifting of the head gap adjusting lever changes the gap between the platen and printing head by 0.15 mm.

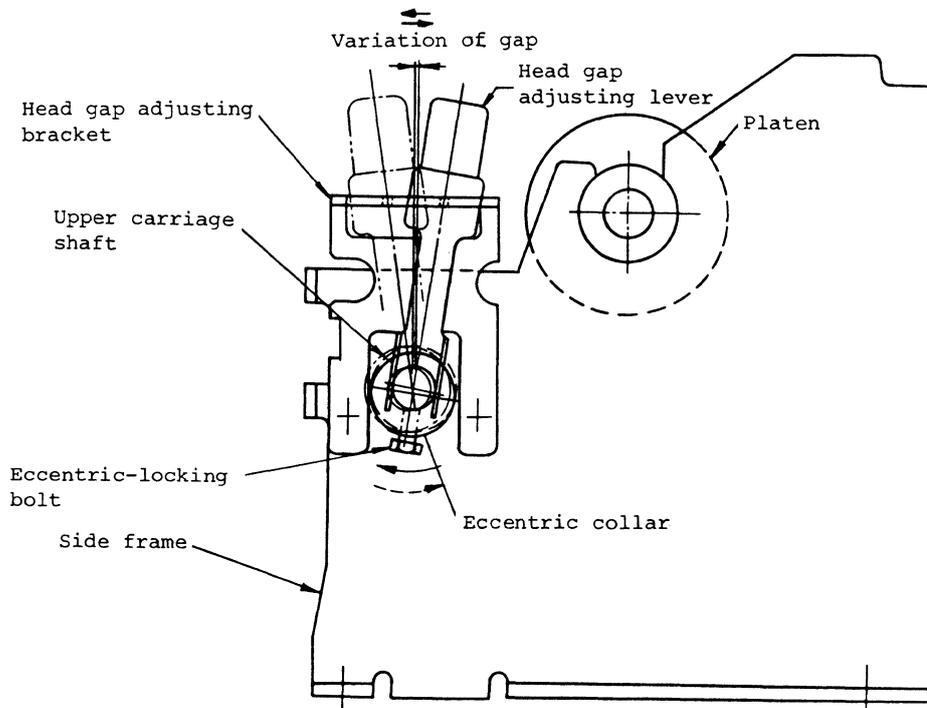


Fig. 5-7 Head Gap Adjusting Mechanism



## 5.2 Operation of the Control Section

### 5.2.1 General

A block diagram of the printer is shown in Fig. 5-8.

The control section consists of a single printed circuit board, and controls the mechanical section. The microcomputer (micro CPU) handles all control operations. Other basic components include a 256 RAM with an I/O port serving as an input data buffer; serial interface control; ROM which stores character patterns; and another ROM which stores information as a converter for selecting various kinds of characters.

Input data from the interface is first written into the RAM, where it is stored. When data for one line has been received the printer starts printing.

When printing starts, the space motor runs to move the carriage. Pulses are applied to the print head to print characters. When one line of characters has been printed, the line feed motor advances to the next line. When data for the next line is received, the space motor is driven backward to move the carriage and apply pulses to the print head to print characters. Printing goes on through repetition of this cycle. When data is no longer present, the carriage is returned to the home position, and the printer waits to receive more data. The printing system is, bidirectional printing, with short-line seeking capability.

### 5.2.2 Outline of Control Circuit

The printer operates under control of the microcomputer. As shown in the circuit diagrams in Chapter 7, Q1 is an 8-bit, 1-chip microcomputer (micro CPU), and has a 128-byte RAM and an 8-bit timer. Control programs are stored in Q5 (4 k, MASKROM), or Q5 and Q6 (2 k, EPROMs), and are executed after resetting subsequent to switching power on. A 128-byte RAM is used as a register, and the timer is used for internal control. A 9 MHz oscillator (OSC) is connected to XTAL1 and XTAL2, generating the basic clock. The CPU cycle time is about 1.6 $\mu$ s.

The control circuit has an 8-bit bus line, 16 I/O ports, and 3 terminals as I/O means. The bus line is connected to Q18, Q19, Q4, Q5, Q6, Q2, and Q3, and addresses are designated by Q18 and Q19. T1 and INT signify inputs. T0 sends a 3-MHz pulse to other IC's which use the pulse as a clock.

Q2 is the 256-byte RAM with an internal timer and 22 I/O ports. The I/O port is used as a control line for interface signal input/output, and space and line-feed pulse motors. Q4 is the 2 k-byte character generator ROM. Addresses are assigned by A0 thru A10, and signals corresponding to characters are output from O0 to O7. This output is received by the CPU, and sent to its P10 to P17, P25, P26, from which it is fed through the open collector inverters Q7 and Q8 to drive the Darlington transistors TR4 through TR12, and cause the head to print. Q18 and Q19 are 4-bit latches, used for designating addresses to Q4, Q5, and Q6. Q3 is a serial interface IC which converts serial data into parallel signals, and also generates control signals for the RS-232-C interface.

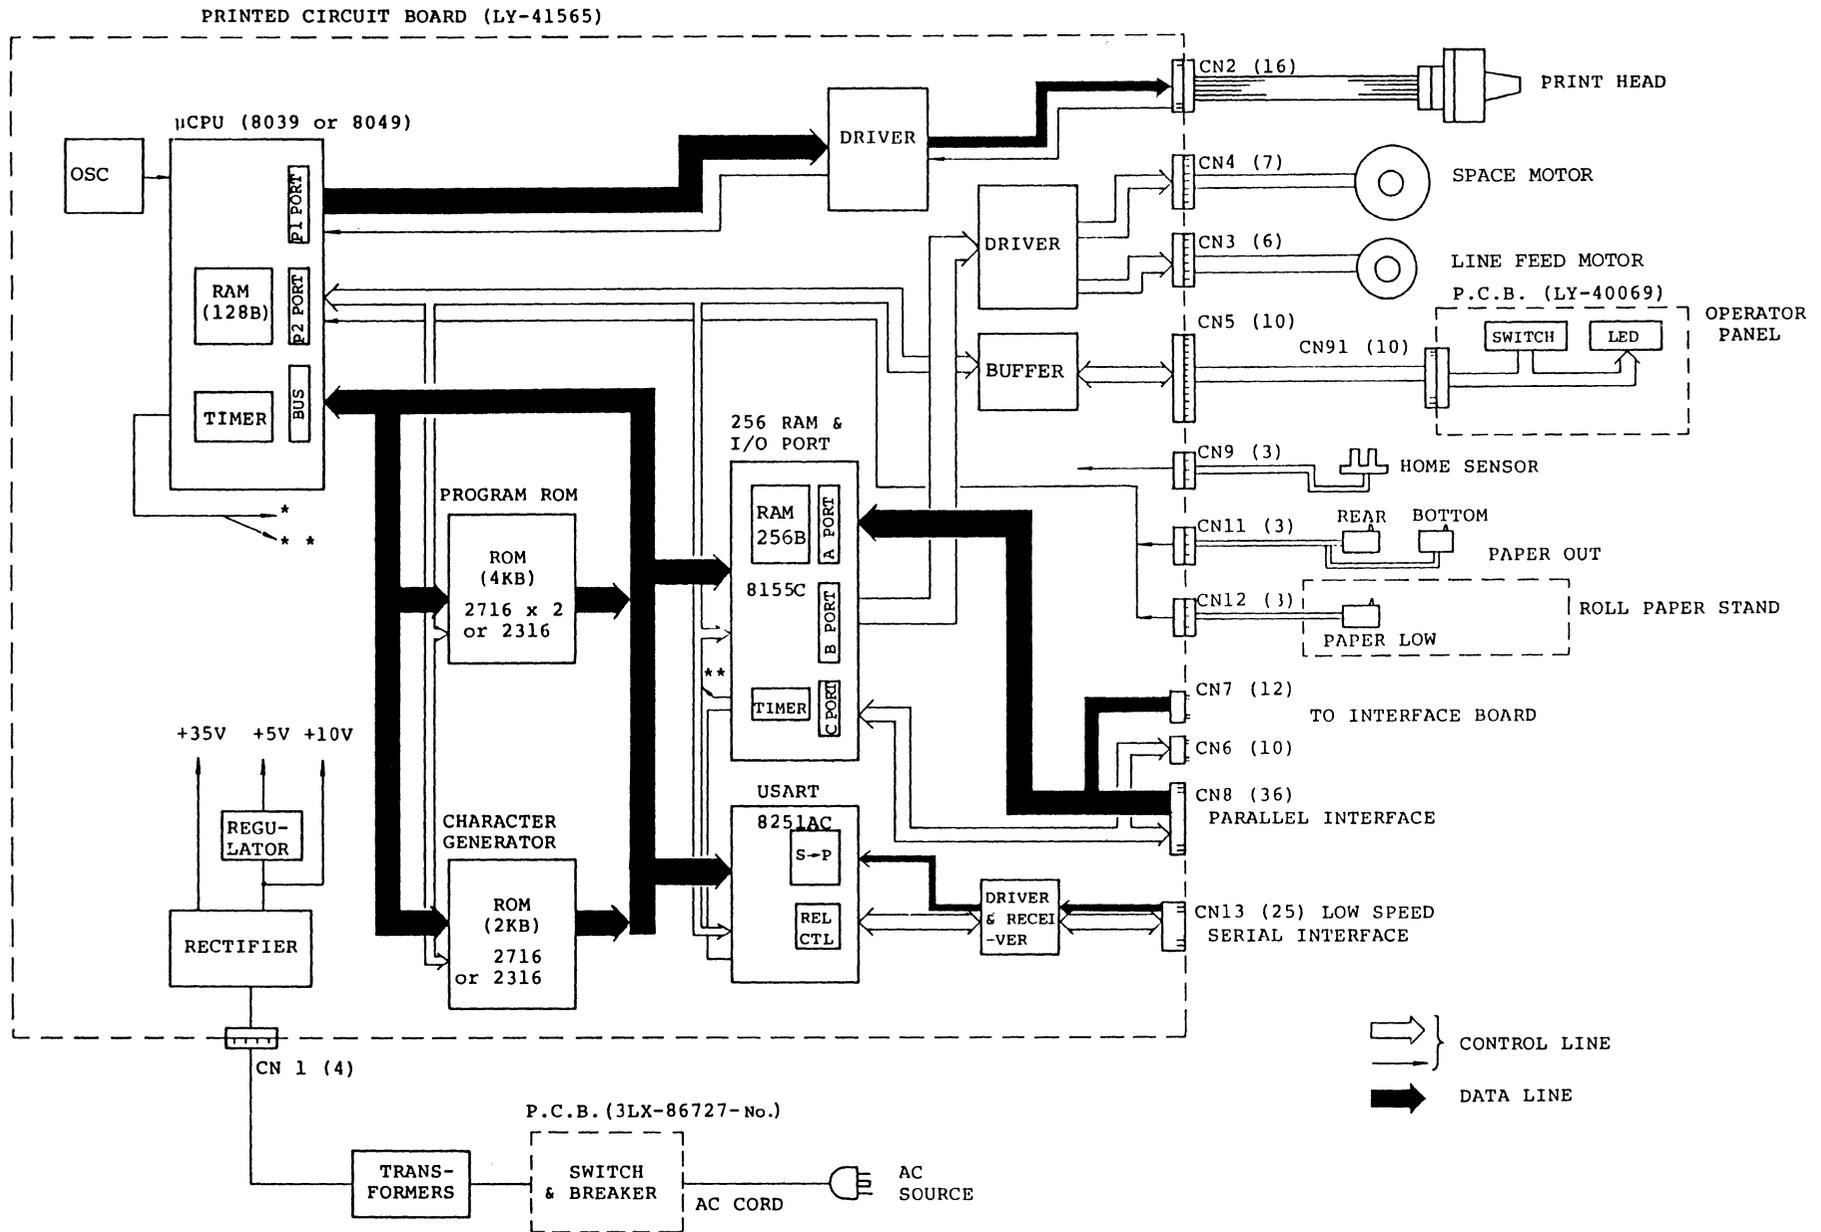


Fig. 5-8 Block Diagram





### 5.2.3 Initial Operation (See Timing Chart (1), Fig. 5-9.)

When the equipment is switched on, the circuitry is cleared, and the carriage is returned to the home position (Refer to 4.15). When the a.c. power switch is pushed on, a reset signal is generated by C23 which is connected to Q1 (micro CPU). As a result, Q1 inputs RESET to clear the inside. After the clearing, the program runs to move the carriage back to the home position. If the carriage is already at the home position, the carriage moves from the home position once and then returns to the home position. The interface busy signal remains "1" during initialization, and no data will be accepted. After initialization, the busy signal turns to be "0" to enable the printer ready for receiving data.

Transistor TR26 delays the switching on of bias current to the drive circuit and advances its switching off to prevent erratic operation at power switch-on and switch-off.

### 5.2.4 Data Input Operation (See Timing Chart (1), Fig. 5-9.)

#### (1) Parallel interface

8-bit parallel data (data bit 1 to bit 8) is input to the I/O port of Q2 (PA0 to PA7). If a STROBE signal is sent out from the host equipment when the BUSY signal is "0", the parallel data is set to the internal latch of Q2 at the rising part of the STROBE signal.

After the data latching, the BUSY signal is turned to "1" and the micro CPU processes it. First, it judges the input data, and writes it into RAM Q2 if it is print data, or starts printing if it is the CR or LF code. When one line of data is received, the printer starts printing.

After processing the data, the BUSY signal is turned to "0", and a pulse is applied to terminal ACKNOWLEDGE.

If there is an idle receiving buffer, data for the next line will be received even during printing.

#### (2) Low-speed serial interface

Input serial data to Q3 RXD (RD) is converted into parallel data in IC Q3. The inside status of Q3 is sensed by the CPU to recognize reception of one character. This data is set into RAM Q2 via the CPU. Then printing and various functional operations take place as mentioned in Section 4.

The L.S. serial interface of the printer has no built-in data receiving interface buffer so that transmission from the terminal must be immediately stopped by detecting the unable-to-receive status (equivalent to BUSY) from the SSD signal sent from the printer.

The printer becomes unable to receive under the following conditions.

The printer indicates an unable-to-receive status when, during receiving, the SEL switch is depressed, a paper end condition is reached, or the print buffer becomes full, and further receives any of the following codes from (a) to (j).

- (a) LF code received
- (b) CR code received
- (c) VT channel number code received
- (d) VT code of ESC. VT. X1. X2 received
- (e) F code of ESC. F. X1. X2 received
- (f) 5 code of ESC. 5 received
- (g) FF code received
- (h) Printing code for the maximum number of characters per line plus single character received
- (i) DC3 code received
- (j) DC4 code received

The SSD signal switches to the unable-to-receive status within 5 ms after receiving any of the codes (a) through (j) shown above.


Even if the printer is not ready for receiving, three characters (including function codes) of the data transmitted from the terminal can be received.

If the terminal sends data for the fourth and subsequent characters without stopping at the third character, only the first, second, and last characters will be valid, and all the characters between them invalid.

#### NOTE


- 1) If the deselect status or paper end is reached when the printer is standing by without receiving codes, the SSD signal indicates the unable-to-receive status.
- 2) Neither parity check nor framing check will be made.
- 3) Data will be lost if an overflow error occurs.
- 4) No data receiving interface buffer is provided.

1. Initial operation

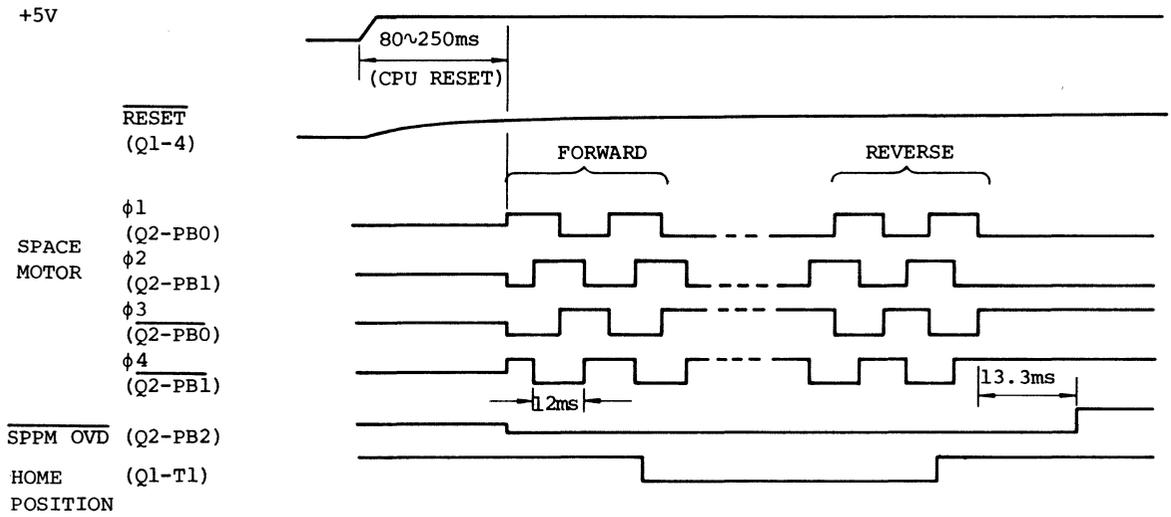

62

2. Data input (parallel interface)

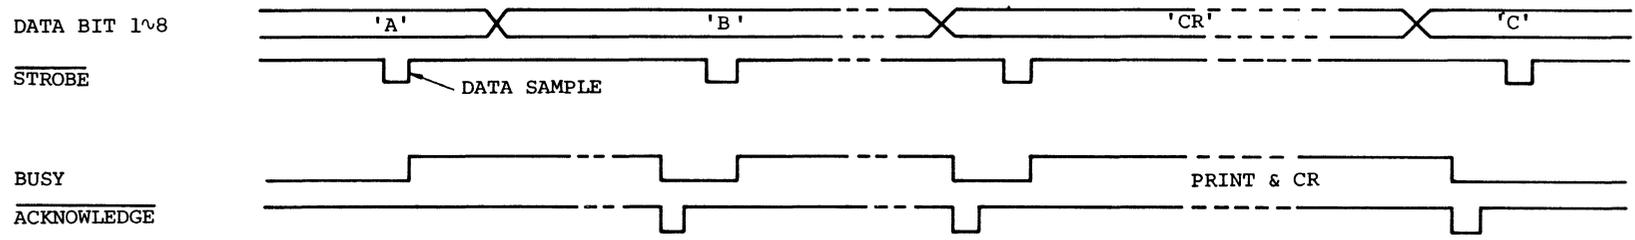

Note: Voltage level  $3 \sim 5V$   
 $0V$

Fig. 5-9 Timing Chart (1)

### 5.2.5 Printing Operation (See Timing Chart (2), Fig. 5-10.)

The space motor drives the carriage at constant speed, and pulses corresponding to character patterns are applied to the print head.

The carriage is held one and a half character positions left of the first character position by a holding voltage of +10 V applied to it via R8, R12 and D25.

After completion of data input, a "0" output is sent out of Q2's PB2 output SPPM OVD to energize transistor TR21, which applies a +35 V to the space motor to drive the motor with a powerful torque. At the same time, pulse signals are applied to Q2's PB0 and PB1 to drive the stepper motor.

The motor is a 4-phase stepper motor, whose one step angle is  $1.8^{\circ}$ . When the motor advances by 12 steps, the carriage moves by 2.54 mm (at 10 CPI) to make a space for one character.

A two-phase exciting system is employed. A phase signal drives transistors Tr13, Tr14, Tr19, Tr20 to drive the motor. Zener diodes D23, D24 suppress the counter voltage generated by the motor.

The printer starts printing when the carriage reaches the first character position.

A head drive trigger pulse is sent from PB3 of Q2 to cause the comparator of Q21 to generate an enable pulse. This pulse energizes both TR3, TR24, and TR27 to apply a voltage to the head. At this time, pulses are sent out of P10 to P16, P25, P26 of Q1 according to character patterns. This drives the print head magnet through the Darlington transistors. The characteristic variations of the print head due to source voltage variations are compensated for by changing the magnet ON time according to the variations of the +35 V source voltage. This compensation is done by R19 which is connected to comparator Q21, and +35 V circuit. One of the head coils is connected in common to the collector of TR3 or TR27. Thus a continuation of the ON time beyond the rated length signifies an abnormality. Such a fault is detected by the integrating circuit composed of R9, D10 to energize thyristor TR1, and thus shorts out the +35 V circuit. When the +35 V circuit is shorted, the input breaker opens to prevent damage to the printer.

The print head has a built-in thermistor to protect itself from overheating during excessive printing duty operation. The output of the thermistor is sent to comparator Q21, from which a signal is sent to the CPU to automatically limit the printing duty cycle.

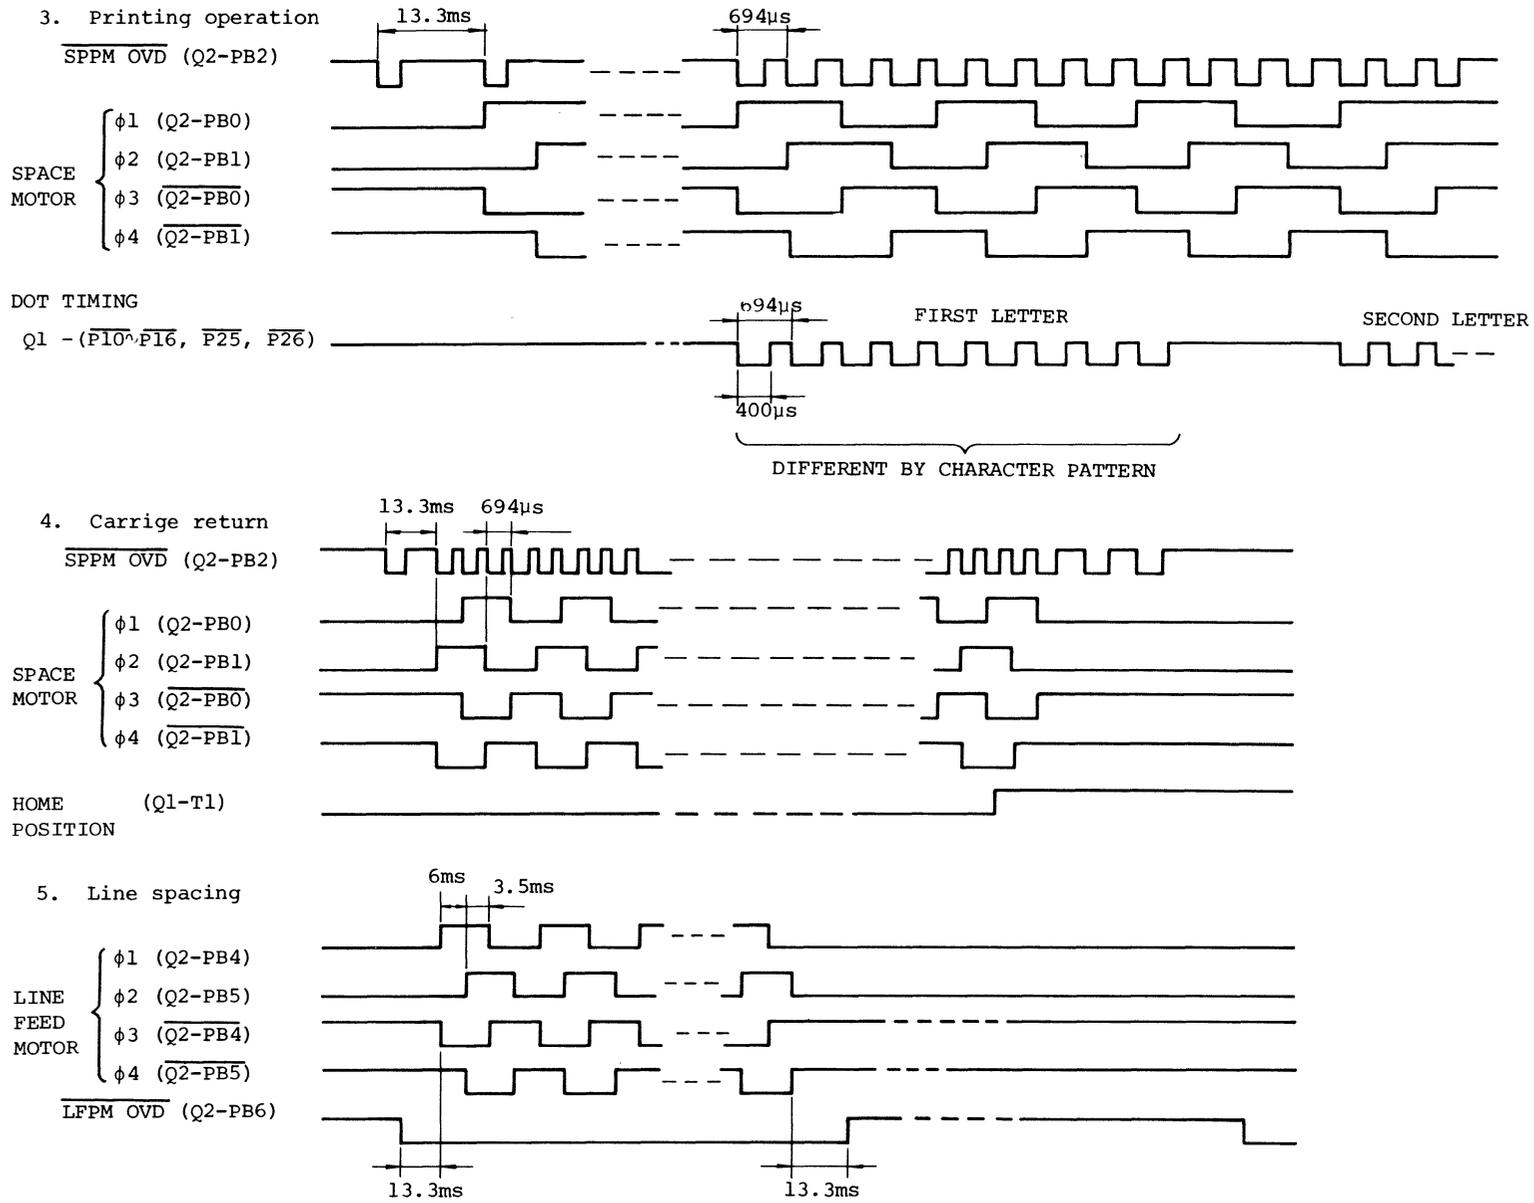


Fig. 5-10 Timing Chart (2)

#### 5.2.6 Carriage Return and Line Feed Operation (See Timing Chart (2), Fig. 5-10.)

After printing one line of characters, the paper is moved up one line.

Phase signals for reversing the space motor are sent from PB0 and PB1 of Q2, and signals for driving the line-feed motor from PB4 and PB5.

The line-feed motor is a 4-phase stepper motor, whose one step angle is  $7.5^\circ$ . 24 steps of it feed the paper by 4.23 mm (at 6 LPI), or 18 steps of it feed the paper by 3.18 mm (at 8 LPI).

If no line spacing takes place, a +10 V is applied through R10 and D35 to provide a holding voltage.

When line spacing, a "0" is sent from the PB6 output ( $\overline{\text{LF PM OVD}}$ ) of Q2 to energize transistor TR22 so that a +35 V is applied to the line feed motor to drive it with a powerful torque.

Return operation is similar to the operation of the space motor in printing operation. (See par. 5.2.5.)

In returning to the home position, the space motor runs backward to the home position, which is detected by interrupting the light of the home sensor which is composed of a combination of a light emitting diode and phototransistor.

#### 5.2.7 Paper End and SEL Switch Operation

Paper end is detected by the operation of paper low detection microswitch in the roll paper stand, or of the paper out detection microswitch behind the platen.

Three lines of data can be received after detecting paper end. After the data input, a paper end signal is sent to the interface, turns off the SEL LED and select the DESELECT (off-line) status so that data will no longer be received. After printing the input data, the PAPER LED lights to indicate that the paper has run out. If the SEL switch is pushed when the SEL LED is lit to indicate that the printer is ready to receive, the input data received up to the point of pushing the SEL switch will be printed out, and then the SEL LED goes out to bring the printer back to the DESELECT (off-line) status.

#### 5.2.8 Graphic Printing Operation

As shown in paragraph 4.4

#### 5.2.9 Power Supply


The d.c. voltage required for operation is obtained from an a.c. input.

The a.c. input to the printer through the a.c. plug runs through the a.c. power switch and circuit breaker to the primary winding of the power transformer.


The secondary winding of the transformer generates outputs of 9 V and 28 V.

A positive voltage of +10 V is generated from the 9 V a.c. through D5 thru D8, and smoothing capacitors C4 and C5. The +10 V is regulated to +5 V, and supplied to the IC's.

The +5 V can be checked between pin 7 (SG) and pin 14 (VCC) of IC Q7. It must be made sure that the voltage between these pins is within the range of 4.75 to 5.25 V.

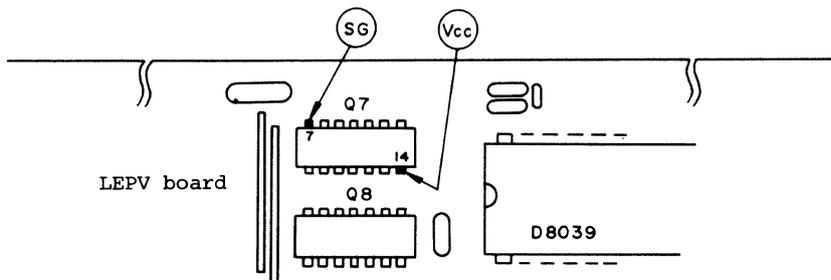

A nonregulated d.c. voltage of 35 V is generated from the transformer secondary output 28 V a.c. through full-wave rectifier consisting of D1 thru D4, and parallel smoothing capacitors C2 and C3 (each 22000 $\mu$ F). This d.c. voltage is used to drive the paper feed motor, print head space motor, and print head magnet. When there is no printing operation, it can be checked that the voltage between both terminals of capacitor C2 is within the range of 35 to 46 V d.c. (for rated input voltage  $\pm 10\%$ ). During printing operation, it can be checked that the voltage becomes 26 to 36 V d.c. as affected by change in the load (for rated input voltage  $\pm 10\%$ ).

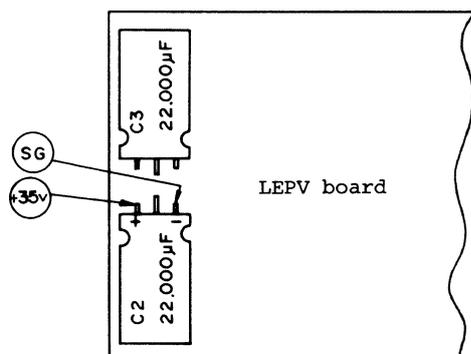


The circuit is so designed that the rated currents may flow through the motors and magnet even if the 35 V fluctuates due to input voltage fluctuation and load fluctuation.

#### 5.2.10 Power Transformer

If the power transformer temperature abnormally rises, the built-in temperature fuse will blow out in order to prevent burn-off of the transformer.

Example of circuit diagram (in the case of 4LP-45191-128)

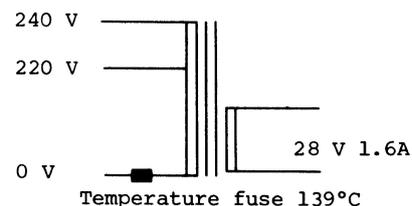

## 6. MAINTENANCE

### 6.1 Maintenance Precautions

Pay attention to the following when servicing the printer.

- (1) Exercise care to keep the gears and belts absolutely free of dust and paper waste.
- (2) Be sure to disconnect the a.c. plug before pulling out the connectors or reinserting them.
- (3) Do not unnecessarily disassemble, reassemble, or readjust the printer as long as the printer is in good operating condition. Particularly, do not carelessly loosen the screws that fasten various parts of the printer.
- (4) After inspection, be sure to check the printer and confirm that nothing is mechanically wrong with it prior to switching it on. Check the power voltage select switch that it is at the specified voltage. (See paragraph 4.17.4.)
- (5) Never print without paper and ribbon properly loaded.
- (6) During maintenance or printer operation, neither place anything on the cover nor lean on the printer.
- (7) Do not leave parts or screws which have been used during maintenance inside the printer.
- (8) Do not wear gloves which will easily generate static, when handling the printed circuit board. Since ICs for the micro-CPU, ROM, etc. are liable to be damaged by static, exercise care not to unnecessarily touch the leads and windows of ROM.
- (9) Do not directly place the printed circuit board on the printer or the floor.
- (10) When disassembling or reassembling, carefully check the wires and cords for damage, and make sure that they are not strained. (See Fig. 8-1.)

### 6.2 Cleaning

Clean the inside of the printer at scheduled cycles as mentioned below.

Cleaning interval:	6 months or 300 hours of operation, whichever comes first
Cleaning time:	Approx. 10 minutes.
Tool:	Dry cloth (gauze or other dry cloth)
Cleaning points:	See Table 6-1.

Table 6-1

Cleaning point	Description
Ribbon path	Clean the ribbon path of dust, ribbon lint, etc.
Paper path	Clean the paper path and the parts around it of paper lint, etc.
Home sensor	Remove dust and paper lint.

NOTE

- 1) Push the a.c. power switch off before cleaning.
- 2) Be careful not to let ribbon and paper fragments remain inside.

### 6.3 Maintenance Tools

The following tools shown in Table 6-2 are necessary for replacing the parts for the printed circuit board, mechanism, etc. in the field:

Table 6-2 Maintenance Tools


No.	Tool	Q'ty	Location	Remarks
1	No. 1-100 Philips screwdriver	1	Screws 2 to 2.6 mm	
2	No. 2-200 Philips screwdriver	1	Screws 3 to 5 mm	
3	6-200 screwdriver	1	Screws 4 mm	
4	No. 5-H nippers	1		
5	No. 1 round pinchers	1		
6	5.5 mm wrench	1		
7	11 mm wrench	1		
8	Thickness gauge set	1		
9	50 g force gauge	1		
10	300 g push/pull force gauge	1		
11	Soldering iron (30 W)	1		
12	Volt/ohmmeter	1		
13	Oscilloscope	1		

### 6.4 Disassembly, Reassembly and Adjusting Procedures

The disassembly, replacement and adjusting procedures are explained below according to the disassembly route chart in reference to the table of component parts shown in Chapter 8.

#### 6.4.1 Disassembly Route Chart

Disassemble the printer in the following order. (Reassemble in the reverse order.)

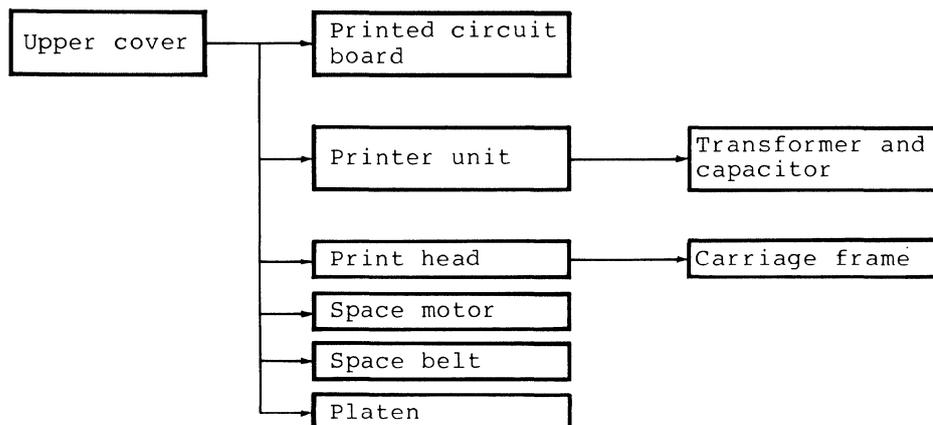

#### 6.4.2 General Precautions

- (1) Before disassembly or reassembly, push the a.c. power switch off and pull out the power cord from the a.c. outlet.
- (2) Determine the range of disassembly as suitable to the intended purpose. Do not disassemble more than necessary.
- (3) Before proceeding with disassembly, check each unit for deterioration, interconnection, and clearances, and record data.
- (4) Use the specified maintenance tools only.
- (5) Place the removed units in the correct order.
- (6) The screws, nuts, collars, etc. which may be easily lost should be temporarily tightened in their original places.
- (7) Do not induce artificial troubles by irrationally removing in the wrong order, or cutting the wires.


#### 6.4.3 Non-Disassembly Points

Do not disassemble the print head.




#### 6.4.4 Disassembling and Reassembling Parts


(1) Upper cover (See Figs. 8-1 and 8-2.)

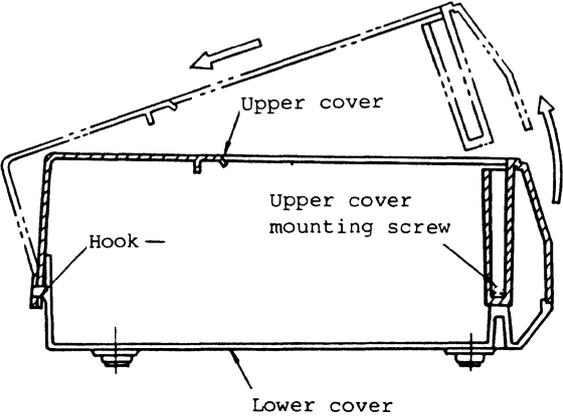Item	Description	Tool
Disassembly	<ol style="list-style-type: none"><li>(1) Disconnect interface connector.</li><li>(2) Remove roll paper stand or tractor unit. (See paragraphs 3.4 and 3.5.)</li><li>(3) Raise and remove access cover (Fig. 8-8-3).</li><li>(4) Remove platen knob (Fig. 8-3-32).</li><li>(5) Remove two mounting screws (Fig. 8-8-26) from inside of front part of upper cover.</li><li>(6) Raise front end of upper cover (Fig. 8-8-1), then push it rearward to remove it from lower cover.</li></ol>	No.2-200 Philips screw- driver
Reassembly	Reverse the disassembly procedure.	
Sketch		

(2) LEPV circuit board (See Figs. 8-1 and 8-13.)

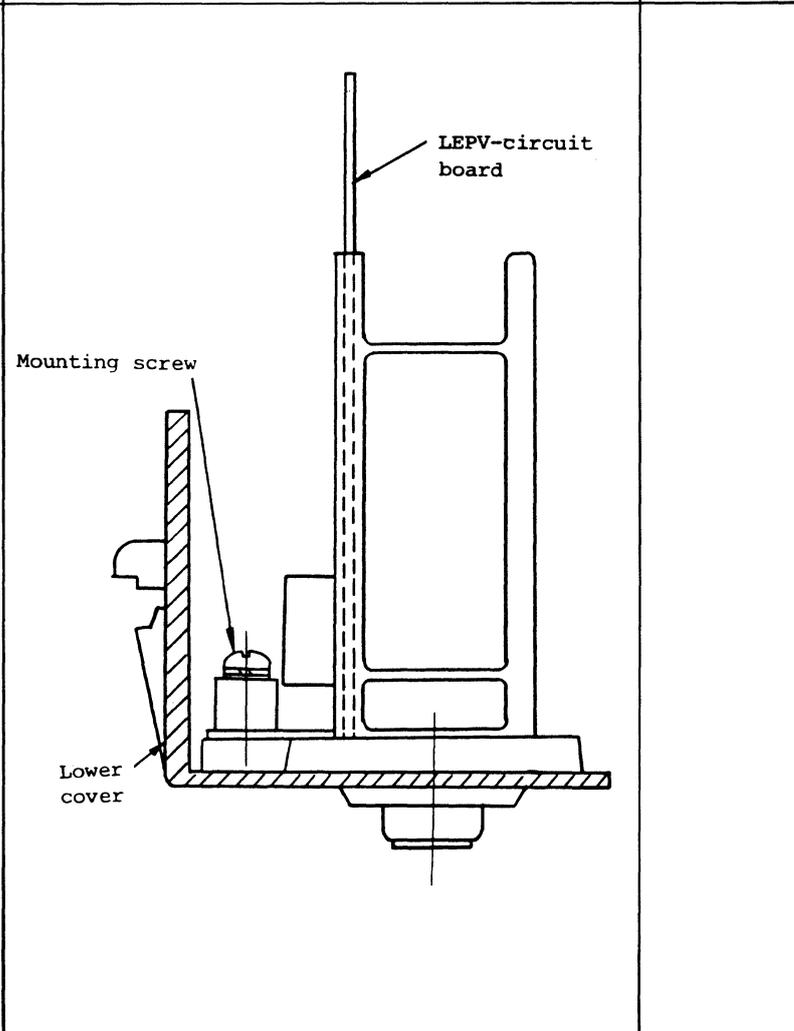Item	Description	Tool
Disassembly	<p>(1) Remove upper cover. (See 6.4.4 (1).)</p> <p>(2) Pull out connectors from LEPV (2/2) circuit board. (See Fig. 8-1.)</p> <p>(3) Remove LEPV circuit board mounting screw (Fig. 8-13-17), and raise LEPV circuit board (Fig. 8-13) enough to disconnect remaining connectors.</p> <p>(4) Pull out remaining connectors from LEPV circuit board.</p> <p>Note: When exchanging a ROM packaged on the LEPV printed circuit board, refer to Fig. 8-13 "ROM Discrimination Method" and make sure not to mix the part No. and packaging location.</p>	6-200 screw-driver
Reassembly	Reverse the disassembly procedure.	
Sketch		

(3) Printer unit (See Figs. 8-1 and 8-2.)

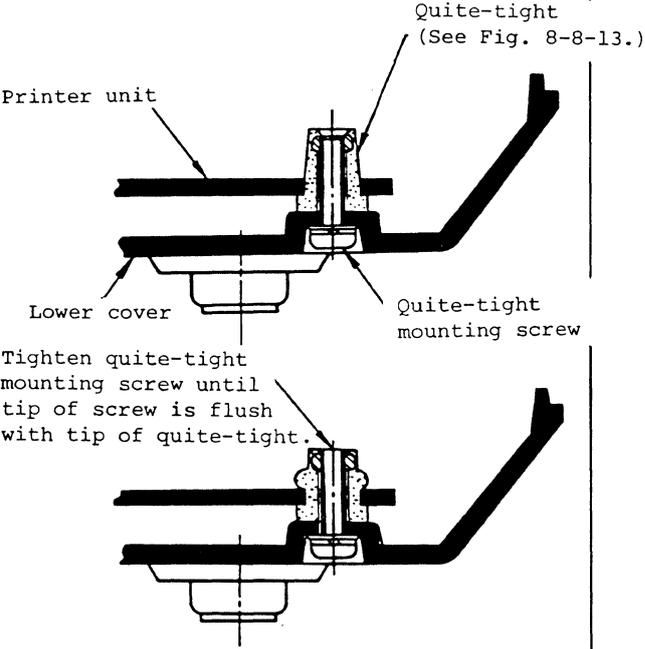Item	Description	Tool
Disassembly	<ol style="list-style-type: none"> <li>(1) Remove upper cover. (See 6.4.4 (1).)</li> <li>(2) Remove LEPV circuit board. (See 6.4.4 (2).)</li> <li>(3) Remove all connecting cords of printer unit (Fig. 8-1-2) from cord clamp (Fig. 8-8-9). (See Fig. 8-1.)</li> <li>(4) Remove quite-tight mounting screws (Fig. 8-8-28).</li> <li>(5) Raise the printer unit and remove from the quite-tight.</li> </ol>	No.2-200 Philips screw- driver
Reassembly	<p>Reverse the disassembly procedure.</p> <p>Note: 1) Tighten stud until tip of screw is flush with tip of quite-tight. (Tightening torque: 4 to 5 kg.cm)</p> <p>2) See Fig. 8-1 for routes of connecting cords.</p>	
Sketch	 <p>Quite-tight (See Fig. 8-8-13.)</p> <p>Printer unit</p> <p>Lower cover</p> <p>Quite-tight mounting screw</p> <p>Tighten quite-tight mounting screw until tip of screw is flush with tip of quite-tight.</p>	

(4) Power supply assembly (See Figs. 8-8, 8-11 and 8-12.)

Item	Description	Tool
Disassembly	<p>(1) Remove upper cover. (See 6.4.4 (1).)</p> <p>(2) Remove LEPV circuit board. (See 6.4.4 (2).)</p> <p>(3) Remove LEPW circuit board mounting screws (Fig. 8-8-24), and remove a.c. cord leads from seesaw switch (Fig. 8-12).</p> <p>(4) Remove connecting cords of transformer (Figs. 8-11-2, -3) from cord clamp (Fig. 8-8-9).</p> <p>(6) Remove transformer mounting screws (Fig. 8-8-27) and transformer.</p>	<p>No.2-200 Philips screw- driver Soldering iron</p>
Reassembly	<p>Reverse the disassembly procedure.</p> <p>Note: See Fig. 8-1 for routes of connecting cords.</p>	

(5) Print head (See Fig. 8-1 and 8-2.)

Item	Description	Tool
Disassembly	<p>(1) Raise and remove the access cover.</p> <p>(2) Disconnect the print head (Fig. 8-2-1) connector from the flat cable connector which is attached to the carriage.</p> <p>(3) While holding the print head with the right hand, lift it straight up, with the lock lever released with the left hand.</p>	
Reassembly	<p>Install the print head, reversing the above procedure.</p> <p>Note: Twist the print head wire leads one turn, clockwise, before inserting the connector.</p>	
Sketch		





(7) Space motor (See Fig. 8-3.)

Item	Description	Tool
Disassembly	(1) Remove upper cover. (See 6.4.4 (1).)  (2) Remove LEPV circuit board. (See 6.4.4 (2).)  (3) Remove space motor connecting cord from cord clamp (Fig. 8-8-9).  (4) Cut tie-wraps securing the space motor connection cord.  (5) Remove the space belt (Fig. 8-6-10) from the space motor (Fig. 8-3-24) pulley.  (6) Remove the space motor mounting screw (Fig 8-3-57), and then the space motor.	No.5 H nippers     No.2-200 Philips screw-driver
Reassembly	Reassemble, reversing above procedures.	
Adjustment	(1) Space belt tension. See 6.5-1.1	

(8) Space belt (See Figs. 8-3 and 8-6.)

Item	Description	Tool
Disassembly	<p>(1) Remove the upper cover. (See 6.4.4 (1).)</p> <p>(2) Loosen the idle pulley bracket screw (Fig. 8-3-54), move the idle pulley bracket (Fig. 8-3-9) to right to loosen space belt (Fig. 8-6-10).</p> <p>(3) Remove the belt clamp screw (Fig. 8-7-6), and belt clamp (Fig. 8-7-2).</p> <p>(4) Remove the E-snap (Fig. 8-6-22) from one of the ribbon spool gears, and remove the ribbon spool gear (Fig. 8-6-7).</p> <p>Note: Be careful not to lose plastic washer (Fig. 8-6-16).</p> <p>(5) Remove the detent spring (Fig. 8-6-9)</p> <p>(6) Remove the other E-snap (Fig. 8-6-22) and then the ribbon change lever (Fig. 8-6-2) and the ribbon drive gear (Fig. 8-6-6).</p> <p>(7) Remove the space belt.</p>	<p>No.200 Philips screw-driver</p> <p>No.1 round pinchers</p>
Reassembly	<p>Reverse the disassembly procedure.</p> <p>Note: When reassembling the ribbon drive gear, engage its pulley teeth with space belt teeth accurately beforehand.</p>	
Adjustment	<p>(1) Space belt tension See 6.5-1.1</p>	



(9) Platen (See Figs. 8-3 and 8-4.)

Item	Description	Tool
Disassembly	<p>(1) Remove the upper cover. (See 6.4.4 (1).)</p> <p>(2) Remove the detent spring (Fig. 8-3-21, -22).</p> <p>(3) Remove one of the E-snaps (Fig. 8-3-43), pull the paper-tear-off bar shaft (Fig. 8-3-23) from the side plate, and remove the paper-tear-off bar (Fig. 8-3-18).</p> <p>(4) Remove the paper separator screw (Fig. 8-3-52), and then the paper separator (Fig. 8-3-17).</p> <p>(5) Remove E-shaped snap (Fig. 8-4-5), and then wave washer (Fig. 8-4-4) and right platen bearing (Fig. 8-4-2) by pulling them sidewise.</p> <p>(6) Pull the side plate bearings horizontally (Fig. 8-4-2) until their projections come off side plates, turn 90°, and remove platen by lifting it.</p>	<p>No.1 round pinchers</p> <p>No.2-200 Philips screw- driver</p>
Reassembly	Reverse the disassembly procedure.	
Adjustment	Clearance between the paper separator and the platen See 6.5-3.1	

## 6.5 Adjustment Procedures for Various Parts

Table 6-3 Adjustment Procedures



No.	Item	Standard	Description	Tool
1.1	Spacing belt tension	F=220+20 g at $\delta = 5$ mm	<p>Adjust by moving idle pulley bracket. Carriage unit should be at home position</p>  <p>Note: After making this adjustment, take a print sample (all "H"'s preferred if a terminal is available) and check for uniform character width. Re-adjust belt tension, as required, to get uniform character width.</p>	<p>300-g push/pull force gauge  No.2-200 Philips screwdriver</p>
1.2	Detector lever position		<p>Mount the detector lever as it comes to the position shown below, when power is on, or the carriage is returned manually.</p> 	

Table 6-3 (con.)




No.	Item	Standard	Description	Tool
1.3	Printing position	Run-out of character center against the column indicator scale should be $+0.5$ mm or less	<p>Fully print the printing column number to check character center run-out against the full range of the column indicator scale.</p>  <p>Check point: When out of the standard, adjust the photo-sensor and space motor mounting.</p>	
2.1	Gap between platen and print head	0.45 to 0.5 mm	<p>Adjust with right and left eccentric collars which are mounted on both sides of carriage shaft on the upper sides. Check the standard value at both ends of platen with thickness gauge. The position of head gap adjusting lever is "1".</p> 	Thickness gauge 5.5 mm wrench 11 mm wrench
2.2	Gap between platen and ribbon protector	0.3 to 0.5 mm (confirm)		

Table 6-3 (con.)

No.	Item	Standard	Description	Tool
3.1	Gap between platen and paper chute	0.5 to 0.7 mm		Thickness gauges No. 2-200 Philips screwdriver
3.2	Gap between platen and paper separator	0.5 to 1 mm		
4.1	Ribbon spool gear friction tension	F= 25+5g	<p>Confirm this on both the right and left spool gears.</p>	
4.2	Gap between ribbon spool gear and ribbon gear	More than 0.3 mm in free state	<p>Confirm this on both the right and left spool gears.</p>	
4.3	Gap between ribbon change lever and shaft	More than 0.2 mm when feeding ribbon		

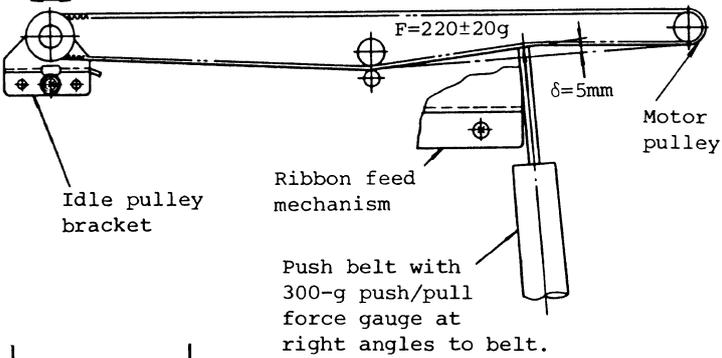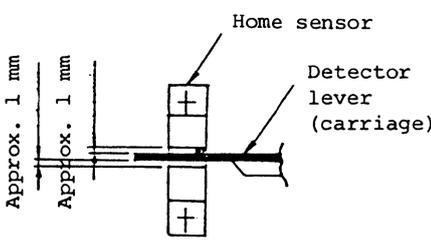

## 6.6 Oiling

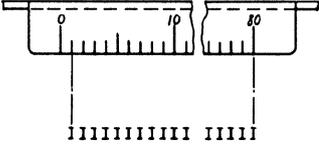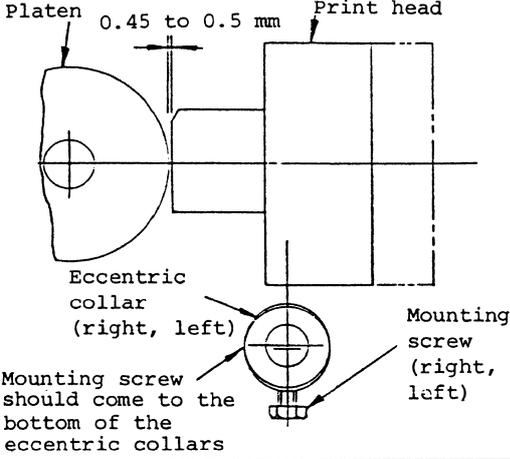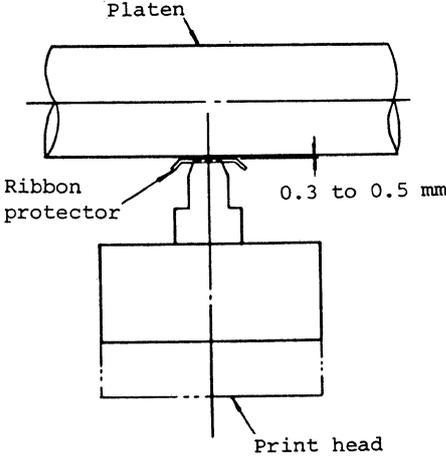The purposes of oiling are rust prevention and lubrication. For rust prevention, do not apply oil in a large quantity, but rub the parts with oil cloth. For lubrication, apply oil of suitable type in a suitable quantity, according to the operation condition of the parts.

Inadequate oil quantity may cause insufficient lubrication, or troubles due to splash. When applying oil, remove contaminated old oil and dust before adding new oil. For rust-prevention, do not use oil containing molybdenum disulfide.

### 6.6.1 Oil Types

- (1) Motor Oil 10W30 (or equivalent) ..... PM
- (2) ALBANIA Grease #2EP (or equivalent) ..... GEP
- (3) Molybdenum disulfide oil (or equivalent)... ML

### 6.6.2 Application Volume

- Large quantity ..... (A) ..... Let oil felt or others be soaked with oil sufficiently.
- Medium quantity ..... (B) ..... Three to four drops.  
A thickness of approx.  
0.2 mm in case of grease
- Small quantity ..... (C) ..... One drop

### 6.6.3 Oil Application Cycle

This machine is maintenance-free, and no oil is necessary during normal operation. Apply oil after disassembly, reassembly or cleaning.

### 6.6.4 Parts Where Oil Is Prohibited

Table 6-4


No.	Part	Reason	Remarks
1	Ribbon	Prevention of ink stain of printed characters	
2	Ribbon roller	Prevention of ink stain of printed characters	
3	Microswitch	Prevention of faulty contact	
4	Home-sensor	Prevention of dust	
5	Platen (rubber face)	Prevention of stained paper	
6	Platen pressure roller	Prevention of stained paper	

Table 6-4 (con.)


No.	Part	Reason	Remarks
7	Pin tractor	Prevention of stained paper	
8	Synchro-belt	Prevention of extended belt	
9	Pulley teeth of belt	Prevention of extended belt	
10	Ribbon feed mechanism friction felt	Prevention of inferior friction	

### 6.6.5 Lubrication Points


- (1) Carriage shaft (upper)
- Carriage shaft (lower)

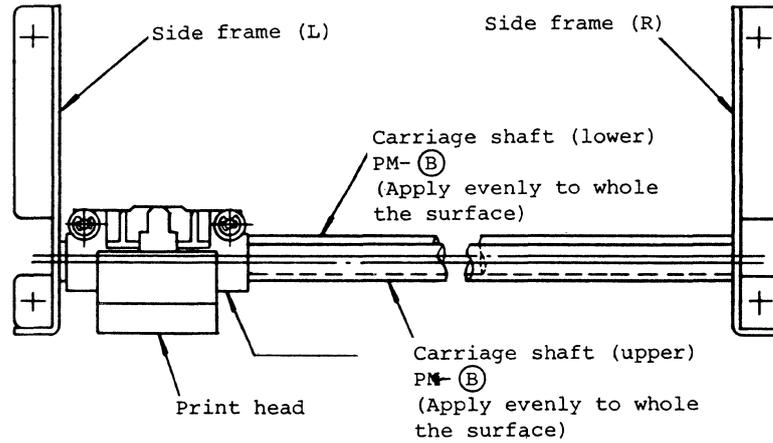


- (2) LF idle gear

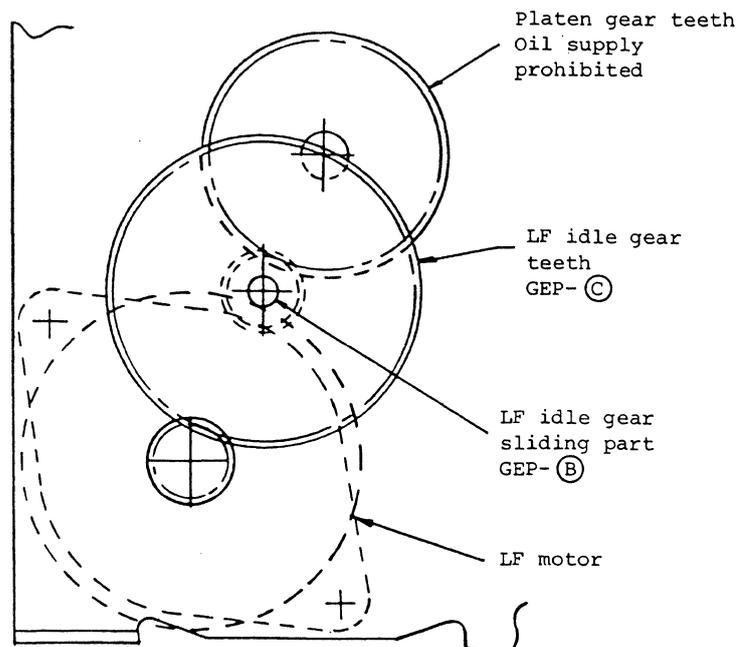



(3) Pressure roller

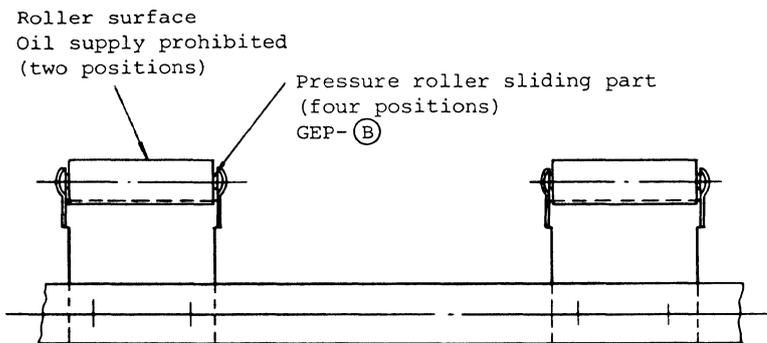


(4) Platen bearing

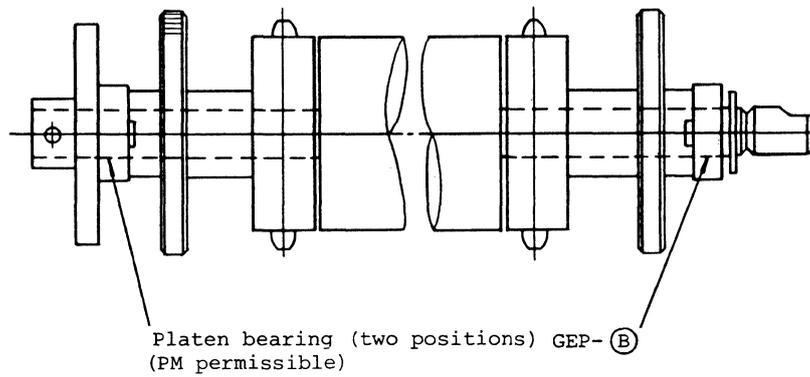


(5) Ribbon feed mechanism

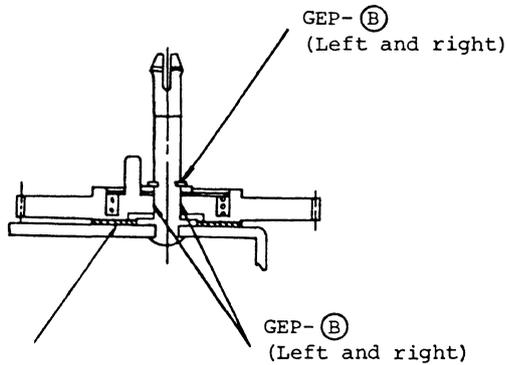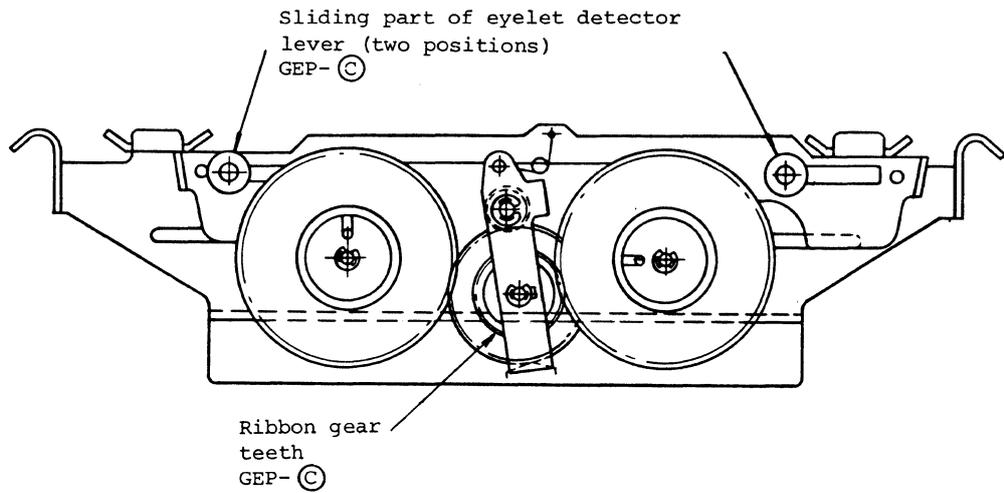


Oil on friction felt prohibited  
(Left and right)

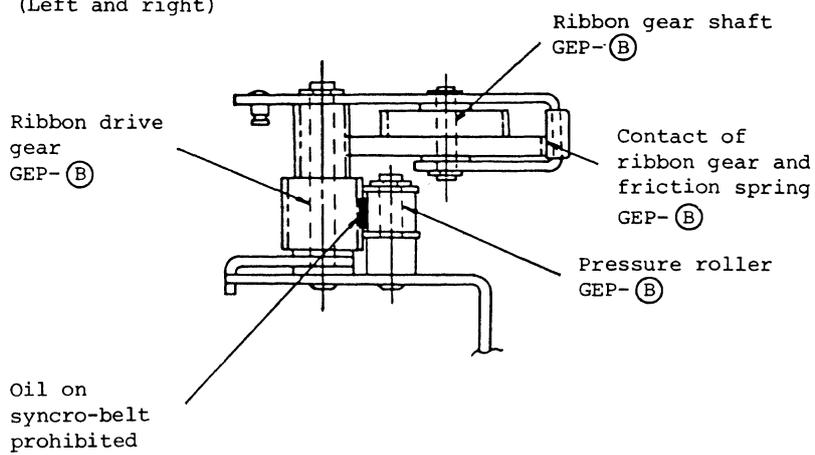

(7) Carriage assembly

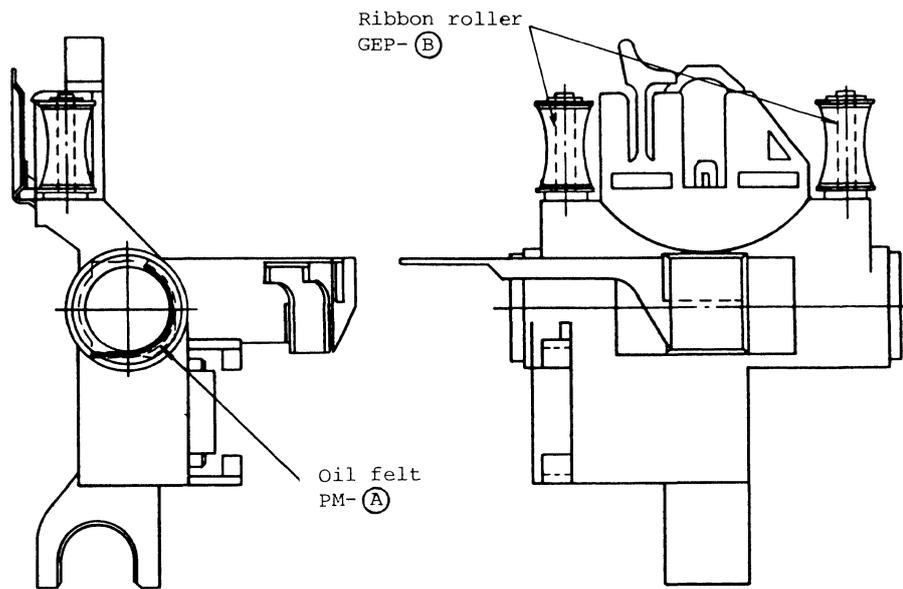

(8) Tractor assembly

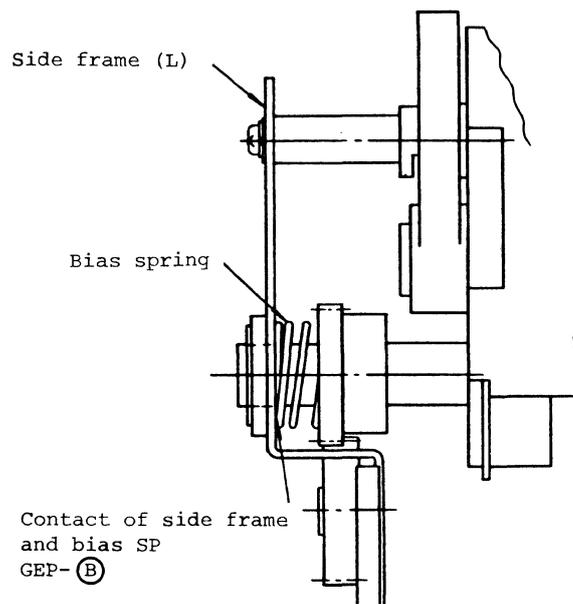



## 6.7 Maintenance Parts List

Table 6-6 shows the maintenance parts for every 1,000 units purchased that are considered convenient for maintenance purposes by the OEM.

### 6.7.1 Parts Ordering Procedure

- (1) Find desired parts (part number) from the table of component parts in Chapter 8, and confirm them.
- (2) Specify the part numbers and names of the parts required.
- (3) Each part has its own number for confirmation to interchangeability. (If the part number is the same, the part is the same.)
- (4) Order ROM separately, and you will receive the main control P.C.B. LEPV LY-41565 mounting ROMS's on.

### 6.7.2 How to Use the List

- (1) Ref. No.: Reference number in the table of component parts in Chapter 8.
- (2) Rank: A -- Must be kept on hand.  
B -- Recommended to be kept on hand.
- (3) Recommended quantity: Quantity considered necessary after one year of operating 1,000 units purchased.

Note: The meanings of the entries are as follows:

Position	Entry	Meaning
Ref. No.	*	Part of tractor unit (option)
	**	Part of roll paper stand assembly (option)
Compatibility	80	Part common to MICROLINE 80
	82	Part common to MICROLINE 82
	83	Part common to MICROLINE 83
	83A	Part common to MICROLINE 83A

Table 6-6 Maintenance Parts List (1/4)

Ref. No.	Part No.	Nomenclature	Original quantity	Recommended quantity	Rank	Compatibility
Fig. 8-2-1	3LR-190990-7	Print head assembly	1	18	A	83A
Fig. 8-2-4	4LR-191870	Carriage assembly	1	5	B	83A
Fig. 8-7-3	5LR-191873	Ribbon protector	1	10	B	83A
Fig. 8-3-32	4LR-132233	Platen knob	1	10	B	82 83 83A
Fig. 8-3-6	3LR-129900-3	Platen assembly	1	5	B	82
Fig. 8-3-9	4LR-193441-2	Idle pulley bracket	1	2	B	
Fig. 8-3-15	5LR-132475	Idle gear (LF)	1	5	B	83 83A
Fig. 8-3-19	5LR-129804	Guide bar	1	5	B	82
Fig. 8-3-24	4LR-191854	Space motor (pressure-fitted)	1	36	A	83A
Fig. 8-3-25	5LR-132473-2	LF motor	1	10	A	83A
Fig. 8-3-26	4LR-129847-3	Photo interrupter assembly	1	13	B	83 83A
Fig. 8-3-27	4LR-129907	Paper out assembly	1	5	B	83 83A
Fig. 8-6-2	5LR-129825	Ribbon change lever (clinched)	1	2	B	80 82 83 83A
Fig. 8-6-3	4LR-129827	Ribbon gear	1	19	B	80 82 83 83A
Fig. 8-6-4	5LR-193461	Snap shaft	1	5	B	83A
Fig. 8-6-5	5LR-129876	Friction spring	1	19	B	80 82 83 83A
Fig. 8-6-6	4LR-191858	Ribbon drive gear	1	5	B	83A
Fig. 8-6-7	4LR-129837	Ribbon spool gear	2	20	B	80 82 83 83A
Fig. 8-6-8	5LR-129840	Compression spring	2	16	B	80 82
Fig. 8-6-9	5LR-129841	Detent spring	1	5	B	80 82 83 83A
Fig. 8-6-10	4LP-1420-6	Synchro belt	1	18	B	
Fig. 8-6-11	5LR-191859	Pressure roller	1	5	B	83A
Fig. 8-6-12	5LR-129842	Friction felt	2	18	B	80 82 83 83A
Fig. 8-6-13	5LR-129843	Special washer	2	18	B	80 82 83 83A
Fig. 8-6-16	5LR-132516	Plastic washer	2	18	B	80 82 83 83A
Fig. 8-7-2	4LR-191857	Bolt clamp	1	10	B	82 83 83A
Fig. 8-8-1	1LM-59707	Upper cover	1	5	B	82
Fig. 8-8-3	2LM-60126	Access cover	1	5	B	
Fig. 8-8-10	5LM-61519	Grounding board	2	3	B	83A
Fig. 8-8-12	5LP-6463-C-6	Cord bushing	1	3	B	80 82
Fig. 8-8-13	4LP-6726-2	Quite-tight	4	5	B	80 82 83 83A
Fig. 8-8-14	5LP-1488	Rubber foot	4	5	A	80 82 83 83A
*Fig. 8-14-11	FMX-35100-2	Sprocket assembly (R)	1	5	B	80 82 83 83A

Note: The parts marked with an asterisk are those for the variable tractor unit (option).



Table 6-6 Maintenance Parts List (2/4)

Ref. No.	Part No.	Nomenclature	Original quantity	Recommended quantity	Rank	Compatibility
*Fig. 8-14-12	FMX-35150-2	Sprocket assembly (L)	1	5	B	80 82 83 83A
*Fig. 8-14-14	5LR-194057	Clamp lever	1	18	B	80 82 83 83A
*Fig. 8-14-15	5LR-194060	Clamp lever	1	18	B	80 82 83 83A
*Fig. 8-14-6	4LR-129889	Tractor gear	1	5	B	80 82 83 83A
*Fig. 8-14-7	5LR-129890	Idle gear	1	5	B	80 82 83 83A
*Fig. 8-14-10	5LR-123498	Bushing	2	9	B	80 82 83 83A
Fig. 8-2-7	5LR-132115	Adjust lever (fixed by adhesive)	1	5	B	83 83A
Fig. 8-3-13	5LR-132480	Paper lock release lever (fixed by adhesive)	1	5	B	83 83A
*Fig. 8-14-31	⊕ D3-5-23D	Bind screw	2	5	B	
*Fig. 8-14-32	⊕ P(SW+2W) 3-8-23D	Small pan-head screw	2	5	B	
*Fig. 8-14	LY-39702	Tractor unit	1	5	B	80 82
**Fig. 8-17-2	5LM-59702	Alarm lever	1	5	B	82
**Fig. 8-17-3	5LM-59703	Alarm lever spring	1	5	B	82
**Fig. 8-17-4	5LM-58652	Tension lever	1	5	B	80 82
**Fig. 8-17-5	5LM-58654	Tension lever spring	2	10	B	80 82
**Fig. 8-17-7	3LR-190075	Paper shaft	1	5	B	80 82
**Fig. 8-17-8	5LR-129849	Microswitch assembly	1	5	B	80 82
Fig. 8-3-43	5KX-9057	E-snap ring (2)	6	30	B	
Fig. 8-3-46	5KH-12050	E-snap ring (3)	6	30	B	
Fig. 8-3-45	5KX-9059	E-snap ring (6)	2	10	B	
*Fig. 8-14-21	5KD-50242	E-snap ring (8)	4	20	B	
Fig. 8-13	D4LP-9409-1	U05B diode	10	50	B	82 83 83A
Fig. 8-13	D4LP-44156-16	AU01-20 zener diode	2	10	B	82 83 83A
Fig. 8-13	4LP-44385	Transistor 2SD986A	17	85	B	82 83 83A
Fig. 8-13	D4LP-44253	GU-3SZ diode	2	10		83A
Fig. 8-13	4LP-44251	Transistor 2SB727	4	20	B	82 83 83A
Fig. 8-13	4LP-44492-1-B	Thyristor CUM3B1A30	1	5	B	83A
Fig. 8-13	4LP-8475-B-21	MGC 2.5A Fuse	1	20	A	83A
Fig. 8-13	I4LP-11400-00-247	μCPU 8049-247	1	10	B	83A
Fig. 8-13	I4LP-11368-06	μPD 8155C	1	10	B	80 82 83 83A
Fig. 8-13	I4LP-11369-06	μPD 8251C	1	5	B	83A
Fig. 8-13	4LP-11830-40	Regulator FS7805	1	10	B	80 82 83 83A

- Note: 1) The parts marked with an asterisk are those for the variable tractor unit (option).  
 2) The symbols in parentheses marked \*\* are parts for the LEPU circuit board.  
 3) LEPV-circuit board does not include ROM.



Table 6-6 Maintenance Parts List (3/4)

Ref. No.	Part No.	Nomenclature	Original quantity	Recommended quantity	Rank	Compatibility
Fig. 8-9-3	LY-40069 assembly	LEPF circuit board	1	5	B	82 83 83A
Fig. 8-10	4LP-44373	SEL103R light emitting diode	3	15	B	82 83 83A
Fig. 8-10	3LK-50700-2	Key switch	4	20	B	82 83 83A
Fig. 8-10-4	4L-1370-49-A2	Nameplate [TOF SET]	1	5	B	82 83 83A
Fig. 8-10-5	4L-1370-50-A2	Nameplate [SEL]	1	5	B	82 83 83A
Fig. 8-10-6	4L-1370-51-A2	Nameplate [FORM FEED]	1	5	B	82 83 83A
Fig. 8-10-7	4L-1370-52-A2	Nameplate [LINE FEED]	1	5	B	82 83 83A



Table 6-6 Maintenance Parts List (4/4) (for 115 V)

Ref. No.	Part No.	Nomenclature	Original quantity	Recommended quantity	Rank	Compatibility
Fig. 8-10-2	4LP-3424	SRQV101A rotary switch	1	5	B	82 83 83A
Fig. 8-11-1	3LX-86727-1	LEPW circuit board assembly (115V)	1	5	B	
Fig. 8-12	4LP-8604-10	0.01 $\mu$ F capacitor (115V)	4	20	B	83A
Fig. 8-12	4LP-3621-2	See-saw switch (115V)	1	5	B	80 82 83 83A
Fig. 8-12-2	4LP-6740-160	Circuit breaker (115V)	1	5	B	82 83 83A
Fig. 8-1-6	3LP-37256-3	Operation panel connection cord	1	5	B	83A
Fig. 8-11	3LP-37378-2	Transformer connection cord (115V)	1	5	B	82 83 83A
Fig. 8-11-2	4LP-45191-125	Transformer (115V)	1	3	B	83A
Fig. 8-11-3	4LP-45191-126	Transformer (115V)	1	3	B	83A
Fig. 8-13	LYH-10254	EPROM character generator (Q4)	1	20	B	83A
Fig. 8-13	LYH-10383	EPROM program ROM (Q5)	1	20	B	
Fig. 8-13	LYH-10256	EPROM program ROM (Q6)	1	20	B	
Fig. 8-1-7	4LP-37587-1	Head connection cord (blue, black)	1	5	B	83A
Fig. 8-1-3	LY-41565-7	(LEPV-7 circuit board	1	10	A	

Note: Refer to Fig. 8-13 "ROM Discrimination Method" and make sure not to mix the part No. and packaging location.

Table 6-6 Maintenance Parts List (4/4) (for 220/240 V)

Ref. No.	Part No.	Nomenclature	Original quantity	Recommended quantity	Rank	Compatibility
Fig. 8-10-2	4LP-3424	SRQV 101A rotary switch	1	5	B	82 83 83A
Fig. 8-11-1	3LX-86727-2	LEPW circuit board assembly (220V) (240V)	1	5	B	
Fig. 8-12	4LP-8555	0.01 $\mu$ F capacitor (220V) (240V)	2	10	B	83A
Fig. 8-12	4LP-3621-1	See-saw switch (220V) (240V)	1	5	B	80 82 83 83A
Fig. 8-12-2	4LP-6740-80	Circuit breaker (220V) (240V)	1	5	B	82 83 83A
Fig. 8-12	4LP-3622	Slide switch (220V) (240V)	1	5	B	80 82 83 83A
Fig. 8-1-6	3LP-37256-3	Operation panel connection cord	1	5	B	83A
Fig. 8-11	3LP-37378-3	Transformer connection cord (for 220V, 240V)	1	5	B	82 83A
Fig. 8-11-2	4LP-45191-127	Transformer	1	3	B	83A
Fig. 8-11-3	4LP-45191-128	Transformer	1	3	B	83A
Fig. 8-13	LYH-10352	EPROM, character generator (Q4)	1	20	B	83A
Fig. 8-13	4LP-11740-02-001	MASK ROM, program ROM (Q6)	1	10	B	
Fig. 8-1-7	4LP-37587-1	Head connection cord (blue, black)	1	5	B	83A
Fig. 8-1-3	LY-41565-3	LEPV-3 circuit board	1	10	A	

Note: Refer to Fig. 8-13 "ROM Discrimination Method" and make sure not to mix the part No. and packaging location.




## 6.8 Troubleshooting Flow Charts


These flow charts are provided for remedying troubles which might develop for the user, and should be referred to after confirming what the trouble is.

Classification	Trouble		Item
	Description		
Operation trouble at power-up	Print head does not come to home position.	Does not move at all.	(1)
		Moves to right or left, but does not stop.	(2)
		Vibrates.	(3)
	Breaker opens.		(4)
Operation trouble after power-up	Neither spacing nor printing operation takes place when input data is applied.		(5)
	Spaces but does not print.		(6)
	Prints but does not space.		(7)
	Print head does not return to home position after printing.		(8)
	No line spacing		(9)
	Neither paper out nor paper low function works.		(10)
	Characters are skipped, or wrong characters are printed.		(11)
	Some dots are not printed.		(12)
	Breaker opens after a while.		(13)
	Circuit board fuse burns out.		(14)
	Operating panel's switches do not work.		(15)
	Print is not dark enough.		(16)


Item (1)

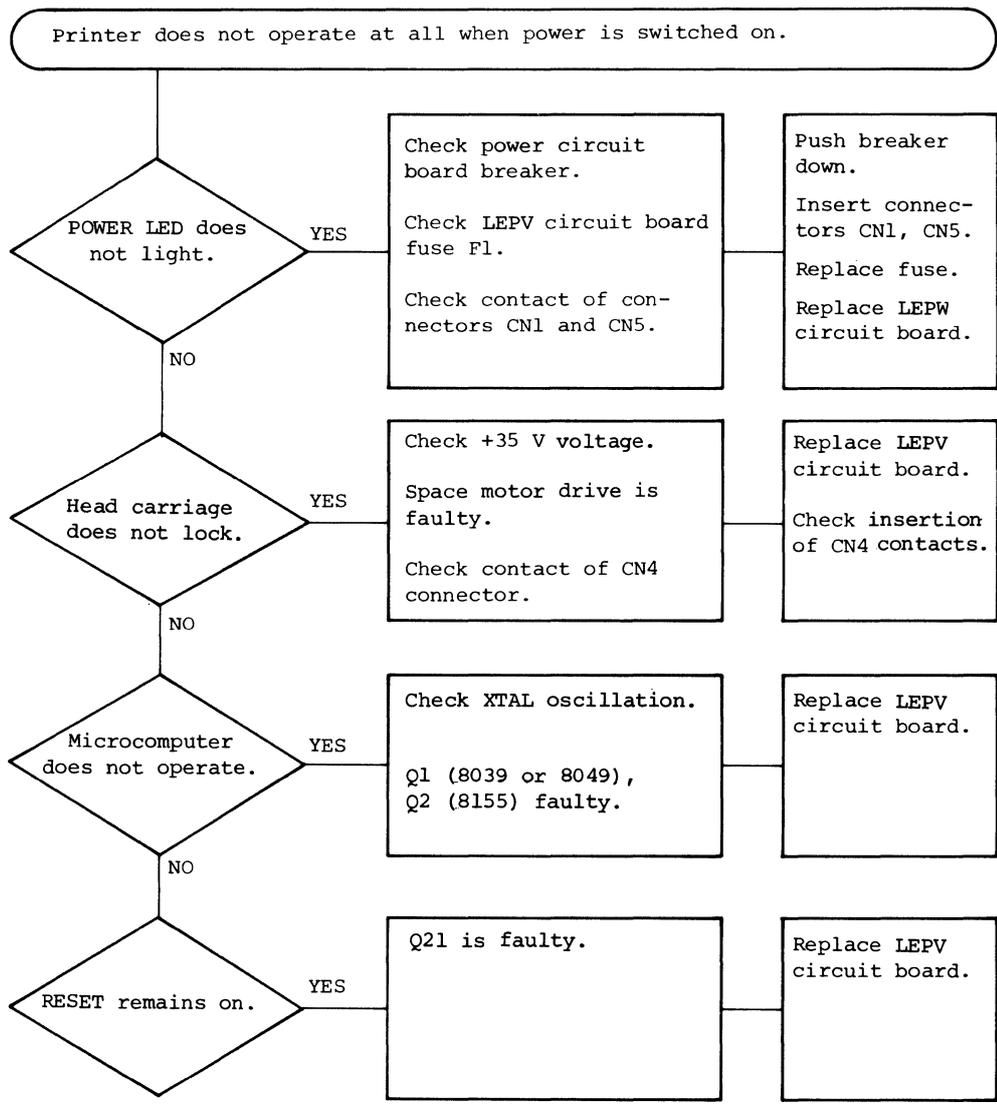


Item (2)

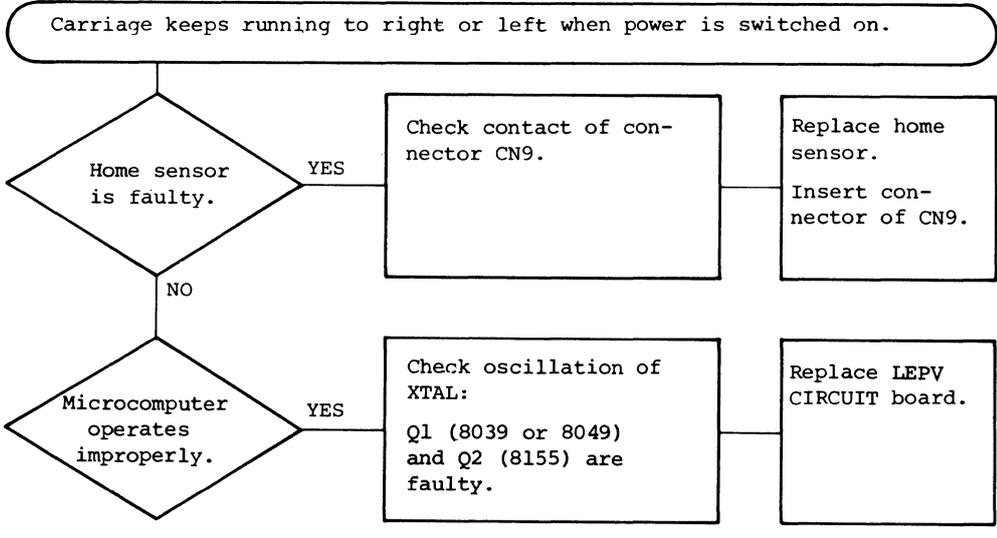


Item (3)

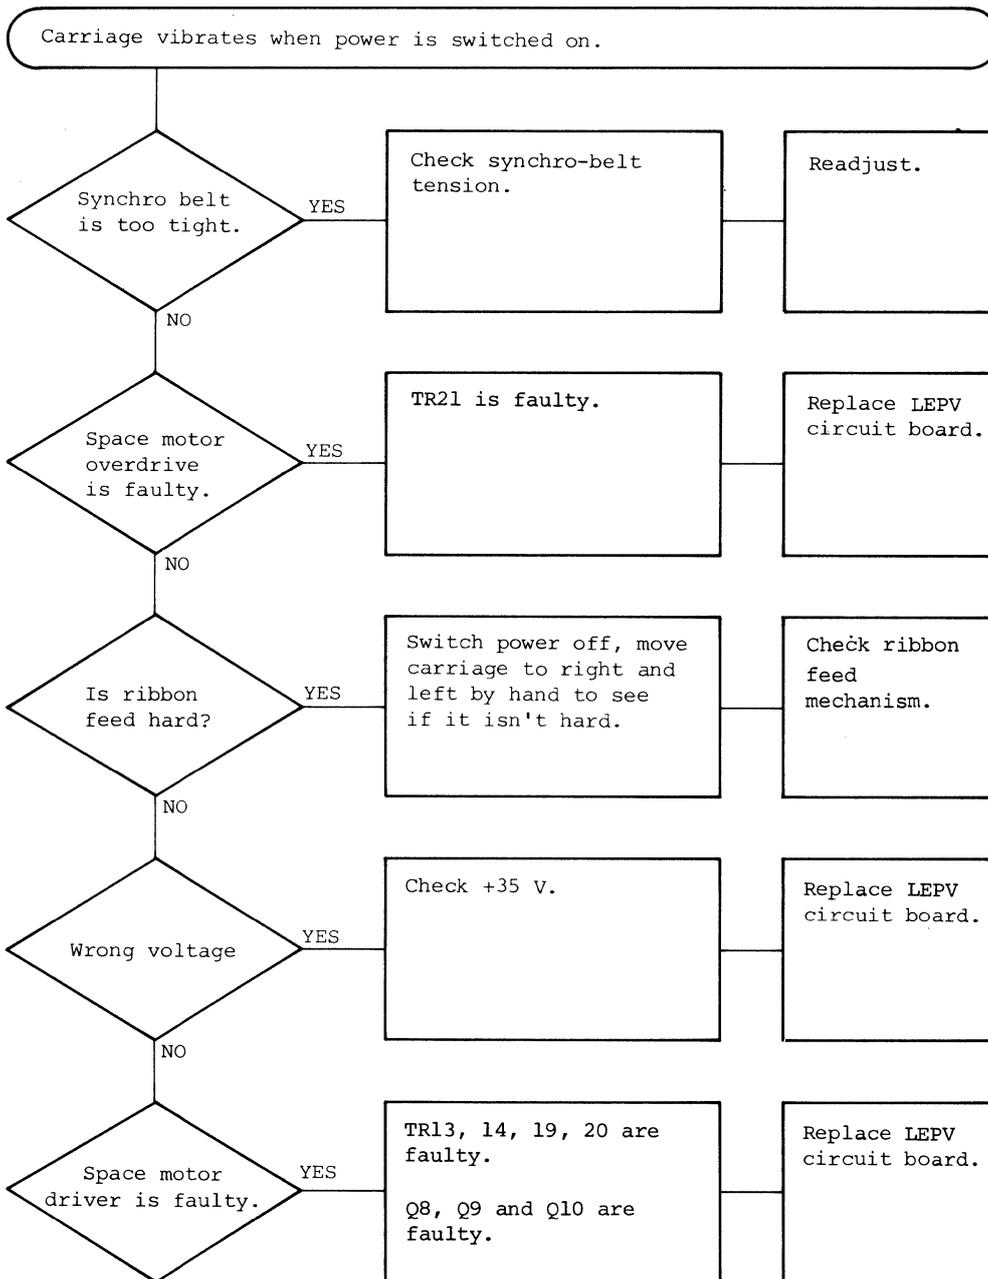


Item (4)

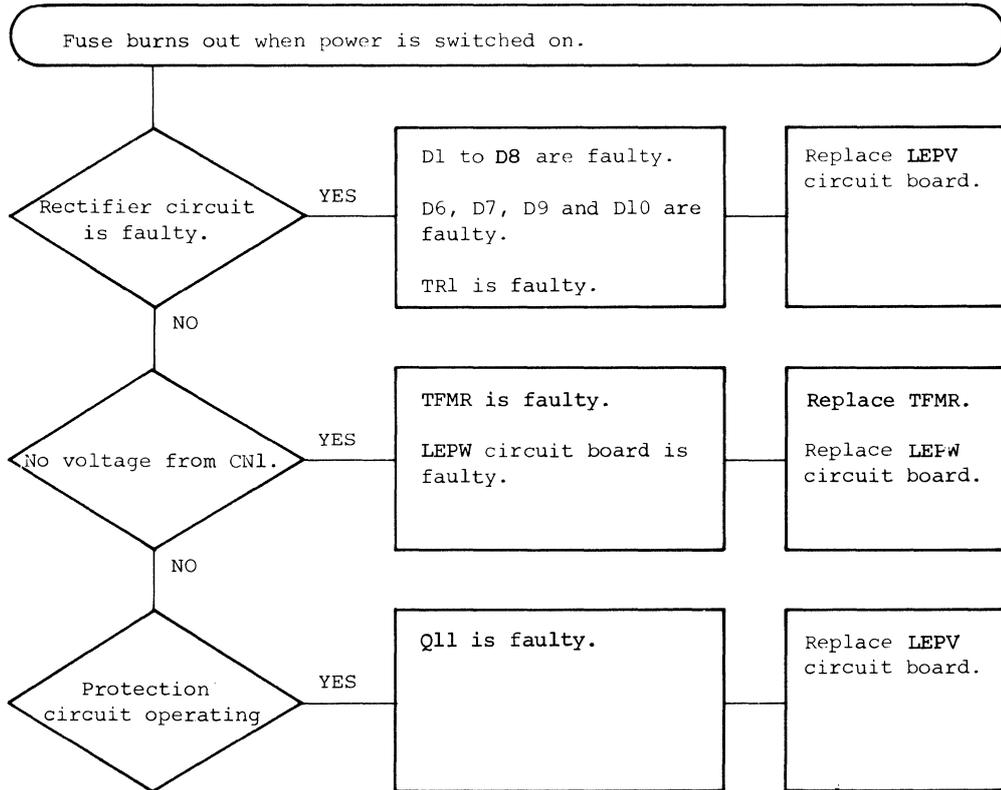


Item (5)

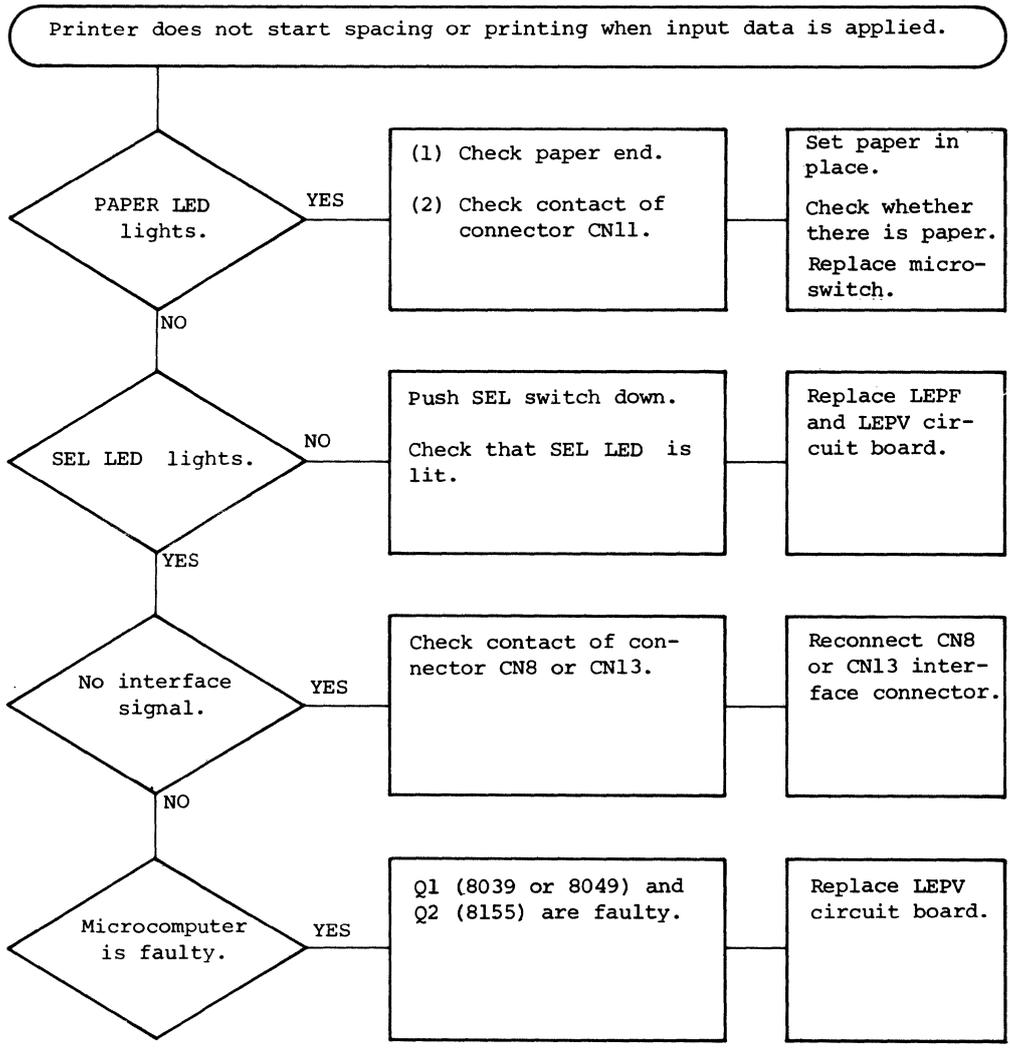


Item (6)

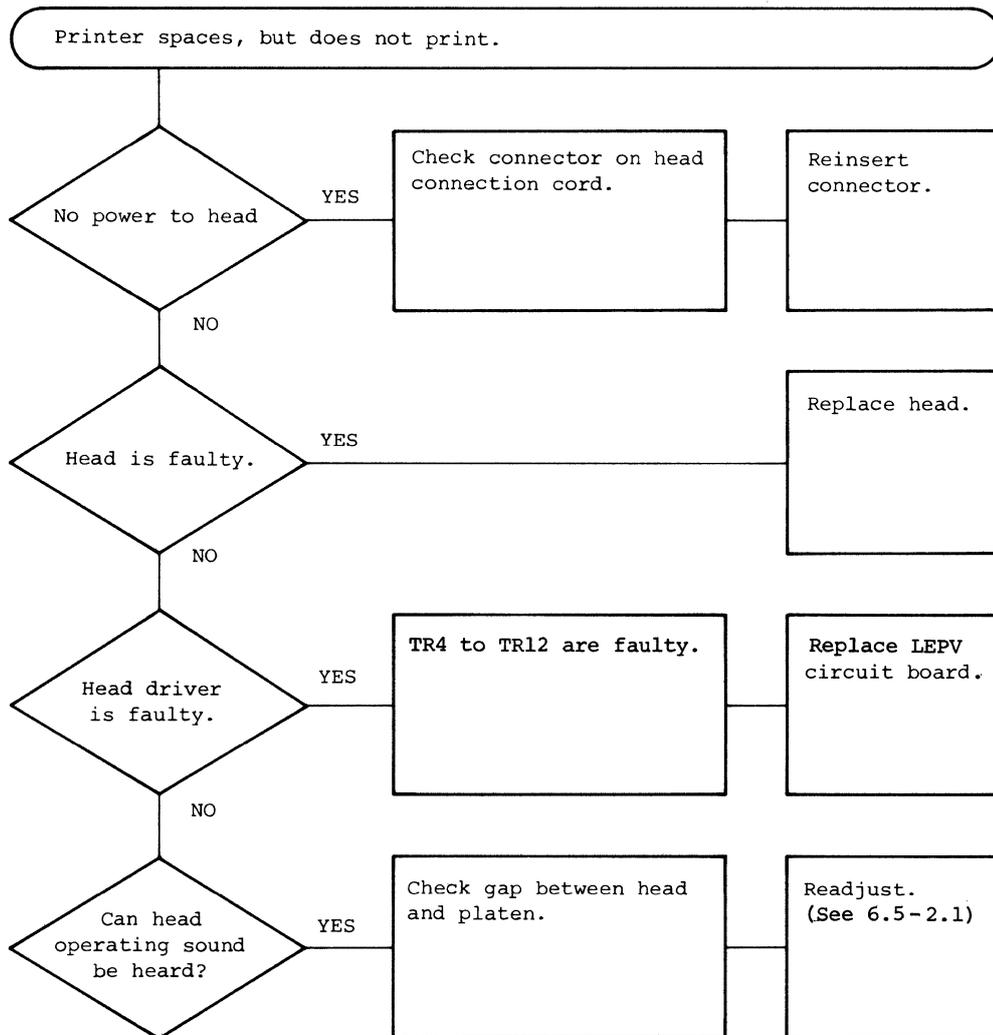


Item (7)

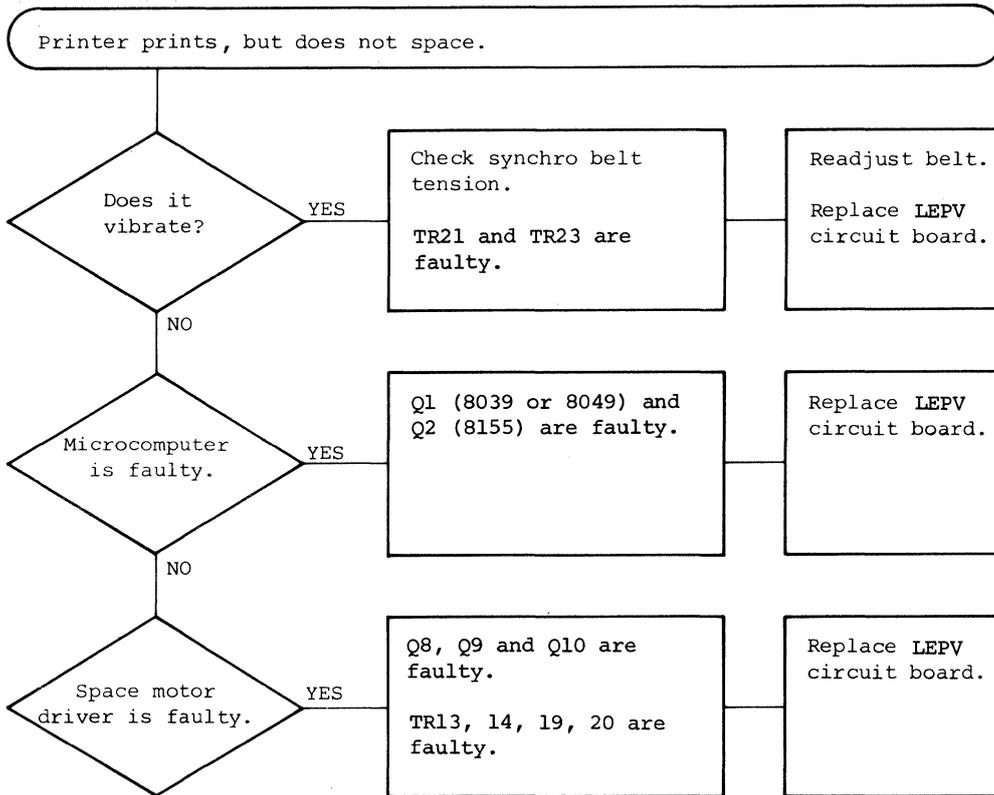

Item (8)

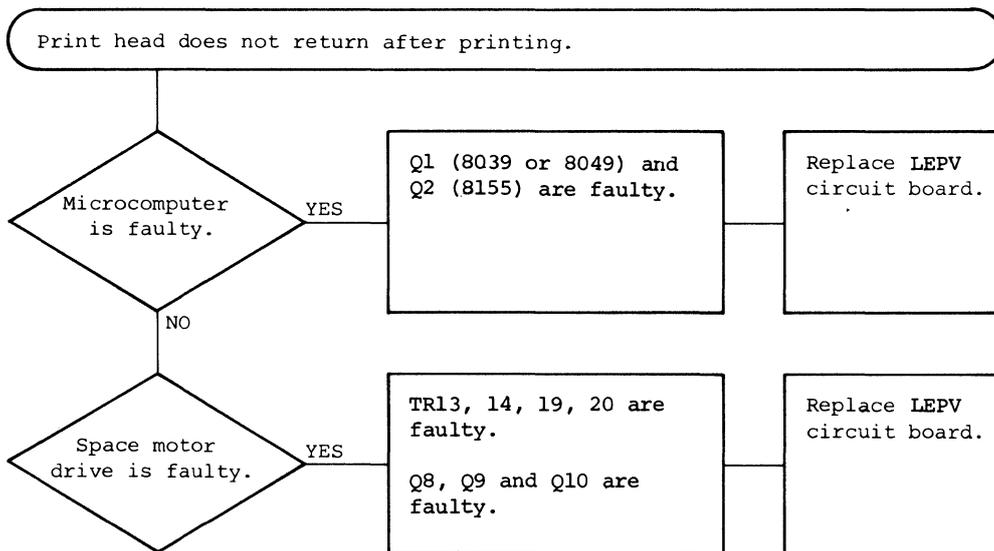


Item (9)

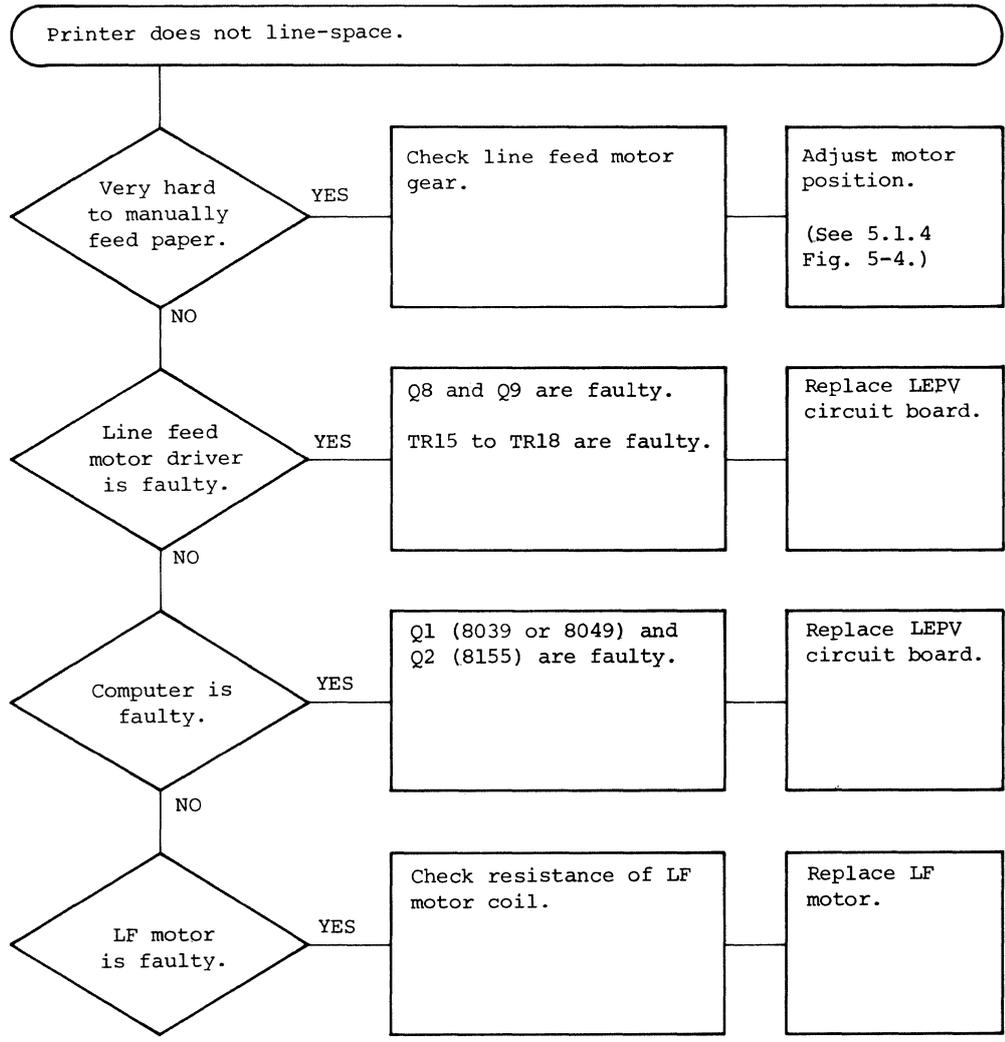




Item (10)

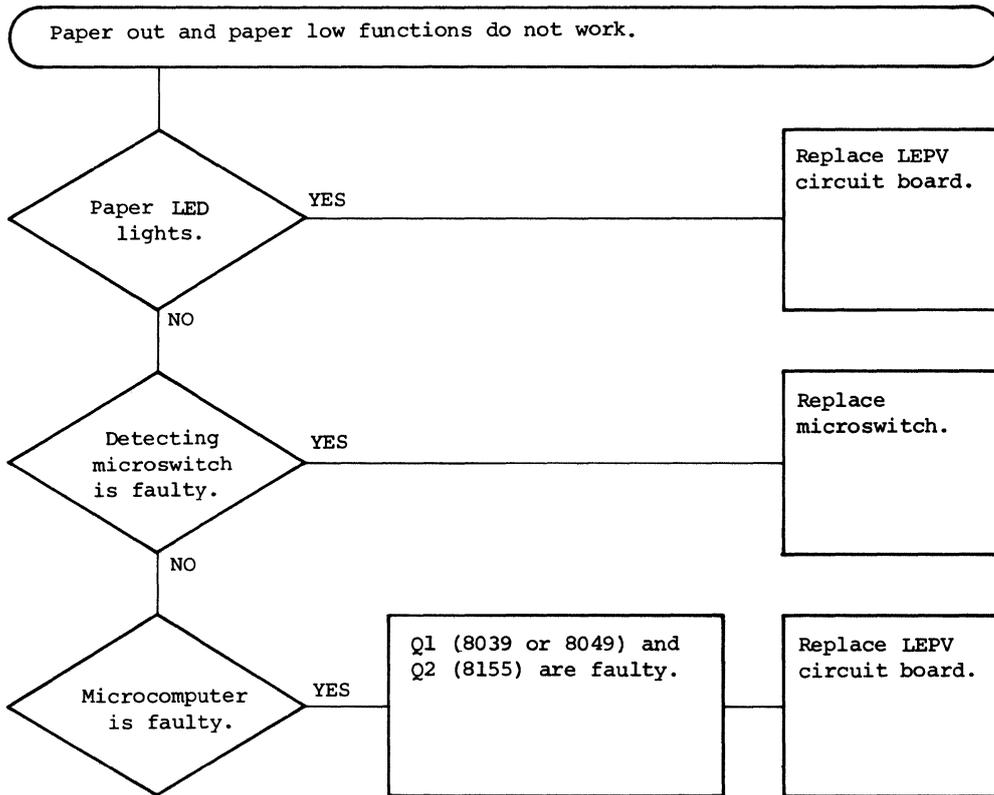


Item (11)

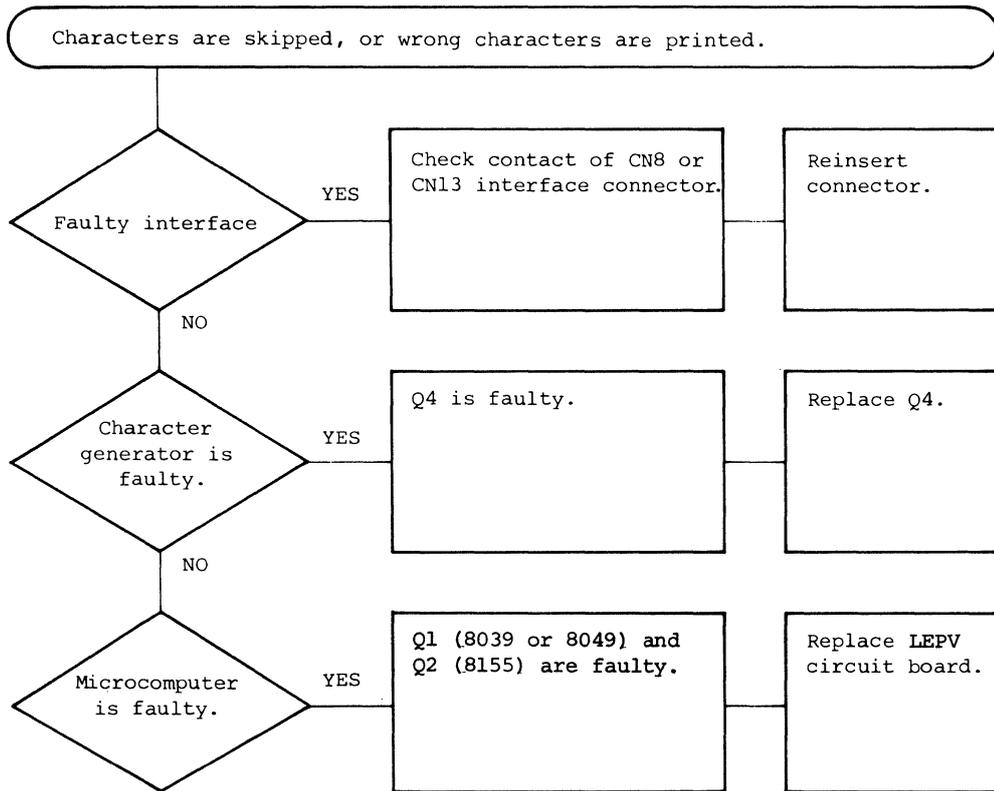





Item (12)

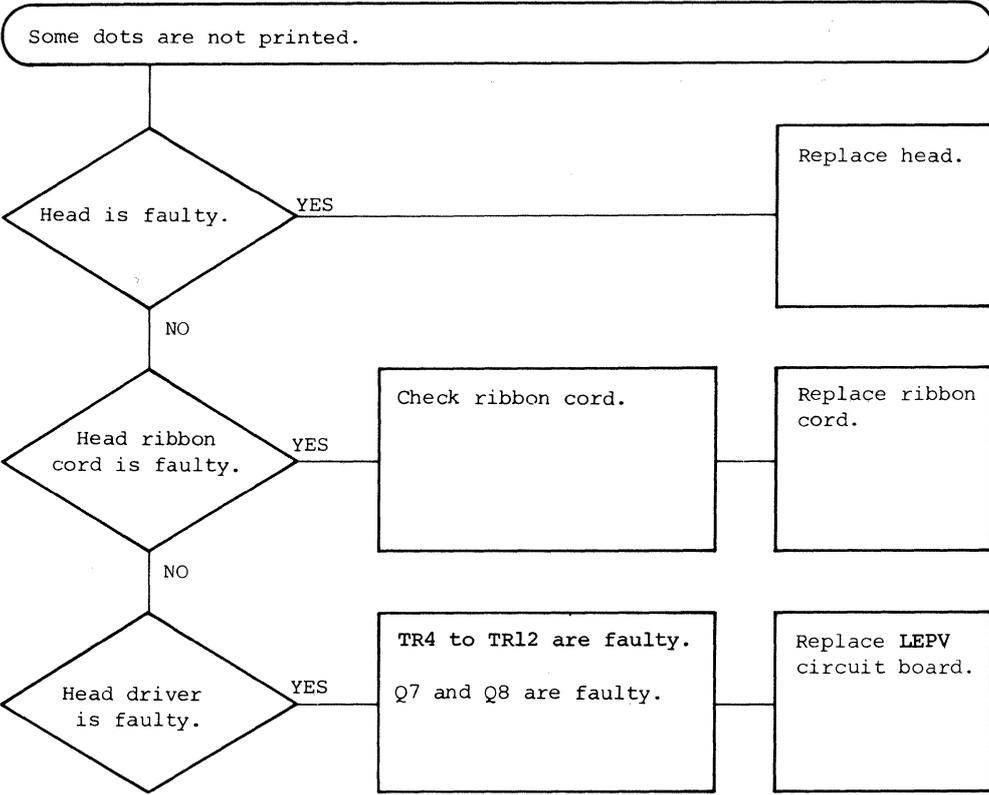


Item (13)

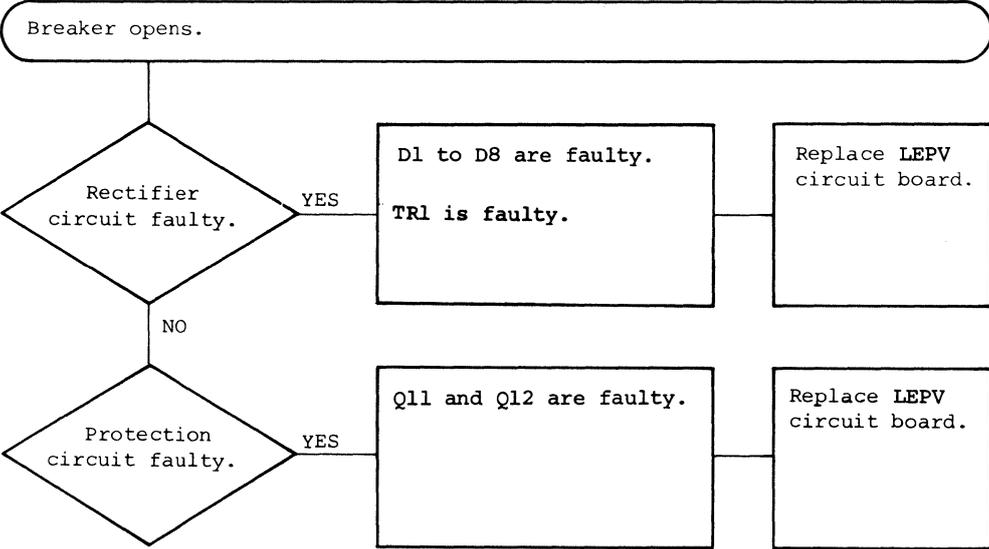

Item (14)

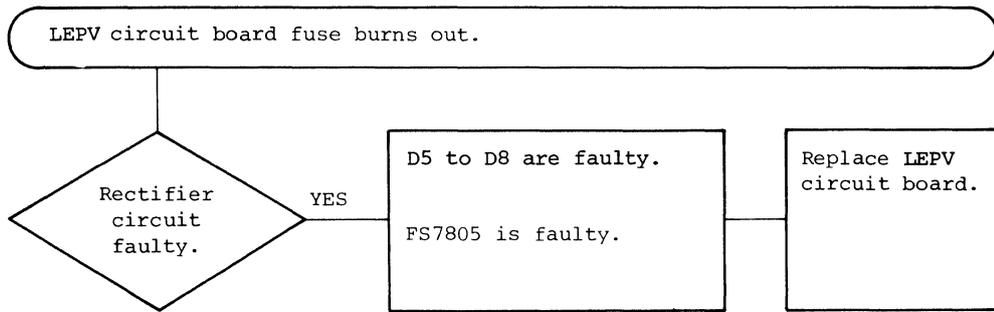


Item (15)

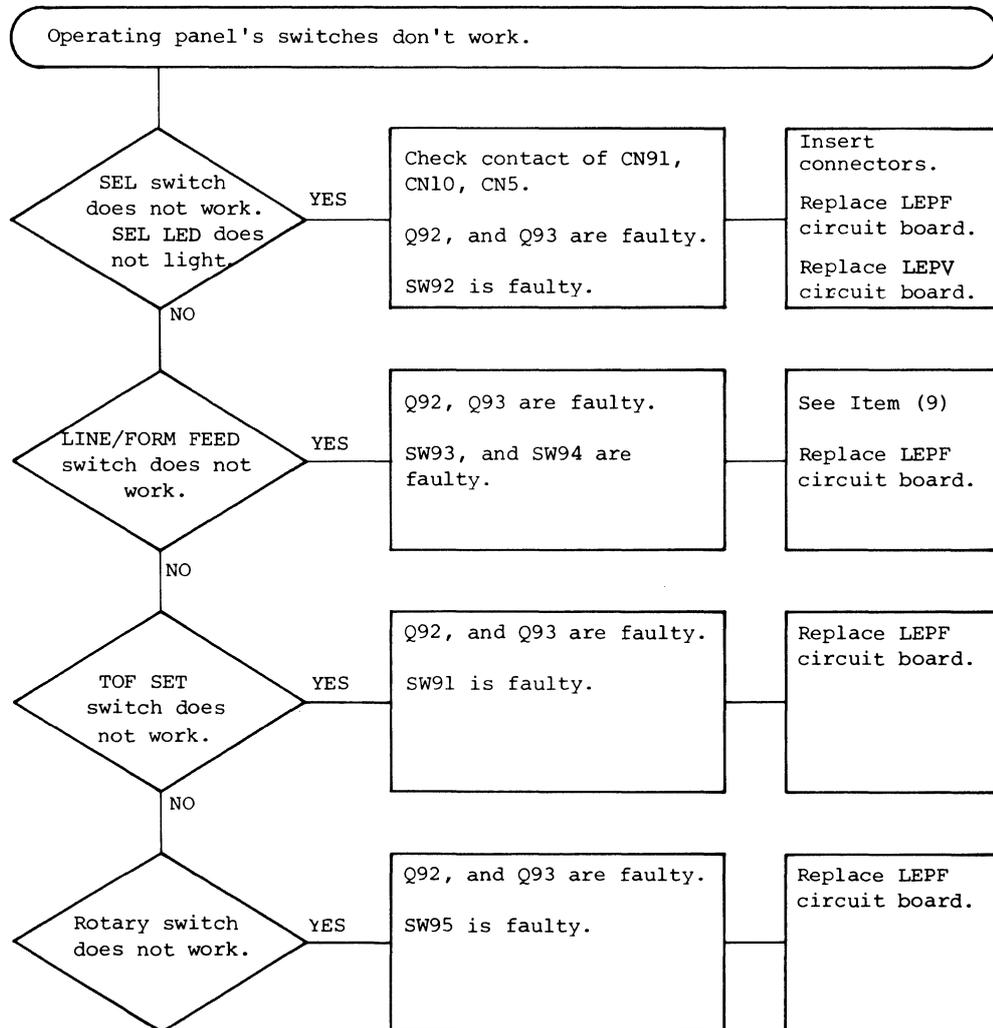



Item (16)

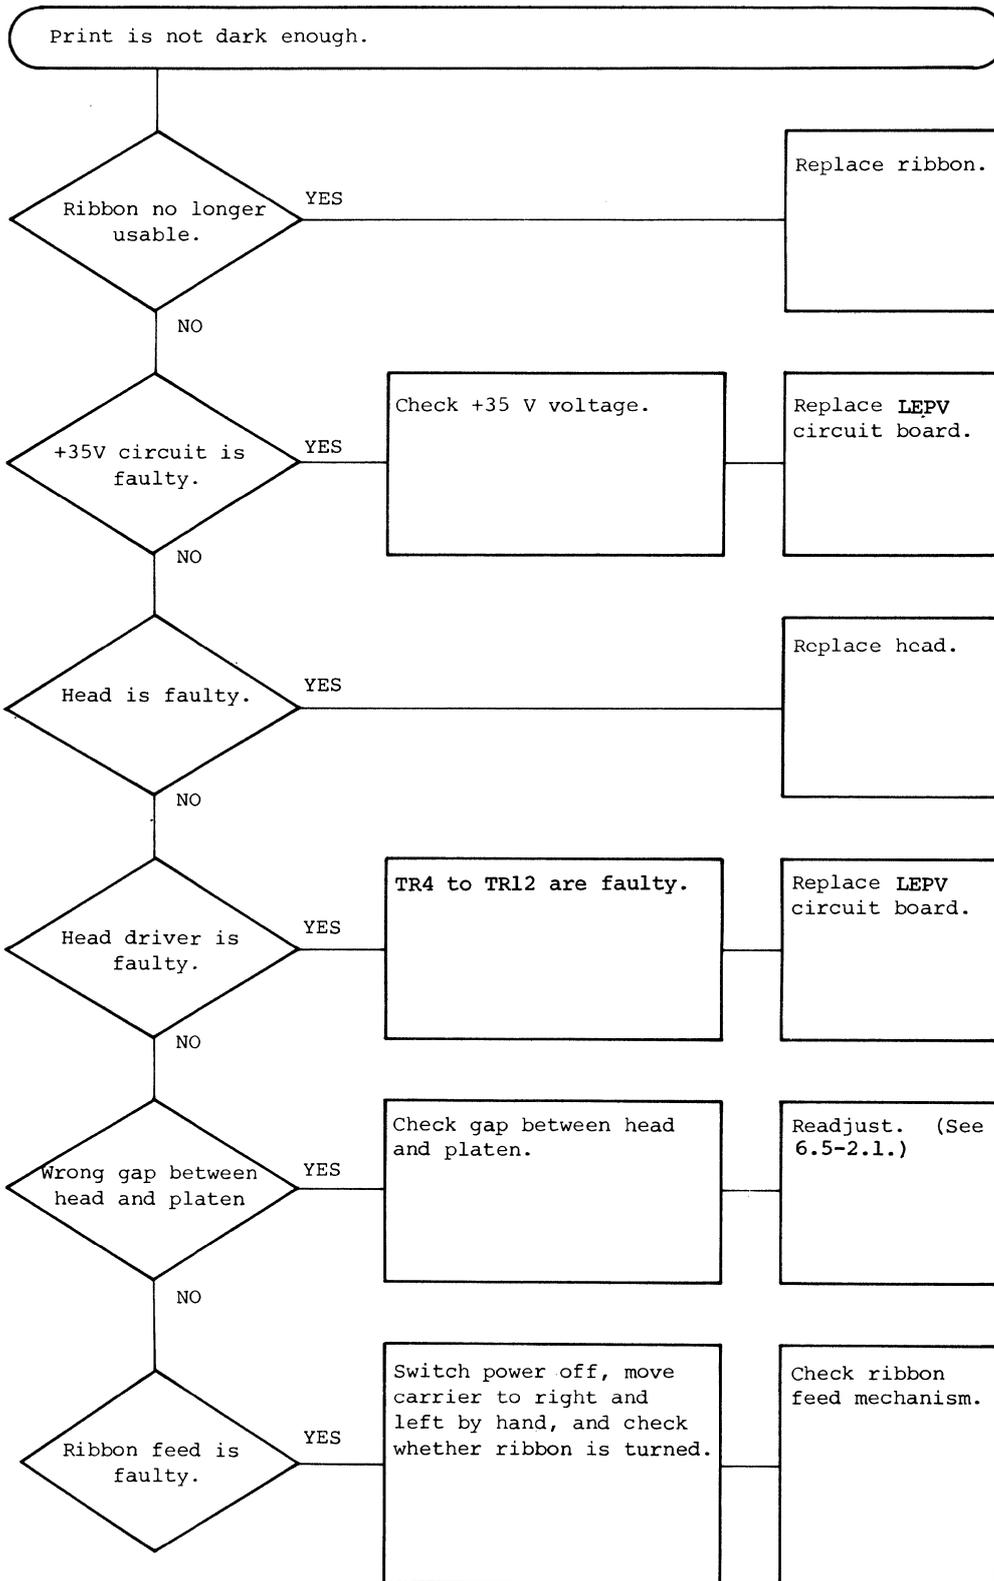





## 7. CIRCUIT DIAGRAMS








This chapter describes the circuit diagrams of the MICROLINE 82A in the following order:






Fig. 7-1 Table of Symbols

Fig. 7-2 Circuit Diagram

Fig. 7-1 Table of Symbols

Symbol	Mark	Description
	Q	SN 7405 inverter (open collector)
	Q	SN 7406 inverter (open collector)
	OSC	Ceramic oscillator
	TR	Transistor
	TR	Thyristor
	D	Diode
	D	Zener diode
	D	Light emitting diode
	TR	Regulator

Symbol	Mark	Description
	C	Capacitor
	C	Electrolytic capacitor
	R	Resistor
	SW	Switch
	S	Shortcircuit line or plug
	CN	Connector (terminal)
 (Reference)		Means a single part.
	FG	Frame ground
		Dot head (element)
	Q	SN7402 2NOR gate
	Q	SN7407 buffer (open collector)

Symbol	Mark	Description
	Q	339 Comparator
	BK	Breaker
	THERMI- STOR	Thermistor
	SG	Signal ground
	TF	Transformer
		Home position detector
	F	Fuse



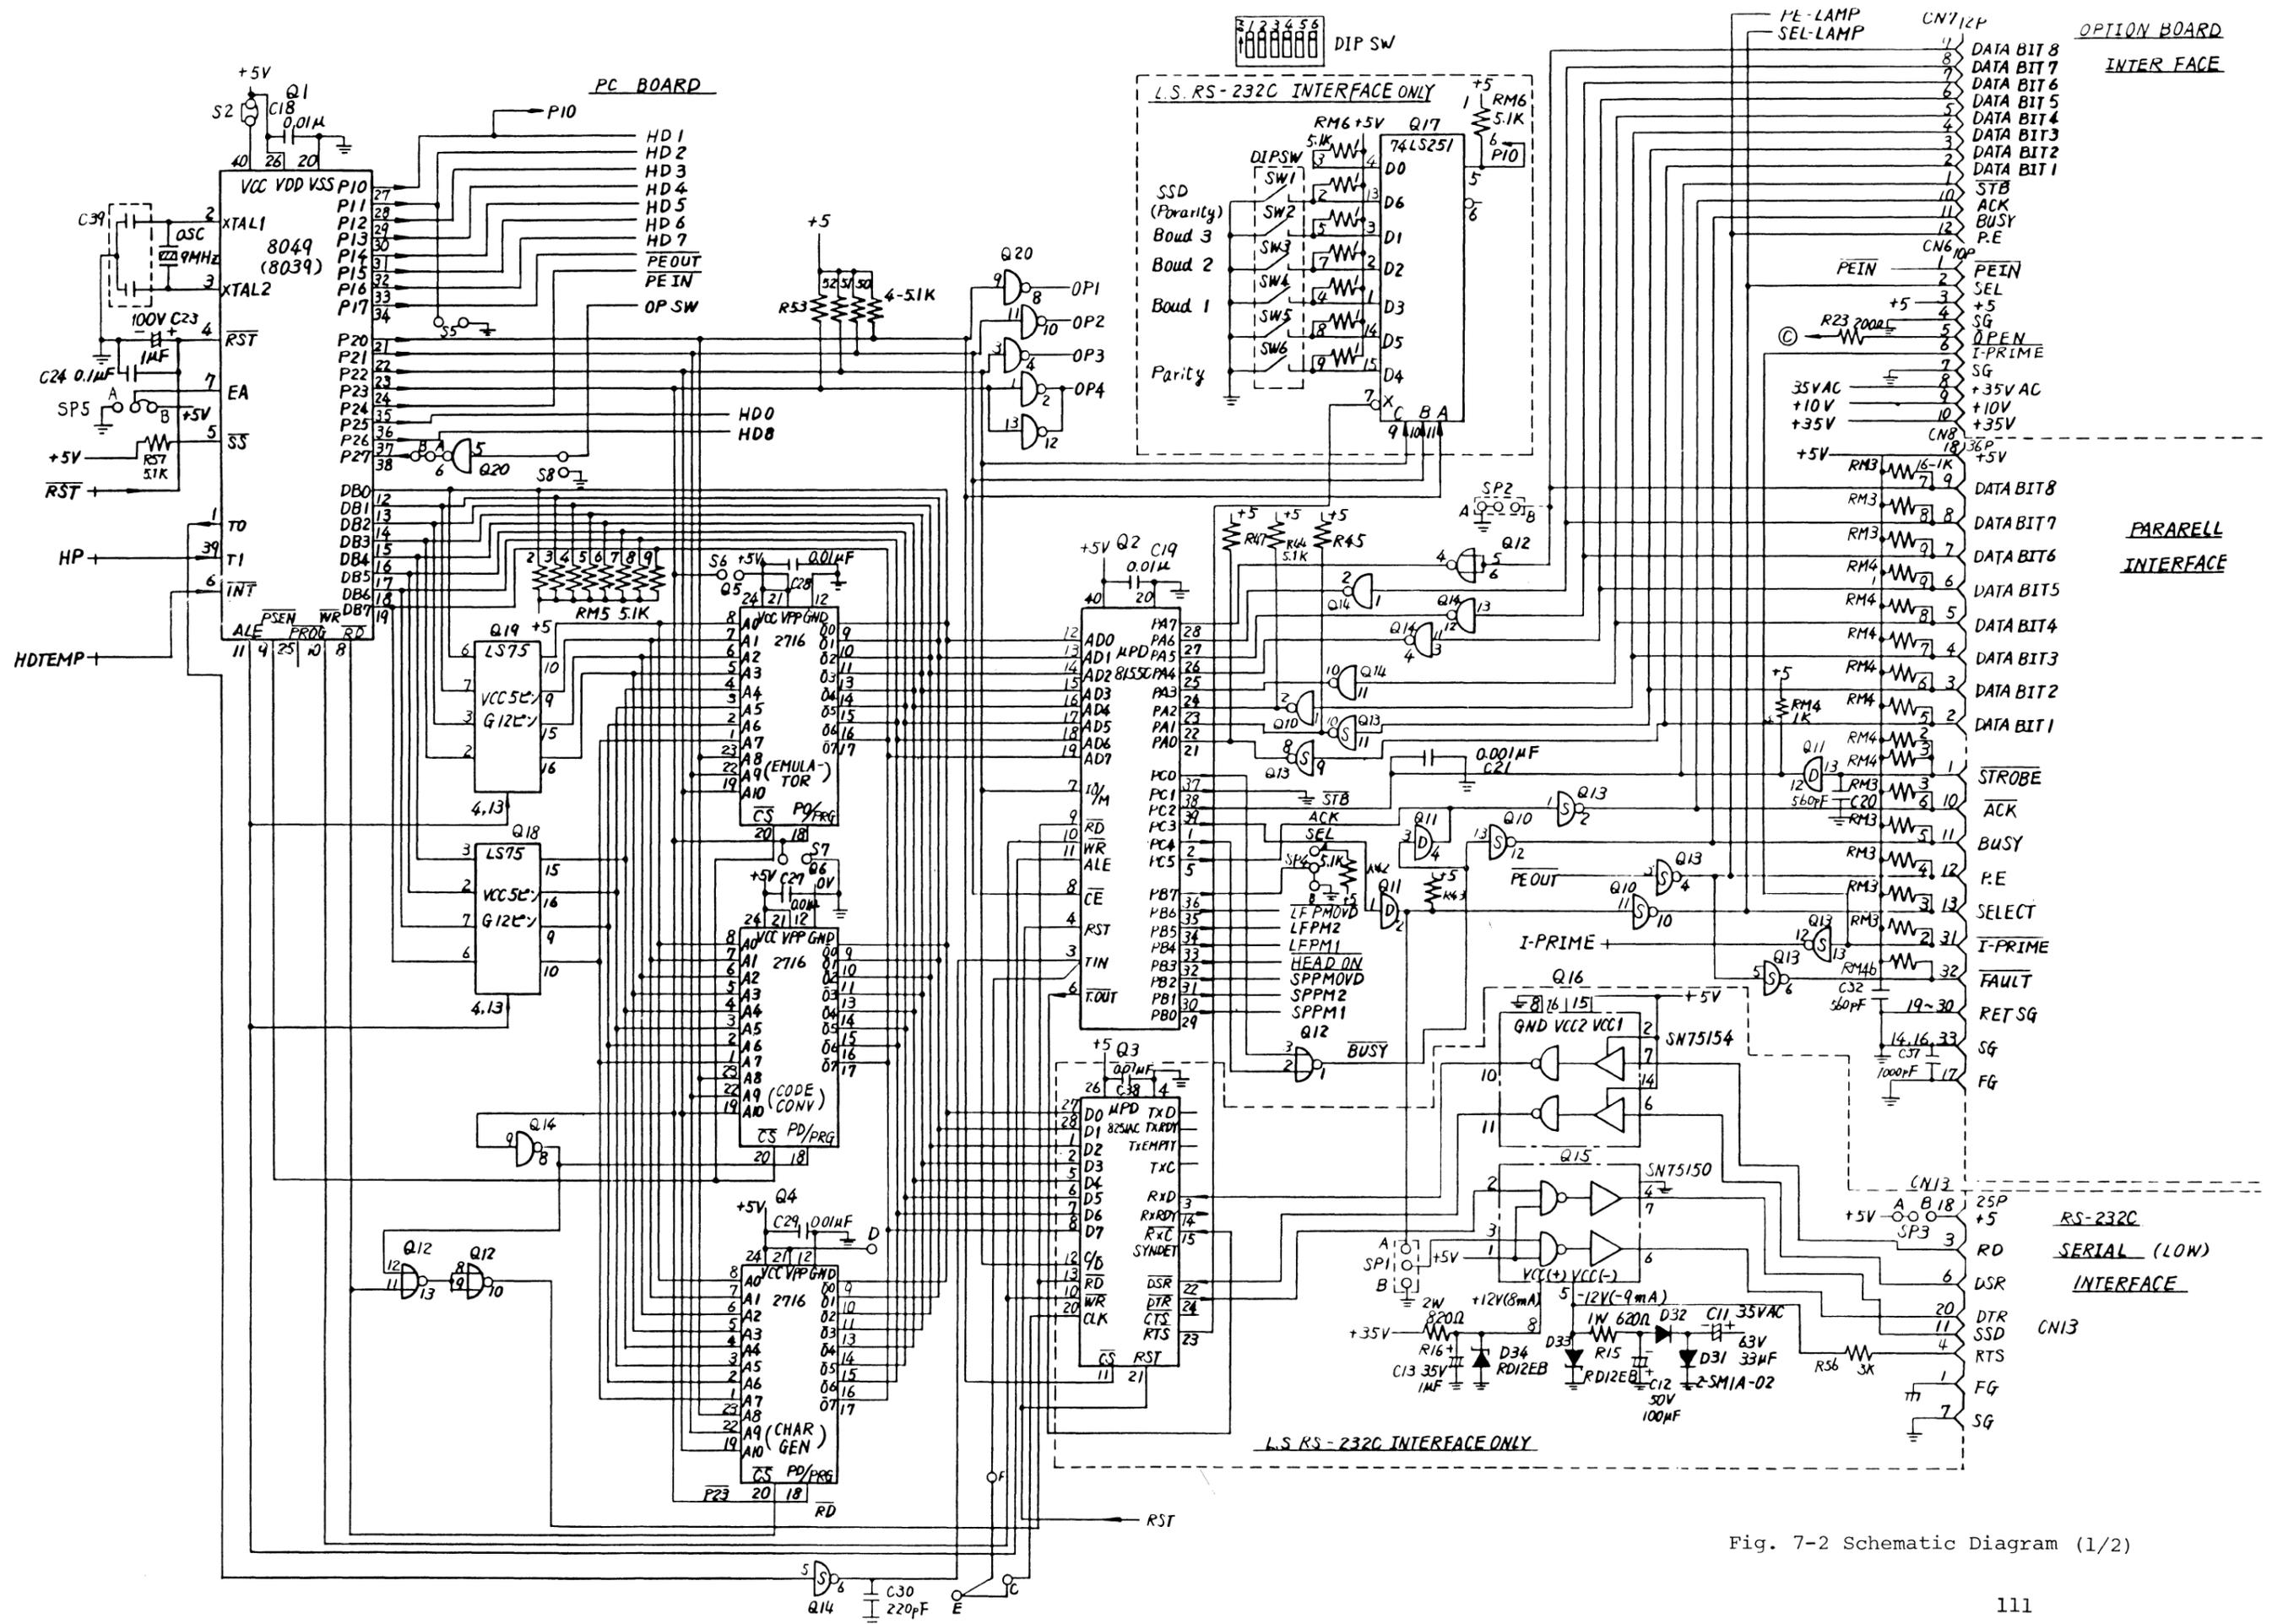


Fig. 7-2 Schematic Diagram (1/2)

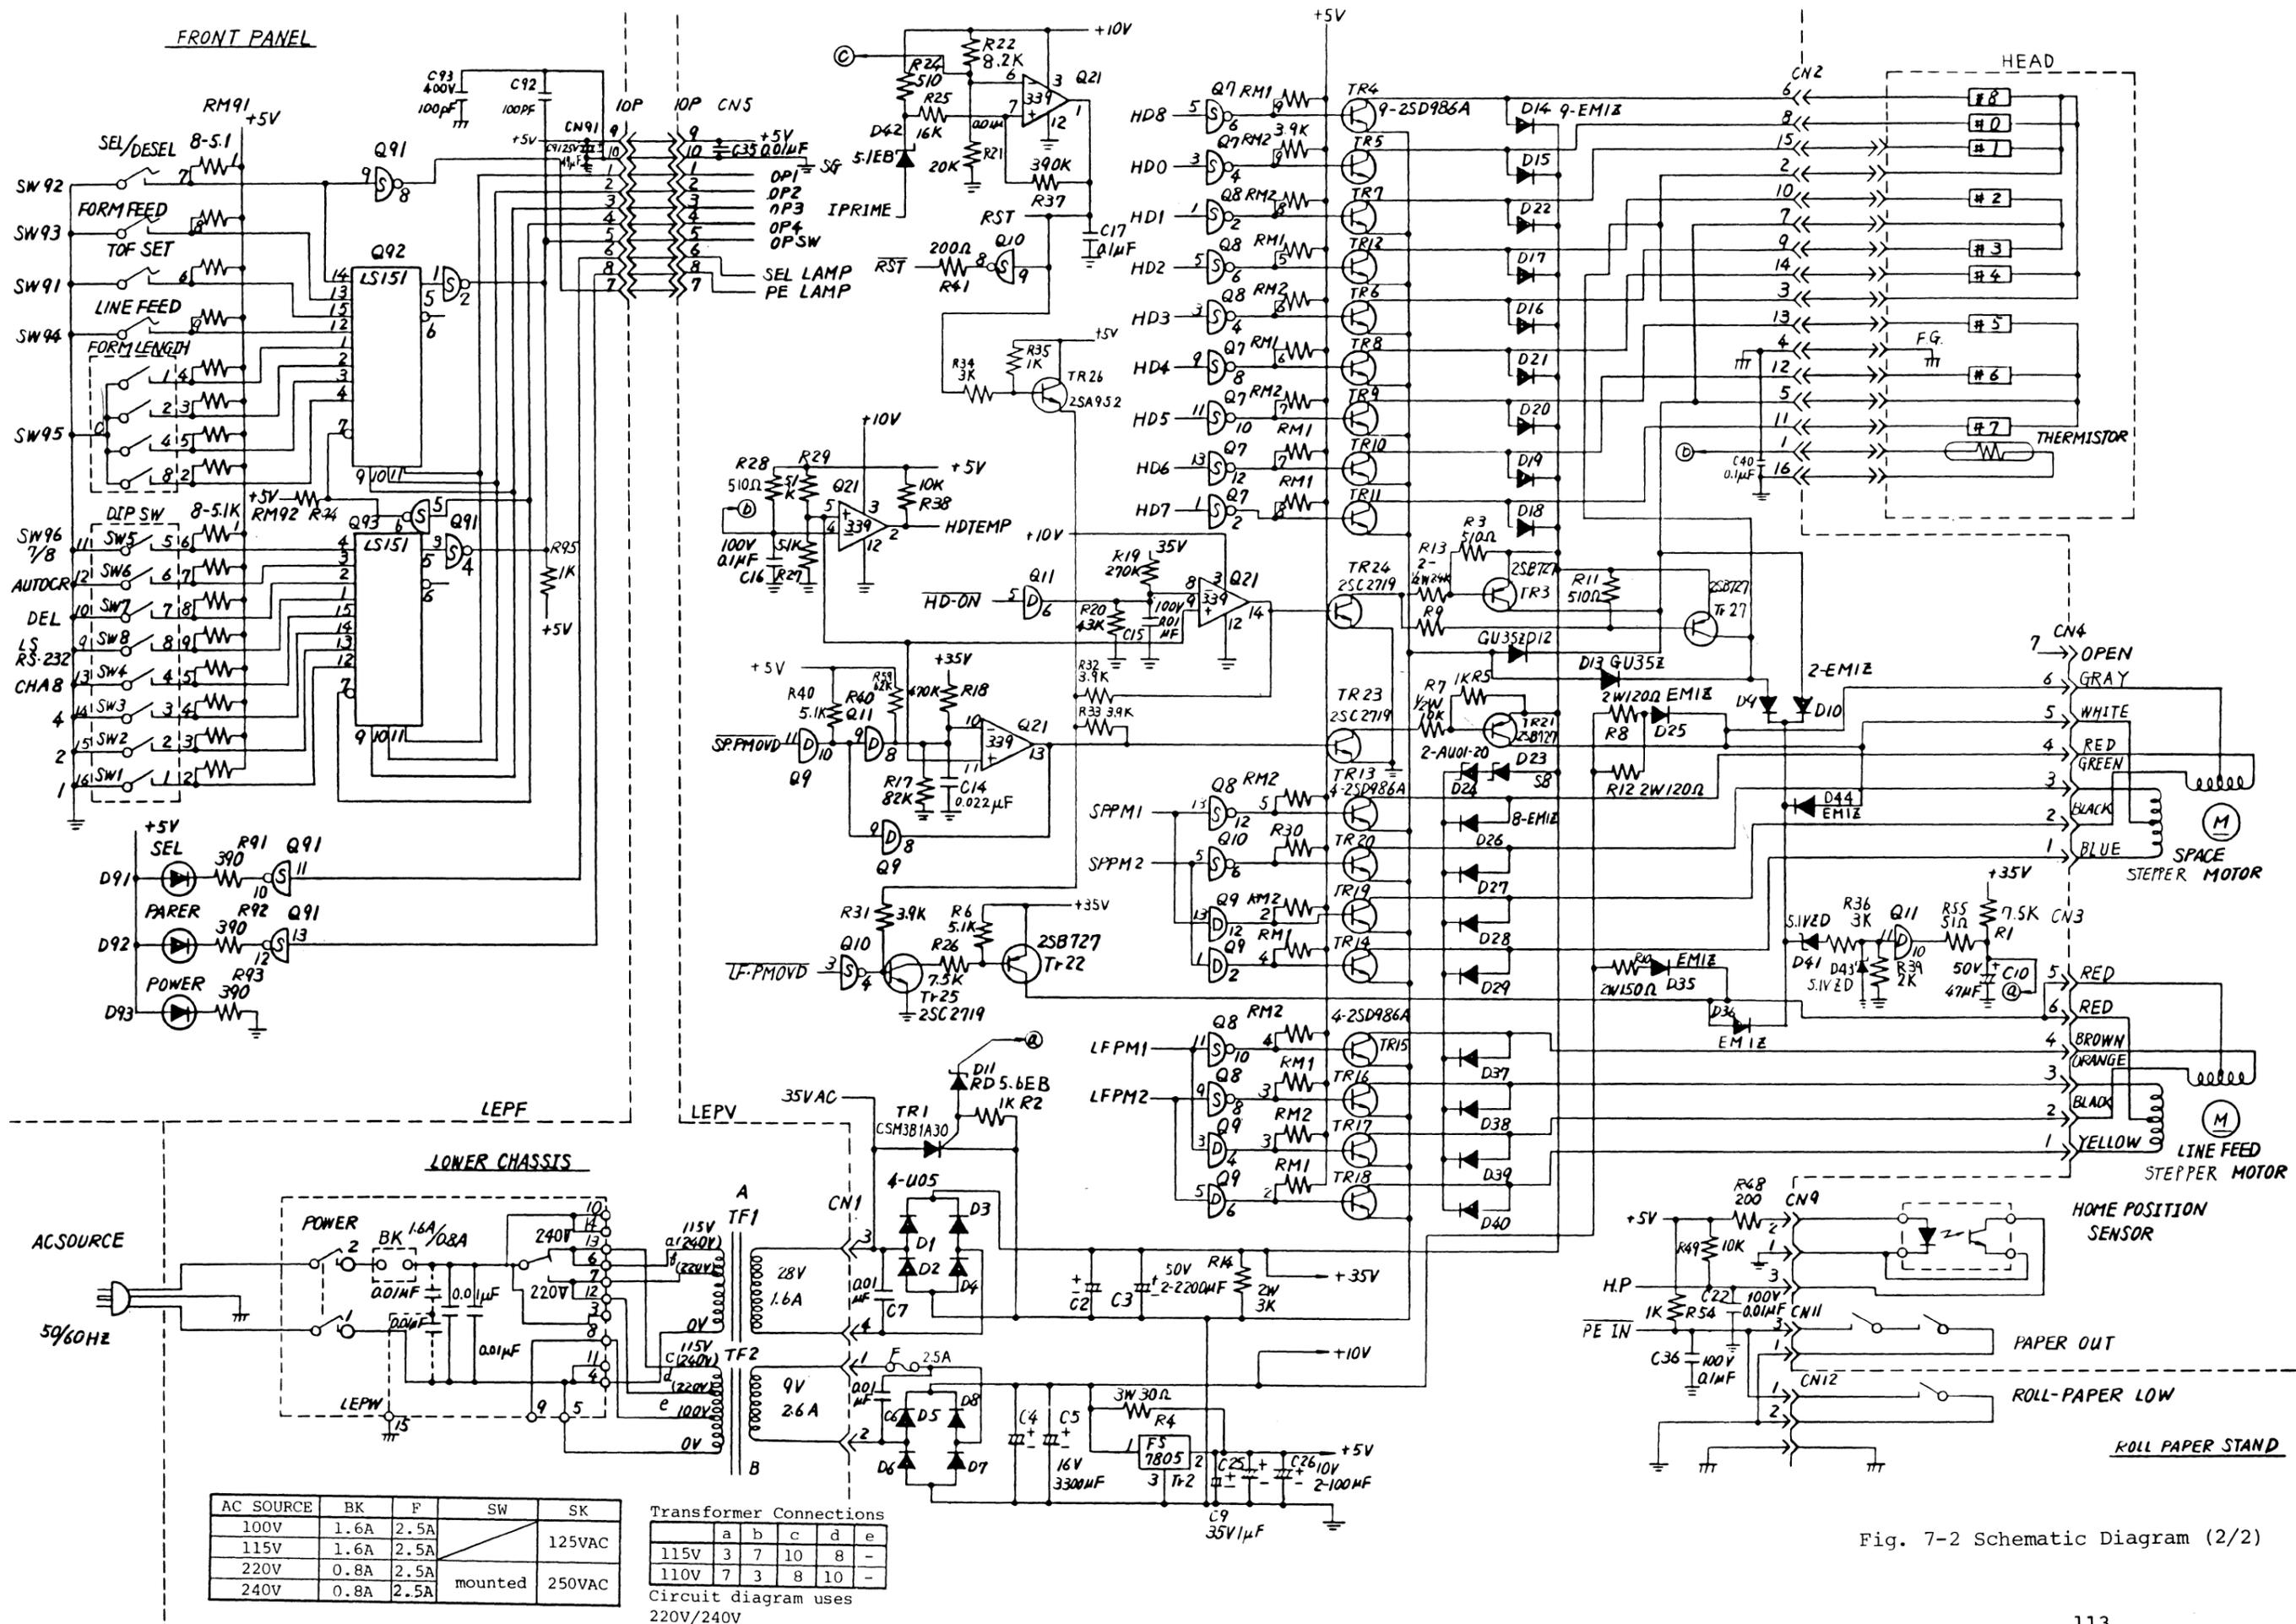


Fig. 7-2 Schematic Diagram (2/2)

## 8. TABLE OF COMPONENT PARTS (FOR 115 V)

This chapter describes the main component parts of the MICROLINE 82A in the order of the following schematic diagrams:

Fig. 8-1 General Assembly Diagram (LY-43205-6)

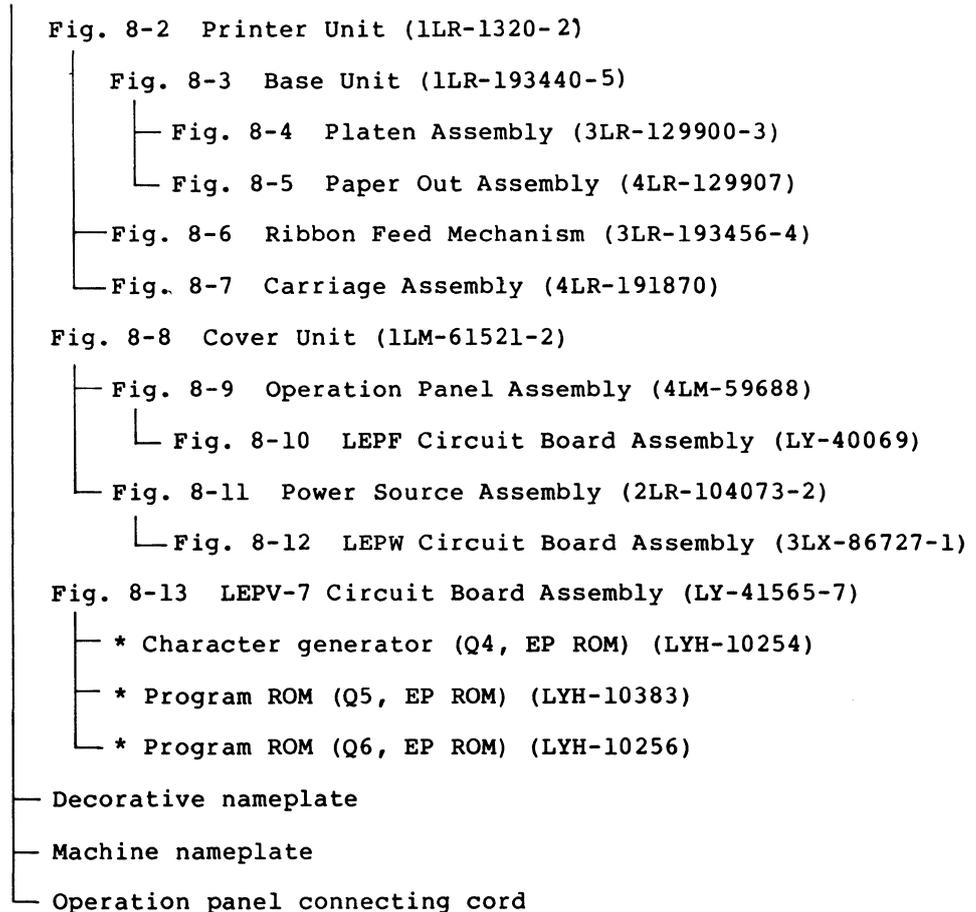


Fig. 8-14 Tractor Unit (optional) (LY-37539)




Fig. 8-17 Roll Paper Stand Assembly (optional) (LY-39699)

### NOTE

- 1) The parts marked with \* are not included in the table of component parts. Any of them may be ordered by specifying parts numbers. (Refer to pages 90 and 91.)
- 2) The meanings of the abbreviations in the columns "compatibility" of the table of component parts are as follows:

Abbreviation	Meaning
80	Part common to MICROLINE 80
82	Part common to MICROLINE 82
83	Part common to MICROLINE 83
83A	Part common to MICROLINE 83A



## 8. TABLE OF COMPONENT PARTS (FOR 220/240 V)

This chapter describes the main component parts of the MICRO-LINE 82A in the order of the following schematic diagrams:

Fig. 8-1 General Assembly Diagram (LY-43205-7)

Fig. 8-2 Printer Unit (1LR-1320-5)

Fig. 8-3 Base Unit (1LR-193440-2)

Fig. 8-4 Platen Assembly (3LR-129900-3)

Fig. 8-5 Paper Out Assembly (4LR-129907)

Fig. 8-6 Ribbon Feed Mechanism (3LR-193456-4)

Fig. 8-7 Carriage Assembly (4LR-191870)

Fig. 8-8 Cover Unit (1LM-61521-2)

Fig. 8-9 Operation Panel Assembly (4LM-59688)

Fig. 8-10 LEPF Circuit Board Assembly (LY-40069)

Fig. 8-11 Power Source Assembly (2LR-104073-3)

Fig. 8-12 LEPW Circuit Board Assembly (3LX-86727-2)

Fig. 8-13 LEPV-7 Circuit Board Assembly (LY-41565-3)

\* Character generator (Q4, EP ROM) (LYH-10352)

\* Program ROM (Q6, MASK ROM) (4LP-11740-02-001)

Decorative nameplate

Machine nameplate

Operation panel connecting cord

Fig. 8-14 Tractor Unit (optional) (LY-37539)

Fig. 8-15 Sprocket Assembly (R) (FMX-35100-2)

Fig. 8-16 Sprocket Assembly (L) (FMX-35150-2)

Fig. 8-17 Roll Paper Stand Assembly (optional) (LY-39699)

### NOTE

1) The parts marked with \* are not included in the table of component parts. Any of them may be ordered by specifying parts numbers. (Refer to pages 90 and 91.)

2) The meanings of the abbreviations in the columns "compatibility" of the table of component parts are as follows:

Abbreviation	Meaning
80	Part common to MICROLINE 80
82	Part common to MICROLINE 82
83	Part common to MICROLINE 83
83A	Part common to MICROLINE 83A

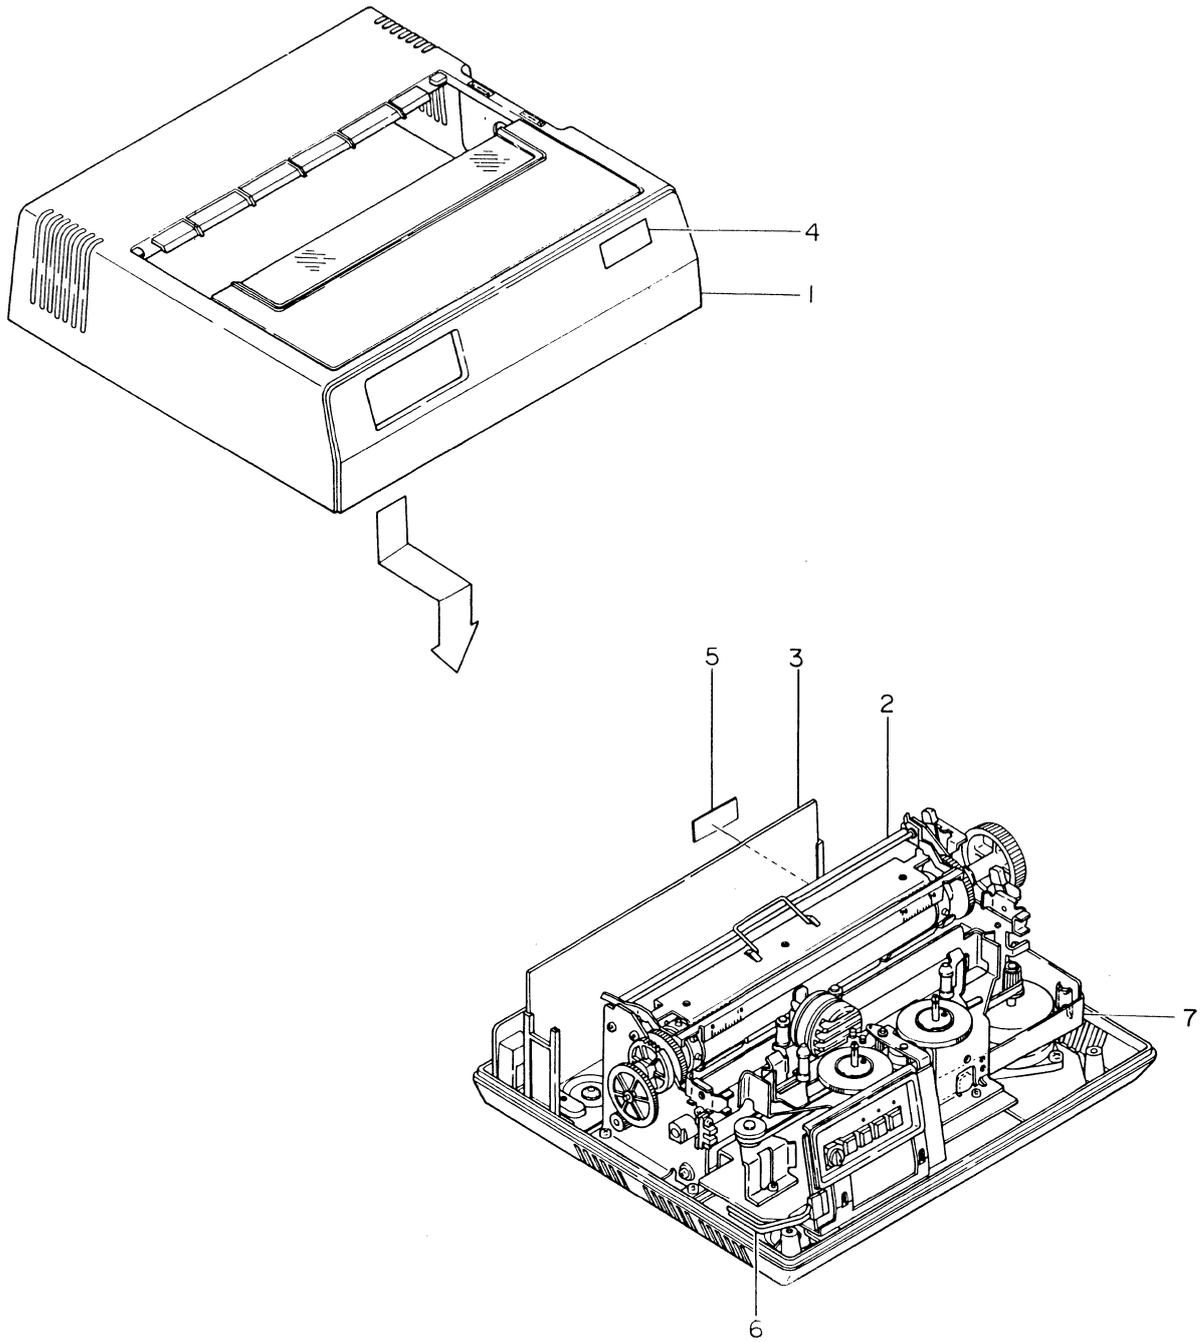


Fig. 8-1 General Assembly Diagram (LY-43205-6, -7) (1/2)

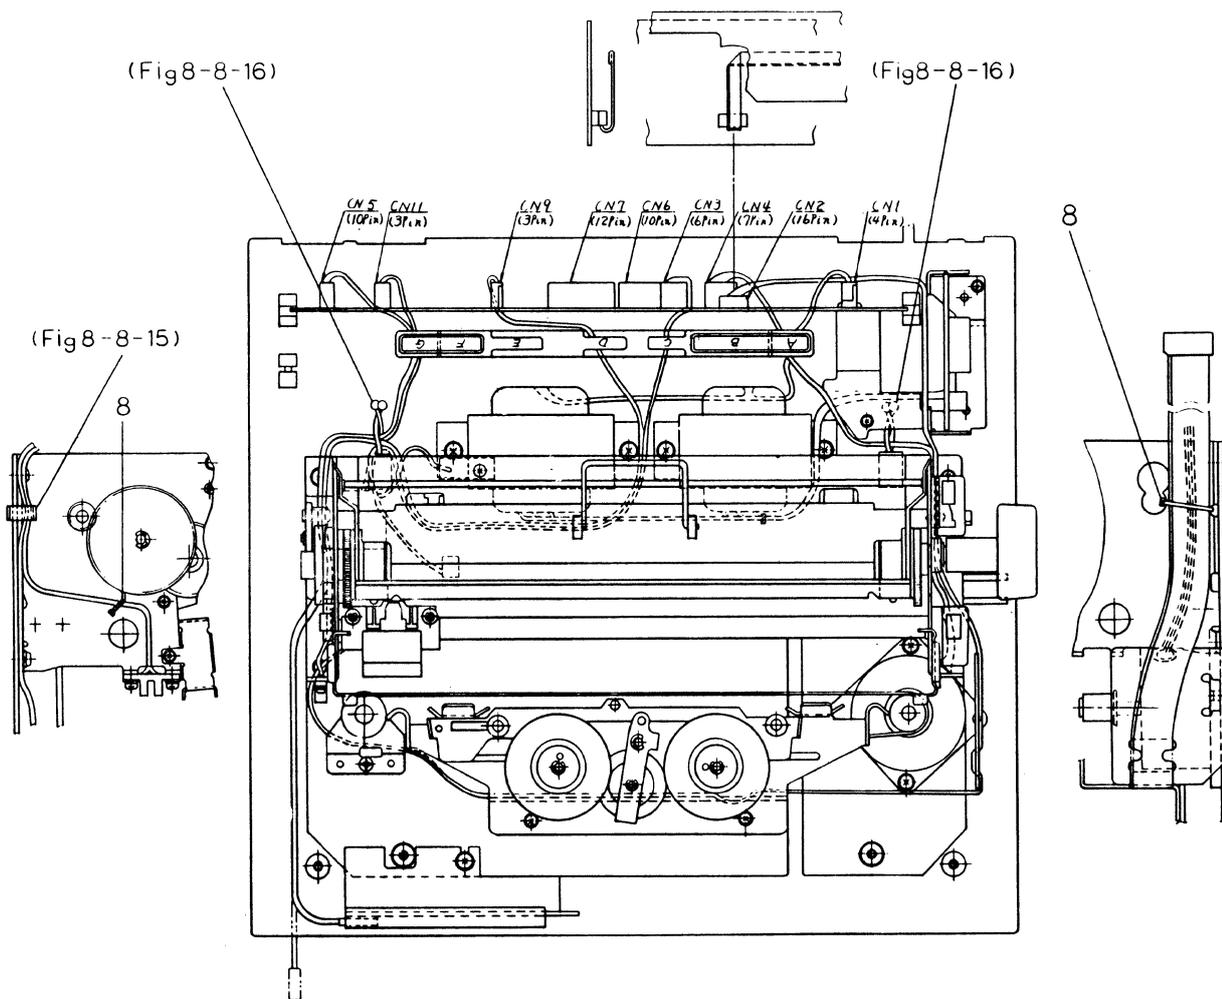


Fig. 8-1 General Assembly Diagram (LY-43205-6, -7) (2/2)

Fig. 8-1 General Assembly Diagram (LY-43205-6) (for 115 V)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	1LM-61521-2	Cover unit	1		
2	1LR-1320-2	Printer unit	1		
3	LY-41565-7	LEPV circuit board assembly	1		83A
4	4L-1738-1	Decorative nameplate	1		
5	4L-1568-1	Machine nameplate	1		
6	3LP-37256-3	Operation panel con- nection cord	1		83A
7	4LP-37587-1	Head connection cord	1		83A
8	4LP-6401-b1	Tie-wrap	2		83 83A
9	4L-1557	Caution for carriage tie down	1	} Components for packing	83 83A
10	4LP-1457-6	Fastener ( $\lambda$ = 250 mm, yellow)	1		83 83A



Fig. 8-1 General Assembly Diagram (LY-43205-7) (for 220/240V)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	1LM-61521-3	Cover unit	1		
2	1LR-1320-2	Printer unit	1		
3	LY-41565-3	LEPV circuit board assembly	1		83A
4	4L-1566-1	Decorative nameplate	1		
5	4L-1569-1	Machine nameplate	1		
6	3LP-37256-3	Operation panel con- nection cord	1		83A
7	4LP-37587-1	Head connection cord	1		83A
8	4LP-6401-b1	Tie-wrap	2		83 83A
9	4L-1557	Caution for carriage tie down	1	} Components for packing	83 83A
10	4LP-1457-6	Fastener ( $\ell$ = 250 mm, yellow)	1		83 83A





Fig. 8-2 Printer Unit (1LR-1320-2)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	3LR-190990-7	Print head assembly	1	With grey grounding wire	83A
2	1LR-193440-5	Base unit	1		
3	3LR-193456-4	Ribbon feed mechanism	1		
4	4LR-191870	Carriage assembly	1		83A
5	5LR-132450-2	Carriage shaft (U)	1		82
6	5LR-193455-2	Carriage shaft (L)	1		
7	5LR-132115	Adjusting lever (bonding)	1		83 83A
9	5LR-132451	Eccentric collar	2		83 83A
10	5LR-132452	Adjusting bracket	1		83 83A
20	⊕ P(SW)3-6-HH	Small pan-head screw	4		
21	3N <sub>4</sub> -HH	Lock nut	2		
22	⊕ P <sub>3</sub> -12-HH	Small pan-head screw	1		
23	SW <sub>4</sub> -HHC	Spring washer	2		
24	(-)B3-6-HH	Bolt	2		
25	SW3-HHC	Spring washer	1		
26	2N3-HH	Nut	1		

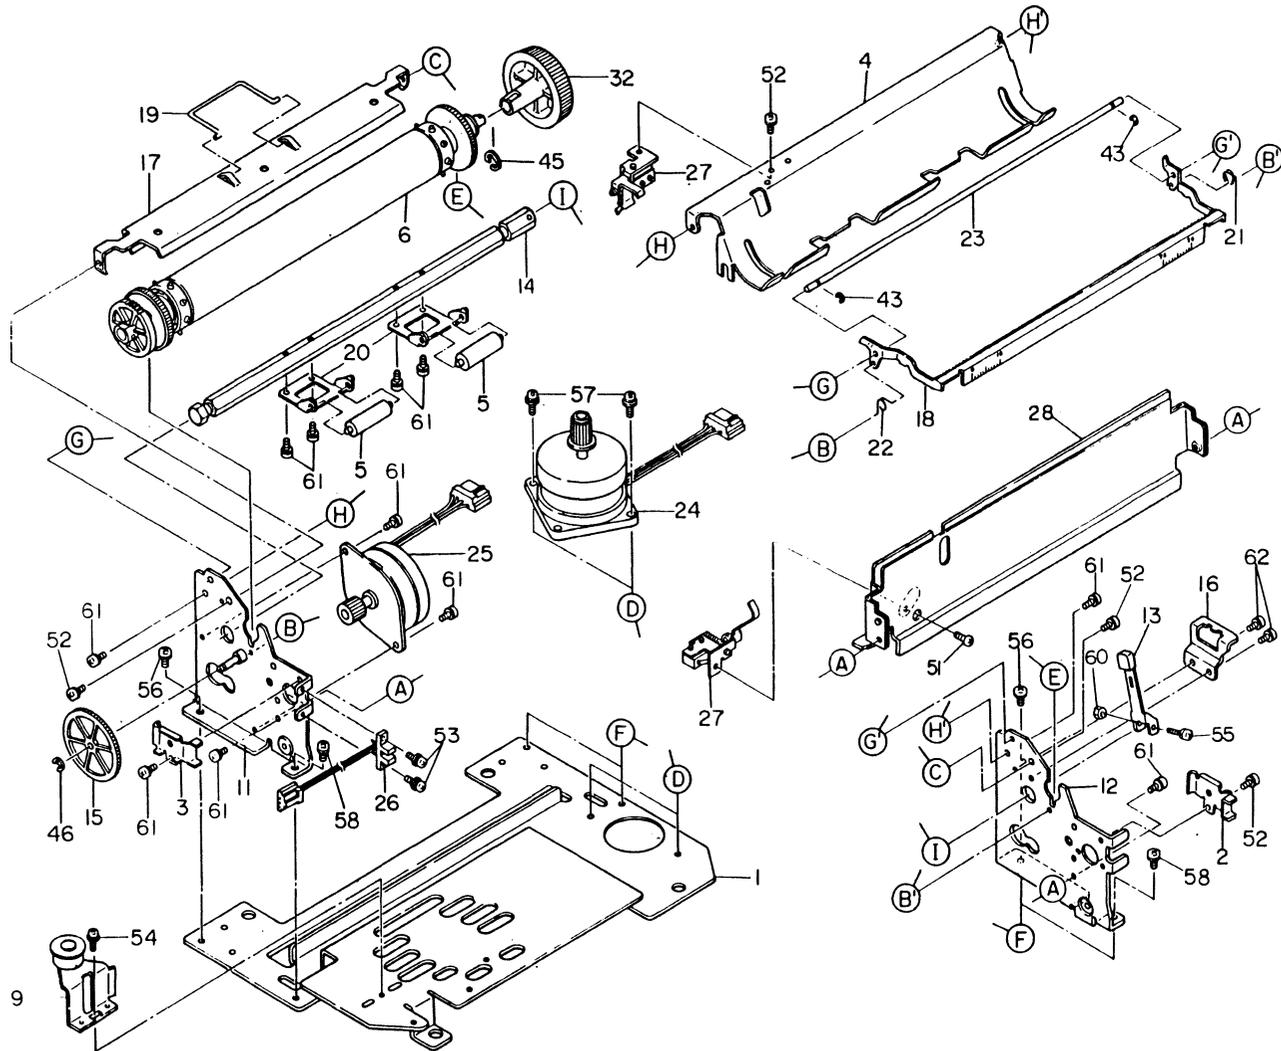


Fig. 8-3 Base Unit (1LR-193440-5)





Fig. 8-3 Base Unit (1LR-193440-5) (1/2)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	2LR-191882	Base-frame	1		
2	5LR-132222	Ribbon guide (R)	1		82 83 83A
3	5LR-132229	Ribbon guide (L)	1		82 83 83A
4	3LR-191883-2	Paper chute	1		
5	5LR-132485	Friction roller	2		83 83A
6	3LR-129900-3	Platen assembly	1		82
9	5LR-193441-2	Idle pulley bracket (clinched)	1		
11	4LR-193450	Side frame (L) (clinched)	1		83A
12	3LR-193452	Side frame (R) (clinched)	1		83A
13	5LR-132480	Paper lock release lever (welded)	1		83 83A
14	4LR-191885	Roller support shaft	1		
15	5LR-132475	LF idle gear	1		83 83A
16	5LR-132482	Paper lock release lever bracket	1		83 83A
17	4LR-191884	Paper separator	1		
18	4LR-193443	Paper tear-off bar	1		82
19	5LR-129804	Guide bar	1		82
20	5LR-132484	Feed roller spring	2		83A
21	5LR-129806-1	Detent spring (R)	1		82 83 83A
22	5LR-129806-2	Detent spring (L)	1		82 83 83A
23	5LR-129808-1	Paper tear-off bar shaft	1		80 82
24	4LR-191854	Space motor (pressure- fitted)	1		83A
25	5LR-132473-2	LF motor (pressure- fitted)	1		83A
26	4LR-129847-3	Home sensor assembly	1		83 83A
27	4LR-129907	Paper out assembly	1		83 83A
28	4LR-193462-3	Paper guide (welded)	1		
32	4LR-132233	Platen knob	1		80 82 83 83A

Fig. 8-3 Base Unit (1LR-193440-5) (2/2)

Item No.	Part No.	Description	Q'ty	Remarks	Compatibility
43	5KX-9057	E-snap ring (E2)	2		
45	5KX-9059	E-snap ring (E6)	1		
46	5KH-12050	E-snap ring (E3)	1		
51	⊕ P <sub>3</sub> -6-HH	Small pan-head screw	1		
52	⊕ P(SW) 3-6-HH	Small pan-head screw	4		
53	⊕ P(SW+W) 3-6-HH	Small pan-head screw	2		
54	⊕ P(SW+2W) 3-6-HH	Small pan-head screw	1		
55	⊕ P(SW) 3-14-HH	Small pan-head screw	1		
56	⊕ P(SW) 4-6-HH	Small pan-head screw	2		
57	⊕ P(SW+2W) 4-10-HH	Small pan-head screw	2		
58	⊕ P(SW) <sub>4</sub> -12-HH	Small pan-head screw	2		
60	2N3-HH	Nut	1		
61	⊕ P(SW) <sub>3</sub> -8-HH	Small pan-head screw	11		
62	⊕ P(SW) <sub>3</sub> -5-HH	Small pan-head screw	2		

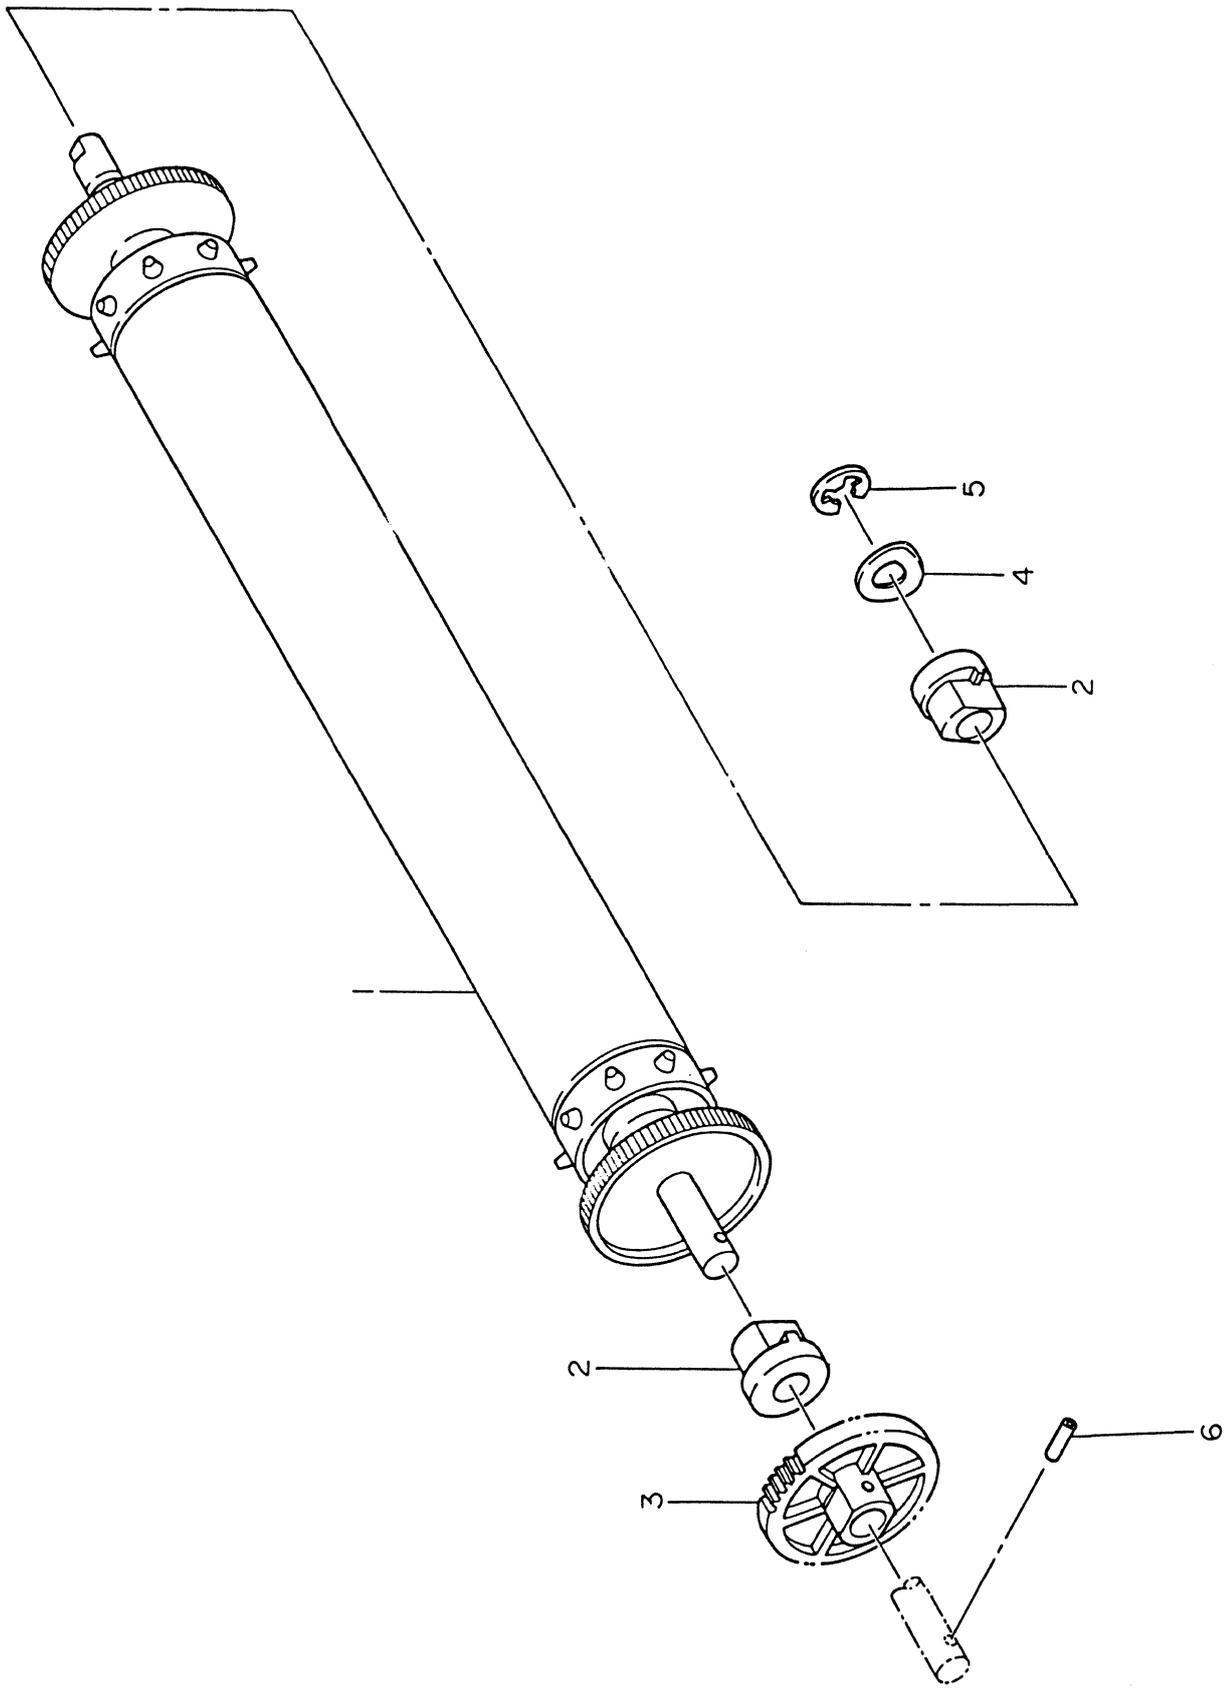


Fig. 8-4 Platen Assembly (3LR-129900-3)



Fig. 8-4 Platen Assembly (3LR-129900-3)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	4LR-129904-2	Platen (pressure- fitted)	1		80 82
2	4LR-129855	Platen bearing	2		80 82 83 83A
3	4LR-129859	Platen gear	1		80 82 83 83A
4	5LR-129906	Wave washer	1		80 82 83 83A
5	5KX-9059	E-snap ring	1		
6	SPP <sub>3</sub> -12-SUS	Spring pin	1		

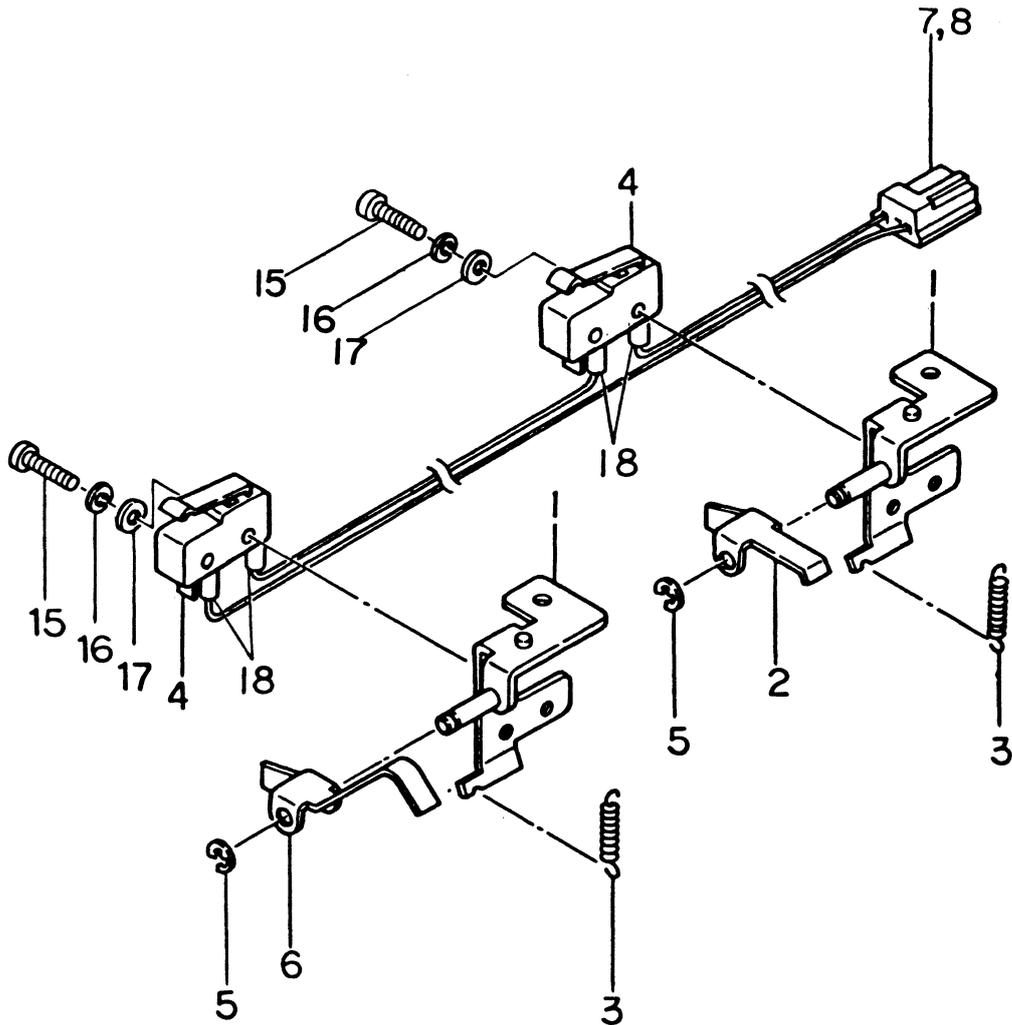


Fig. 8-5 Paper Out Assembly (4LR-129907)

Fig. 8-5 Paper Out Assembly (4LR-129907)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	5LR-129863	Microswitch bracket	2		80 82 83 83A
2	5LR-129870	Microswitch actuator	1		80 82 83 83A
3	5LR-129844	Spring	2		80 82 83 83A
4	4LP-3378-4	Microswitch	2		80 82 83 83A
5	5KX-9057	E-snap ring	2		
6	5LR-132496	Paper out assembly	1		83 83A
7	J4LP-5525-3	3-P receptacle housing	1		80 82 83 83A
8	J4LP-5526	Receptacle contact	2		80 82 83 83A
	LY-4658-3 (black)	17/0.16 heat resist- ing PVC wire	1	ℓ = 270mm	
	LY-4658-3 (blue)	17/0.16 heat resist- ing PVC wire	1	ℓ = 270mm	
	LY-4658-3 (blue)	17/0.16 heat resist- ing PVC wire	1	ℓ = 200mm	
15	⊕ P2.3-10-HH	Small pan-head screw	2		
16	SW2.3-HHC	Spring washer	2		
17	W2.3-HH	Washer	2		
18		Insulation SUMI-tube F	4	∅3 x 0.25 x 10	

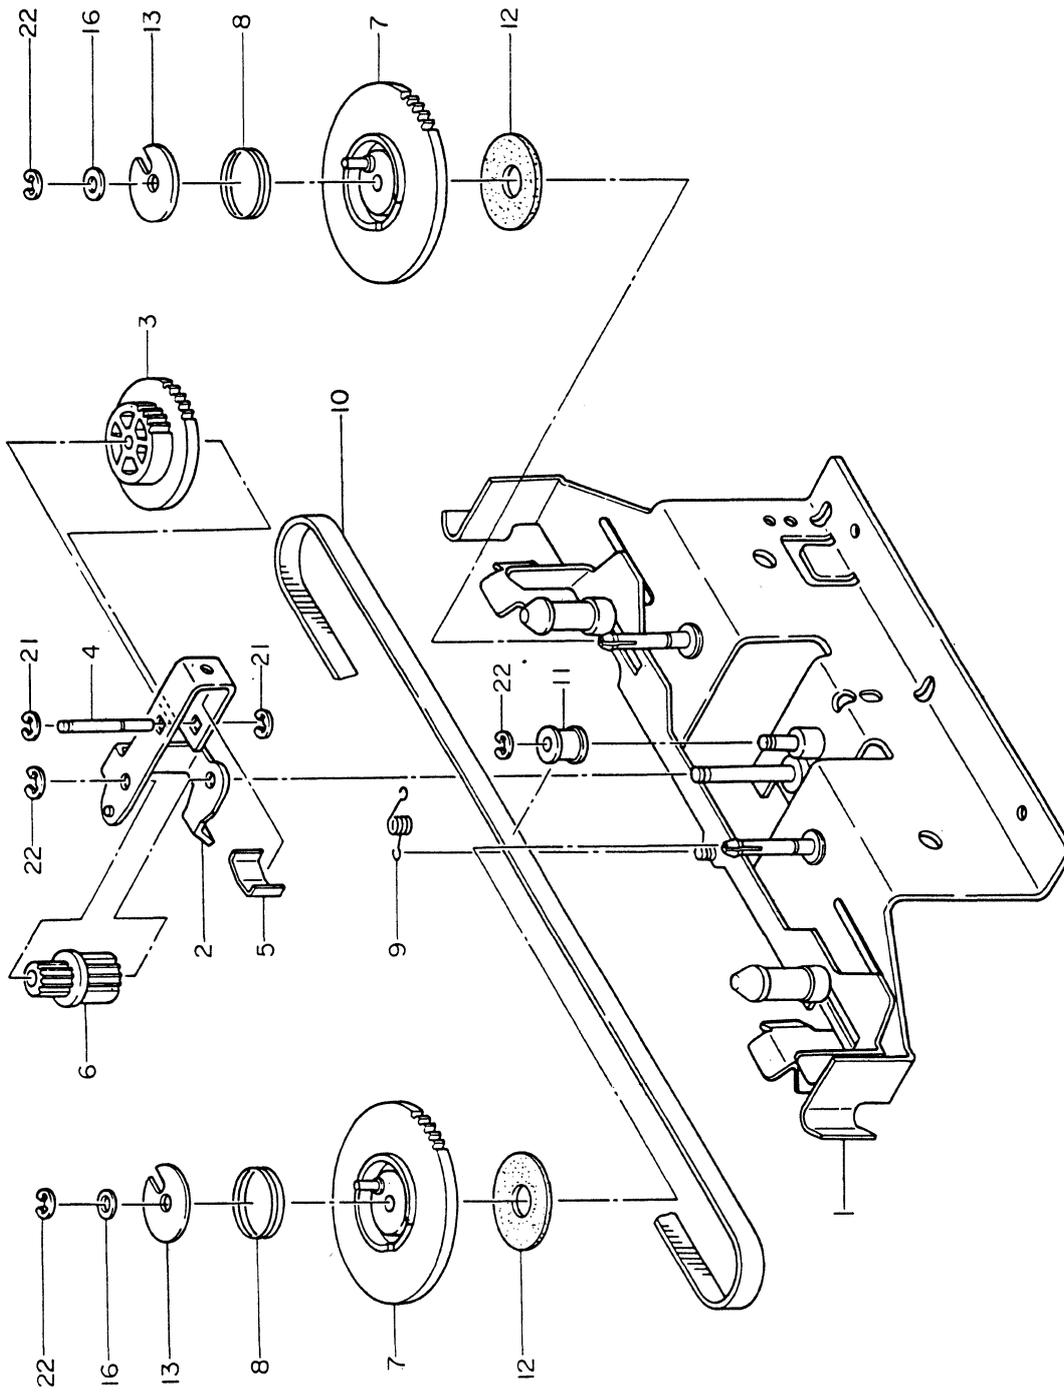


Fig. 8-6 Ribbon Feed Mechanism (3LR-193456-4)

Fig. 8-6 Ribbon Feed Mechanism(3LR-193456-4)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	3LR-193457	Ribbon bracket (clinched)	1		80 83A
2	5LR-129825	Ribbon change lever (clinched)	1		80 82 83 83A
3	4LR-129827	Ribbon gear	1		80 82 83 83A
4	5LR-193461	Snap shaft	1		80 83A
5	5LR-129876	Friction spring	1		80 82 83 83A
6	4LR-191858	Ribbon drive gear	1		83A
7	4LR-129837	Ribbon spool gear	2		80 82 83 83A
8	5LR-129840	Compression spring	2		80 82
9	5LR-129841	Detent spring	1		80 82 83 83A
10	4LP-1420-6	Synchro-belt	1		
11	5LR-191859	Pressure roller	1		83A
12	5LR-129842	Friction felt	2		80 82 83 83A
13	5LR-129843	Special washer	2		80 82 83 83A
16	5LR-132516	Plastic washer	2		80 82 83 83A
21	5KX-9057	E-snap ring (E <sub>2</sub> )	2		
22	5KH-12050	E-snap ring (E <sub>3</sub> )	4		

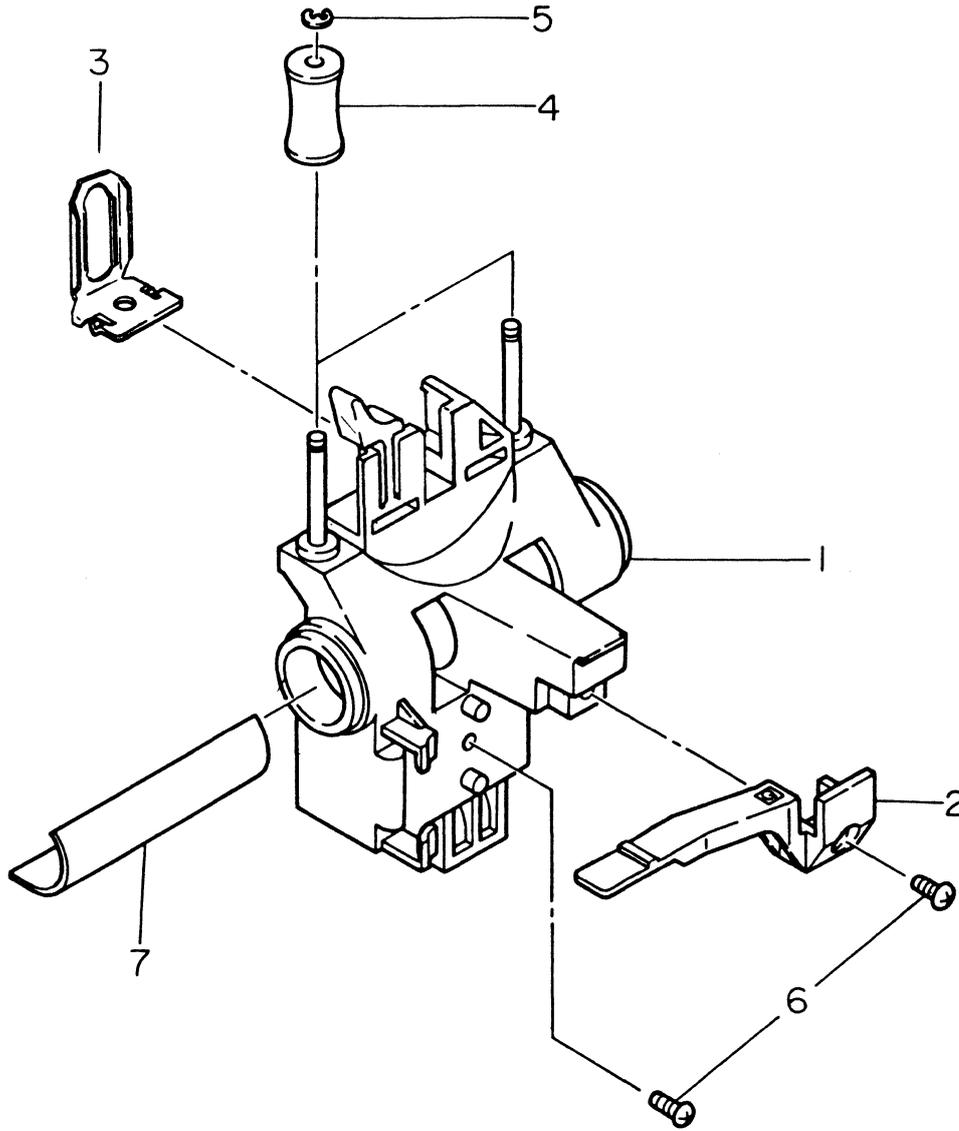


Fig. 8-7 Carriage Assembly (4LR-191870)

Fig. 8-7 Carriage Assembly (4LR-191870)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	4LR-191871	Carriage frame (pressure-inserted)	1		83A
2	4LR-191857	Belt clamp	1		83A
3	5LR-191873	Ribbon protector	1		83A
4	5LD-83139	Ribbon roller	2		83 83A
5	5KX-9057	E-snap ring (E <sub>2</sub> )	2		
6	⊕ T <sub>2</sub> P <sub>3</sub> -10-HH	Small tapping screw	2		
7	5LR-191874	Oil felt	1		83A

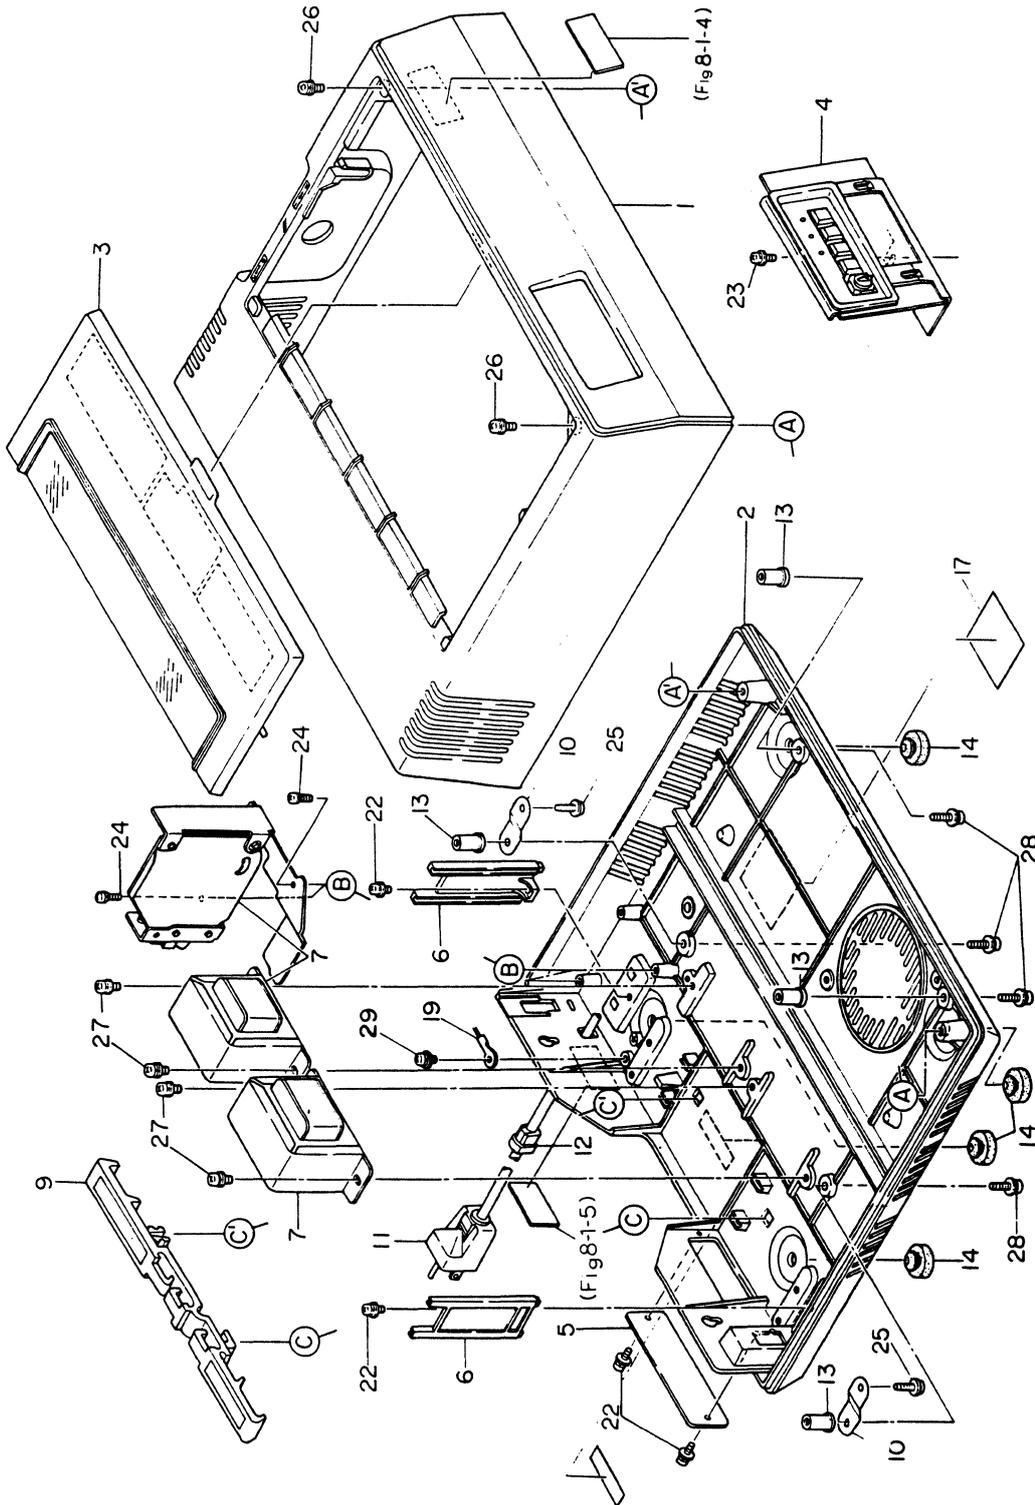


Fig. 8-8 Cover Unit (ILM-61521-2) (for 115 V)

Fig. 8-8 Cover Unit (1LM-61521-2) (for 115 V)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	1LM-59707	Upper cover	1		82
2	1LM-59708	Lower cover	1		82
3	2LM-60126	Access cover	1		
4	4LM-59688	Operation panel assembly	1		82 83 83A
5	5LM-59696	Blank plate	1		82 83 83A
6	4LM-60115	Circuit board support	2		82 83 83A
7	2LR-104073-2	Power source assembly	1		
9	3LM-60116	Cord clamp	1		82 83 83A
10	5LM-61519	Grounding plate	2		80 83A
11	3LP-38462	3-pin AC cord	1		83A
12	5LP-6463-C-5	Cord bushing	1		80 82
13	4LP-6726-2	Quite-tight	4		80 82 83 83A
14	5LP-1488	Rubber foot	4		80 82 83 83A
15	5LP-1492	Cord retainer	1		83A
16	5LP-1489	Cord clamp	2		83A
17	4L-1603	FCC nameplate	1		
18	5L-1442	UL listing mark	1		80 82 83 83A
19	5LP-6364-2	Solderless terminal	1		83A
22	⊕ P(SW+W) <sub>3</sub> -8-HH	Small pan-head screw	4		
23	⊕ P(SW+2W) 3-6-HH	Small pan-head screw	1		
24	⊕ P(SW)3-6-HH	Small pan-head screw	2		
25	⊕ P(SW) <sub>3</sub> -5-HH	Small pan-head screw	2		
26	⊕ P(SW+W) 4-12-HH	Small pan-head screw	2		
27	⊕ P(SW+2W) 4-8-HH	Small pan-head screw	4		
28	⊕ P(SW+2W) 4-18-HH	Small pan-head screw	4		
29	⊕ P(SW+2W) 4-6-HH	Small pan-head screw	1		

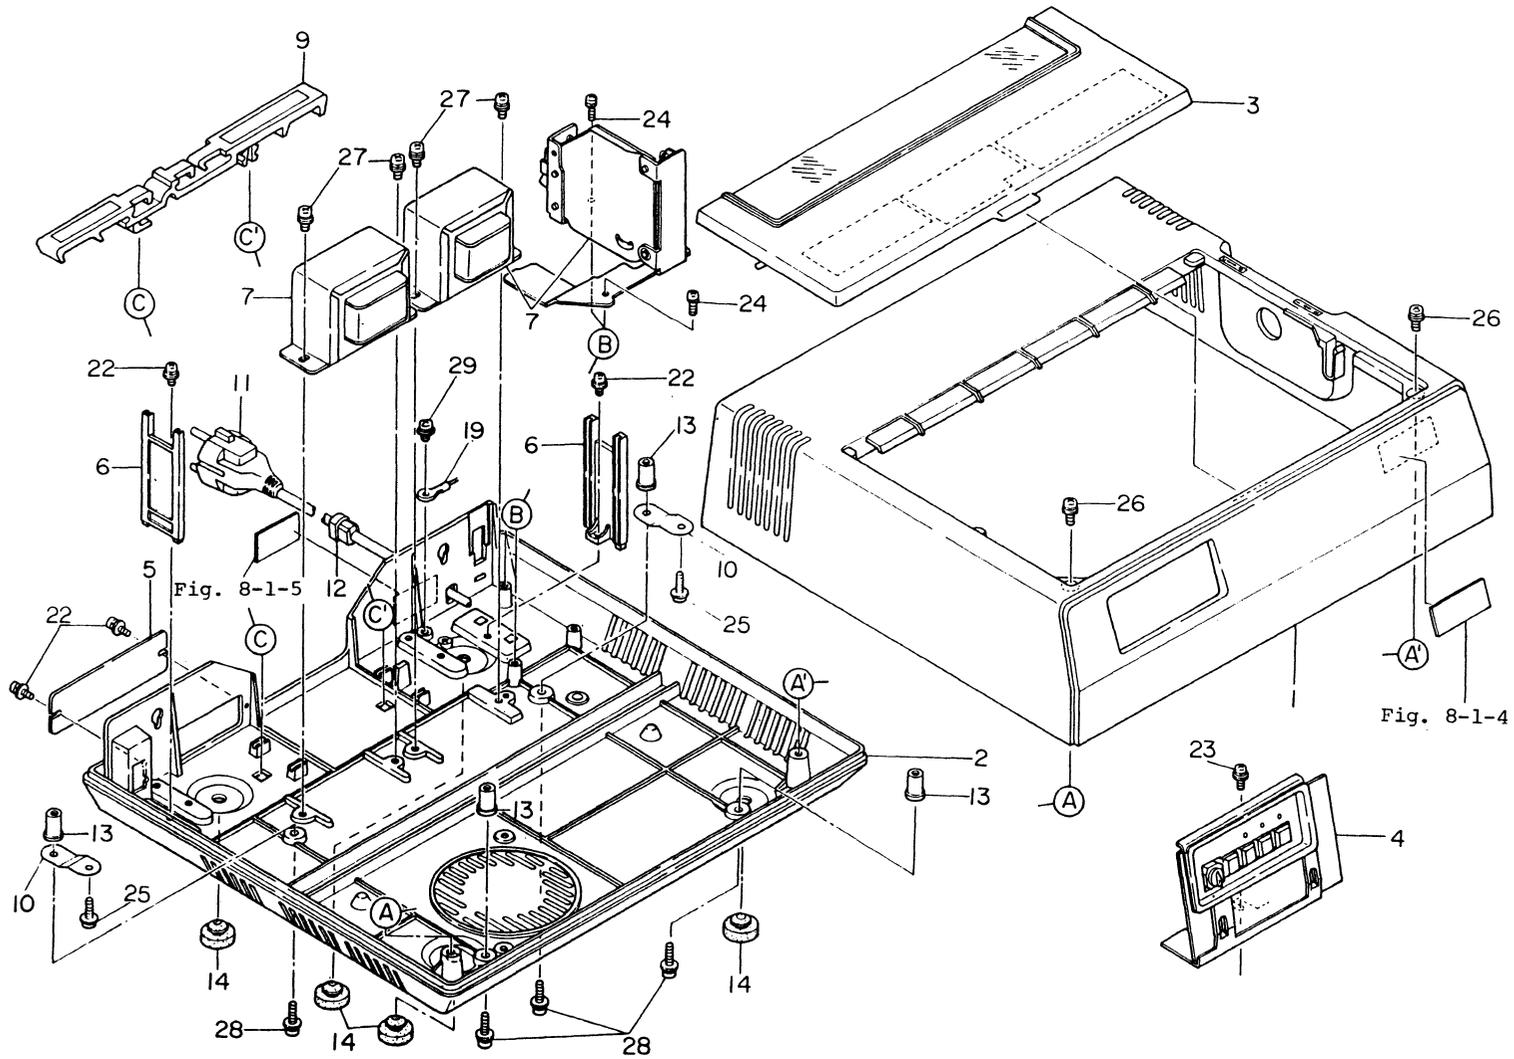


Fig. 8-8 Cover Unit (1LM-61521-3) (for 220/240 V)



Fig. 8-8 Cover Unit (1LM-61521-3) (for 220/240 V)

Item No.	Part No.	Description	Q'ty	Remarks	Compati-bility
1	1LM-59707	Upper cover	1		82
2	1LM-59708	Lower cover	1		82
3	2LM-60126	Ribbon access cover	1		
4	4LM-59688	Operation panel assembly	1		82 83 83A
5	5LM-59696	Blank plate	1		82 83 83A
6	4LM-60115	Circuit board support	2		82 83 83A
7	2LR-104073-3	Power source assembly	1		
9	3LM-60116	Cord clamp	1		82 83 83A
10	5LM-61519	Grounding plate	2		80 83A
11	3LP-38463	3-pin AC cord	1		83A
12	5LP-6463-C-6	Cord bushing	1		80 82
13	4LP-6726-2	Quite-tight	4		80 82 83 83A
14	5LP-1488	Rubber foot	4		83A
15	5LP-1492	Cord retainer			83A
16	5LP-1489	Cord clamp			83A
19	5LP-6364-2	Solderless terminal	1		83A
20	(-)B4-6-HH	(-) hexa. bolt	1		
22	⊕ P (SW+W) 3-8-HH	Small pan-head screw	4		
23	⊕ P (SW+2W) 3-6-HH	Small pan-head screw	1		
24	⊕ P (SW) 3-6-HH	Small pan-head screw	2		
25	⊕ P (W) 3-5-HH	Small pan-head screw	2		
26	⊕ P (SW+W) 4-12-HH	Small pan-head screw	2		
27	⊕ P (SW+2W) 4-8-HH	Small pan-head screw	4		
28	⊕ P (SW+2W) 4-18-HH	Small pan-head screw	4		
29	⊕ P (SW+2W) 4-6-HH	Small pan-head screw	1		

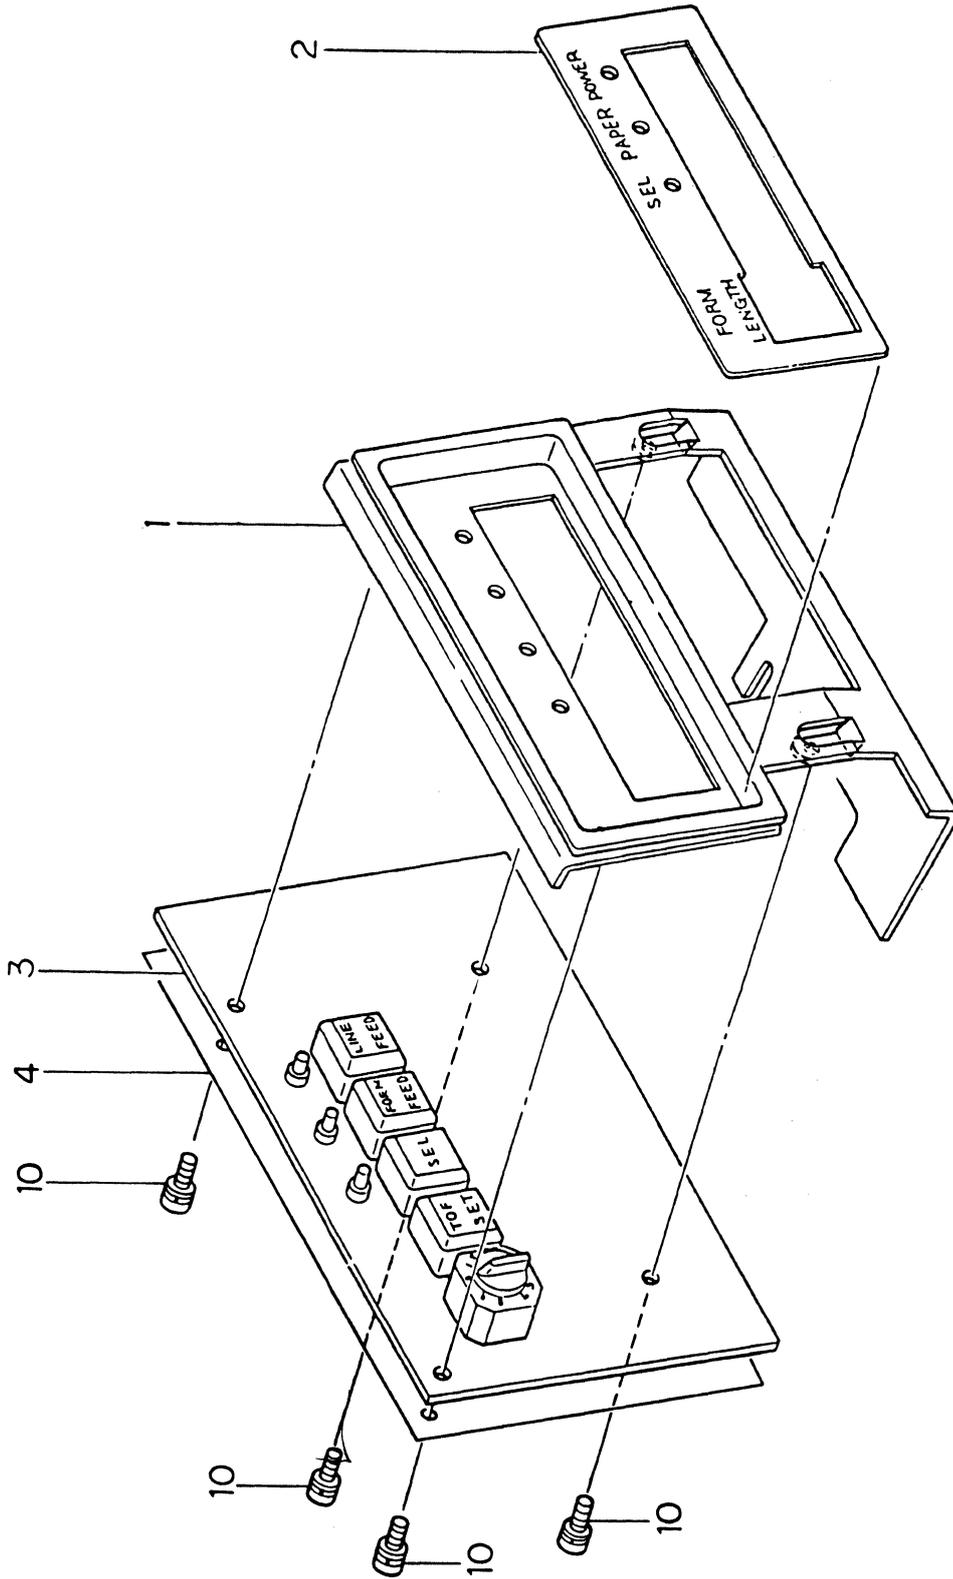


Fig. 8-9 Operation Panel Assembly (4IM-59688)



Fig. 8-9 Operation Panel Assembly (4LM-59688)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	4LM-59689	Circuit board bracket (welded)	1		82 83 83A
2	5LM-59693	Indication panel	1		82 83 83A
3	LY-40069	LEPF print circuit board assembly	1		82 83 83A
4	4LR-191908	Insulator	1		82 83 83A
10	⊕ P(SW+W) 3-6-HH	Small pan-head screw	4		

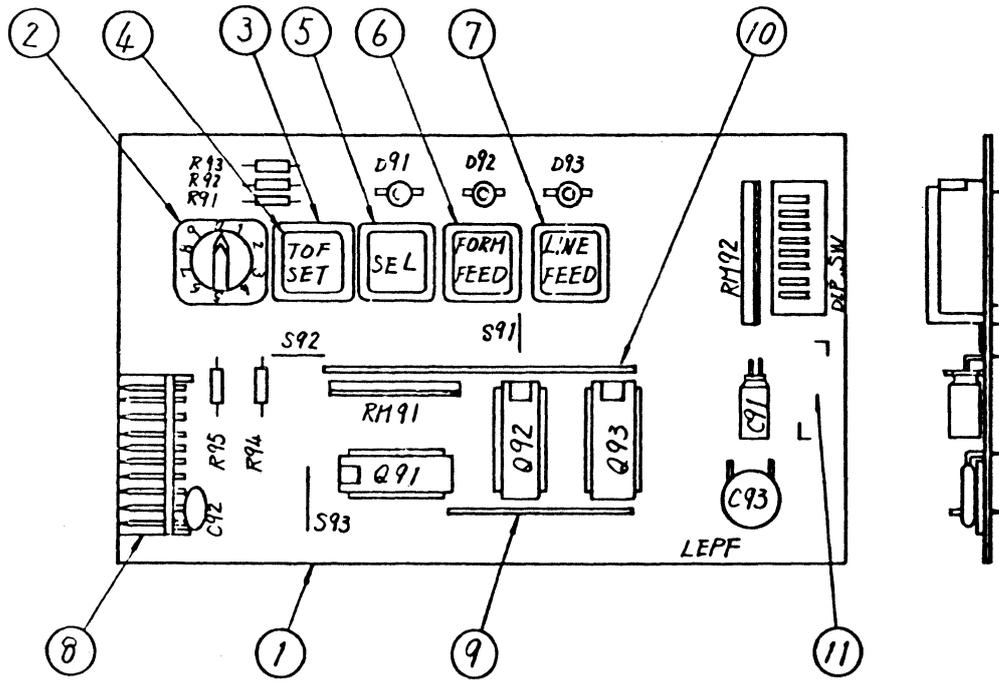


Fig. 8-10 LEPF Circuit Board Assembly (LY-40069)



Fig. 8-10 LEPF Circuit Board Assembly (LY-40069)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
①	3LP-16707	LEPF circuit board	1	Board only	82 83 83A
D91 to D93	4LP-44373	SEL103R light emitting diode	3		82 83 83A
R91 to R93	R4LP-8446-391	Simple-insulated resistor 1/4W 390Ω	3		82 83 83A
R94	R4LP-8446-512	Simple-insulated resistor 1/4W 5.1kΩ	1		82 83 83A
R95	R4LP-8446-102	Simple-insulated resistor 1/4W 1kΩ	1		82 83 83A
RM1, RM2	R4LP-8396-512	8-element module resistor 1/4W 5.1kΩ	2		82 83 83A
C91	C4LP-8519-12	Aluminum electrolytic capacitor 25V 47μF	1		82 83 83A
Q92, Q93	I4LP-11178-41	SN75LS151	2		82 83 83A
Q91	I4LP-11136-40	SN74LS05	1		82 83 83A
DIP SW	4LP-3425-8	DIP switch, 8-pin	1		82 83 83A
②	4LP-3424	Rotary switch (SROV 101A)	1		82 83 83A
③	3LK-50700-2	Key switch	4		82 83 83A
④	4L-1370-49-A2	Nameplate [TOF SET]	1		82 83 83A
⑤	4L-1370-50-A2	Nameplate [SEL]	1		82 83 83A
⑥	4L-1370-51-A2	Nameplate [FORM FEED]	1		82 83 83A
⑦	4L-1370-52-A2	Nameplate [LINE FEED]	1		82 83 83A
⑧	J4LP-5524-10	AMPEI connector, 10-pin (male)	1		82 83 83A
⑨	3LH-31313-12	Power source bar	1		82 83 83A
⑩	3LH-31313-68	Power source bar	1		82 83 83A
S91, S92, S93	4KH-31017-8	L-shaped short-circuit wire	3		82 83 83A
⑪	4L-1481	Number indication attaching nameplate	1		82 83 83A
C92	C4LP-8452-101	Ceramic capacitor 100pF	1	} Addition for FCC	82 83 83A
C93	C4LP-8571	V-4SL ceramic capacitor 100pF	1		82 83 83A

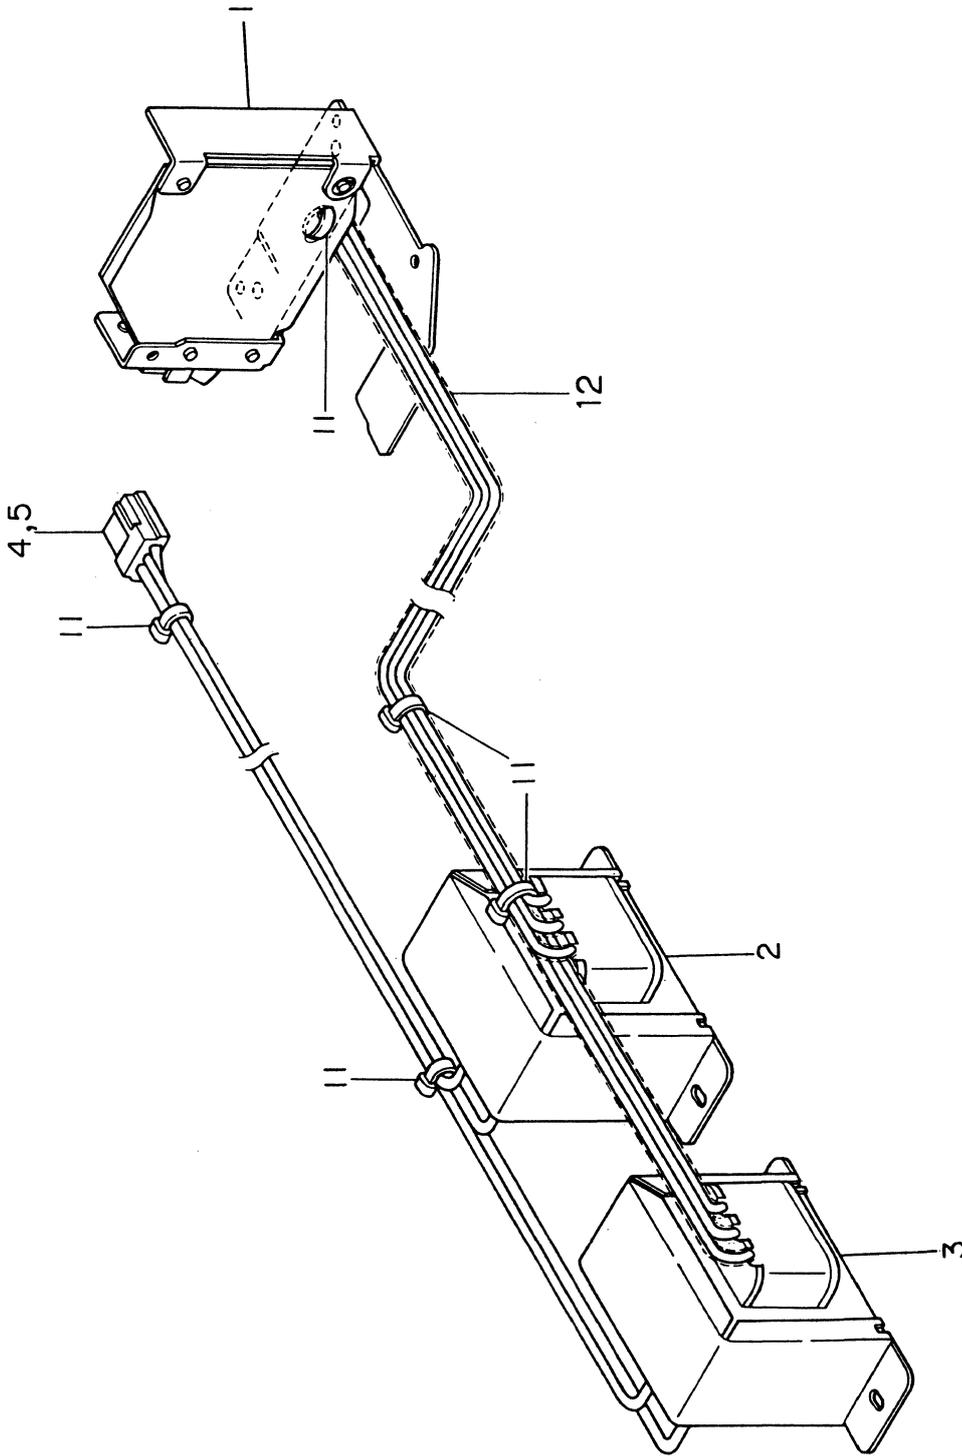


Fig. 8-11 Power Source Assembly (2LR-104073-2) (for 115 V)

Fig. 8-11 Power Source Assembly (2LR-104073-2) (for 115 V)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	3LX-86727-1	LEPW circuit board assembly	1		
2	4LP-45191-125	Transformer	1		83A
3	4LP-45191-126	Transformer	1		83A
4	J4LP-5525-4	EI-connector	1		82 83 83A
5	J4LP-5526	Contact	4		82 83 83A
11	4LP-6401-b1	Tie-wrap	5		82 83 83A
12		Silicon flexible tube	1	ø3x1500mm KOSHIFUJI DENKI made HT-482 Class A	83A

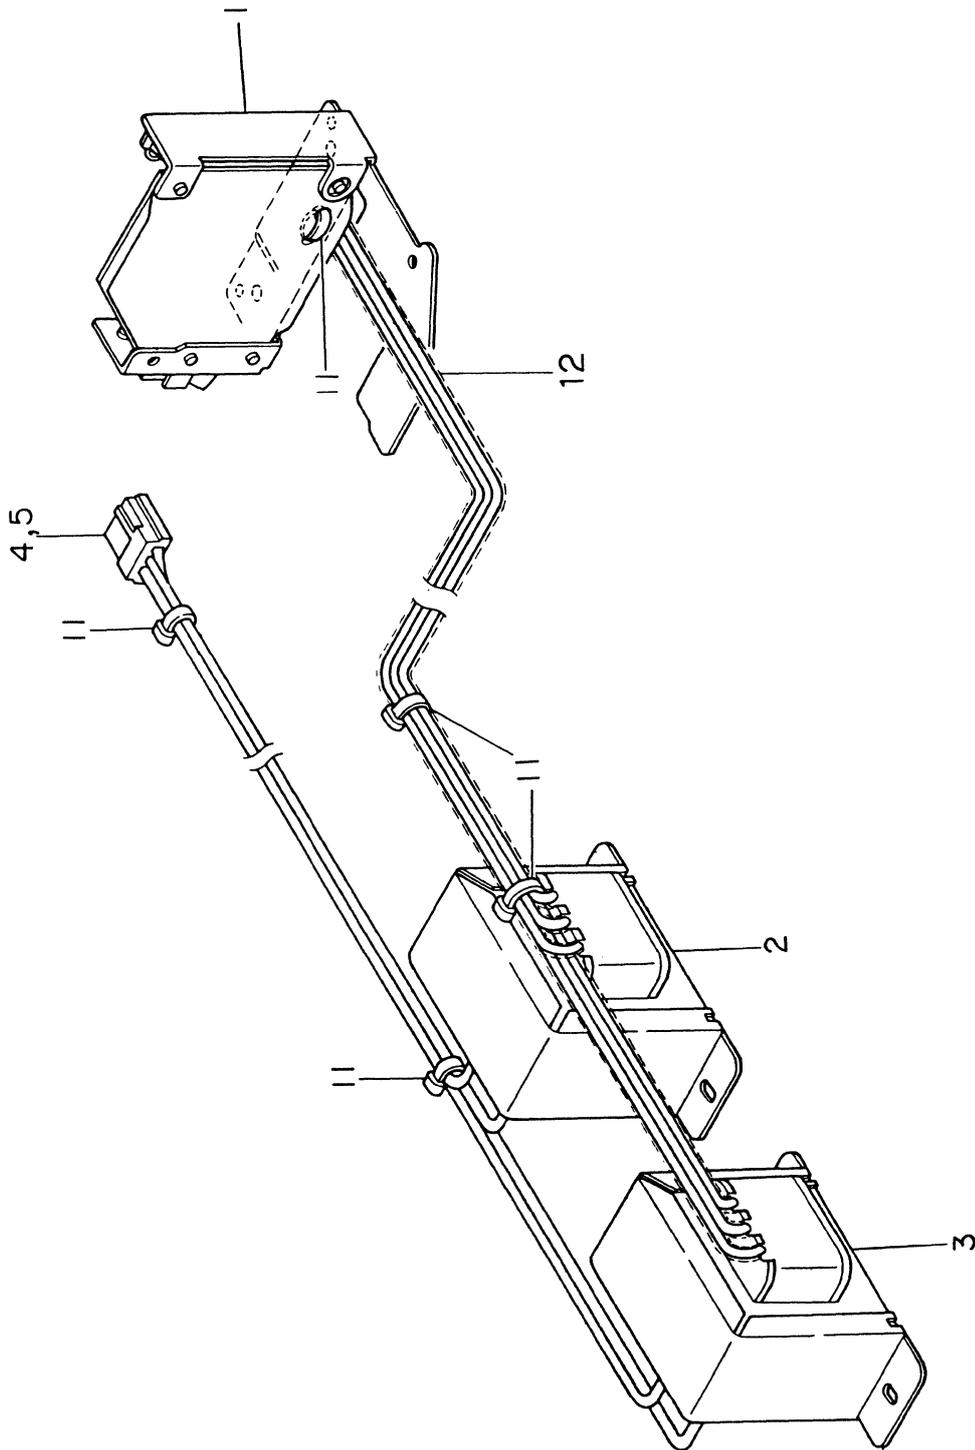


Fig. 8-11 Power Source Assembly (2LR-104073-3) (for 220/240 V)



Fig. 8-11 Power Source Assembly (2LR-104073-3) (for 220/240 V)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	3LX-86727-2	LEPW circuit board assembly	1		
2	4LP-45191-127	Transformer	1		83A
3	4LP-45191-128	Transformer	1		83A
4	J4LP-5525-4	EI-connector	1		82 83 83A
5	J4LP-5526	Contact	4		82 83 83A
11	4LP-6401-b1	Tie-wrap	5		82 83 83A
12		Silicon flexible tube	1	ø3x1500mm KOSHIFUJI DENKI made HT-482 Class A	83A

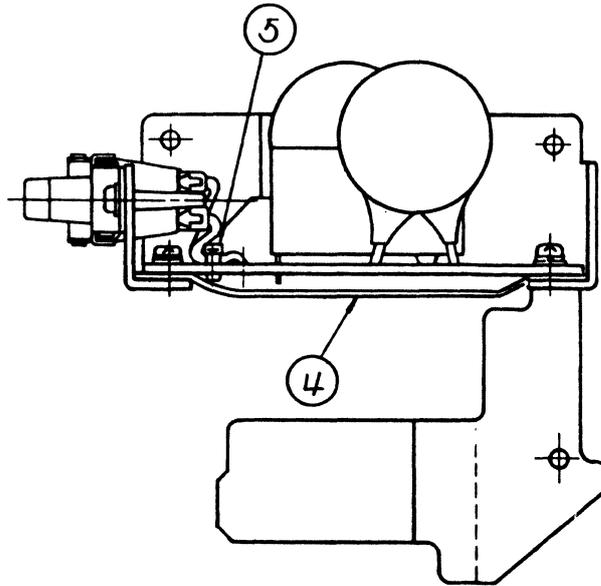
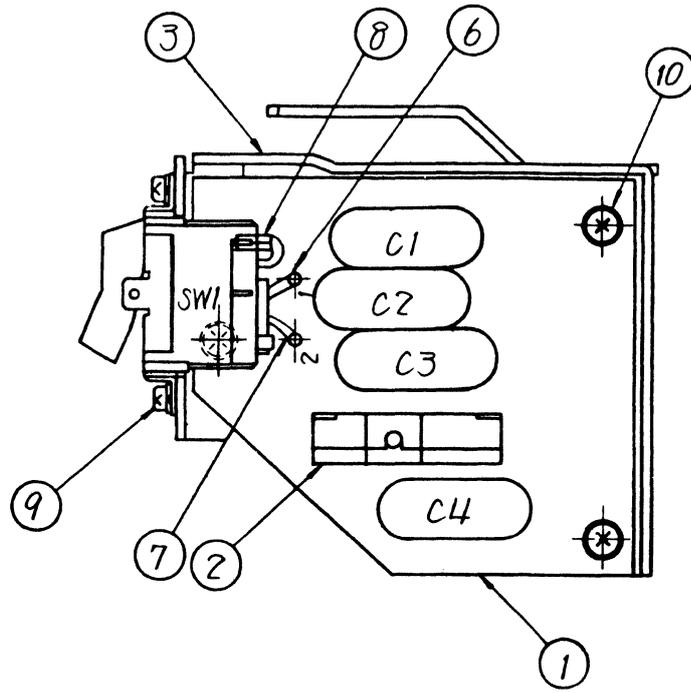


Fig. 8-12 LEPW-1 Circuit Board Assembly (3LX-86727-1) (for 115 V)

Fig. 8-12 LEPW-1 Circuit Board (3LX-86727-1) (for 115 V)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
①	3LP-16727	LEPW circuit board	1	Board only	83A
SW1	4LP-3621-2	See-saw switch	1		80 82 83 83A
②	4LP-6740-160	Circuit breaker	1		82 83 83A
C1, C2, C3, C4	C4LP-8604-10	Ceramic capacitor	4		83A
③	4LR-191890	Switch bracket	1		
④	4LR-191891	Insulator	1		83A
⑤	4LP-6401-b1	Tie-wrap	1		
⑥	LY-4658-3 (white)	Wires	1	ℓ = 70mm	
⑦	LY-4658-3 (black)	Wires	1	ℓ = 70mm	
⑧		Insulation SUMI-tube F	2	∅3 x 10	
⑨	⊕ P(SW) <sub>3</sub> -5-HH	Small pan-head screw	2		
⑩	⊕ P(SW+2W) <sub>3</sub> -5-HH	Small pan-head screw	3		


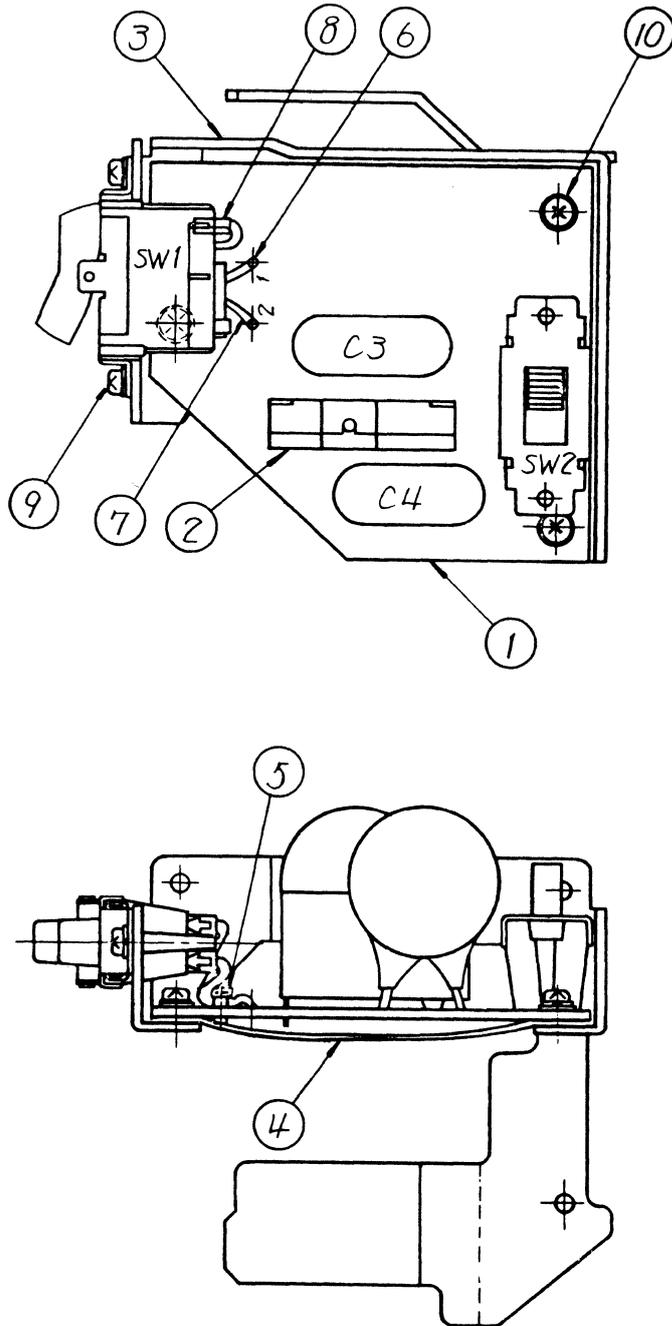


Fig. 8-12 LEPW-2 Circuit Board Assembly (3LX-86727-2) (for 220/240 V)




Fig. 8-12 LEPW-2 Circuit Board (3LX-86727-2) (for 220/240 V)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
①	3LP-16727	LEPW circuit board	1	Board only	83A
SW1	4LP-3621-1	See-saw switch	1		80 82 83 83A
SW2	4LP-3622	Sliding switch	1		80 82 83 83A
②	4LP-6740-80	Circuit breaker	1		82 83 83A
C3, C4	C4LP-8555	Ceramic capacitor	2		83A
③	4LR-191890	Switch bracket	1		
④	4LR-191891	Insulator	1		83A
⑤	4LP-6401-b1	Tie-wrap	1		
⑥	LY-4658-3 (white)	Wires	1	ℓ = 70mm	
⑦	LY-4658-3 (black)	Wires	1	ℓ = 70mm	
⑧		Insulation SUMI-tube F	2	∅3 x 10	
⑨	⊕ P(SW) <sub>3</sub> -5-HH	Small pan-head screw	2		
⑩	⊕ P(SW+2W) <sub>3</sub> -5-HH	Small pan-head screw	3		

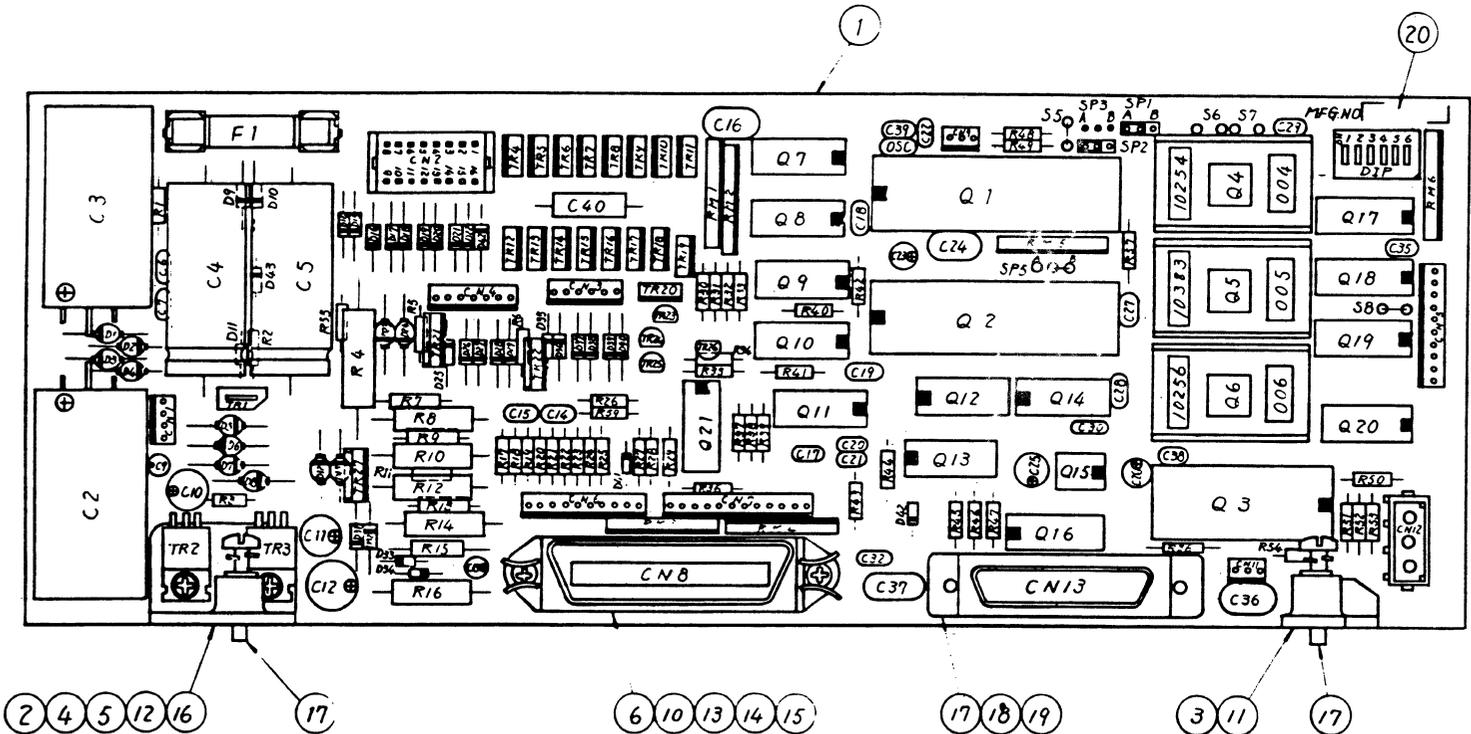

Note: ROM Discrimination Method

Discriminate the part Nos. and packaging locations of the ROMs packaged on this printed circuit board. Be particularly careful not to mix the part Nos. as the same Nos. are used for ML82A and ML83A in packaging locations only.

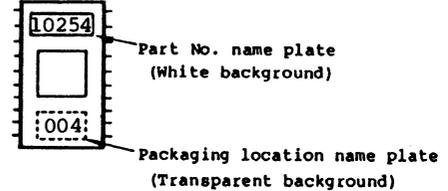


Example of ROM Discrimination

Part No.	Name plate indication	10254	10384	10256
	Indication in component table	LYH-10254	LYH-10384	LYH-10256
Packing Location	Name plate indication	004	005	006
	Indication in component table	Q4	Q5	Q6


Fig. 8-13 LEPV-7 Circuit Board Assembly (LY41565-7) (for 115 V)



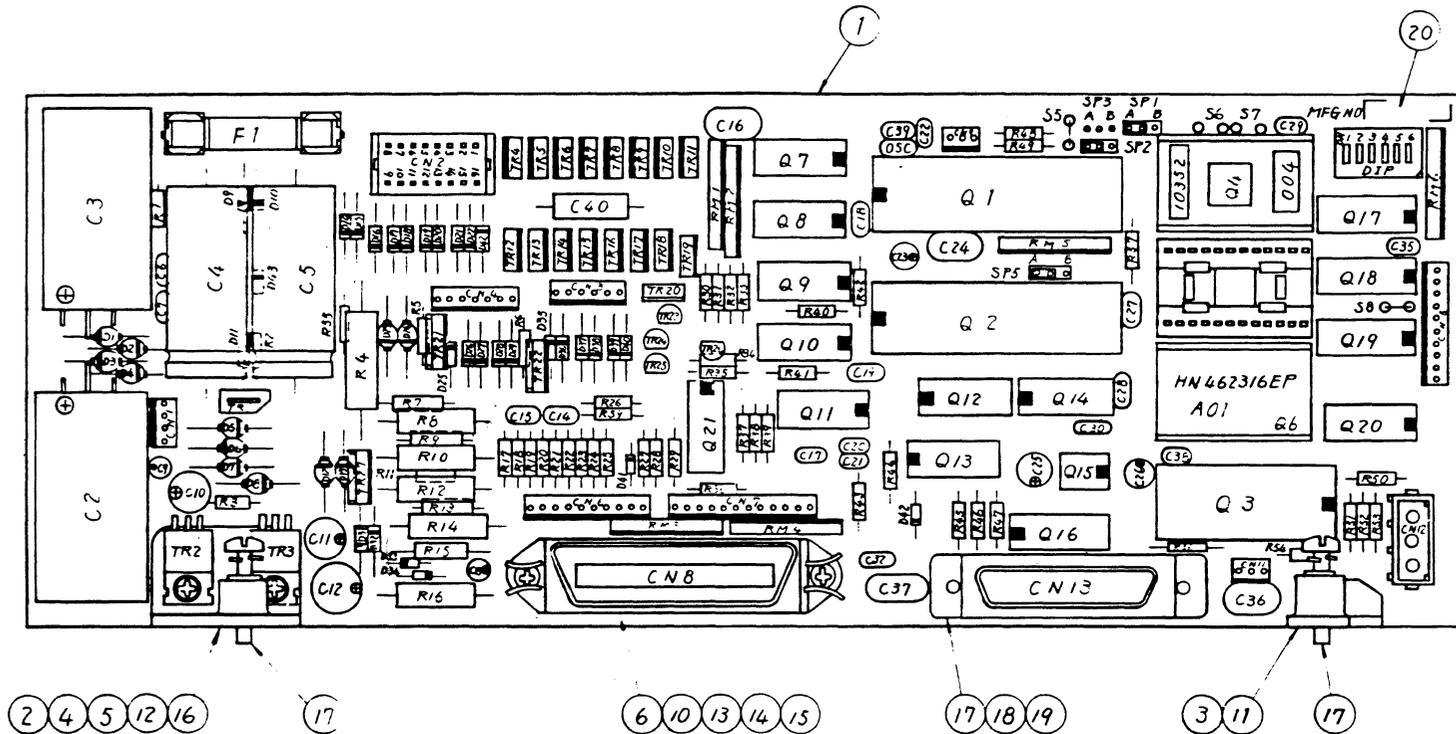

Note: ROM Discrimination Method

Discriminate the part Nos. and packaging locations of the ROMs packaged on this printed circuit board. Be particularly careful not to mix the part Nos. as the same Nos. are used for ML82A and ML83A in packaging locations only.



Part No. name plate  
(White background)

Packaging location name plate  
(Transparent background)

Example of ROM Discrimination

Part No.	Name plate indication	10352		HN462316EP A01
	Indication in component table	LYH-10352		4LP-11740 -02-001
Packaging location	Name plate indication	004		
	Indication in component table	Q4		Q6

Fig. 8-13 LEPV-3 Circuit Board Assembly (LY-41565-3) (For 200/240 V)





Fig. 8-13 LEPV-7,3 Circuit Board Assembly (LY-41565-7,3) (1/6)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
①	2LP-16726	LEPV circuit board	1	Board only	83A
D9,D10,D14 to D22,D25 to D29,D31,D32, D35 to D40, D44	D4LP-44416-1	EM-1Z diode	25		83A
D1 to D8,	D4LP-9409-1	U05B diode	8		82 83 83A
D12,D13	D4LP-44253	GU-3SZ diode	2		83A
D23, D24	D4LP-44156-16	AU01-20 zener diode	2		82 83 83A
D41 to D43	D4LP-44171-8	RD5.1EB zener diode	3		80 82 83 83A
D33, D34	D4LP-44171-17	RD12EB zener diode	2		82 83 83A
D11	D4LP-44171-9	RD5.6EB zener diode	2		83A
R22	R4LP-8446-822	Simple insulated resistor 1/4W 8.2K $\Omega$	1		83A
R26, R1	R4LP-8446-752	Simple insulated resistor 1/4W 7.5k $\Omega$	2		82 83 83A
R23,R41,R48,	R4LP-8446-201	Simple insulated resistor 200 $\Omega$	3		80 82 83 83A
R34,R36,R56	R4LP-8446-302	Simple insulated resistor 3k $\Omega$	3		82 83 83A
R30 to R33	R4LP-8446-392	Simple insulated resistor 3.9k $\Omega$	4		82 83 83A
R3,R11,R24,R28	R4LP-8446-511	Simple insulated resistor 510 $\Omega$	4		82 83 83A
R6,R27,R29,R40 R42 to R45,R47 R50 to R53,R57	R4LP-8446-512	Simple insulated resistor 5.1k $\Omega$	14		80 82 83 83A
R2,R5,R35,R46, R54	R4LP-8446-102	Simple insulated resistor 1k $\Omega$	5		80 82 83 83A
R55	R4LP-8446-510	Simple insulated resistor 51 $\Omega$	1		80 83A
R38, R49	R4LP-8446-103	Simple insulated resistor 10k $\Omega$	2		80 82 83 83A
R19	R4LP-8446-274	Simple insulated resistor 270 k $\Omega$	1		83 83A
R20	R4LP-8446-433	Simple insulated resistor 43 k $\Omega$	1		83 83A
R39	R4LP-8446-202	Simple insulated resistor 2 k $\Omega$	1		80 83A
R7	R4LP-8447-103	NAS B type 1/2W 10k $\Omega$	1		82 83 83A
R9, R13	R4LP-8447-242	NAS B type 1/2W 2.4k $\Omega$	2		82 83 83A
R15	R4LP-8318-621	Metal film resistor 1W 620 $\Omega$	1		82 83 83A



Fig. 8-13 LEPV-7, 3 Circuit Board Assembly (LY-41565-7, 3) (2/6)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
R10	R4LP-8224-151	Metal film resistor 2W 150Ω	1		82 83 83A
R16	R4LP-8224-821	Metal film resistor 820Ω	1		82 83 83A
R14	R4LP-8224-302	Metal film resistor 3kΩ	1		82 83 83A
R8, R12	R4LP-8224-121	Metal film resistor 120Ω	2		83A
R4	R4LP-8225-300	Metal film resistor 3W 30Ω	1		82 83 83A
RM3, RM4	R4LP-8396-102	8-element module resistor 1kΩ	2		80 82 83 83A
RM1, RM2	R4LP-8396-392	8-element module resistor 3.9kΩ	2		82 83 83A
RM5, RM6	R4LP-8396-512	8-element module resistor 5.1kΩ	2		80 82 83 83A
OSC	4LP-12127-3	Ceramic oscillator 9.0MHz	1		83 83A
C39		Capacitor for oscil- lator		Attachment for 4LP- 12127-3	83 83A
C16,C17,C24,C36	4LP-8449-104	100V 0.1μF Polyester film capacitor	3		80 82 83 83A
C6,C7,C15, C17 to C19, C27 to C29, C35,C38, C21,C22	4LP-8449-103	100V 0.01μF Polyester film capacitor	11		82 83 83A
	4LP-8449-102	100V 0.001μF Polyes- ter film capacitor	2		82 83 83A
C20, C32	4LP-8611-561	560pF ceramic capacitor	2		83A
C37	C4LP-8469-102	1000pF ceramic capacitor	1		83A
C30	4LP-8611-221	200pF ceramic capacitor	1		83A
C23	C4LP-8519-40	04 type aluminum electrolytic capaci- tor 100V 1μF	1		82 83 83A
C25, C26	C4LP-8519-1	04 type aluminum electrolytic capaci- tor 10V 100μF	2		82 83 83A



Fig. 8-13 LEPV-7, 3 Circuit Board Assembly (LY-41565-7, 3) (3/6)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
C11	C4LP-8519-31	04 type aluminum electrolytic capacitor 63V 33 $\mu$ F	1		82 83 83A
C12	C4LP-8519-26	04 type aluminum electrolytic capacitor 50V 100 $\mu$ F	1		82 83 83A
C10	C4LP-8519-25	04 type aluminum electrolytic capacitor 50V 47 $\mu$ F	1		83A
C2, C3	C4LP-8520-23	04 type aluminum electrolytic capacitor 50V 2200 $\mu$ F	2		82 83 83A
C4, C5	C4LP-8550-27	02 type aluminum electrolytic capacitor 16V 3300 $\mu$ F	2		82 83 83A
C14	C4LP-8449-223	100V 0.022 $\mu$ F polyester film capacitor	1		83A
C9, C13	C4LP-8470-7	Tantalum electrolytic capacitor 35V 1 $\mu$ F	2		80 82 83 83A
C40	C4LP-8383-2	0.1 $\mu$ F metalized polyester film capacitor	1		83A
Q1	I4LP-11400-00-247	$\mu$ CPU 8049-247	1		83A
Q2	I4LP-11368-06	$\mu$ PD 8155C	1		80 82 83 83A
Q3	I4LP-11369-06	$\mu$ PD 8251AC	1		83A
Q12	I4LP-11117-40	SN74LS02	1		82 83 83A
Q14	I4LP-11131-40	SN74LS04	1		82 83 83A
Q7, Q8, Q10	I4LP-11136-40	SN74LS05	3		80 82 83 83A
Q9, Q11	I4LP-11146-00	SN7407	2		82 83 83A
Q18, Q19	I4LP-11124-40	SN74LS75	2		82 83 83A
Q17	I4LP-11288-40	SN74LS251	1		82 83 83A
Q13	I4LP-11145-01	SN7406	1		82 83 83A
Q15	I4LP-11220-00	SN75150P	1		82 83 83A
Q16	I4LP-11172-00	SN75154N	1		82 83 83A
Q20	I4LP-12469	MSM4069	1		83A
Q21	I4LP-11836-00	$\mu$ PC339C	1		82 83 83A
Q4, Q5, Q6	4LP-5573-24	24-pin IC socket	3		80 82 83 83A

Fig. 8-13 LEPV-7,3 Circuit Board Assembly (LY-41565-7,3) (4/6)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
TR4 to TR12	4LP-44385-2	Transistor 2SD986	9		83A
TR13 to TR20	4LP-44385	Transistor 2SD986(1)	8		82 83 83A
TR23 to TR25	4LP-44335	Transistor 2SC2719	3		80 82 83 83A
TR26	4LP-44331	Transistor 2SA952	1		80 82 83 83A
TR3,TR21,TR22, TR27	4LP-44251	Transistor 2SB727	4		82 83 83A
TR1	4LP-44492-1-B	Thyristor CSM3B1A30	1		83A
TR2	4LP-11830-40	Regulator FS7805	1		83A
DIP	4LP-3425-6	DIP switch (6-pin)	1		82 83 83A
SP1, SP2	4LP-5591	Short circuit plug Z128	2		80 82 83 83A
SP1, SP2	4LP-5592-3	Plug Z149-3P	2		80 82 83 83A
CN8	4LP-5663	DIP type 36 plug connector	1		80 82 83 83A
CN13	J3LP-2989-25	25-pin housing			82 83 83A
	4LP-5715	DBC25SF0 Pin contact 030-50-663	1 8		82 83 83A
CN9, CN11	4LP-5523-3	AMPEI connector 3-pin	2		80 82 83 83A
CN1	4LP-5523-4	AMPEI connector 4-pin	1		80 82 83 83A
CN3	4LP-5523-6	AMPEI connector 6-pin	1		80 82 83 83A
CN4	4LP-5523-7	AMPEI connector 7-pin	1		83A
CN5, CN6	4LP-5523-10	AMPEI connector 10-pin	2		82 83 83A
CN7	4LP-5523-12	AMPEI connector 12-pin	1		82 83 83A
CN12	4LP-2887-1	3-pin nylon connector	1		80 82 83A
CN2	4LP-9490-B-03	IC socket (16-pin)	1		82 83 83A
CN2	4LP-5551	Connector locker	1		82 83 83A
F1	4LP-8475-B-21	MGC 2.5A fuse	1		83A
F1, F1	5L-90188	Fuse holder	2		80 82 83 83A
②	5LR-193468	Heat sink (for transistor)	1		83A
③	5LR-193469	Circuit board fixing metal	1		83A
S4, S5, S8	5KH-31036-50	U-shaped short circuit wire	3		83A



Fig. 8-13 LEPV-7, 3 Circuit Board Assembly (LY-41565-7, 3) (5/6)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
④	4LP-44106-3	SERCON	2		80 82 83 83A
⑤	4LP-4967-8	Insulating bush	2		80 82 83 83A
⑥	4LB-102200-6B	Collar	2		80 82 83 83A
⑦	4LB-102200-12B	Collar	2		82 83 83A
⑧	5LP-5683-3	Connector holder	2		82 83 83A
⑨	⊕ P(SW+W) 2.6-16-HH	Small pan-head screw	2		
⑩	⊕ P3-12-HH	Small pan-head screw	2		
⑪	⊕ P(SW+W) 3-6-HH	Small pan-head screw	2		
⑫	⊕ P(SW+W) 2.6-10-HH	Small pan-head screw	2		
⑬	W3-HH	Washer	2		
⑭	SW3-HHC	Spring washer	2		
⑮	3N3-HH	Lock nut	2		
⑯	3N2.6-HH	Lock nut	2		
⑰	5LP-6890	Set screw	2		82 83 83A
⑳	4L-1481	Number indication attaching nameplate	1		82 83 83A
R25	4LP-8446-163	Simple insulated resistor 1/4W 16K	1		83A
R37	4LP-8446-394	Simple insulated resistor 1/4W 390K	1		83A



Fig. 8-13 LEPV-7, 3 Circuit Board Assembly (LY-41565-7, 3) (6/6)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
R18	4LP-8446-474	Simple insulated resistor 1/4W 470K $\Omega$	1		83A
R17	4LP-8446-823	Simple insulated resistor 1/4W 82K $\Omega$	1		83A
R21	4LP-8446-203	Simple insulated resistor 1/4W 20K $\Omega$	1		83A
R59	4LP-8446-623	Simple insulated resistor 1/4W 62K $\Omega$	1		83A
Q4	LYH-10254	EPROM character generater	1	To be ordered separately (For 115 V).	83A
Q5	LYH-10383	EPROM, program ROM	1		
Q6	LYH-10256	EPROM, program ROM	1		
SP5	5KH-31036-25	U-shaped short-circuit wire	1		
Q4	LYH-10352	EPROM character generater	1	ordered separately (For 220/240 V).	83A
Q6	4LP-11740-02-001	MASKROM, prgram ROM	1		
SP5	4LP-5591	Jumper plug Z128	1		
SP5	4LP-5592-3	Terminal Z149 3P	1		

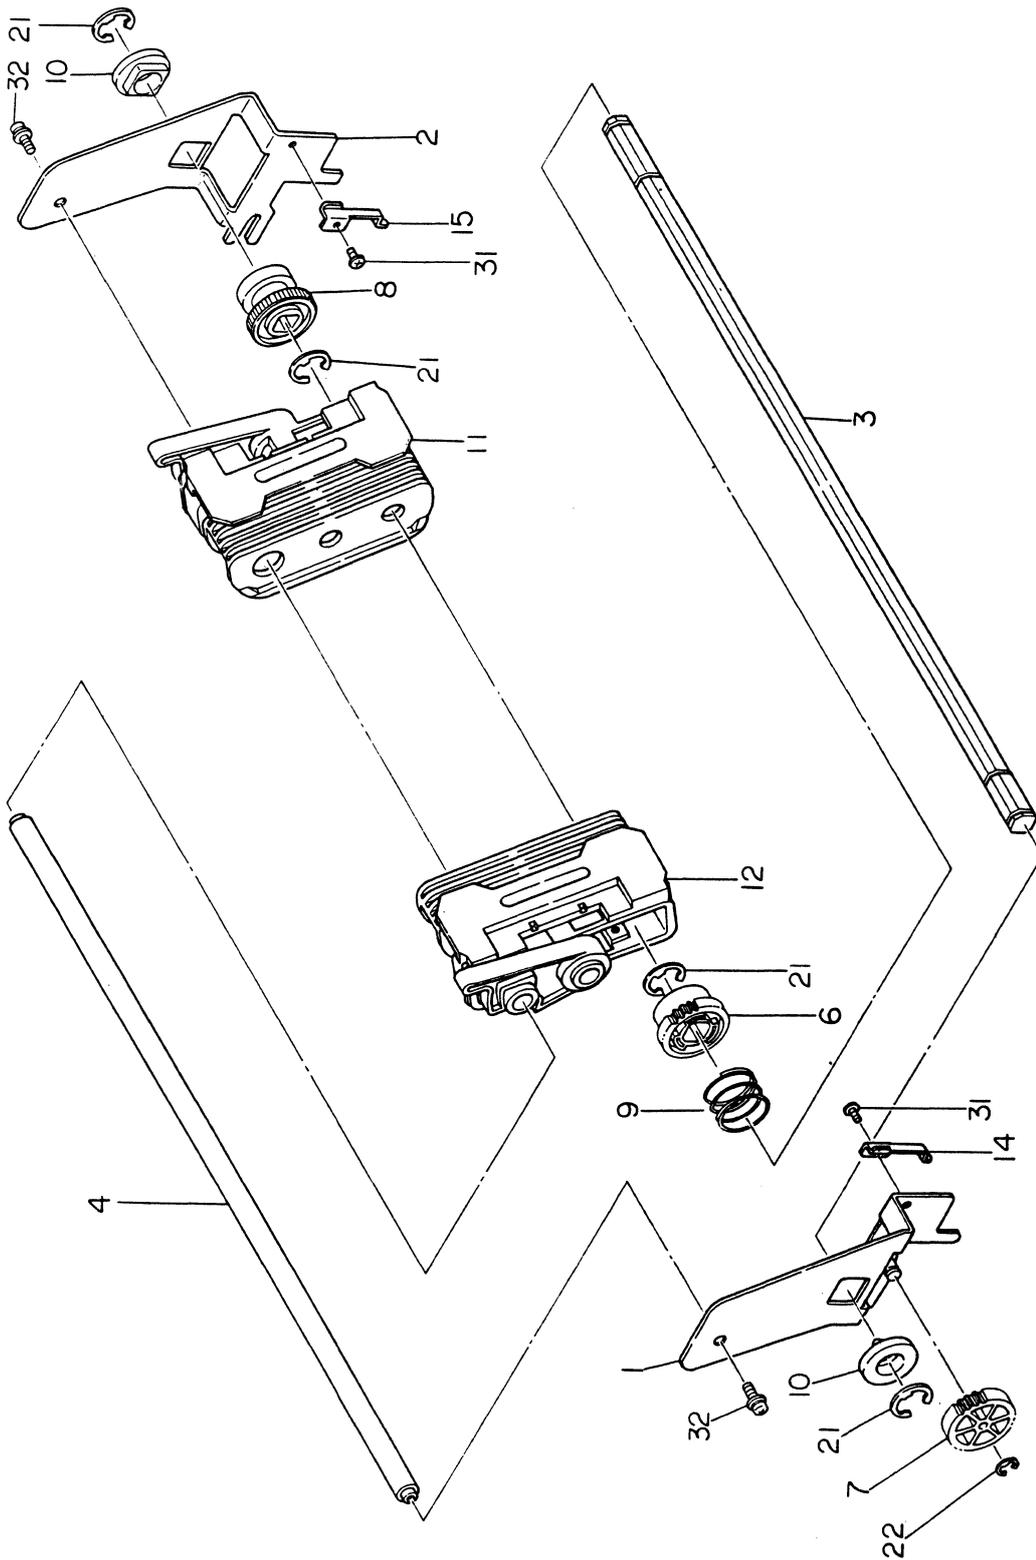


Fig. 8-14 Tractor Unit (LY-37539)



Fig. 8-14 Tractor Unit (LY-37539)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	5LR-129881	Side plate (L)	1		80 82 83 83A
2	4LR-129884	Side plate (R)	1		80 82 83 83A
3	5LR-129885	Tractor drive shaft	1		80 82
4	5LR-129886	Tractor shaft	1		80 82
5	5LR-129887	Clamp lever	2		80 82 83 83A
6	4LR-129889	Tractor gear	1		80 82 83 83A
7	4LR-129890	Idle gear	1		80 82 83 83A
8	4LR-129891	Knob	1		80 82 83 83A
9	5LR-129895	Bias spring	1		80 82 83 83A
10	5LR-123498	Bushing	2		80 82 83 83A
11	FMX-35100-2	Sprocket assembly (R)	1		80 82 83 83A
12	FMX-35150-2	Sprocket assembly (L)	1		80 82 83 83A
21	5KD-50242	E-snap ring	4		
22	5KH-12050	E-snap ring	1		
31	⊕ P(SW+W) 3-6-23D	Small pan-head screw	2		
32	⊕ P(SW+2W) 3-8-23D	Small pan-head screw	2		

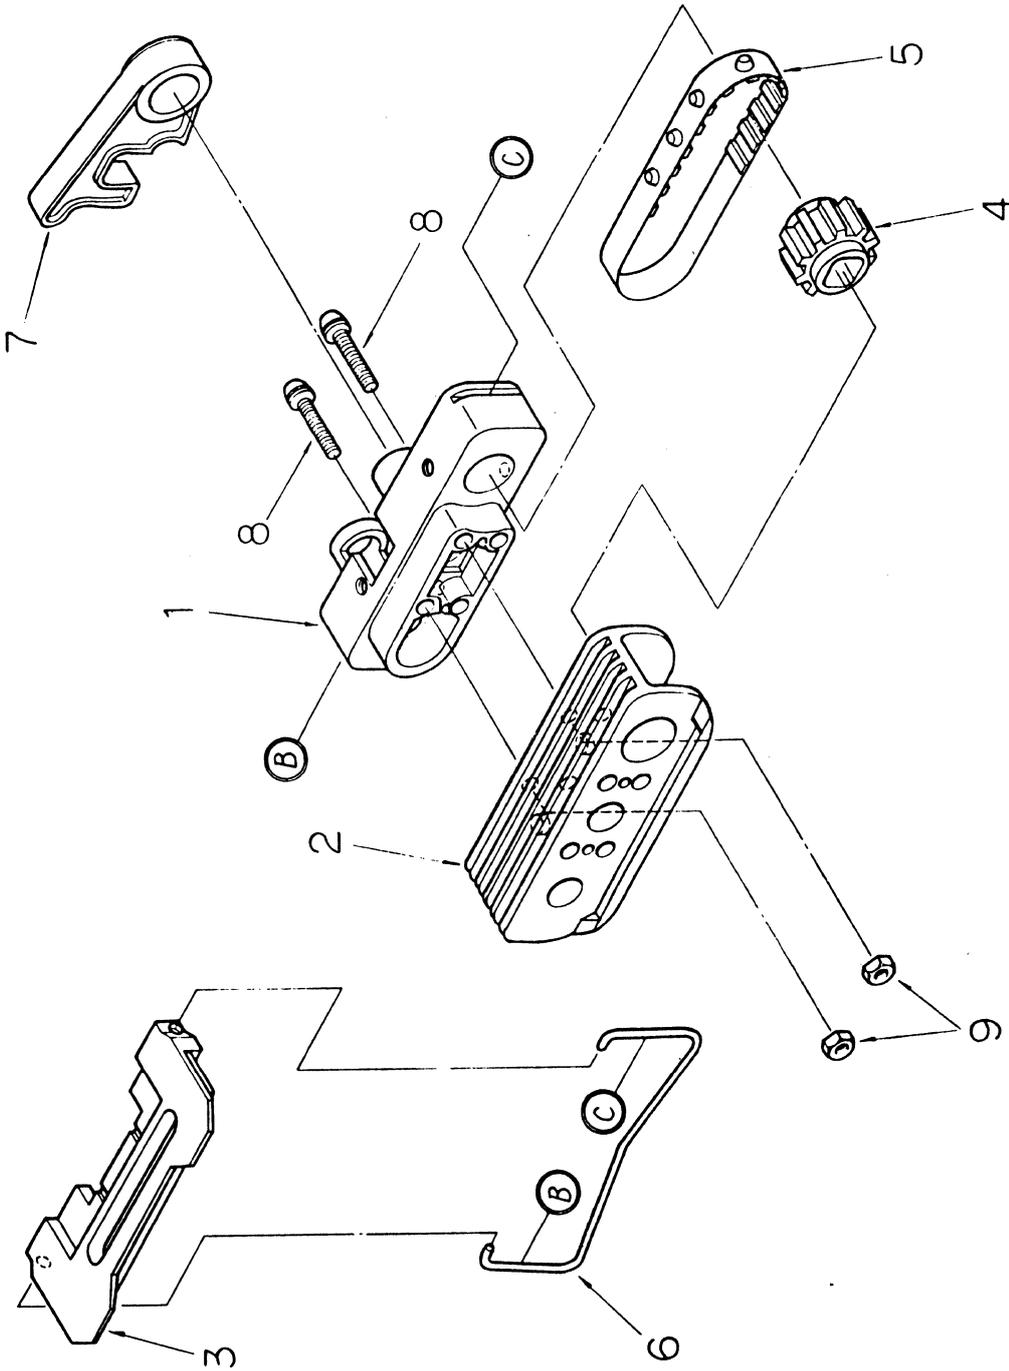


Fig. 8-15 Sprocket Assembly (R) (FMX-35100-2)

Fig. 8-15 Sprocket Assembly (R) (FMX-35100-2)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	4LR-123484	Sprocket frame (A)	1		80 82 83 83A
2	4LR-123485	Sprocket frame (B)	1		80 82 83 83A
3	5LR-123446	Sprocket cover	1		80 82 83 83A
4	5LR-129894	Sprocket wheel	1		80 82 83 83A
5	4LR-123487	Pin tractor (mold)	1		80 82 83 83A
6	5LR-123453	Pivot spring	1		80 82 83 83A
7	5LR-123458	Lock lever	1		80 82 83 83A
8	⊕ P(SW+W) 3-16-HH	Small pan-head screw	2		
9	N <sub>3</sub> -HH	Nut	2		

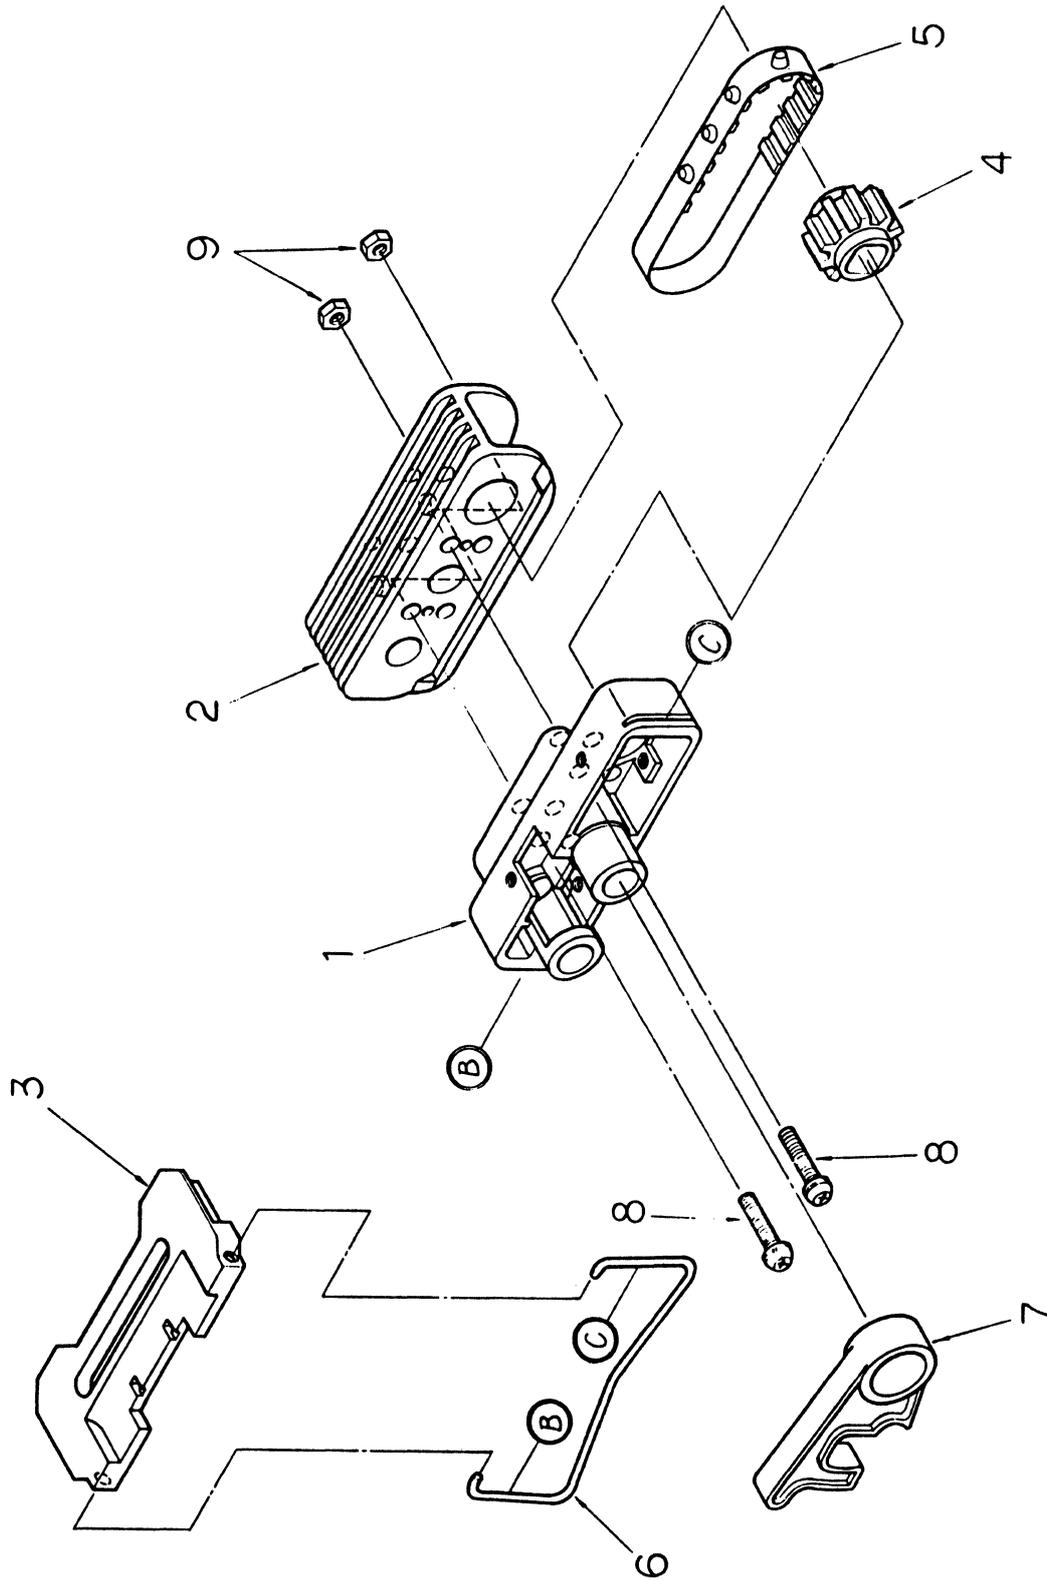


Fig. 8-16 Sprocket Assembly (L) (FMX-35150-2)

Fig. 8-16 Sprocket Assembly (L) (FMX-35150-2)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	4LR-123484	Sprocket frame (A)	1		80 82 83 83A
2	4LR-123485	Sprocket frame (B)	1		80 82 83 83A
3	5LR-123446	Sprocket cover	1		80 82 83 83A
4	5LR-129894	Sprocket wheel	1		80 82 83 83A
5	4LR-123487	Pin tractor (mold)	1		80 82 83 83A
6	5LR-123453	Pivot spring	1		80 82 83 83A
7	5LR-123458	Lock lever	1		80 82 83 83A
8	⊕ P(SW+W) 3-16-HH	Small pan-head screw	2		
9	2N <sub>3</sub> -HH	Nut	2		

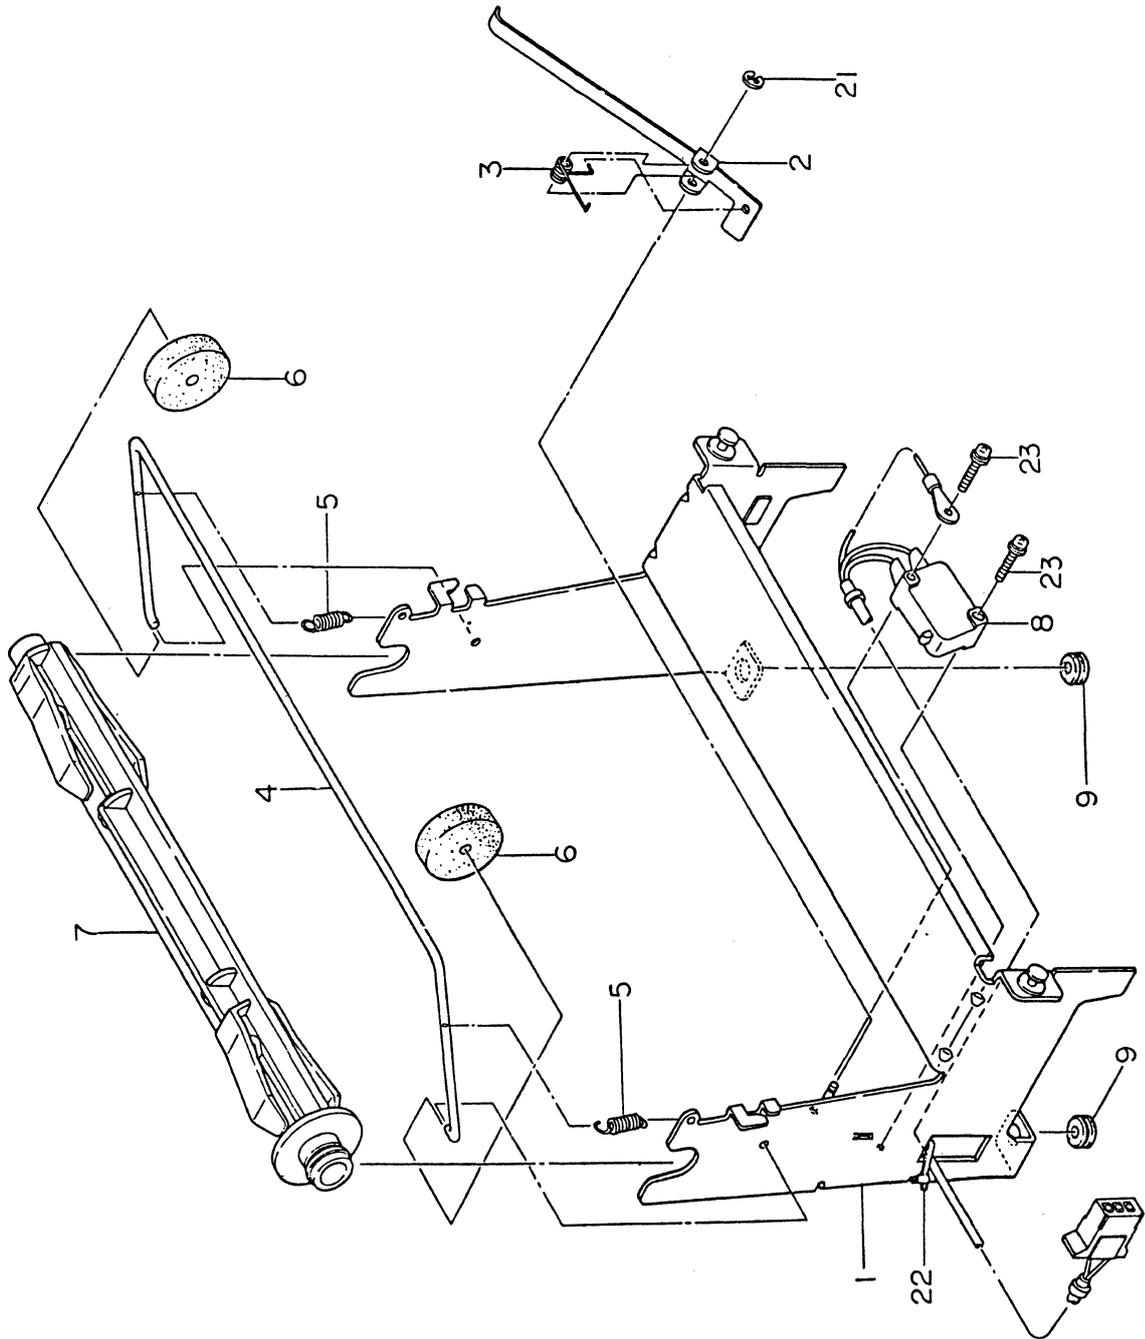


Fig. 8-17 Roll Paper Stand Assembly (LY-39699)



Fig. 8-17 Roll Paper Stand Assembly (LY-39699)

Item No.	Part No.	Description	Q'ty	Remarks	Compati- bility
1	3LM-59699	Roll paper stand (clinched)	1		82
2	5LM-59702	Alarm lever	1		82
3	5LM-59703	Alarm lever spring	1		82
4	5LM-58652	Tension lever	1		80 82
5	5LM-58654	Tension lever spring	2		80 82
6	5LM-58656	Flange	2		80 82
7	3LR-190075	Paper shaft	1		80 82
8	4LR-129849	Microswitch assembly	1		80 82
9	5LP-1409-3	Bushing	2		82
21	5KX-9057	E-snap ring	1		
22	4LP-6401-b1	Tie-wrap	1		
23	⊕ P(SW+W) 2.6-14-HH	Small-pan head screw	2		



# **APPENDICES**



### Appendix A External Dimensions

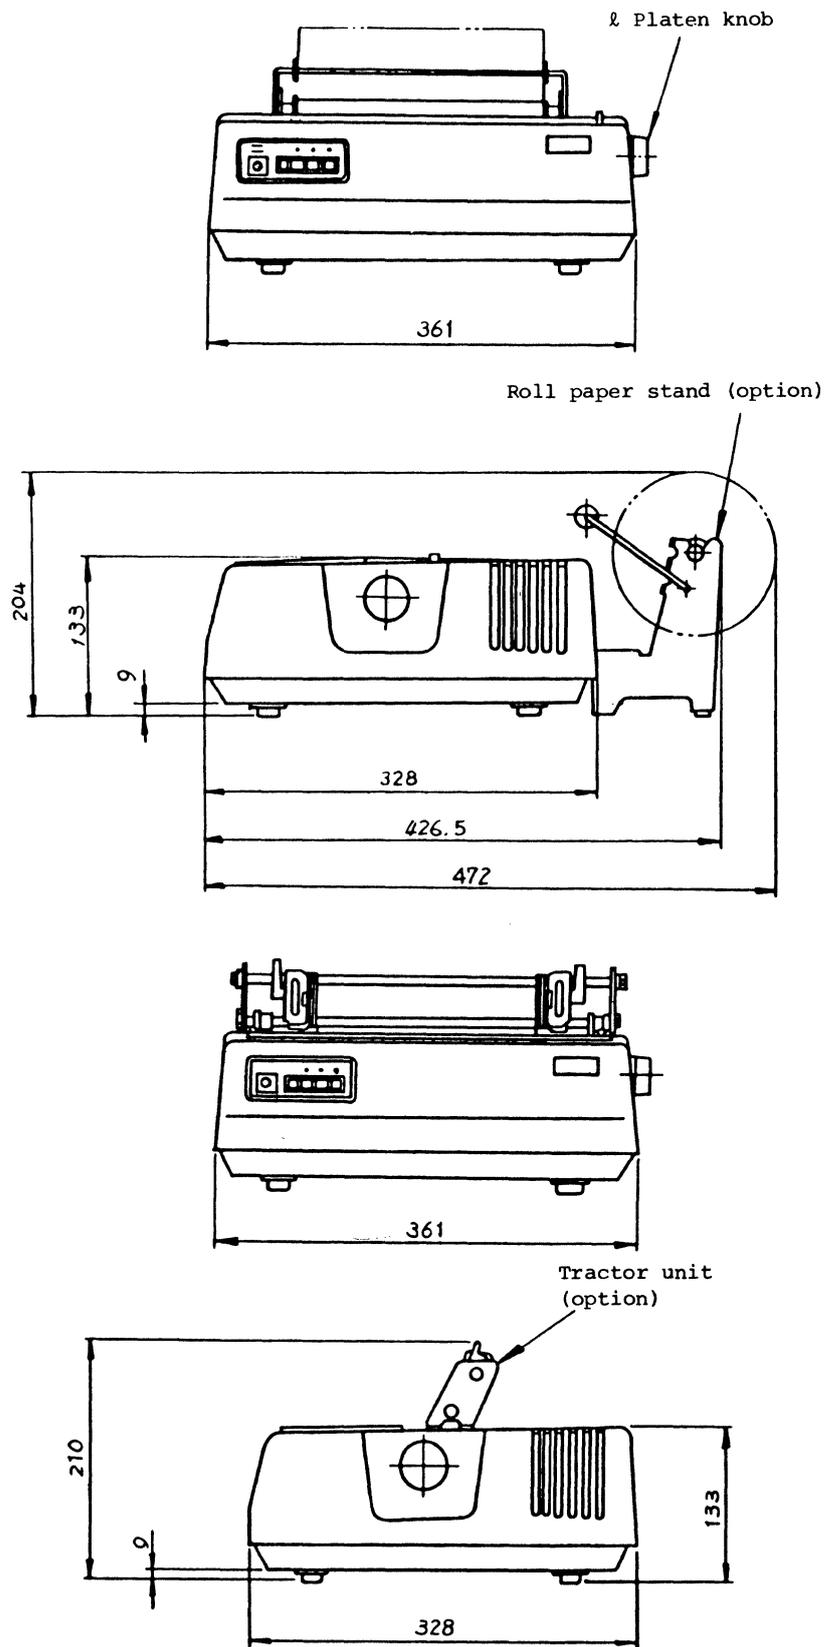


Fig. A-1 External View



Appendix B Character Set

				b s = 0							b s = 1												
				b7	0	0	0	0	1	1	1	1	1	b7	0	0	0	0	1	1	1	1	1
				b6	0	0	1	1	0	1	1	1	1	b6	0	0	1	1	0	1	1	1	1
				b5	0	1	0	1	0	1	0	1	1	b5	0	1	0	1	0	1	0	1	1
b4	b3	b2	b1	R	C	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F		
0	0	0	0	0				S P	%	②	P	⑦	p										
0	0	0	1	1	DC1	!		!	A	Q	o	q											
0	0	1	0	2		"		"	2	B	R	b	r										
0	0	1	1	3	DC3	①		①	3	C	S	c	s										
0	1	0	0	4	DC4	\$		\$	4	D	T	d	t										
0	1	0	1	5		%		%	5	E	U	e	u										
0	1	1	0	6		&		&	6	F	V	f	v										
0	1	1	1	7		'		'	7	G	W	g	w										
1	0	0	0	8	CAN	(		(	8	H	X	h	x										
1	0	0	1	9		)		)	9	I	Y	i	y										
1	0	1	0	A	LF	*		*	:	J	Z	j	z										
1	0	1	1	B	VT	ESC		+	;	K	③	k	⑧										
1	1	0	0	C	FF	,		<	<	L	④	l	⑨										
1	1	0	1	D	CR	GS		-	=	M	⑤	m	⑩										
1	1	1	0	E		RS		.	>	N	⑥	n	⑪										
1	1	1	1	F		US		/	?	0	-	o	DEL										

- Note: 1) Standard character generator is used.  
 2) For TRS-80, even when the input code of "DEL" is input, it is processed as a space when printing.  
 3) Letter face of figure zero is "0" for U.S.A., and "0" for the other districts.

Language	1	2	3	4	5	6	7	8	9	10	11
US ASCII	#	@	[	\	]	^	`				~
BRITISH	£										
GERMAN		§	Ä	Ö	Ü			ä	ö	ü	ß
FRENCH	£	à	•	ç	§			é	ù	è	ê
SWEDISH		É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
DANISH			Æ	Φ	Å	Ü		æ	ø	å	ü
NORWEGIAN			Æ	Φ	Å		•	æ	ø	å	
NETHERLANDISH	£			IJ					ij		
ITALIAN	£	§	•	ç	é			ù	à	ò	è
TRS-80			†	‡	-	-					

Note: Differences among languages (Same as US ASCII if blank)

Fig. B-1 Character Set (8 bits)

				S I SIDE							S O SIDE						
b7	0	0	0	0	1	1	1	1	0	0	0	0	1	1	1	1	
b6	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1	
b5	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	
b4 b3 b2 b1	C	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0 0 0 0	0			SP	0	②	P	⑦	p								
0 0 0 1	1	DC1	!	!	A	Q	a	q		DC1							
0 0 1 0	2		"	2	B	R	b	r									
0 0 1 1	3	DC3	①	3	C	S	c	s		DC3							
0 1 0 0	4	DC4	\$	4	D	T	d	t		DC4							
0 1 0 1	5		%	5	E	U	e	u									
0 1 1 0	6		&	6	F	V	f	v									
0 1 1 1	7		'	7	G	W	g	w									
1 0 0 0	8	CAN	(	8	H	X	h	x		CAN							
1 0 0 1	9		)	9	I	Y	i	y									
1 0 1 0	A	LF	*	:	J	Z	j	z		LF							
1 0 1 1	B	VT ESC	+	;	K	③	k	⑧	VT ESC								
1 1 0 0	C	FF	,	<	L	④	l	⑨	FF								
1 1 0 1	D	CR GS	-	=	M	⑤	m	⑩	CR GS								
1 1 1 0	E	SO RS	.	>	N	⑥	n	⑪	SO RS								
1 1 1 1	F	SI US	/	?	O	_	o	DEL	SI US								

- Note: 1) Standard character generator is used.  
 2) For TRS-80, even when the input code of "DEL" is input, it is processed as a space when printing.  
 3) Letter face of figure zero is "0" for U.S.A., and "0" for the other districts.

Language	1	2	3	4	5	6	7	8	9	10	11
US ASCII	#	@	[	\	]	^				}	~
BRITISH	£										
GERMAN		§	Ä	Ö	Ü			ä	ö	ü	ß
FRENCH	£	à	•	ç	§			é	ù	è	ê
SWEDISH		É	Ä	Ö	Å	Ü	é	ä	ö	å	ü
DANISH			Æ	Φ	Å	Ü		æ	ø	å	ü
NORWEGIAN			Æ	Φ	Å		•	æ	ø	å	
NETHERLANDISH	£			IJ					ij		
ITALIAN	£	§	•	ç	é		ù	à	ò	è	ì
TRS-80			↑	↓	←	→					

Note: Differences among languages (Same as US ASCII if blank)

Fig. B-2 Character Set (7 bits)



				S I SIDE							S O SIDE									
b7	b6	b5	b4	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
0	0	0	0	0	1	0	1	0	1	0	1	0	0	0	1	0	1	0	1	
0	0	0	0	0	1	0	1	0	1	0	1	0	0	1	0	1	0	1	0	
b4	b3	b2	b1	C	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	
0	0	0	0	R	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	0	0	0	0			S P							S P						
0	0	0	1	1		DC1								DC1						
0	0	1	0	2																
0	0	1	1	3		DC3								DC3						
0	1	0	0	4		DC4								DC4						
0	1	0	1	5																
0	1	1	0	6																
0	1	1	1	7																
1	0	0	0	8		CAN								CAN						
1	0	0	1	9																
1	0	1	0	A	LF									LF						
1	0	1	1	B	VT	ESC								VT	ESC					
1	1	0	0	C	FF									FF						
1	1	0	1	D	CR	GS								CR	GS					
1	1	1	0	E	SO	RS								SO	RS					
1	1	1	1	F	SI	US								DEL	SI	US				DEL

Note: Non-standard character generator is used.

Fig. B-4 Character Set (Optional type 7 bits)







<US ASCII>

!"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN OPQRSTUVWXYZ[\]^\_`abcdefghijklmnop  
qrstuvwxyz{|}~

<BRITISH>

!"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN OPQRSTUVWXYZ[\]^\_`abcdefghijklmnop  
qrstuvwxyz{|}~

<GERMAN>

!"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN OPQRSTUVWXYZäöü`\_abcdefghijklmnop  
qrstuvwxyzäöü

<FRENCH>

!"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN OPQRSTUVWXYZ^`\_abcdefghijklmnop  
qrstuvwxyzéèê

<SWEDISH>

!"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN OPQRSTUVWXYZäöü`\_abcdefghijklmnop  
qrstuvwxyzäöü

<DANISH>

!"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN OPQRSTUVWXYZøåü`\_abcdefghijklmnop  
qrstuvwxyzøåü

<NORWEGIAN>

!"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN OPQRSTUVWXYZøå^`\_abcdefghijklmnop  
qrstuvwxyzøå

<NETHERLANDISH>

!"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN OPQRSTUVWXYZ[]^`\_abcdefghijklmnop  
qrstuvwxyz{ij}~

<ITALIAN>

!"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN OPQRSTUVWXYZ^`\_abcdefghijklmnop  
qrstuvwxyzàòèì


<TRS-80>

!"#\$%&'()\*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN OPQRSTUVWXYZ+\*+`\_abcdefghijklmnop  
qrstuvwxyz{|}~

- Note: 1) This pattern does not concern the character font.  
2) This pattern is one made by the printers for U.S.A. The printers for Europe provide different patterns for some characters; see Appendix E for the detailed difference in dot patterns.


Fig. D-2 Character Examples (B)

### Appendix E Dot Pattern

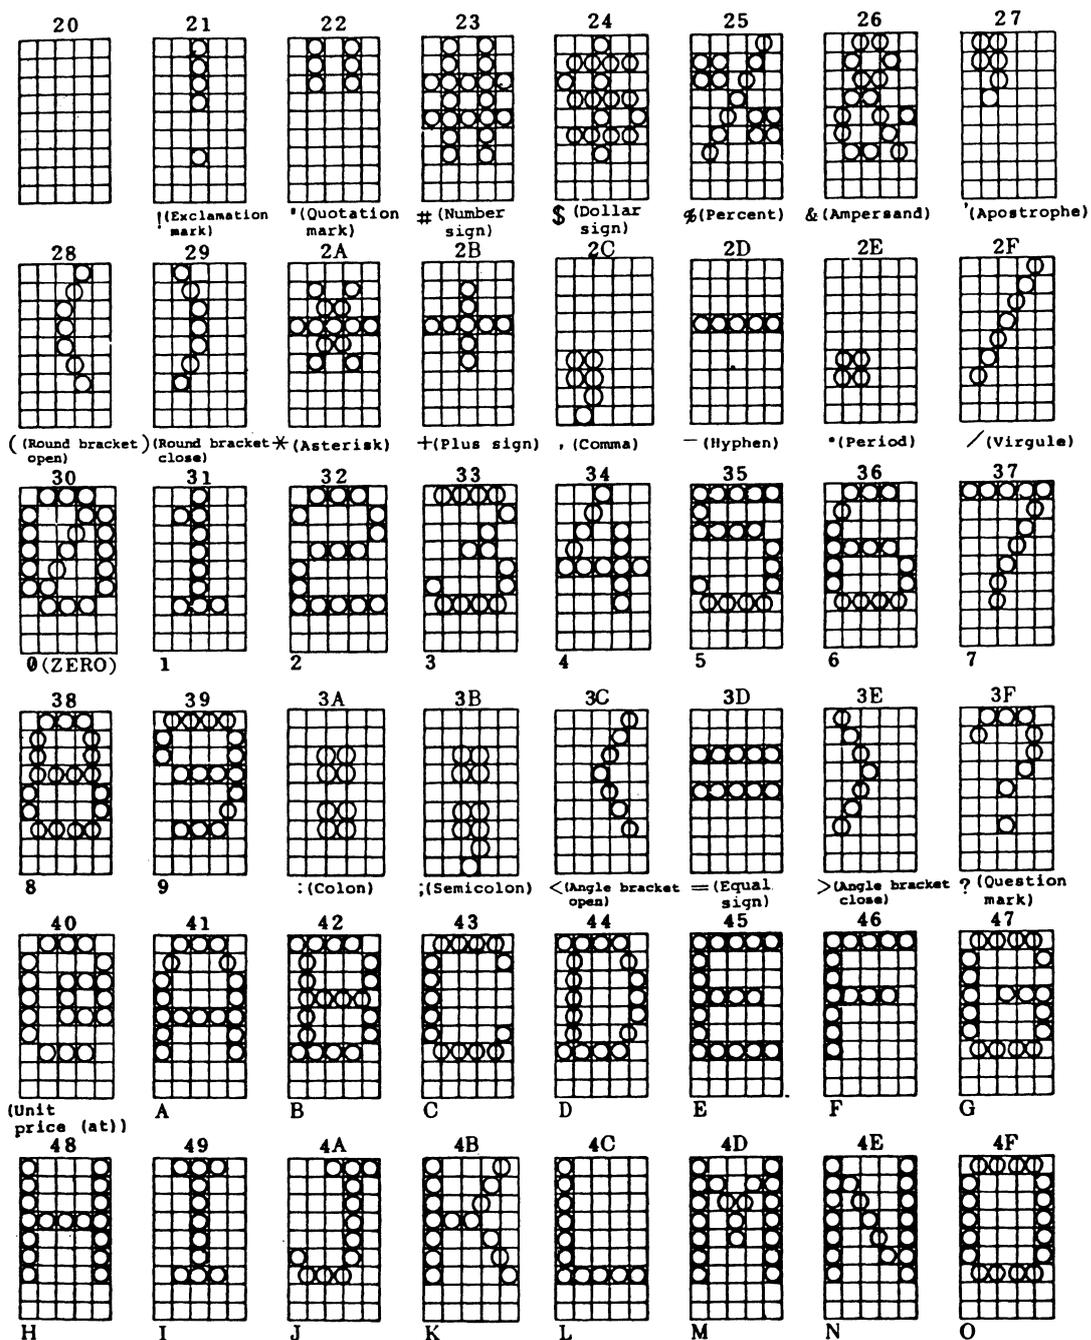

Note: Numbers given above are expressed in hexadecimal.

Fig. E-1 (1/3) ML82A Dot Pattern (For U.S.A.)

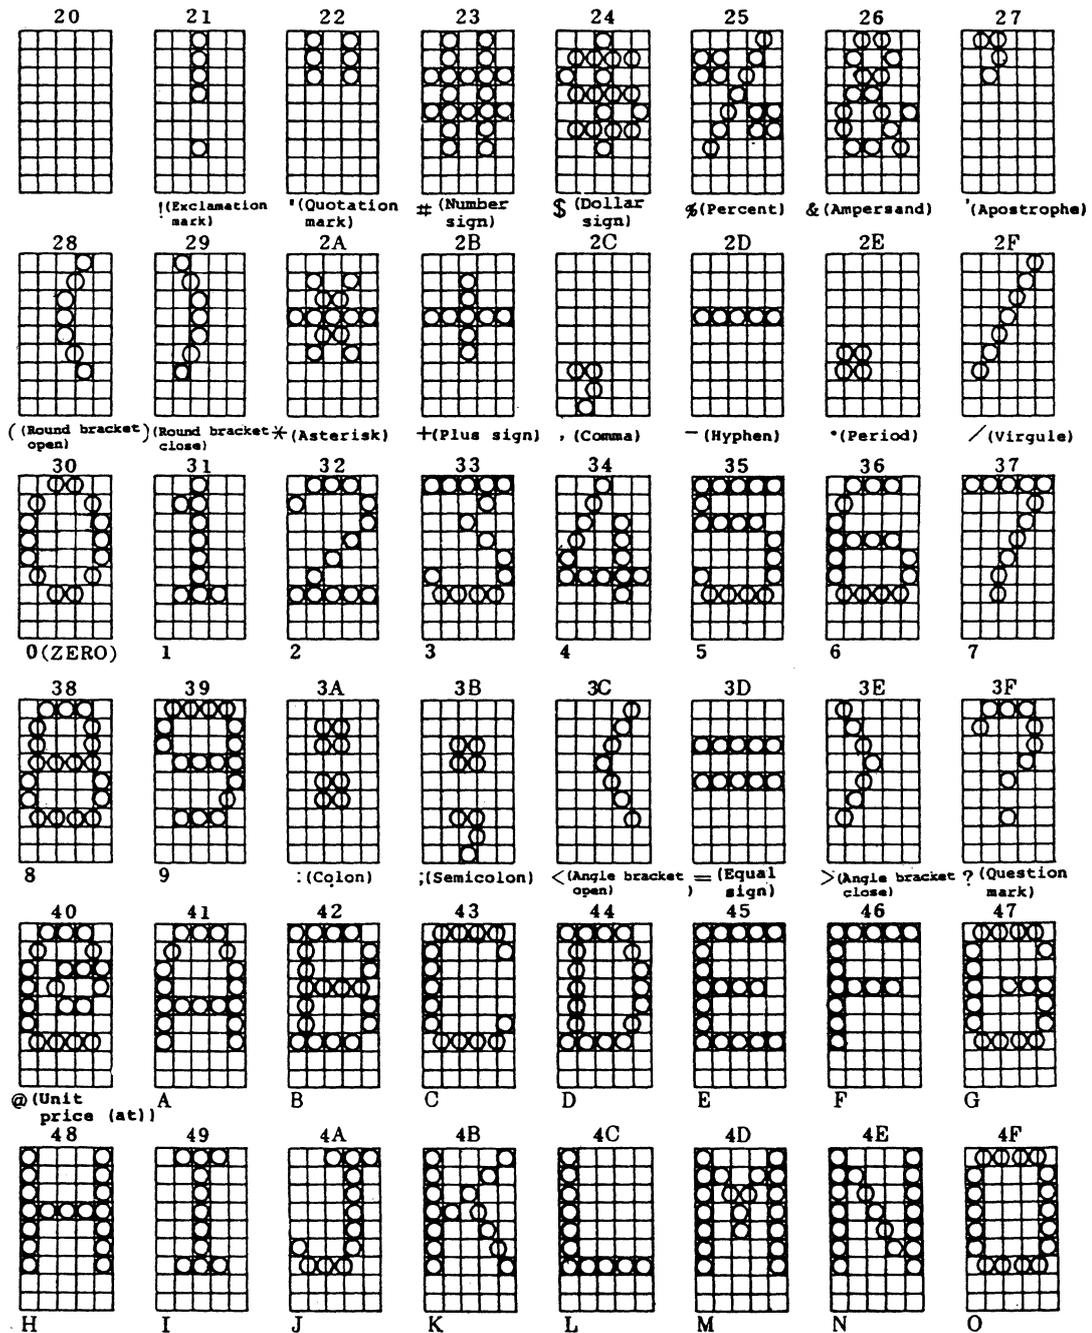

Note: Numbers given above are expressed in hexadecimal.

Fig. E-1 (1/3) ML82A Dot Pattern (For the Area Other Than U.S.A.)

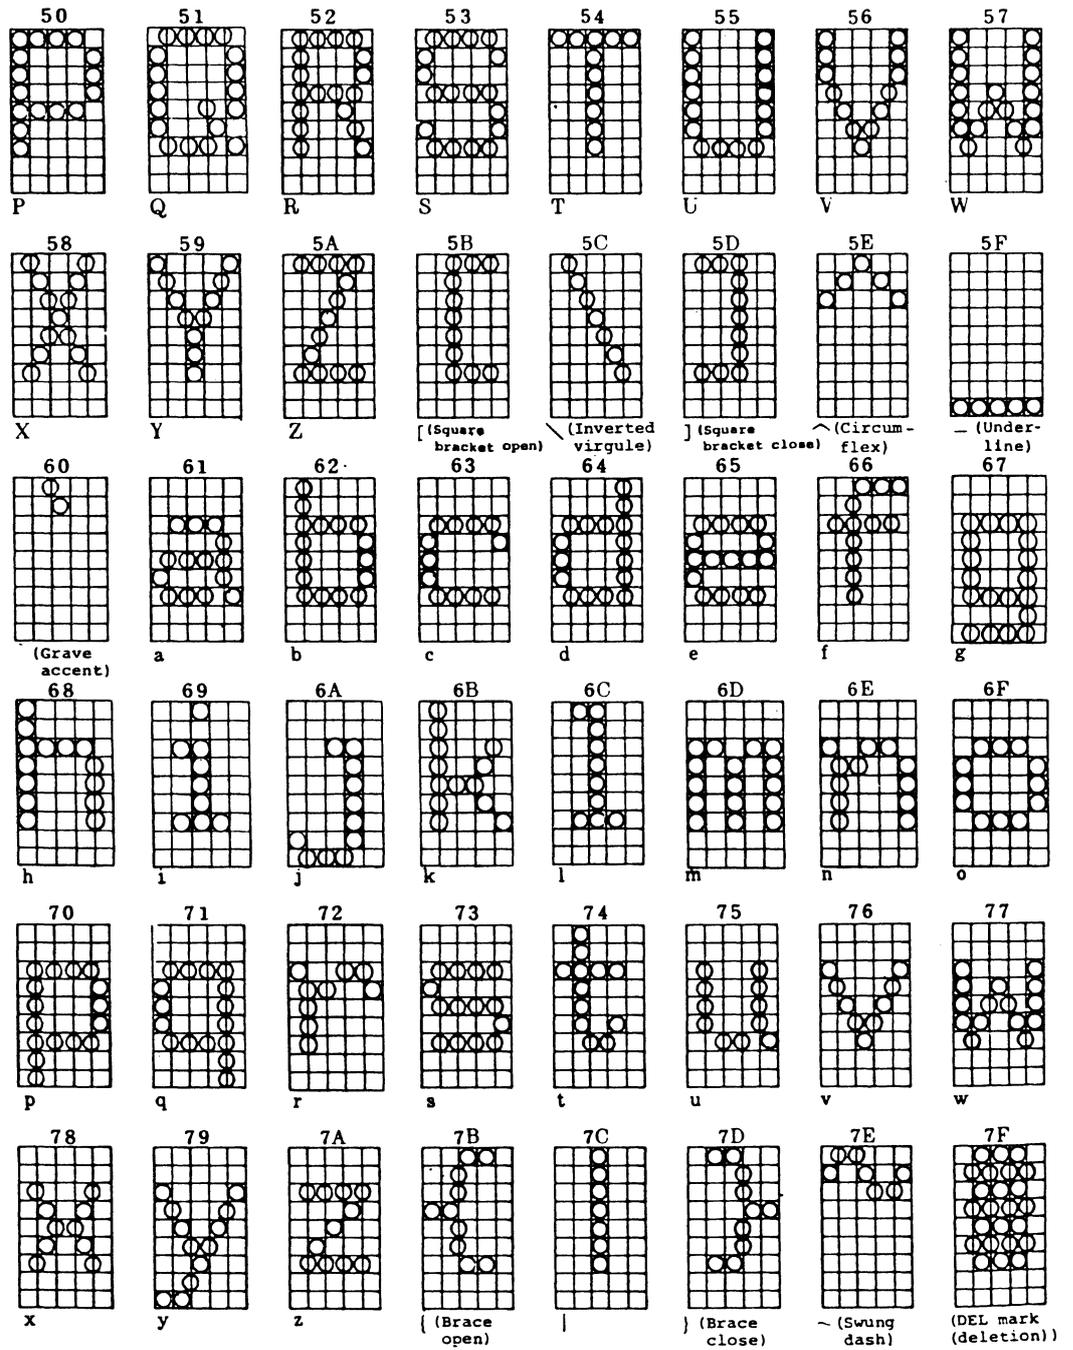


Fig. E-1 (2/3) ML82A Dot Pattern (For U.S.A.)

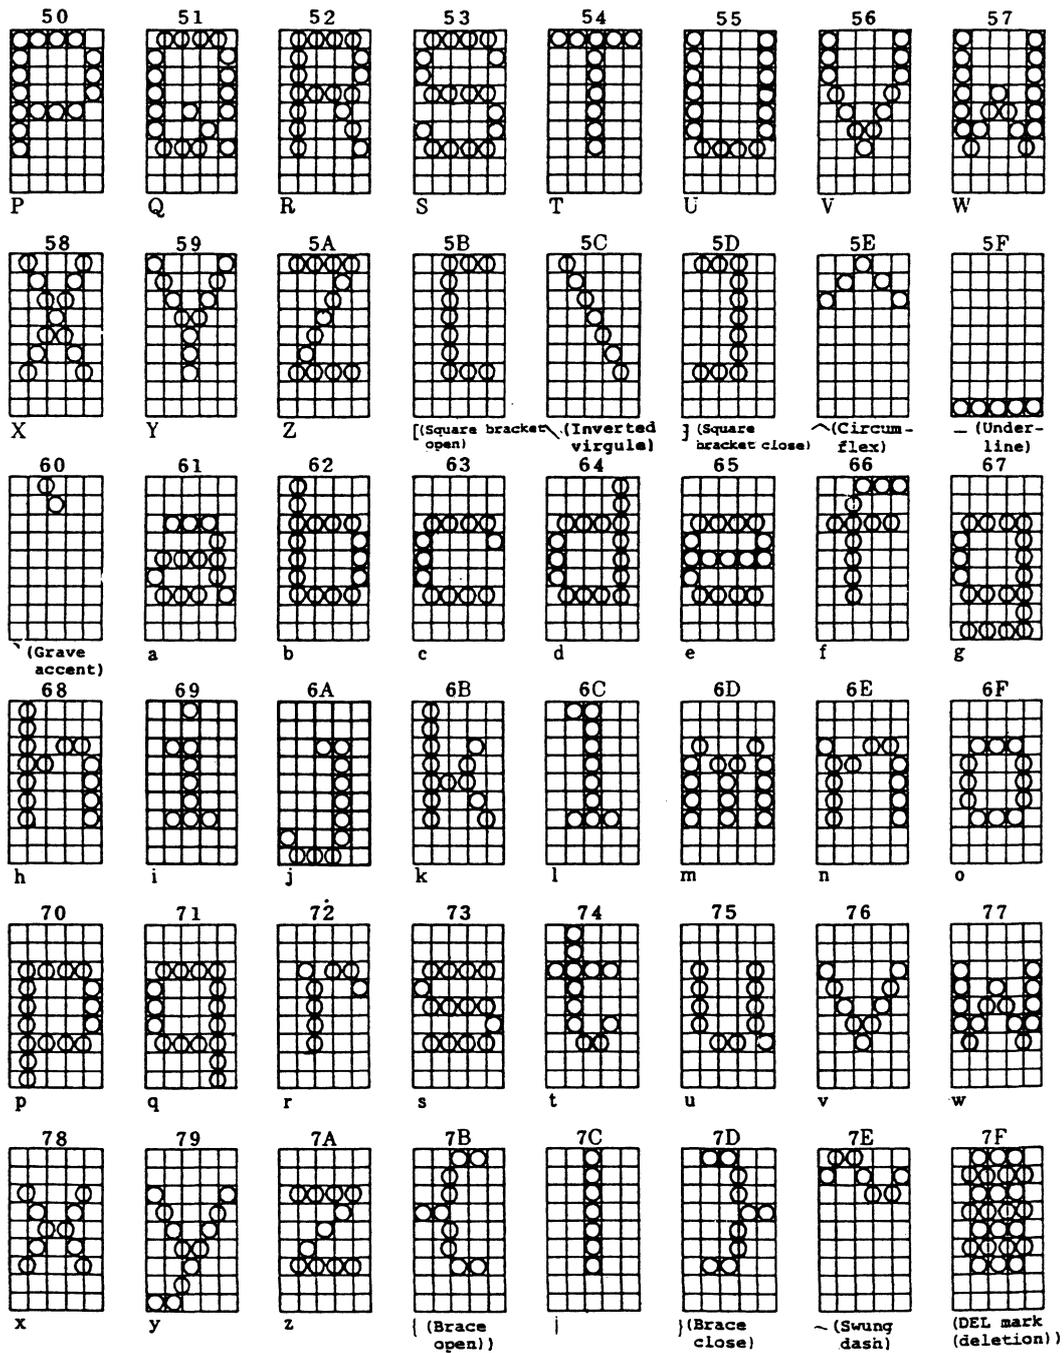


Fig. E-1 (2/3) ML82A Dot Pattern (For the Area Other Than U.S.A.)


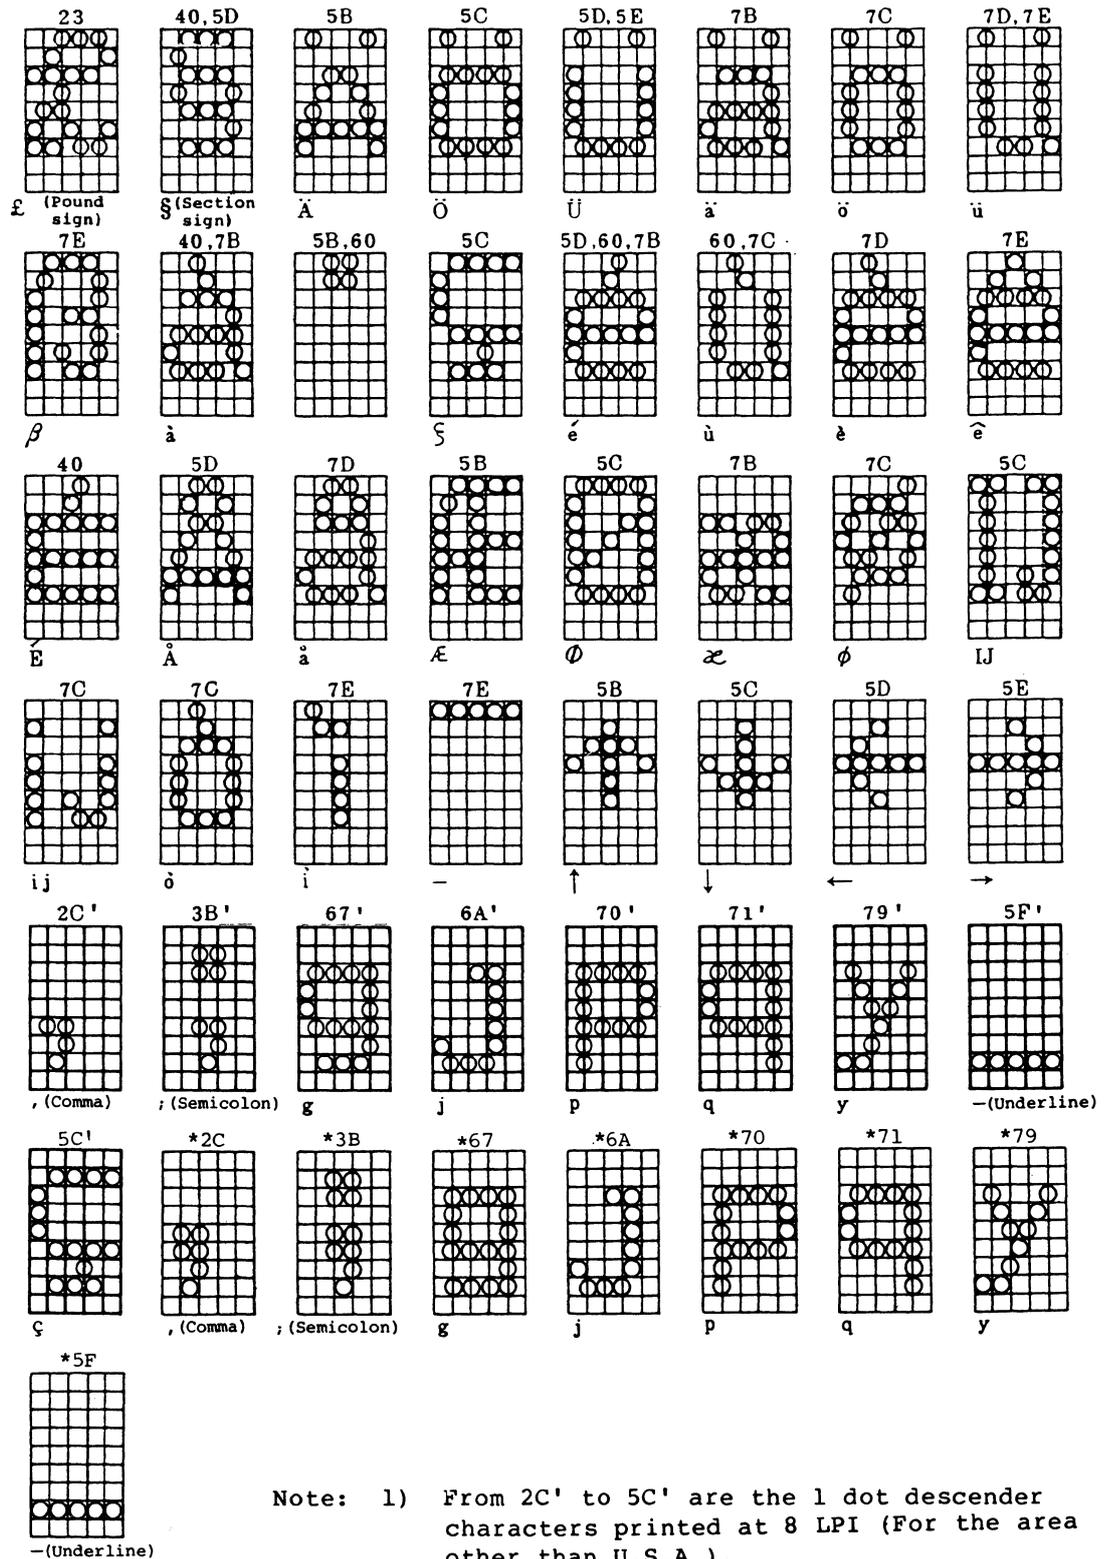



Fig. E-1 (3/3) ML82A Dot Pattern

Appendix F Character Dot Dimensions

(1) 10 CPI (9 x 7 dot)

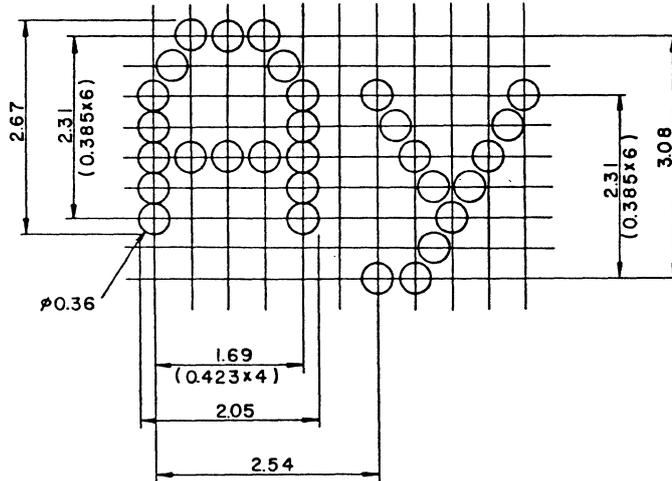


(2) 5 CPI (10 x 7 dot)

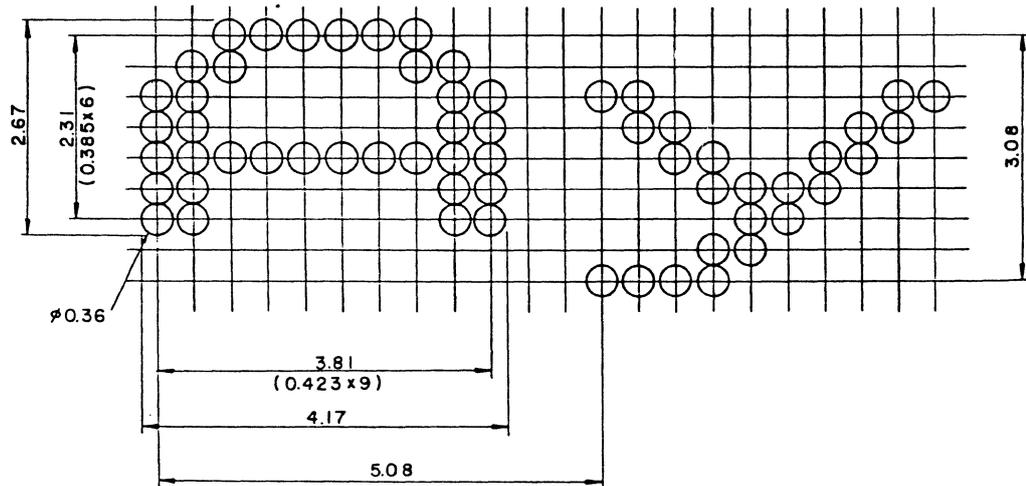


Unit: mm

Fig. F-1 Character Dot Dimensions

(3) 16.5 CPI (9 x 7 dot)

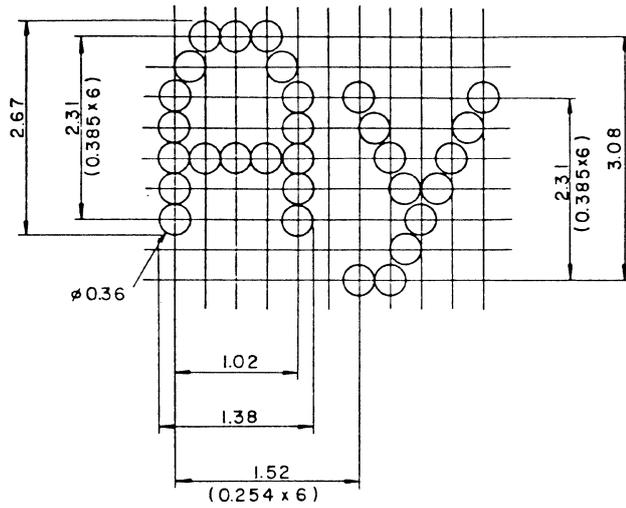

(4) 8.3 CPI (10 x 7 dot)

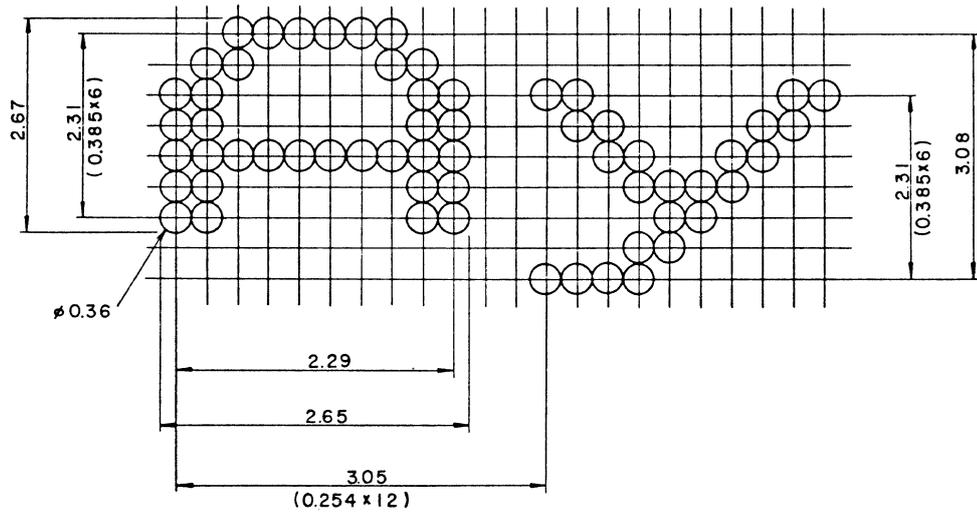


Unit: mm


Fig. F-2 Character Dot Dimensions

## Appendix G Graphic Dot Dimensions

### (1) 6 LPI line change

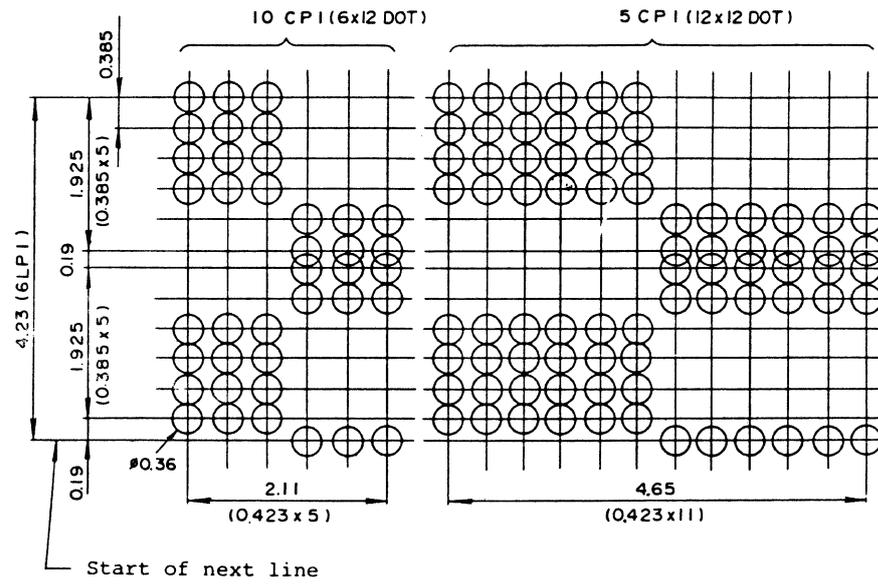


### (2) 8 LPI line change

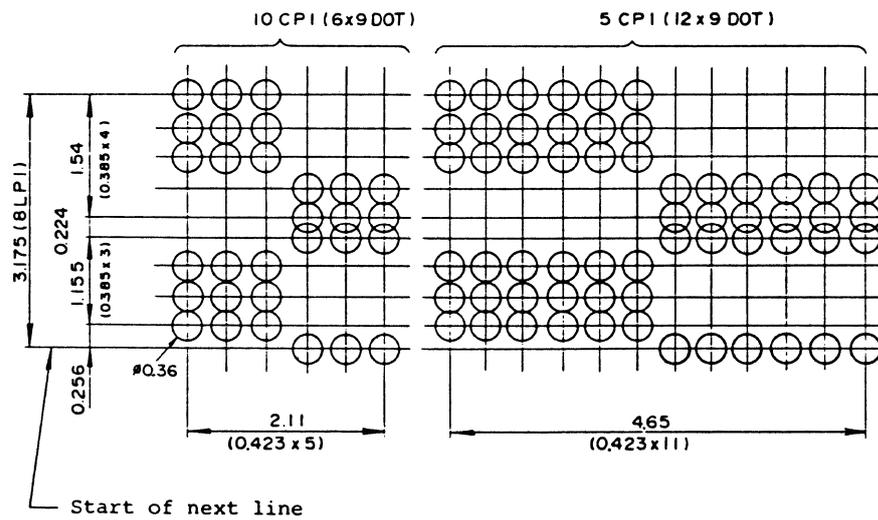


Unit: mm

Fig. G-1 Graphic Dot Dimensions

(3) 6 LPI line change

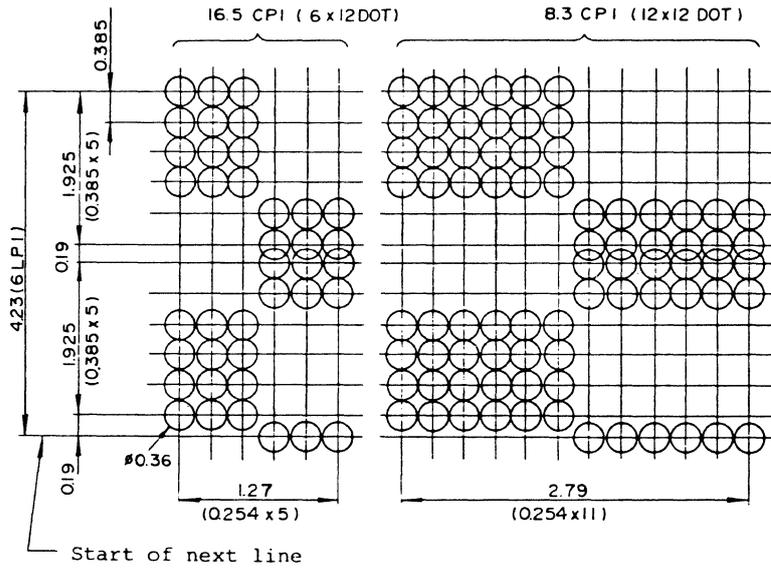


(4) 8 LPI line change

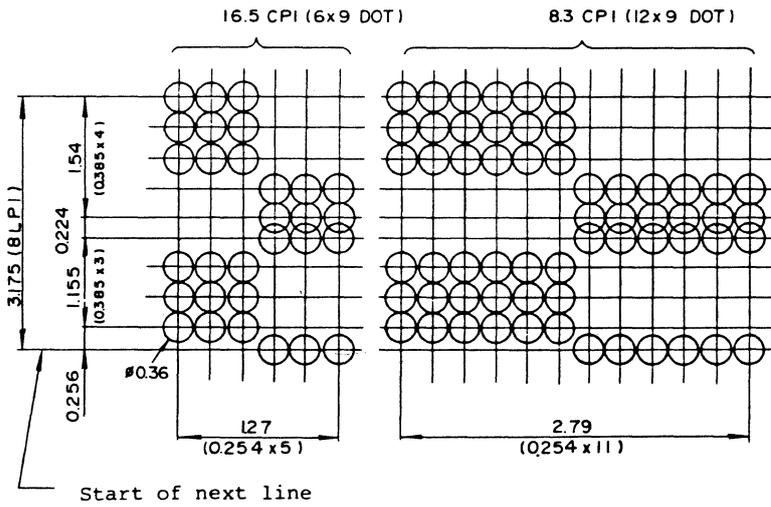

Unit: mm

Fig. G-2 Graphic Dot Dimensions

## Appendix H Printing Format

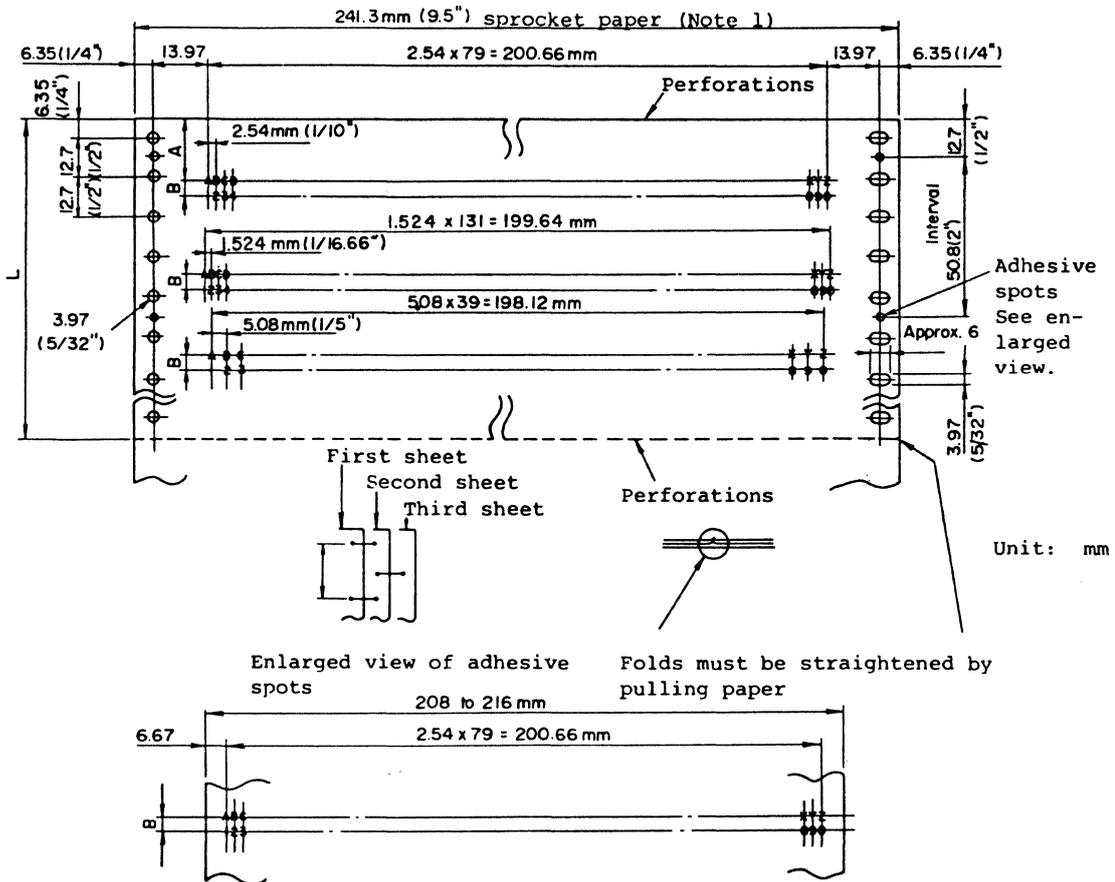

### Roll paper specifications

1. Roll paper maximum diameter: 128 mm
2. Core inside diameter: 25 mm
3. One-part papers only. Multiple-part paper cannot be used.
4. Ream: 45 to 55 kg


### Note:

- 1) If the optional tractor unit is mounted, paper 3 to 9.5 inches wide can be used.
- 2) L: Multiple of 25.4 mm (1 inch)
  - A: Leave 16.9 mm (or 4 line spaces at 6 LPI) blank before and after the perforations to avoid being affected by the perforations. When using the paper-tear-off bar, the distance from the printing position to cut position is 23.28 mm (11/12 inch).
  - B: Line space of 4.23 mm (6 LPI) or 3.18 mm (8 LPI) can be selected.
- 4) Ream

### Sprocket paper

- a) One-part paper: 45 to 55 kg
- b) Multiple-part paper
  - Carbon-lined paper and pressure-sensitive paper with ream of 30 to 34 kg (35 to 40 g/m<sup>2</sup>) can be used for up to 4 sheets, including the original. With fixed-pin platen, up to 3 sheets can be used.
  - Interleaf paper less than 45 kg (52 g/m<sup>2</sup>) per ream can be used for up to 3 sheets, including the original.
  - Interleaf paper with ream of 30 kg (35 g/m<sup>2</sup>) can be used for up to 4 sheets, including the original. This is applicable when the tractor unit is used.
- 5) Multiple-part paper fastening method: Use adhesive spots or paper staples along both edges. Make sure that carbon copies are uniform and free of wrinkles when using adhesive spots. (Sprocket paper)
- 6) The thickness of multiple-part paper is 0.28 mm or less.
- 7) Right margin sprocket holes may be horizontally oval holes which are long sideways.

Fig. H-1 Printing Format (Sprocket Paper and Roll Paper)

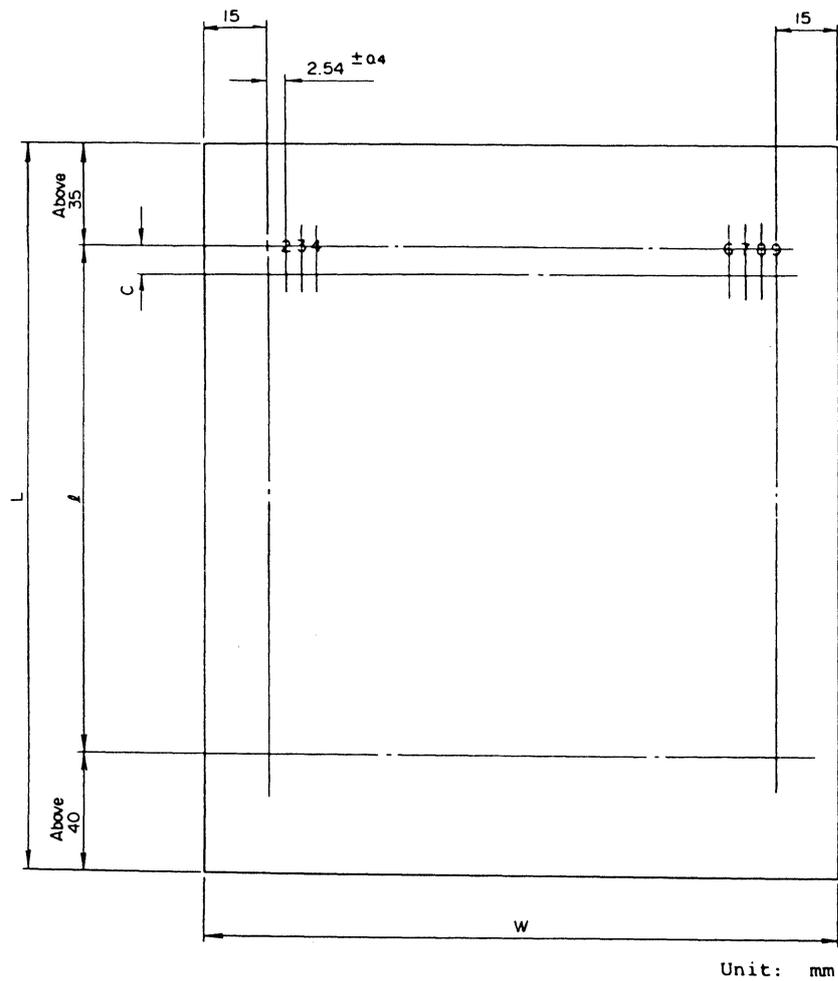

Note:

- 1) Standard paper size: A4 (210 x 297 mm)
- 2) Paper width: From 210 to 215.9 mm (8.5 inches)
- 3) Paper length L: Less than 300 mm
- 4) Ream: 45 to 55 kg (52 to 64 g/m<sup>2</sup>)
- 5) Line space pitch C: 4.23 mm (6 LPI) and 3.18 mm (8 LPI) selectable
- 6) Paper must be free of folds and bends.
- 7) Multiple-part paper cannot be used.

Fig. H-2 Printing Format (One-part Paper)





SINCE 1881



SINCE 1881

**OKI**  
**electric**  
**industry**  
**company, Ltd.**

**International Divisions:**  
10-3, Shibaura 4-chome,  
Minato-ku, Tokyo 108, Japan  
Tel: (03) 454-2111  
Telex: J22627  
Cable: OKIDENKI TOKYO

**American Sales/  
Services Support  
Centre:**

**Okidata Corporation**  
111 Gaither Drive  
Mt. Laurel, New Jersey  
08054, U.S.A.  
Tel: 609-235-2600  
Telex: (25) 710-897-0792

**European Sales/  
Service Support  
Centre:**

**Oki Electric Europe GmbH:**  
Emanuel-Leutze str. 8  
4000, Düsseldorf 11  
West Germany  
Tel: (0211) 592031  
TLX: 8587218 OKI D

For further information, please contact;